


SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Electrical Circuit	4-3
Group 3 Electrical Component Specification	4-21
Group 4 Connectors	4-29

SECTION 4 ELECTRICAL SYSTEM

GROUP 1 COMPONENT LOCATION


1. LOCATION 1

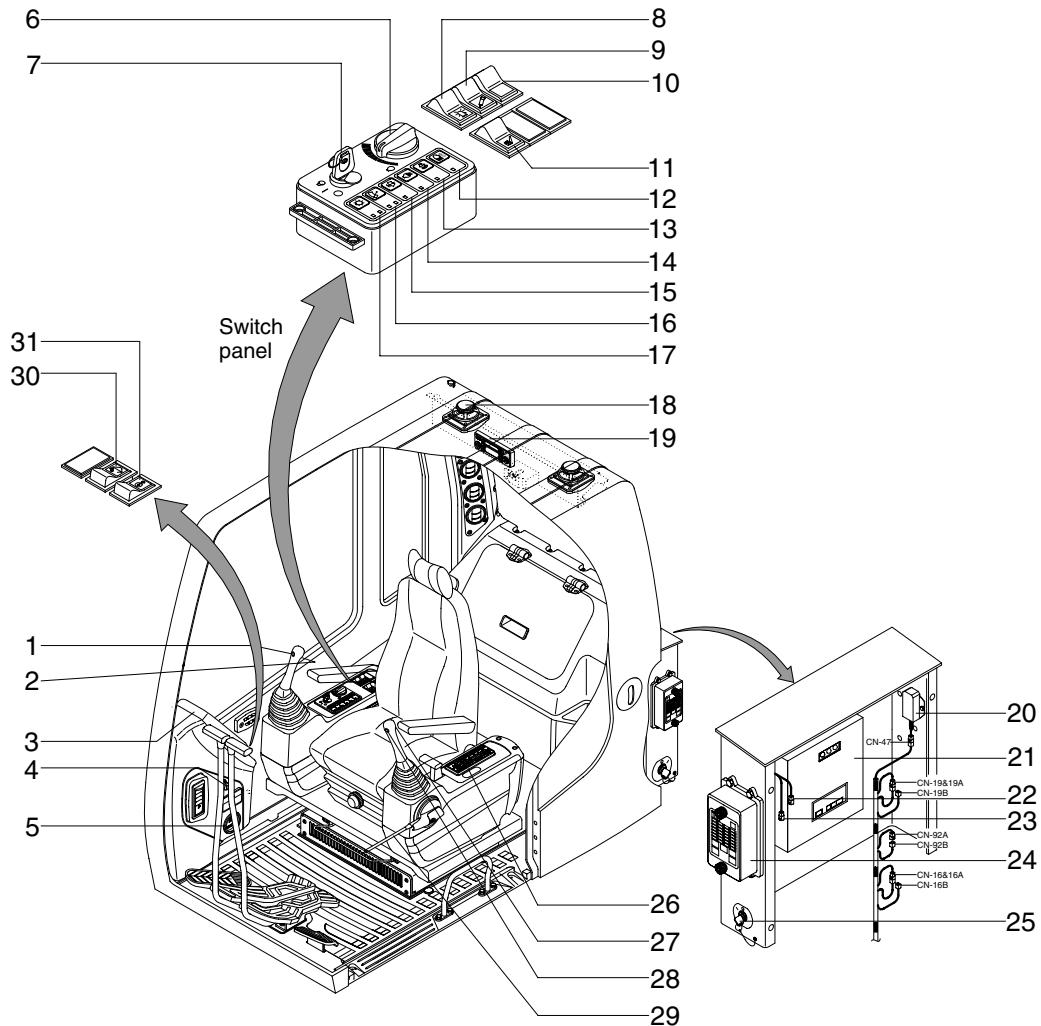

8007A4EL01A

1	Horn switch	11	Heated seat switch	21	MCU controller
2	Breaker switch	12	Cab light switch	22	RS232 serial connector
3	Cluster	13	Travel alarm stop switch	23	J1939 serial connector
4	Cigar lighter	14	Preheat switch	24	Fuse box
5	Service meter	15	Washer switch	25	Master switch
6	Accel dial	16	Wiper switch	26	Aircon & heater switch panel
7	Starting switch	17	Main light switch	27	One touch decel switch
8	Beacon switch	18	Speaker	28	Power max switch
9	Breaker selection switch	19	Cassette & radio	29	Safety lever
10	Central grease lubrication switch	20	Prolix resistor	30	Overload switch
				31	Quick clamp switch

2. LOCATION 2

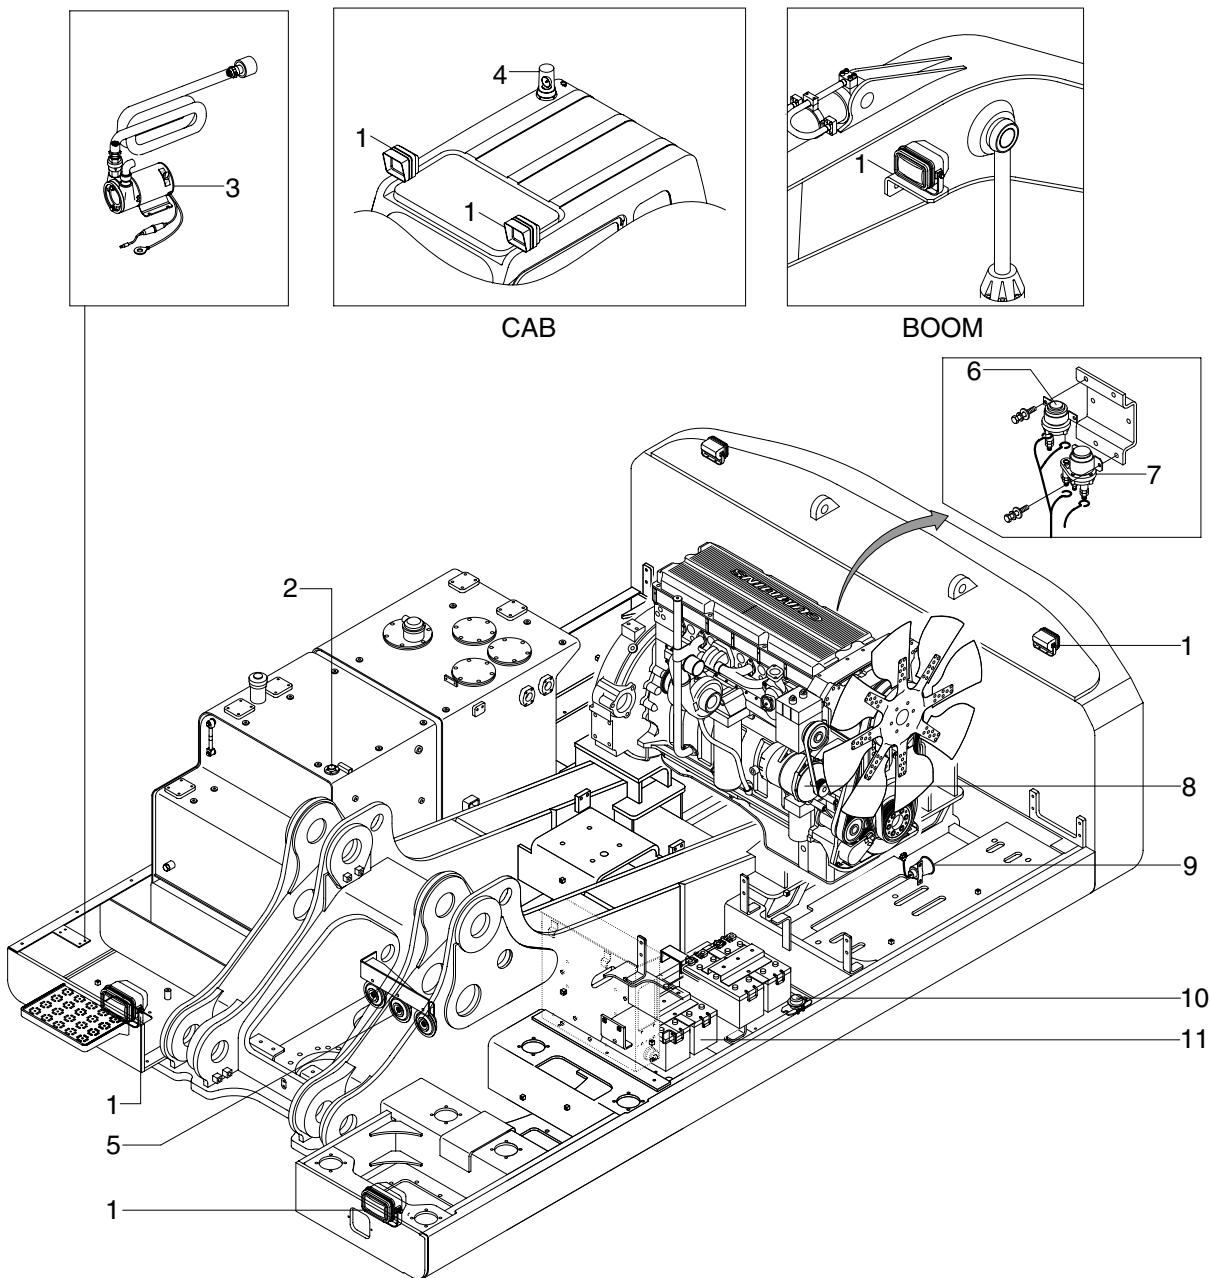

8007A4EL02

- | | | |
|--------------------|----------------|-----------------------|
| 1 Lamp | 5 Horn | 9 Travel alarm buzzer |
| 2 Fuel sender | 6 Start relay | 10 Battery relay |
| 3 Fuel filler pump | 7 Heater relay | 11 Battery |
| 4 Beacon lamp | 8 Alternator | |