

# CONTENTS

Foreword .....	0-1
Before servicing this machine .....	0-2
EC regulation approved .....	0-3
Table to enter S/No and distribution .....	0-4
Safety labels .....	0-5
Machine data plate .....	0-17
Guide (direction, S/No, symbol) .....	0-18

## SAFETY HINTS

1. Before operating the machine .....	1-1
2. During operating the machine .....	1-7
3. During maintenance .....	1-14
4. Parking .....	1-17

## SPECIFICATIONS

1. Major components .....	2-1
2. Specifications .....	2-2
3. Working range .....	2-3
4. Weight .....	2-6
5. Lifting capacities .....	2-7
6. Bucket selection guide .....	2-11
7. Undercarriage .....	2-13
8. Specification for major components .....	2-15
9. Recommended oils .....	2-18

## CONTROL DEVICES

1. Cab devices .....	3-1
2. Cluster (TYPE 1) .....	3-2
2. Cluster (TYPE 2) .....	3-23
3. Switches .....	3-34
4. Levers and pedals .....	3-39
5. Air conditioner and heater .....	3-41
6. Others .....	3-48

## OPERATION

1. Suggestion for new machine .....	4-1
2. Check before starting the engine .....	4-2
3. Starting and stop the engine .....	4-3
4. Mode selection system .....	4-11

5. Operation of the working device .....	4-21
6. Traveling of the machine .....	4-22
7. Efficient working method .....	4-25
8. Operation in the special work sites .....	4-29
9. Normal operation of excavator .....	4-31
10. Attachment lowering .....	4-32
11. Storage .....	4-33
12. RCV lever operating pattern .....	4-35
13. Switching hydraulic attachment circuit .....	4-36

## TRANSPORTATION

1. Preparation for transportation .....	5-1
2. Dimension and weight .....	5-2
3. Loading the machine .....	5-4
4. Fixing the machine .....	5-6
5. Loading and unloading by crane .....	5-7

## MAINTENANCE

1. Instruction .....	6-1
2. Tightening torque .....	6-6
3. Fuel, coolant and lubricants .....	6-9
4. Maintenance check list .....	6-11
5. Maintenance chart .....	6-16
6. Service instruction .....	6-20
7. Electrical system .....	6-40
8. Air conditioner and heater .....	6-43

## TROUBLESHOOTING GUIDE

1. Engine .....	7-1
2. Electrical system .....	7-2
3. Others .....	7-3

## HYDRAULIC BREAKER AND QUICK CLAMP

1. Selecting hydraulic breaker .....	8-1
2. Circuit configuration .....	8-2
3. Maintenance .....	8-3
4. Precaution while operating the breaker .....	8-4
5. Quick clamp .....	8-6

INDEX .....	9-1
-------------	-----

## FOREWORD

This manual contains a number of instructions and safety recommendations regarding driving, handling, lubrication, maintenance, inspection and adjustment of the excavator.

The manual is to promote safety maintenance and enhance machine performance.

Keep this manual handy and have all personnel read it periodically.

If you sell the machine, be sure to give this manual to the new owners.

This machine complies with EC directive "2006/42/EC".

1. **Read** and **understand** this manual before operating the machine.

This operator's manual may contain attachments and optional equipment that are not available in your area. Please consult your local Hyundai distributor for those items you require.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine.

If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses of actions as described in this manual.

2. **Inspect** the jobsite and **follow** the safety recommendations in the **safety hints** section before operating the machine.

3. Use **genuine Hyundai spare parts** for the replacement of parts.

We expressly point out that Hyundai will not accept any responsibility for defects resulting from non-genuine parts or non workmanlike repair.

In such cases Hyundai cannot assume liability for any damage.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Hyundai or your Hyundai distributor for the latest available information for your machine or for questions regarding information in this manual.

## BEFORE SERVICING THIS MACHINE

It is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury by keeping this machine properly maintained.

It also is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury while servicing the machine.

No one should service or attempt to repair this machine without proper training and supervision.

All service and maintenance personnel should be thoroughly familiar with the procedures and precautions contained in this manual.

All personnel also must be aware of any federal, state, provincial or local laws or regulations covering the use and service of construction equipment.

The procedures in this manual do not supersede any requirements imposed by federal, state, provincial or local laws.

Hyundai can not anticipate every possible circumstance or environment in which this machine may be used and serviced.

All personnel must remain alert to potential hazards.


Work within your level of training and skill.

Ask your supervisor if you are uncertain about a particular task. Do not try to do too much too fast.

Use your common sense.

### ※ How to adjust the language of cluster (cluster type 1)


User can select preferable language and all displays are changed the selected language.

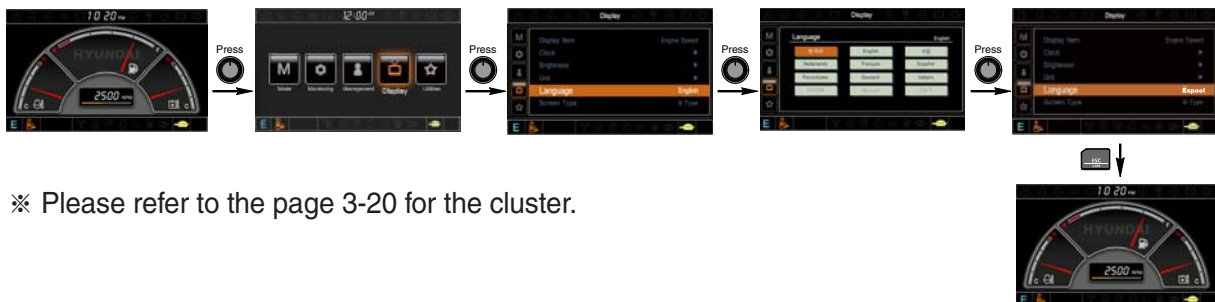

※ Please refer to the page 3-20 for the cluster.

## EC REGULATION APPROVED

- Noise level (EN474-1 : 2006 and 2000/14/EC) are as followings.  
LWA : 105 dB (EU only)  
LPA : 73 dB
- The value of vibrations transmitted by the operator's seat are lower than standard value of (EN474-1 : 2006 and 2002/44/EC)

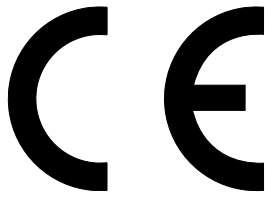




<b>TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR</b>
--

Machine Serial No.	
Engine Serial No.	
Manufacturing year	
Manufacturer Address	Hyundai Heavy Industries co., Ltd. 1000, Bangeojinsunhwan-doro, Dong-Ku, Ulsan 682-792, Korea
Distributor for U.S.A Address	Hyundai Heavy Industries U.S.A, Inc 6100 Atlantic Boulevard Norcross GA 30071 U.S.A
Distributor for Europe Address	Hyundai Heavy Industries Europe N. V. Vossendal 11 2240 Geel Belgium
Dealer Address	

## SAFETY LABELS

### 1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

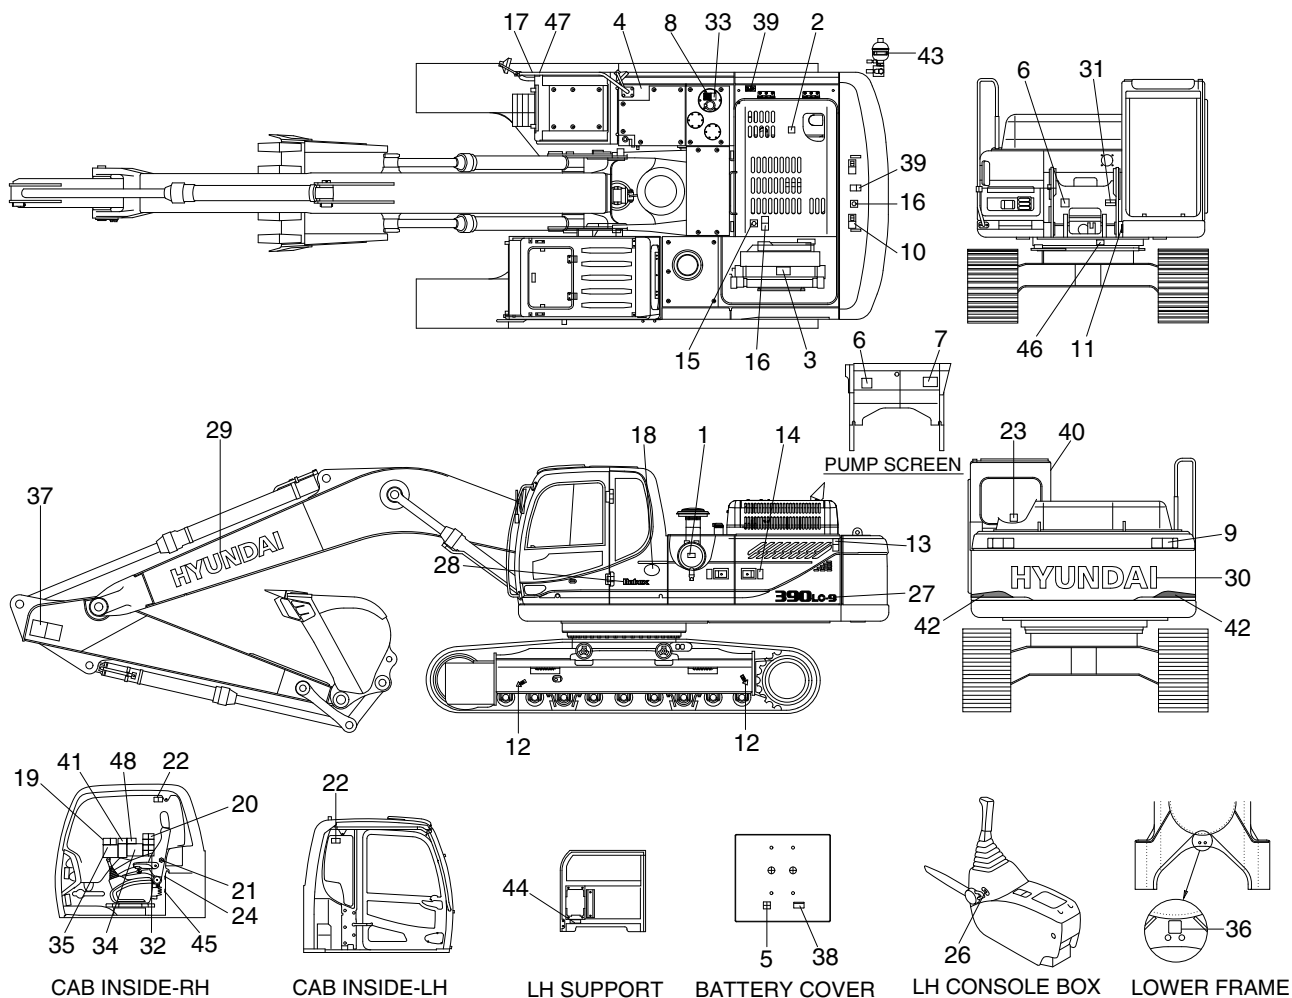

39090SL01

- |                         |                                      |                         |
|-------------------------|--------------------------------------|-------------------------|
| 1 Air cleaner filter    | 17 Transporting                      | 34 Service instruction  |
| 2 Turbocharger cover    | 18 Low emission engine               | 35 Lifting chart        |
| 3 Radiator cap          | 19 Control ideogram                  | 36 Tie                  |
| 4 Fueling               | 20 Ref operator manual-Cab RH pillar | 37 Keep clear-Boom/arm  |
| 5 Battery accident      | 21 Hammer                            | 38 Connector            |
| 6 High pressure hose    | 22 Safety front window               | 39 Falling              |
| 7 Hydraulic oil level   | 23 Alternate exit                    | 40 Beacom lamp          |
| 8 Hydraulic oil lub     | 24 Air conditioner filter            | 41 Turbocharger         |
| 9 Keep clear-rear       | 26 Safety lever                      | 42 Reflecting           |
| 10 Lifting eye          | 27 Model name                        | 43 Accumulator          |
| 11 Name plate           | 28 Logo (ROBEX)                      | 44 RCV lever pattern    |
| 12 Sliding ideogram     | 29 Trade mark (boom)                 | 45 MCU connector        |
| 13 Keep clear-side      | 30 Trade mark (CWT)                  | 46 Swing bearing grease |
| 14 Stay fix             | 31 Reduction gear grease             | 47 Battery position     |
| 15 Shearing-engine hood | 32 Locking-clamp                     | 48 Water separator      |
| 16 No step              | 33 Fuel shut off                     |                         |

## 2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

### 1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the air cleaner cover.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

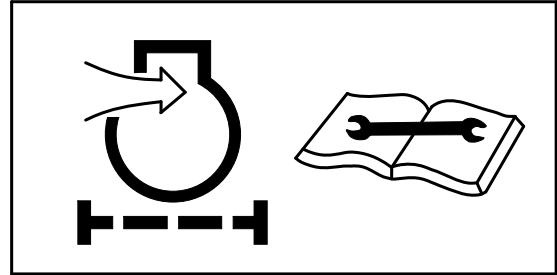


21070FW01

### 2) TURBOCHARGER COVER (item 2)

This warning label is positioned on the turbocharger cover.

- ▲ **Do not touch turbocharger or it may cause severe burn.**

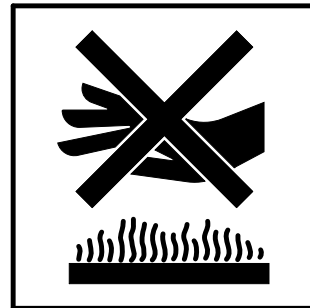

21070FW02

### 3) RADIATOR CAP (item 3)

This warning label is positioned on the radiator.

- ▲ **Never open the filler cap while engine running or at high coolant temperature.**




14070FW03

### 4) FUELING (item 4)

This warning label is positioned on the right side of fuel filler neck.

- ▲ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

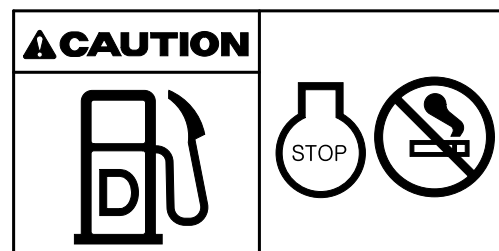


21070FW04

#### 5) BATTERY ACCIDENT (item 5)

This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**
- ※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**  
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminal with a wet hand.**

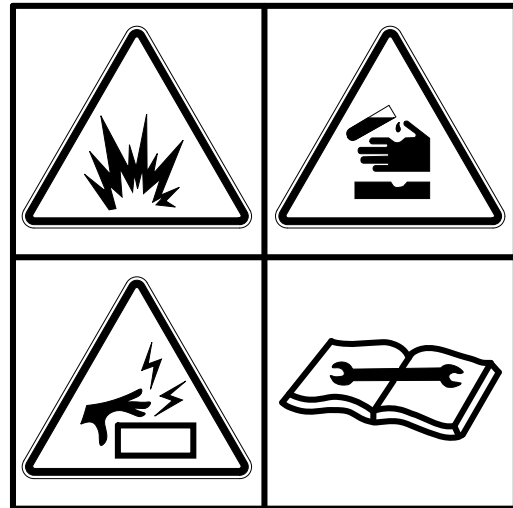

36070FW05

#### 6) HIGH PRESSURE HOSE (item 6)

This warning label is positioned on the screen plate.

- ⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**
- ※ **Study the service manual before service job.**




14070FW29

#### 7) HYDRAULIC OIL LEVEL (item 7)

This warning label is positioned on the screen plate.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

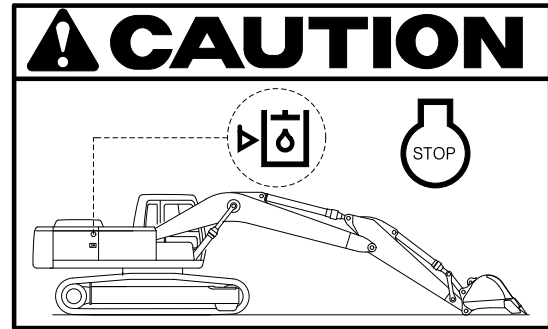


21070FW07

#### 8) HYDRAULIC OIL LUBRICATION (item 8)

This warning label is positioned on the top of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while high temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.

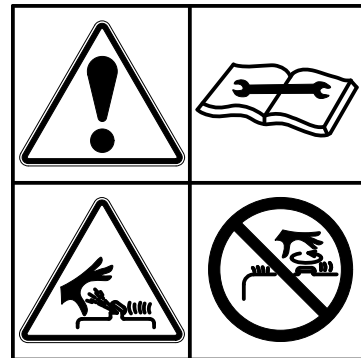


14070FW08

#### 9) KEEP CLEAR (item 9)

This warning label is positioned on the rear of counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

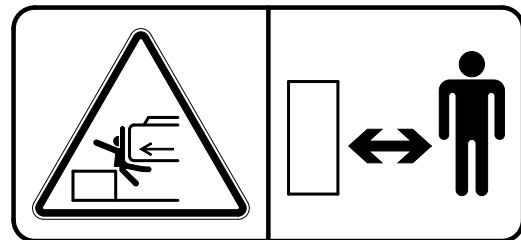


21090FW09

#### 10) LIFTING EYE (item 10)

This warning label is positioned on the counterweight.

- ▲ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.
- ※ See page 5-9 for proper lifting method of the machine.

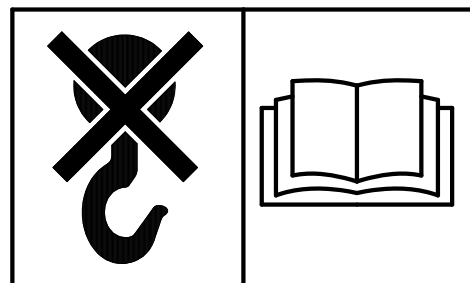


21070FW10

**11) SIDE KEEP CLEAR (item 13)**

This warning label is positioned on the side of LH rear side cover.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**

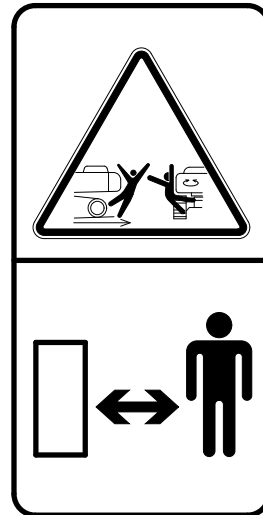

21070FW13

**12) STAY FIX (item 14)**

This warning label is positioned on the side cover.

- ⚠ **Be sure to support the stay when the door needs to be opened.**
- ⚠ **Be careful that the opened door may be closed by the external or natural force like strong wind.**




21070FW14

**13) SHEARING-ENGINE HOOD (item 15)**

This warning label is positioned on the engine hood.

- ⚠ **Don't open the engine hood during the engine's running.**
- ⚠ **Don't touch exhaust pipe or it may cause severe burn.**

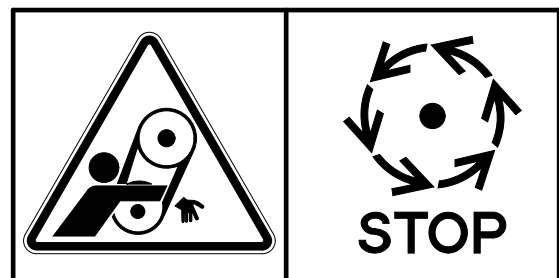


21070FW15

**14) NO STEP (item 16)**

This warning label is positioned on the engine hood and counterweight.

- △ **Don't step on the engine hood and counterweight.**

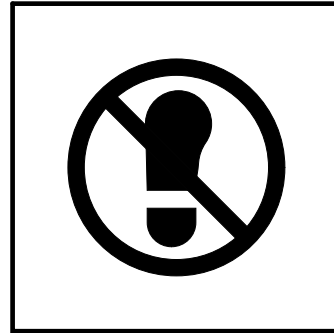


21070FW16

**15) TRANSPORTING (item 17)**

This warning label is positioned right side of upper frame.

- ▲ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**

See page 5-6 for details.

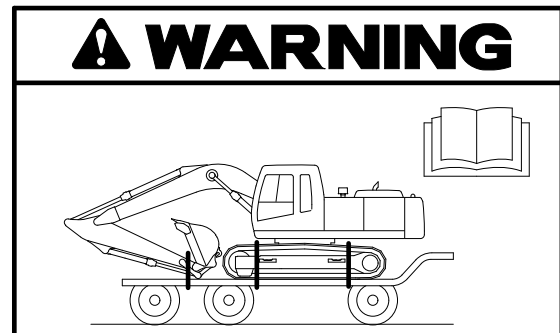

14070FW17


**16) CONTROL IDEOGRAM (item 19)**

This warning label is positioned in right window of the cab.

- ▲ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**

- ▲ **Failure to do so could result in injury or death.**

See page 4-21 for details.

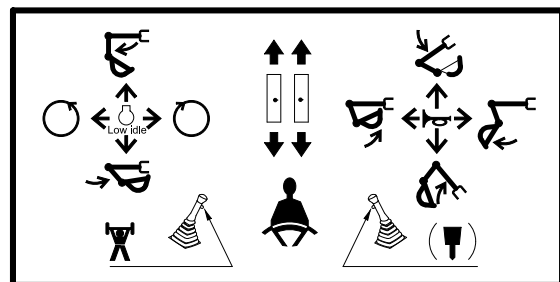


36070FW19

**17) REF OPERATOR MANUAL (item 20)**

This warning label is positioned on the right side window of the cab.

- ▲ **Study the operator's manual before starting and operating machine.**

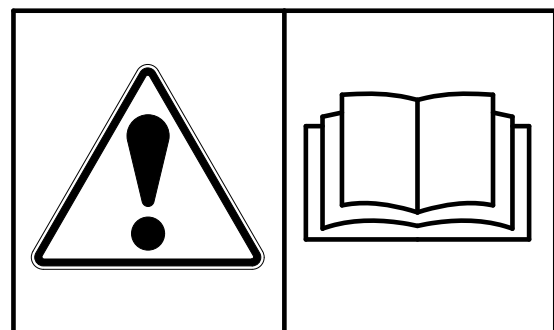


21070FW22

**18) MAX HEIGHT (item 20)**

This warning label is positioned on the right side window of the cab.

- ⚠ **Serious injury or death can result from contact with electric lines.**

An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-8.

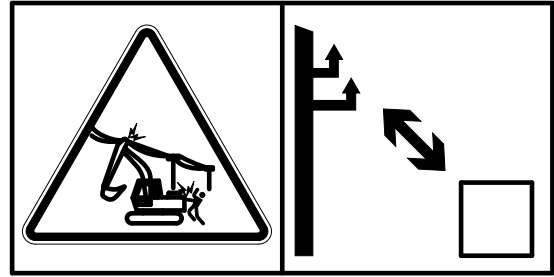


21070FW23

**19) INTERFERENCE (item 20)**

This warning label is positioned on the right side window of the cab.

- ⚠ **Be careful to operate machine equipped with quick clamp or extensions.**
- ⚠ **Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.**

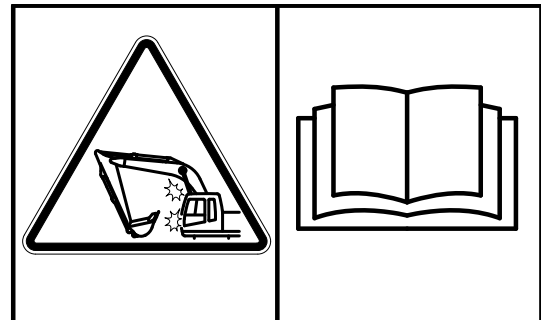


29090FW01

**20) SAFETY FRONT WINDOW (item 22)**

This warning label is positioned on the both side window of the cab.

- ⚠ **Be careful that the front window may be promptly closed.**

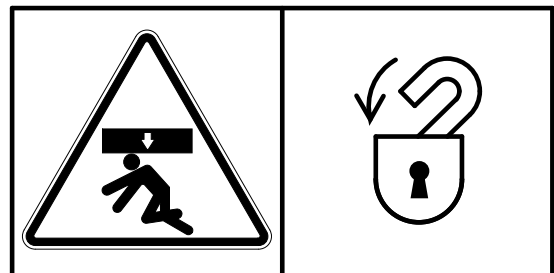


21070FW24

**21) ALTERNATE EXIT (item 23)**

This warning label is positioned on the inside of rear window.

- ※ **The rear window serves us an alternate exit.**
- ※ **To remove rear window, pull the ring and push out the glass.**

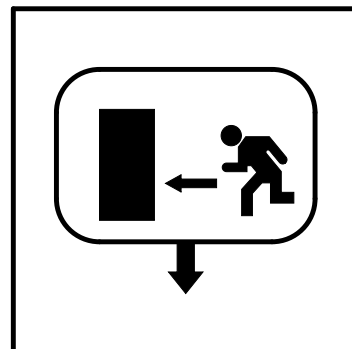


21070FW25



## 22) AIR CONDITIONER FILTER (item 24)

This warning label is positioned on the air conditioner cover.

- ※ **Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.**

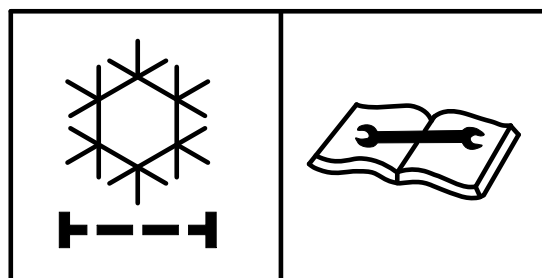


21070FW26

## 23) SAFETY LEVER (item 26)

This warning label is positioned on the cover of the safety lever.

- ⚠ **Before you get off the machine be sure to place the safety lever LOCKED position.**

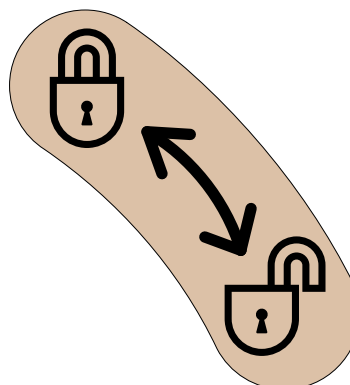


30007A1FW07A

## 24) REDUCTION GEAR GREASE (item 31)

This warning label is positioned in the front of upper frame.

- ⚠ **Grease is under high pressure.**  
Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.

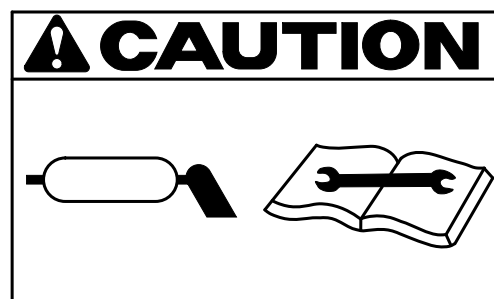


21070FW35

## 25) CLAMP-LOCKING (item 32)

This warning label is positioned on the right side window of cab.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

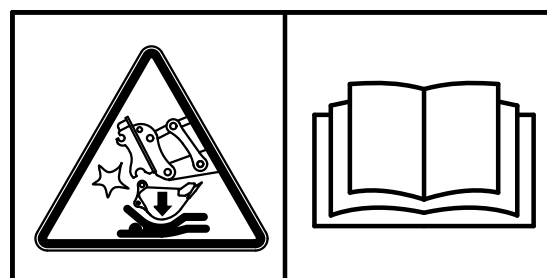


14070FW60

## 26) FUEL SHUT OFF (item 33)

This warning label is positioned on the hydraulic tank cover.

- ※ Fill only the hydraulic oil.
- ※ Do not fill the diesel fuel.

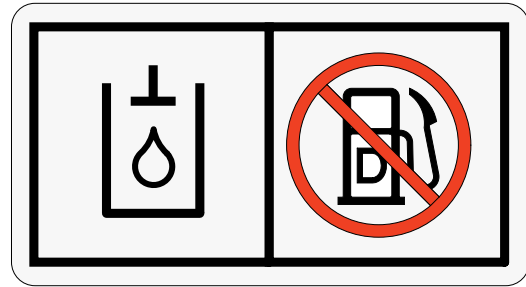


140WH90FW51

## 27) TIE (item 36)

This warning label is positioned on the lower frame.

- ▲ Never tow the machine using tie hole, because this may break.
- ▲ See page 4-24 for detail.

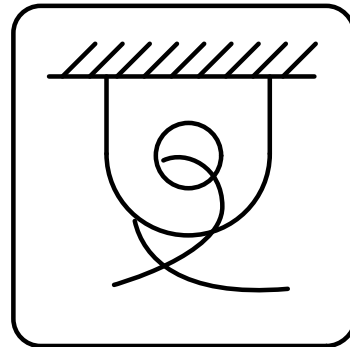

4507A0FW02

## 28) KEEP CLEAR-BOOM/ARM (item 37)

This warning label is positioned on both side of the arm.

- ▲ Serious injury or death can result from falling of the attachment.
- ▲ To prevent serious injury or death, keep clear the underneath of attachment.




14070FW31

## 29) CONNECTOR (item 38)

This warning label is positioned on the battery cover.

- ▲ Before carrying out any electric welding on this machine, follow the below procedure.
  - Pull the connector out of all electric control units.
  - Connector the ground lead of the welding equipment as close to the welding point as possible.
- ※ See page 6-42 for detail.

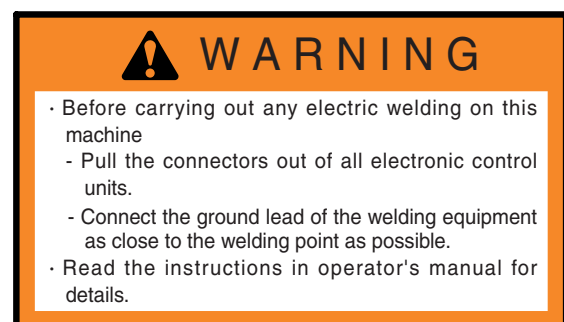


7807AFW20

### 30) FALLING (item 39)

This warning label is positioned on the top of the hydraulic tank.

- ▲ Falling is one of the major cause of personal injury.
- ▲ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.

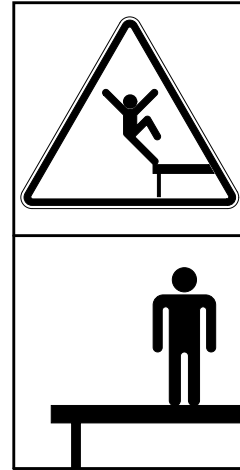


14070FW30

### 31) TURBOCHARGER (item 41)

This warning label is positioned on the right window of the cab.

- ▲ In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.

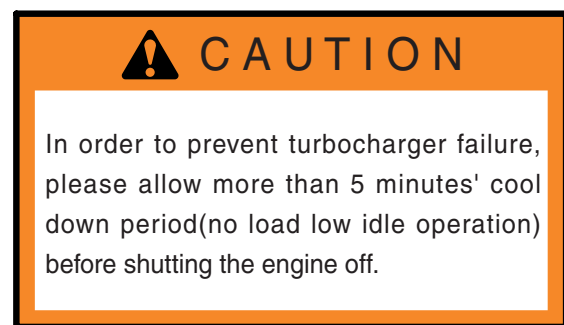


7807AFW20

### 32) REFLECTING (item 42)

This warning label is positioned on the rear of counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.



21090FW70

### 33) ACCUMULATOR (item 43)


This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

⚠ Never make any hole in the accumulator expose it to flame or fire.

⚠ Do not weld anything to the accumulator.

- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.




1107A0FW46

### 34) RCV LEVER PATTERN (item 44)

This warning label is positioned on the LH support.

- ※ See page 4-35 for details.

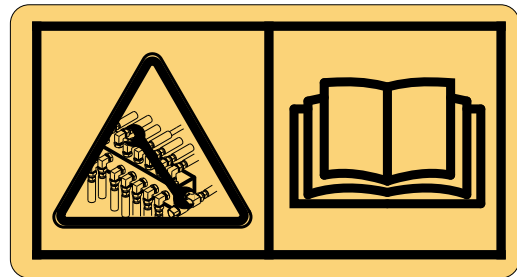


14W90FW47

### 35) SWING GREASE (item 46)

This warning label is positioned in the front of swing ring gear.


- ※ See page 6-33 for details.

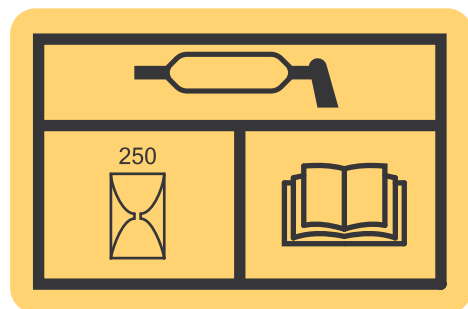

38090FW04

### 36) BATTERY POSITION (item 47)

This warning label is positioned right side of tool box.

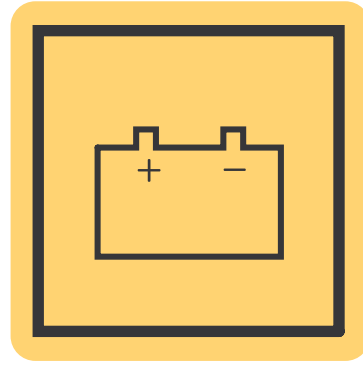

38090FW03

### 37) WATER SEPARATOR (item 48)

This warning label is positioned on the right side window of the cab.

**⚠ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.**



210N90FW50

### 39) MCU CONNECTOR (item 45)

This warning label is positioned on the low cover of the air conditioner in the cab.



MCU communicates the machine data with Laptop computer through RS232 service socket.

※ See page 3-60 for details.



1409S0FW52

## MACHINE DATA PLATE

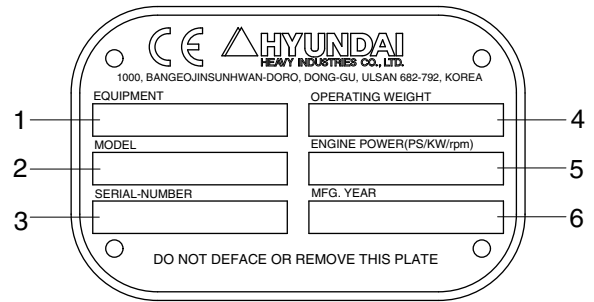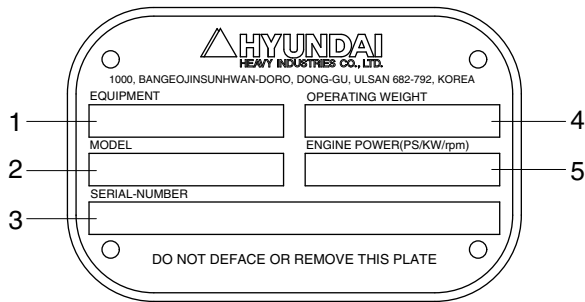

FOR EU ONLY

21090FW10


- |   |            |   |                  |   |                    |
|---|------------|---|------------------|---|--------------------|
| 1 | Equipment  | 3 | Serial number    | 5 | Engine power       |
| 2 | Model name | 4 | Operating weight | 6 | Manufacturing year |

※ The machine serial number assigned to this particular machine and should be used when requesting information or ordering service parts for this machine from your authorized HYUNDAI dealer. The machine serial number is also stamped on the frame.

## GUIDE

### 1. DIRECTION

The direction of this manual indicate forward, backward, right and left on the standard of operator when the travel motor is in the rear and machine is on the traveling direction.

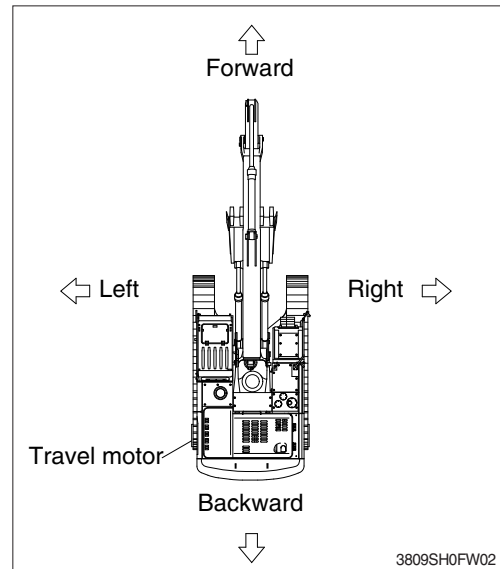


### 2. SERIAL NUMBER

Inform following when you order parts or the machine is out of order.


#### 1) MACHINE SERIAL NUMBER

The numbers are located below the right window of the operator's cab.

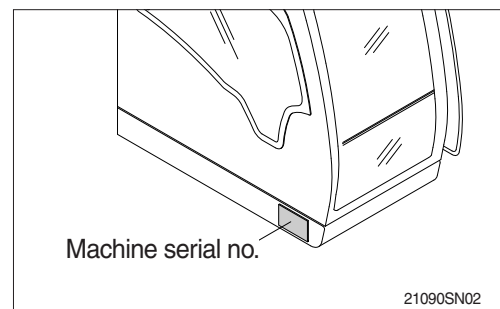

#### 2) ENGINE SERIAL NUMBER

The numbers are located on the engine name plate.

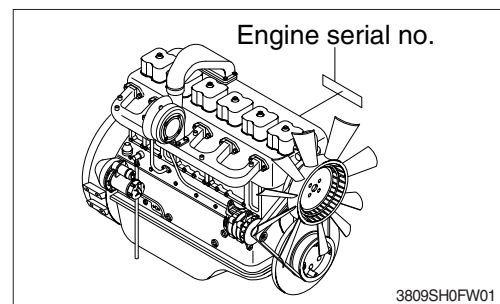

### 3. INTENDED USE

This machine is designed to be used mainly for the following work.

- Digging work
- Loading work
- Smoothing work
- Ditching work

※ Please refer to the section 4 (efficient working method) further details.

### 4. SYMBOLS

▲ Important safety hint.

△ It indicates matters which can cause the great loss on the machine or the surroundings.

※ It indicates the useful information for operator.


# SAFETY HINTS

## 1. BEFORE OPERATING THE MACHINE

Think-safety first.


In special situation, wear protective clothing including a safety helmet, safety shoes, gloves, safety glasses and ear protection as required by the job condition.

Almost every accident is caused by disregarding the simple and fundamental safety hints.

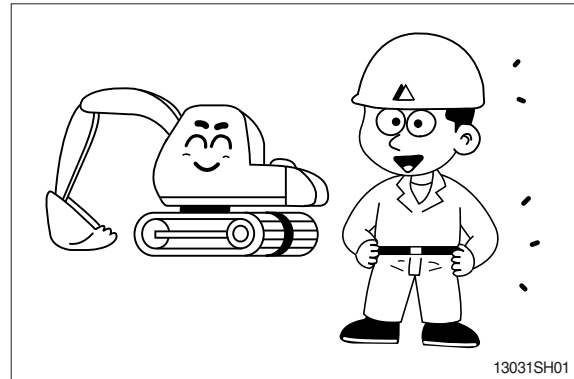


Be sure to understand thoroughly all about the operator's manual before operating the machine.

Proper care is your responsibility.

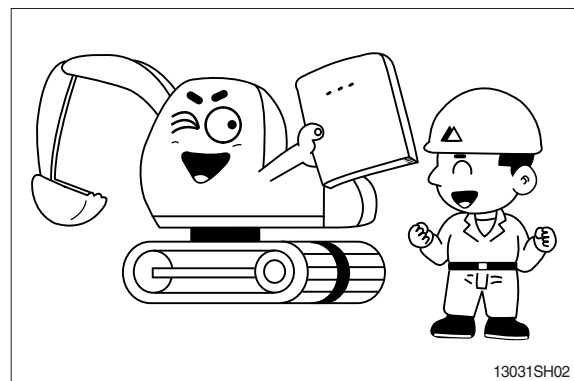


Fully understand the details and process of the construction before starting the work.

If you find anything dangerous on the job, consult with the job supervisor for the preventive measures before operating the machine.

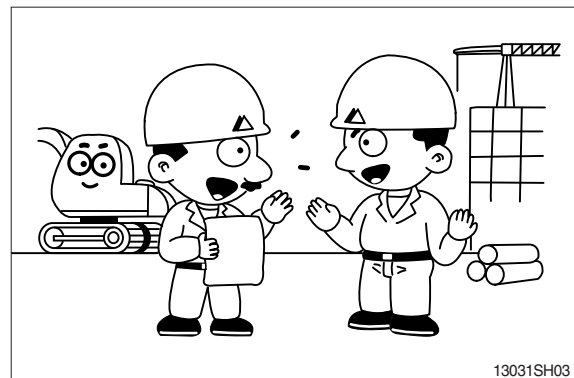


Do not operate when tired, or after drinking alcoholic beverages or any type of drugs.

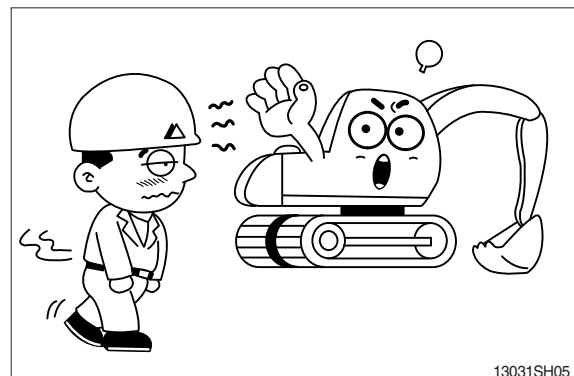





Check daily according to the operation manual.  
Repair the damaged parts and tighten the loosened bolts.

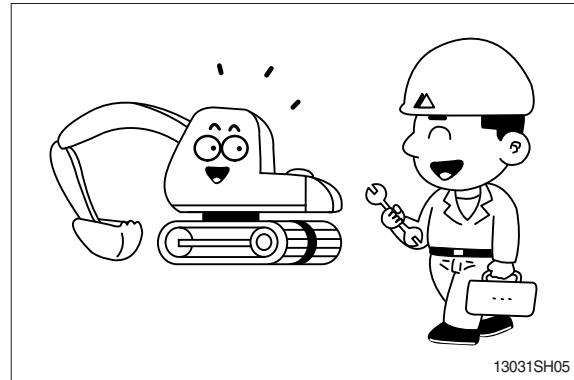


Check for leakage of engine oil, hydraulic oil, fuel and coolant.  
Keep machine clean, clean machine regularly.

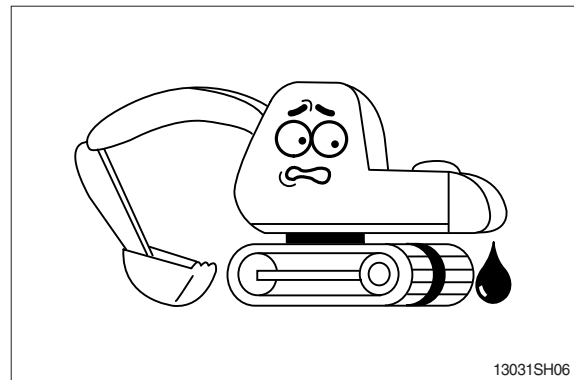

Do not operate the machine if it requires repairs.  
Operate after complete repair.

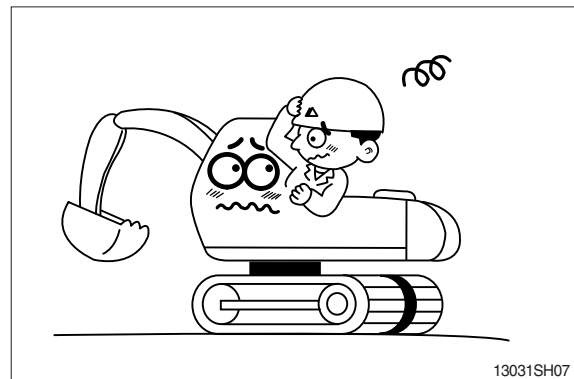

Be prepared if a fire starts.  
Keep a fire extinguisher handy and emergency numbers for a fire department near your telephone.

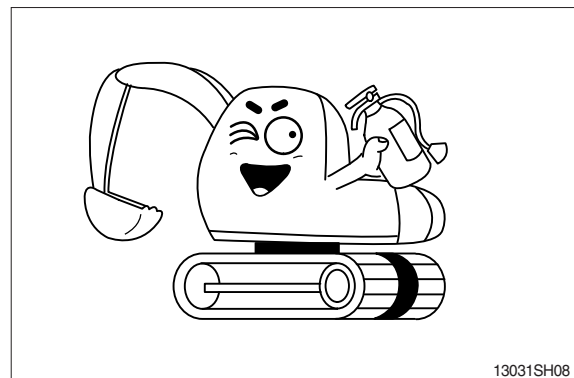


## PROTECTION AGAINST FALLING OR FLYING OBJECTS

If there is any danger of falling or flying objects hitting the operator, install protective guards in place to protect the operator as required for each particular situation.

Be sure to close the front window before commencing work.

Make sure to keep all persons other than operator outside the range of falling or flying objects. In case you need top guard, front guard and FOPS (falling object protective structure), please contact Hyundai distributor in Europe.

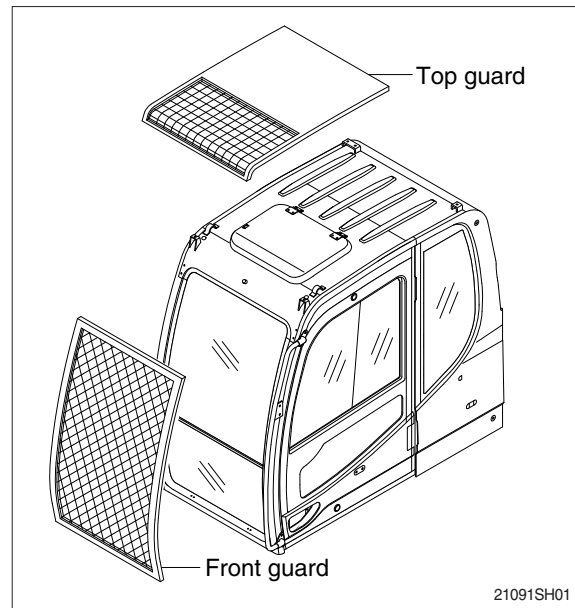

## UNAUTHORIZED MODIFICATION


Any modification made without authorization from Hyundai can create hazards.

Before making a modification, consult your Hyundai distributor. Hyundai will not be responsible for any injury or damage caused by any unauthorized modification.

## PREPARE FOR EMERGENCY

Only in case of emergency, use the installed hammer for breaking the windshield of the cab, and then exit carefully.


Be sure you know the phone numbers of persons you should contact in case of an emergency.

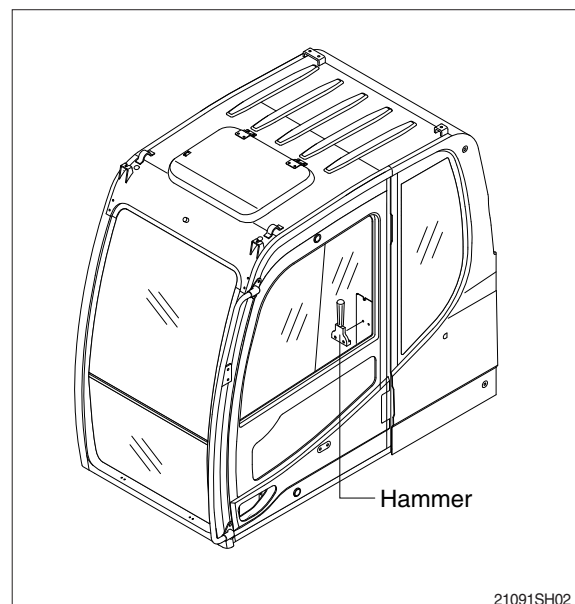

## ROTATING BEACON

When you operate a machine on a road or beside a road, a rotating beacon is required to avoid any traffic accident.

Please contact your Hyundai distributor to install it.

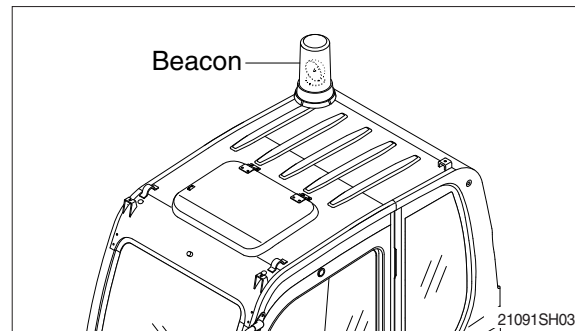

## PRECAUTIONS FOR ATTACHMENTS

When installing and using an optional attachment, read the instruction manual for the attachment and the information related to attachments in this manual.

Do not use attachments that are not authorized by Hyundai or your Hyundai distributor. Use of unauthorized attachments could create a safety problem and adversely affect the proper operation and useful life of the machine.

Any injuries, accidents, product failures resulting from the use of unauthorized attachments are not the responsibility of Hyundai.

The stability of this machine is enough to be used for general work. When you operate this machine, allow for the lifting capacity tables. If you want to use other special applications (not covered in this manual), you have to attach additional counterweight or be cautious while running the machine.

## SAFETY RULES

**Only** trained and authorized personnel can operate and maintain the machine.

Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.

When working with another operator or a person on worksite traffic duty, be sure all personnel understand all hand signals that are to be used.

## SAFETY FEATURES

Be sure all guards and covers are in their proper position. Have guards and covers repaired if damaged.

Use safety features such as safety lock and seat belts properly.

**Never** remove any safety features. **Always** keep them in good operating condition.

Improper use of safety features could result in serious bodily injury or death.

## MACHINE CONTROL PATTERN

Check machine control pattern for conformance to pattern on label in cab.

If not, change label to match pattern before operating machine.

Failure to do so could result in injury.

## CALIFORNIA PROPOSITION 65

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

This product contains or emits chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds.

WASH HANDS AFTER HANDLING




13031SH55

Do not load the machine with the lifting eyes on the counterweight.


**▲ The wrong loading method can result in serious bodily injury or death.**

## OVERHEAT PREVENTION (ARCTIC SPEC)

Arctic machines were installed with closed type side cover and undercover to reduce flow of serious cold outside air.


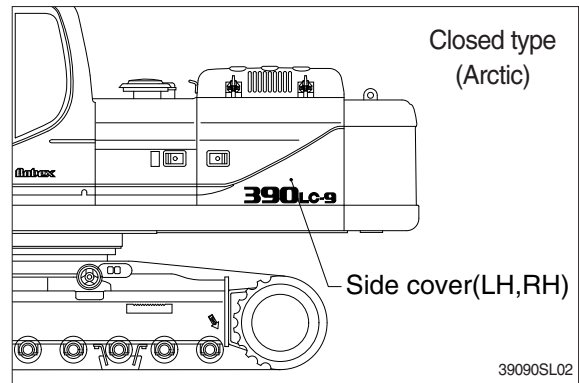


Closed type covers may cause overheating in summer seasons, because of fresh air shortage.

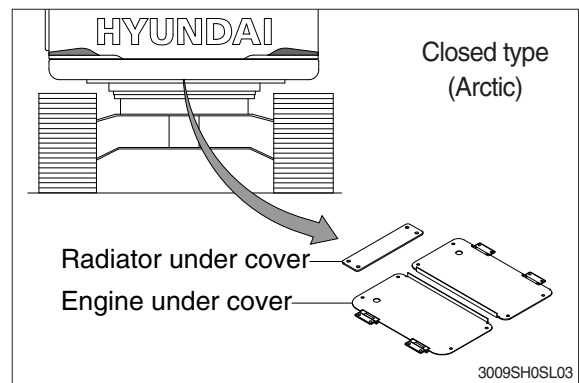

For prevention of overheating in the case of hot ambient air conditions, it is recommended to change covers those have sufficient ventilation area.


Please refer to parts manual for side cover and under cover of vent type.

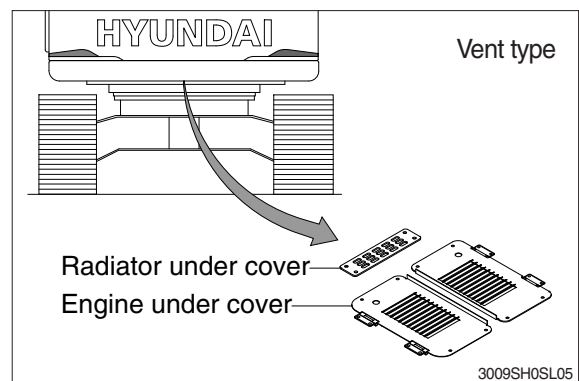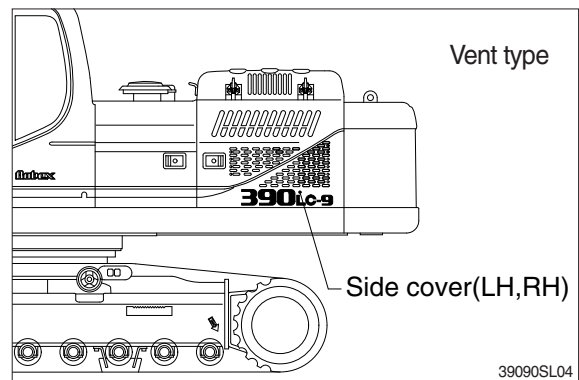

## 2. DURING OPERATING THE MACHINE


Use the handle and footstep when getting on or off the machine.

Do not jump on or off the machine.

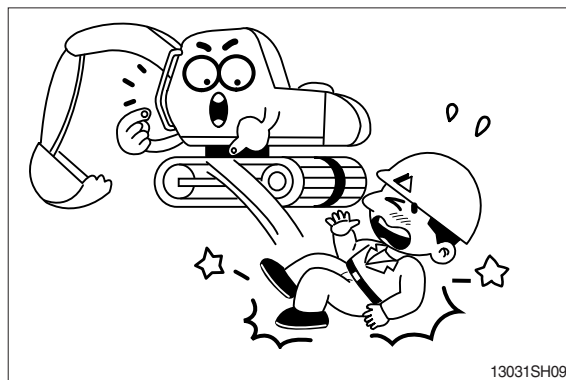


Sound the horn to warn nearby personnel before operating the machine.

Remove all the obstacles like frost on the window before operating the machine for the good visibility.

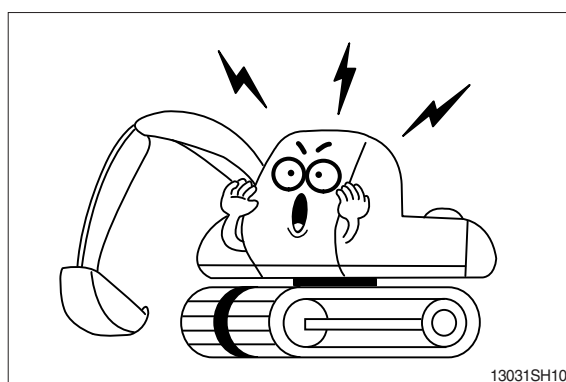


Operate carefully to make sure all personnel or obstacles are clear within the working range of the machine.


Place safety guards if necessary.

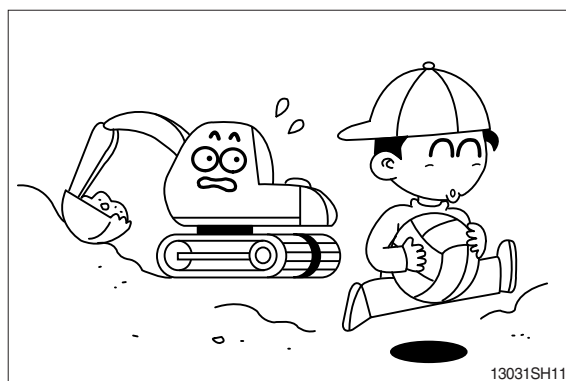


When using the work equipment, pay attention to job site.

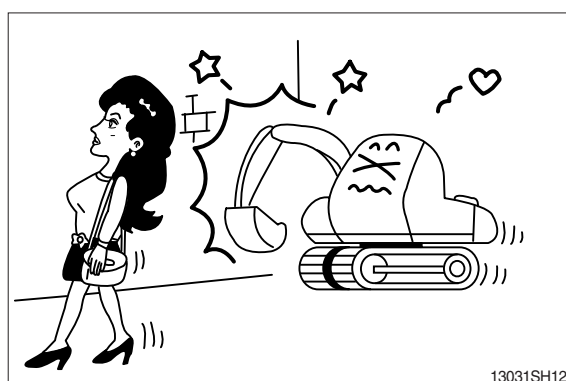

Provide proper ventilation when operating engine in a closed area to avoid the danger of exhaust gases.

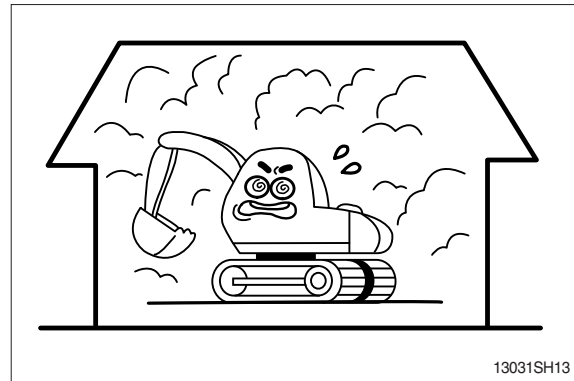


Check the locations of underground gas pipes or water line and secure the safety before operation.

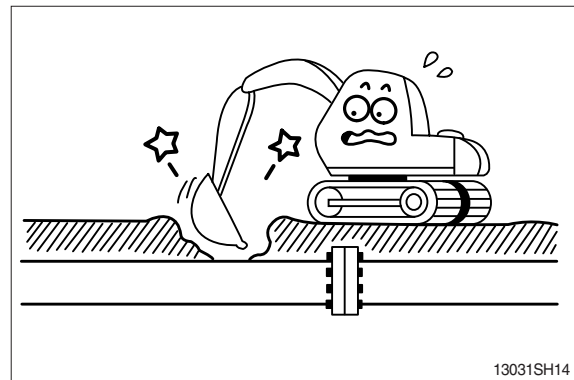


The operating near the electrical lines is very dangerous.  
Operate within safe working range permitted as below.

Supply voltage	Min safe separation
6.6 kV	3m (10 ft)
33.0 kV	4m (13 ft)
66.0 kV	5m (16 ft)
154.0 kV	8m (26 ft)
275.0 kV	10m (33 ft)

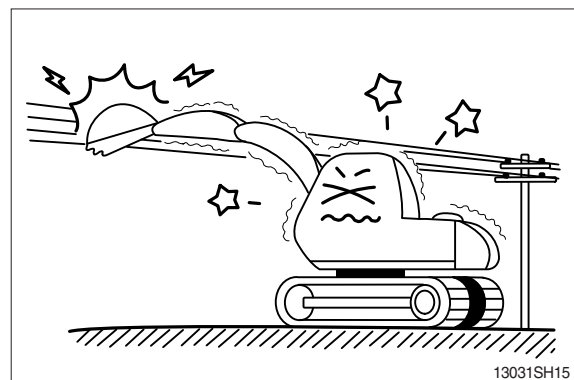


If the machine touches the electric power lines, keep sitting on the operator's seat and make sure the personnel on the ground not to touch the machine until turning off the electric current. Jump off the machine without contacting the machine when you need to get off.

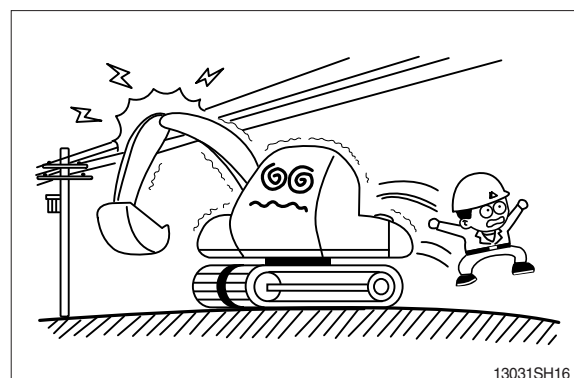


Watch out for obstacles.

Be particularly careful to check the machine clearance during the swing.

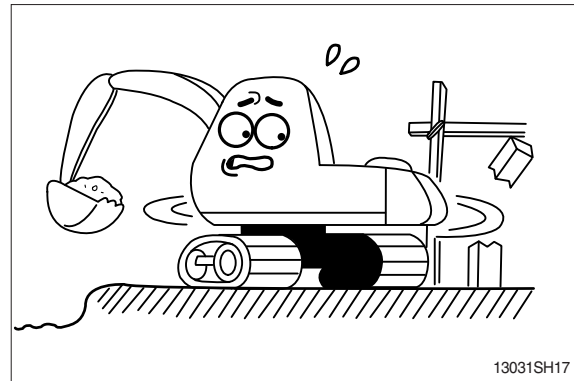


When using the machine as breaker or working in a place where stones may fall down, cab roof guard and head guard should be provided for proper protection.

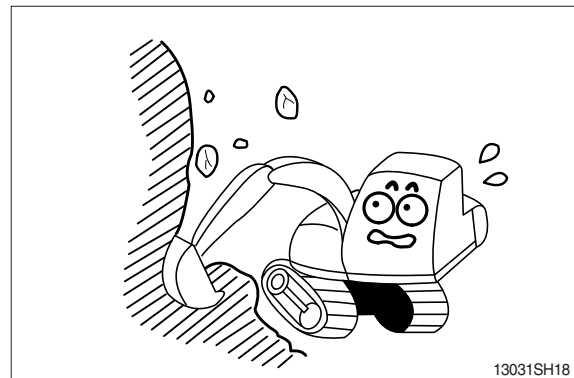


Avoid operating on a cliff or soft ground as there is danger of rolling over.

Make sure to get off easily as keeping the track at a right angle and putting the travel motor into the backward position when working on a cliff or soft ground inevitably.

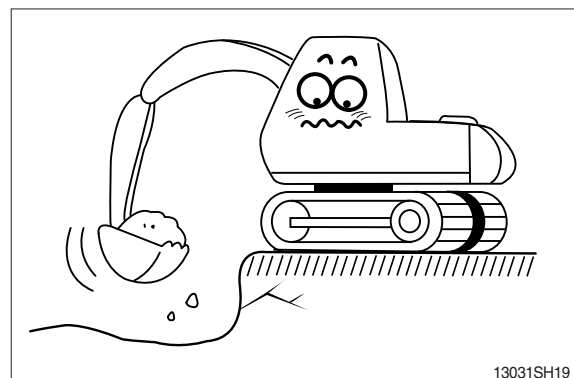


Operate for the lifting work considering the capacity of machine, weight and width of the load.

Be careful not to lift exceeding the machine capacity as it can be the cause of machine damage and safety accident.

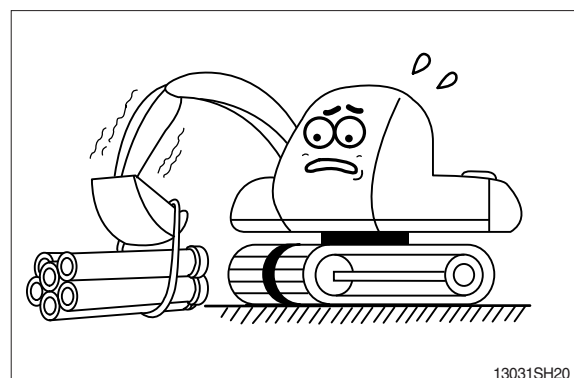





The operation on a slope is dangerous.  
Avoid operating the machine on a slope of over 10 degree.

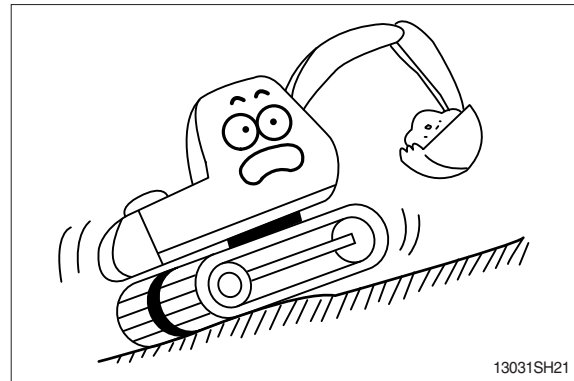


Operate the machine after making ground flat when operation is required on a slope.

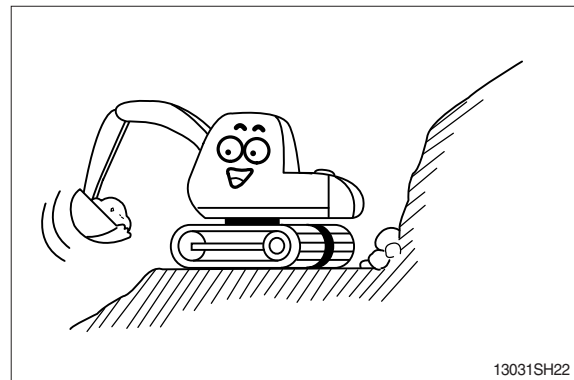


The swing on the slope can be danger of rolling over.  
Do not operate to swing the machine with the bucket loaded on a slope since the machine may lose its balance under such an instance.

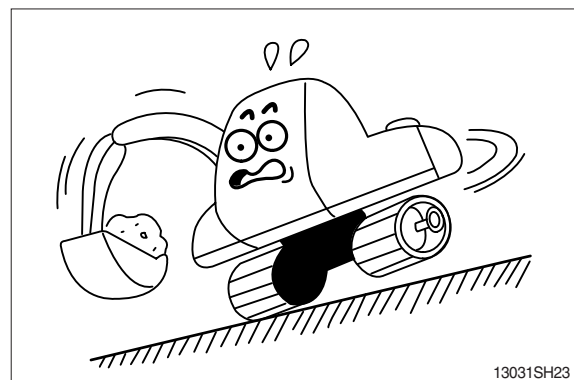


Avoid parking and stopping on a slope.  
Lower the bucket to the ground and block the track when parking.

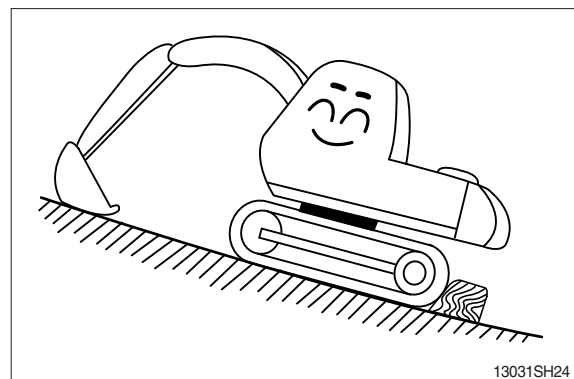


Avoid traveling in a cross direction on a slope as it can cause the danger of rolling over and sliding.

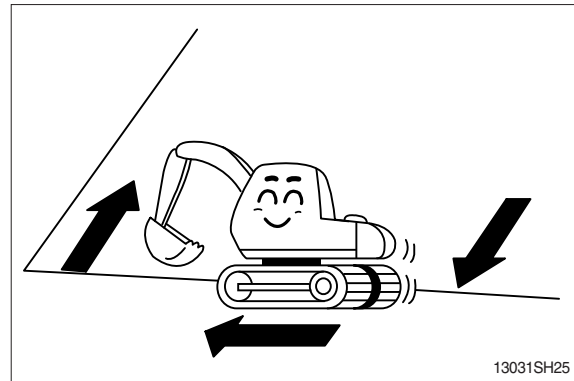


Traveling on a slope is dangerous.  
Be sure to operate slowly when traveling down a slope and maintain the bucket at a height of 20~30 cm (1 ft) above the ground so that it can be used as brake in an emergency.

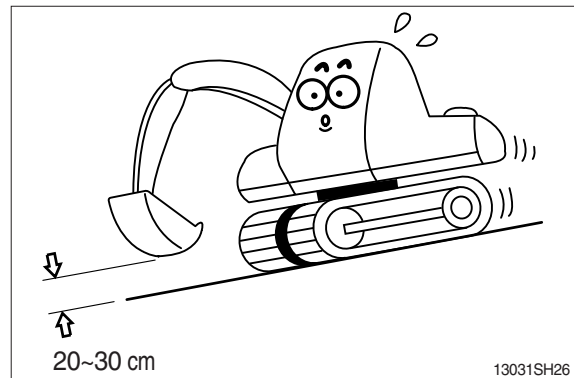


Steering of the machine while traveling on a slope is dangerous.  
When an inevitable turning of direction is required, turn on the flat and solid ground.

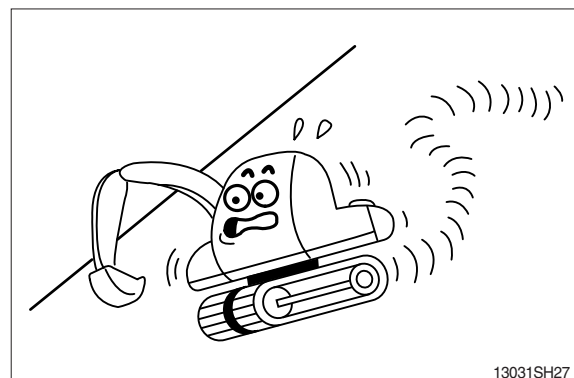


The engine angularity limits are 35 degree.  
Do not operate by more than the engine limits in any case.

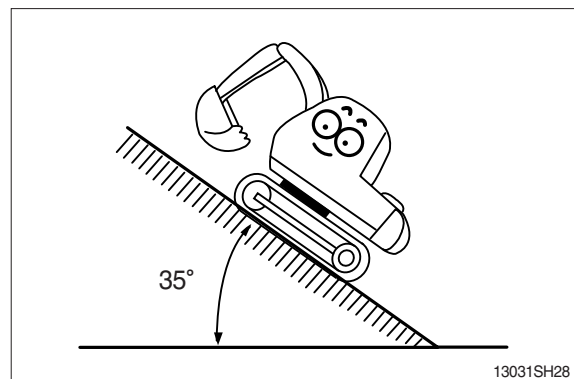


Before traveling the machine, sound the horn to warn nearby personnel.  
Operate forward and backward correctly with confirming the location of the travel motor.

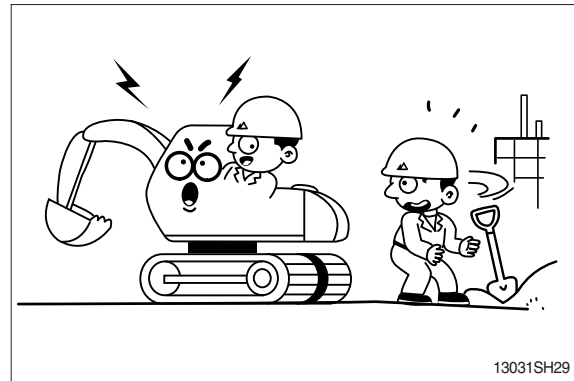


Slow down when traveling through obstacles or uneven ground.

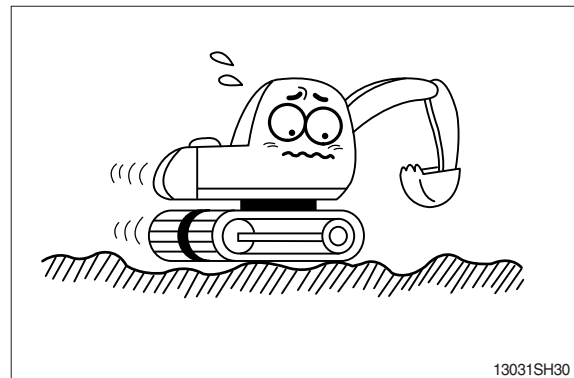

When working on soft ground, place mats or wood boards on the ground to prevent the machine sinking.

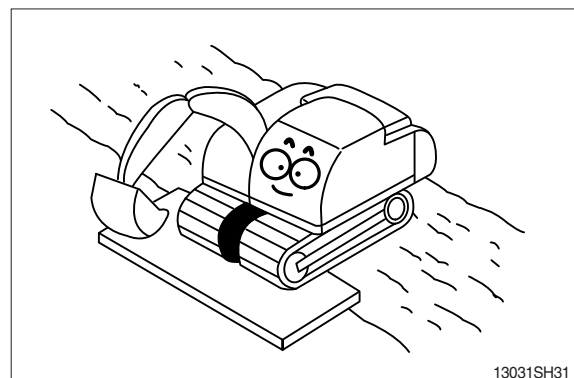

When operating in water or when crossing shallow, check the bed soil condition and depth and flow speed of water, then proceed taking care that water is not above carrier roller.

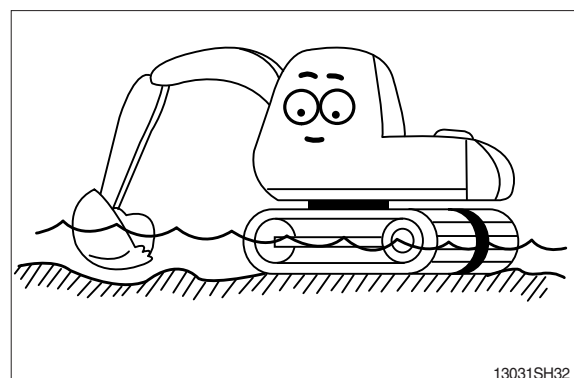

## MOUNTING AND DISMOUNTING

**Never** jump on or off the machine. **Never** get on or off a moving machine.


When mounting or dismounting, always face the machine and use the handrails, machine or track frame steps, and track shoes. Additional track frame step can be fitted for wider optional shoe. In this case please contact your Hyundai distributor.

Do not hold any control levers when getting on or off the machine.

Ensure safety by always maintaining at least three-point contact of hands and feet with the handrails, steps or track shoes.

Always remove any oil or mud from the handrails, steps and track shoes. If they are damaged, repair them and tighten any loose bolts.

If grasping the door handrail when mounting or dismounting or moving on the track, open and lock the door securely in the open position. Otherwise, the door may move suddenly, causing you to lose balance and fall.

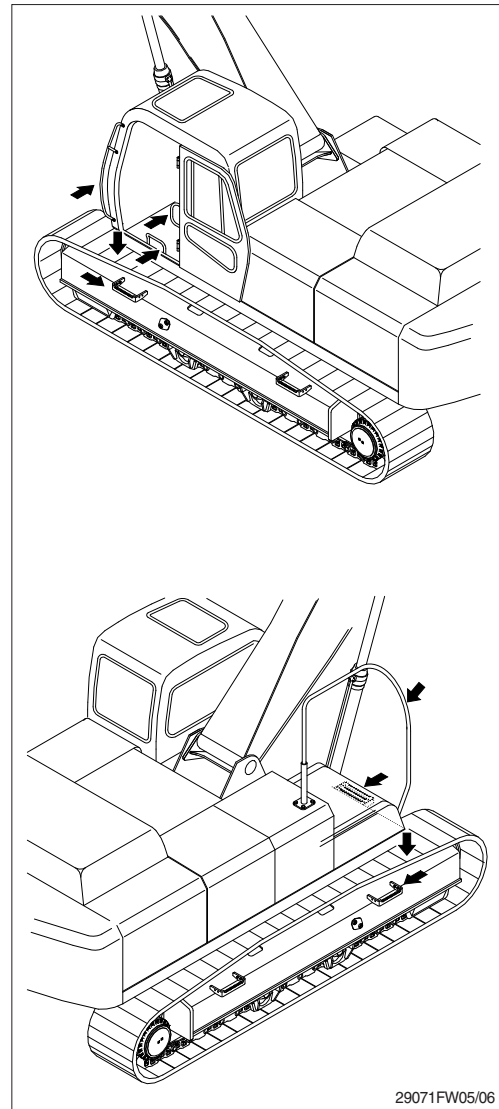


## KEEP RIDERS OFF MACHINE

Riders on a machine are subject to injury such as being struck objects and being thrown off the machine.


Only allow the operator on the machine. Keep riders off.



There is the danger of fire in fuel and oil.  
Store in cool and dry area, away from any open flames.

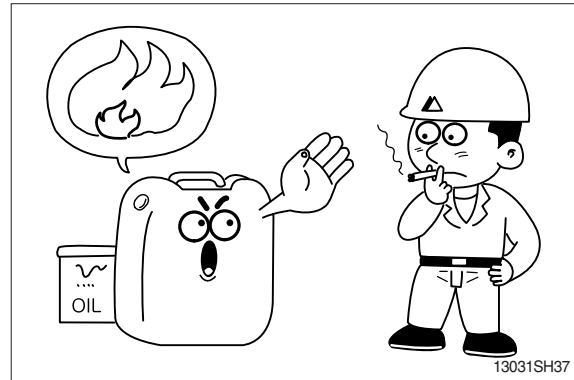


Do not touch exhaust pipe, or may cause severe burn.

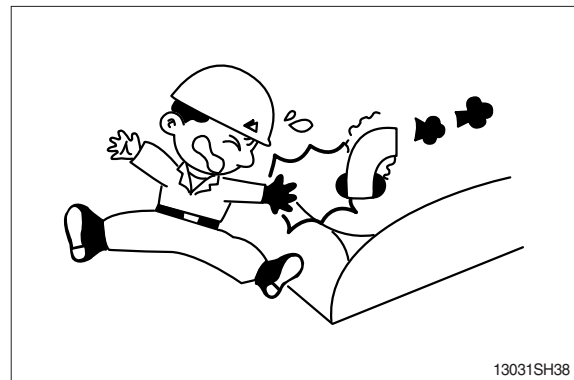

Do not open the engine hood and covers while the engine is running.



Be careful of not hitting the edges when you service engine.

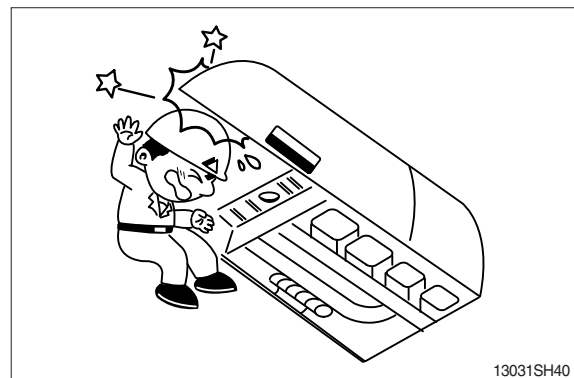

Be careful that the front window may be promptly closed.


Be sure to support stay, when the side door needs to be opened.

Be careful that the open side door may closed by the external or natural force like strong wind.




The antislip protection should be replaced if they have become worn or have been printed over.

Be sure to free of oil, water and grease etc.

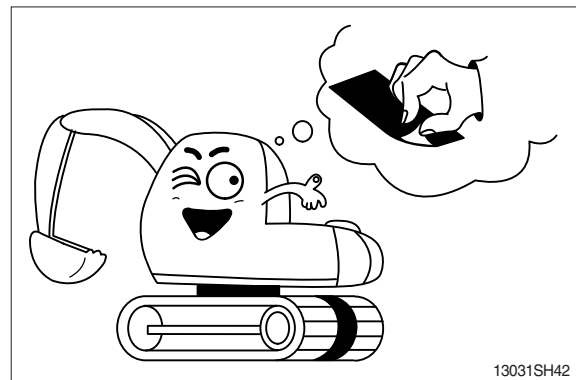

Be careful of not touching slip, fall down etc., when you work at the upper frame to service engine and/or other component.

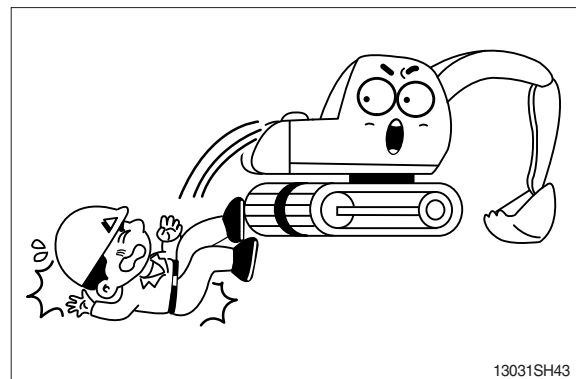


## HIGH PRESSURE GAS

Contain high pressure gas.

To avoid explosion and personal injury, do not expose to fire, do not weld, do not drill.

Relieve pressure before discharging.

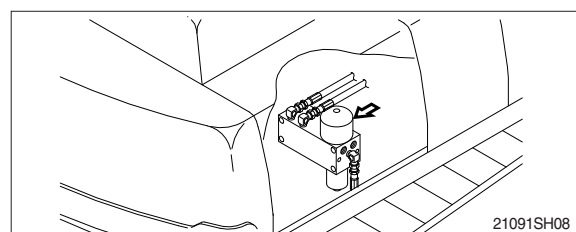


## LIFT EYES CAN FAIL

Lift eyes or tank can fail when lifting tank containing fluids resulting in possible personal injury.


Drain tank of all fluids before lifting.

## 4. PARKING


When leaving the machine after parking, lower the bucket to the ground completely and put the safety lever at parking position then remove the key.  
Lock the cab door.

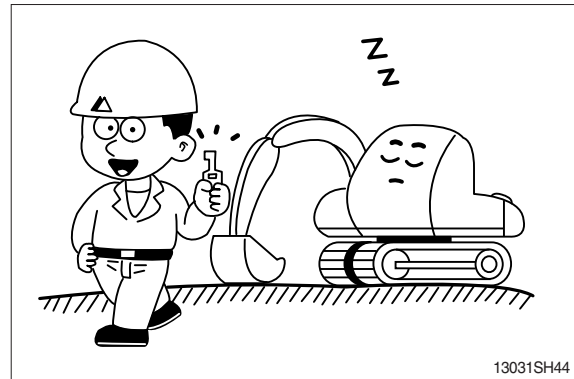

Park the machine in the flat and safe place.

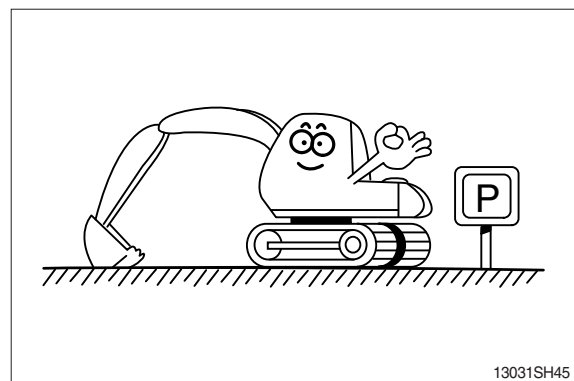



Hope you can work easily and safely observing safety rules.  
For safe operation, observe all safety rules.

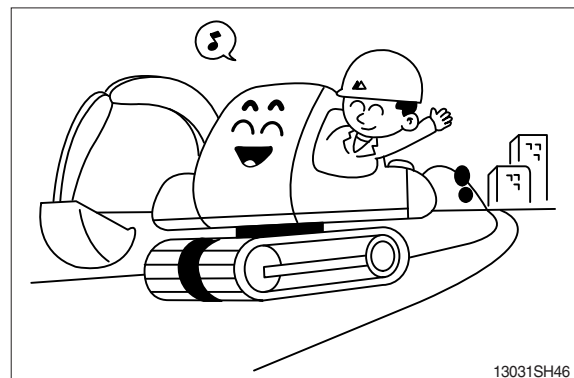




# SPECIFICATIONS

## 1. MAJOR COMPONENT

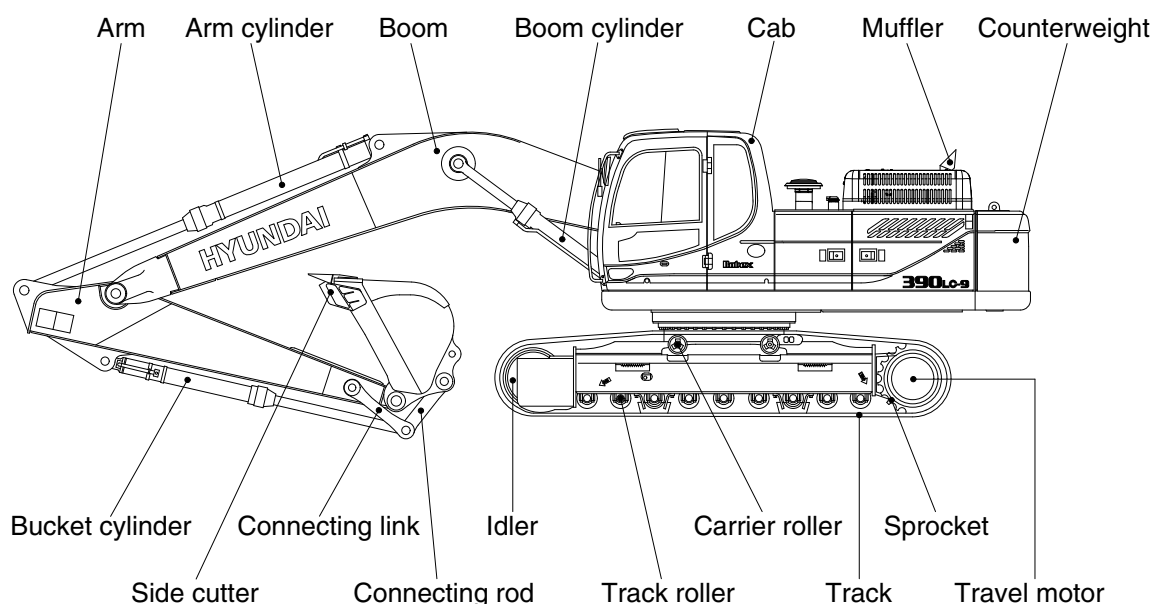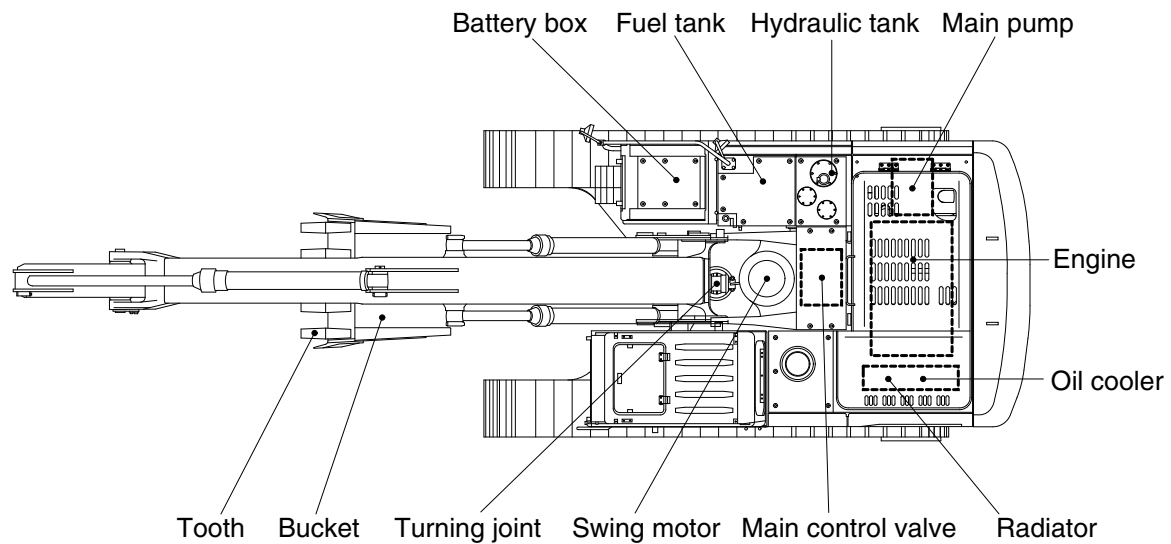

39092SP01

## 2. SPECIFICATIONS

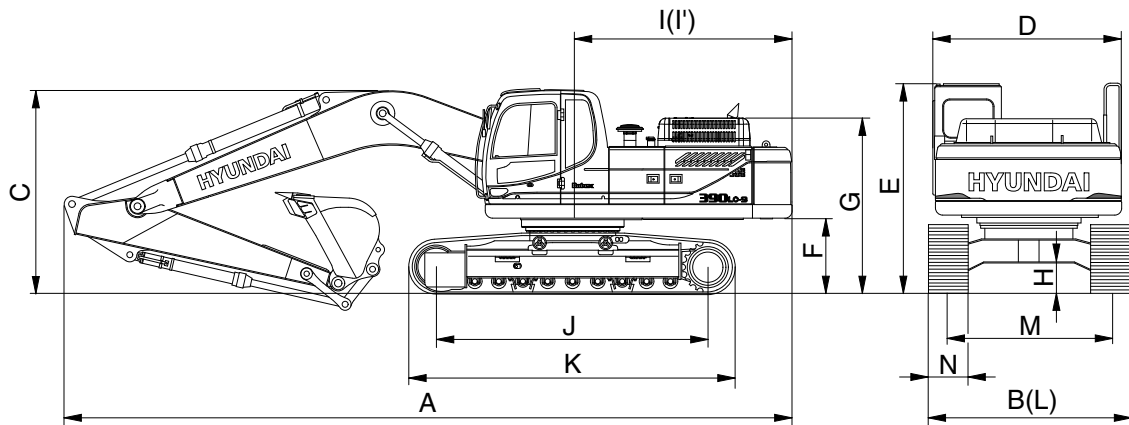


39092SP02

Description		Unit	Specification
Operating weight		kg (lb)	38400 (84660)
Bucket capacity (SAE heaped), standard		m <sup>3</sup> (yd <sup>3</sup> )	1.62 (2.12)
Overall length	A	mm (ft-in)	11120 (36' 6")
Overall width, with 600 mm shoe	B		3340 (10'11")
Overall height	C		3450 (11' 4")
Superstructure width	D		2980 ( 9' 9")
Overall height of cab	E		3175 (10' 5")
Ground clearance of counterweight	F		1290 ( 4' 3")
Engine cover height	G		2790 ( 9' 2")
Minimum ground clearance	H		550 ( 1' 10")
Rear-end distance	I		3350 (11' 1")
Rear-end swing radius	I'		3415 (11' 2")
Distance between tumblers	J		4340 (14' 3")
Undercarriage length	K		5280 (17' 4")
Undercarriage width	L		3340 (11' 0")
Track gauge	M		2740 ( 9' 0")
Track shoe width, standard	N		600 (24")
Travel speed (low/high)		km/hr (mph)	3.1/5.0 (1.9/3.1)
Swing speed		rpm	9.7
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm <sup>2</sup> (psi)	0.69 (9.81)
Max traction force		kg (lb)	32000 (70550)

### 3. WORKING RANGE

#### · 6.5 m (21' 4") BOOM

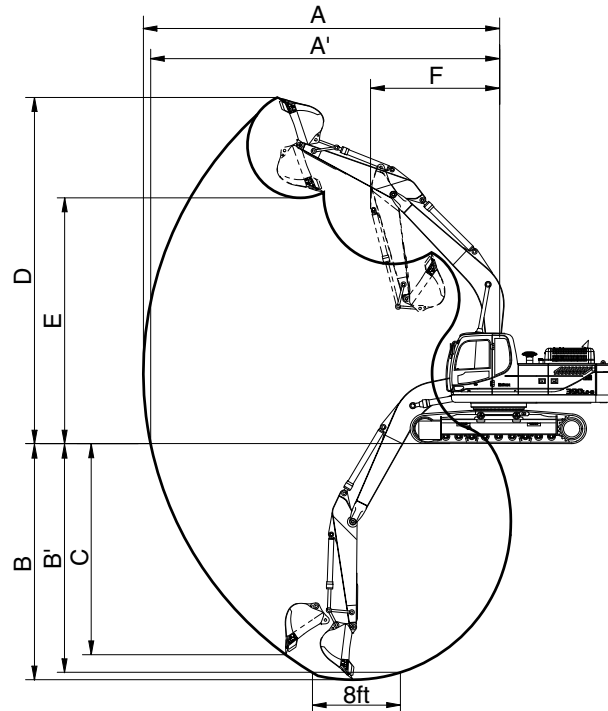


39092SP03

Description		2.5 m (8' 2") Arm	*3.2 m (10' 6") Arm	3.9 m (12' 10") Arm	4.3 m (14' 1") Arm
Max digging reach	A	10720 mm (35' 2")	11250 mm (36' 11")	11870 mm (38' 11")	12380 mm (40' 7")
Max digging reach on ground	A'	10490 mm (34' 5")	11040 mm (36' 3")	11670 mm (38' 3")	12180 mm (40' 0")
Max digging depth	B	6820 mm (22' 5")	7520 mm (24' 8")	8220 mm (27' 0")	8620 mm (28' 3")
Max digging depth (8ft level)	B'	6640 mm (21' 9")	7360 mm (24' 2")	8080 mm (26' 6")	8490 mm (27' 10")
Max vertical wall digging depth	C	5930 mm (19' 5")	6330 mm (20' 9")	7040 mm (23' 1")	7540 mm (24' 9")
Max digging height	D	10590 mm (34' 9")	10570 mm (34' 8")	10800 mm (35' 5")	11360 mm (37' 3")
Max dumping height	E	7370 mm (24' 2")	7410 mm (24' 4")	7640 mm (25' 1")	8160 mm (26' 9")
Min swing radius	F	4530 mm (14' 10")	4450 mm (14' 7")	4440 mm (14' 7")	4460 mm (14' 8")
Bucket digging force	SAE	201.0 [219.3] kN	201.0 [219.3] kN	201.0 [219.3] kN	201.0 [219.3] kN
		20500 [22360] kgf	20500 [22360] kgf	20500 [22360] kgf	20500 [22360] kgf
		45190 [49300] lbf	45190 [49300] lbf	45190 [49300] lbf	45190 [49300] lbf
	ISO	228.5 [249.3] kN	228.5 [249.3] kN	228.5 [249.3] kN	228.5 [249.3] kN
		23300 [25420] kgf	23300 [25420] kgf	23300 [25420] kgf	23300 [25420] kgf
		51370 [56040] lbf	51370 [56040] lbf	51370 [56040] lbf	51370 [56040] lbf
Arm crowd force	SAE	184.4 [201.1] kN	152.0 [165.8] kN	135.3 [147.6] kN	124.5 [135.9] kN
		18800 [20510] kgf	15500 [16910] kgf	13800 [15050] kgf	12700 [13850] kgf
		41450 [45220] lbf	34170 [37280] lbf	30420 [33190] lbf	28000 [30550] lbf
	ISO	192.2 [209.7] kN	156.9 [171.2] kN	139.3 [151.9] kN	128.5 [140.1] kN
		19600 [21380] kgf	16000 [17450] kgf	14200 [15490] kgf	13100 [14290] kgf
		43210 [47140] lbf	35270 [38480] lbf	31310 [34160] lbf	28880 [31510] lbf

[ ] : Power boost

\* : STD

· 6.15 m (20' 2") BOOM

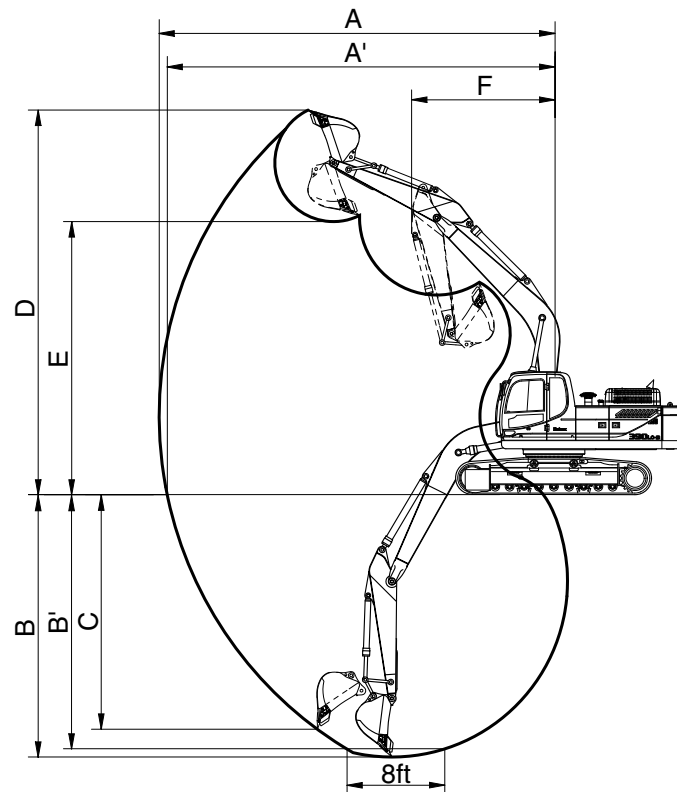


39092SP03

Description		2.5 m (8' 2") Arm
Max digging reach	A	10330 mm (33'11")
Max digging reach on ground	A'	10100 mm (33' 2")
Max digging depth	B	6450 mm (21' 2")
Max digging depth (8ft level)	B'	6270 mm (20' 7")
Max vertical wall digging depth	C	5490 mm (18' 0")
Max digging height	D	10320 mm (33'10")
Max dumping height	E	7120 mm (23' 4")
Min swing radius	F	4220 mm (13'10")
Bucket digging force	SAE	201.0 [219.3] kN
		20500 [22360] kgf
		45190 [49300] lbf
	ISO	228.5 [249.3] kN
		23300 [25420] kgf
		51370 [56040] lbf
Arm crowd force	SAE	184.4 [201.1] kN
		18800 [20510] kgf
		41450 [45220] lbf
	ISO	192.2 [209.7] kN
		19600 [21380] kgf
		43210 [47140] lbf

[ ] : Power boost

· 8.6 m (28' 3") BOOM

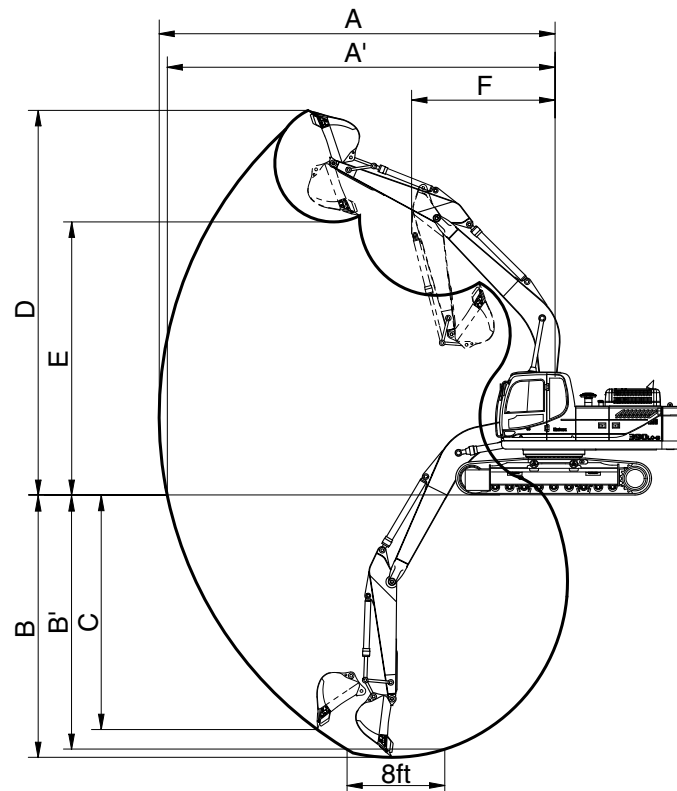

39092SP03

Description		5.1 m (16' 9") Arm
Max digging reach	A	15280 mm (50' 2")
Max digging reach on ground	A'	15120 mm (49' 7")
Max digging depth	B	11230 mm (36' 10")
Max digging depth (8ft level)	B'	11120 mm (36' 6")
Max vertical wall digging depth	C	10060 mm (33' 0")
Max digging height	D	13350 mm (43' 10")
Max dumping height	E	10150 mm (33' 4")
Min swing radius	F	5900 mm (19' 4")
Bucket digging force	SAE	201.0 [220.4] kN
		20500 [22360] kgf
		45190 [49550] lbf
	ISO	228.5 [250.3] kN
		23300 [25420] kgf
		51370 [56280] lbf
Arm crowd force	SAE	109.8 [119.8] kN
		11200 [12220] kgf
		24690 [26930] lbf
	ISO	112.8 [123.0] kN
		11500 [12550] kgf
		25350 [27650] lbf

[ ] : Power boost















## 4. WEIGHT

Item		R380LC-9SH	
		kg	lb
Upperstructure assembly		15040	33160
Main frame weld assembly		3090	6810
Engine assembly		920	2030
Main pump assembly		190	420
Main control valve assembly		340	750
Swing motor assembly		440	970
Hydraulic oil tank assembly		340	750
Fuel tank assembly		230	510
Counterweight	6.5, 6.15 m boom	6500	14330
	8.6 m boom	8100	17860
Cab assembly		490	1080
Lower chassis assembly		14310	31550
Track frame weld assembly		5415	11940
Swing bearing		560	1240
Travel motor assembly		380	840
Turning joint		65	140
Track recoil spring		210	460
Idler		260	570
Carrier roller		41	90
Track roller		80	180
Track-chain assembly (600 mm standard triple grouser shoe)		2380	5250
Front attachment assembly (6.5 m boom, 3.2 m arm, 1.62 m³ SAE heaped bucket)		7720	17020
6.5 m boom assembly		2930	6460
3.2 m arm assembly		1340	2950
1.62 m³ SAE heaped bucket		1330	2930
Boom cylinder assembly		370	820
Arm cylinder assembly		490	1080
Bucket cylinder assembly		320	710
Bucket control linkage assembly		370	820

## 5. LIFTING CAPACITIES











1) 6.5 m (21' 4") boom, 3.2 m (10' 6") arm equipped with 1.62 m<sup>3</sup> (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 6500 kg (14330 lb counterweight).

-  : Rating over-front
-  : Rating over-side or 360 degree











Load point height		Load radius												At max. reach		
		1.5 m (5.0 ft)		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		9.0 m (30.0 ft)		Capacity		Reach
																m (ft)
9.0 m (30 ft)	kg													*5950	*5950	7.97
	lb													*13120	*13120	(26.1)
7.5 m (25.0 ft)	kg									*4560	*4560			*6020	4890	9.12
	lb									*10050	*10050			*13270	10780	(29.9)
6.0 m (20.0 ft)	kg									*6620	*6620			*6110	4070	9.87
	lb									*14590	*14590			*13470	8970	(32.4)
4.5 m (15.0 ft)	kg							*8260	*8260	*7320	6610	*4450	*4450	*6190	3600	10.32
	lb							*18210	*18210	*16140	14570	*9810	*9810	*13650	7940	(33.9)
3.0 m (10.0 ft)	kg					*13520	*13520	*9960	9020	*8240	6240	*6360	4490	6010	3360	10.50
	lb					*29810	*29810	*21960	19890	*18170	13760	*14020	9900	13250	7410	(34.4)
1.5 m (5.0 ft)	kg					*16390	13030	*11570	8370	*9170	5880	*7510	4300	5960	3310	10.45
	lb					*36130	28730	*25510	18450	*20220	12960	*16560	9480	13140	7300	(34.3)
Ground Line	kg			*13090	*13090	*17880	12390	*12690	7930	*9880	5600	*7070	4150	6200	3430	10.14
	lb			*28860	*28860	*39420	27320	*27980	17480	*21780	12350	*15590	9150	13670	7560	(33.3)
-1.5 m (-5.0 ft)	kg	*13720	*13720	*17520	*17520	*18150	12180	*13170	7710	9860	5450			6810	3800	9.57
	lb	*30250	*30250	*38620	*38620	*40010	26850	*29030	17000	21740	12020			15010	8380	(31.4)
-3.0 m (-10.0 ft)	kg	*17880	*17880	*22800	*22800	*17430	12250	*12880	7690	9860	5450			*7730	4560	8.65
	lb	*39420	*39420	*50270	*50270	*38430	27010	*28400	16950	21740	12020			*17040	10050	(28.4)
-4.5 m (-15.0 ft)	kg	*22600	*22600	*21880	*21880	*15520	12550	*11510	7890					*7690	6290	7.25
	lb	*49820	*49820	*48240	*48240	*34220	27670	*25380	17390					*16950	13870	(23.8)
-6.0 m (-20.0 ft)	kg					*11410	*11410									
	lb					*25150	*25150									

- Note
1. Lifting capacity are based on SAE J1097 and ISO 10567.
  2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
  3. The load point is a hook located on the back of the bucket.
  4. \*indicates load limited by hydraulic capacity.

(2) 6.15 m (20' 2") boom, 2.5 m (8' 2") arm equipped with 1.62 m<sup>3</sup> (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 6500 kg (14330 lb) counterweight.















Load point height		Load radius								At max. reach		
		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		Capacity		Reach
												m (ft)
9.0 m (30.0 ft)	kg lb									*7580 *16710	*7580 *16710	6.65 (21.8)
7.5 m (25.0 ft)	kg lb									*7420 *16360	6270 13820	8.02 (26.3)
6.0 m (20.0 ft)	kg lb					*8590 *18940	*8590 *18940	*6510 *14350	*6510 *14350	*7460 *16450	5050 11130	8.88 (29.1)
4.5 m (15.0 ft)	kg lb	*18270 *40280	*18270 *40280	*12170 *26830	*12170 *26830	*9790 *21580	*9790 *21580	*8620 *19000	6640 14640	7560 16670	4410 9720	9.38 (30.8)
3.0 m (10.0 ft)	kg lb			*15380 *33910	14360 31660	*11300 *24910	9140 20150	*9350 *20610	6330 13960	7130 15720	4100 9040	9.58 (31.4)
1.5 m (5.0 ft)	kg lb			*17740 *39110	13240 29190	*12640 *27870	9140 20150	*10060 *22180	6020 13270	7090 15630	4040 8910	9.52 (31.2)
Ground Line	kg lb	*13400 *29540	*13400 *29540	*18580 *40960	12720 28040	*13410 *29560	8160 17990	10230 22550	5790 12760	7450 16420	4230 9330	9.19 (30.2)
-1.5 m (-5.0 ft)	kg lb	*21020 *46340	*21020 *46340	*18170 *40060	12580 27730	*13400 *29540	7990 17610	10120 22310	5690 12540	*8340 *18390	4780 10540	8.53 (28.0)
-3.0 m (-10 ft)	kg lb	*22960 *50620	*22960 *50620	*16580 *36550	12700 28000	*12330 *27180	8040 17730			*8180 *18030	6030 13290	7.47 (24.5)
-1.5 m (-10 ft)	kg lb	*17870 *39400	*17870 *39400	*13110 *28900	*13110 *28900							

(3) 6.5 m (21' 4") boom, 2.5 m (8' 2") arm equipped with 1.62 m<sup>3</sup> (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 6500 kg (14330 lb) counterweight.

















Load point height		Load radius								At max. reach		
		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		Capacity		Reach
												m (ft)
9.0 m (30.0 ft)	kg lb									*6820 *15040	*6820 *15040	7.22 (23.7)
7.5 m (25.0 ft)	kg lb									*6770 *14930	5460 12040	8.49 (27.9)
6.0 m (20.0 ft)	kg lb					*7970 *17570	*7970 *17570	*7480 *16490	6680 14730	*6850 *15100	4460 9830	9.29 (30.5)
4.5 m (15.0 ft)	kg lb			*11870 *26170	*11870 *26170	*9290 *20480	*9290 *20480	*8060 *17770	6420 14150	6880 15170	3930 8660	9.77 (32.1)
3.0 m (10.0 ft)	kg lb			*15200 *33510	13580 29940	*10870 *23960	8740 19270	*8870 *19550	6090 13430	6520 14370	3670 8090	9.97 (32.7)
1.5 m (5.0 ft)	kg lb			*17480 *38540	12590 27760	*12250 *27010	8170 18010	*9650 *21270	5780 12740	6500 14330	3630 8000	9.91 (32.5)
Ground Line	kg lb			*18200 *40120	12240 26980	*13060 *28790	7830 17260	9980 22000	5560 12260	6820 15040	3810 8400	9.59 (31.5)
-1.5 m (-5.0 ft)	kg lb	*17830 *39310	*17830 *39310	*17860 *39370	12220 26940	*13180 *29060	7720 17020	9900 21830	5490 12100	7630 16820	4300 9480	8.97 (29.4)
-3.0 m (-10 ft)	kg lb	*22850 *50380	*22850 *50380	*16580 *36550	12420 27380	*12430 *27400	7810 17220			*7850 *17310	5340 11770	7.97 (26.1)
-1.5 m (-10 ft)	kg lb	*18790 *41420	*18790 *41420	*13880 *30600	12880 28400					*7110 *15670	*7110 *15670	6.39 (21.0)























(4) 6.5 m (21' 4") boom, 3.9 m (12' 10") arm equipped with 1.62 m<sup>3</sup> (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 6500 kg (14330 lb) counterweight.

Load point height		Load radius												At max. reach		
		1.5 m (5.0 ft)		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		9.0 m (30.0 ft)		Capacity		Reach
																m (ft)
9.0 m (30 ft)	kg													*5220	*5220	8.81
	lb													*11510	*11510	(28.9)
7.5 m (25.0 ft)	kg													*5320	4220	9.85
	lb													*11730	9300	(32.3)
6.0 m (20.0 ft)	kg									*5820	*5820	*3620	*3620	*5490	3550	10.54
	lb									*12830	*12830	*7980	*7980	*12100	7830	(34.6)
4.5 m (15.0 ft)	kg									*6570	*6570	*5410	4680	*5660	3160	10.95
	lb									*14480	*14480	*11930	10320	*12480	6970	(35.9)
3.0 m (10.0 ft)	kg			*19700	*19700	*11910	*11910	*9000	*9000	*7540	6240	*6730	4460	5390	2950	11.13
	lb			*43430	*43430	*26260	*26260	*19840	*19840	*16620	13760	*14840	9830	11880	6500	(36.5)
1.5 m (5.0 ft)	kg			*12690	*12690	*15110	13210	*10740	8390	*8560	5830	*7320	4230	5330	2890	11.07
	lb			*27980	*27980	*33310	29120	*23680	18500	*18870	12850	*16140	9330	11750	6370	(36.3)
Ground Line	kg			*13710	*13710	*17120	12340	*12090	7860	*9410	5500	7350	4040	5510	2970	10.79
	lb			*30230	*30230	*37740	27210	*26650	17330	*20750	12130	16200	8910	12150	6550	(35.4)
-1.5 m (-5.0 ft)	kg	*12630	*12630	*16860	*16860	*17890	11970	*12830	7550	9710	5300	7220	3930	5970	3240	10.26
	lb	*27840	*27840	*37170	*37170	*39440	26390	*28290	16640	21410	11680	15920	8660	13160	7140	(33.7)
-3.0 m (-10.0 ft)	kg	*16240	*16240	*21070	*21070	*17610	11920	*12860	7450	9630	5230			6900	3810	9.42
	lb	*35800	*35800	*46450	*46450	*38820	26280	*28350	16420	21230	11530			15210	8400	(30.9)
-4.5 m (-15.0 ft)	kg	*20300	*20300	*23540	*23540	*16240	12130	*11980	7560	*8980	5360			*7360	4970	8.17
	lb	*44750	*44750	*51900	*51900	*35800	26740	*26410	16670	*19800	11820			*16230	10960	(26.8)
-6.0 m (-20.0 ft)	kg			*18730	*18730	*13200	12640									
	lb			*41290	*41290	*29100	27870									

(5) 6.5 m (21' 4") boom, 4.3 m (14' 1") arm equipped with 1.62 m<sup>3</sup> (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 6500 kg (14330 lb) counterweight.






Load point height		Load radius														At max. reach			
		1.5 m (5.0 ft)		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		9.0 m (30.0 ft)		10.5 m (35.0 ft)		Capacity		Reach	
																		m (ft)	
9.0 m (30 ft)	kg																*4970	4590	9.45
	lb																*10960	10250	(31.0)
7.5 m (25.0 ft)	kg											*2710	*2710				*4770	3710	10.42
	lb											*5970	*5970				*10520	8180	(34.2)
6.0 m (20.0 ft)	kg											*4420	*4420				*4670	3150	11.07
	lb											*9740	*9740				*10300	6940	(36.3)
4.5 m (15.0 ft)	kg									*6030	*6030	*5580	4730				*4690	2820	11.46
	lb									*13290	*13290	*12300	10430				*10340	6220	(37.6)
3.0 m (10.0 ft)	kg			*16870	*16870	*10740	*10740	*8310	*8310	*7050	6310	*6340	4490	*2620	*2620		*4830	2640	11.63
	lb			*37190	*37190	*23680	*23680	*18320	*18320	*15540	13910	*13980	9900	*5780	*5780		*10650	5820	(38.2)
1.5 m (5.0 ft)	kg			*13700	*13700	*14150	13480	*10140	8500	*8130	5870	*6980	4230	*2950	*2950		4880	2580	11.58
	lb			*30200	*30200	*31200	29720	*22350	18740	*17920	12940	*15390	9330	*6500	*6500		10760	5690	(38.0)
Ground Line	kg			*13070	*13070	*16510	12440	*11640	7900	*9070	5510	7330	4010				5030	2660	11.31
	lb			*28810	*28810	*36400	27430	*25660	17420	*20000	12150	16160	8840				11090	5860	(37.1)
-1.5 m (-5.0 ft)	kg	*11110	*11110	*15450	*15450	*17630	11930	*12570	7520	9670	5260	7170	3860				5420	2890	10.81
	lb	*24490	*24490	*34060	*34060	*38870	26300	*27710	16580	21320	11600	15810	8510				11950	6370	(35.5)
-3.0 m (-10.0 ft)	kg	*14410	*14410	*19090	*19090	*17690	11790	*12820	7360	9550	5150	*6600	3830				6180	3350	10.02
	lb	*31770	*31770	*42090	*42090	*39000	25990	*28260	16230	21050	11350	*14550	8440				13620	7390	(32.9)
-4.5 m (-15.0 ft)	kg	*18210	*18210	*24070	*24070	*16690	11930	*12250	7420	*9310	5120						*6710	4250	8.87
	lb	*40150	*40150	*53070	*53070	*36800	26300	*27010	16360	*20530	11490						*14790	9370	(29.1)
-6.0 m (-20.0 ft)	kg	*22860	*22860	*20530	*20530	*14250	12340	*10350	7720								*6520	6360	7.15
	lb	*50400	*50400	*45260	*45260	*31420	27210	*22820	17020								*14370	14020	(23.5)

(6) 8.6 m (28' 3") boom, 5.1 m (16' 9") arm equipped with 1.46 m<sup>3</sup> (SAE heaped) bucket and 600 mm (24") triple grouser shoe and 8100 kg (17860 lb) counterweight.

Load point height		Load radius																		At max. reach				
		1.5 m (5.0 ft)		3.0 m (10.0 ft)		4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		9.0 m (30.0 ft)		10.5 m (35.0 ft)		12.0 m (40.0 ft)		13.5 m (45.0 ft)		Capacity		Reach		
																						m (ft)		
9.0 m (30 ft)	kg														*3010	*3010						*3030	2560	12.91
	lb														*6640	*6640						*6680	5640	(42.4)
7.5 m (25.0 ft)	kg														*3110	*3110	*2630	*2630				*3100	2140	13.61
	lb														*6860	*6860	*5800	*5800				*6830	4720	(44.7)
6.0 m (20.0 ft)	kg														*3360	*3360	*3300	2870				*3180	1860	14.10
	lb														*7410	*7410	*7280	6330				*7010	4100	(46.3)
4.5 m (15.0 ft)	kg												*4100	*4100	*3730	3730	*3520	2730				*3290	1680	14.40
	lb												*9040	*9040	*8220	8220	*7760	6020				*7250	3700	(47.2)
3.0 m (10.0 ft)	kg					*10920	*10920	*7400	*7400	*5710	*5710	*4750	4690	*4160	3460	*3790	2560	*1720	*1720			3360	1560	14.53
	lb					*24070	*24070	*16310	*16310	*12590	*12590	*10470	10340	*9170	7630	*8360	5640	*3790	*3790			7410	3440	(47.7)
1.5 m (5.0 ft)	kg					*10890	*10890	*8990	8230	*6710	5840	*5420	4300	*4610	3210	*4090	2400	*1900	1770			3310	1520	14.49
	lb					*24010	*24010	*19820	18140	*14790	12870	*11950	9480	*10160	7080	*9020	5290	*4190	3900			7300	3350	(47.5)
Ground Line	kg					*10400	*10400	*10190	7550	*7560	5370	*6010	3970	*5030	2990	*4370	2260					3370	1540	14.28
	lb					*22930	*22930	*22470	16640	*16670	11840	*13250	8750	*11090	6590	*9630	4980					7430	3400	(46.9)
-1.5 m (-5.0 ft)	kg					*7990	*7990	*11720	11360	*10930	7170	*8180	5050	*6480	3730	*5370	2820	4450	2150			3520	1630	13.90
	lb					*17610	*17610	*25840	25040	*24100	15810	*18030	11130	*14290	8220	*11840	6220	9810	4740			7760	3590	(45.6)
-3.0 m (-10.0 ft)	kg	*8910	*8910	*10270	*10270	*13880	11320	*11250	7010	*8540	4880	*6780	3600	5490	2730	4410	2110					3820	1810	13.31
	lb	*19640	*19640	*22640	*22640	*30600	24960	*24800	15450	*18830	10760	*14950	7940	12100	6020	9720	4650					8420	3990	(43.7)
-4.5 m (-15.0 ft)	kg	*11090	*11090	*12810	*12810	*15320	11460	*11200	7020	*8610	4840	*6850	3560	5480	2710							*4230	2130	12.50
	lb	*24450	*24450	*28240	*28240	*33770	25260	*24690	15480	*18980	10670	*15100	7850	12080	5970							*9330	4700	(41.0)
-6.0 m (-20.0 ft)	kg	*13540	*13540	*15800	*15800	*14460	11750	*10750	7160	*8340	4930	*6630	3630	*5260	2820							*4390	2660	11.41
	lb	*29850	*29850	*34830	*34830	*31880	25900	*23700	15790	*18390	10870	*14620	8000	*11600	6220							*9680	5860	(37.4)
-7.5 m (-25.0 ft)	kg	*16440	*16440	*18490	*18490	*12970	12210	*9770	7460	*7580	5160	*5850	3860									*4450	3630	9.94
	lb	*36240	*36240	*40760	*40760	*28590	26920	*21540	16450	*16710	11380	*12900	8510									*9810	8000	(32.6)
-9.0 m (-30.0 ft)	kg			*14620	*14620	*10500	*10500	*7900	*7900	*5800	5630													
	lb			*32230	*32230	*23150	*23150	*17420	*17420	*12790	12410													




## 6. BUCKET SELECTION GUIDE
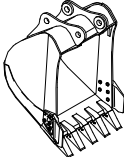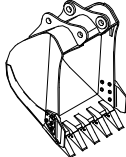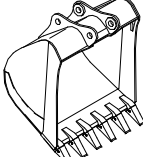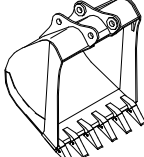
### 1) GENERAL BUCKET



				
1.46 m³ SAE heaped bucket	※ 1.62 m³ SAE heaped bucket	1.86 m³ SAE heaped bucket	2.10 m³ SAE heaped bucket	2.32 m³ SAE heaped bucket

Capacity		Width		Weight	Recommendation					
					6.5 m (21' 4") boom				6.15 m (20' 2") boom	8.6 m (28' 3") boom
SAE heaped	CECE heaped	Without side cutter	With side cutter		2.5 m arm (8' 2")	3.2 m arm (10' 6")	3.9 m arm (12' 10")	4.3 m arm (14' 1")	2.5 m arm (8' 2")	5.1 m arm (16' 9")
1.46 m³ (1.91 yd³)	1.27 m³ (1.66 yd³)	1380 mm (54.3")	1510 mm (59.4")	1170 kg (2580 lb)						
※ 1.62 m³ (2.12 yd³)	1.40 m³ (1.83 yd³)	1440 mm (56.7")	1570 mm (61.8")	1280 kg (2820 lb)						
1.86 m³ (2.43 yd³)	1.60 m³ (2.1 yd³)	1620 mm (63.8")	1750 mm (68.9")	1390 kg (3060 lb)						
2.10 m³ (2.75 yd³)	1.80 m³ (2.4 yd³)	1810 mm (71.3")	1940 mm (76.4")	1520 kg (3350 lb)						
2.32 m³ (3.03 yd³)	2.00 m³ (2.62 yd³)	1990 mm (78.3")	2120 mm (83.5")	1760 kg (3880 lb)						

※ : Standard bucket

-  Applicable for materials with density of 2000 kg/m³ (3370 lb/yd³) or less
-  Applicable for materials with density of 1600 kg/m³ (2700 lb/yd³) or less
-  Applicable for materials with density of 1100 kg/m³ (1850 lb/yd³) or less


## 2) HEAVY DUTY AND ROCK-HEAVY DUTY BUCKET

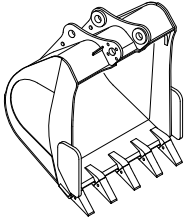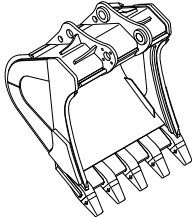
	
◆ 1.62 m <sup>3</sup> SAE heaped bucket	⊙ 1.44 m <sup>3</sup> , 1.62 m <sup>3</sup> , 1.86 m <sup>3</sup> SAE heaped bucket


Capacity		Width		Weight	Recommendation				
					6.5 m (21' 4") boom				6.15 m (20' 2") boom
SAE heaped	CECE heaped	Without side cutter	With side cutter		2.5 m arm (8' 2")	3.2 m arm (10' 6")	3.9 m arm (12' 10")	4.3 m arm (14' 1")	2.5 m arm (8' 2")
◆ 1.62 m <sup>3</sup> (2.12 yd <sup>3</sup> )	1.40 m <sup>3</sup> (1.83 yd <sup>3</sup> )	1540 mm (60.6")	-	1570 kg (3460 lb)					
⊙ 1.44 m <sup>3</sup> (1.88 yd <sup>3</sup> )	1.27 m <sup>3</sup> (1.66 yd <sup>3</sup> )	1280 mm (50.4")	-	1565 kg (3450 lb)					
⊙ 1.62 m <sup>3</sup> (2.12 yd <sup>3</sup> )	1.40 m <sup>3</sup> (1.83 yd <sup>3</sup> )	1545 mm (60.8")	-	1610 kg (3550 lb)					
⊙ 1.86 m <sup>3</sup> (2.43 yd <sup>3</sup> )	1.60 m <sup>3</sup> (2.1 yd <sup>3</sup> )	1725 mm (67.9")	-	1710 kg (3770 lb)					

◆ : Heavy duty bucket

⊙ : Rock-heavy duty bucket

 Applicable for materials with density of 2000 kg/m<sup>3</sup> (3370 lb/yd<sup>3</sup>) or less

 Applicable for materials with density of 1600 kg/m<sup>3</sup> (2700 lb/yd<sup>3</sup>) or less


 Applicable for materials with density of 1100 kg/m<sup>3</sup> (1850 lb/yd<sup>3</sup>) or less

## 7. UNDERCARRIAGE

### 1) TRACKS

X-leg type center frame is integrally welded with reinforced box-section track frames. The design includes dry tracks, lubricated rollers, idlers, sprockets, hydraulic track adjusters with shock absorbing springs and assembled track-type tractor shoes with triple grousers.

### 2) TYPES OF SHOES

Model	Shapes		Triple grouser				
							
R390LC-9	Shoe width	mm (in)	600 (24)	700 (28)	750 (30)	800 (32)	900 (36)
	Operating weight	kg (lb)	38400 (84660)	38850 (85650)	39075 (86140)	39300 (86640)	39750 (87630)
	Ground pressure	kgf/cm <sup>2</sup> (psi)	0.69 (9.81)	0.60 (8.53)	0.56 (7.96)	0.53 (7.54)	0.47 (6.68)
	Overall width	mm (ft-in)	3340 (10' 11")	3440 (11' 3")	3490 (11' 5")	3540 (11' 7")	3640 (11' 11")

### 3) NUMBER OF ROLLERS AND SHOES ON EACH SIDE

Item	Quantity
Carrier rollers	2 EA
Track rollers	9 EA
Track shoes	51 EA

#### 4) SELECTION OF TRACK SHOE

Suitable track shoes should be selected according to operating conditions.

##### Method of selecting shoes

Confirm the category from the list of applications in **table 2**, then use **table 1** to select the shoe. Wide shoes (categories B and C) have limitations on applications. Before using wide shoes, check the precautions, then investigate and study the operating conditions to confirm if these shoes are suitable.

Select the narrowest shoe possible to meet the required flotation and ground pressure. Application of wider shoes than recommendations will cause unexpected problem such as bending of shoes, crack of link, breakage of pin, loosening of shoe bolts and the other various problems.

※ **Table 1**

Track shoe	Specification	Category
600 mm triple grouser	Standard	A
700 mm triple grouser	Option	B
750 mm triple grouser	Option	B
800 mm triple grouser	Option	C
900 mm triple grouser	Option	C

※ **Table 2**

Category	Applications	Applications
A	Rocky ground, river beds, normal soil	• Travel at low speed on rough ground with large obstacles such as boulders or fallen trees
B	Normal soil, soft ground	• These shoes cannot be used on rough ground with large obstacles such as boulders or fallen trees • Travel at high speed only on flat ground • Travel slowly at low speed if it is impossible to avoid going over obstacles
C	Extremely soft ground (swampy ground)	• Use the shoes only in the conditions that the machine sinks and it is impossible to use the shoes of category A or B • These shoes cannot be used on rough ground with large obstacles such as boulders or fallen trees • Travel at high speed only on flat ground • Travel slowly at low speed if it is impossible to avoid going over obstacles

## 8. SPECIFICATIONS FOR MAJOR COMPONENTS

### 1) ENGINE

Item	Specification
Model	HMC D6AC-C
Type	4-cycle turbocharged charger air cooled diesel engine
Cooling method	Water cooling
Number of cylinders and arrangement	6 cylinders, in-line
Firing order	1-5-3-6-2-4
Combustion chamber type	Direct injection type
Cylinder bore × stroke	130 × 140 mm (5.12" × 5.51")
Piston displacement	11,149 cc (680 cu in)
Compression ratio	17 : 1
Rated gross horse power (SAE J1995)	276 Hp at 1900 rpm (206 kW at 1900 rpm)
Maximum torque	120.0 kgf · m (868 lbf · ft) at 1400 rpm
Engine oil quantity	27.3 l (7.2 U.S. gal)
Dry weight	920 kg (2028 lb)
Low idling speed	800 ± 100 rpm
High idling speed	2050 + 50 rpm
Rated fuel consumption	157.1 g/Hp · hr at 1900 rpm
Starting motor	24V-5.5 kW
Alternator	24V-70A
Battery	2 × 12V × 160Ah, *2 × 12V × 200Ah

\*: Artic machinery

### 2) MAIN PUMP

Item	Specification
Type	Variable displacement tandem axis piston pumps
Capacity	2 × 175 cc/rev
Maximum pressure	330 kgf/cm <sup>2</sup> (4690 psi) [360 kgf/cm <sup>2</sup> (5120 psi)]
Rated oil flow	2 × 280 l /min (74.0 U.S. gpm/61.6 U.K. gpm)

[ ]: Power boost

### 3) GEAR PUMP

Item	Specification
Type	Fixed displacement gear pump single stage
Capacity	15cc/rev
Maximum pressure	40 kgf/cm <sup>2</sup> (570 psi)
Rated oil flow	24 l /min (6.34 U.S. gpm/5.28 U.K. gpm)

### 4) MAIN CONTROL VALVE

Item	Specification
Type	9 spools
Operating method	Hydraulic pilot system
Main relief valve pressure	330 kgf/cm <sup>2</sup> (4690 psi) [360 kgf/cm <sup>2</sup> (5120 psi)]
Overload relief valve pressure	380 kgf/cm <sup>2</sup> (5400 psi)

[ ]: Power boost

### 5) SWING MOTOR

Item	Specification
Type	Axial piston motor
Capacity	233 cc/rev
Relief pressure	290 kgf/cm <sup>2</sup> (4120 psi)
Braking system	Automatic, spring applied hydraulic released
Braking torque	107 kgf · m (773 lbf · ft)
Brake release pressure	30~50 kgf/cm <sup>2</sup> (427~711 psi)
Reduction gear type	2 - stage planetary

### 6) TRAVEL MOTOR

Item	Specification
Type	Variable displacement axial piston motor
Relief pressure	360 kgf/cm <sup>2</sup> (5120 psi)
Capacity (max / min)	185.2/114.2 cc/rev
Reduction gear type	3-stage planetary
Braking system	Automatic, spring applied hydraulic released
Brake release pressure	8.5 kgf/cm <sup>2</sup> (121 psi)
Braking torque	44.4 kgf · m (321 lbf · ft)



## 7) CYLINDER

Item		Specification
Boom cylinder	Bore dia × Stroke	ø 160 × 1500 mm
	Cushion	Extend only
Arm cylinder	Bore dia × Stroke	ø 170 × 1760 mm
	Cushion	Extend and retract
Bucket cylinder	Bore dia × Stroke	ø 150 × 1295 mm
	Cushion	Extend only

※ Discoloration of cylinder rod can occur when the friction reduction additive of lubrication oil spreads on the rod surface.

※ Discoloration does not cause any harmful effect on the cylinder performance.

## 8) SHOE

Item		Width	Ground pressure	Link quantity	Overall width
R390LC-9	Standard	600 mm (24")	0.69 kgf/cm <sup>2</sup> (9.81 psi)	51	3340 mm (10' 11")
	Option	700 mm (28")	0.60 kgf/cm <sup>2</sup> (8.53 psi)	51	3440 mm (11' 3")
		750 mm (30")	0.56 kgf/cm <sup>2</sup> (7.96 psi)	51	3490 mm (11' 5")
		800 mm (32")	0.53 kgf/cm <sup>2</sup> (7.54 psi)	51	3540 mm (11' 7")
		900 mm (36")	0.47 kgf/cm <sup>2</sup> (6.68 psi)	51	3640 mm (11' 11")

## 9) BUCKET

Item		Capacity		Tooth quantity	Width	
		SAE heaped	CECE heaped		Without side cutter	With side cutter
R390LC-9	Standard	1.62 m <sup>3</sup> (2.12 yd <sup>3</sup> )	1.40 m <sup>3</sup> (1.8 yd <sup>3</sup> )	5	1440 mm (56.7")	1570 mm (61.8")
	Option	1.46 m <sup>3</sup> (1.91 yd <sup>3</sup> )	1.27 m <sup>3</sup> (1.66 yd <sup>3</sup> )	4	1380 mm (54.3")	1510 mm (59.4")
		◆ 1.62 m <sup>3</sup> (2.12 yd <sup>3</sup> )	1.40 m <sup>3</sup> (1.83 yd <sup>3</sup> )	5	1540 mm (60.6")	-
		◎ 1.44 m <sup>3</sup> (1.88 yd <sup>3</sup> )	1.27 m <sup>3</sup> (1.66 yd <sup>3</sup> )	5	1280 mm (50.4")	-
		◎ 1.62 m <sup>3</sup> (2.12 yd <sup>3</sup> )	1.40 m <sup>3</sup> (1.83 yd <sup>3</sup> )	5	1545 mm (60.8")	-
		◎ 1.86 m <sup>3</sup> (2.43 yd <sup>3</sup> )	1.60 m <sup>3</sup> (2.1 yd <sup>3</sup> )	5	1725 mm (67.9")	-
		1.86 m <sup>3</sup> (2.43 yd <sup>3</sup> )	1.60 m <sup>3</sup> (2.1 yd <sup>3</sup> )	5	1620 mm (63.8")	1750 mm (68.9")
		2.10 m <sup>3</sup> (2.75 yd <sup>3</sup> )	1.80 m <sup>3</sup> (2.4 yd <sup>3</sup> )	6	1810 mm (71.3")	1940 mm (76.4")
		2.32 m <sup>3</sup> (3.03 yd <sup>3</sup> )	2.00 m <sup>3</sup> (2.62 yd <sup>3</sup> )	6	1990 mm (78.3")	2120 mm (83.5")

◆ : Heavy duty bucket

◎ : Rock bucket (esco type)

## 9. RECOMMENDED OILS

Use only oils listed below or equivalent.

Do not mix different brand oil.

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C ( °F)							
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)
Engine oil pan	Engine oil	27.3 (7.2)	★SAE 5W-40							
			SAE 30							
			SAE 10W							
			SAE 10W-30							
			SAE 15W-40							
Swing drive	Gear oil	8.0 (2.1)	★SAE 75W-90							
Final drive		4.3×2 (1.1×2)	SAE 85W-140							
Hydraulic tank	Hydraulic oil	Tank; 210 (55.5)  System; 415 (110)	★ISO VG 15							
			ISO VG 32							
			ISO VG 46							
			ISO VG 68							
Fuel tank	Diesel fuel	550 (145)	★ASTM D975 NO.1							
			ASTM D975 NO.2							
Fitting (grease nipple)	Grease	As required	★NLGI NO.1							
			NLGI NO.2							
Radiator (reservoir tank)	Mixture of antifreeze and soft water★ <sup>1</sup>	45 (12.0)	Ethylene glycol base permanent type (50 : 50)							
			★Ethylene glycol base permanent type (60 : 40)							

**SAE** : Society of Automotive Engineers

**API** : American Petroleum Institute

**ISO** : International Organization for Standardization

**NLGI** : National Lubricating Grease Institute

**ASTM** : American Society of Testing and Material

★ : Arctic machine

★<sup>1</sup> : Soft water


City water or distilled water

## 1. CAB DEVICES

- 1) The ergonomically designed console box and suspension type seat provide the operator with comfort.

## 2) ELECTRONIC MONITOR SYSTEM

- (1) The centralized electronic monitor system allows the status and conditions of the machine to be monitored at a glance.
- (2) It is equipped with a safety warning system for early detection of machine malfunction.

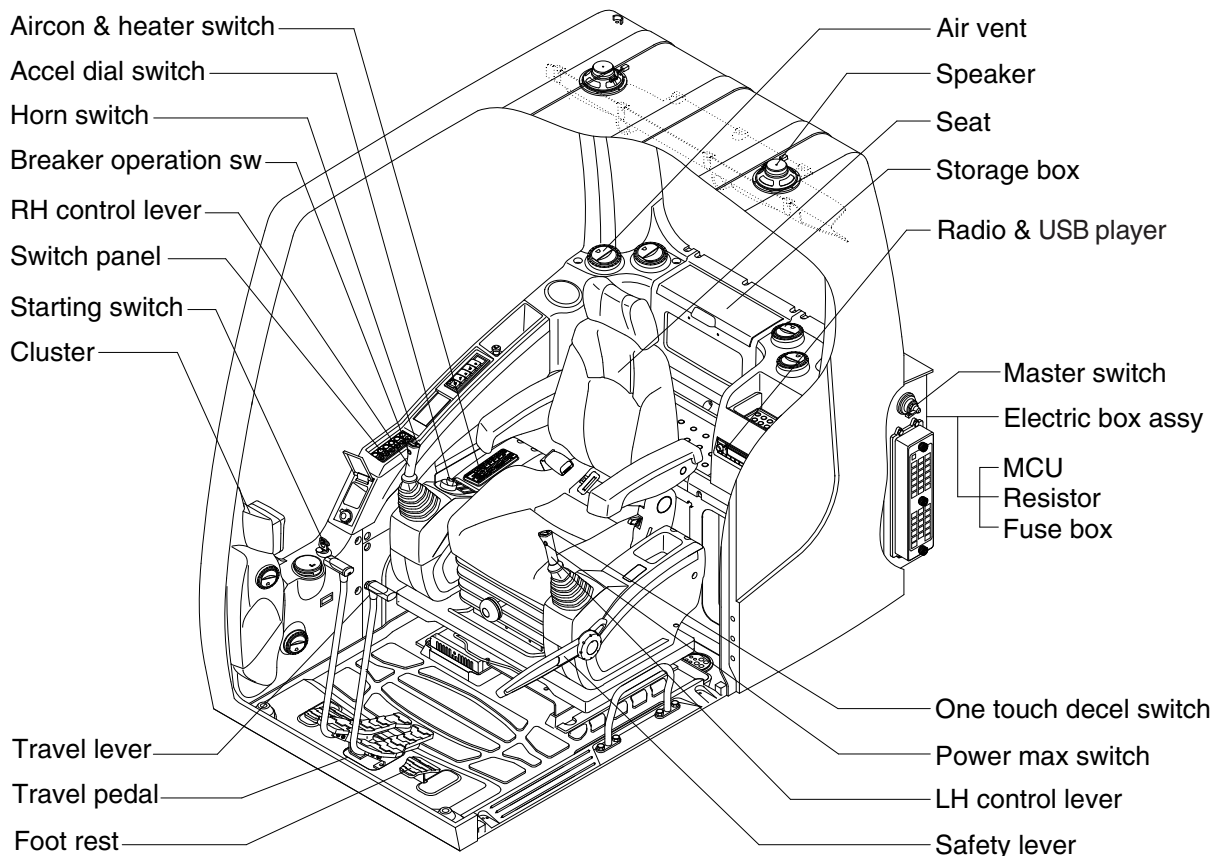

3009SH3CD01A


## 2. CLUSTER (TYPE 1)

### 1) STRUCTURE

The cluster consists of LCD and switches as shown below. The LCD is to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection. Also, The LCD is to set and display for modes, monitoring and utilities with the switches.

The switches are to set the machine operation modes.

- ※ **The cluster installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.**
- ※ **When the cluster provides a warning immediately check the problem, and perform the required action.**

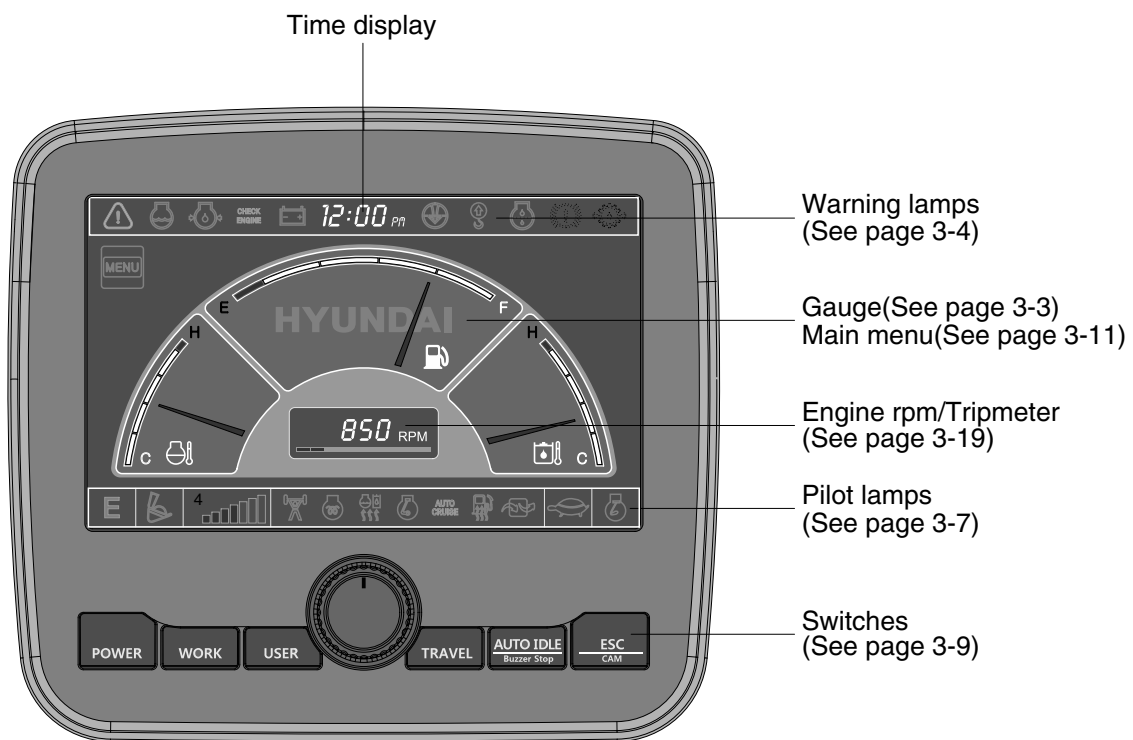


21093CD07

- ※ **The warning lamp pops up and/or blinks and the buzzer sounds when the machine has a problem.**

The warning lamp blinks until the problem is cleared. Refer to page 3-4 for details.


## 2) GAUGE

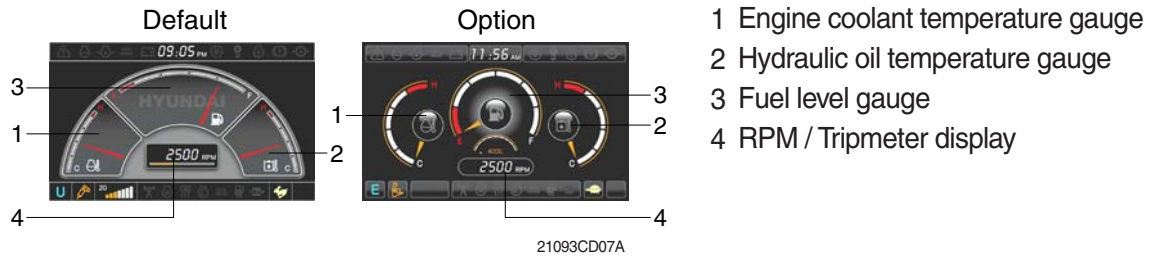

### (1) Operation screen




※ Operation screen type can be set by the screen type menu of the display.  
Refer to page 3-21 for details.

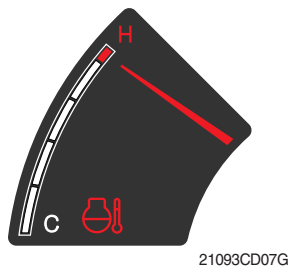

### (2) Engine coolant temperature gauge




- ① This gauge indicates the temperature of coolant.
    - White range : 40-105°C (104-221°F)
    - Red range : Above 105°C (221°F)
  - ② If the indicator is in the red range or  lamp blinks in red, turn OFF the engine and check the engine cooling system.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

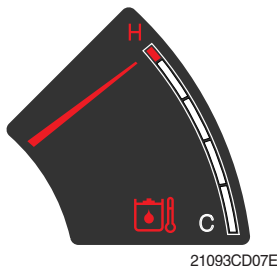

### (3) Hydraulic oil temperature gauge



- ① This gauge indicates the temperature of hydraulic oil.
    - White range : 40-105°C(104-221°F)
    - Red range : Above 105°C(221°F)
  - ② If the indicator is in the red range or  lamp blinks is red, reduce the load on the system. If the gauge stays in the red range, stop the machine and check the cause of the problem.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.
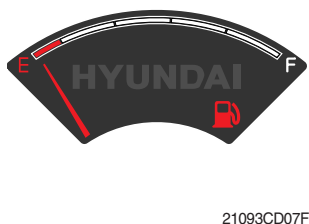
### (4) Fuel level gauge




- ① This gauge indicates the amount of fuel in the fuel tank.
  - ② Fill the fuel when the red range, or  lamp blinks in red.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

### (5) RPM / Tripmeter display



- ① This displays the engine rpm or the tripmeter.
- ※ Refer to page 3-19 for details.


### 3) WARNING LAMPS

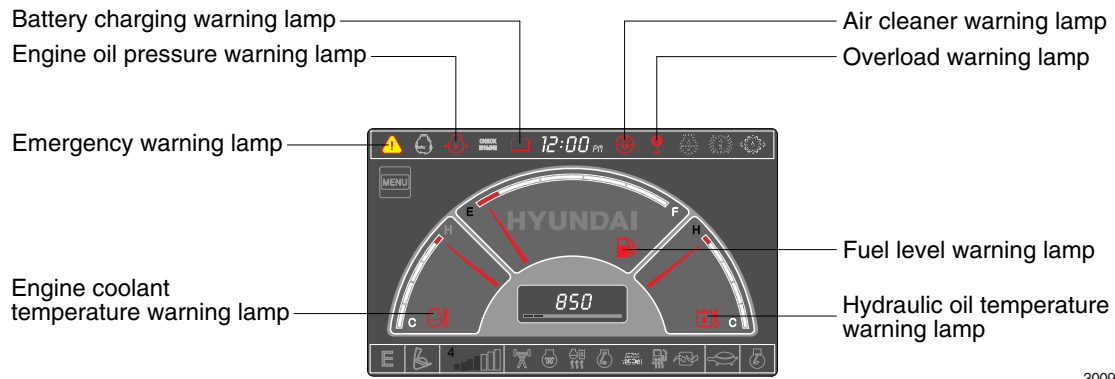

3009SH3CD10

- ※ Each warning lamp on the top of the LCD pops up on the center of LCD and the buzzer sounds when the each warning is happened. The pop-up warning lamp moves to the original position and blinks when the select switch is pushed. And the buzzer stops. Refer to page 3-10 for the select switch.


#### (1) Engine coolant temperature

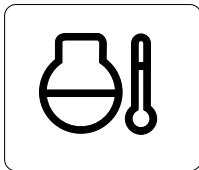

21093CD08A

- ① Engine coolant temperature warning is indicated two steps.
  - 100°C over : The lamp blinks and the buzzer sounds.
  - 105°C over : The lamp pops up on the center of LCD and the buzzer sounds.
- ② The pop-up lamp moves to the original position and blinks when the select switch is pushed. Also, the buzzer stops and lamp keeps blink.
- ③ Check the cooling system when the lamp keeps ON.

#### (2) Hydraulic oil temperature

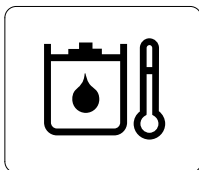

21093CD08C

- ① Hydraulic oil temperature warning is indicated two steps.
  - 100°C over : The lamp blinks and the buzzer sounds.
  - 105°C over : The lamp pops up on the center of LCD and the buzzer sounds.
- ② The pop-up lamp moves to the original position and blinks when the select switch is pushed. Also, the buzzer stops and lamp keeps blink.
- ③ Check the hydraulic oil level and hydraulic oil cooling system.

#### (3) Fuel level



21093CD08B

- ① This warning lamp blinks and the buzzer sounds when the level of fuel is below 75 l (19.8 U.S. gal).
- ② Fill the fuel immediately when the lamp blinks.

#### (4) Emergency warning lamp



21093CD30


① This lamp pops up and the buzzer sounds when each of the below warnings is happened.

- Engine coolant overheating (over 105°C)
- Hydraulic oil overheating (over 105°C)
- Pump EPPR circuit abnormal or open
- Attachment flow EPPR circuit abnormal or open
- MCU input voltage abnormal
- Accel dial circuit abnormal or open
- Cluster communication data error

※ **The pop-up warning lamp moves to the original position and blinks when the select switch is pushed. Also the buzzer stops. This is same as following warning lamps.**

② When this warning lamp blinks, machine must be checked and serviced immediately.

#### (5) Engine oil pressure warning lamp

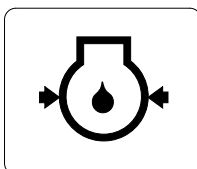


21093CD32

① This lamp blinks when the engine oil pressure is low.

② If the lamp blinks, shut OFF the engine immediately. Check oil level.

#### (6) Battery charging warning lamp

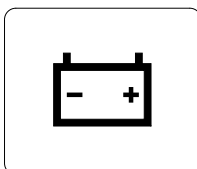


21093CD34

① This lamp blinks when the battery charging voltage is low.

② Check the battery charging circuit when this lamp blinks.

#### (7) Air cleaner warning lamp

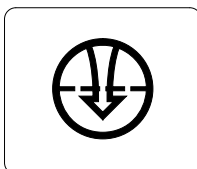


21093CD35

① This lamp blinks when the filter of air cleaner is clogged.

② Check the filter and clean or replace it.

**(8) Overload warning lamp (opt)**

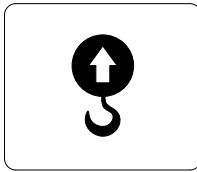


21093CD36

- ① When the machine is overload, the overload warning lamp blinks during the overload switch is ON. (if equipped)
- ② Reduce the machine load.



#### 4) PILOT LAMPS

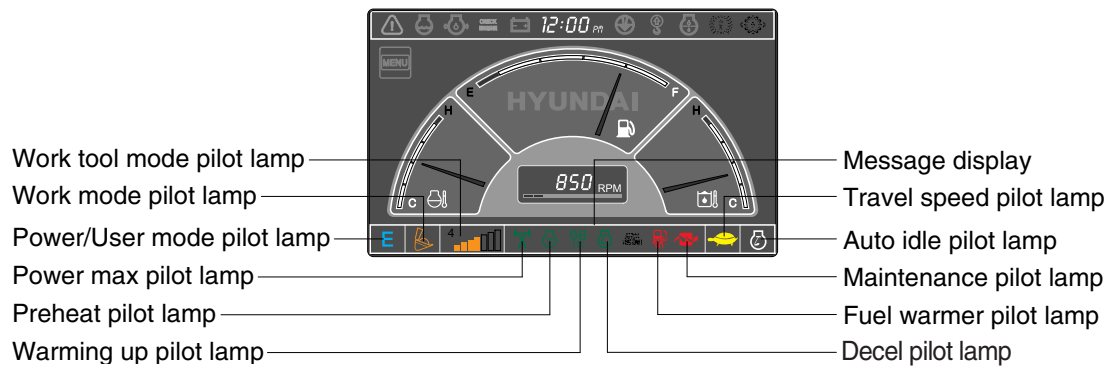

21093CD09

##### (1) Mode pilot lamps

No	Mode	Pilot lamp	Selected mode
1	Power mode		Heavy duty power work mode
			Standard power mode
			Economy power mode
2	User mode		User preferable power mode
3	Work mode		General operation mode
			Breaker operation mode
			Crusher operation mode
4	Travel mode		Low speed traveling
			High speed traveling
5	Auto idle mode		Auto idle
6	Work tool mode		Oil flow level of breaker or crusher mode
7	Message display		"Setting is completed" display after selection


##### (2) Power max pilot lamp



21093CD38

- ① The lamp will be ON when pushing power max switch on the LH RCV lever.
  - ② The power max function is operated maximum 8 seconds.
- ※ Refer to the page 3-38 for power max function.


### (3) Preheat pilot lamp

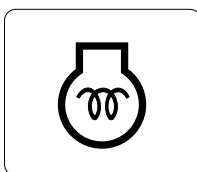

21093CD39

- ① Turning the start key switch ON position starts preheating in cold weather.
- ② Start the engine after this lamp is OFF.


### (4) Warming up pilot lamp

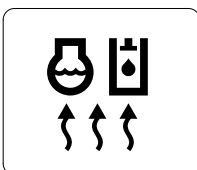

21093CD40

- ① This lamp is turned ON when the coolant temperature is below 30°C (86°F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30°C, or when 10 minutes have passed since starting the engine.


### (5) Decel pilot lamp

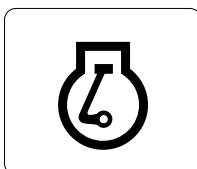

21093CD41

- ① Operating one touch decel switch on the RCV lever makes the lamp ON.
  - ② Also, the lamp will be ON and engine speed will be lowered automatically to save fuel consumption when all levers and pedals are at neutral position, and the auto idle function is selected.
- ※ **One touch decel is not available when the auto idle pilot lamp is turned ON.**
- ※ **Refer to the page 3-38.**


### (6) Fuel warmer pilot lamp

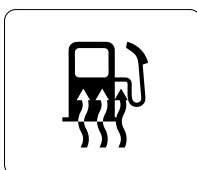

21093CD43

- ① This lamp is turned ON when the coolant temperature is below 10°C (50°F) or the hydraulic oil temperature 20°C (68°F).
- ② The automatic fuel warming is cancelled when the engine coolant temperature is above 60°C, or the hydraulic oil temperature is above 45°C since the start switch was ON position.


### (7) Maintenance pilot lamp

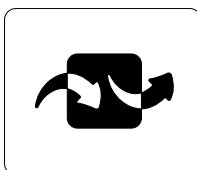

21093CD44

- ① This lamp will be ON when the consuming parts are needed to change or replace. It means that the change or replacement interval of the consuming parts remains below 30 hours.
- ② Check the message in maintenance information of main menu. Also, this lamp lights ON for 3 minutes when the start switch is ON position.


## 5) SWITCHES

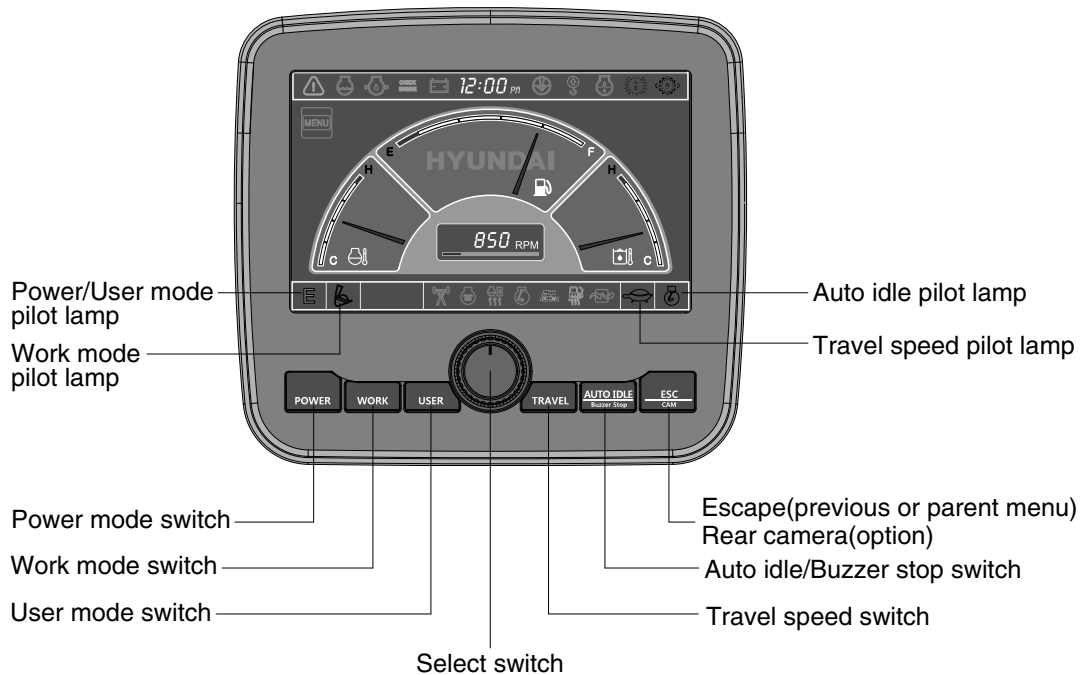

21093CD45

※ When the switches are selected, the pilot lamps are displayed on the LCD. Refer to the page 3-7 for details.

### (1) Power mode switch

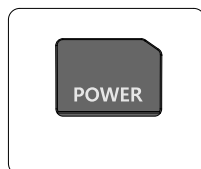




21093CD45A

- ① This switch is to select the machine power mode and selected power mode pilot lamp is displayed on the pilot lamp position.
  - P : Heavy duty power work.
  - S : Standard power work.
  - E : Economy power work.
- ② The pilot lamp changes E → S → P → E in order.

### (2) Work mode switch




21093CD45C

- ① This switch is to select the machine work mode, which shifts from general operation mode to optional attachment operation mode.
  -  : General operation mode
  -  : Breaker operation mode (if equipped)
  -  : Crusher operation mode (if equipped)
  - Not installed : Breaker or crusher is not installed.

※ Refer to the page 4-11 for details.


### (3) User mode switch

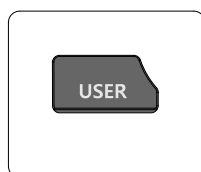

21093CD45D

- ① This switch is used to memorize the current machine operating status in the MCU and activate the memorized user mode.
  - Memory : Push more than 2 seconds.
  - Action : Push within 2 seconds.
  - Cancel : Push this switch once more within 2 seconds.
- ② Refer to the page 3-12 for another set of user mode.

### (4) Select switch

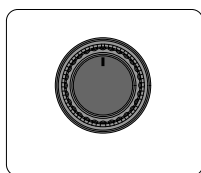

21093CD45E

- ① This switch is used to select or change the menu and input value.
- ② Knob push
  - Long (over 2 sec) : Return to the operation screen
  - Medium (0.5~2 sec) : Return to the previous screen
  - Short (below 0.5 sec) : Select menu
- ③ Knob rotation

This knob changes menu and input value.

  - Right turning : Down direction / Increase input value
  - Left turning : Up direction / Decreased input value

### (5) Auto idle/ buzzer stop switch




21093CD45F



- ① This switch is used to activate or cancel the auto idle function.
  - Pilot lamp ON : Auto idle function is activated.
  - Pilot lamp OFF : Auto idle function is cancelled.
- ② The buzzer sounds when the machine has a problem.

In this case, push this switch and buzzer stops, but the warning lamp blinks until the problem is cleared.

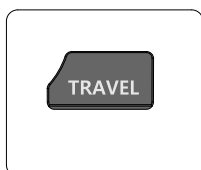
### (6) Travel speed control switch



21093CD45G

- ① This switch is used to select the travel speed alternatively.
  -  : High speed
  -  : Low speed

### (7) Escape/Camera switch

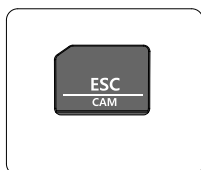

21093CD45H

- ① This switch is used to return to the previous menu or parent menu.
- ② In the operation screen, pushing this switch will display the view of the camera on the machine (if equipped).






Please refer to page 3-22 for the camera.
- ③ If the camera is not installed, this switch is used only ESC function.

## 6) MAIN MENU




※ Please refer to select switch, page 3-10 for selection and change of menu and input value.

### (1) Structure

No	Main menu	Sub menu	Description
1	 Mode 21093CD64D	Work tool U mode power Boom/Arm speed Auto power boost Initial mode Cluster switch (back up)	Breaker, Crusher, Not installed User mode only Boom speed, Arm speed Enable, Disable Default, U mode Switch function
2	 Monitoring 21093CD64E	Active fault Logged fault Delete logged fault Monitoring (analog) Monitoring (digital) Operating hours	MCU MCU All logged fault delete, Initialization canceled Machine information Switch status, Output status Operating hours for each mode
3	 Management 21093CD64F	Maintenance information Machine security Machine Information A/S phone number Service menu	Replacement, Change interval oils and filters ESL mode setting, Password change Cluster, MCU, Engine, Machine A/S phone number, A/S phone number change Power shift, Hourmeter start, Replacement history, Update
4	 Display 21093CD64G	Display item Clock Brightness Unit Language Screen type	Engine speed, Tripmeter A, Tripmeter B, Tripmeter C Clock Manual, Auto Temperature, Pressure, Flow, Date format Korean, English, Chinese A type, B type
5	 Utilities 21093CD64H	Tripmeter DMB (-#0214) Entertainment (-#0214) Camera setting Message box	3 kinds (A, B, C) DMB select, DAB select, Channel scan, Exit Play MP4, codec. Basic direction, Display switching, Full screen Record for fault, attachment etc.

## (2) Mode setup


### ① Work tool

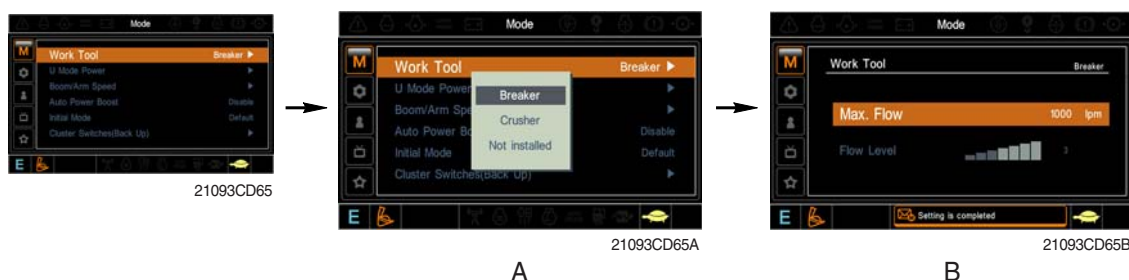

- A : Select one installed optional attachment.
- B : Max flow - Set the maximum flow for the attachment.  
Flow level - Reduce the operating flow from maximum flow.  
Breaker - Max 7 steps, Reduced 10 lpm each step.  
Crusher - Max 4 steps, Reduced 20 lpm each step.

※ The flow level is displayed with the work mode pilot lamp.


### ② U mode power

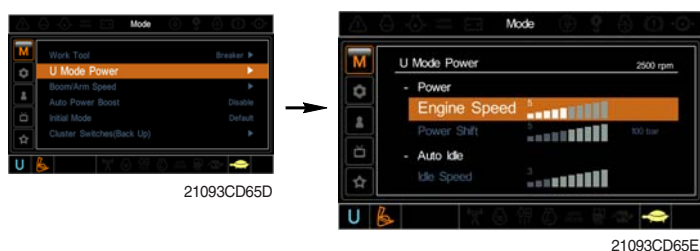

- Engine high idle rpm, auto idle rpm and pump torque (power shift) can be modulated and memorized separately in U-mode.
- U-mode can be activated by user mode switch.


Step (■)	Engine speed (rpm)	Idle speed (rpm)	Power shift (bar)
1	1450	900	0
2	1500	950 (low idle)	3
3	1550	1000	6
4	1600	1050	9
5	1650	1100 (decel rpm)	12
6	1700	1150	16
7	1750	1200	20
8	1800	1250	26
9	1850	1300	32
10	1900	1350	38

### ③ Boom/Arm speed

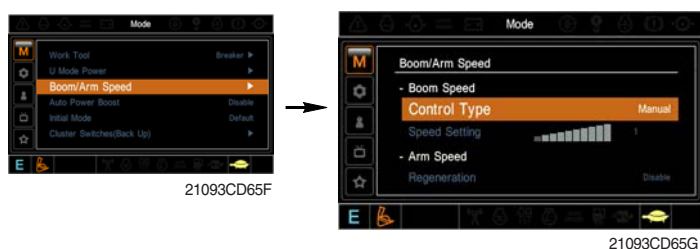


- **Boom speed**
  - Control type  
Manual - Boom up speed is fixed as set steps.  
Auto - Boom up speed is automatically adjusted as working conditions by the MCU.
  - Speed setting - Boom up speed is increased as much as activated steps.
- **Arm speed**
  - Regeneration - Arm regeneration function can be activated or cancelled.  
Enable - Arm in speed is up.  
Disable - Fine operation.

#### ④ Auto power boost

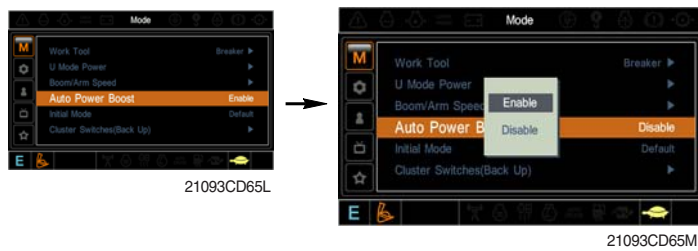


- The power boost function can be activated or cancelled.
- Enable - The digging power is automatically increased as working conditions by the MCU. It is operated max 8 seconds.
- Disable - Not operated.

#### ⑤ Initial mode

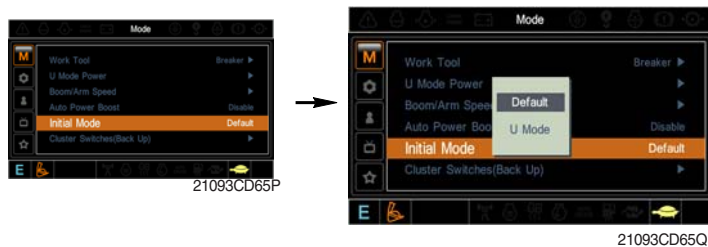

- Default - The initial power mode is set E mode when the engine is started.
- U mode - The initial power mode is set U mode when the engine is started.

#### ⑥ Cluster switch (back up)

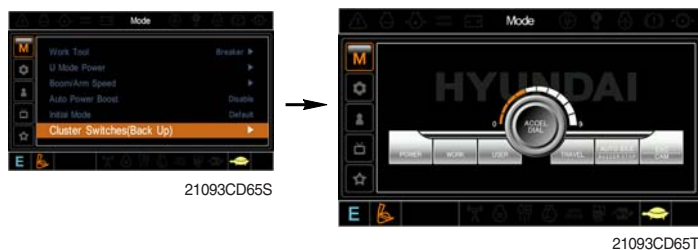

- The cluster switch can be selected and changed by this menu when the switches are abnormal on the cluster.
- In order to exit "Cluster switch" mode, please put the cursor on the ESC/CAM switch by turning the select switch and push the select switch.
- In "Cluster switch", other switches except "Select switch" do not work.

### (3) Monitoring

#### ① Active fault



- The active faults of the MCU can be checked by this menu.

#### ② Logged fault




- The logged faults of the MCU can be checked by this menu.

#### ③ Delete logged fault



- The logged faults of the MCU can be deleted by this menu.

#### ④ Monitoring(Analog)

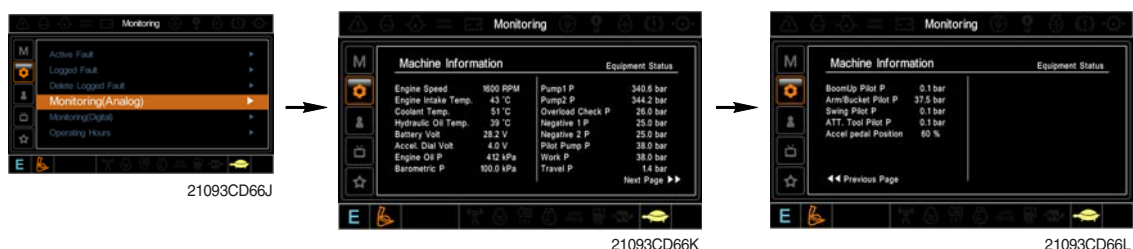


- The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu.




## ⑤ Monitoring (digital)



- The switch status or output status can be confirmed by this menu.
- The activated switch or output pilot lamps  are light ON.

## ⑥ Operating hours

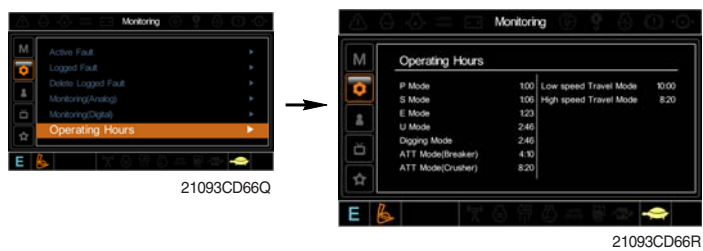

- The operating hour of each mode can be confirmed by this menu.

#### (4) Management

##### ① Maintenance information



- Alarm (⚙️ 🟡 🔴) : Gray ⚙️ - Normal  
Yellow 🟡 - First warning  
Red 🔴 - Second warning
- Replacement : The elapsed time will be reset to zero (0).
- Change interval : The change or replace interval can be changed in the unit of 50 hours.
- OK : Return to the item list screen.
- Change or replace interval**

No	Item	Interval
1	Engine oil	500
2	Final gear oil	1000
3	Swing gear oil	1000
4	Hydraulic oil	5000
5	Pilot line filter	1000
6	Drain filter	1000
7	Hydraulic oil return filter	1000
8	Engine oil filter	500
9	Fuel filter	500
10	Pre-filter	500
11	Hydraulic tank breather	250
12	Air cleaner (inner)	500
13	Radiator coolant	2000
14	Swing gear pinion grease	1000

## ② Machine security




### · ESL mode

- ESL : Engine Starting Limit
- ESL mode is designed to be a theft deterrent or will prevent the unauthorized operation of the machine.
- If the ESL mode was selected Enable, the password will be required when the start switch is turned ON.
- Disable : Not used ESL function


Enable (always) : The password is required whenever the operator start engine.

Enable (interval) : The password is required when the operator start engine first. But the operator restarts the engine within the interval time, the password is not required.  
The interval time can be set maximum 4 hours.

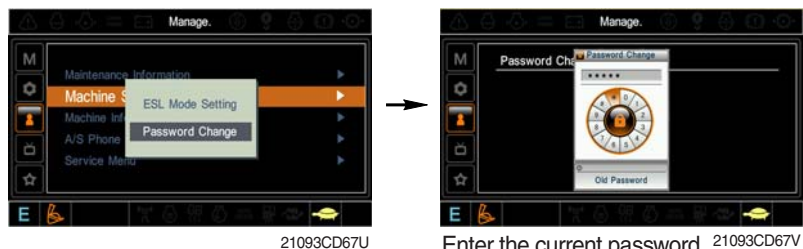

### · Password change


- The password is 5~10 digits.

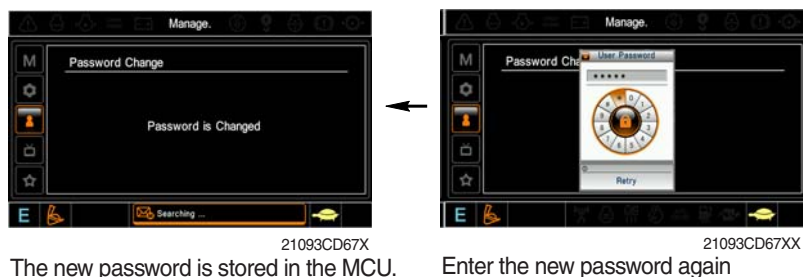

The new password is stored in the MCU.

Enter the new password again

### ③ Machine Information

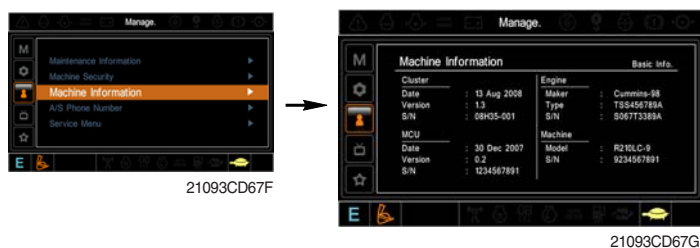


- This can confirm the identification of the cluster, MCU, engine and machine.

### ④ A/S phone number




### ⑤ Service menu

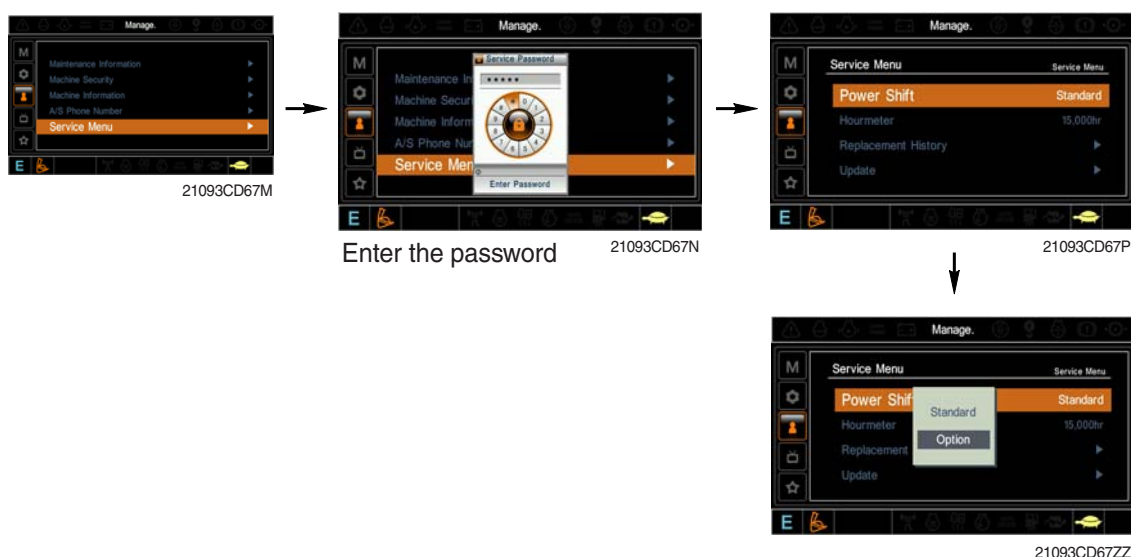

- Power shift (standard/option) : Power shift pressure can be set by option menu.
- Hourmeter start : Operating hours since the machine line out can be checked by this menu.
- Replacement history : Replacement history of the MCU and cluster can be checked by this menu.
- Update : Firm ware can be upgraded by this menu. (the USB port is located under the cluster)


## (5) Display

### ① Display item

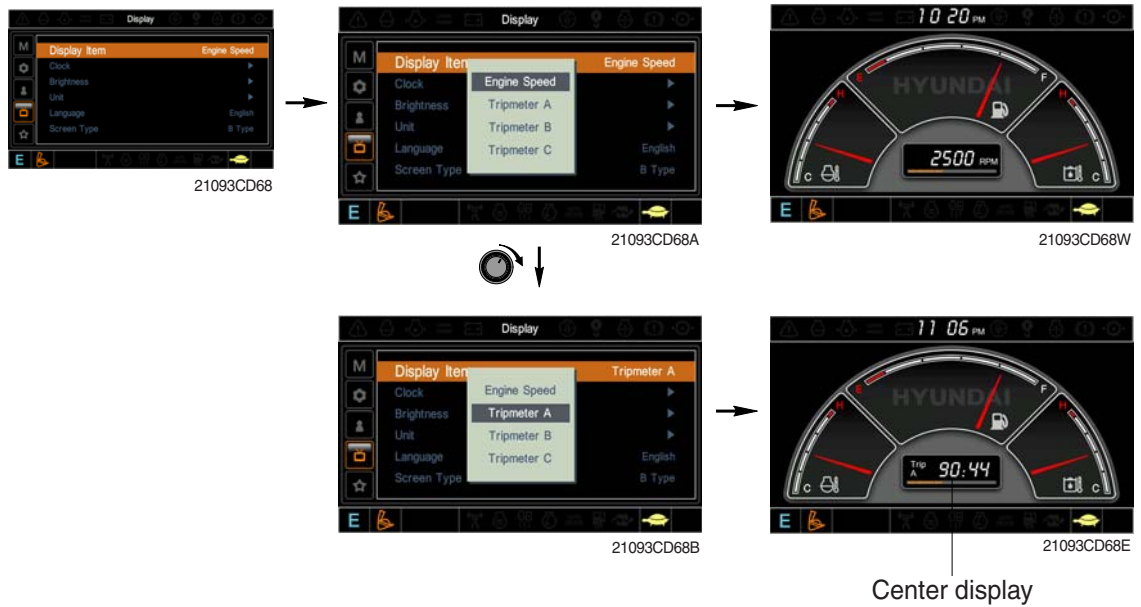


- The center display type of the LCD can be selected by this menu.
- The engine speed or each of the tripmeter (A,B,C) is displayed on the center display.

### ② Clock

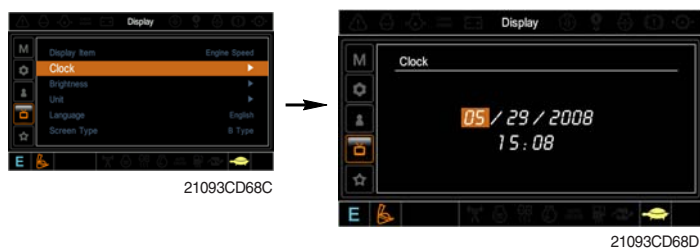

- The first line's three spots "\*\*/\*\*/\*\*\*\*" represent Month/Day/Year each.
- The second line shows the current time. (0:00~23:59)

### ③ Brightness

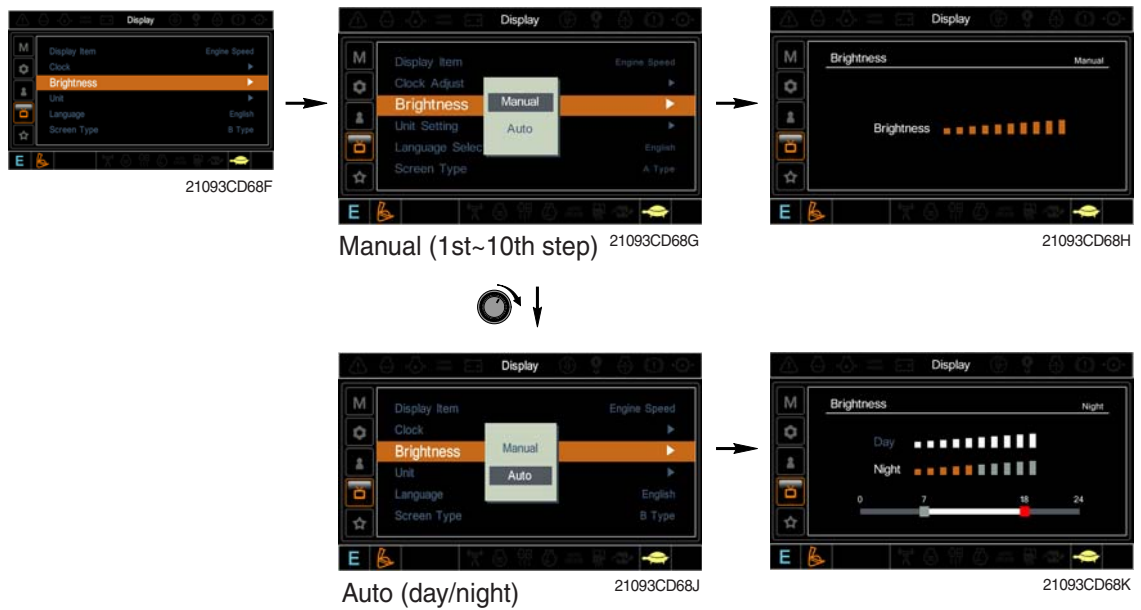


※ If "Auto" is chosen, brightness for day and night can be differently set up. Also by using the bar in lower side, users can define which time interval belongs to day and night. (in bar figure, gray area represents night time while white shows day time)

### ④ Unit




- Temperature : °C ↔ °F
- Pressure : bar ↔ MPa ↔ kgf/cm<sup>2</sup>
- Flow : lpm ↔ gpm
- Date format : yy/mm/dd ↔ mm/dd/yy ↔ dd-Mar-yy

### ⑤ Language

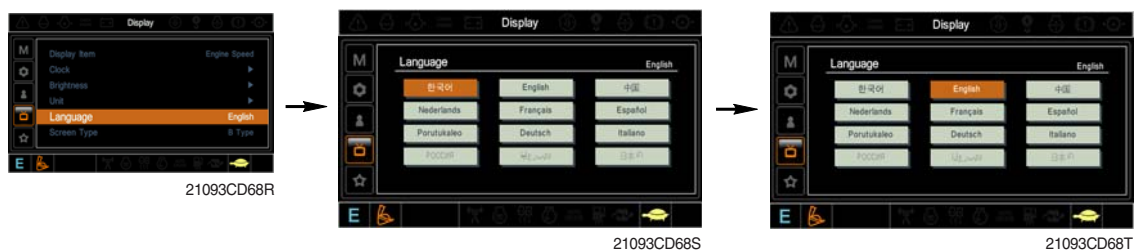

- User can select preferable language and all displays are changed the selected language.

## ⑥ Screen type

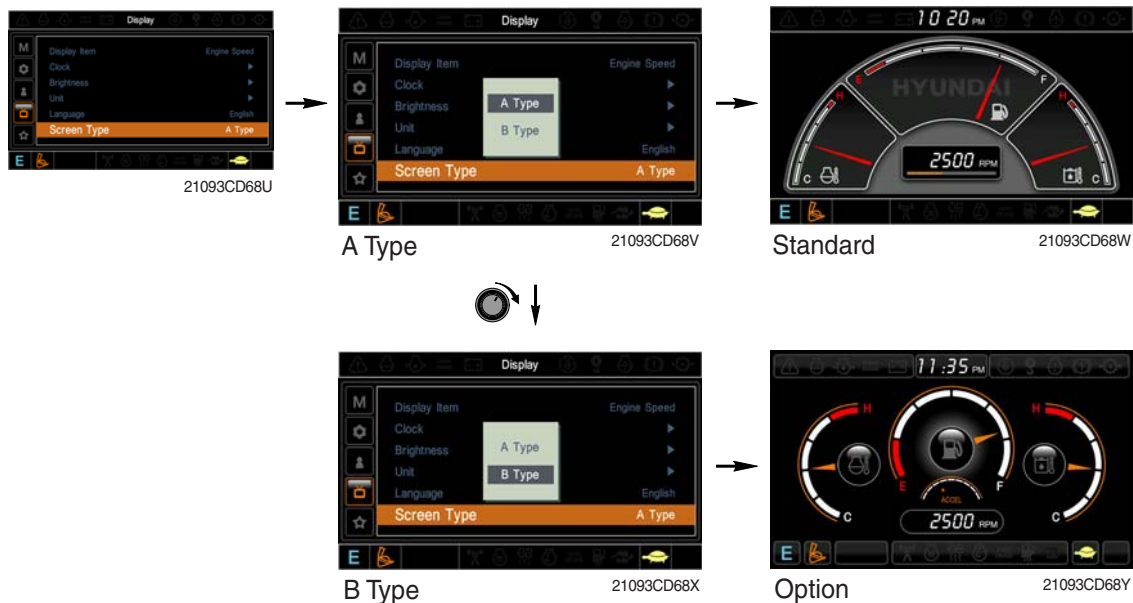

## (6) Utilities

### ① Tripmeter



- Maximum 3 kinds of tripmeters can be used at the same time.
- Each tripmeter can be turned on by choosing "Start" while it also can be turned off by choosing "Stop".
- If the tripmeter icon is activated in the operation screen, it can be controlled directly there.

### ② DMB (-#0214)




- DMB select : TV channel can be selected by this menu.
- DAB select : Audio channel can be selected by this menu.
- Channel scan : This menu can be used other region for TV/Audio.
- Exit : Exit DMB menu




### ③ Entertainment (-#0214)

- Play MP4 or codec file of external hard disk through USB port.
- The USB port is located under the cluster.

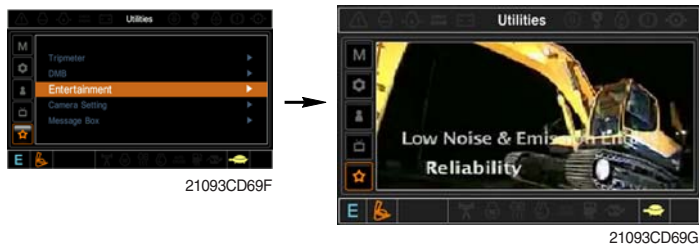

### ④ Camera setting

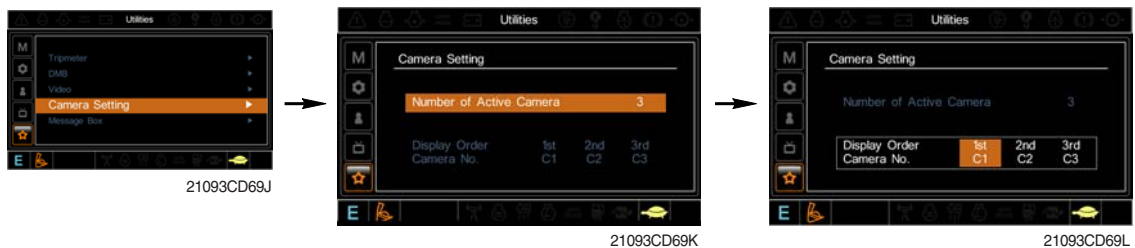


- Three cameras can be installed on the machine.
- The display order can be set by this menu.



- If the camera was not equipped, this menu is not useful.
- In the operation screen, if the ESC/CAM switch is pushed, the first ordered display camera will be viewed.
- Turnning the select switch in clockwise direction, the next ordered will be shown and in counter-clockwise direction, the previously ordered will be shown.
- Push the select switch, the displayed screen will be enlargement.

### ⑤ Message box

- The history of the machine operating status can be checked by this menu.

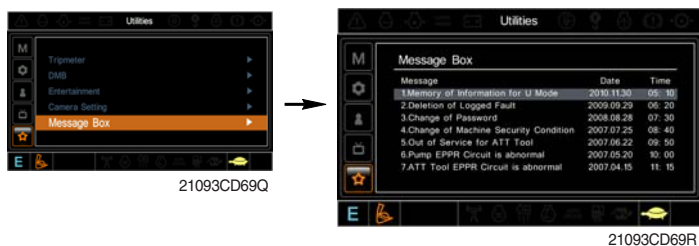



## 2. CLUSTER (TYPE 2)

### 1) MONITOR PANEL

The monitor panel consists of LCD and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.

- LCD : Indicate operating status of the machine.
- Warning lamp : Indicate abnormality of the machine (red).
- Pilot lamp : Indicate operating status of the machine (amber).

※ The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.



※ When the monitor provides a warning immediately check the problem, and perform the required action.



2209S3CD02

※ The warning lamp lights ON and the buzzer sounds when the machine has a problem. In this case, press the buzzer stop switch and buzzer stop, but the warning lamp lights until the problem is cleared.

## 2) LCD main operation display

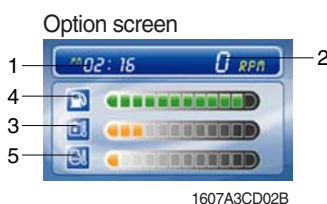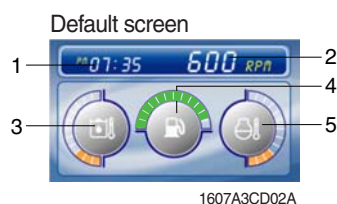

- 1 Time display
- 2 RPM display
- 3 Hydraulic oil temperature gauge
- 4 Fuel level gauge
- 5 Engine coolant temperature gauge

### (1) Time display



- ① This displays the current time.


※ Refer to the page 3-28 to set time for details.

### (2) RPM display



- ① This displays the engine rpm.

### (3) Hydraulic oil temperature gauge

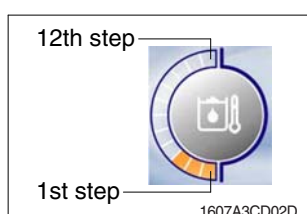


- ① This gauge indicates the temperature of hydraulic oil in 12 step gauge.

- 1st step : Below 30°C (86°F)
- 2nd~10th step : 30-105°C (86-221°F)
- 11th~12th step : Above 105°C (221°F)

- ② The gauge between 2nd and 10th steps illuminates when operating.
- ③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.
- ④ When the gauge of 11th and 12th steps illuminates, reduce the load on the system. If the gauge stays in the 11th~12th steps, stop the machine and check the cause of the problem.

### (4) Fuel level gauge

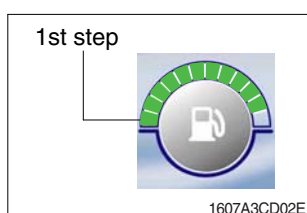

- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when the 1st step or fuel icon blinks in red.

※ If the gauge illuminates the 1st step or fuel icon blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

### (5) Engine coolant temperature gauge



- ① This gauge indicates the temperature of coolant in 12 step gauge.

- 1st step : Below 30°C (86°F)
- 2nd~10th step : 30-105°C (86-221°F)
- 11th~12th step : Above 105°C (221°F)

- ② The gauge between 2nd and 10th steps illuminates when operating.
- ③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.
- ④ When the gauge of 11th and 12th steps illuminates, turn OFF the engine, check the radiator and engine.

### 3) Warning of main operation screen

#### (1) Warning display

##### ① Engine coolant temperature



- This lamp blinks and the buzzer sounds when the temperature of coolant is over the normal temperature 105°C (221°F).
- Check the cooling system when the lamp blinks.

##### ② Fuel level



- This lamp blinks and the buzzer sounds when the level of fuel is below 75 l (19.8 U.S. gal).
- Fill the fuel immediately when the lamp blinks.

##### ③ Hydraulic oil temperature



- This warning lamp operates and the buzzer sounds when the temperature of hydraulic oil is over 105°C (221°F).
- Check the hydraulic oil level when the lamp blinks.
- Check for debris between oil cooler and radiator.

##### ④ All gauge



- This lamp blinks and the buzzer sounds when the all gauge is abnormal.
- Check the each system when the lamp blinks.

##### ⑤ Communication error




- Communication problem between MCU and cluster makes the lamp blinks and the buzzer sounds.
- Check if any fuse for MCU burnt off.  
If not check the communication line between them.






#### (2) Pop-up icon display

No	Switch	Selected mode	Interval
1	Work mode switch	General work mode	
		Heavy duty work mode	
2	Power mode switch	High power work mode	
		Standard power work mode	

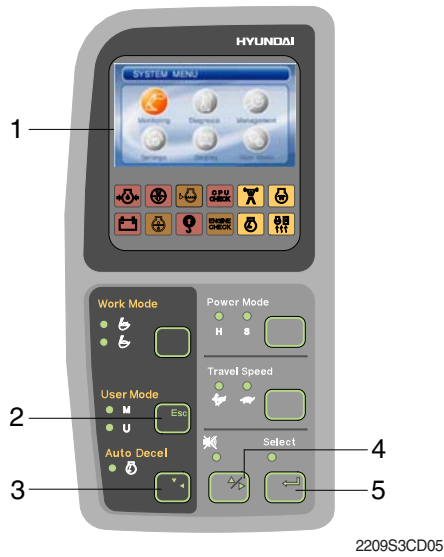
No	Switch	Selected mode	Interval
3	Auto deceleration switch	Light ON	
		Light OFF	
4	Travel speed control switch	Low speed	
		High speed	








#### 4) LCD

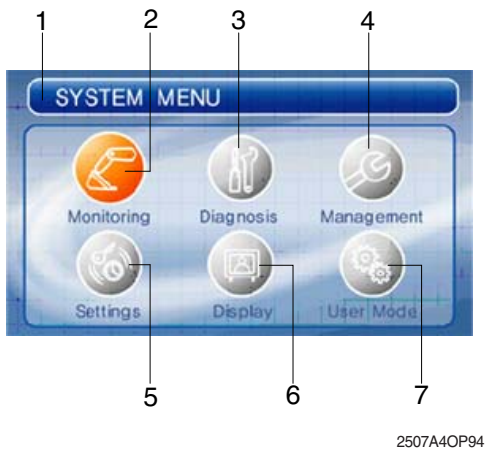

- 1  : LCD
- 2  : Escape,  
Return to the previous menu
- 3  : Down / Left Direction
- 4  : Up/Right Direction
- 5  : Select (enter)  
Activate the currently chosen item


#### (1) Main menu



- 1  : Menu information
- 2  : Monitoring  
- Equipment, Switch, Output
- 3  : Diagnosis  
- Current error, Recorded error
- 4  : Maintenance
- 5  : Settings  
- Time set, Dual mode  
- System lock (reserved)
- 6  : Display  
- Operation skin, Brightness, Language
- 7  : User mode


## (2) Display map

### ① Monitoring

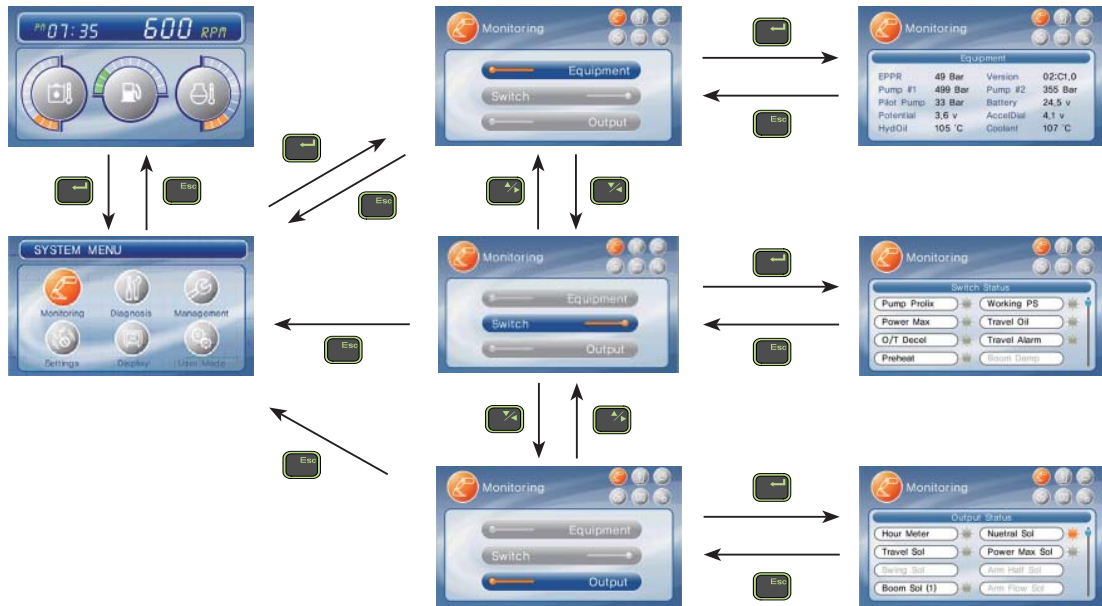

### ② Diagnosis


#### a. Protocol type 1

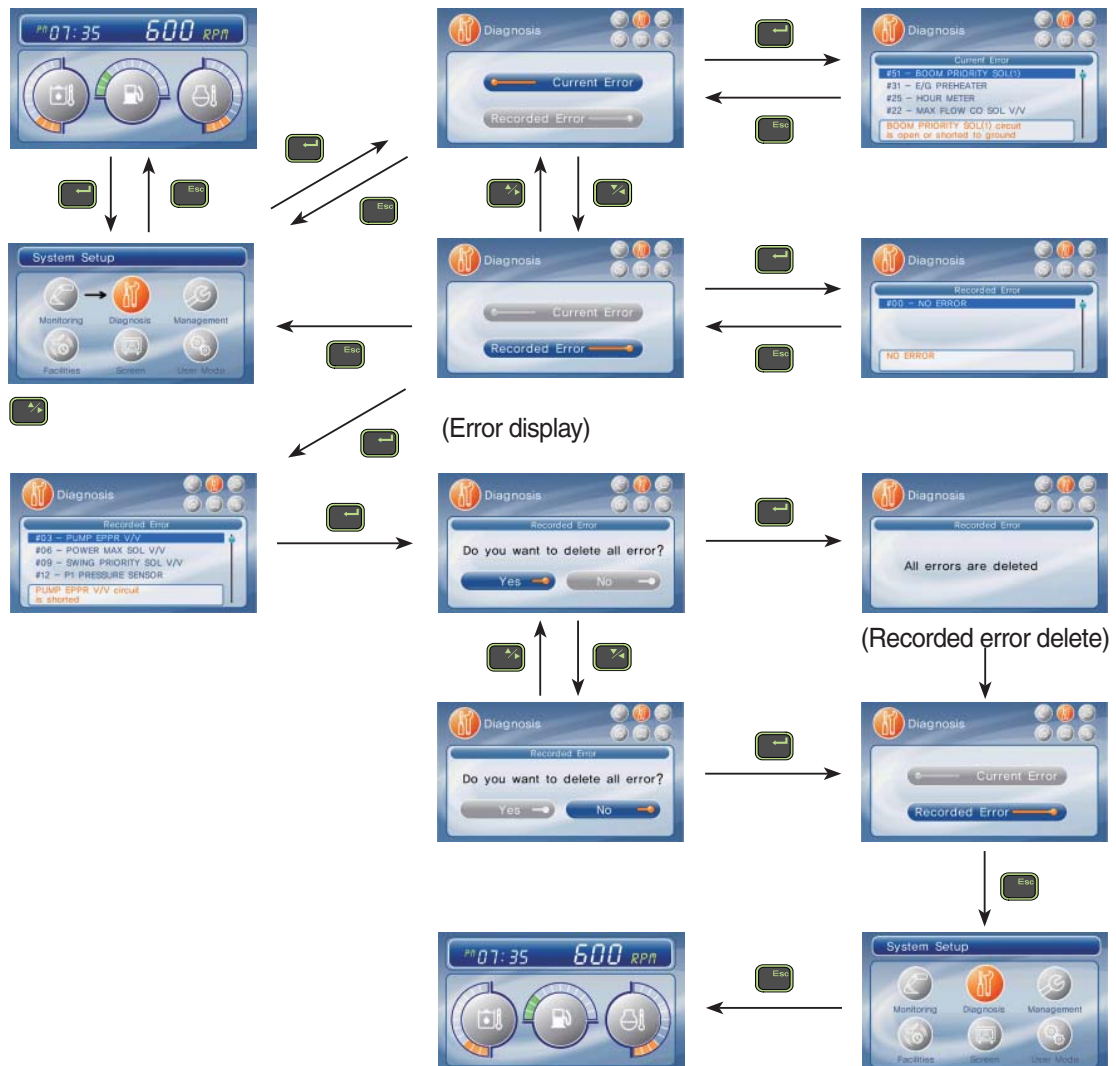




## b. Protocol type 2

- If there are more than 2 error codes, each one can be displayed by pressing or switch respectively.
- 3 error codes (①SPN200200, ②FMI06, ③SPN6789, ④FMI04, ⑤345) display.

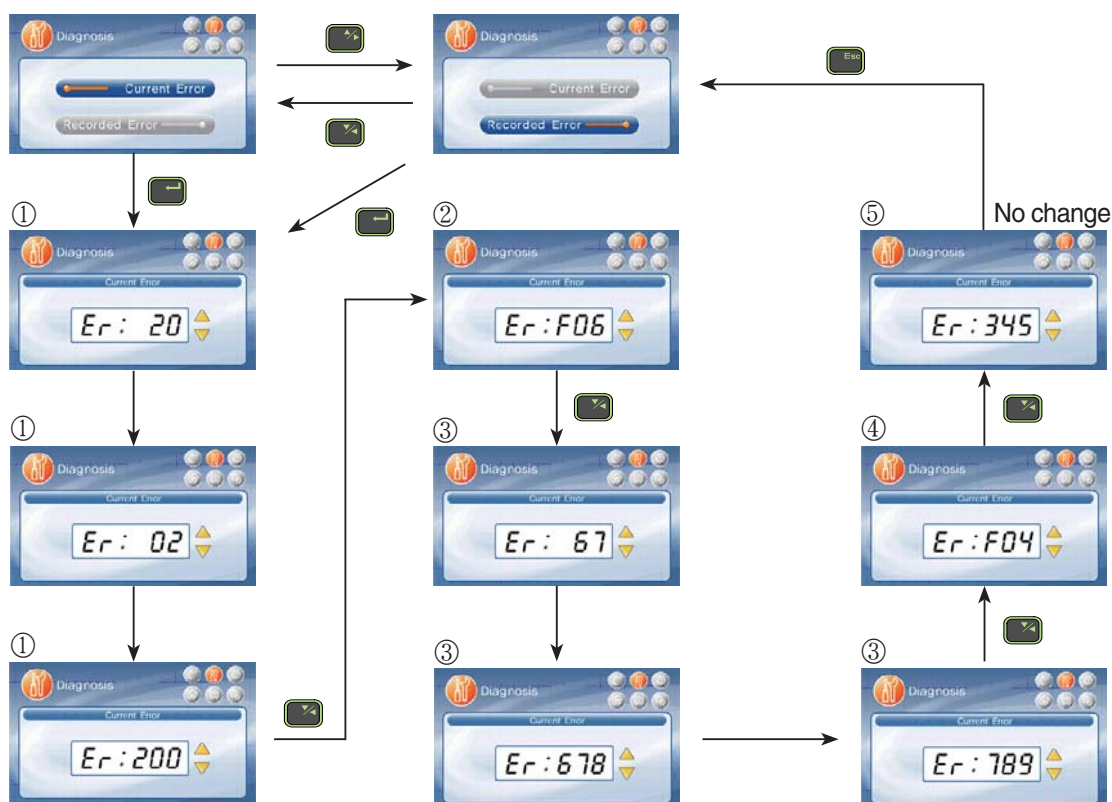

## ③ Maintenance

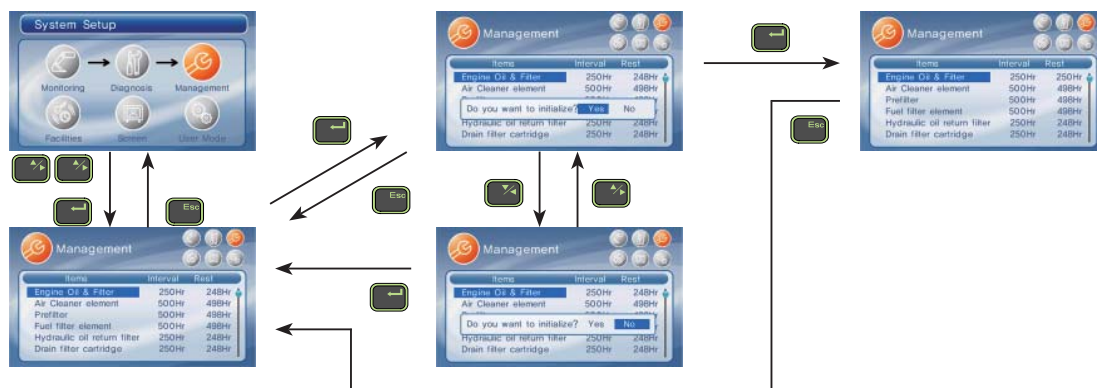

## ④ Setting

### a. Time set




### b. System lock - Reserved



## 5) Warning and pilot lamp


### (1) Engine oil pressure warning lamp

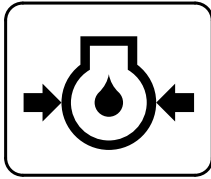

21073CD07

- ① This lamp blinks and the buzzer sounds after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.


### (2) Air cleaner warning lamp

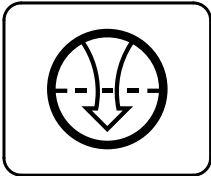

21073CD08

- ① This lamp blinks and the buzzer sounds when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.


### (3) CPU controller check warning lamp

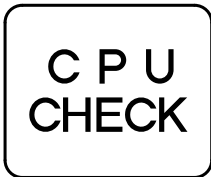

21073CD10

- ① If any fault code is received from MCU, this lamp blinks and the buzzer sounds.
- ② Check the communication line between MCU and cluster.


### (4) Battery charging warning lamp

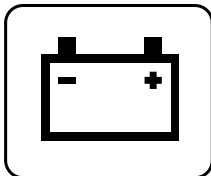

21073CD13

- ① This lamp blinks and the buzzer sounds when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.

### (5) Overload warning lamp (opt)

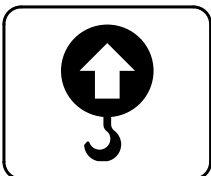


21073CD15

- ① When the machine is overload, the overload warning lamp blinks during the overload switch is ON.




**(6) Power max pilot lamp**

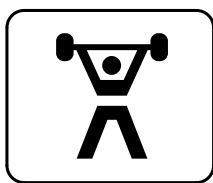

21073CD11

- ① The lamp will be ON when pushing power max switch on the LH RCV lever.


**(7) Decel pilot lamp**

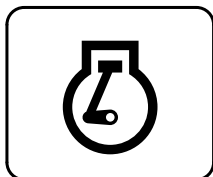

21073CD17

- ① Operating auto decel or one touch decel makes the lamp ON.
- ② The lamp will be ON when pushing one touch decel switch on the LH RCV lever.

**(8) Warming up pilot lamp**

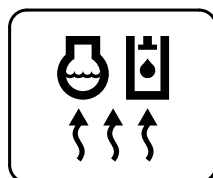

21073CD18

- ① This lamp is turned ON when the coolant temperature is below 30°C (86°F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30°C, or when 10 minutes have passed since starting.


**(9) Preheat pilot lamp**



21073CD12

- ① Turning the start key switch ON position starts preheating in cold weather.
- ② Start the engine as this lamp is OFF.


## 6) SWITCH PANEL

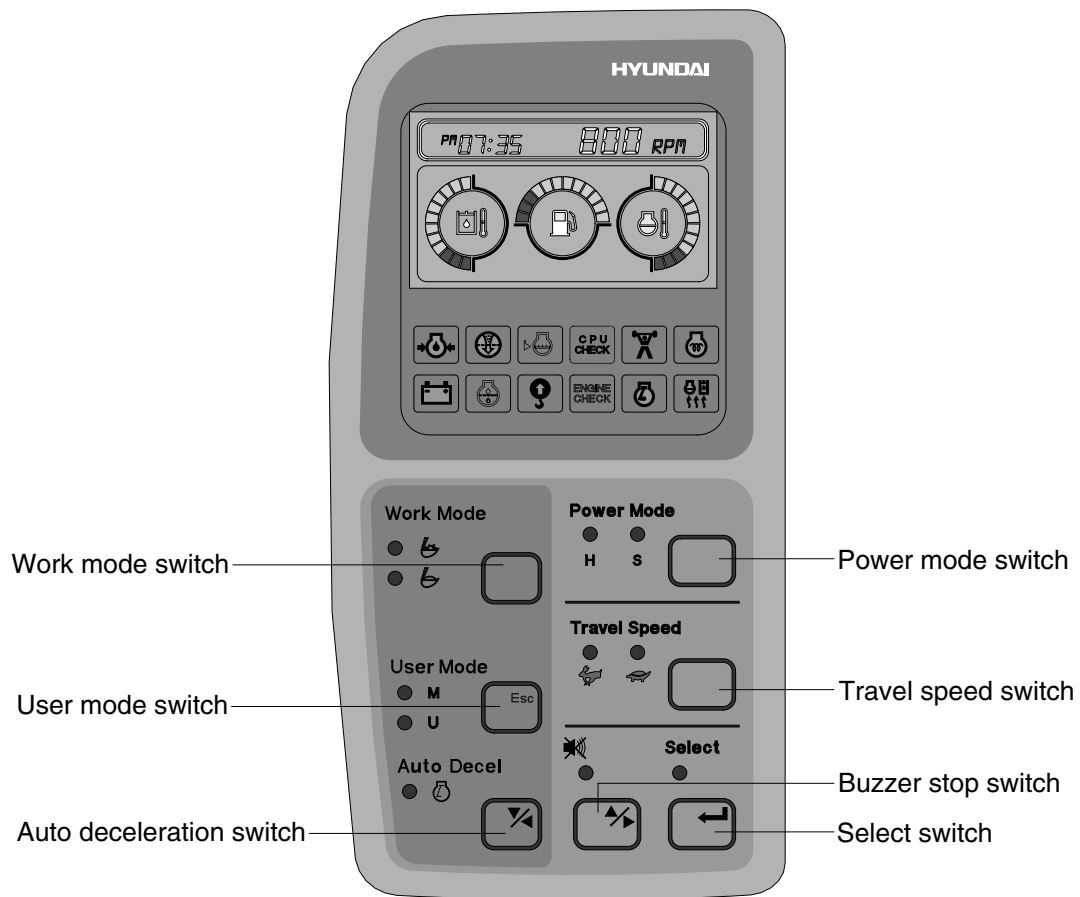

2209S3CD10

※ When the switches (Work mode, Power mode, Auto decel, Travel speed control) are selected, the pop-up icon is displayed on the LCD.  
Refer to the page 3-25 for details.


### (1) Work mode switch

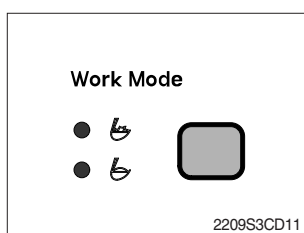

- ① This switch is to select the machine operation mode, which shifts from general operation mode to heavy operation mode and breaker mode in a row by pressing the switch.
- : Heavy duty work mode
  - : General work mode

※ Refer to the page 4-16 for details.


### (2) User mode switch

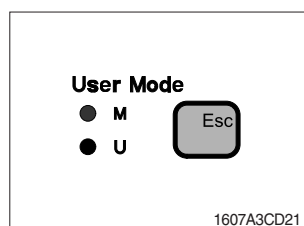

- ① This switch is to select the maximum power or user mode.
- M : Maximum power
  - U : Memorizing operators preferable power setting.


※ Refer to the page 4-16 for details.


### (3) Auto deceleration switch

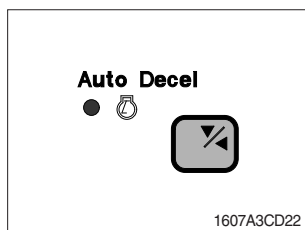


- ① This switch is used to actuate or cancel the auto deceleration function.
- ② When the switch actuated and all control levers and pedals are at neutral position, engine speed will be lowered automatically to save fuel consumption.
  - Light ON : Auto deceleration function is selected.
  - Light OFF : a. Auto deceleration function is cancelled so that the engine speed increased to previous setting value.  
b. One touch decel function is available.

### (4) Power mode switch

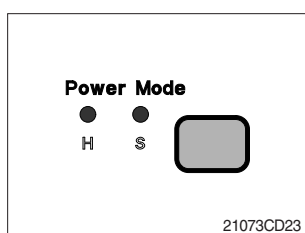


- ① The lamp of selected mode is turned ON by pressing the switch (  ).
  - H : High power work.
  - S : Standard power work.

### (5) Travel speed control switch

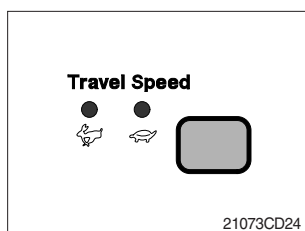


- ① This switch is to control the travel speed which is changed to high speed (rabbit mark) by pressing the switch and low speed (turtle mark) by pressing it again.

### (6) Buzzer stop switch

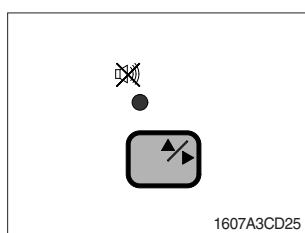


- ① When the starting switch is turned ON first, normally the alarm buzzer sounds for 2 seconds during lamp check operation.
- ② The red lamp lights ON and the buzzer sounds when the machine has a problem.  
In this case, press this switch and buzzer stops, but the red lamp lights until the problem is cleared.

### (7) Select switch

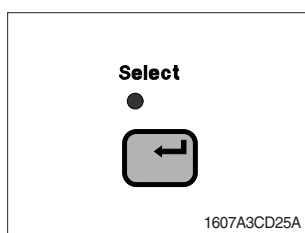


- ① This switch is used to enter main menu and sub menu of LCD.  
※ Refer to the page 3-23 for details.

### 3. SWITCHES

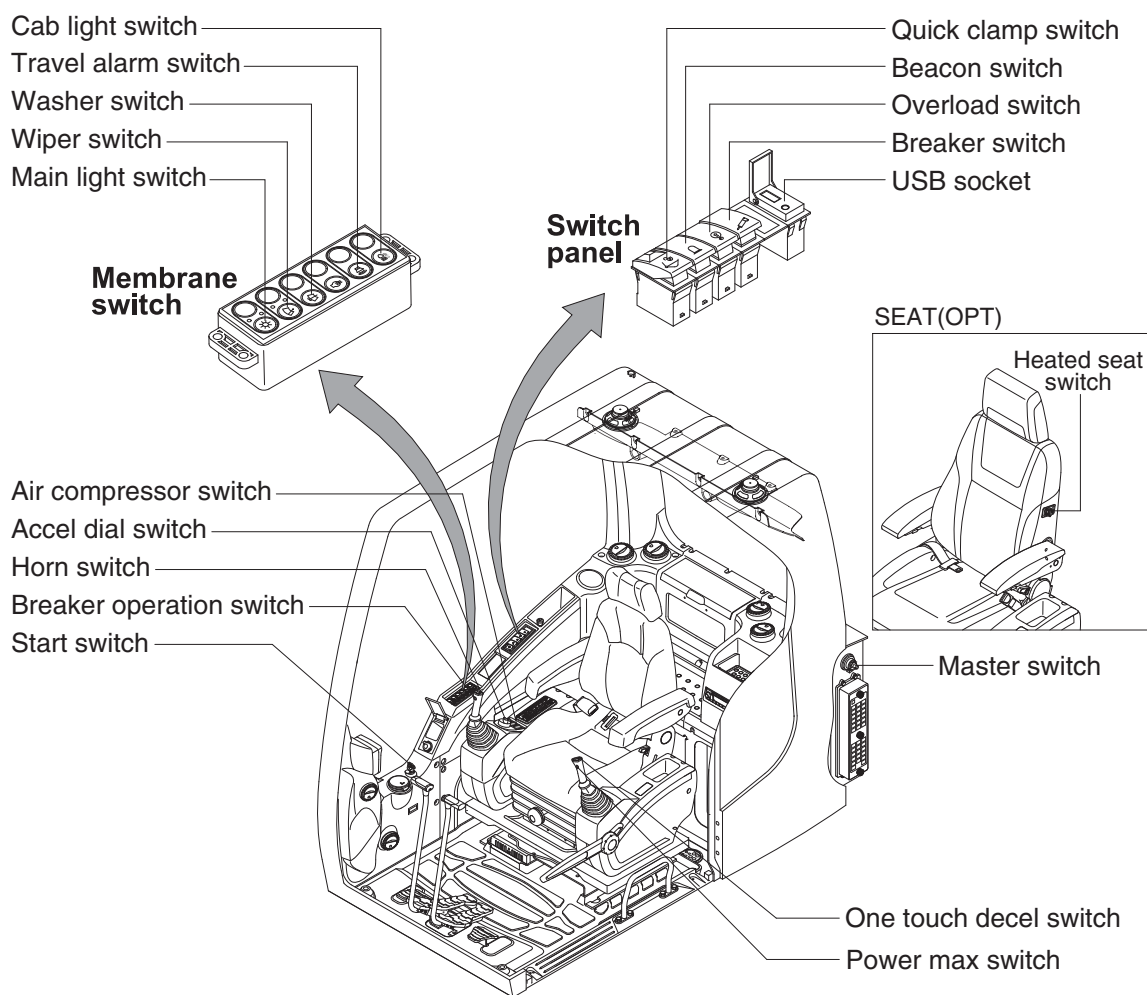

2209S3CD47

#### 1) STARTING SWITCH

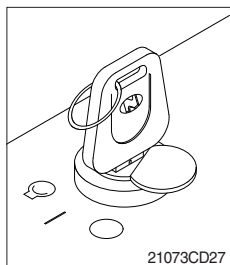


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ⦿ (START) : Use when starting the engine.

Release key immediately after starting.

- ※ If you turn ON the starting switch in cold weather, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature. Start the engine in 1~2 minutes after turning ON the starting switch. More time may take according to ambient temperature.
- ※ Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.


## 2) MASTER SWITCH

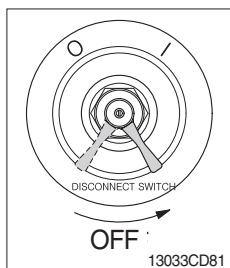

- (1) This switch is used to shut off the entire electrical system.
- (2) I : The battery remains connected to the electrical system.  
O : The battery is disconnected to the electrical system.


※ **Never turn the master switch to O (OFF) with the engine running. Engine and electrical system damage could result.**

## 3) ACCEL DIAL SWITCH

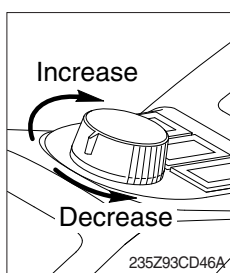


- (1) There are 10 dial setting.
- (2) Setting 1 is low idle and setting 10 is high idle.
  - By rotating the accel dial to right : Engine speed increases
  - By rotating the accel dial to left : Engine speed decreases

## 4) MAIN LIGHT SWITCH

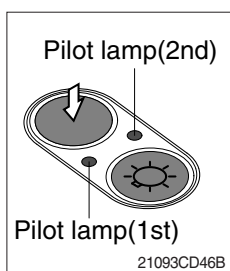


- (1) This switch used to operate the head light and work light.
  - Press the switch once, the head light comes ON and the 1st pilot lamp ON.
  - Press the switch once more, the work light comes ON and the 2nd pilot lamp ON.
  - Press the switch again, return to a first step position.
  - Press the switch more than one second to turn off lights.

## 5) WIPER SWITCH

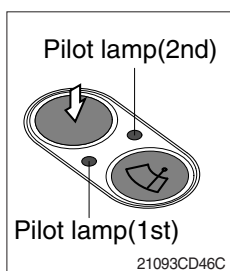


- (1) This switch used to operate wiper.
  - Press the switch once the wiper operates intermittently and the 1st pilot lamp comes ON.
  - Press the switch once more, the wiper operates low speed and the 2nd pilot lamp comes ON.
  - Press the switch again return to a first step position.
  - Press the switch more than one second to turn off wiper.

## 6) WASHER SWITCH

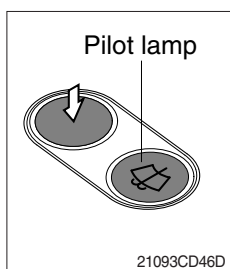


- (1) The washer liquid is sprayed and the wiper is operated only while pressing this switch.
- (2) The pilot lamp is turned ON when operating this switch.

## 7) TRAVEL ALARM SWITCH

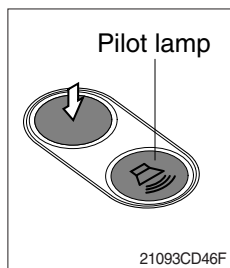


- (1) This switch is to activate travel alarm function surrounding when the machine travels to forward and backward.
- (2) On pressing this switch, the alarm operates only when the machine is traveling.

## 8) CAB LIGHT SWITCH (option)

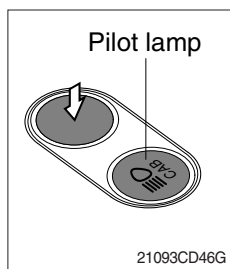


- (1) This switch turns ON the cab light on the cab.

## 9) OVERLOAD SWITCH (option)

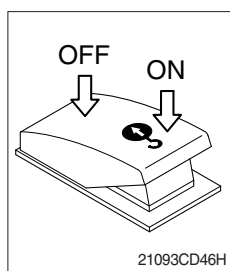

- (1) When this switch turned ON, buzzer makes sound and overload warning lamp comes ON in case that the machine is overload.
- (2) When it turned OFF, buzzer stops and warning lamp goes out.


## 10) QUICK CLAMP SWITCH (option)

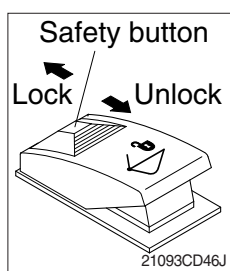

- (1) This switch is used to engage or disengage the moving hook on quick clamp.


※ Refer to the page 8-6 for details.

## 11) BEACON SWITCH (option)

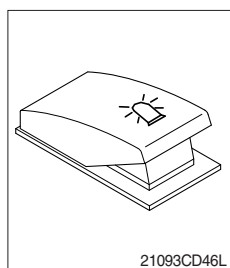

- (1) This switch turns ON the rotary light on the cab.
- (2) The indicator lamp is turned ON when operating this switch.


## 12) BREAKER SELECTION SWITCH (option)

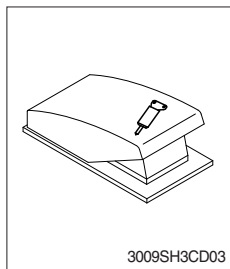

(1) This switch is used to select breaker.

※ **The breaker operates only when this switch is selected.**


## 13) USB SOCKET

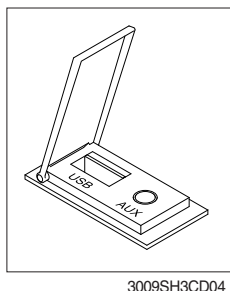

(1) MP3 files are played when a USB device is connected to the USB port.

(2) In addition, the AUX port enables headphone and other devices.

## 14) HEATED SEAT SWITCH (option)

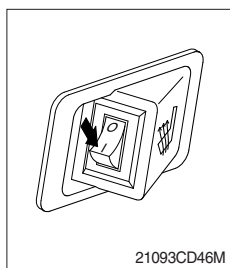


(1) This switch is used to heat the seat.

· Heater ON :  $10 \pm 3.5^{\circ}\text{C}$

· Heater OFF :  $20 \pm 3^{\circ}\text{C}$

(2) On pressing the switch, the indicator lamp is turned ON.


## 15) HORN SWITCH

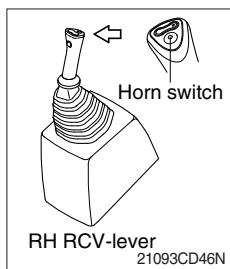

(1) This switch is at the top of right side control lever.


On pressing, the horn sounds.

## 16) BREAKER OPERATION SWITCH

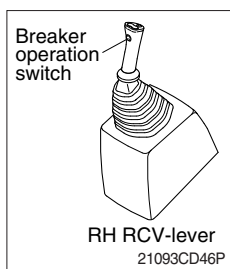


(1) On pressing this switch, the breaker operates only when the breaker operation mode is selected.

## 17) ONE TOUCH DECEL SWITCH

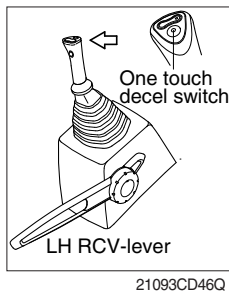


- (1) This switch is used to actuate the deceleration function quickly.
- (2) The engine speed is increased to previous setting value by pressing the switch again.
- (3) One touch decel function is available only when the auto idle pilot lamp is turned OFF.

## 18) POWER MAX SWITCH

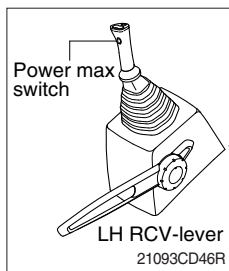


- (1) This switch activate power max function.  
When this switch is kept pressed, hydraulic power of work equipment will be increased to approx 110 percent during 8 seconds.
  - (2) After 8 seconds, function is cancelled automatically even the switch keeps pressed.
- ※ **Do not use for craning purposes.**

## 19) AIR COMPRESSOR SWITCH (option)

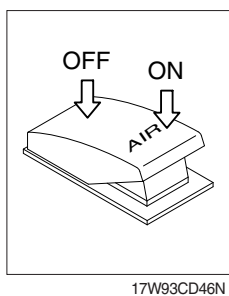

- (1) This switch is used to activate the air compressor.
- (2) The indicator lamp is turned on when operating this switch.


## 21) HEATED SEAT SWITCH (option)

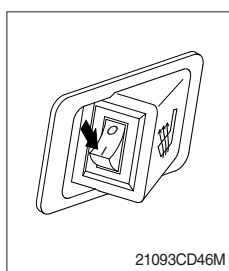

- (1) This switch is used to heat the seat.
  - Heater ON :  $10 \pm 3.5^{\circ}\text{C}$
  - Heater OFF :  $20 \pm 3^{\circ}\text{C}$
- (2) On pressing the switch, the indicator lamp is turned ON.




## 4. LEVERS AND PEDALS

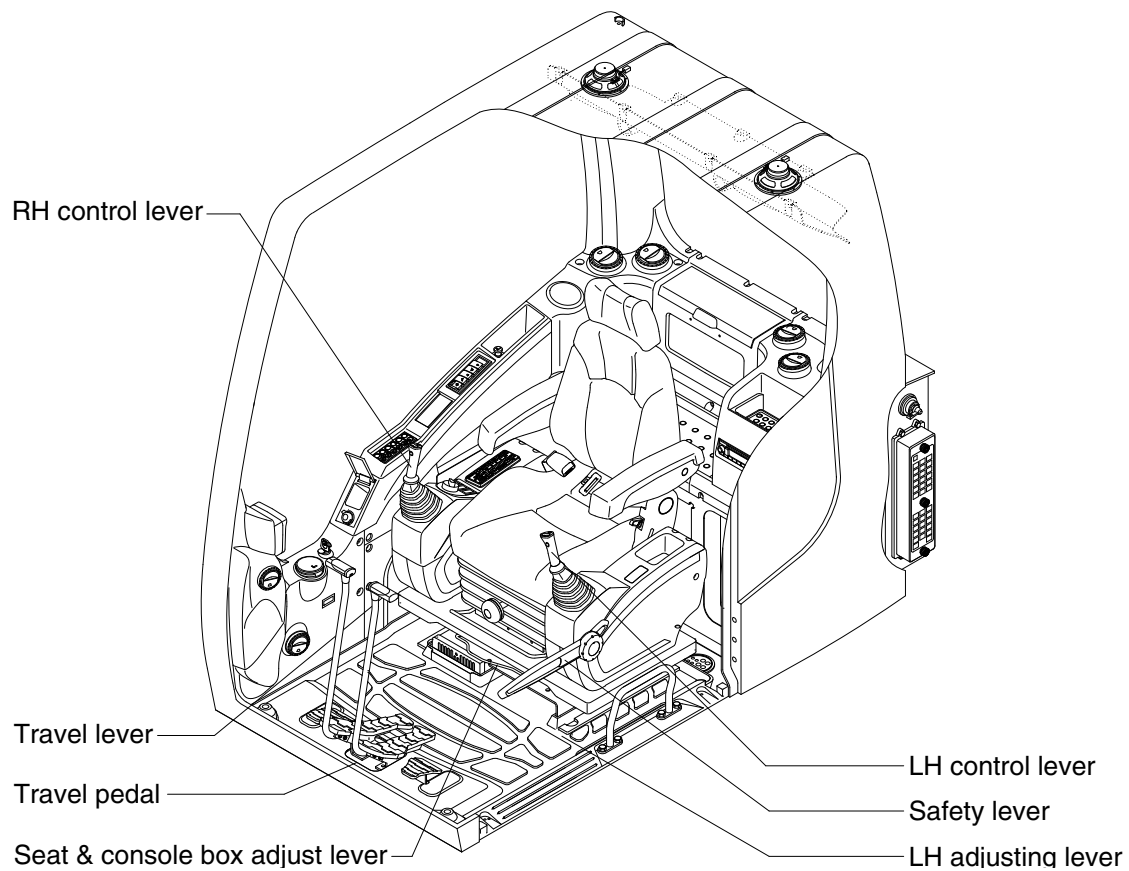


3009SH3CD05

### 1) LH CONTROL LEVER

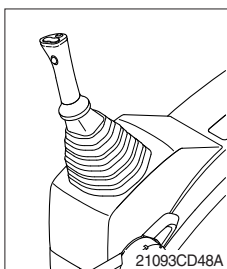


- (1) This joystick is used to control the swing and the arm.
- (2) Refer to operation of working device in chapter 4 for details.

### 2) RH CONTROL LEVER

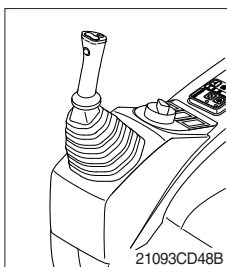

- (1) This joystick is used to control the boom and the bucket.
- (2) Refer to operation of working device in chapter 4 for details.

### 3) SAFETY LEVER

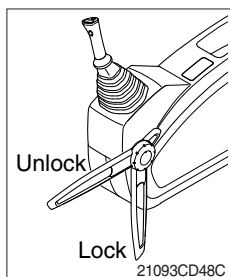


(1) All control levers and pedals are disabled from operation by locating the lever to lock position as shown.

※ **Be sure to lower the lever to LOCK position when leaving from operator's seat.**

(2) By pull lever to UNLOCK position, the machine is operational.

※ **Do not use the safety lever for handle when getting on or off the machine.**


### 4) TRAVEL LEVER

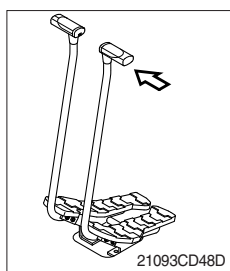

(1) This lever is mounted on travel pedal and used for traveling by hand. The operation principle is same as the travel pedal.

(2) Refer to traveling of the machine in chapter 4 for details.

### 5) TRAVEL PEDAL

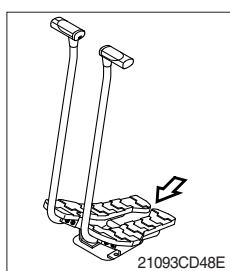


(1) This pedal is used to move the machine forward or backward.

(2) If left side pedal is pressed, left track will move.

If right side pedal is pressed, right track will move.

(3) Refer to traveling of machine in chapter 4 for details.

### 6) SEAT AND CONSOLE BOX ADJUST LEVER

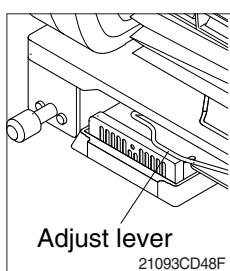

(1) This lever is used to move the seat and console box to fit the contours of the operator's body.

(2) Pull the lever to adjust forward or backward over 170 mm (6.7").



## 5. AIR CONDITIONER AND HEATER

### ■ FULL AUTO AIR CONDITIONER AND HEATER (standard)

Full auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.


※ Refer to the page 3-45 for semi auto air conditioner and heater.

- Location of air flow ducts

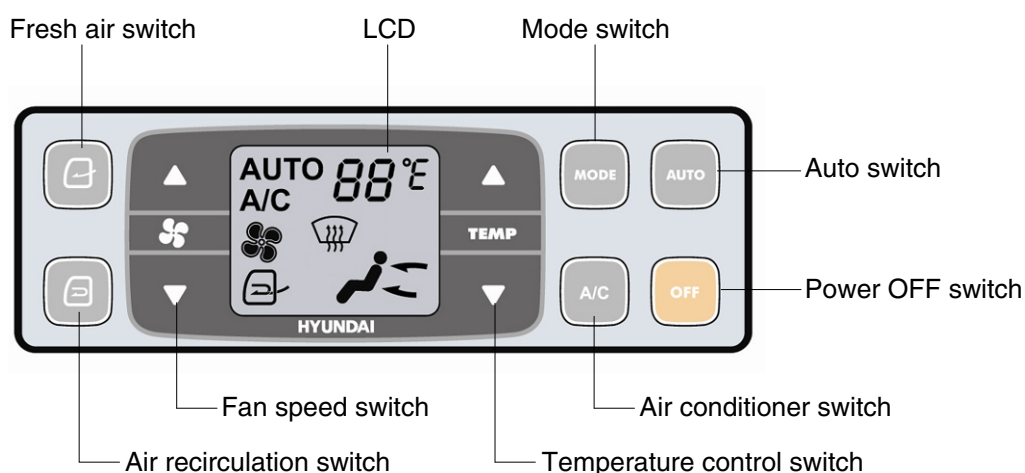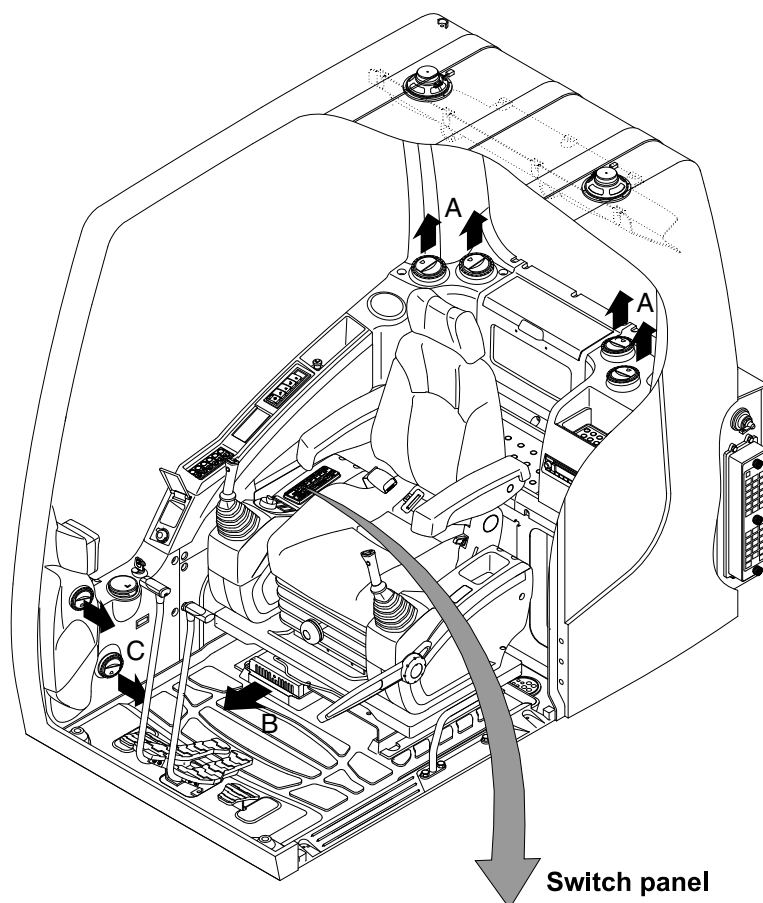

3009SH3CD06

## 1) POWER OFF SWITCH

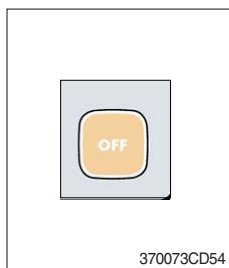


- (1) This switch makes the system and the LED OFF.  
Just before the power OFF, set values are stored.

### (2) Default setting values


Function	Air conditioner	In/outlet	LCD	Temperature	Mode
Value	OFF	Inlet	OFF	Previous sw OFF	Previous sw OFF

## 2) AUTO SWITCH

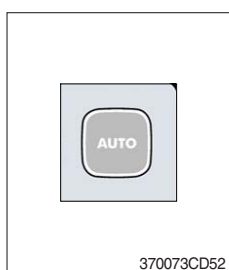


- (1) Turn the starting switch to ON position, LCD lights ON.  
Auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.
- (2) This switch can restart system after system OFF.

## 3) AIR CONDITIONER SWITCH (compressor switch)

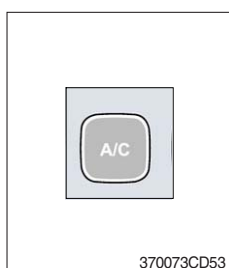


- (1) This switch turns the compressor and the LCD ON.
- (2) In accordance with the temperature sensed by duct (evaporator) sensor, compressor turns ON or OFF automatically.
- ※ **Air conditioner operates to remove vapor and drains water through a drain hose. Water can be sprayed into the cab in case that the drain cock at the ending point of drain hose has a problem.**  
**In this case, exchange the drain cock.**

## 4) FAN SPEED SWITCH

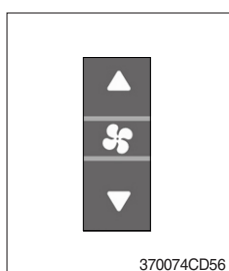

- (1) Fan speed is controlled automatically by set temperature.
- (2) This switch controls fan speed manually.
- There are 8 up/down steps to control fan speed.
  - The maximum step or the minimum step beeps 5 times.
- (3) This switch makes the system ON.

## 5) TEMPERATURE CONTROL SWITCH

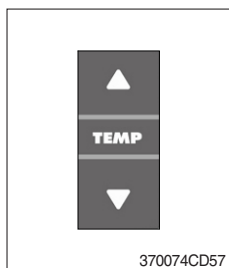

(1) Setting temperature indication ( Lo, 18~31°C, Hi, scale : 1°C)

(2) Max cool and max warm beeps 5 times.

(3) The max cool or the max warm position operates as following table.


Temperature	Compressor	Fan speed	In/Outlet	Mode
Max cool	ON	Max (Hi)	Recirculation	Vent
Max warm	OFF	Max (Hi)	Fresh	Foot

(4) Temperature unit can be changed between celsius (°C) and fahrenheit (°F)

① Default status (°C)

② Push Up/Down temperature control switch simultaneously more than 5 second displayed temperature unit change (°C → °F)

## 6) MODE SWITCH

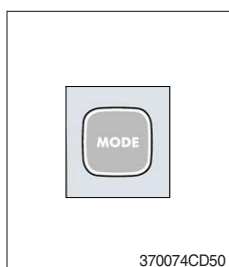

(1) Operating this switch, it beeps and displays symbol of each mode in order.

· A type : Vent → Vent/Foot → Foot → Foot/Def → Vent


Mode switch		Vent	Vent/Foot	Foot	Foot/Def
Outlet	A	●	●		
	B		●	●	●
	C				●

· B type : Vent → Vent/Foot → Def/Foot → Def/Vent → Def/Vent/Foot

Mode switch		Vent	Vent/Foot	Def/Foot	Def/Vent	Def/Vent/Foot
Outlet	A	●	●		●	●
	B		●	●		●
	C			●	●	●

(2) When defroster mode operating, FRESH AIR/AIR RECIRCULATION switch turns to FRESH AIR mode and air conditioner switch turns ON.

## 7) FRESH AIR/AIR RECIRCULATION SWITCH

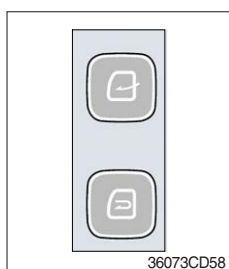

(1) It is possible to change the air-inlet method.

① **Fresh air** ( )

Inhaling air from the outside.

※ **Check out the fresh air filter periodically to keep a good efficiency.**

② **Air recirculation** ( )


It recycles the heated or cooled air to increase the energy efficiency.

※ **Change air occasionally when using recirculation for a long time.**

※ **Check out the recirculation filter periodically to keep a good efficiency.**

## 8) SELF DIAGNOSIS FUNCTION

### (1) Procedure

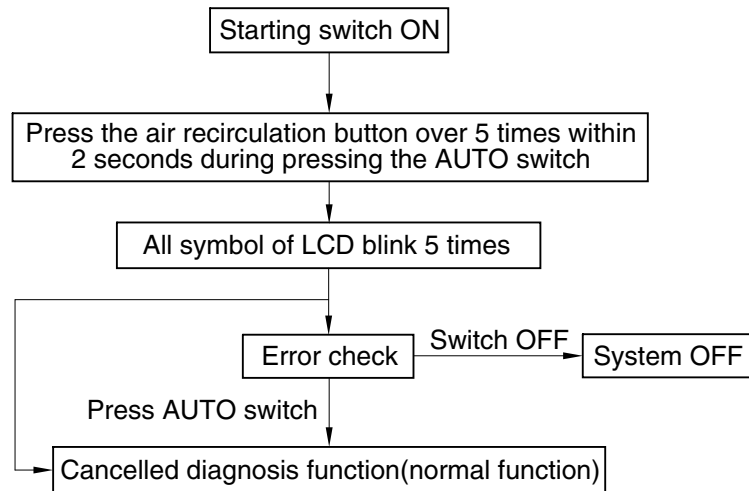

3607A3CD69

### (2) Error check

- The corresponding error code flickers on the setup temperature display panel, the other symbol will turn OFF.
- Error code flickers every 0.5 second.
- If error code is more than two, each code flickers 2 times in sequence.
- Error code

Error code	Description	Error code	Description
11	Cabin inside sensor	16	Mode actuator 1
12	Ambient sensor	17	Mode actuator 2
14	Duct (evaporator) sensor	18	Intake actuator
15	Temp actuator	-	-

### (3) Fail safe function


Error description	Fail safe function
Cabin inside sensor (11)	25°C alternate value control
Ambient sensor (12)	20°C alternate value control
Duct (evaporator) sensor (14)	1°C alternate value control
Temp actuator (15)	If opening amount is 0 %, the alternate value is 0 %
	If not, the alternate value is 100 %
Mode actuator 1, 2 (16, 17)	The alternate value is Vent

■ SEMI AUTO AIR CONDITIONER AND HEATER (option)

Semi auto air conditioner and heater are equipped for pleasant operation against outside temperature and defrost on window glass.


※ Refer to the page 3-41 for full auto air conditioner and heater.

- Location of air flow ducts

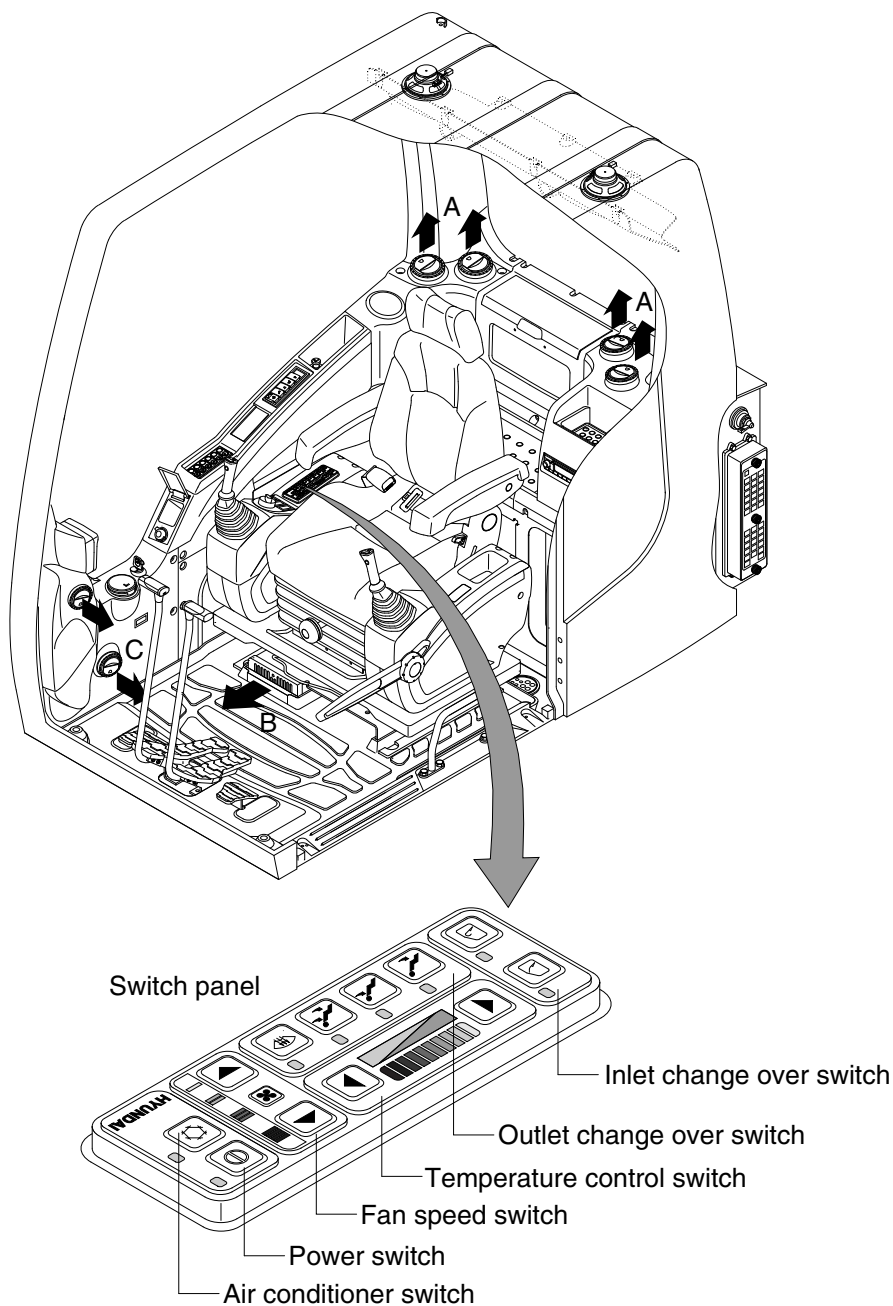

2209S3CD53

### 1) POWER SWITCH

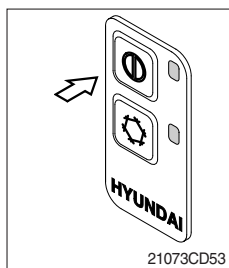


(1) This switch makes the system and the LED simultaneously ON or OFF.

#### (2) Default setting values

Function	Air conditioner	Fan speed	Temperature	Outlet	Inlet
Value	OFF	1	Max cool	Face	Recirculation

### 2) AIR CONDITIONER SWITCH (compressor switch)

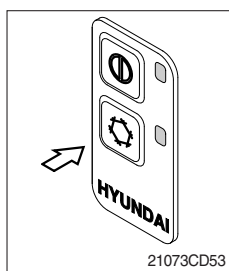


(1) Operating this switch turns the compressor and the LED simultaneously ON or OFF.

(2) In accordance with the evaporator temperature, compressor turns on or off automatically without changing LED state.

※ **Air conditioner operates to remove vapor and drains water through a drain hose. Water can be sprayed into the cab in case that the vacuum valve of drain hose has a problem. In this case, exchange the vacuum valve.**


### 3) FAN SPEED SWITCH

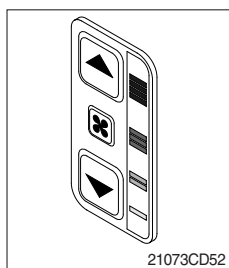

(1) It is possible to control the fan to four steps.

(2) The first step or the fourth step gives 5 times beeps.

### 4) TEMPERATURE CONTROL SWITCH

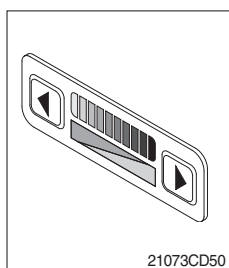

(1) There are 9 steps to control temperature from max cool to max warm controlled up and down by 1 step.


(2) Max cool and max warm arouse 5 times beeps.

(3) For the max warm or the max cool it's better to be configured as following table.

Temperature	Air conditioner	Fan speed	Outlet	Inlet
Max cool	ON	4	Face	Recirculation
Max warm	OFF	3	Foot	Fresh



5) OUTLET CHANGE OVER SWITCH

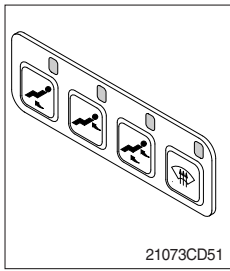


(1) There are four steps of air flow.

Switch position		Mode			
Outlet	A		●	●	
	B	●		●	●
	C				●

(2) When defroster switch operating, INLET switch turns to FRESH mode and air conditioner switch turns ON.

(3) In case of heating range (5~Max warm), air conditioner won't turns ON.

6) INLET CHANGE OVER SWITCH

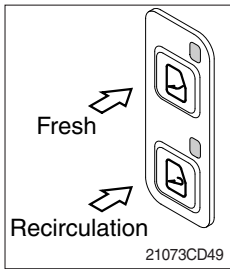

(1) It is possible to change the air-inlet method.

① **Fresh**

Inhaling air from the outside to pressurize cab inside.

※ **Check out the fresh air filter periodically to keep a good efficiency.**

② **Recirculation**


It recycles the heated or cooled air to increase the energy efficiency.

※ **Change air occasionally when using recirculation for a long time.**

※ **Check out the recirculation filter periodically to keep a good efficiency.**


(2) Recirculation function operates when the system is OFF but it can be changed whenever needed.

## 6. OTHERS

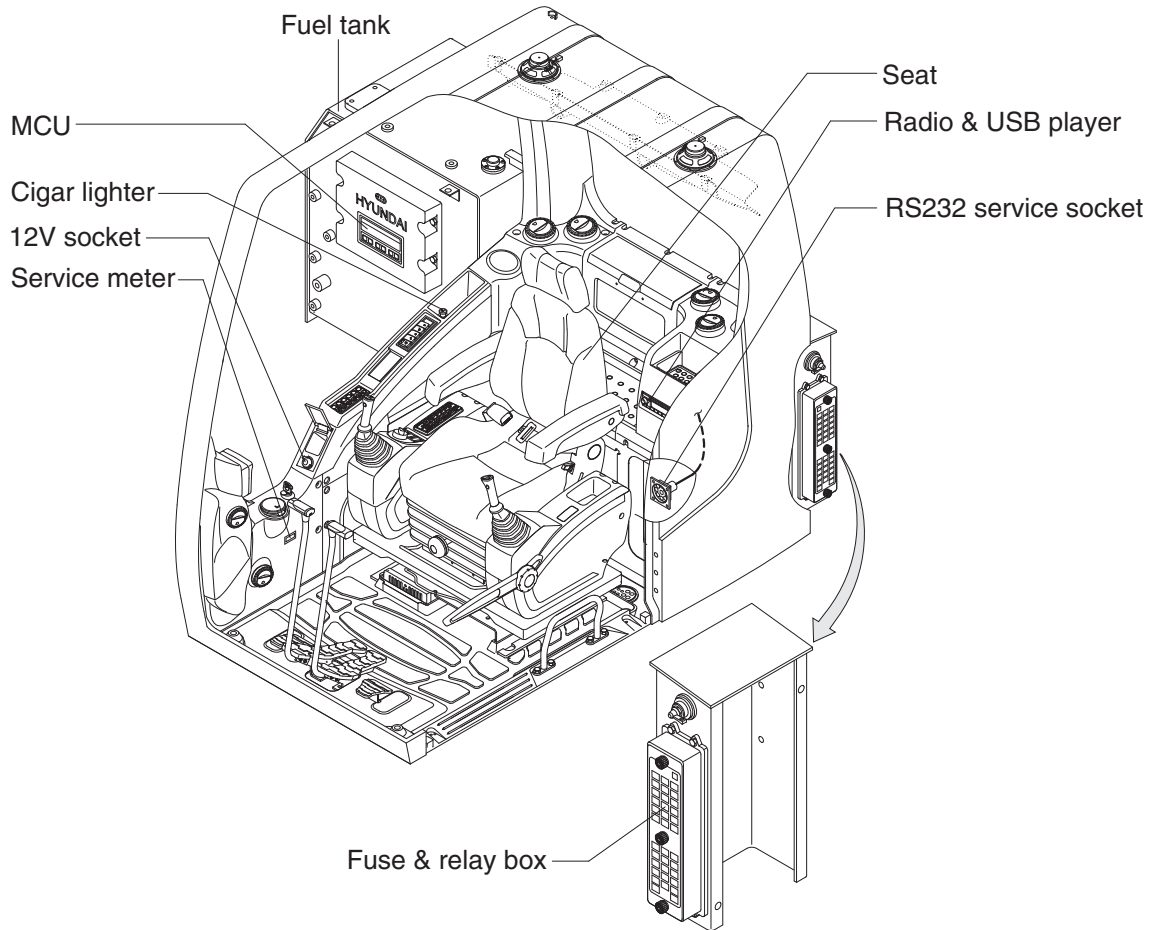

3009SH3CD07

### 1) CIGAR LIGHTER

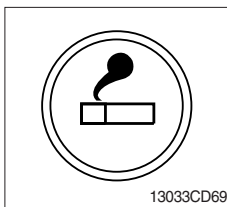


- (1) This can be used when the engine starting switch is ON.
- (2) The lighter can be used when it springs out in a short while after being pressed down.

#### ※ Service socket

**Use cigar lighter socket when you need emergency power.  
Do not use the lighter exceeding 24V, 100W.**

### 2) 12V SOCKET

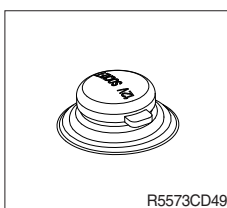

- (1) Utilize the power of 12V as your need and do not exceed power of 12 V, 30 W.

### 3) RADIO AND USB PLAYER (-#0441)




75793CD62

#### ■ FRONT PANEL PRESENTATION

- |   |      |   |    |    |  |
|---|------|---|----|----|--|
| 1 |      | ..... Sound function selection button (audio selection) | 10 |    | ..... Preset memory button 6                     |
| 2 |      | ..... Power and volume button                           |    | D+ | ..... Directory up                               |
| 3 |      | ..... Mode button (select RADIO / USB / AUX)            | 11 |    | ..... Aux function                               |
| 4 |      | ..... UP / DOWN tuning button                           | 12 |    | ..... Preset scan (PS) Best station memory (BSM) |
| 5 |      | ..... Preset memory button 1                            | 13 |    | ..... Audio mute button                          |
|   | DISP | ..... ID3 v2 display                                    | 14 |    | ..... AM / FM button (radio)                     |
| 6 |      | ..... Preset memory button 2                            |    |    |  |
|   | SCN  | ..... File scan   |    |    |  |
| 7 |      | ..... Preset memory button 3                            |    |    |  |
|   | RPT  | ..... Repeat play selector                              |    |    |  |
| 8 |      | ..... Preset memory button 4                            |    |    |  |
|   | RDM  | ..... Random play selector                              |    |    |  |
| 9 |      | ..... Preset memory button 5                            |    |    |  |
|   | D-   | ..... Directory down                                    |    |    |  |

## ■ GENERAL

### (1) Power and volume button

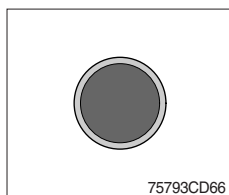

#### ① Power ON / OFF button


Press power button to turn the unit ON or OFF shortly.

When the power is ON, the previous mode (last memory) will appear.

#### ② Volume up / down control

Turn volume up / down button right to increase the volume level. The level will be shown in VOLUME xx on the LCD display. Turn it left to decrease the volume level. After 5 seconds of volume indication, display will return to the previous mode.

### (2) Sound function selection button (audio selection)

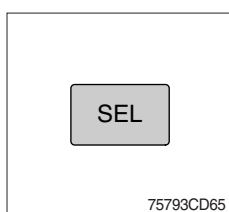


- ① This button is to adjust the sound. Each time you press power button shortly, LCD displays each mode as follows :

BASS → TREBLE → BAL → BEEP → LOUD → VOLUME



※ When this button is pressed, LCD display shows selected function for 5 seconds and then returns back to the previous mode. On selected function, level can be controlled by turning this button. The display will automatically return to normal indication in 5 seconds after the last adjustment is made or when another function is activated.


#### ② Bass control

To adjust the bass level, first select the bass mode by pressing the select button  until BASS indication appears on the LCD display. Within 5 seconds of choosing the bass mode, turn power button right / left to adjust the bass level as desired.

The bass level will be shown on the LCD display from a minimum of BASS -10 to a maximum of BASS +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.


#### ③ Treble control

To adjust the treble level, first select the treble mode by pressing the select button  until TREBLE indication appears on the LCD display. Within 5 seconds of choosing the treble mode, turn power button right / left to adjust the treble level as desired.

The treble level will be shown on the LCD display from a minimum of TREBLE -10 to a maximum of TREBLE +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

#### ④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing the select button  until the BAL indication appears on the LCD display.


Within 5 seconds of choosing the balance mode, turn power button right / left to adjust the balance as desired.

The balance position will be shown on the LCD display from BAL 10L (full left) to BAL 10R (full right).

When the volume level between the left and right speakers is equal, BAL L=R will be shown on the LCD display panel.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

#### ⑤ Beep control

To adjust the beep mode, first select the beep mode by pressing the select button  until BEEP indication appears on the LCD display.

The beep mode will be shown on the LCD display from BEEP 2ND, BEEP OFF and BEEP ON by turning power button right / left.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.


Select BEEP ON when you wish to hear the BEEP sound whenever any function button is pressed.

Select BEEP 2ND when you wish to hear the BEEP sound whenever any tuner pre-set button and/or tune seek buttons are pressed for more than 3 seconds.


#### ⑥ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response.

This action will compensate for the reduction in bass and treble performance experienced at low volume.


To select the loudness feature, press select button  until LOUD ON or LOUD OFF is displayed, then turn power button left or right to activate or deactivate loudness.

#### (3) Mode button

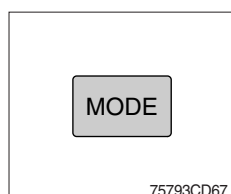

- ① Press mode button to select RADIO / USB / AUX.


#### (4) Audio mute button

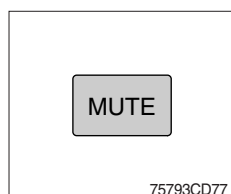

- ① Press mute button momentarily to mute volume and MUTE mark will blink on the LCD display.  
Press the button again to return to the mode in use before the mute mode was activated.

## ■ RADIO

### (1) AM / FM / LW band selector

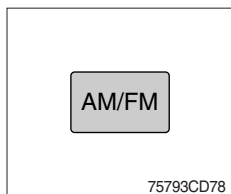


- ① Each time this button is pressed, the radio button is changed. Each time this button is pressed, LCD displays each band as follows :

FM1 → FM2 → FM3 → AM → LW

※ LW band is only available for Europe.

### (2) Up / down tuning

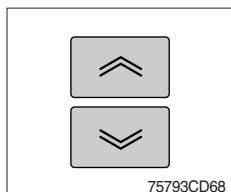


- ① To automatically select a radio station, momentarily press the up tune seek button  $\approx$  or down tune seek button  $\approx$  for less than 3 seconds to search for the closest radio station.

To manually select a radio station, press the up tuning & down tuning button for longer than 3 seconds.

The radio frequency will move up or down step by step each time you press button.

### (3) Station pre-set button

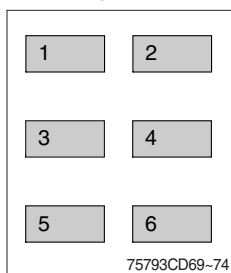


- ① Pressing these buttons shortly will recall your favorite pre-set radio stations.

To store your favorite stations into any of the 6 pre-set memories in each band (AM/FM/LW), use the following procedure :

- Turn the radio ON and select the desired band.
- Select the first station to be pre-set using the manual up/down or automatic seek tuning control button.
- Press the chosen pre-set button to store your selected station into and continue to hold it in. The beep sound will be momentarily heard and the pre-set number will appear on the LCD display indicating that the station is now set into that pre-set memory position and can be recalled at any time, by pressing that pre-set button.

#### (4) Pre-set scan (PS) / Best station memory (BSM) button

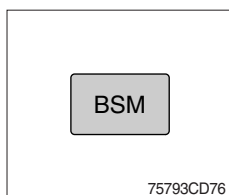

##### ① Pre-set scan (PS)

Press BSM button shortly to scan the 6 pre-set station stored the memories on each band (AM/FM/LW).

The unit will stop at each pre-set station (the pre-set number on the LCD display will flash during pre-set scan operation) and remain on the selected frequency. Press the button momentarily again to remain on the station currently being heard.

##### ② Best station memory (BSM)

Pressing BSM button for longer than 2 seconds will activate the BSM tuning feature which will automatically scan and enter each station into memory.

If you have already set the pre-set memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter the new ones.

This BSM feature is most useful when traveling in a new area where you are not familiar with the local stations.

### ■ USB PLAYER

#### (1) USB function

There are two ways to play mp3 files in a USB device : using USB socket in the cab and the USB / AUX cable connected to the front side of the player.

##### · Use of USB socket

- ① Connect a USB device, which saves mp3 files, to USB socket in the cabin.
- ② If a USB device has not been connected, MP3 files are automatically played when you insert it into the USB port.
- ③ If a USB device has connected, MP3 files are played when you press mode for USB.


##### · Use of USB/AUX cable (option)



75793CD81

- ① Connect the USB/AUX cable to the player in order to play MP3 files in a USB device.
- ② If a USB device has not been connected, MP3 files are automatically played when you insert it into the cable.
- ③ If a USB device has connected, MP3 files are played when you press mode for USB.

## (2) File selection & cue / review button

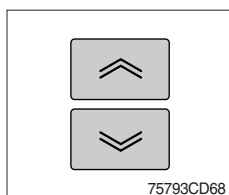

### ① File selection function

This button is used to select file up / down. Each time the forward file select ≧ is pressed, file number is increased.

Each time the backward file select ≦ is pressed, file number is decreased.

### ② Cue / review functions

High-speed audible search of file on a USB can be made by this button (the cue and review functions).

Press and hold the cue button ≧ to advance rapidly in the forward direction or the review button ≦ to advance rapidly in the backward direction.

## (3) MP3 directory / file searching

### ① The power button is used to select a particular directory and file.

Press and hold for more than 3 seconds while playing MP3 file.

Turn right / left the power button to search the directory. Press the button when you find the wanted directory.

For example, the directory search generally changes in two methods depending on the order of writing as follows.


- Method 1 : ROOT → Dir01 → Dir02 → Dir03 → Dir04 → Dir05 → Dir06 → Dir07
- Method 2 : ROOT → Dir01 → Dir02 → Dir05 → Dir03 → Dir06 → Dir04 → Dir07

If you want to search the file in the located directory, turn right / left the power button consecutively. Press the button when you find the wanted file. The unit will then play the selected file. For instance, the file search changes in Dir01 as follows.

File01 → File02 → File03 → File04  


↑

### ※ MP3 direction / file configuration

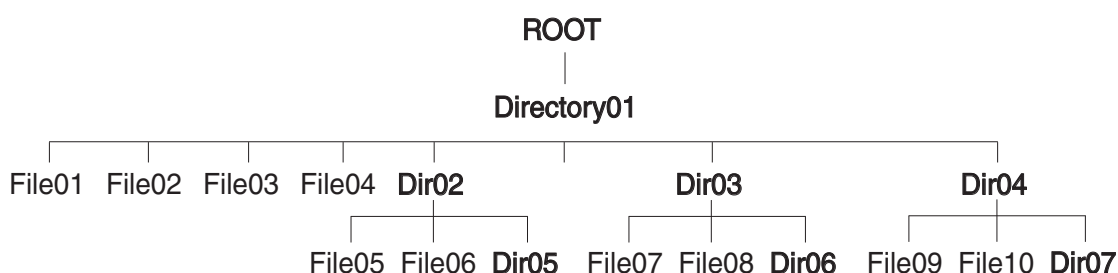





#### (4) ID3 v2 display

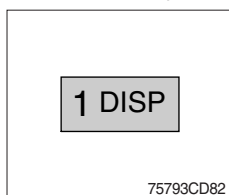

- ① Disp button is used to change the display information.  
While playing an MP3 file, you can change the file information shown on the LCD display.  
Each time you press DISP (display), the display changes to show the following.
- ※ If the MP3 disc does not have any ID3 information, the display will show NO ID3 on LCD display.

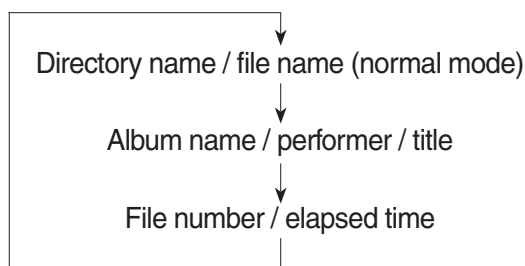


#### (5) File scan (SCN)

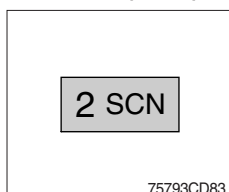


- ① During USB play, press SCN button to play the first 10 seconds of each file on the whole file on the USB (SCN mark will appear on the LCD display).  
When a desired file is reached, press the SCN button again to cancel the function.  
The unit will then play the selected file.
- ※ In case of playing MP3 file, when the SCN (scan) button is pressed and held for longer than 2 seconds, the SCN mark will blink on the LCD display and all files in the selected directory will be introduced until the file scan mode is cancelled by pressing the SCN button again or by activating the random or repeat functions.

#### (6) Repeat play selector (RPT)

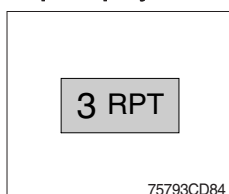

- ① During USB play, press RPT button to play the selected file repeatedly (RPT will appear on the LCD display).  
Play of the file will continue to repeat until this button is pressed again and the RPT disappears from the LCD display.
- ※ In case of playing MP3 file, when the RPT button is pressed and held longer than 2 seconds, the RPT mark will blink on the LCD display and play all files in the selected directory and will be repeated until the directory repeat mode is cancelled by pressing the repeat button again or by activating the scan or random functions (RPT mark will disappear from LCD display).

## (7) Random play selector (RDM)

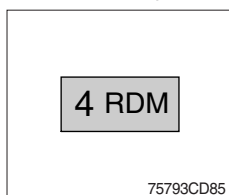


- ① During USB play, press RDM button to play the files on the USB in a random shuffled order (RDM will appear on the LCD display). The file select function will also select file in the random order instead of the normal process.

The random play mode can be cancelled by this button again.


- ※ In case of MP3 file, when the random button is pressed and held longer than 2 seconds, the RDM mark will blink on the LCD display and play all files in directory randomly until the directory random mode is cancelled by pressing the random button again or by activating the scan or repeat functions (RDM mark will disappear from LCD display).

## (8) Directory down

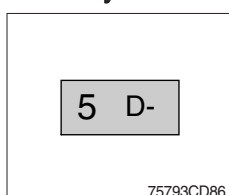

- ① Press D- button briefly while playing MP3. The previous directory is located each time you press this button.

## (9) Directory up

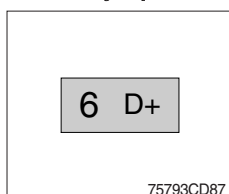


- ① Press D+ button briefly while playing MP3. The next directory is located each time you press this button.
- ※ If the MP3 file does not have a directory, the unit play MP3 at 10-file intervals.
- ※ If any MP3 file does not exist in USB, this button can not operate.

## ■ AUX PLAYER


### (1) Aux function

#### · Use of USB socket

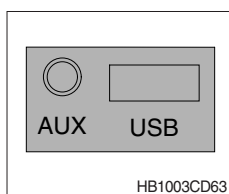


- ① If you want to listen to music of a external audio device, connect a external audio device into the USB port.
- ② Press mode button to change a current mode for AUX. If audio file of audio device is playing, you can listen to music through speaker.

#### · Use of USB/AUX cable (option)

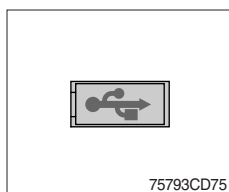

- ① If you want to listen to music of a external audio device, connect a external audio device through USB/AUX cable.
- ② Press mode button to change a current mode for AUX. If audio file of audio device is playing, you can listen to music through speaker.

### 3) RADIO AND USB PLAYER (#0442-)

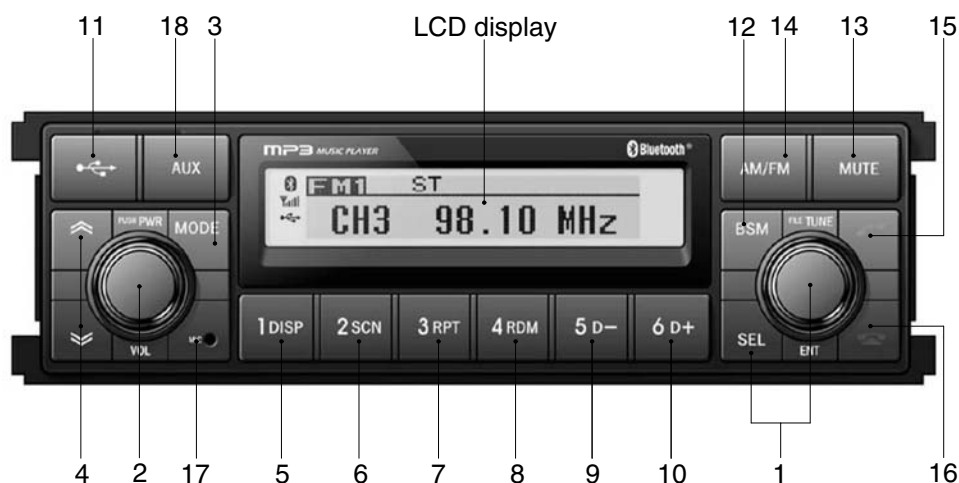


75793CD62-2

#### ■ FRONT PANEL PRESENTATION

- |   |  |  |    |  |   |
|---|--|--|----|--|---|
| 1 |  | ..... Audio selection button                                   | 10 |  | ..... Preset memory button 6<br>D+ ..... Directory up |
|   |  | ..... Audio selection knob                                     | 11 |  | ..... Aux function                                    |
| 2 |  | ..... Power and volume button                                  | 12 |  | ..... Preset scan (PS)<br>Best station memory (BSM)   |
| 3 |  | ..... Mode button<br>(select RADIO / USB / AUX)                | 13 |  | ..... Audio mute button                               |
| 4 |  | ..... UP / DOWN tuning button                                  | 14 |  | ..... AM / FM button (radio)                          |
| 5 |  | ..... Preset memory button 1<br>DISP ..... ID3 v2 display      | 15 |  | ..... Send  |
| 6 |  | ..... Preset memory button 2<br>SCN ..... File scan            | 16 |  | ..... End   |
| 7 |  | ..... Preset memory button 3<br>RPT ..... Repeat play selector | 17 |  | ..... MIC (microphone)                                |
| 8 |  | ..... Preset memory button 4<br>RDM ..... Random play selector | 18 |  | ..... Aux connector                                   |
| 9 |  | ..... Preset memory button 5<br>D- ..... Directory down        |    |  |   |

## ■ GENERAL

### (1) Power and volume button

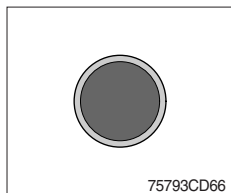

#### ① Power ON/OFF button


Press power button to turn the unit ON or OFF shortly.

When the power is ON, the previous mode (last memory) will appear.

#### ② Volume up / down control

Turn volume up / down button right to increase the volume level. The level will be shown in VOLUME xx on the LCD display. Turn it left to decrease the volume level. After 5 seconds of volume indication, display will return to the previous mode.

### (2) Sound function selection button (audio selection)

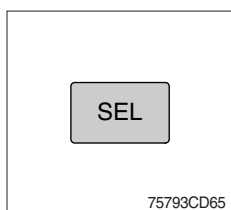

① This button is to adjust the sound. Each time you press SEL button shortly, LCD displays each mode as follows :

#### • Type B

BASS → TREBLE → BAL → LOUD → EQ



When this button is pressed, LCD display shows selected function for 5 seconds and then returns back to the previous mode. On selected function, level can be controlled by turning this button. The  
※ display will automatically return to normal indication in 5 seconds after the last adjustment is made or when another function is activated.

#### ② Bass control

To adjust the bass level, first select the bass mode by pressing the SEL button until BASS indication appears on the LCD display. Within 5 seconds of choosing the bass mode, turn button selection knob right / left to adjust the bass level as desired.

The bass level will be shown on the LCD display from a minimum of BASS -10 to a maximum of BASS +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

#### ③ Treble control

To adjust the treble level, first select the treble mode by pressing the SEL button until TREBLE indication appears on the LCD display. Within 5 seconds of choosing the treble mode, turn button selection knob right / left to adjust the treble level as desired.

The treble level will be shown on the LCD display from a minimum of TREBLE -10 to a maximum of TREBLE +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

#### ④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing the SEL button until the BAL indication appears on the LCD display.

Within 5 seconds of choosing the balance mode, turn button selection knob right / left to adjust the balance as desired.

The balance position will be shown on the LCD display from BAL 10L (full left) to BAL 10R (full right).

When the volume level between the left and right speakers is equal, BAL L=R will be shown on the LCD display panel.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

#### ⑤ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response.

This action will compensate for the reduction in bass and treble performance experienced at low volume.


To select the loudness feature, press SEL button until LOUD ON or LOUD OFF is displayed, then turn power button (type A) or selection knob (type B) left or right to activate or deactivate loudness.

#### ⑥ Equalizer (EQ)

You can select an equalizer curve designed for 4 music types (POP, ROCK, CLASSIC, JAZZ).


To select the desired curve, first select the EQ mode by pressing SEL button until the "EQ OFF" indication appears on the display panel. Within 5 seconds of choosing the EQ mode, turn power and volume button (type A) or selection knob (type B) to select an equalizer curve as desired.

### (3) Mode button

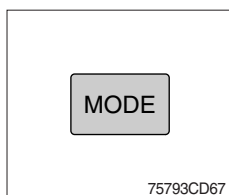

- ① Press mode button to select RADIO / USB / AUX / BT audio.


### (4) Audio mute button

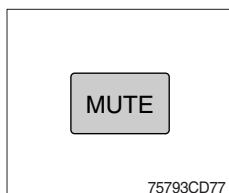

- ① Press mute button momentarily to mute volume and MUTE mark will blink on the LCD display.  
Press the button again to return to the mode in use before the mute mode was activated.

## ■ RADIO

### (1) AM / FM / LW band selector

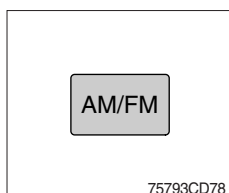




- ① Each time this button is pressed, the radio button is changed.  
Each time this button is pressed, LCD displays each band as follows :

FM1 → FM2 → FM3 → AM → LW


※ LW band is only available for Europe.
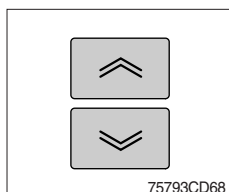
### (2) Up / down tuning




- ① To automatically select a radio station, momentarily press the up tune seek button  or down tune seek button  for less than 3 seconds to search for the closest radio station.  
To manually select a radio station, press the up tuning & down tuning button for longer than 3 seconds.  
The radio frequency will move up or down step by step each time you press button.

### (3) Station pre-set button

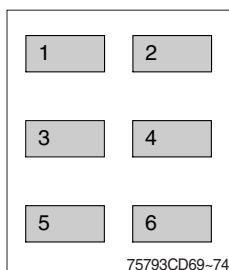

- ① Pressing these buttons shortly will recall your favorite pre-set radio stations.  
To store your favorite stations into any of the 6 pre-set memories in each band (AM/FM/LW), use the following procedure :
- Turn the radio ON and select the desired band.
  - Select the first station to be pre-set using the manual up/down or automatic seek tuning control button.
  - Press the chosen pre-set button to store your selected station into and continue to hold it in. The beep sound will be momentarily heard and the pre-set number will appear on the LCD display indicating that the station is now set into that pre-set memory position and can be recalled at any time, by pressing that pre-set button.

#### (4) Pre-set scan (PS) / Best station memory (BSM) button

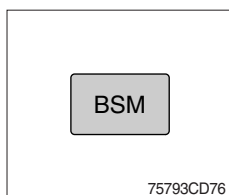

##### ① Pre-set scan (PS)

Press BSM button shortly to scan the 6 pre-set station stored the memories on each band (AM/FM/LW).

The unit will stop at each pre-set station (the pre-set number on the LCD display will flash during pre-set scan operation) and remain on the selected frequency. Press the button momentarily again to remain on the station currently being heard.

##### ② Best station memory (BSM)

Pressing BSM button for longer than 2 seconds will activate the BSM tuning feature which will automatically scan and enter each station into memory.

If you have already set the pre-set memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter the new ones.

This BSM feature is most useful when traveling in a new area where you are not familiar with the local stations.

#### ■ USB PLAYER



75793CD81-1

##### (1) USB function

① Connect a USB device if you want to listen to MP3 file in a USB device.

② It will automatically play MP3 file in the USB device and the LCD display will show "READING USB".

※ If there are no files on USB device, playback will revert back to the previous mode after displaying "NO FILE".


##### (2) AUX function

① If you want to listen to music of a external audio device, connect a external audio device through AUX cable.

② Change AUX mode by pressing MODE button.

If audio file of Audio device is playing, you can listen to music through speaker.

### (3) File selection & cue / review button

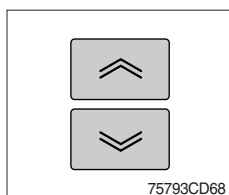

#### ① File selection function

This button is used to select file up / down.

Each time the forward file select ≧ is pressed, file number is increased.

Each time the backward file select ≦ is pressed, file number is decreased.

#### ② Cue / review functions

High-speed audible search of file on a USB can be made by this button (the cue and review functions).

Press and hold the cue button ≧ to advance rapidly in the forward direction or the review button ≦ to advance rapidly in the backward direction.

### (4) MP3 directory / file searching

① The D-, D+ button is used to select a particular directory and file.

Press and hold for more than 3 seconds while playing MP3 file.

Turn right / left the power button (type A) or selection knob (type B) to search the directory. Press the button when you find the wanted directory.

For example, the directory search generally changes in two methods depending on the order of writing as follows.

· Method 1 : ROOT → Dir01 → Dir02 → Dir03 → Dir04 → Dir05 → Dir06 → Dir07




· Method 2 : ROOT → Dir01 → Dir02 → Dir05 → Dir03 → Dir06 → Dir04 → Dir07




If you want to search the file in the located directory, turn right / left the power button (type A) or selection knob (type B) consecutively. Press the button when you find the wanted file. The unit will then play the selected file.

For instance, the file search changes in Dir01 as follows.




※ MP3 directory / file configuration

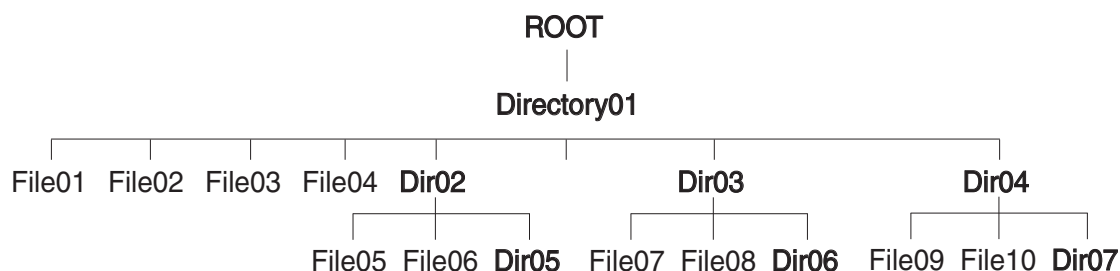





### (5) ID3 v2 display

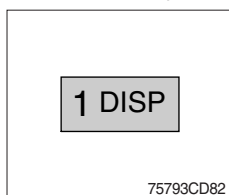

- ① Disp button is used to change the display information.  
While playing an MP3 file, you can change the file information shown on the LCD display.  
Each time you press DISP (display), the display changes to show the following.
- ※ If the MP3 disc does not have any ID3 information, the display will show NO ID3 on LCD display.

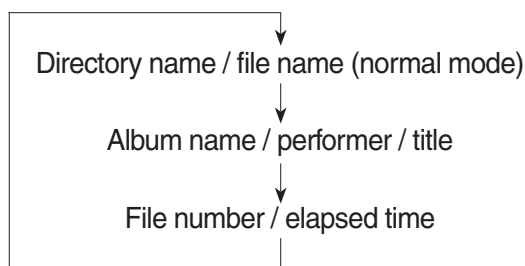


### (6) File scan (SCN)

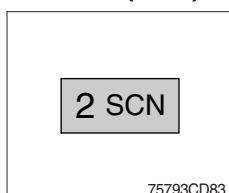


- ① During USB play, press SCN button to play the first 10 seconds of each file on the whole file on the USB (SCN mark will appear on the LCD display).  
When a desired file is reached, press the SCN button again to cancel the function.  
The unit will then play the selected file.
- ※ In case of playing MP3 file, when the SCN (scan) button is pressed and held for longer than 2 seconds, the SCN mark will blink on the LCD display and all files in the selected directory will be introduced until the file scan mode is cancelled by pressing the SCN button again or by activating the random or repeat functions.

### (7) Repeat play selector (RPT)

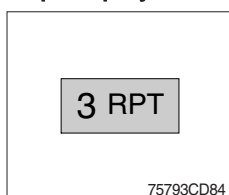

- ① During USB play, press RPT button to play the selected file repeatedly (RPT will appear on the LCD display).  
Play of the file will continue to repeat until this button is pressed again and the RPT disappears from the LCD display.
- ※ In case of playing MP3 file, when the RPT button is pressed and held longer than 2 seconds, the RPT mark will blink on the LCD display and play all files in the selected directory and will be repeated until the directory repeat mode is cancelled by pressing the repeat button again or by activating the scan or random functions (RPT mark will disappear from LCD display).

### (8) Random play selector (RDM)

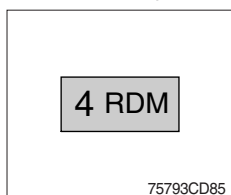


- ① During USB play, press RDM button to play the files on the USB in a random shuffled order (RDM will appear on the LCD display). The file select function will also select file in the random order instead of the normal process.

The random play mode can be cancelled by this button again.


- ※ In case of MP3 file, when the random button is pressed and held longer than 2 seconds, the RDM mark will blink on the LCD display and play all files in directory randomly until the directory random mode is cancelled by pressing the random button again or by activating the scan or repeat functions (RDM mark will disappear from LCD display).

### (9) Directory down

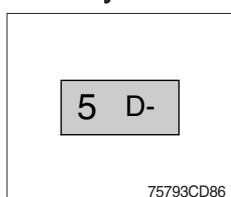

- ① Press D- button briefly while playing MP3. The previous directory is located each time you press this button.


### (10) Directory up

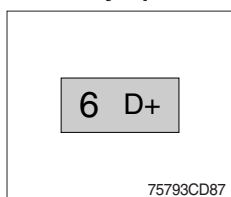

- ① Press D+ button briefly while playing MP3 . The next directory is located each time you press this button.
- ※ If the MP3 file does not have a directory, the unit play MP3 at 10-file intervals.
- ※ If any MP3 file does not exist in USB, this button can not operate.

#### 4) SEAT (standard)

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

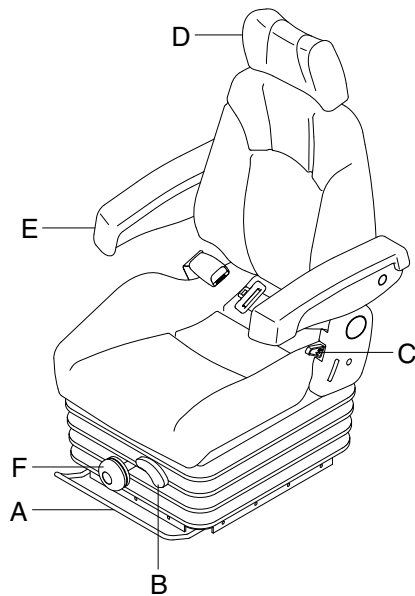

2209S3CD54

##### (1) Horizontal adjustment (A)

- ① Pull lever A to adjust seat forward or backward.
- ② The seat can be moved forward and backward over 169 mm (6.7") in 13 steps.

##### (2) Tilt adjustment (B)

Pull or push lever B to adjust seat cushion upward or downward.

##### (3) Adjustable Backrest

Pull lever C to adjust seat backrest.

##### (4) Arm rest adjustment (E)

This can be adjusted by turning the knob E.

##### (5) Head rest adjustment (D)

This is adjustable vertically to fit operator's requirements, over a 75 mm (3.0") height range and 79.5° angle.



##### (6) Weight adjustment (F)

Adjust the handle to the operator's weight (50~130 kg).

- ▲ Always check the condition of the seat belt and mounting hardware before operating the machine.
- ▲ Replace the seat belt at least once every three years, regardless of appearance.

## 5) SEAT (heated, option)

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

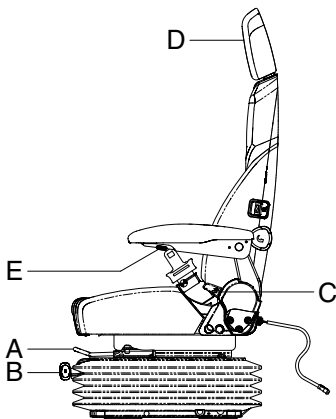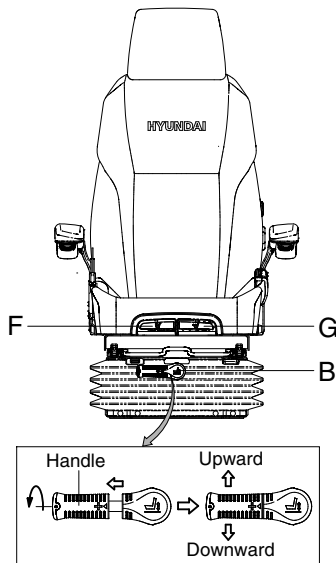

21093CD55

### (1) Forward/Backward adjustment (A)

- ① Pull lever A to adjust seat forward or backward.
- ② The seat can be moved forward and backward over 140 mm (5.5") in 13 steps.

### (2) Height/weight adjustment (B)

- ① Turn the handle to adjust seat upward or downward
  - Turn to clockwise, the seat is moved to upward and the weight is increased.
  - If it is turned to counterclockwise, the seat is moved to downward and the weight is decreased.

#### ② Method of changing direction (up/down)

- First, pull the handle to outside.
- Second, rotate 180° and release the handle.

### (3) Reclining adjustment (C)

Pull lever C to adjust seat back rest.

### (4) Arm rest adjustment (E)

This can be adjusted by pushing the button E to right and left.

### (5) Head rest adjustment (D)

This is adjustable vertically to fit operator's requirements over 60 mm (2.4").

### (6) Seat cushion tilt adjustment (F)


Pull lever F to adjust seat cushion tilting angle.

### (7) Seat cushion length adjustment (G)

- ▲ Pull lever G to adjust seat cushion forward or backward.

- ▲ Always check the condition of the seat belt and mounting hardware before operating the machine. Replace the seat belt at least once every three years, regardless of appearance.

## 6) FUSE & RELAY BOX

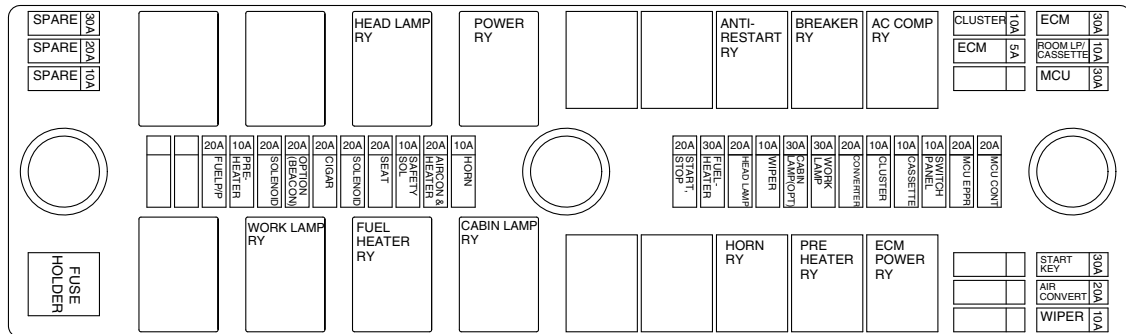


21093CD56

- (1) The fuses protect the electrical parts and wiring from burning out.
- (2) The fuse box cover indicates the capacity of each fuse and circuit it protects.

※ **Replace a fuse with another of the same capacity.**

▲ **Before replacing a fuse, be sure to turn OFF the starting switch.**

## 7) MCU

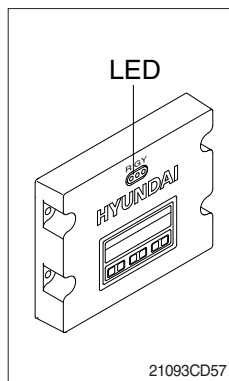


- (1) To match the pump absorption torque with the engine torque, MCU varies EPPR valve output pressure, which control pump discharge amount whenever feedbacked engine speed drops under the reference rpm of each mode set.

- (2) Three LED lamps on the MCU display as below.

LED lamp	Trouble	Service
G is turned ON	Normal	-
G and R are turned ON	Trouble on MCU	• Change the MCU
G and Y are turned ON	Trouble on serial communication line	• Check if serial communication lines between controller and cluster are disconnected
Three LED are turned OFF	Trouble on MCU power	• Check if the input power wire (24 V, GND) of controller is disconnected • Check the fuse


G : green, R : red, Y : yellow

## 8) SERVICE METER

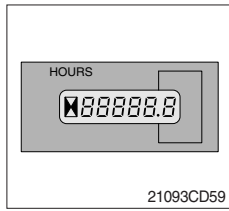


- (1) This meter shows the total operation hours of the machine.
- (2) Always ensure the operating condition of the meter during the machine operation. Inspect and service the machine based on hours as indicated in chapter 6, maintenance.

## 9) RS232 SERVICE SOCKET

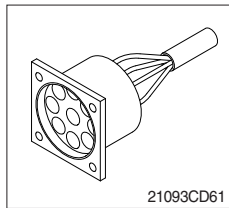


- (1) MCU communicates the machine data with Laptop computer through RS232 service socket.

## 10) UPPER WINDSHIELD

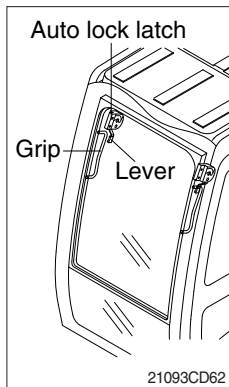

- (1) Perform the following procedure in order to open the upper windshield.
  - ① Pull both levers with hold both grips that are located at the top of the windshield frame and push the windshield upward.
  - ② Hold both grips and back into the lock position until auto lock latch is engaged, then release the lever locked position.

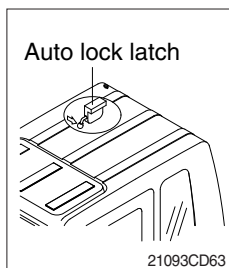

- (2) Perform the following procedure in order to close the upper windshield.
  - ① Pull the lever of the auto lock latch in order to release the auto lock latch.
  - ② Reverse above step ① and ② in order to close the upper windshield.

## 1. SUGGESTION FOR NEW MACHINE

- 1) It takes about 100 operation hours to enhance its designed performance.
- 2) Operate according to below three steps and avoid excessive operation for the initial 100 hours.

Service meter	Load
Until 10 hours	About 60 %
Until 100 hours	About 80 %
After 100 hours	100 %


※ **Excessive operation may deteriorate the potential performance of machine and shorten lifetime of the machine.**

### 3) Be careful during the initial 100 hours operation

- (1) Check daily for the level and leakage of coolant, engine oil, hydraulic oil and fuel.
- (2) Check regularly the lubrication and fill grease daily all lubrication points.
- (3) Tighten bolts.
- (4) Warm up the machine fully before operation.
- (5) Check the gauges occasionally during the operation.
- (6) Check if the machine is operating normally during operation.


### 4) Replace followings after initial 50 or 250 hours of operation

Checking items	Hours
Engine oil	50
Engine oil filter element	
Fuel filter	
Prefilter	
Hydraulic oil return filter element	250
Hydraulic oil tank drain filter cartridge	
Line filter element	

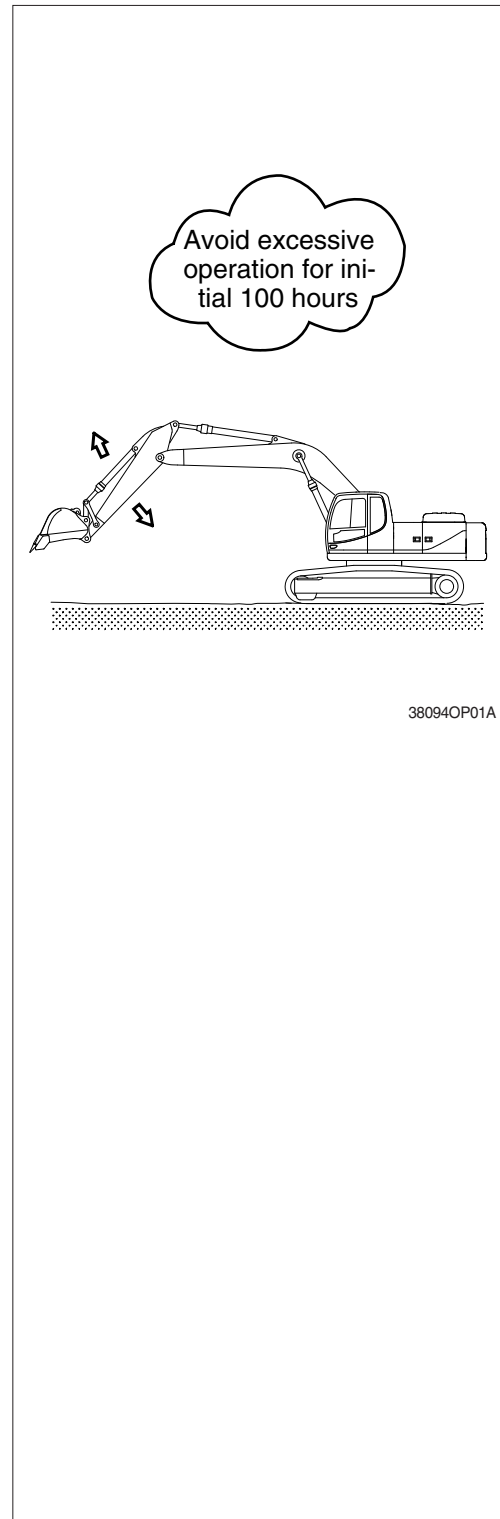

## 2. CHECK BEFORE STARTING THE ENGINE

- 1) Look around the machine and under the machine to check for loosen nut or bolts, collection of dirt, or leakage of oil, fuel or coolant and check the condition of the work equipment and hydraulic system. Check also loosen wiring, and collection of dust at places which reach high temperature.  
※ **Refer to the daily check on the chapter 6, maintenance.**
- 2) Adjust seat to fit the contours of the operator's body for the pleasant operation.
- 3) Adjust the rear view mirror.

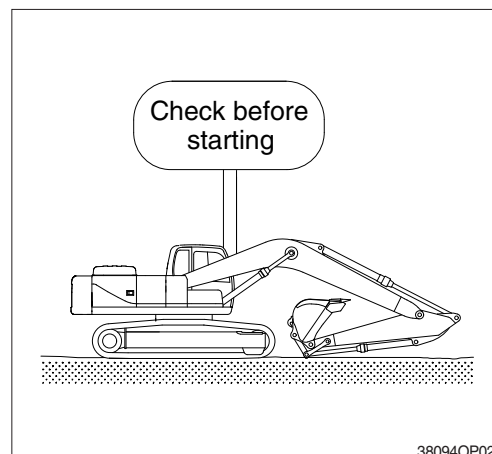




### 3. STARTING AND STOP THE ENGINE (CLUSTER TYPE 1)


#### 1) CHECK INDICATOR LIGHTS

- (1) Check if all the operating levers are in the neutral position.
- (2) Turn the starting switch to the ON position.  
Buzzer sounding for 4 seconds with HYUNDAI logo on cluster.
  - ※ If the ESL mode is set to the enable, enter the password to start engine.
  - ※ If the password has failed 5 times, please wait 30 minutes before re-attempting to enter the password.
  - ※ Refer to page 3-17 for ESL mode.
- (3) After initialization of cluster, the operating screen is displayed on LCD (1).  
Also, self-diagnostic function is carried out.

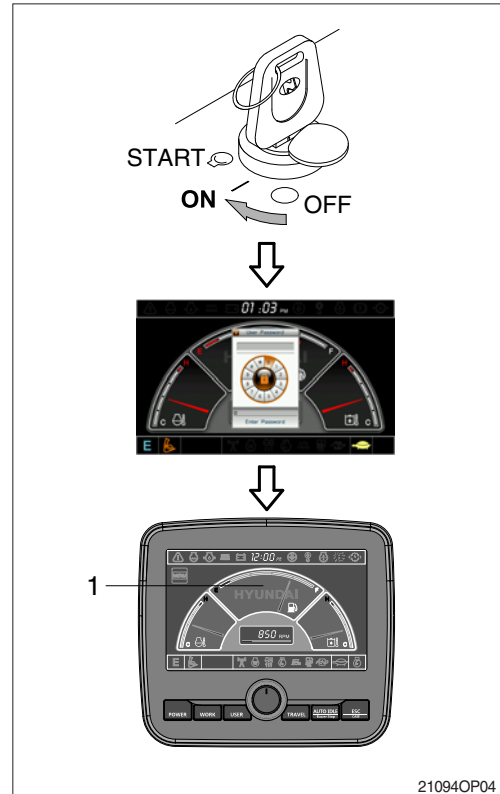

#### 2) STARTING ENGINE IN NORMAL TEMPERATURE


- ※ Sound the horn to warn the surroundings after checking if personnel or obstacles are in the area.
- (1) Turn the accel dial switch to low idle position.
  - (2) Turn the starting switch to START position to start the engine.
    - ※ Do not hold the starting switch in the START position for longer than 20 seconds.  
The start system may be seriously damaged.
    - ※ If the engine does not start, allow the stator to cool for about 2 minutes before re-attempting to start the engine again.
  - (3) Release the starting switch instantly after the engine starts to avoid possible damage to the starting motor.

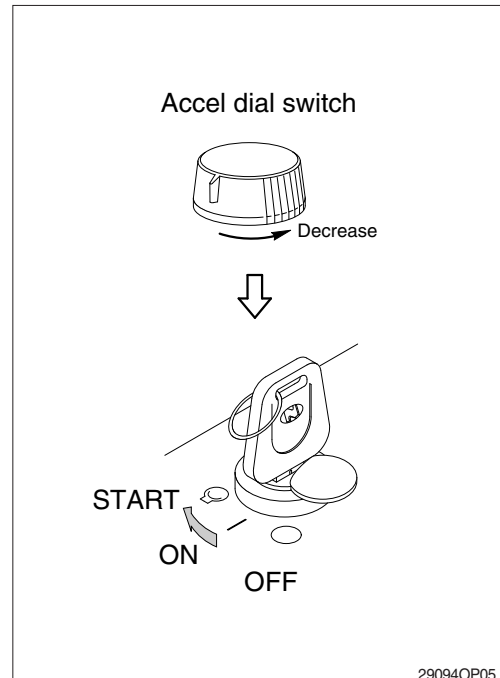

### 3) STARTING ENGINE IN COLD WEATHER

- ※ Sound horn to warn surroundings after checking if there are obstacles in the area.
- ※ Replace the engine oil and fuel referring to recommended oils at page 2-18.
- ※ Fill the anti-freeze solution to the coolant as required.
- ※ If you turn ON the starting switch, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature.

- (1) Check if all the levers are in the neutral position.
  - (2) Turn the accel dial switch to low idle position.
  - (3) Turn the starting switch to the ON position, and wait 1~2 minutes. More time may take according to ambient temperature.
  - (4) Wait for five minutes to warm up the engine after the preheating pilot lamp off, and then turn the starting switch to the START position to start the engine.
- ※ If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (5) Release the starting switch immediately after starting engine.
  - (6) If the temperature of the coolant is lower than 30°C the warming up automatically starts.
- ※ Do not operate the working devices, or convert the operation mode into other mode during the warming up.

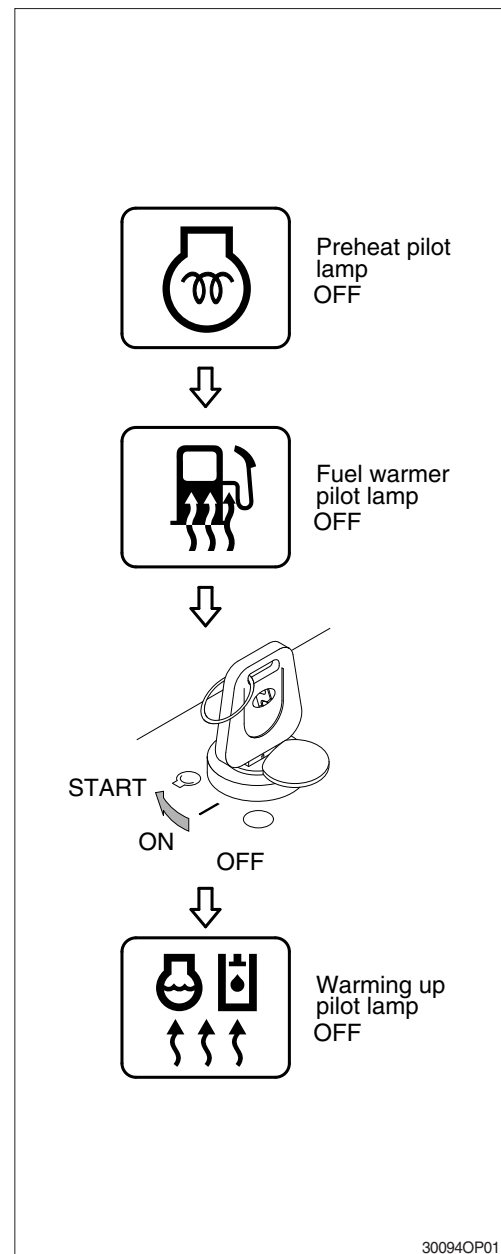


#### 4) INSPECTION AFTER ENGINE START

Inspect and confirm the following after engine starts.

- (1) Is the level gauge of hydraulic oil tank in the normal level?
- (2) Are there leakages of oil or water?
- (3) Are all the warning lamps turned OFF (1-9)?
- (4) Are the indicator of water temperature gauge (10) and hydraulic temperature gauge (11) in the operating range?
- (5) Are the engine sound and the color of exhaust gas normal?
- (6) Are the sound and vibration normal?

- ※ **Do not increase engine speed quickly after starting, it can damage engine or turbocharger.**
- ※ **If there are problems in the cluster, stop the engine immediately and correct problems as required.**

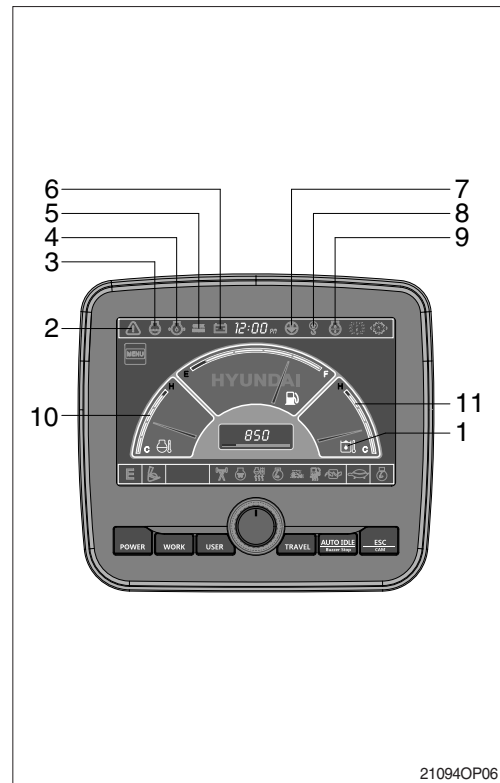


#### 5) WARMING-UP OPERATION

- ※ **The most suitable temperature for the hydraulic oil is about 50°C (122°F).**

It can cause serious trouble in the hydraulic system by sudden operation when the hydraulic oil temperature is below 25°C (77°F).


Then temperature must be raised to at least 25°C (77°F) before starting work.

- (1) Run the engine at low idle speed for 5 minutes.
  - (2) Speed up the engine by accel dial and run the engine at mid-range speed.
  - (3) Operate bucket lever for 5 minutes.
- ※ **Do not operate anything except bucket lever.**
- (4) Run the engine at the high speed and operate the bucket lever and arm lever for 5-10 minutes.
- ※ **Operate only the bucket lever and arm lever.**
- (5) This warming-up operation will be completed by operation of all cylinders several times, and operation of swing and traveling.

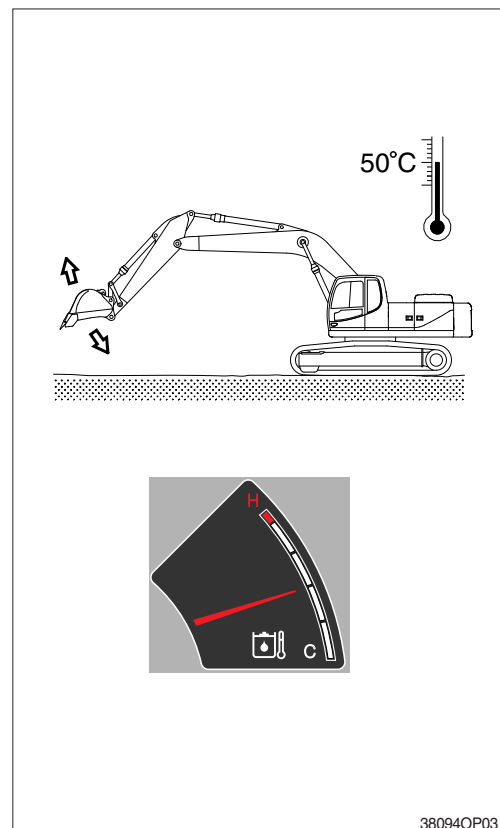

## 6) TO STOP THE ENGINE


- ※ If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.
  - ※ In particular, if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.
- (1) Down the bucket on the ground then put all the levers in the neutral position.
  - (2) Run the engine at low idle speed for about 5 minutes.
  - (3) Return the key of starting switch to the OFF position.
  - (4) Remove the key to prevent other people using the machine and LOCK safety lever.
  - (5) Lock the cab door.

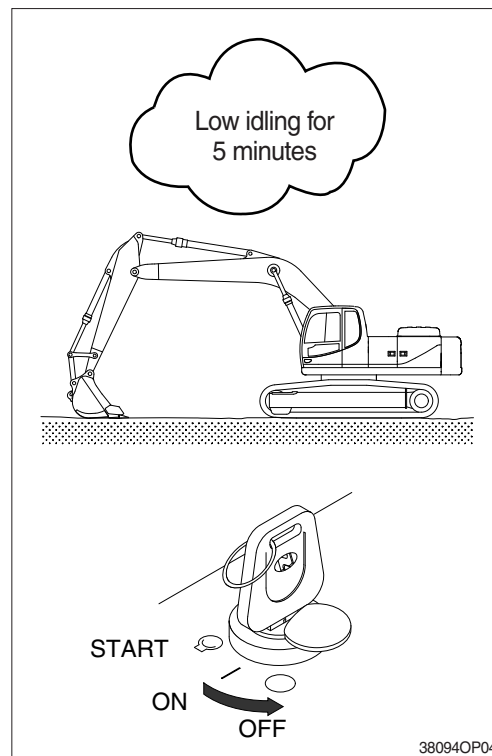

### 3. STARTING AND STOP THE ENGINE (CLUSTER TYPE 2)

#### 1) CHECK INDICATOR LIGHTS


- (1) Check if all the operating lever is on the neutral position.
- (2) Turn the starting switch to the ON position, and check following.
  - ① If all the lamps light ON and buzzer sounding for 2 seconds.
  - ② After lamp check 「1.00」, the version of cluster program, is displayed on 「LCD (3)」 for 5 seconds and the cluster returns to default.
  - ③ Only below lamps will light ON and all the other lights will turn OFF after 2 seconds.
    - Engine oil pressure warning lamp (1)
    - Battery charging warning lamp (2)

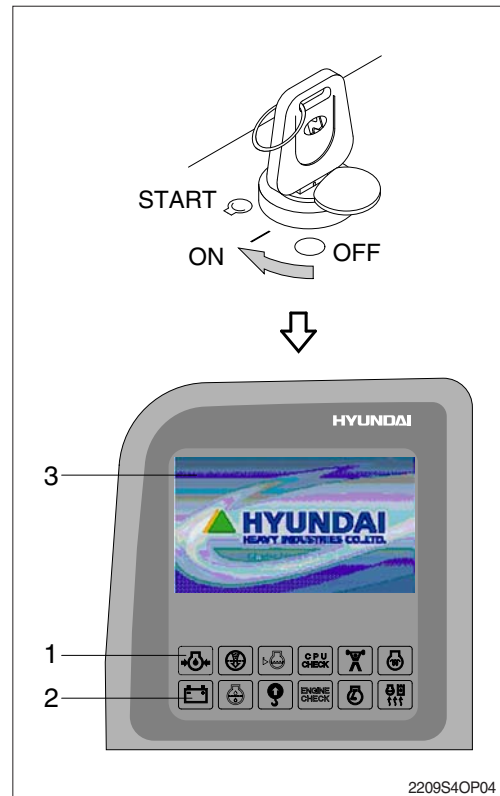

#### 2) STARTING ENGINE IN NORMAL TEMPERATURE

- ※ Sound the horn to warn the surroundings after checking if personnel or obstacles are in the area.


- (1) Turn the starting switch to START position to start the engine.
  - ※ If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (2) Release the starting switch instantly after the engine starts to avoid possible damage to the starting motor.

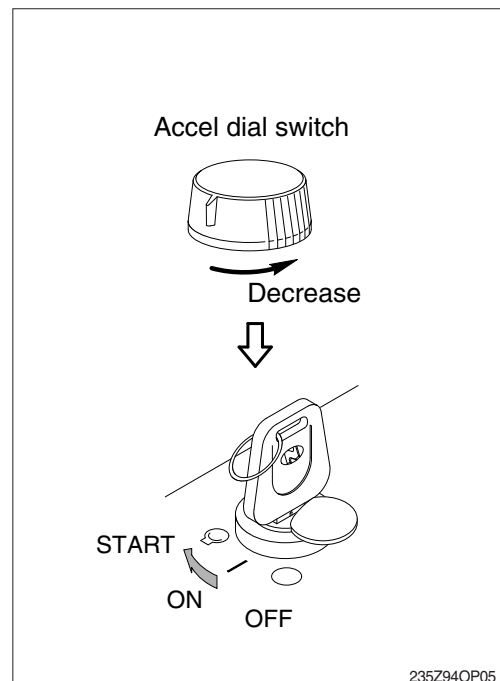

### 3) STARTING ENGINE IN COLD WEATHER

- ※ Sound horn to warn surroundings after checking if there are obstacles in the area.
- ※ Replace the engine oil and fuel referring to recommended oils at page 2-18.
- ※ Fill the anti-freeze solution to the coolant as required.
- ※ If you turn ON the starting switch, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature.

- (1) Check if all the levers are in the neutral position.
  - (2) Turn the accel dial switch to low idle position.
  - (3) Turn the starting switch to the ON position, and wait 1~2 minutes. More time may take according to ambient temperature.
  - (4) Wait for five minutes to warm up the engine after the preheating pilot lamp off, and then turn the starting switch to the START position to start the engine.
- ※ If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (5) Release the starting switch immediately after starting engine.
  - (6) If the temperature of the coolant is lower than 30°C the warming up automatically starts.
- ※ Do not operate the working devices, or convert the operation mode into other mode during the warming up.

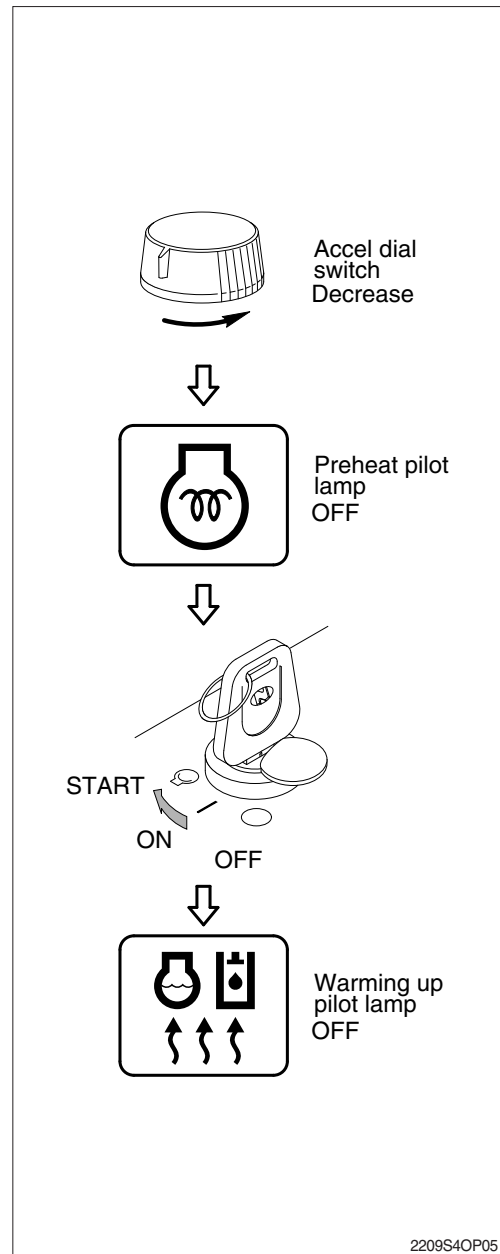


#### 4) INSPECTION AFTER ENGINE START

Inspect and confirm the following after engine starts.

- (1) Is the level gauge of hydraulic oil tank in the normal level?
- (2) Are there leakages of oil or water?
- (3) Are all the warning lamps OFF (1-6)?
- (4) Is the indicator of water temperature gauge (7) and hydraulic temperature gauge (8) in the green zone?
- (5) Is the engine sound and the color of exhaust gas normal?
- (6) Are the sound and vibration normal?

- ※ **Do not increase engine speed quickly after starting, it can damage engine or turbocharger.**
- ※ **If there are problems in the control panel, stop the engine immediately and correct problem as required.**

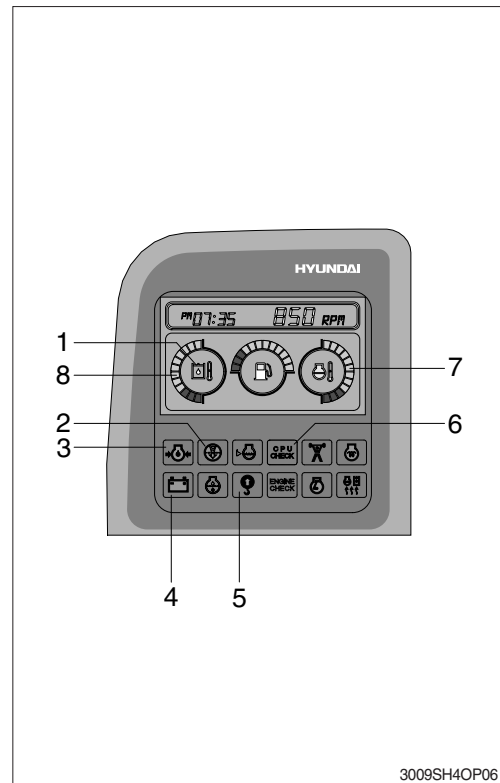


## 5) WARMING-UP OPERATION

※ The most suitable temperature for the hydraulic oil is about 50°C (122°F).

It can cause serious trouble in the hydraulic system by sudden operation when the hydraulic oil temperature is below 25°C (77°F).

Then temperature must be raised to at least 25°C (77°F) before starting work.

- (1) Run the engine at low idling for 5 minutes.
- (2) Speed up the idling and run the engine at mid-range speed.
- (3) Operate bucket lever for 5 minutes.  
※ **Do not operate anything except bucket lever.**
- (4) Run the engine at the high speed and operate the bucket lever and arm lever for 5-10 minutes.  
※ **Operate only the bucket lever and arm lever.**
- (5) This warming-up operation will be completed by operation of all cylinders several times, and operation of swing and traveling.  
※ **Increase the warming-up operation during winter.**

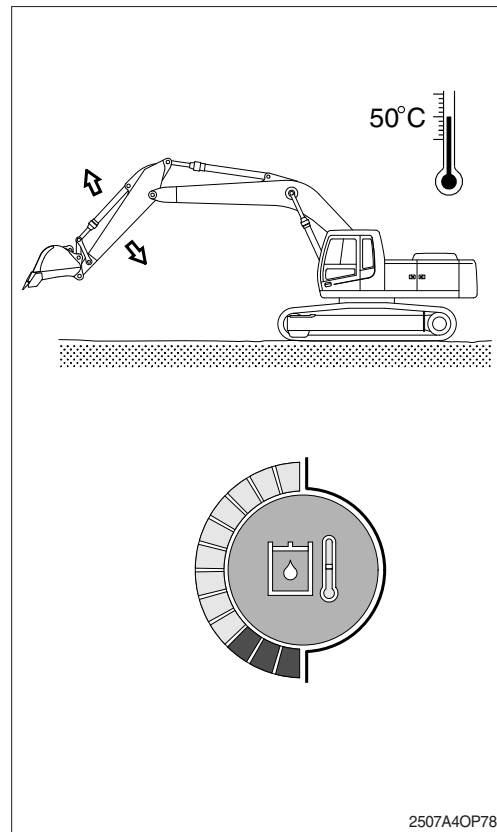


## 6) TO STOP THE ENGINE

※ If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.

※ In particularly if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.

- (1) Down the bucket on the ground then put all the levers in the neutral position.
- (2) Run the engine at low idling speed for about 5 minutes.
- (3) Return the key of starting switch to the OFF position.
- (4) Remove the key to prevent other people using the machine and LOCK safety lever.
- (5) Lock the cab door.

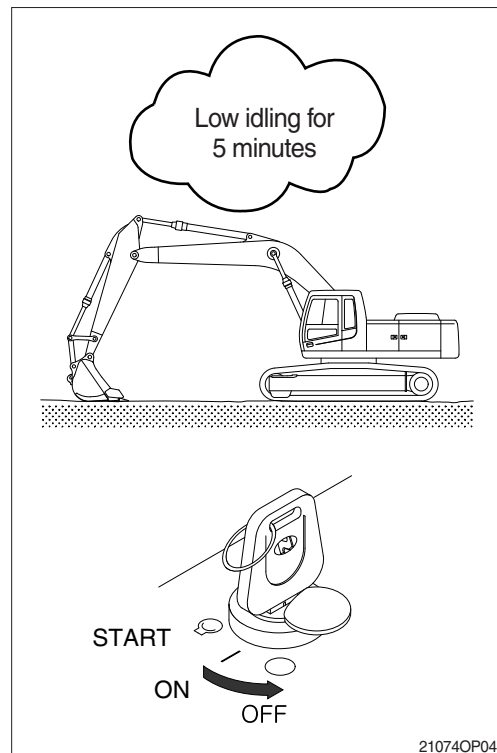



## 4. MODE SELECTION SYSTEM (CLUSTER TYPE 1)

### 1) STRUCTURE OF MECHATRONICS SYSTEM

CAPO, Computer Aided Power Optimization system, is the name of mode selection system developed by Hyundai.

※ Please refer to chapter 3, cluster for below modes setting.

#### (1) Power mode

Power mode designed for various work loads supports high performance and reduces fuel consumption.

- P mode : Heavy duty power
- S mode : Standard power
- E mode : Economy power

#### (2) Work mode

One of the two work modes can be selected for the optimal work condition of the machine operation.

##### ① General work mode (bucket)

When key switch is turned ON, this mode is selected automatically.

##### ② Work tool mode (breaker, crusher)

It controls the pump flow and system pressure for the optimal operation of breaker or crusher.

#### (3) User mode

① User mode is useful for setting the user preferable power quickly.

(engine speed, power shift and idle speed)

② There are two methods for use of user mode.

##### a. In operation screen


User mode switch is used to memorize the current machine operating status and activate the memorized user mode.

Refer to page 3-10.

##### b. In menu


Engine high idle rpm, auto idle rpm and pump torque (power shift) can be modulated and memorized separately in menu status.

- Each memory mode has a initial set which are mid-range of max engine speed, power shift and auto idle speed.

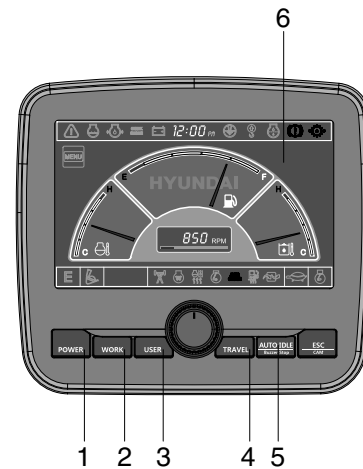

21094OP10

- 1 Power mode switch
- 2 Work mode switch
- 3 User mode switch
- 4 Travel mode switch
- 5 Auto idle mode switch
- 6 LCD

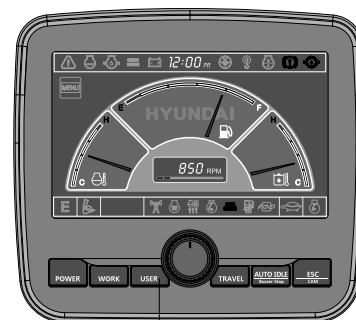

User mode switch


21094OP11

- High idle rpm, auto idle rpm and EPPR pressure can be adjusted and memorized in the U-mode.

※ Refer to the page 3-12 for setting the user mode (available on U mode only).



- LCD segment vs parameter setting

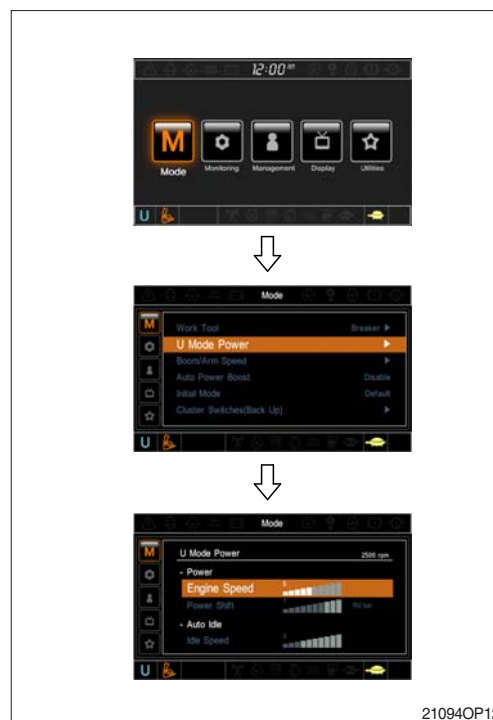Step ( ■ )	Engine speed (rpm)	Idle speed (rpm)	Power shift(bar)
1	1450	900	0
2	1500	950 (low idle)	3
3	1550	1000	6
4	1600	1050	9
5	1650	1100 (decel rpm)	12
6	1700	1150	16
7	1750	1200	20
8	1800	1250	26
9	1850	1300	32
10	1900	1350	38



21094OP12

#### (4) Travel mode

-  : Low speed traveling.
-  : High speed traveling.

#### (5) Auto idle mode

- Pilot lamp ON : Auto idle function is activated.
- Pilot lamp OFF : Auto idle function is canceled.

## (6) Monitoring system

Information of machine performance as monitored by the MCU can be displayed on the LCD. Refer to the page 3-11.

## (7) Self diagnostic system


### MCU (Machine Control Unit)

The MCU diagnoses machine status and problems and displays fault code in the cluster (fault code detected by MCU is composed of HCESPN and FMI).

※ Refer to the page 3-11 for LCD display.

## (8) Anti-restart system

The system protects the starter from inadvertent restarting after the engine is already operational.

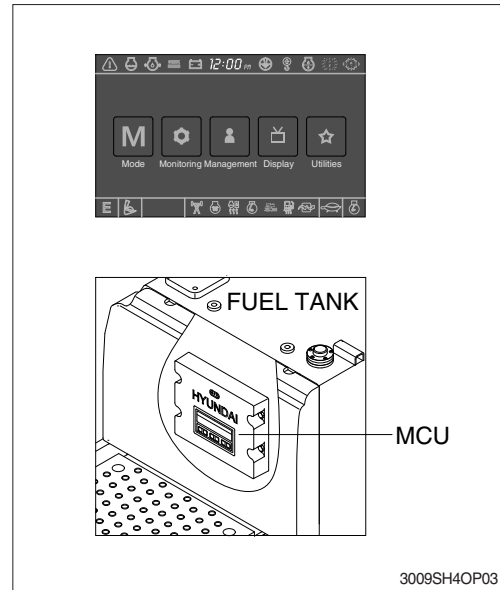

## 2) HOW TO OPERATE MODE SELECTION SYSTEM


### (1) When start key switch is turned ON

- ① When start key switch is turned on, the cluster turns on and buzzer sounds for 4 seconds. And then main information as gauges and engine speed are displayed on LCD.
- ② Initial default mode settings are displayed in the cluster.

Mode		Status
Power mode	E	ON
Work mode		ON
Travel mode	Low ()	ON
Auto idle		ON


※ These setting can be changed at U mode.

- ③ Self-diagnostic function can be carried out from this point.

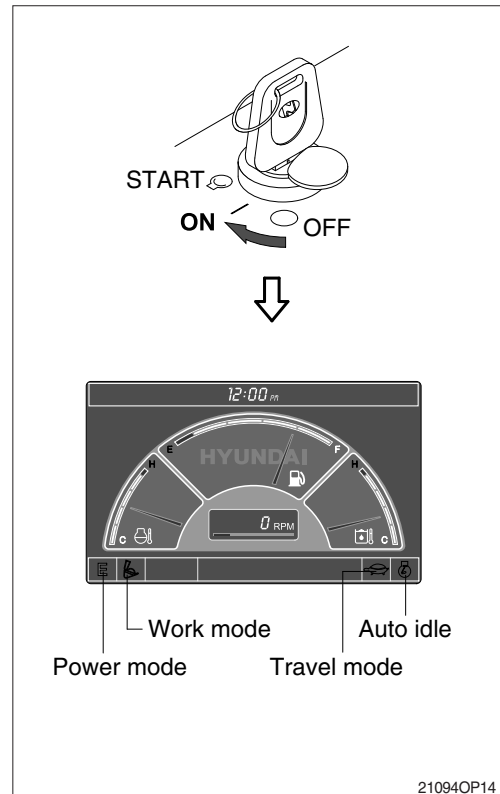

## (2) After engine start

- ① When the engine is started, rpm display indicates low idle,  $950 \pm 100$  rpm.
- ② If coolant temperature is below  $30^{\circ}\text{C}$ , the warming up pilot lamp lights ON and after 4 seconds the engine speed increases to  $1100 \pm 100$  rpm automatically to warm up the machine.
  - After 2-3 minutes, you can select any mode depending on job requirement.

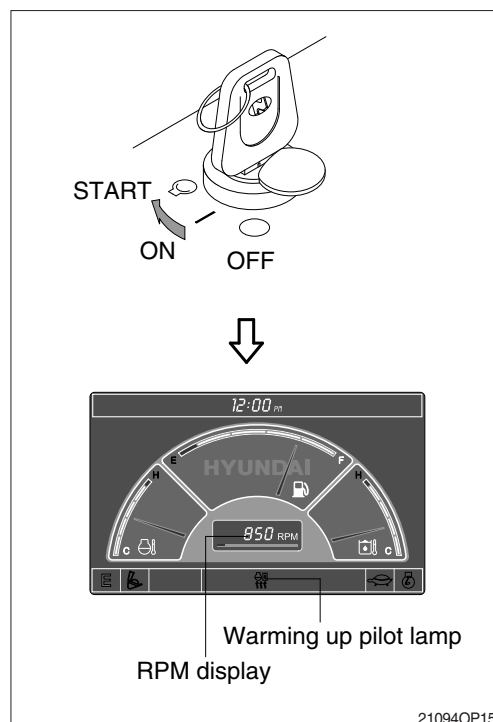


## 3) SELECTION OF POWER MODE

### (1) E mode

The accel dial is set 10 and the auto idle mode is canceled.

Engine rpm	Effect
$1600 \pm 50$	Variable power control in proportion to lever stroke (improvement in fuel efficiency) ※ Same power as S mode in full lever operation.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

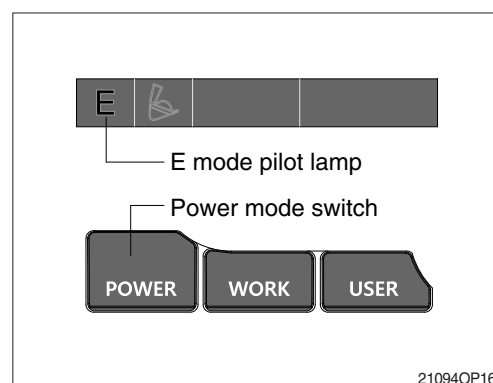


### (2) S mode

The accel dial is set 10 and the auto idle mode is canceled.

Engine rpm	Effect
$1700 \pm 50$	Standard power

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

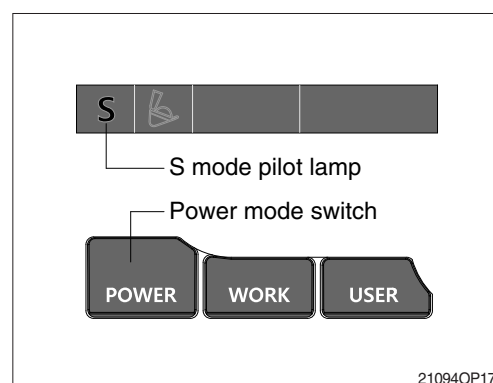


### (3) P mode

The accel dial is set 10 and the auto idle mode is canceled.

Engine rpm	Effect
1800 ± 50	Approximately 120 % of power and speed available than S mode.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

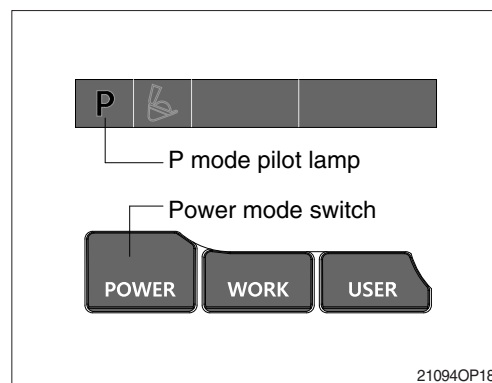

## 4. MODE SELECTION SYSTEM (CLUSTER TYPE 2)

### 1) STRUCTURE OF CAPO SYSTEM

CAPO, Computer Aided Power Optimization system, is the name of mode selection system developed by Hyundai.

#### (1) Work mode

2 work modes can be selected for the optimal work speed of the machine operation.

##### ① Heavy duty work mode

The heavy duty work solenoid is deactivated to make the arm operation speed faster.

##### ② General work mode

When key switch is turned ON, this mode is selected automatically and swing operation speed is faster than heavy duty work mode.

#### (2) Power mode

Power mode designed for various work loads maintains high performance and reduces fuel consumption.



- H mode : High power
- S mode : Standard power

#### (3) User mode

- M : Maximum power
- U : You can change the engine and pump power and memorize it for your pre-ference

### How to modulate the memory set

- ① Each memory mode has a initial set which are mid-range of max engine speed, auto decel rpm, and EPPR valve input current.

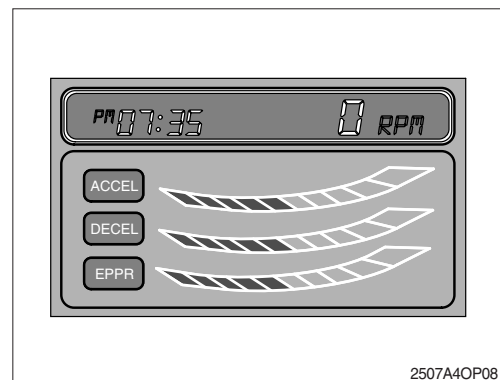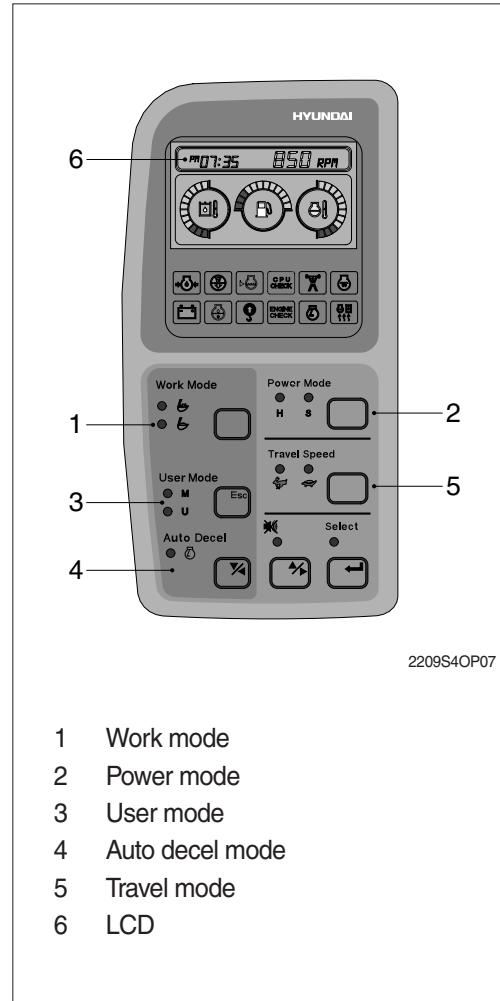

- ② High idle rpm, auto decel rpm, EPPR pressure can be modulated and memorized separately in the U-mode.

※ Refer to the page 3-29 for set of user mode.



• LCD segment vs parameter setting


Step ( )	ACCEL (rpm)	Idle speed (rpm)	Power shift (mA)
1	1450	900	150
2	1500	950 (low idle)	200
3	1550	1000	250
4	1600	1050	300
5	1650	1100 (decel rpm)	350
6	1700	1150	400
7	1750	1200	450
8	1800	1250	500
9	1850	1300	550
10	1900	1350	600

(4) Auto decel mode

Engine quick deceleration.

(5) Travel mode

-  : Low speed traveling.  
 : High speed traveling.

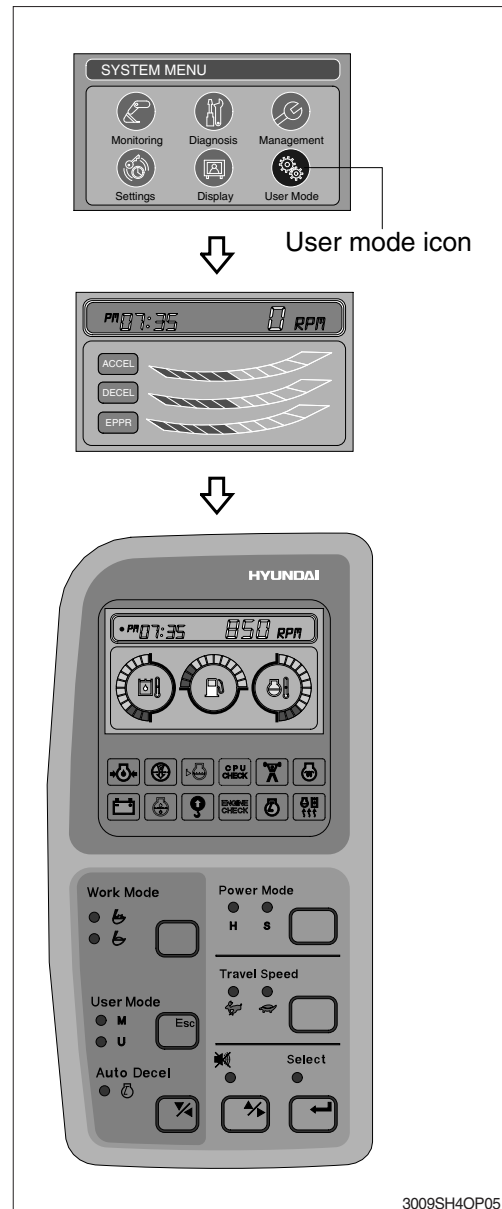

## (6) Monitoring system

Information of machine performance as monitored by the MCU controller can be displayed on the **LCD**. Refer to the page 3-26.

## (7) Self diagnostic system

### MCU controller


The MCU controller diagnoses problems in the CAPO system caused by electric parts' malfunction and by open or short circuit, which are displayed on the **LCD** as error codes(2 digit).

※ **Consult hyundai or huyn dai dealer for details.**

※ **Refer to the page 3-26 for LCD display.**

## (8) Anti-restart system

The system protects the starter from inadvertent restarting after the engine is already operational.

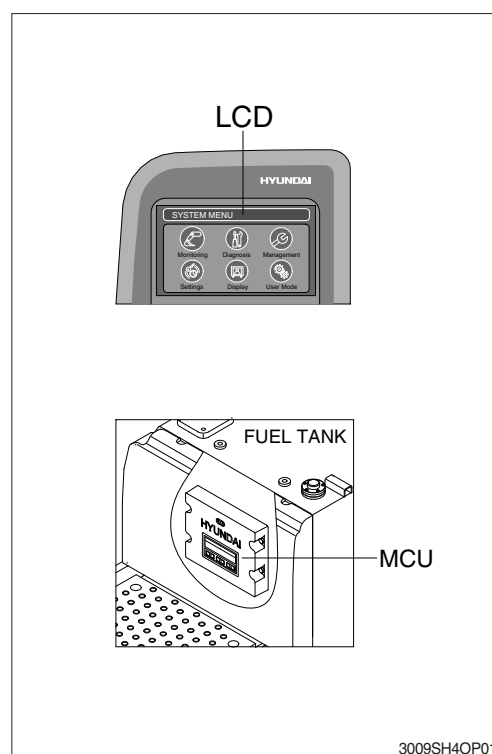

## 2) HOW TO OPERATE MODE SELECTION SYSTEM

### (1) When start key is turned ON



- ① When start key is turned ON, all illumination lamps are ON and all lamps are OFF automatically after 5 seconds. But a battery charging warning lamp and an engine oil pressure warning lamp keep turned ON until engine starting.
- ② After lamp check 「1.00」, the version of cluster program, is displayed on **LCD** for 2 seconds.
- ③ After the version of program is displayed, the cluster returns to default. Exactly engine rpm, battery charging warning lamp and engine oil pressure warning lamp are turned ON and S mode, auto decel, low travel speed (Turtle mark) are displayed.
- ④ In default condition self-diagnostic function including trouble detecting of electric system can be carried out.





### (1) After engine start

- ① When the engine is started, three lamps are ON as below.

Mode		Status
Power mode		ON
Work mode	S	ON
Travel mode	Low (  )	ON
Auto decel mode		ON

- In this condition, tachometer indicates low idle,  $950 \pm 100$  rpm.
  - If coolant temperature is below  $30^{\circ}\text{C}$ , after 10 seconds the engine speed increases to  $1100 \pm 100$  rpm automatically to warm up the machine.
  - After 2-3 minutes, you can select any mode depending on job requirement.
- ② Self-diagnostic function can be carried out the same as start key is ON.

※ Refer to the page 3-27 for details.



3009SH4OP08


## 3) SELECTION OF POWER MODE

### (1) S mode

When the accel dial is at setting 10 and auto decel mode is cancelled and S mode is selected.

Engine rpm	Effect
$1600 \pm 50$	Same power as <b>non</b> mode type machine.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

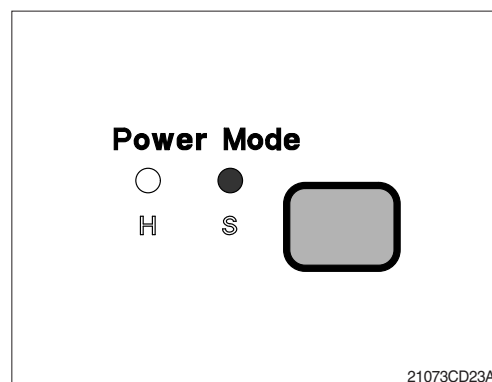


21073CD23A

### (2) H mode

When the accel dial is at setting 10 and auto decel mode is cancelled and H mode is selected.

Engine rpm	Effect
$1700 \pm 50$	Approximately 110% of power and speed available than <b>non</b> mode type machine or <b>S</b> mode.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

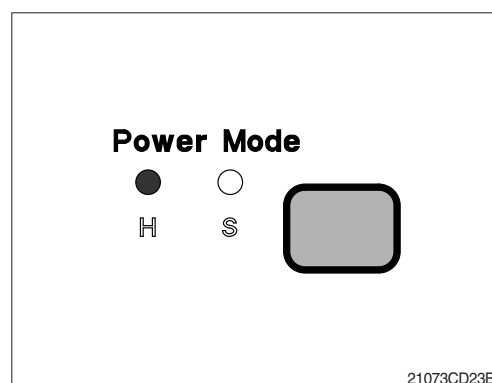


21073CD23B

### (3) M mode

When the accel dial is at setting 10 and auto decel mode is cancelled and H mode is selected.

Engine rpm	Effect
1800 ± 50	Approximately 130% of power and speed available than <b>non</b> mode type machine or <b>S</b> mode.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

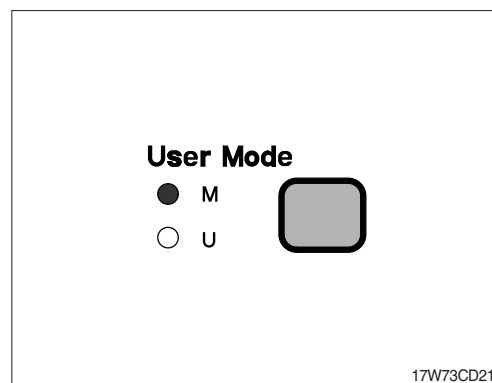


## 5. OPERATION OF THE WORKING DEVICE

※ **Confirm the operation of control lever and working device.**


- 1) Left control lever controls arm and swing.
- 2) Right control lever controls boom and bucket.
- 3) When you release the control lever, control lever returns to neutral position automatically.

※ **When operating swing, consider the swing distance by inertia.**

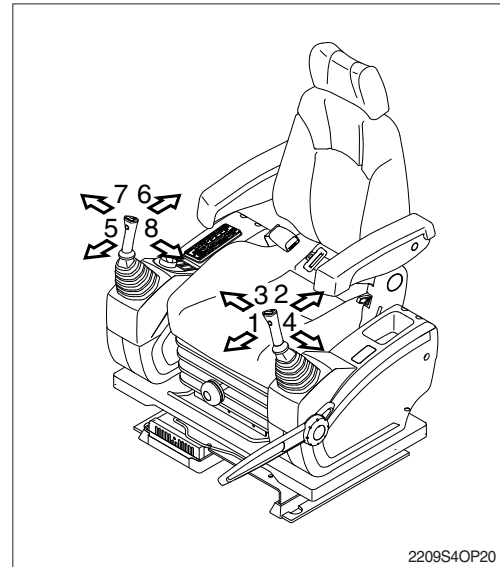


※ **Left control lever**

- 1 Arm roll-out
- 2 Arm roll-in
- 3 Swing right
- 4 Swing left

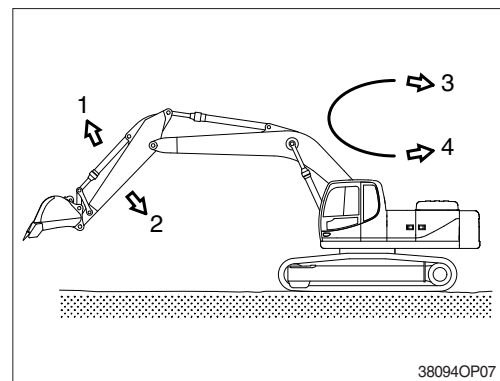

※ **Right control lever**

- 5 Boom lower
- 6 Boom raise
- 7 Bucket roll-out
- 8 Bucket roll-in

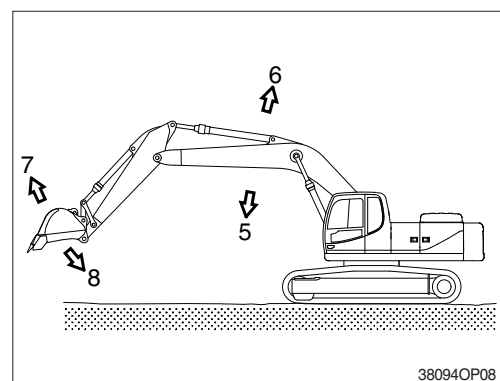

## 6. TRAVELING OF THE MACHINE

### 1) BASIC OPERATION

#### (1) Traveling position


It is the position which the traveling motor is in the rear and the working device is forward.

- ▲ **Be careful as the traveling direction will be reversed when the whole machine is swung 180 degree.**

#### (2) Traveling operation

It is possible to travel by either travel lever or pedal.


- ※ **Do not travel continuously for a long time.**
- ※ **Reduce the engine speed and travel at a low speed when traveling on uneven ground.**

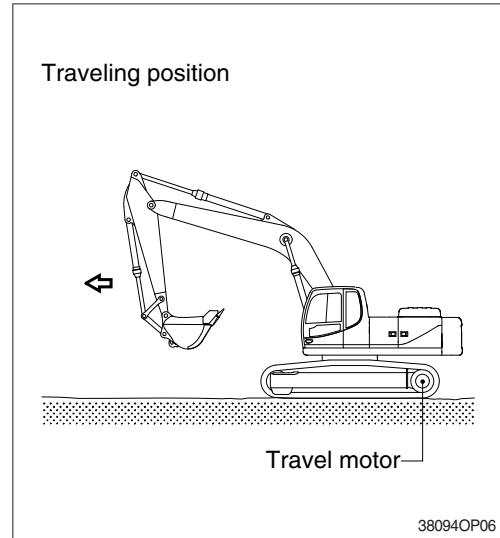

#### (3) Forward and backward traveling


When the left and right travel lever or pedal are pushed at the same time, the machine will travel forward or backward.

- ※ **The speed can be controlled by the operation stroke of lever or pedal and change of direction will be controlled by difference of the left and right stroke.**

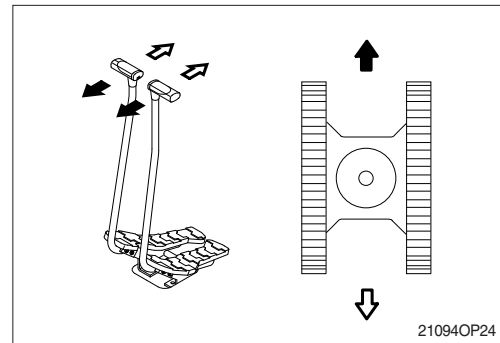


#### (4) Pivot turning

Operating only one side of lever or pedal make the change of direction possible by moving only one track.

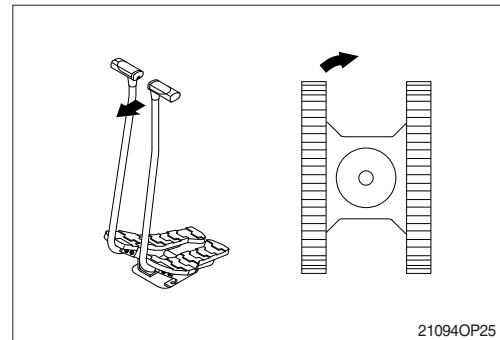


#### (5) Counter rotation

It is to change the direction at the original place by moving the right and left track. Both side of lever or pedal are operated to the other way at the same time.

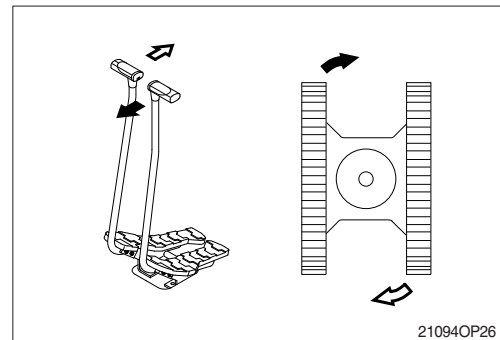


## 2) TRAVELING ON A SLOPE

- (1) Make sure that the travel lever is properly maneuvered by confirming the travel motor is in the right location.
  - (2) Lower the bucket 20 to 30 cm (1 ft) to the ground so that it can be used as a brake in an emergency.
  - (3) If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
  - (4) When parking on a slope, use the bucket as a brake and place blocks behind the tracks to prevent sliding.
- ※ **Machine cannot travel effectively on a slope when the oil temperature is low. Do the warming-up operation when it is going to travel on a slope.**
- ▲ **Be careful when working on slopes. It may cause the machine to lose its balance and turn over.**
- ▲ **Be sure to keep the travel speed switch on the LOW (turtle mark) while traveling on a slope.**

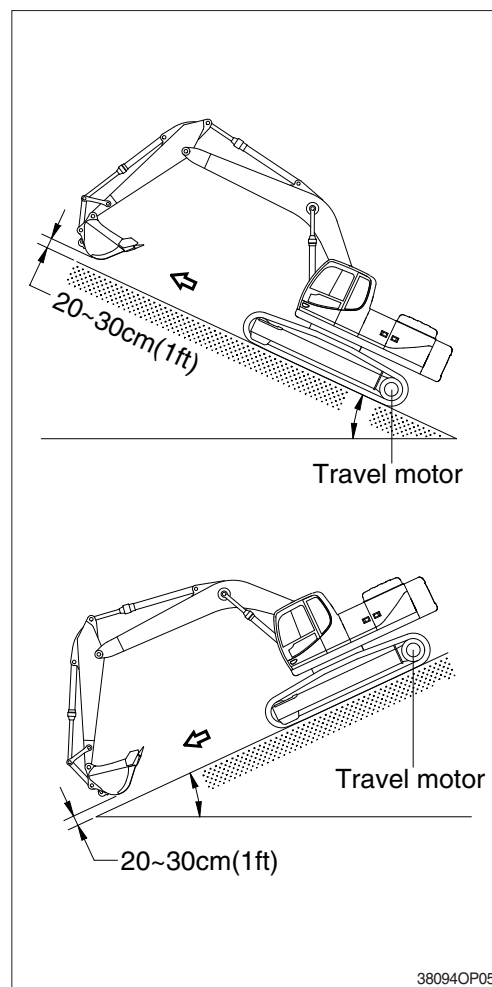

## 3) TRAVELING ON SOFT GROUND

- ※ **If possible, avoid to operate on soft ground.**
- (1) Move forward as far as machine can move.
  - (2) Take care not to go beyond the depth where towing is impossible on soft ground.
  - (3) When driving becomes impossible, lower bucket and use boom and arm to pull the machine. Operate boom, arm, and travel lever at the same time to avoid the machine sinking.

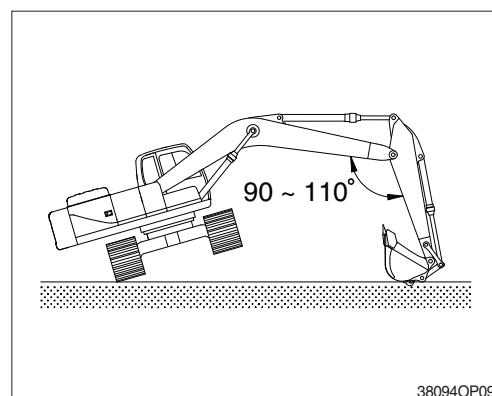


#### 4) TOWING THE MACHINE

Tow the machine as follows when it can not move on it's own.

- (1) Tow the machine by other machine after hook the wire rope to the frame as shown in picture at right.
- (2) Hook the wire rope to the frame and put a support under each part of wire rope to prevent damage.

※ **Never tow the machine using only the tie hole, because this may break.**


▲ **Make sure no personnel are standing close to the tow rope.**

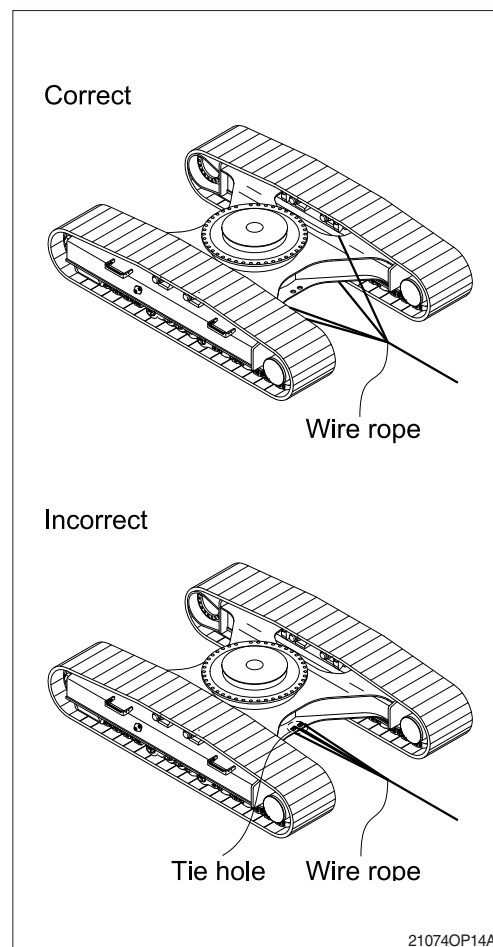

## 7. EFFICIENT WORKING METHOD


- 1) Do the digging work by arm.

Use the pulling force of arm for digging and use together with the digging force of the bucket if necessary.

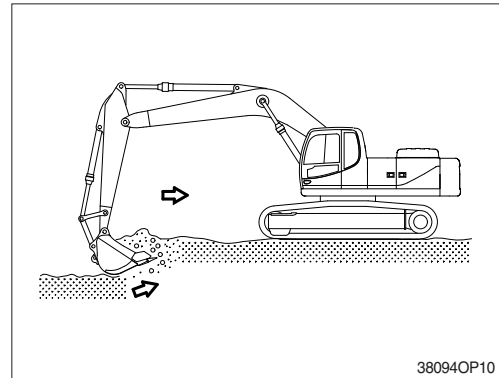


- 2) When lowering and raising the boom operate softly for the beginning and the end.


In particularly, sudden stops while lowering the boom may cause damage to the machine.

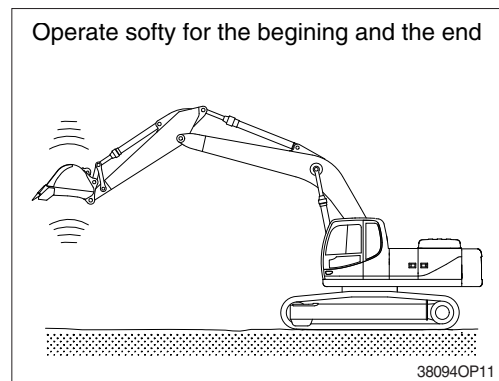


- 3) The digging resistance and wearing of tooth can be reduced by putting the end of bucket tooth to the digging direction.

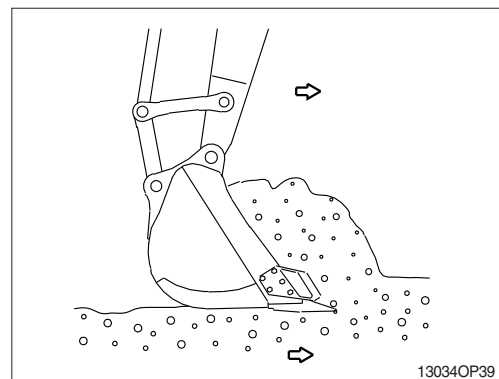


- 4) Set the tracks parallel to the line of the ditch to be excavated when digging ditch. Do not swing while digging.

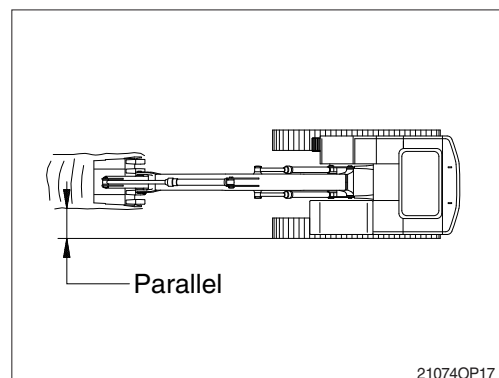

- 5) Dig slowly with keeping the angle of boom and arm, 90-110 degree when maximum digging force is required.

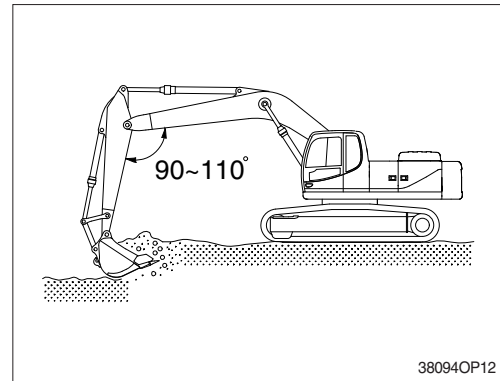


- 6) Operate leaving a small safety margin of cylinder stroke to prevent damage of cylinder when working with the machine.

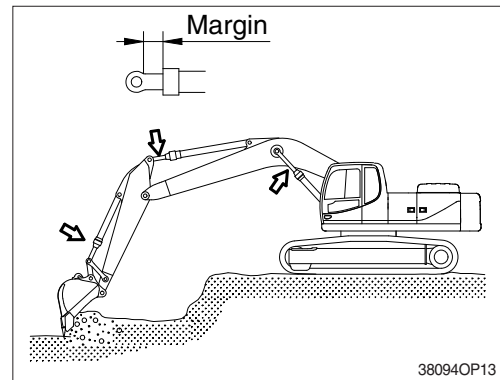


- 7) Keep the bucket to the dumping position and the arm horizontal when dumping the soil from the bucket.  
Operate bucket lever 2 or 3 times when hard to dump.

※ **Do not use the impact of bucket tooth when dumping.**

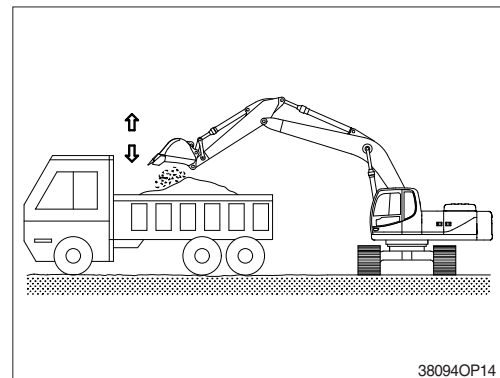


- 8) Operate stop of swing considering the swing slip distance is created by inertia after neutralizing the swing lever.

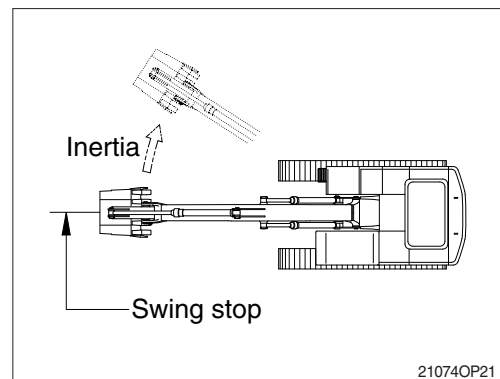





- 9) If the excavation is in an underground location or in a building, make sure that there is adequate overhead clearance and that there is adequate ventilation.

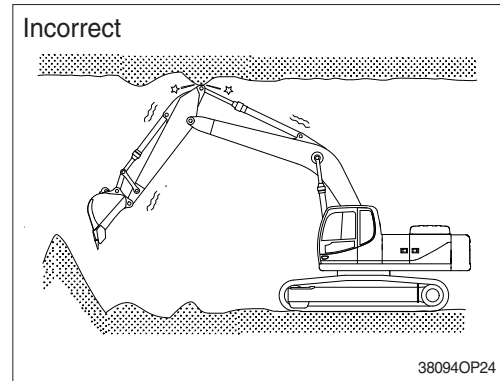

- 10) Do not use the dropping force of the work equipment for digging.  
The machine can be damaged by the impact.

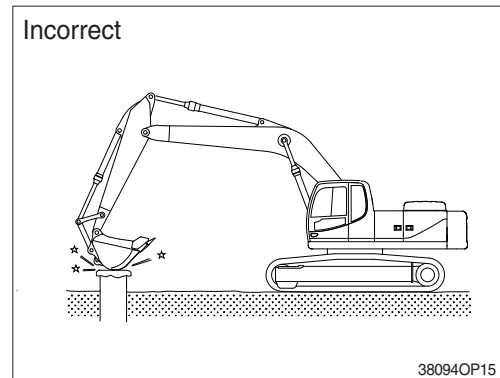

- 11) Do not use the bucket to crack hard objects like concrete or rocks.  
This may break a tooth or pin, or bend boom.

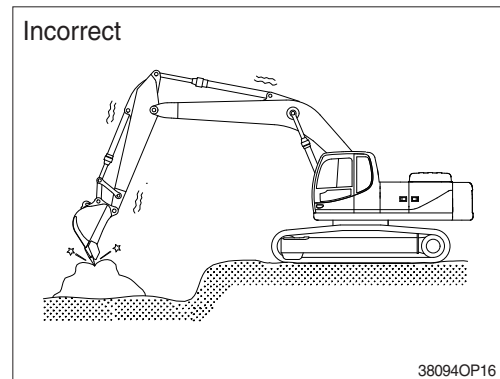

## 12) NEVER CARRY OUT EXCESSIVE OPERATIONS


Operation exceeding machine performance may result in accident or failure.

Carry out lifting operation within specified load limit.

Never carry out operations which may damage the machine such as overload or over-impact-load.

Never travel while carrying a load.

In case you need installing over load warning device for object handling procedure, please contact Hyundai distributor.

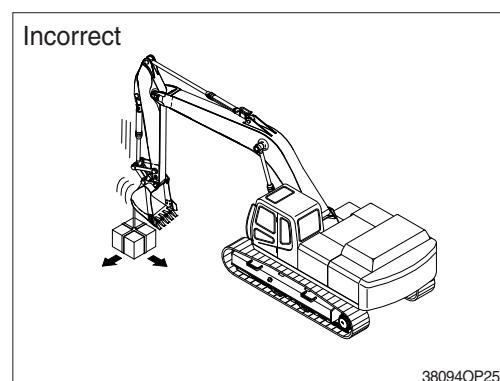

### 13) BUCKET WITH HOOK

When carrying out lifting work, the special lifting hook is necessary.

The following operations are prohibited.

- Lifting loads with a wire rope fitted around the bucket teeth.
- Lifting loads with the wire rope wrapped directly around the boom or arm.

When performing lifting operation, securely hook the wire rope onto the special lifting hook.

When performing lifting operation, never raise or lower a person.


Due to the possible danger of the load falling or of collision with the load, no persons shall be allowed in the working area.

Before performing lifting operation, designate an operation supervisor.

Always execute operation according to his instructions.

- Execute operating methods and procedures under his direction.
- Select a person responsible for signaling. Operate only on signals given by such person.


Never leave the operator's seat while lifting a load.

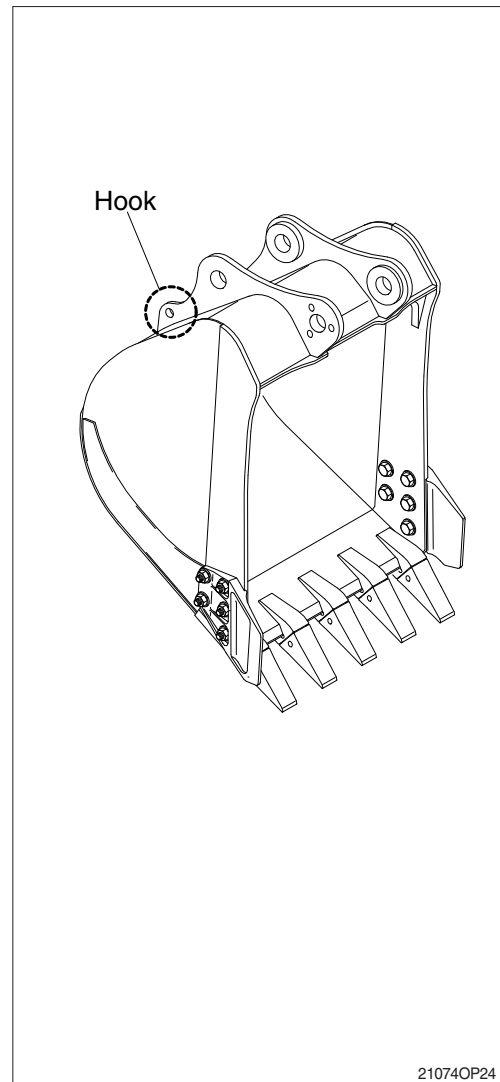

## 8. OPERATION IN THE SPECIAL WORK SITES

### 1) OPERATION THE MACHINE IN A COLD WEATHER

- (1) Use proper engine oil and fuel for the weather.
- (2) Fill the required amount of antifreeze in the coolant.
- (3) Refer to the starting engine in cold weather.  
Start the engine and extend the warming up operation.
- (4) Be sure to open the heater cock when using the heater.
- (5) Always keep the battery completely charged.  
※ **Discharged batteries will freeze more easily than fully charged.**
- (6) Clean the machine and park on the wood plates.

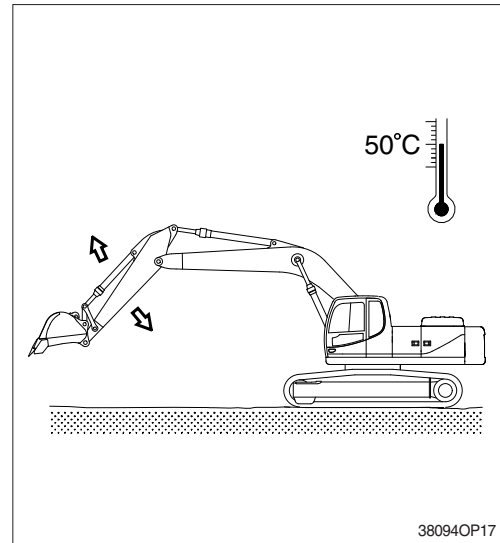

### 2) OPERATION IN SANDY OR DUSTY WORK SITES

- (1) Inspect air cleaner element frequently. Clean or replace element more frequently, if warning lamp comes ON and buzzer sounds simultaneously, regardless of inspection period.  
※ **Replace the inner and outer element after 4 times of cleaning.**
- (2) Inspect radiator, oil cooler and condenser frequently, and keep cooling fins clean.
- (3) Prevent sand or dust from getting into fuel tank and hydraulic tank during refilling.
- (4) Prevent sand or dust from penetrating into hydraulic circuit by tightly closing breather cap of hydraulic oil tank. Replace hydraulic oil filter and air breather element frequently. Also, replace the fuel filter frequently.
- (5) Keep all lubricated part, such as pins and bushings, clean at all times.
- (6) If the air conditioner and heater filters clogged, the heating or cooling capacity will drop. Clean or replace the filter element more frequently.
- (7) Clean electrical components, especially the starting motor and alternator to avoid accumulation of dust.

### **3) SEA SHORE OPERATION**

- (1) Prevent ingress of salt by securely tightening plugs, cocks and bolts of each part.
- (2) Wash machine after operation to remove salt residue.  
Pay special attention to electrical parts, and hydraulic cylinders and track tension cylinder to prevent corrosion.
- (3) Inspection and lubrication must be carried out more frequently.  
Supply sufficient grease to replace all old grease in bearings which have been submerged in water for a long time.

### **4) OPERATION IN MUD, WATER OR RAIN WORK SITES**

- (1) Perform a walk around inspection to check for any loose fittings, obvious damage to the machine or any fluid leakage.
- (2) After completing operations, clean mud, rocks or debris from the machine. Inspect for damage, cracked welds or loosened parts.
- (3) Perform all daily lubrication and service.
- (4) If the operations were in salt water or other corrosive materials, make sure to flush the affected equipment with fresh water.


### **5) OPERATION IN ROCKY WORK SITES**

- (1) Check for damage to the undercarriage and for looseness, flaws, wear and damage in bolts and nut.
- (2) Loosen the track tension a little when working in such areas.
- (3) Do not turn the undercarriage directly over the sharp edge rock.

## 9. NORMAL OPERATION OF EXCAVATOR

Followings may occur during operation due to the nature of a hydraulic excavator.

- 1) When rolling in the arm, the roll-in movement stop momentary at point X in the picture shown, then recovers speed again after passing point X.  
The reason for this phenomenon is that movement by the arm weight is faster than the speed of oil flow into the cylinder.
- 2) When lowering the boom, one may hear continuous sound.  
This is caused by oil flow in the valve.
- 3) Overloaded movement will produce sound caused by the relief valves, which are for the protection of the hydraulic systems.
- 4) When the machine is started swing or stopped, a noise near the swing motor may be heard. The noise is generated when the brake valve relieves.

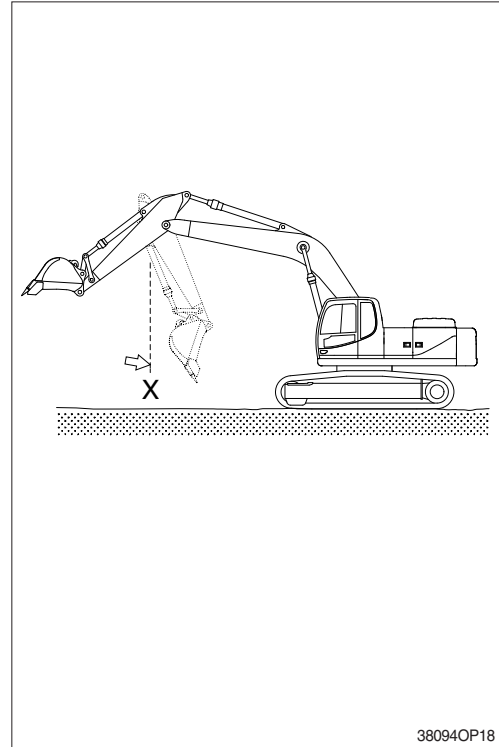

## 10. ATTACHMENT LOWERING (when engine is stopped)

- 1) On machines equipped with an accumulator, for a short time (within 1 minute) after the engine is stopped, the attachment will lower under its own weight when the attachment control lever is shifted to LOWER. That is happen only starting switch ON position and safety lever UNLOCK position. After the engine is stopped, set the safety lever to the LOCK position.


**▲ Be sure no one is under or near the attachment before lowering the boom.**

- 2) The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

**▲ Never make any hole in the accumulator expose it to flame or fire.**

**▲ Do not weld anything to the accumulator.**

※ **When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.**

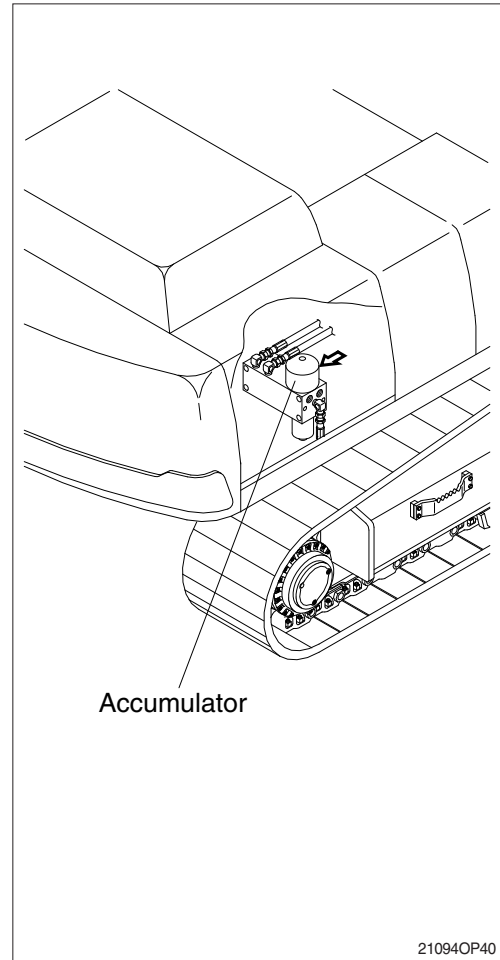

21094OP40

## 11. STORAGE

Maintain the machine taking care of following to prevent the deterioration of machine when storing the machine for a long time, over 1 month.

### 1) BEFORE STORAGE

#### (1) Cleaning the machine

Clean the machine. Check and adjust tracks.  
Grease each lubrication part.


#### (2) Lubrication position of each part

Change all oil.

※ **Be particularly careful when you reuse the machine.**

**As oil can be diluted during storage.**


**Apply an anticorrosive lubricant on the exposed part of piston rod of cylinder and in places where the machine rusts easily.**

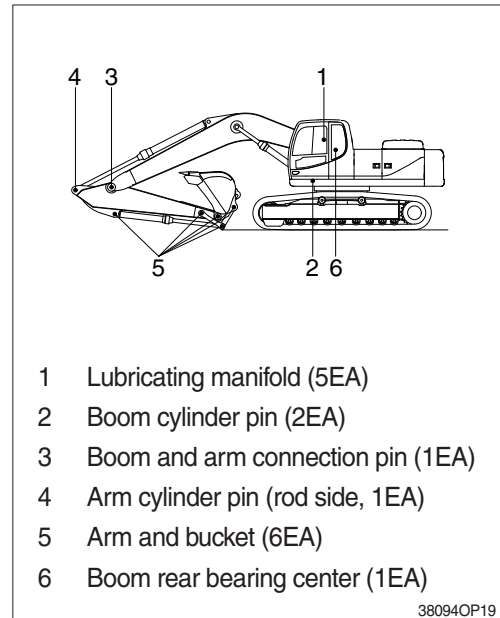

#### (3) Master switch

Turn OFF the master switch mounted electric box and store the machine.


(4) Be sure to mix anticorrosive antifreezing solution in the radiator.

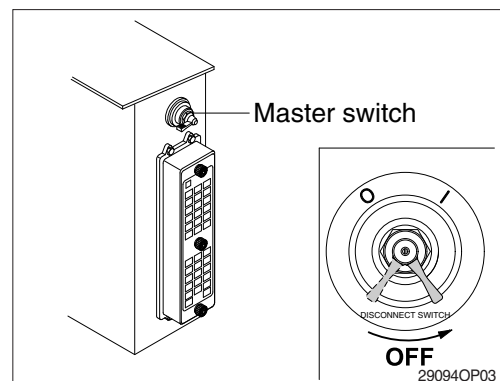

#### (5) Prevention of dust and moisture

Keep machine dry. Store the machine setting wood on the ground.


- ※ **Cover exposed part of piston rod of cylinder.**
- ※ **Lower the bucket to the ground and set a support under track.**

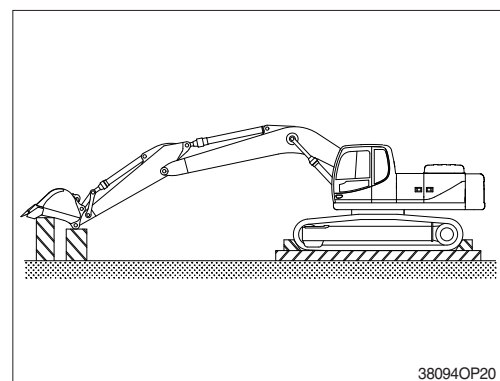

## 2) DURING STORAGE

Start engine and move the machine and work equipment once a month and apply lubrication to each part.

- ※ Check the level of engine oil and coolant and fill if required when starting engine.
- ※ Clean the anticorrosive on the piston rod of cylinder.
- ※ Operate the machine such as traveling, swing and work equipment operation to make sure enough lubrication of all functional components.

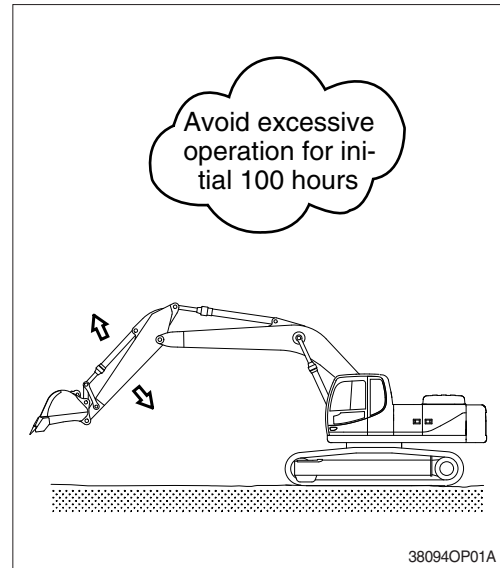

## 3) AFTER STORAGE


Carry out the following procedure when taking out of a long time storage.

- (1) Wipe off the anticorrosive lubricant on the hydraulic piston rod.
- (2) Completely fill fuel tank, lubricate and add oil.
- (3) **When storage period is 6 months over**  
If the machine stock period is over 6 months, carry out the following procedure.  
This procedure is to drain condensation water for the **swing reduction gear** durability.
  - ※ Remove the drain port plug and drain the water until the gear oil comes out and then tighten the drain plug.
  - ※ Refer to the service instruction, section 6 for the drain plug location.
  - ※ If the machine is stored without carrying out the monthly lubricating operation, consult your Hyundai dealer for service.



## 12. RCV LEVER OPERATING PATTERN

### 1) PATTERN CHANGE VALVE NOT INSTALL (standard)

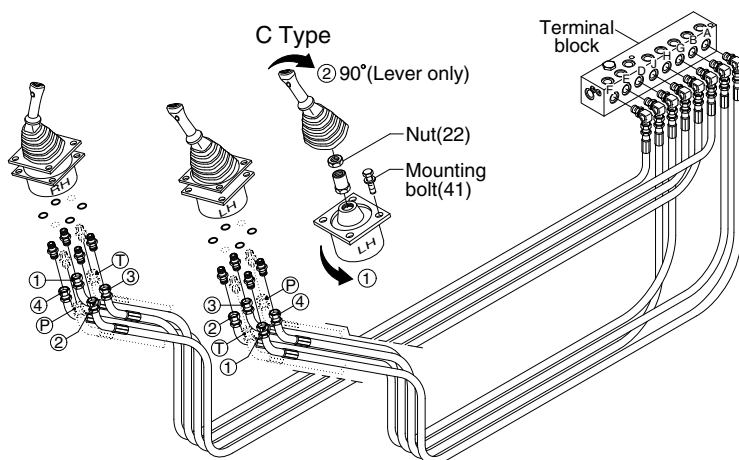


※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

380940P22

Pattern	Operation		Control function	Hose connection (port)			
	Left RCV lever	Right RCV lever		RCV lever	Change of Terminal block		
					From	To	
ISO Type			Left	1 Arm out 2 Arm in 3 Swing right 4 Swing left	② ④ ③ ①	D E B A	- - - -
Hyundai			Right	5 Boom lower 6 Boom raise 7 Bucket out 8 Bucket in	④ ② ① ③	J H G F	- - - -
A Type			Left	1 Boom lower 2 Boom raise 3 Swing right 4 Swing left	② ④ ③ ①	D E B A	J H - -
			Right	5 Arm out 6 Arm in 7 Bucket out 8 Bucket in	④ ② ① ③	J H G F	D E - -
B Type			Left	1 Boom lower 2 Boom raise 3 Bucket in 4 Bucket out	② ④ ③ ①	D E B A	J H F G
			Right	5 Arm out 6 Arm in 7 Swing right 8 Swing left	④ ② ① ③	J H G F	D E B A
C Type			Left	① Loosen the RCV lever mounting bolt (41) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut (22) and rotates only lever 90° clockwise.			
			Right	Same as ISO type			

### 13. SWITCHING HYDRAULIC ATTACHMENT CIRCUIT

- 1) The combined hydraulic attachment circuit is capable of providing single action or double action.
- 2) The position of 3 way valve selects the single action hydraulic attachment circuit or the double action hydraulic attachment circuit.
- 3) Before you change the flow mode of hydraulic attachment circuit, place the machine in the servicing position as shown. Stop the engine.

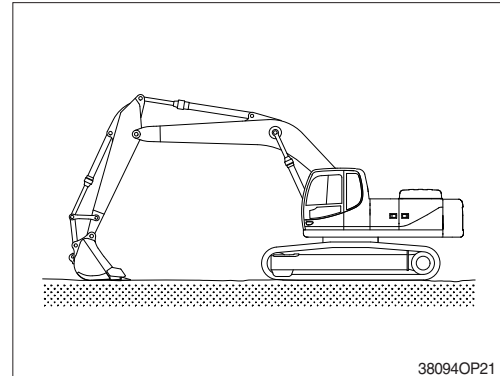


- 4) Use the spanner to turn the bolt of 3 way valve. Make sure that you turn the bolt between ⑥ and ③.

**(1) One way flow** (hydraulic breaker)

Position the groove parallel to the piping (⑥).

**(2) Two way flow** (clamshell or shear)


Position the groove perpendicular to the piping (③).

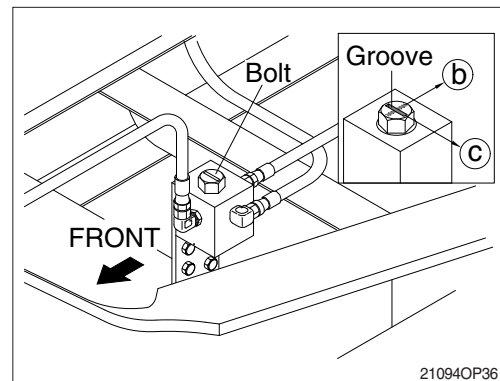

# TRANSPORTATION


## 1. PREPARATION FOR TRANSPORTATION

- 1) When transporting the machine, observe the various road rules, road transportation vehicle laws and vehicle limit ordinances, etc.
- 2) Select proper trailer after confirming the weight and dimension from the chapter 2, specification.
- 3) Check the whole route such as the road width, the height of bridge and limit of weight and etc., which will be passed.
- 4) Get the permission from the related authority if necessary.
- 5) Prepare suitable capacity of trailer to support the machine.

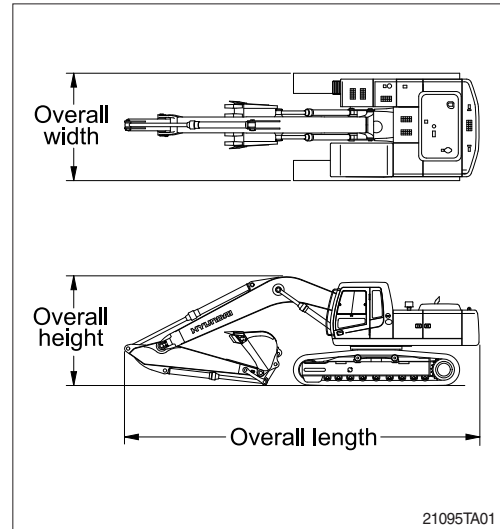

- 6) Prepare gangplank for safe loading referring to the below table and illustration.

A	B
1.0	3.65 ~ 3.85
1.1	4.00 ~ 4.25
1.2	4.35 ~ 4.60
1.3	4.75 ~ 5.00
1.4	5.10 ~ 5.40
1.5	5.50 ~ 5.75

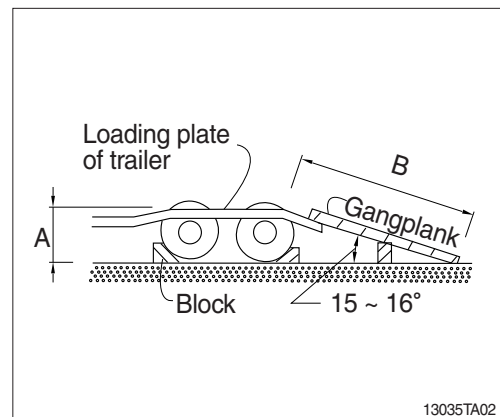


## 2. DIMENSION AND WEIGHT

### (1) Base machine

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	5985 (19' 8")
H	Height	mm (ft-in)	3175 (10' 5")
W	Width	mm (ft-in)	3440 (11' 3")
Wt	Weight	kg (lb)	30500 (67240)


※ With 600 mm (24") triple grouser shoes and 6500 kg (14300 lb) counterweight.

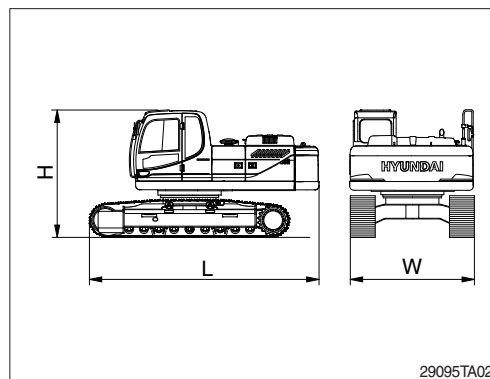

### (2) Boom assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	6730 (22' 1")
H	Height	mm (ft-in)	1760 ( 5' 9")
W	Width	mm (ft-in)	830 ( 2' 9")
Wt	Weight	kg (lb)	3780 (8335)


※ 6.5 m (21' 4") boom with arm cylinder (included piping and pins).

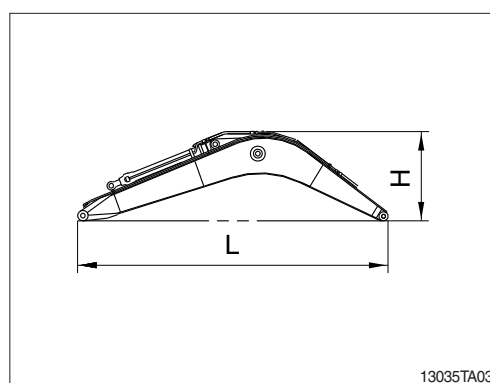

### (3) Arm assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	4390 (14' 5")
H	Height	mm (ft-in)	1070 ( 3' 6")
W	Width	mm (ft-in)	430 ( 1' 5")
Wt	Weight	kg (lb)	2050 (4520)


※ 3.2 m (10' 6") arm with bucket cylinder (included linkage and pins).

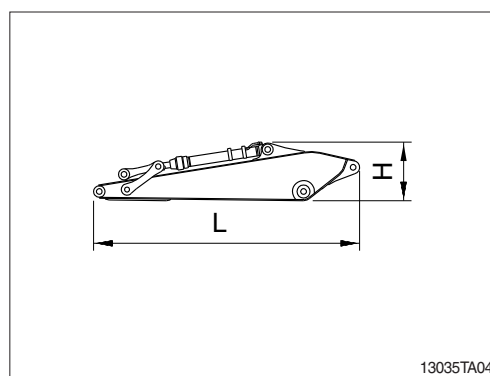

### (4) Bucket assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1900 ( 6' 3")
H	Height	mm (ft-in)	1130 ( 3' 8")
W	Width	mm (ft-in)	1585 ( 5' 2")
Wt	Weight	kg (lb)	1330 (2930)


※ 1.62 m³ (2.12 yd³) SAE heaped bucket (included tooth and side cutters).

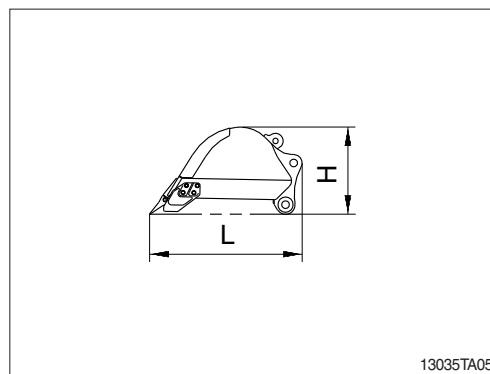

### (5) Boom cylinder


Mark	Description	Unit	Specification
L	Length	mm (ft-in)	2300 ( 7' 7")
H	Height	mm (ft-in)	350 ( 1' 2")
W	Width	mm (ft-in)	425 ( 1' 5")
Wt	Weight	kg (lb)	740 (1630)

※ Included piping.

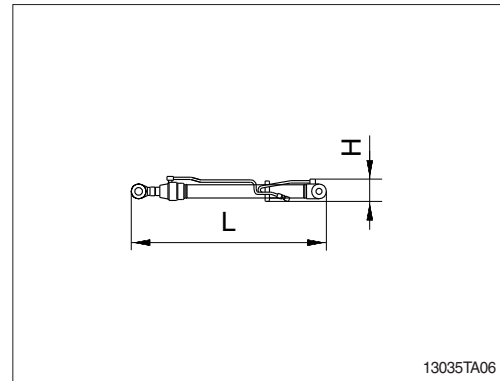


### (6) Cab assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1962 ( 6' 4")
H	Height	mm (ft-in)	1686 ( 5' 6")
W	Width	mm (ft-in)	1000 ( 3' 3")
Wt	Weight	kg (lb)	490 (1080)

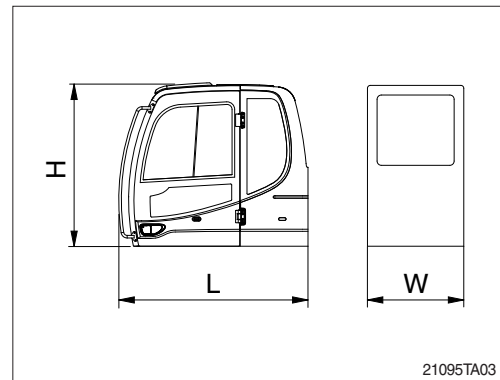

### (7) Counterweight


Mark	Description	Unit	Specification
L	Length	mm (ft-in)	2980 ( 9' 9")
H	Height	mm (ft-in)	1165 ( 3' 10")
W	Width	mm (ft-in)	630 (2' 1")
Wt	Weight	kg (lb)	6500 (14330)

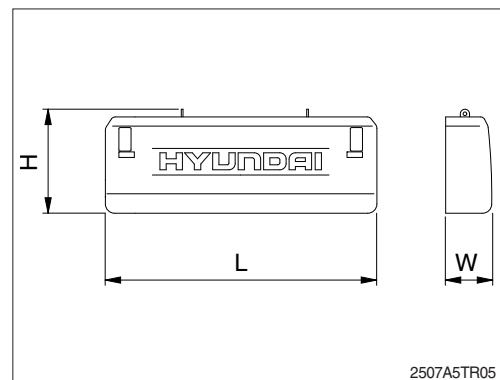

### 3. LOADING THE MACHINE


- 1) Load and unload the machine on a flat ground.
- 2) Use the gangplank with sufficient length, width, thickness and gradient.
- 3) Place the safety lever to the LOCK position (if equipped) before fixing the machine at the bed of trailer and confirm if the machine parallels the bed of trailer.

Keep the travel motor in the rear when loading and in the front when unloading.

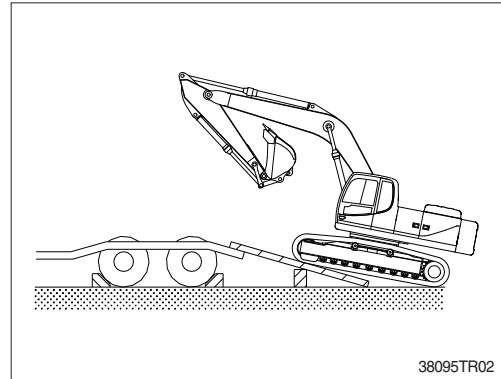


- 4) Do the following after loading the machine to the trailer.

- (1) Stop loading when the machine is located horizontally with the rear wheel of trailer.

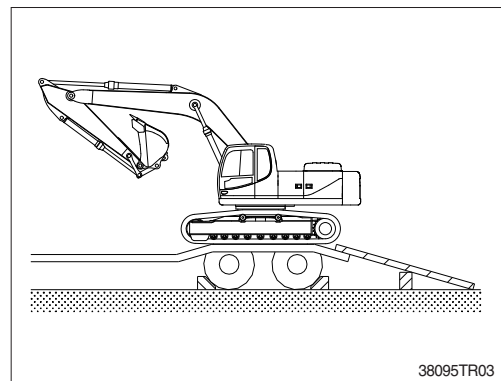

- (2) Place the safety lever to the LOCK position (if equipped) after the swing the machine 180 degree.

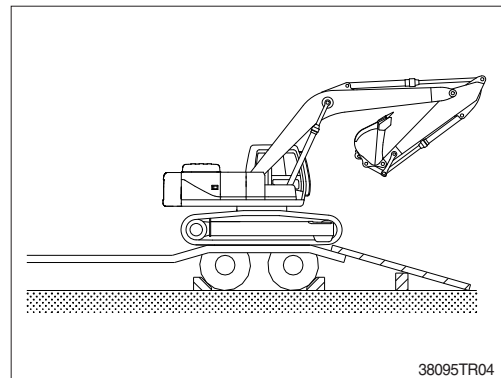

(3) Lower the working equipment gently after the location is determined.


※ **Place rectangular timber under the bucket cylinder to prevent the damage of it during transportation.**

▲ **Be sure to keep the travel speed switch on the LOW (turtle mark) while loading and unloading the machine.**

▲ **Avoid using the working equipment for loading and unloading since it will be very dangerous.**


▲ **Do not operate any other device when loading.**

▲ **Be careful on the boundary place of loading plate or trailer as the balance of machine will abruptly be changed on the point.**

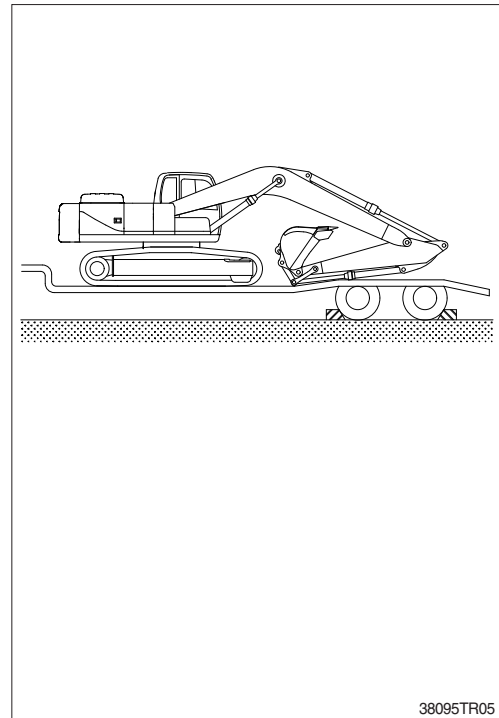


## 4. FIXING THE MACHINE


- 1) Lower down the working device on the loading plate of trailer.
- 2) Keep the safety lever on the LOCK position.
- 3) Turn OFF all the switches and remove the key.

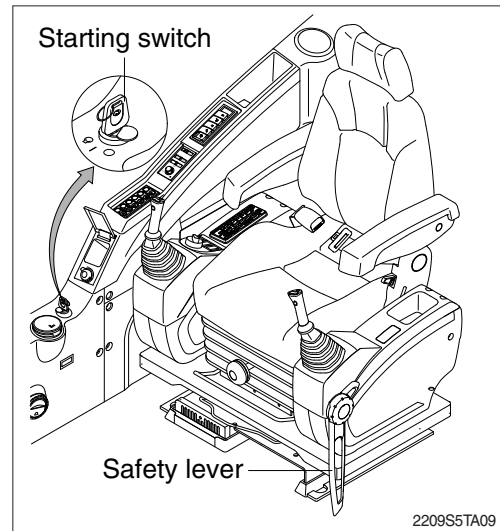

- 4) Secure all locks.

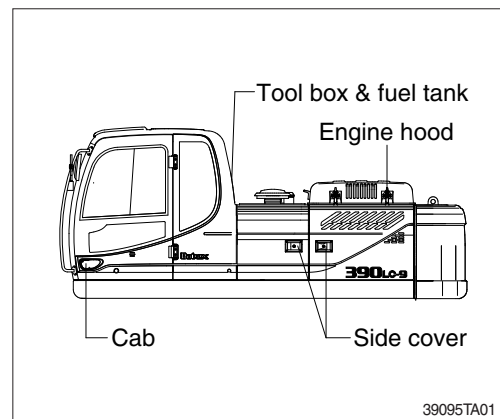

- 5) Place timber underneath of the track and fix firmly with wire rope to prevent the machine from moving forward, backward, right or left.

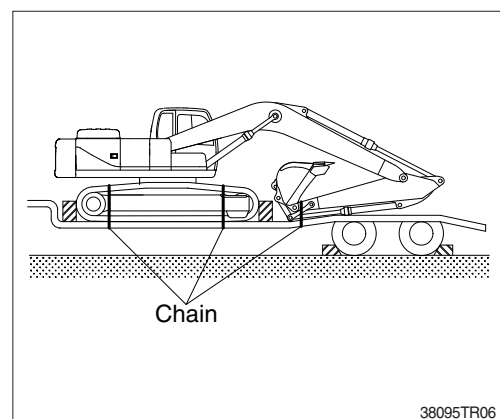



## 5. LOADING AND UNLOADING BY CRANE

- 1) Check the weight, length, width and height of the machine referring to the chapter 2, specification when you are going to hoist the machine.
- 2) Use long wire rope and stay to keep the distance with the machine as it should avoid touching with the machine.
- 3) Put a rubber plate contact with wire rope and machine to prevent damage.
- 4) Place crane on the proper place.
- 5) Install the wire rope and stay like the illustration.


**▲ Make sure wire rope is proper size.**

**▲ Place the safety lever to LOCK position to prevent the machine moving when hoisting the machine.**

**▲ The wrong hoisting method or installation of wire rope can cause damage to the machine.**

**▲ Do not load abruptly.**


**▲ Keep area clear of personnel.**

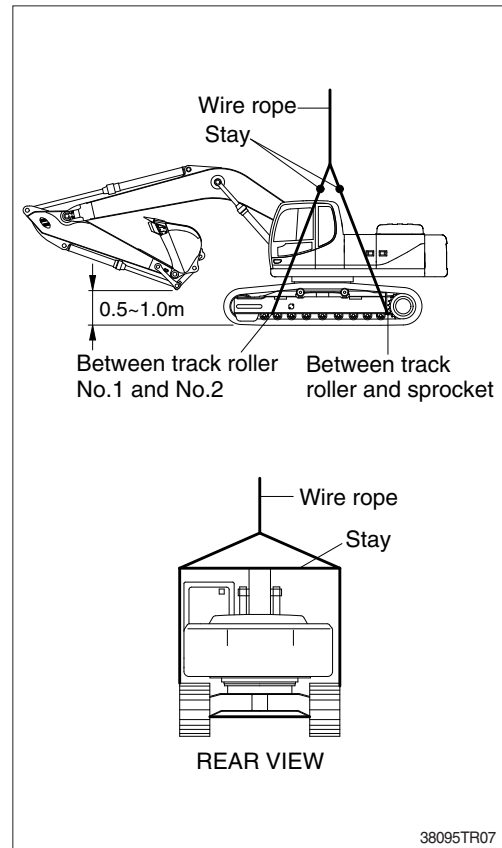

## 1. INSTRUCTION

### 1) INTERVAL OF MAINTENANCE

- (1) You may inspect and service the machine by the period as described at page 6-11 based on hour meter at control panel.
- (2) Shorten the interval of inspect and service depending on site condition. (such as dusty area, quarry, sea shore and etc.)
- (3) Practice the entire related details at the same time when the service interval is doubled.  
For example, in case of 100hours, carry out all the maintenance 「Each 100hours, each 50 hours and daily service」 at the same time.

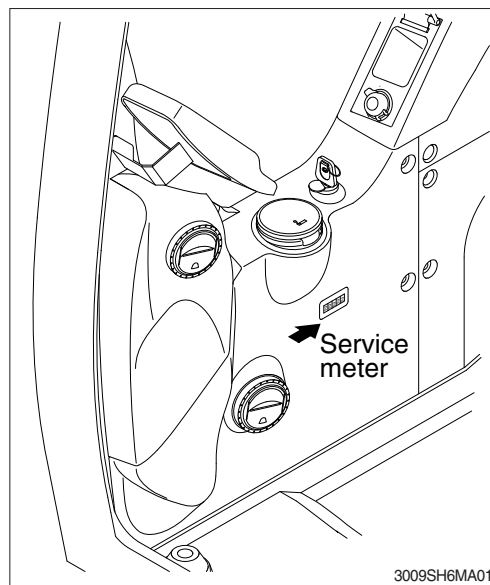

### 2) PRECAUTION

- (1) Start to maintenance after you have the full knowledge of machine.
- (2) The monitor installed on this machine does not entirely guarantee the condition of the machine.  
Daily inspection should be performed according to clause 4, maintenance check list.
- (3) Engine and hydraulic components have been preset in the factory.  
Do not allow unauthorized personnel to reset them.
- (4) Ask to your local dealer or Hyundai for the maintenance advice if unknown.
- (5) Drain the used oil and coolant in a container and handle according to the method of handling for industrial waste to meet with regulations of each province or country.

### 3) PROPER MAINTENANCE

#### (1) Replace and repair of parts

It is required to replace the wearable and consumable parts such as bucket tooth, side cutter, filter and etc., regularly.

Replace damaged or worn parts at proper time to keep the performance of machine.

(2) Use genuine parts.

(3) Use the recommended oil.

(4) Remove the dust or water around the inlet of oil tank before supplying oil.

(5) Drain oil when the temperature of oil is warm.

(6) Do not repair anything while operating the engine.

Stop the engine when you fill the oil.

(7) Relieve hydraulic system of the pressure before repairing the hydraulic system.

(8) Confirm if the cluster is in the normal condition after completion of service.

(9) For more detail information of maintenance, please contact local Hyundai dealer.


※ **Be sure to start the maintenance after fully understand the chapter 1, safety hints.**

#### 4) RELIEVING THE PRESSURE IN THE HYDRAULIC SYSTEM

- ※ Spouting of oil can cause the accident when loosening the cap or hose right after the operating of machine as the machine or oil is on the high pressure on the condition.


Be sure to relieve the pressure in the system before repairing hydraulic system.

- (1) Place machine in parking position, and stop the engine.

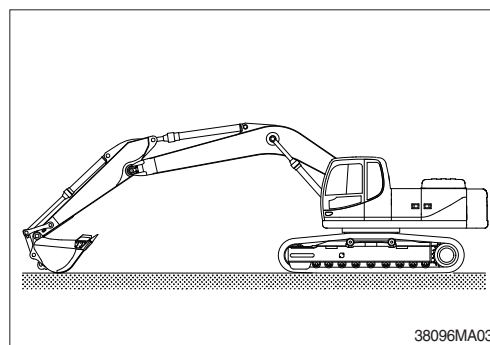


- (2) Set the safety lever completely in the release position, operate the control levers and pedals fully to the front, rear, left and right, to release the pressure in the hydraulic circuit.

- ※ This does not completely release the pressure, so when serving hydraulic component, loosen the connections slowly and do not stand in the direction where the oil spurt out.

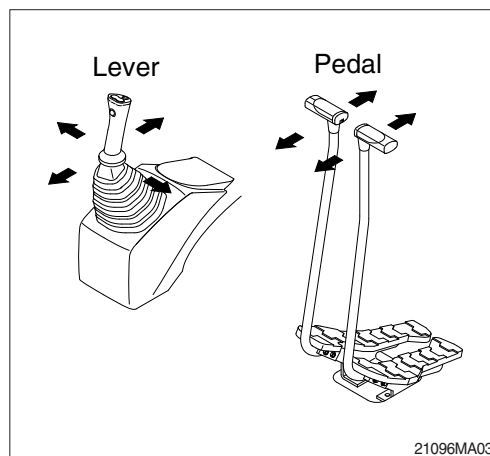

- (3) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.

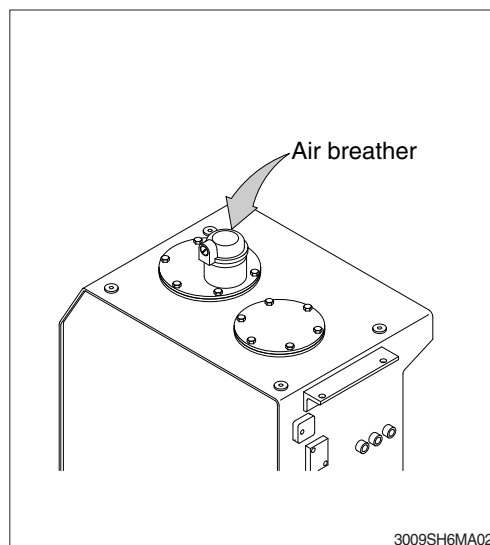

## **5) PRECAUTION WHEN INSTALLING HYDRAULIC HOSES OR PIPES**

- (1) Be particularly careful that the joint of hose, pipe and functioning item are not damaged.  
Avoid contamination.
- (2) Assemble after cleaning the hose, pipe and joint of functioning item.
- (3) Use genuine parts.
- (4) Do not assemble the hose in the condition of twisted or sharp radius.
- (5) Keep the specified tighten torque.

## 6) PERIODICAL REPLACEMENT OF SAFETY PARTS

- (1) It is desirable to do periodic maintenance the machine for using the machine safely for a long time.

However, recommend to replace regularly the parts related safety not only safety but maintain satisfied performance.

- (2) These parts can cause the disaster of life and material as the quality changes by passing time and it is worn, diluted, and gets fatigued by using repeatedly.

These are the parts which the operator can not judge the remained lifetime of them by visual inspection.

- (3) Repair or replace if an abnormality of these parts is found even before the recommended replacement interval.

Periodical replacement of safety parts			Interval
Engine		Fuel hose (tank-engine)	Every 2 years
		Heater hose (heater-engine)	
Hydraulic system	Main circuit	Pump suction hose	Every 2 years
		Pump delivery hose	
		Swing hose	
	Working device	Boom cylinder line hose	Every 2 years
		Arm cylinder line hose	
		Bucket cylinder line hose	

※ 1. Replace O-ring and gasket at the same time when replacing the hose.

2. Replace clamp at the same time if the hose clamp is cracked when checking and replacing the hose.

## 2. TIGHTENING TORQUE

Use following table for unspecified torque.

### 1) BOLT AND NUT

#### (1) Coarse thread

Bolt size	8T		10T	
	kgf · m	lbf · ft	kgf · m	lbf · ft
M 6 × 1.0	0.9 ~ 1.3	6.5 ~ 9.4	1.1 ~ 1.7	8.0 ~ 12.3
M 8 × 1.25	2.0 ~ 3.0	14.5 ~ 21.7	2.7 ~ 4.1	19.5 ~ 29.7
M10 × 1.5	4.0 ~ 6.0	28.9 ~ 43.4	5.5 ~ 8.3	39.8 ~ 60.0
M12 × 1.75	7.4 ~ 11.2	53.5 ~ 81.0	9.8 ~ 15.8	70.9 ~ 114
M14 × 2.0	12.2 ~ 16.6	88.2 ~ 120	16.7 ~ 22.5	121 ~ 163
M16 × 2.0	18.6 ~ 25.2	135 ~ 182	25.2 ~ 34.2	182 ~ 247
M18 × 2.5	25.8 ~ 35.0	187 ~ 253	35.1 ~ 47.5	254 ~ 344
M20 × 2.5	36.2 ~ 49.0	262 ~ 354	49.2 ~ 66.6	356 ~ 482
M22 × 2.5	48.3 ~ 63.3	349 ~ 458	65.8 ~ 98.0	476 ~ 709
M24 × 3.0	62.5 ~ 84.5	452 ~ 611	85.0 ~ 115	615 ~ 832
M30 × 3.5	124 ~ 168	898 ~ 1214	169 ~ 229	1223 ~ 1656
M36 × 4.0	174 ~ 236	1261 ~ 1704	250 ~ 310	1808 ~ 2242

#### (2) Fine thread

Bolt size	8T		10T	
	kgf · m	lbf · ft	kgf · m	lbf · ft
M 8 × 1.0	2.2 ~ 3.4	15.9 ~ 24.6	3.0 ~ 4.4	21.7 ~ 31.8
M10 × 1.25	4.5 ~ 6.7	32.5 ~ 48.5	5.9 ~ 8.9	42.7 ~ 64.4
M12 × 1.25	7.8 ~ 11.6	56.4 ~ 83.9	10.6 ~ 16.0	76.7 ~ 116
M14 × 1.5	13.3 ~ 18.1	96.2 ~ 131	17.9 ~ 24.1	130 ~ 174
M16 × 1.5	19.9 ~ 26.9	144 ~ 195	26.6 ~ 36.0	192 ~ 260
M18 × 1.5	28.6 ~ 43.6	207 ~ 315	38.4 ~ 52.0	278 ~ 376
M20 × 1.5	40.0 ~ 54.0	289 ~ 391	53.4 ~ 72.2	386 ~ 522
M22 × 1.5	52.7 ~ 71.3	381 ~ 516	70.7 ~ 95.7	511 ~ 692
M24 × 2.0	67.9 ~ 91.9	491 ~ 665	90.9 ~ 123	658 ~ 890
M30 × 2.0	137 ~ 185	990 ~ 1339	182 ~ 248	1314 ~ 1796
M36 × 3.0	192 ~ 260	1390 ~ 1880	262 ~ 354	1894 ~ 2562

## 2) PIPE AND HOSE (FLARE type)

Thread size (PF)	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130.2
1"	41	21	151.9
1-1/4"	50	35	253.2

## 3) PIPE AND HOSE (ORFS type)

Thread size (UNF)	Width across flat (mm)	kgf · m	lbf · ft
9/16-18	19	4	28.9
11/16-16	22	5	36.2
13/16-16	27	9.5	68.7
1-3/16-12	36	18	130.2
1-7/16-12	41	21	151.9
1-11/16-12	50	35	253.2

## 4) FITTING

Thread size	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130.2
1"	41	21	151.9
1-1/4"	50	35	253.2



#### 4) TIGHTENING TORQUE OF MAJOR COMPONENT

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt (engine-bracket)	M14 × 2.0	14.5 ± 2.5	105 ± 18.1
2		Engine mounting bolt (bracket-frame)	M22 × 2.5	48 ± 2.0	347 ± 14.5
3		Radiator mounting bolt	M16 × 2.0	22 ± 1.0	159 ± 7.2
4		Coupling mounting socket bolt	M20 × 2.5	46.5 ± 2.5	336 ± 18.1
5		Main pump housing mounting bolt	M10 × 1.5	4.8 ± 0.3	34.7 ± 2.2
5	Hydraulic system	Main pump mounting socket bolt	M20 × 2.5	42 ± 4.5	304 ± 32.5
6		Main control valve mounting nut	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
7		Fuel tank mounting bolt	M20 × 2.5	57.9 ± 8.7	419 ± 62.9
8		Hydraulic oil tank mounting bolt	M20 × 2.5	57.9 ± 8.7	419 ± 62.9
9		Turning joint mounting bolt, nut	M12 × 1.75	12.3 ± 1.3	89.0 ± 9.4
10	Power train system	Swing motor mounting bolt	M24 × 3.0	97.8 ± 15	707 ± 108
11		Swing bearing upper part mounting bolt	M24 × 3.0	100 ± 10	723 ± 72.3
12		Swing bearing lower part mounting bolt	M24 × 3.0	100 ± 10	723 ± 72.3
13		Travel motor mounting bolt	M20 × 2.5	58 ± 6.0	420 ± 43.4
14		Sprocket mounting bolt	M20 × 2.5	57.9 ± 6.0	419 ± 43.4
15	Under carriage	Carrier roller mounting bolt, nut	M16 × 2.0	29.7 ± 3.0	215 ± 21.7
16		Track roller mounting bolt	M24 × 3.0	100 ± 10	723 ± 72.3
17		Track tension cylinder mounting bolt	M16 × 2.0	29.6 ± 3.2	214 ± 23.1
18		Track shoe mounting bolt, nut	M24 × 1.5	140 ± 5.0	1010 ± 36.2
19		Track guard mounting bolt	M24 × 3.0	77.4 ± 11	560 ± 79.6
21	Others	Counterweight mounting bolt	M36 × 3.0	308 ± 46	2228 ± 333
22		Cab mounting bolt	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
23		Operator's seat mounting bolt	M 8 × 1.25	4.05 ± 0.8	29.3 ± 5.8

※ For tightening torque of engine and hydraulic components, see engine maintenance guide and service manual.

### 3. FUEL, COOLANT AND LUBRICANTS

#### 1) NEW MACHINE

New machine used and filled with following lubricants.

Description	Specification
Engine oil	SAE 15W-40 (API CH-4), *SAE 5W-40 (API CH-4)
Hydraulic oil	Hyundai genuine long life hydraulic oil (ISO VG 46, VG 68 only) Coventional hydraulic oil (ISO VG 32, VG15*)
Swing and travel reduction gear	SAE 85W-140 (API GL-5)
Grease	Lithium base grease NLGI No. 2 , *NLGI No. 1
Fuel	ASTM D975-No. 2
Coolant	Mixture of 50% ethylene glycol base antifreeze and 50% water. Mixture of 60% ethylene glycol base antifreeze and 50% water. ★

\* : Arctic machinery

**SAE** : Society of Automotive Engineers

**API** : American Petroleum Institute

**ISO** : International Organization for Standardization

**NLGI** : National Lubricating Grease Institute

**ASTM** : American Society of Testing and Material

## 2) RECOMMENDED OILS

Use only oils listed below or equivalent.

Do not mix different brand oil.

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C ( °F)							
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)
Engine oil pan	Engine oil	27.3 (7.2)	★SAE 5W-40							
			SAE 30							
			SAE 10W							
			SAE 10W-30							
			SAE 15W-40							
Swing drive	Gear oil	8.0 (2.1)	★SAE 75W-90							
Final drive		4.3 × 2 (1.1 × 2)	SAE 85W-140							
Hydraulic tank	Hydraulic oil	Tank; 210 (55.5)  System; 415 (110)	★ISO VG 15							
			ISO VG 32							
			ISO VG 46							
			ISO VG 68							
Fuel tank	Diesel fuel	550 (145)	★ASTM D975 NO.1							
			ASTM D975 NO.2							
Fitting (grease nipple)	Grease	As required	★NLGI NO.1							
			NLGI NO.2							
Radiator (reservoir tank)	Mixture of antifreeze and soft water★ <sup>1</sup>	45 (12.0)	Ethylene glycol base permanent type (50 : 50)							
			★Ethylene glycol base permanent type (60 : 40)							

**SAE** : Society of Automotive Engineers

**API** : American Petroleum Institute

**ISO** : International Organization for Standardization

**NLGI** : National Lubricating Grease Institute

**ASTM** : American Society of Testing and Material

★ : Arctic machine

★<sup>1</sup> : Soft water

City water or distilled water

## 4. MAINTENANCE CHECK LIST

### 1) DAILY SERVICE BEFORE STARTING

Check items	Service	Page
Visual check		
Fuel tank	Check, Refill	6-26
Hydraulic oil level	Check, Add	6-29
Engine oil level	Check, Add	6-20
Coolant level	Check, Add	6-21
Control panel & pilot lamp	Check, Clean	6-40
Prefilter	Check, Clean	6-27
Fan belt tension	Check, Adjust	6-25
★ Attachment pin and bushing	Lubricate	6-39
• Boom cylinder tube end		
• Boom foot		
• Boom cylinder rod end		
• Arm cylinder tube end		
• Arm cylinder rod end		
• Boom + Arm connecting		
• Bucket cylinder tube end		

★ Lubricate every 10 hours or daily for initial 100 hours.

### 2) EVERY 50 HOURS SERVICE

Check items	Service	Page
Fuel tank (water, sediment)	Drain	6-26
Track tension	Check, Adjust	6-34
Swing reduction gear oil	Check, Add	6-32
Swing reduction gear grease	Check, Add	6-32
Bucket linkage pin & bushing	Lubricate	6-39
• Bucket cylinder rod end		
• Bucket + Arm connecting		
• Bucket control link + Arm		
• Bucket control rod		

### 3) INITIAL 50 HOURS SERVICE

Check items	Service	Page
Engine oil	Change	6-20
Engine oil filter	Replace	6-21
Prefilter (water, element)	Replace	6-27
Fuel filter	Replace	6-28
Bolts & Nuts	Check, Tight	6-8
• Sprocket mounting bolts		
• Travel motor mounting bolts		
• Swing motor mounting bolts		
• Swing bearing mounting bolts		
• Engine mounting bolts		
• Counterweight mounting bolts		
• Turning joint locating bolts		
• Track shoe mounting bolts and nuts		
• Hydraulic pump mounting bolts		

※ **Service the above items only for the new machine, and thereafter keep the normal service interval.**

### 4) EVERY 200 HOURS SERVICE

Check items	Service	Page
★ Return filter	Replace	6-31
★ Pilot line filter	Replace	6-32
★ Element in hydraulic tank breather	Replace	6-31
★ Drain filter cartridge	Replace	6-31

★ **Replace 4 filters for continuous hydraulic breaker operation only.**

### 5) INITIAL 250 HOURS SERVICE

Check items	Service	Page
Pilot line filter	Replace	6-32
Hydraulic return filter	Replace	6-31
Drain filter cartridge	Replace	6-31
Swing reduction gear oil	Change	6-32

## 6) EVERY 250 HOURS SERVICE

Check items	Service	Page
★Engine oil	Replace	6-20
★Engine oil filter	Replace	6-21
Battery electrolyte	Check, Clean	6-40
Swing bearing grease	Lubricate	6-33
Aircon & heater fresh air filter	Check	6-43
Air breather element	Replace	6-31
Bolts & Nuts	Check, Tight	6-8
<ul style="list-style-type: none"> <li>• Sprocket mounting bolts</li> <li>• Travel motor mounting bolts</li> <li>• Swing motor mounting bolts</li> <li>• Swing bearing mounting bolts</li> <li>• Engine mounting bolts</li> <li>• Counterweight mounting bolts</li> <li>• Turning joint locating bolts</li> <li>• Track shoe mounting bolts and nuts</li> <li>• Hydraulic pump mounting bolts</li> </ul>		
Attachment pin and bushing	Lubricate	6-40
<ul style="list-style-type: none"> <li>• Boom cylinder tube end</li> <li>• Boom foot</li> <li>• Boom cylinder rod end</li> <li>• Arm cylinder tube end</li> <li>• Arm cylinder rod end</li> <li>• Boom + Arm connecting</li> <li>• Bucket cylinder tube end</li> </ul>		

★ If you use high sulfur containing fuel above than 0.5% or use low grade of engine oil reduce change interval.

## 7) INITIAL 500 HOURS SERVICE

Check items	Service	Page
Travel reduction gear oil	Change	6-33

※ Service the above item only for the new machine, and thereafter keep the normal service interval.

## 8) EVERY 500 HOURS SERVICE

Check items	Service	Page
Radiator, cooler fin and charge air cooler	Check, Clean	6-24
☆ Air cleaner element (primary)	Check, Clean	6-25
Fuel filter element	Replace	6-28
Prefilter	Change	6-27

☆ Clean the primary element only after 500 hours operation or when the air cleaner warning lamp blinks.  
Replace primary element and safety element after 4 times cleanings of primary element.

## 9) EVERY 1000 HOURS SERVICE

Check items	Service	Page
Travel motor reduction gear oil	Change	6-34
Swing reduction gear oil	Change	6-32
Grease in swing gear and pinion	Change	6-33
Hydraulic oil return filter	Replace	6-31
Drain filter cartridge	Replace	6-31
Pilot line filter	Replace	6-32

## 10) EVERY 2000 HOURS SERVICE

Check items	Service	Page
Coolant	Change	6-21, 22, 23
Hydraulic oil <sup>★1</sup>	Change	6-30
Hydraulic tank suction strainer	Check, Clean	6-30

<sup>★1</sup> Conventional hydraulic oil

★ Change oil every 600 hours of continuous hydraulic breaker operation.

## 11) EVERY 5000 HOURS SERVICE

Check items	Service	Page
Hydraulic oil <sup>★2</sup>	Change	6-30

<sup>★2</sup> Hyundai genuine long life hydraulic oil

★ Change oil every 1000 hours of continuous hydraulic breaker operation.


## 12) WHEN REQUIRED

Whenever you have trouble in the machine, you must perform the service of related items, system by system.

Check items	Service	Page
Fuel system		
· Fuel tank	Drain or Clean	6-26
· Prefilter	Clean or Replace	6-27
· Fuel filter element	Replace	6-28
Engine lubrication system		
· Engine oil	Change	6-20
· Engine oil filter	Replace	6-21
Engine cooling system		
· Coolant	Add or Change	6-21, 22, 23
· Radiator	Clean or Flush	6-21, 22, 23
· Charge air cooler	Check	6-24
Engine air system		
· Air cleaner element	Replace	6-25
Hydraulic system		
· Hydraulic oil	Add or Change	6-30
· Return filter	Replace	6-31
· Drain line filter	Replace	6-31
· Pilot line filter	Replace	6-32
· Element of breather	Replace	6-31
· Suction strainer	Clean	6-30
Under carriage		
· Track tension	Check, Adjust	6-34
Bucket		
· Tooth	Replace	6-37
· Side cutter	Replace	6-37
· Linkage	Adjust	6-36
· Bucket assy	Replace	6-36
Air conditioner and heater		
· Fresh air filter	Clean, Replace	6-43
· Recirculation filter	Clean	6-44



## 5. MAINTENANCE CHART

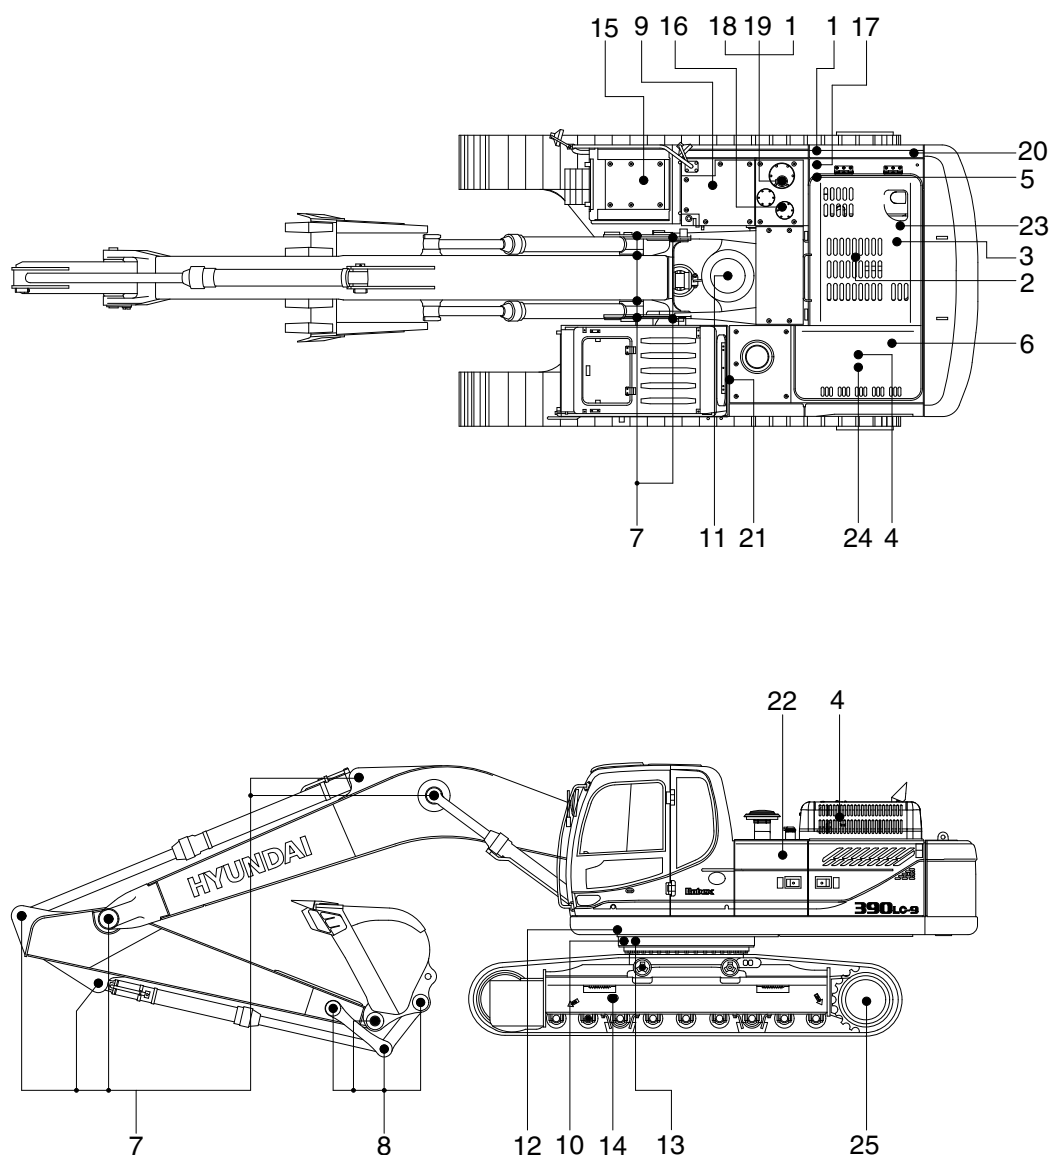

39096MA01

### Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.

Service interval	No.	Description	Service action	Oil symbol	Capacity / (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	210 (55.5)	1
	2	Engine oil level	Check, Add	EO	27.3 (7.2)	1
	4	Radiator coolant	Check, Add	C	45 (12.0)	1
	5	Prefilter (water, element)	Check, Clean	-	-	1
	6	Fan belt tension and damage	Check, Adjust	-	-	1
	9	Fuel tank	Check, Refill	DF	550 (145.3)	1
50 Hours or weekly	8	Bucket linkage pin & bushing	Check, Add	PGL	-	6
	9	Fuel tank (water, sediment)	Check, Clean	-	550 (145.3)	1
	11	Swing reduction gear case	Check, Add	GO	8.0 (2.1)	1
	14	Track tension	Check, Adjust	PGL	-	2
250 Hours	2	Engine oil	Change	EO	27.3 (7.2)	1
	3	Engine oil filter	Replace	-	-	1
	7	Attachment pins & bushing	Check, Add	PGL	-	11
	10	Swing bearing grease	Check, Add	PGL	-	2
	15	Battery	Check, Clean	-	-	1
	18	Air breather element	Replace	-	-	1
	21	Aircon and heater fresh air filter	Check, Clean	-	-	1
500 Hours	5	Prefilter	Replace	-	-	1
	22	Air cleaner element (primary)	Check, Clean	-	-	1
	23	Fuel filter element	Replace	-	-	1
	24	Radiator, oil cooler, charge air cooler	Check, Clean	-	-	3
1000 Hours	11	Swing reduction gear case	Change	GO	8.0 (2.1)	1
	12	Swing reduction gear grease	Change	PGL	1.6 (0.42)	1
	13	Swing gear and pinion grease	Change	PGL	16.9 kg (37 lb)	1
	16	Hydraulic oil return filter	Replace	-	-	2
	17	Drain filter cartridge	Replace	-	-	1
	20	Pilot line filter element	Replace	-	-	1
	25	Travel reduction gear case	Change	GO	4.3 (1.1)	2
2000 Hours	1	Hydraulic oil <sup>*1</sup>	Change	HO	210 (55.5)	1
	4	Radiator coolant	Change	C	45 (12.0)	1
	19	Hydraulic oil suction strainer	Check, Clean	-	-	1
5000 Hours	1	Hydraulic oil <sup>*2</sup>	Change	HO	210 (55.5)	1
As required	21	Aircon & heater fresh filter	Replace	-	-	1
	22	Aircon & heater recirculation filter	Clean, Replace	-	-	1
	22	Air cleaner element (primary, safety)	Replace	-	-	2

<sup>\*1</sup> Conventional hydraulic oil

<sup>\*2</sup> Hyundai genuine long life hydraulic oil

※ Oil symbol

Please refer to the recommended lubricants for specification.

DF : Diesel fuel

GO : Gear oil


HO : Hydraulic oil

C : Coolant

PGL : Grease

EO : Engine oil

· ARCTIC ONLY

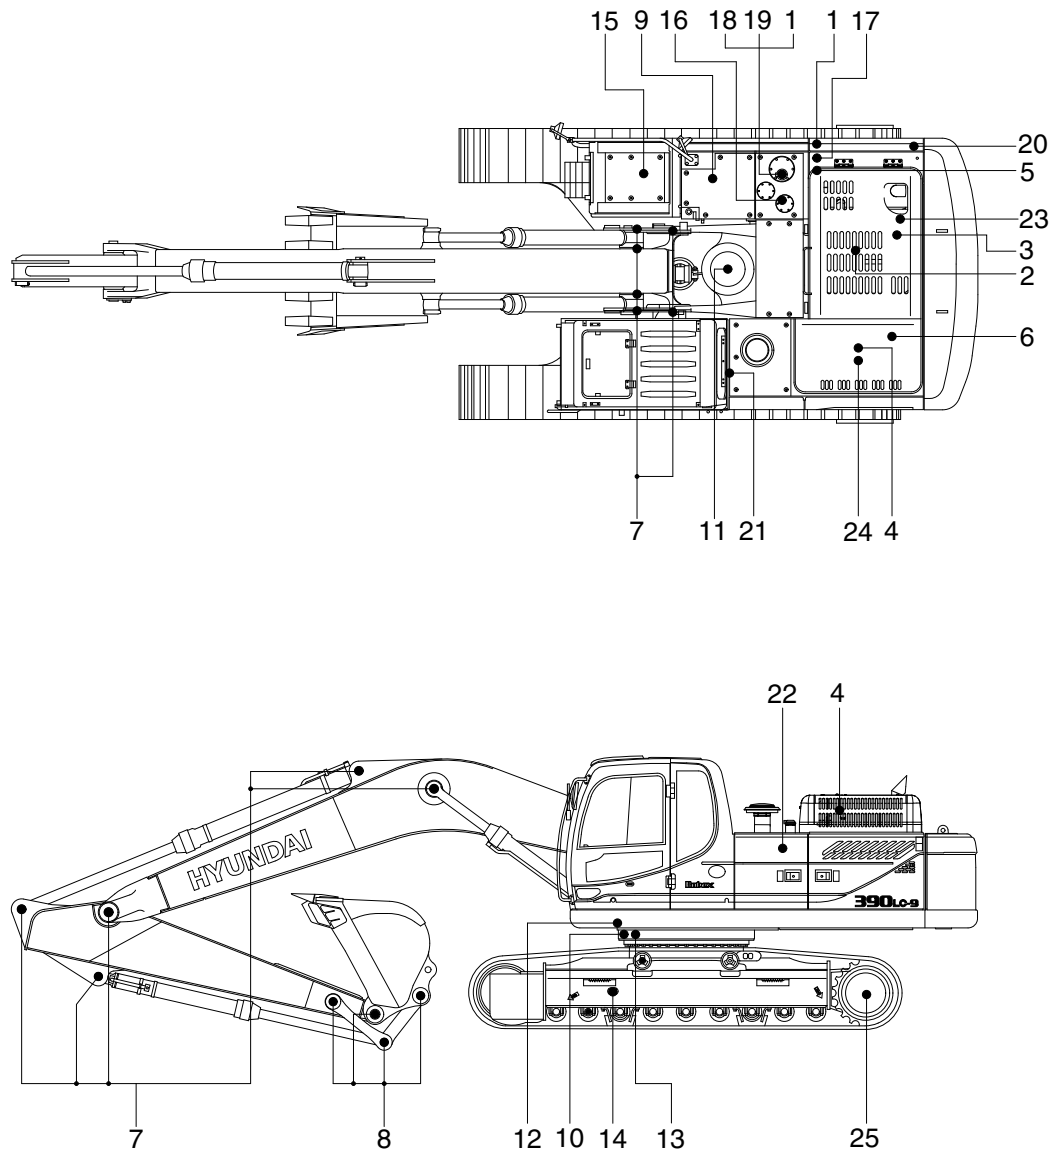

39096MA01

**Caution**

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.

· ARCTIC ONLY

Service interval	No.	Description	Service action	Oil symbol	Capacity / (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	210 (55.5)	1
	2	Engine oil level	Check, Add	EO	27.3 (7.2)	1
	4	Radiator coolant	Check, Add	C	45 (12.0)	1
	5	Prefilter (water, element)	Check, Clean	-	-	1
	6	Fan belt tension and damage	Check, Adjust	-	-	1
	9	Fuel tank	Check, Refill	DF	550 (145.3)	1
50 Hours or weekly	8	Bucket linkage pin & bushing	Check, Add	PGL	-	6
	9	Fuel tank (water, sediment)	Check, Clean	-	550 (145.3)	1
	11	Swing reduction gear case	Check, Add	GO	8.0 (2.1)	1
	14	Track tension	Check, Adjust	PGL	-	2
250 Hours	2	Engine oil	Change	EO	27.3 (7.2)	1
	3	Engine oil filter	Replace	-	-	1
	7	Attachment pins & bushing	Check, Add	PGL	-	11
	10	Swing bearing grease	Check, Add	PGL	-	2
	15	Battery	Check, Clean	-	-	1
	18	Air breather element	Replace	-	-	1
	21	Aircon and heater fresh air filter	Check, Clean	-	-	1
500 Hours	5	Prefilter	Replace	-	-	1
	22	Air cleaner element (primary)	Check, Clean	-	-	1
	23	Fuel filter element	Replace	-	-	1
	24	Radiator, oil cooler, charge air cooler	Check, Clean	-	-	3
1000 Hours	11	Swing reduction gear case	Change	GO	8.0 (2.1)	1
	12	Swing reduction gear grease	Change	PGL	1.6 (0.42)	1
	13	Swing gear and pinion grease	Change	PGL	16.9 kg (37 lb)	1
	16	Hydraulic oil return filter	Replace	-	-	2
	17	Drain filter cartridge	Replace	-	-	1
	20	Pilot line filter element	Replace	-	-	1
	25	Travel reduction gear case	Change	GO	4.3(1.1)	2
2000 Hours	1	Hydraulic oil	Change	HO	210 (55.5)	1
	4	Radiator coolant	Change	C	45 (12.0)	1
	19	Hydraulic oil suction strainer	Check, Clean	-	-	1
As required	21	Aircon & heater fresh filter	Replace	-	-	1
	22	Aircon & heater recirculation filter	Clean, Replace	-	-	1
	22	Air cleaner element (primary, safety)	Replace	-	-	2

※ Oil symbol

Please refer to the recommended lubricants for specification.

DF : Diesel fuel

GO : Gear oil

HO : Hydraulic oil

C : Coolant

PGL : Grease


EO : Engine oil

## 6. SERVICE INSTRUCTION

### 1) CHECK ENGINE OIL LEVEL

Check the oil level with the machine on a flat ground before starting engine.


- (1) Pull out the dipstick and wipe with a clean cloth.
- (2) Check the oil level by inserting the dipstick completely into the hole and pulling out again.
- (3) **If oil level is LOW, add oil and then check again.**
  - ※ **If the oil is contaminated or diluted, change the oil regardless of the regular change interval.**
  - ※ **Check oil level after engine has been stopped for 15 minutes.**
  - ▲ **Do not operate unless the oil level is in the normal range.**

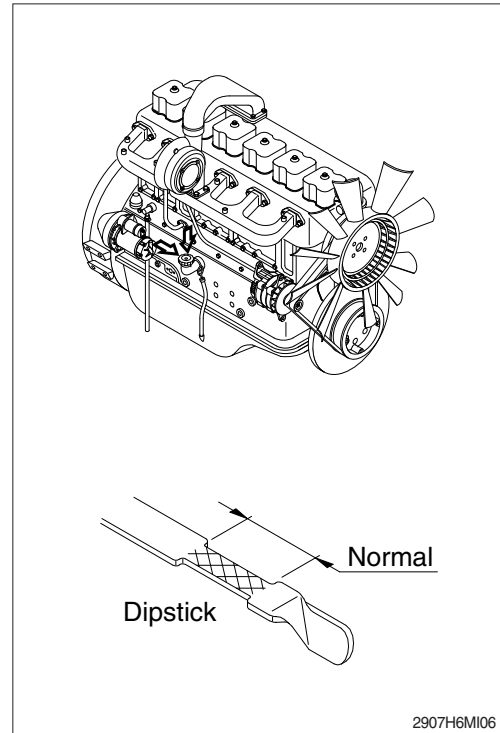


### 2) REPLACEMENT OF ENGINE OIL AND OIL FILTER

- (1) Warm up the engine.
- (2) Remove the plug and allow the oil to drain.
  - ※ **A drain pan with a capacity of 30 liters (7.9 U.S. gallons) will be adequate.**
- (3) Fill the engine with clean oil to the proper level.
  - Quantity : 27.3 l (7.2 U.S. gallons)
- (4) Operate the engine at low idle and inspect for leaks at the filters and the drain plug.

Shut the engine off and check the oil level with the dipstick. Allow 15 minutes for oil to drain down before checking.


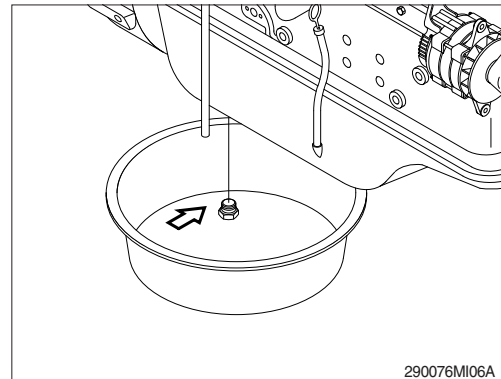


- (5) Clean around the filter head, remove the filter and clean the gasket surface.
- (6) Apply a light film of lubricating oil to the gasket sealing surface before installing the filters.
- ※ **Fill the filters with clean lubricating oil.**
- (7) Install the filter to the filter head.
- ※ **Mechanical over-tightening may distort the threads or damage the filter element seal.**
  - Install the filter as specified by the filter manufacturer.

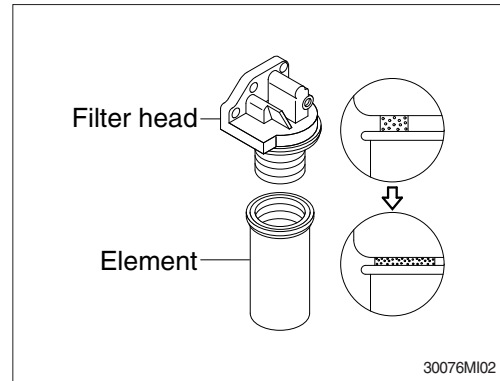

### 3) CHECK COOLANT

- (1) Check if the level of coolant in reservoir tank is between FULL and LOW.
  - (2) Add the mixture of antifreeze and water after removing the cap of the reservoir tank if coolant is not sufficient.
  - (3) Be sure to add the coolant by opening the cap of radiator when coolant level is below LOW.
  - (4) Replace gasket of radiator cap when it is damaged.
- ▲ **Hot coolant can spray out if radiator cap is removed while engine is hot. Remove the cap after the engine has cooled down.**

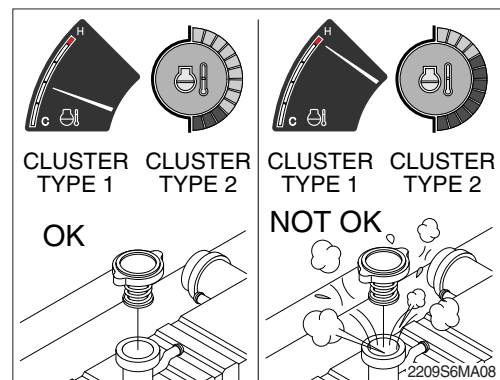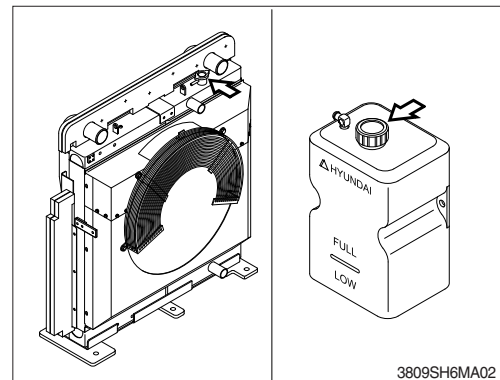

#### 4) FLUSHING AND REFILLING OF RADIATOR

##### (1) Change coolant

- ▲ Avoid prolonged and repeated skin contact with used antifreeze. Such prolonged repeated contact can cause skin disorders or other bodily injury.


Avoid excessive contact-wash thoroughly after contact.

Keep out of reach of children.

- ※ Protect the environment : Handling and disposal of used antifreeze can be subject to federal, state, and local law regulation.


Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for the receipt of used antifreeze.

If in doubt, contact your local authorities for guidance as to proper handling of used antifreeze.

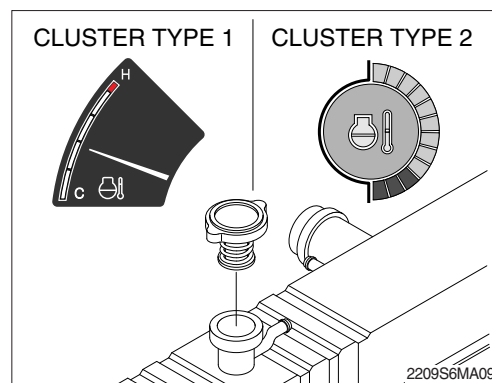


##### (2) Flushing of cooling system


- ① Fill the system with a mixture of sodium carbonate and water (or a commercially available equivalent).
- ※ Use 0.5 kg (1.0 pound) of sodium carbonate for every 23 liters (6.0 U.S. gallons) of water.
- ※ Do not install the radiator cap. The engine is to be operated without the cap for this process.

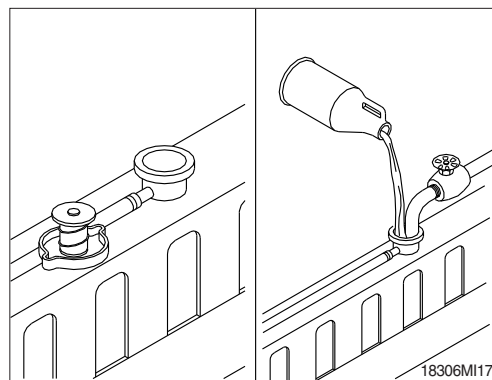


- ② Operate the engine for 5 minutes with the coolant temperature above 80°C (176°F). Shut the engine off, and drain the cooling system.

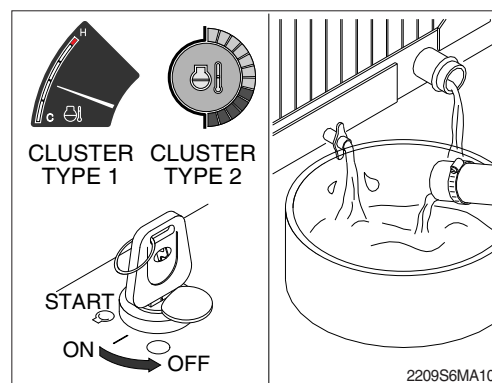

- ③ Fill the cooling system with clean water.
- ※ **Be sure to vent the engine and aftercooler for complete filling.**
- ※ **Do not install the radiator cap or the new coolant filter.**

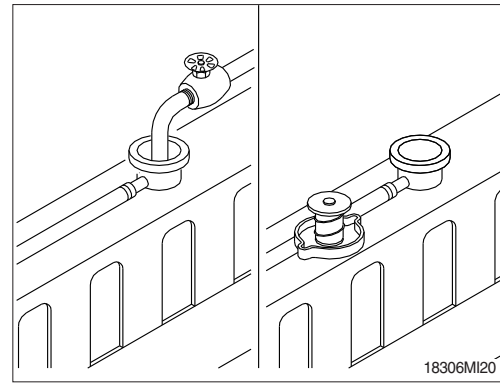


- ④ Operate the engine for 5 minutes with the coolant temperature above 80°C (176°F). Shut the engine off, and drain the cooling system.
- ※ **If the water being drained is still dirty, the system must be flushed again until the water is clean.**

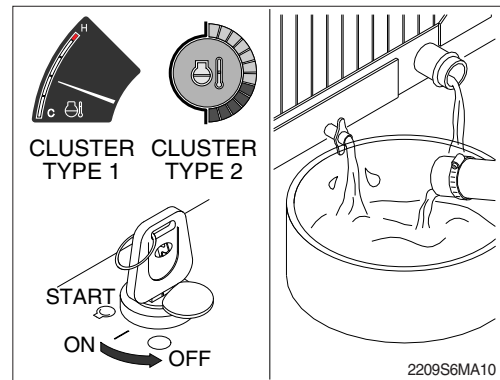


### (3) Cooling system filling

- ① Use a mixture of 50 percent soft water and 50 percent ethylene glycol antifreeze to fill the cooling system. Refer to the page 6-10.
- ※ **Use the correct amount of DCA4 corrosion inhibitor to protect the cooling system.**
- ※ **Do not use hard water such as river water or well water.**

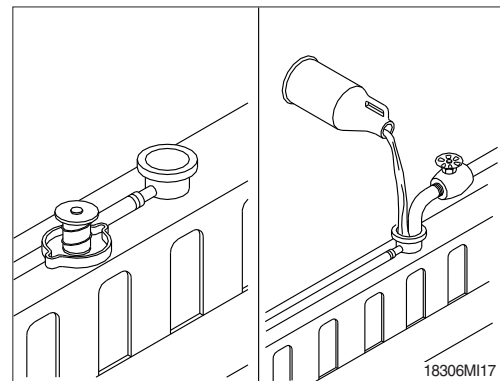

- ② Install the pressure cap. Operate the engine until it reaches a temperature 80°C (176°F), and check for coolant leaks. Check the coolant level again to make sure the system is full of coolant.


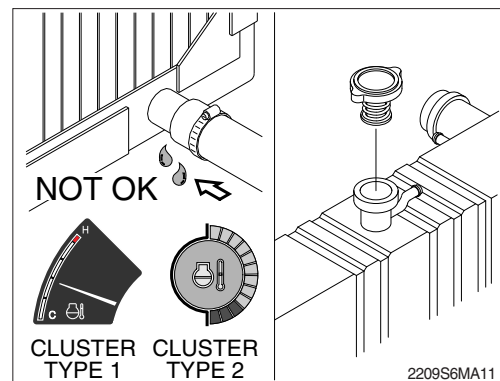




## 5) CLEAN RADIATOR AND OIL COOLER


Check, and if necessary, clean and dry outside of radiator and oil cooler. After working in a dusty place, clean radiator more frequently.

- (1) Visually inspect the radiator for clogged radiator fins.
- (2) Use 550 kPa (80 psi) air pressure to blow the dirt and debris from the fins.  
Blow the air in the opposite direction of the fan air flow.
- (3) Visually inspect the radiator for bent or broken fins.  
※ **If the radiator must be replaced due to bent or broken fins which can cause the engine to overheat, refer to the manufacturer's replacement procedures.**
- (4) Visually inspect the radiator for core leaks.

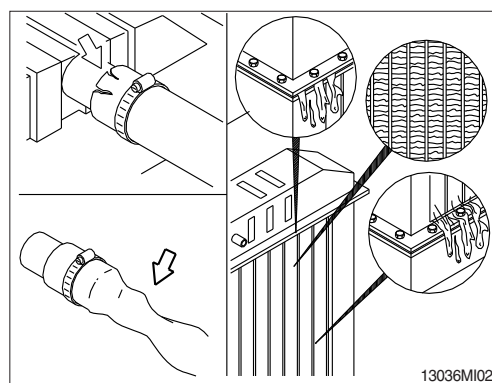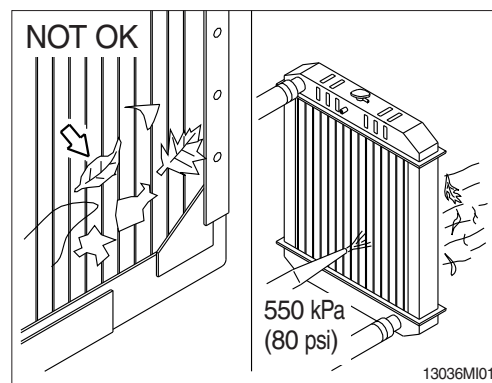

## 6) CHECK CHARGE AIR COOLER

Inspect the charge air cooler for dirt and debris blocking the fins. Check for cracks, holes, or other damage. If damage is found, please contact Hyundai distributor.

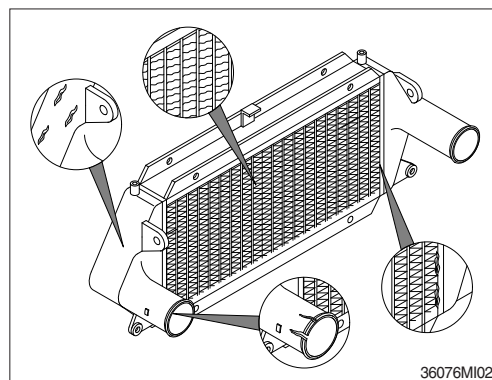


## 7) CLEANING OF AIR CLEANER

### (1) Primary element

- ① Loosen the clamp and remove the element.
  - ② Clean the inside of the body.
  - ③ Clean the element with pressurized air.
    - Remove the dust inside of the element by the pressurized air (below 3 kgf/cm<sup>2</sup>, 40 psi) forward and backward equally.
  - ④ Inspect for cracks or damage of element by putting a light bulb inside of the element.
  - ⑤ Insert element and tighten clamp.
- ※ **Replace the primary element after 4 times cleanings.**


### (2) Safety element

- ※ **Replace the safety element only when the primary element is cleaned for the 4 times.**
- ※ **Always replace the safety element. Never attempt to reuse the safety element by cleaning the element.**

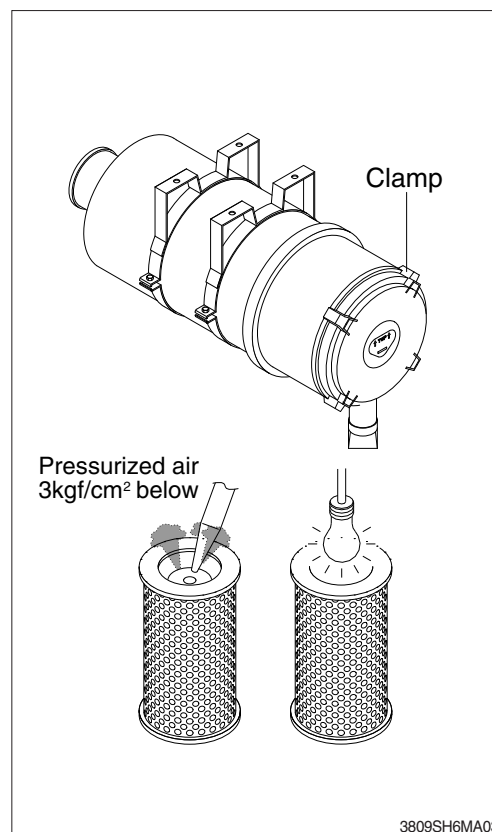


## 8) FAN BELT TENSION

- (1) Measure the belt deflection at the longest span of the belt.
  - Maximum deflection : 10 ~ 15 mm  
(3/8 to 1/2 inch)
- ※ **Adjust the belt tension so that the middle of the belt is pressed strongly, the belt deflection will be up to specification.**
- ※ **Slightly loosen the alternator mounting bolt and adjusting plate mounting bolt and move the alternator to right and left to adjust the tension.**

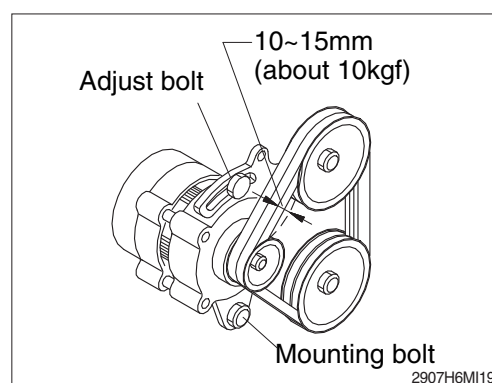

- (2) Inspect the drive belt, tension bearing and fan hub.

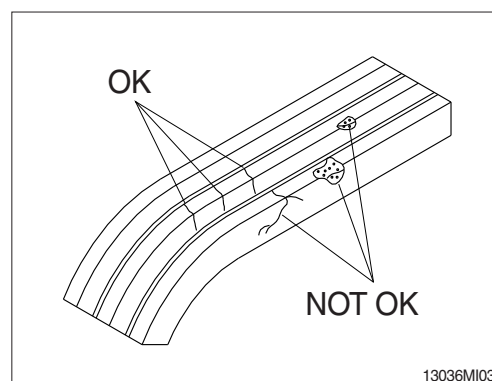

## 9) INSPECTION OF COOLING FAN

⚠ **Personal injury can result from a fan blade failure. Never pull or pry on the fan. This can damage the fan blade and cause fan failure.**


※ **Rotate the crankshaft by using the engine barring gear.**

※ **A visual inspection of the cooling fan is required daily.**

**Check for cracks, loose rivets, and bent or loose blades.**

**Check the fan to make sure it is securely mounted. Tighten the capscrews if necessary.**

**Replace any fan that is damaged.**

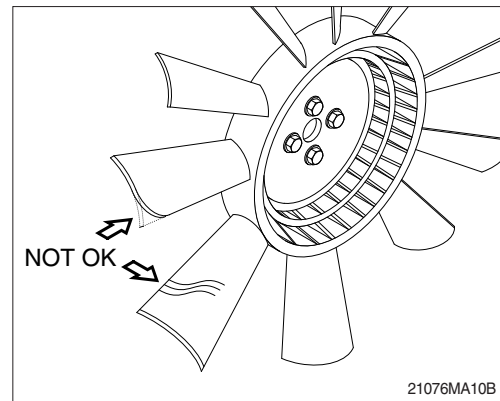

## 10) FUEL TANK

(1) Fill fuel fully when system the operation to minimize water condensation, and check it with fuel gauge before starting the machine.


(2) Drain the water and sediment in the fuel tank by opening the drain cock.

※ **Be sure to LOCK the cap of fuel tank.**

※ **Remove the strainer of the fuel tank and clean it if contaminated.**

⚠ **Stop the engine when refueling.**

**All lights and flames shall be kept at a safe distance while refueling.**

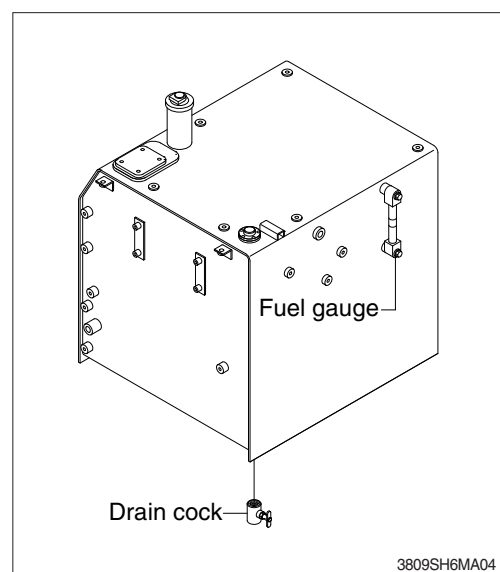


## 11) PREFILTER

- ※ Inspect or drain the collection bowl of water daily and replace the element every 500 hours.



### (1) Drain water

- ① Open bowl drain valve to evacuate water.
- ② Close drain valve.

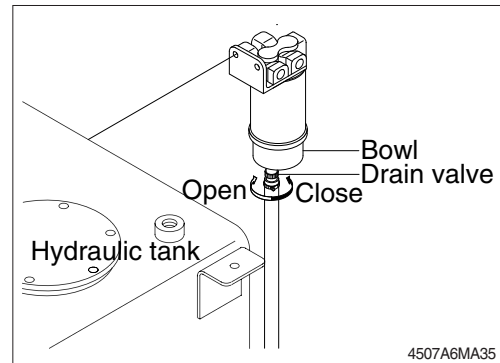


### (2) Replace element

- ① Drain the unit of fuel. Follow "Drain water" instructions above.
- ② Remove element and bowl from filter head.
  - ※ **The bowl is reusable, do not damage or discard.**
- ③ Separate element from bowl. Clean bowl and seal gland.
- ④ Lubricate new bowl seal with clean fuel or motor oil and place in bowl gland.
- ⑤ Attach bowl to new element firmly by hand.
- ⑥ Lubricate new element seal and place in element top gland.
- ⑦ Attach the element and bowl to the head.

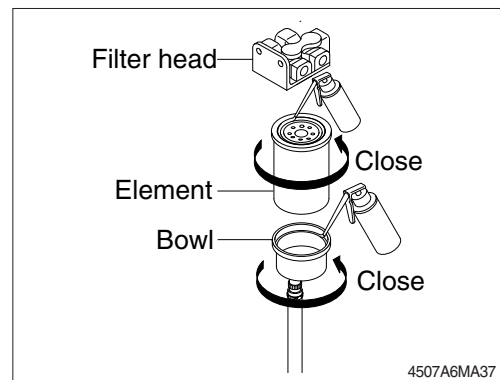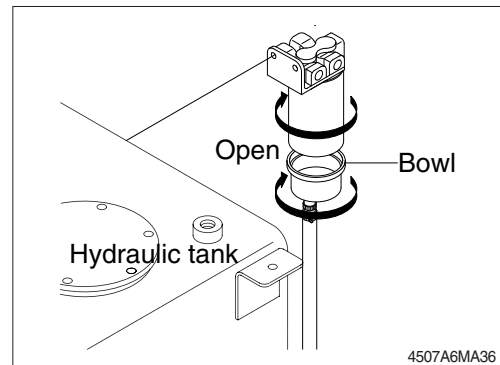


## 12) REPLACEMENT OF FUEL FILTER

- (1) Clean around the filter head, remove the filter and clean the gasket surface.
  - (2) Replace the O-ring.
  - (3) Fully fill fuel in the new filter.
  - (4) Apply engine oil on the gasket of new filter when mounting, and tighten  $3/4$  to 1 turn more after the gasket touches the filter head.
  - (5) Relieve the air after mounting.
- ※ **Check for fuel leakage after the engine starts.**
  - ※ **If air is in the fuel system, the engine will not start, Start engine after bleeding the air according to the method of bleeding air.**

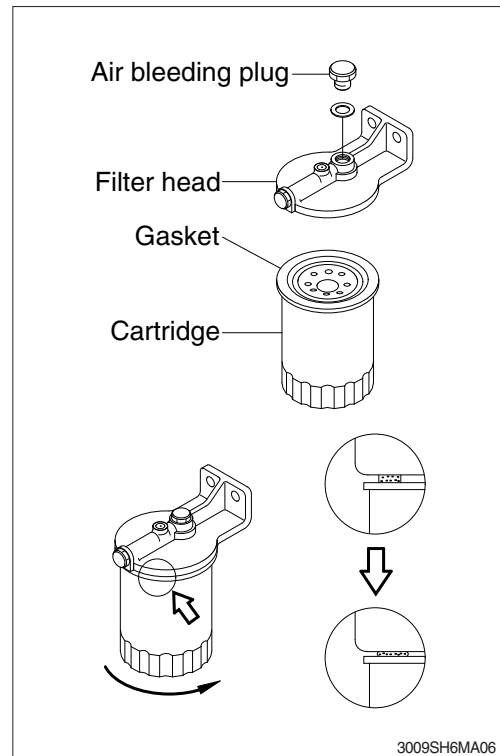


## 13) BLEEDING THE FUEL SYSTEM

- (1) Loosen the air bleeding plug of fuel filter.
  - (2) Turn the priming pump to the counterclock wise and operate up and down until the fuel flowing from the plug is free of air.
  - (3) Tighten the air bleeding plug.
  - (4) Loosen the air bleeding plug of fuel injector pump.
  - (5) Operate the priming pump up and down until the fuel flowing from the plug is free of air and then tight the air bleeding plug quickly.
  - (6) Tighten the priming pump with pressing.
  - (7) Start the starting motor to allow entrapped air to bleed from the lines.
- ※ **Clean fuel as leaked or drained on the fuel system.**

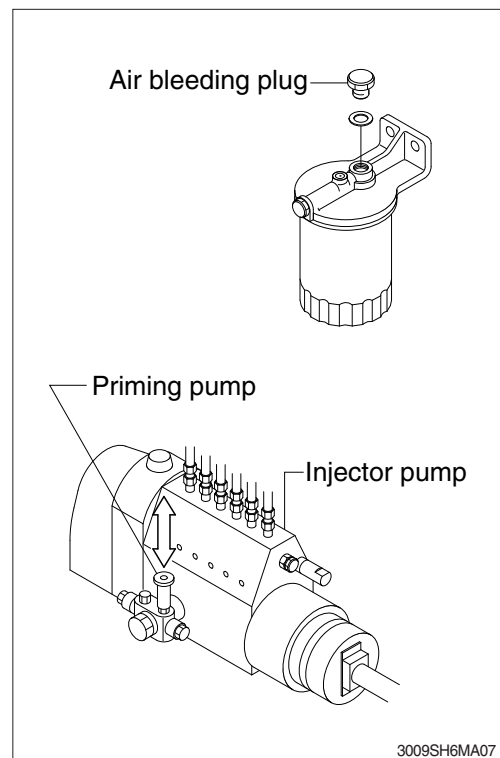


#### 14) LEAKAGE OF FUEL

- ▲ Be careful and clean the fuel hose, injection pump, fuel filter and other connections as the leakage from these part can cause fire.

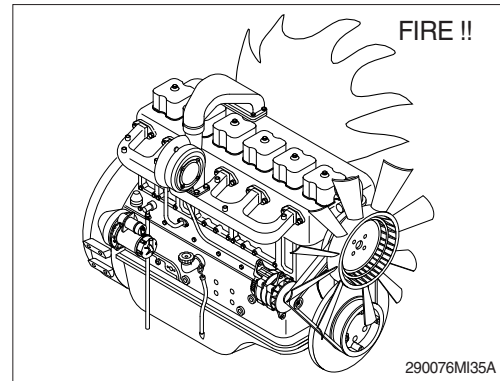


#### 15) HYDRAULIC OIL CHECK

- (1) Stop the engine after retract the arm and bucket cylinders, then lower the boom and set the bucket on the ground at a flat location as in the illustration.
- (2) Check the oil level at the level gauge of hydraulic oil tank.
- (3) The oil level is normal if between the red lines.

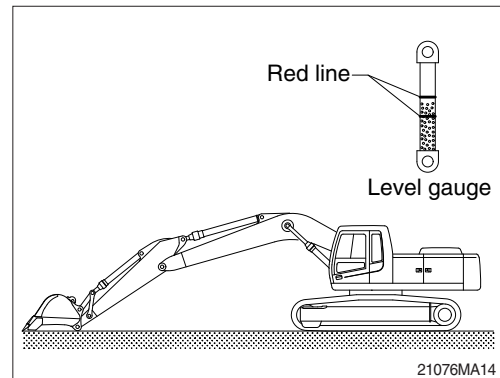


#### 16) FILLING HYDRAULIC OIL

- (1) Stop the engine to the position of level check.
- (2) Relieve the pressure in the tank by pushing the top of the air breather.
- (3) Remove the breather on the top of oil tank and fill the oil to the specified level.
- (4) Start engine after filling and operate the work equipment several times.
- (5) Check the oil level at the level check position after engine stops.

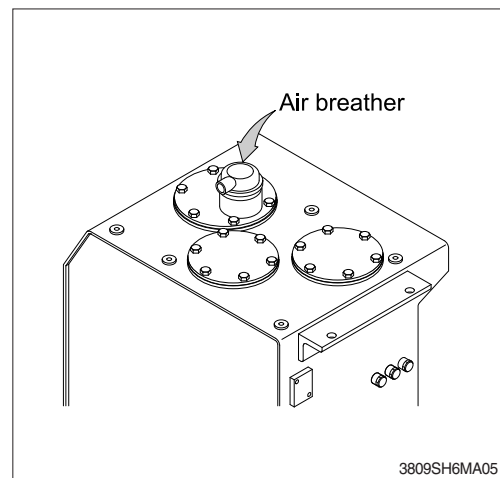

## 17) CHANGE HYDRAULIC OIL


- (1) Lower the bucket on the ground pulling the arm and bucket cylinder to the maximum.
- (2) Relieve the pressure in the tank by pushing the top of the air breather.
- (3) Remove the cover.
  - Tightening torque :  $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$   
( $50 \pm 10 \text{ lbf} \cdot \text{ft}$ )
- (4) Prepare a suitable container.
- (5) To drain the oil loosen the drain plug at the bottom of the oil tank.
- (6) Fill proper amount of recommended oil.
- (7) Put the breather in the right position.
- (8) Bleed air hydraulic pump loosen the air breather at top of hydraulic pump assembly.
- (9) Start engine and run continually. Release the air by full stroke of each control lever.

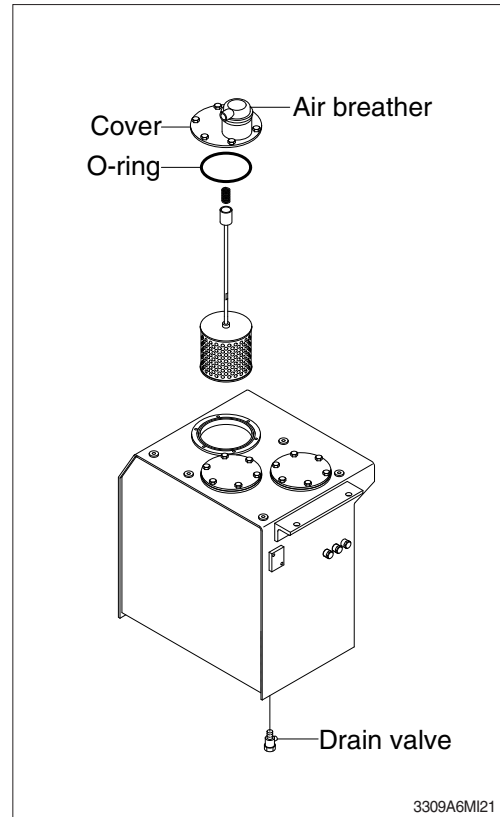

## 19) CLEAN SUCTION STRAINER

Clean suction strainer as follows paying attention to the cause to be kept during oil filling.


- (1) Remove the cover.
    - Tightening torque :  $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$   
( $50 \pm 10 \text{ lbf} \cdot \text{ft}$ )
  - (2) Pull out the strainer in the tank.
  - (3) Wash the foreign material on the suction strainer with gasoline or cleaning oil.
  - (4) Replace the suction strainer if it is damaged.
  - (5) Assemble with reverse order of disassembly.  
Be sure to install a new O-ring and reinsert in the oil tank.
- ※ Loosen the bolt slowly at the cover can be spring out by the spring when removing it.

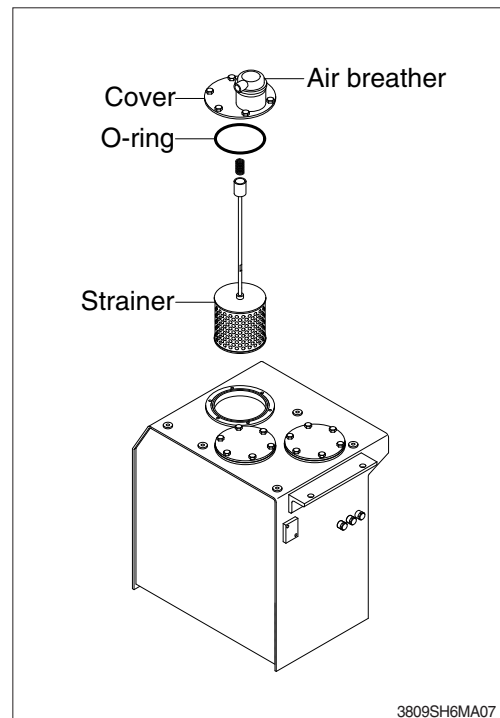

### 19) REPLACEMENT OF RETURN FILTER


Replace as follows paying attention to the cause to be kept during the replacement.

- (1) Remove the cover.
  - Tightening torque :  $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$   
( $50 \pm 10 \text{ lbf} \cdot \text{ft}$ )
- (2) Remove the spring, by-pass valve, and return filter in the tank.
- (3) Replace the element with new one.

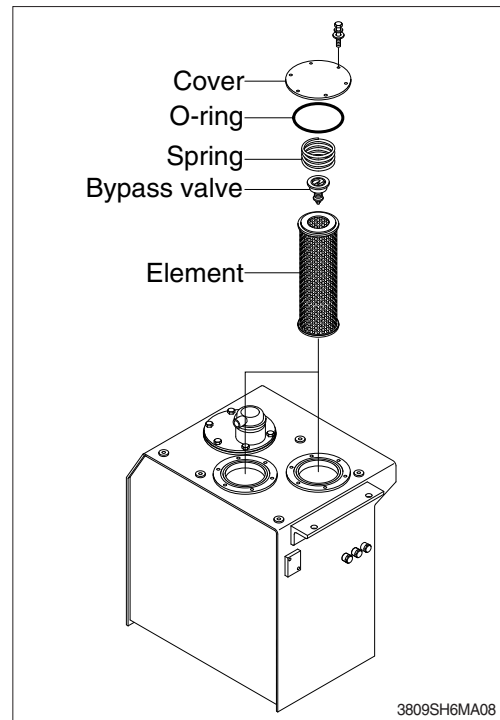

### 20) REPLACEMENT OF ELEMENT IN HYDRAULIC TANK BREATHER


- (1) Relieve the pressure in the tank by pushing the top of the air breather.
- (2) Remove the cover.
- (3) Remove the snap ring and pull out the filter element.
- (4) Replace the filter element new one.
- (5) Reassemble by reverse order of disassembly.
  - Tightening torque :  $0.2 \sim 0.3 \text{ kgf} \cdot \text{m}$   
( $1.4 \sim 2.1 \text{ lbf} \cdot \text{ft}$ )

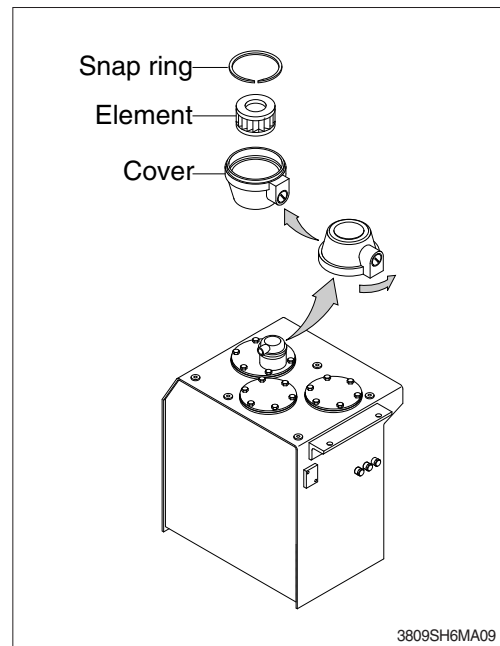

### 21) REPLACE OF DRAIN FILTER CARTRIDGE

Clean the dust around filter and replace with new one after removing the cartridge.


- ※ Tighten about 2/3 turn more after the gasket of cartridge contacts seal side of filter body for mounting.
- ※ Change cartridge after initial 50 hours of operation. Thereafter, change cartridge every 1000 hours.

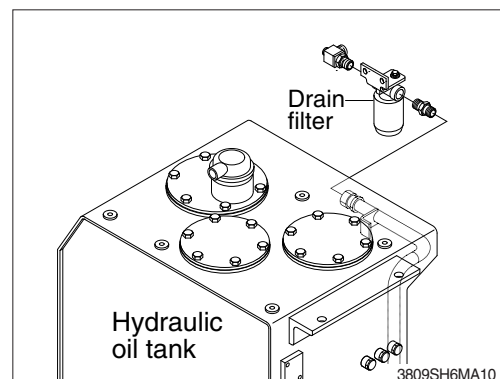




## 22) REPLACE OF PILOT LINE FILTER

- (1) Loosen the nut positioned on the filter body.
  - (2) Pull out the filter element and clean filter housing.
  - (3) Install the new element and tighten using specified torque.
- ※ **Change cartridge after initial 250 hours of operation. Thereafter, change cartridge every 1000 hours.**

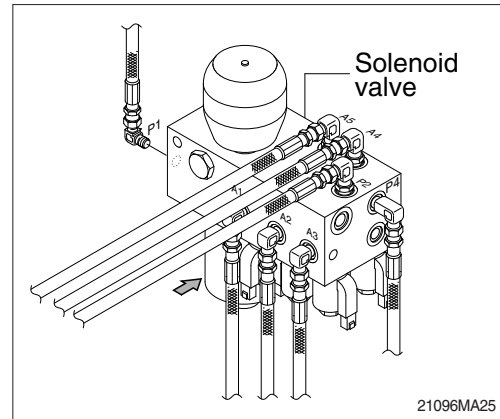

## 23) CHECK THE SWING REDUCTION GEAR OIL

- (1) Pull out the dipstick and clean it.
- (2) Insert it again.
- (3) Pull out one more time to check the oil level and fill the oil if the level is not sufficient.

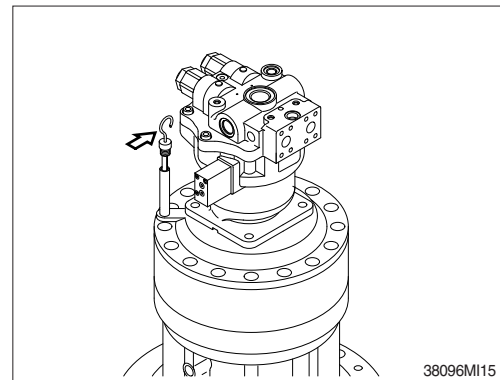


## 24) CHANGE SWING REDUCTION GEAR OIL

- (1) Raise the temperature of oil by swinging the machine before replace the oil and park the machine on the flat ground.
- (2) Loosen the plug of the drain port.
- (3) Drain into a proper container.
- (4) Wash the drain plug and reinstall it with sealing tape.


Fill proper amount of recommended oil.

• Amount of oil : 8.0 l (2.1 U.S.gal)

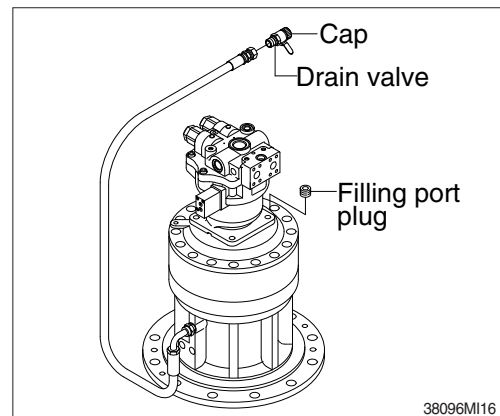


## 25) LUBRICATE BEARING OF OUTPUT SHAFT IN REDUCTION GEAR

- (1) Remove air vent plug.
  - (2) Lubricate NLGI No.2 with grease gun until comes out new grease from air vent port.
- Amount of oil : 1.6 l (0.42 U.S.gal)

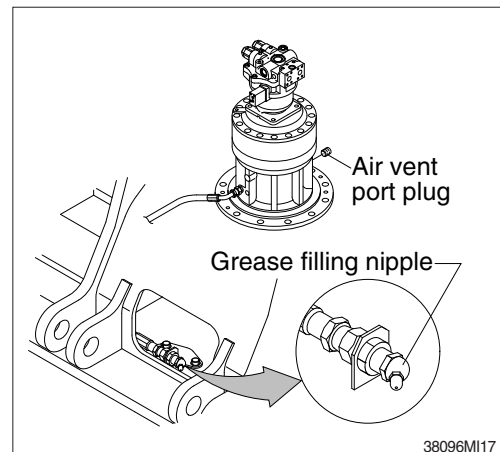

## 26) LUBRICATE SWING BEARING


- (1) Grease at 2 fitting.
- ※ Lubricate every 250 hours.

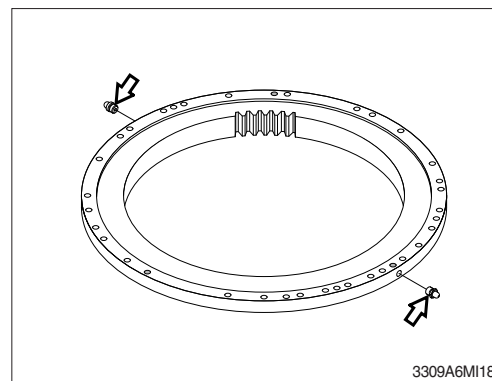

## 27) SWING GEAR AND PINION


### (1) Drain old grease

- ① Remove under cover of lower frame.
- ② Remove drain cover of lower frame.
- ③ Remove filler cover of upper frame.
- ④ Operate full turn (360°) of swing several times.

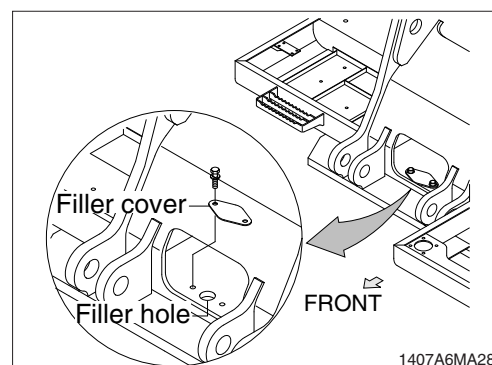


### (2) Refill new grease

- ① Install drain cover.
- ② Fill with new grease.
- ③ Install filler cover.
- Capacity : 16.9 kg (37 lb)

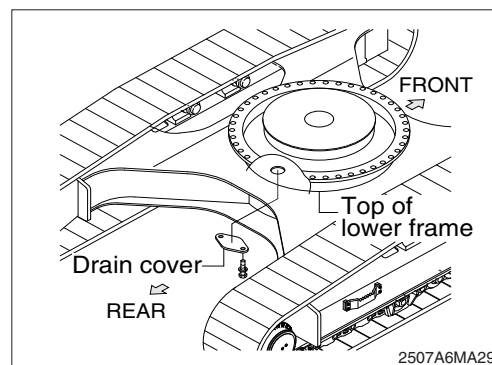


## 28) CHECK THE TRAVEL REDUCTION GEAR OIL

- (1) Operate the machine to the position of drain plug down to the flat ground.
- (2) Loosen the level plug and check the oil level.  
If the level is at the hole of the plug, it is normal.  
Fill the oil if it is not sufficient.
- Amount of oil : 4.3 l (1.1 U.S.gal)

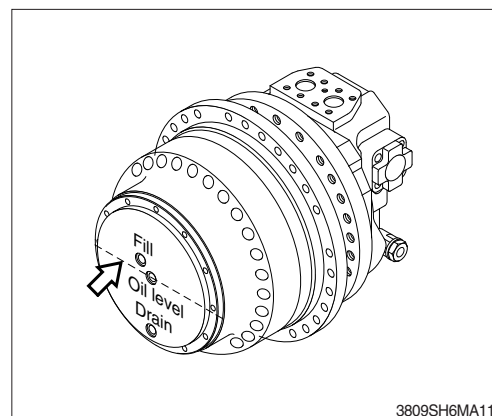


### 29) CHANGE OF THE TRAVEL REDUCTION GEAR OIL

- (1) Raise the temperature of the oil by traveling machine first.
- (2) Stop when the position of the drain plug is down.
- (3) Loosen the level plug and then the drain plug.
- (4) Drain the oil to adequate container.
- (5) Tighten the drain plug and fill specified amount of oil at filling port.
- (6) Tighten the level plug and travel slowly to check if there is any leakage of oil.

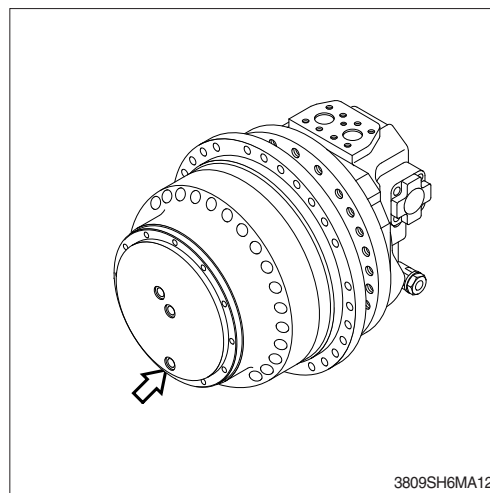

### 30) LUBRICATE RCV LEVER

Remove the bellows and with a grease gun grease the joint part (A) and sliding parts (B).

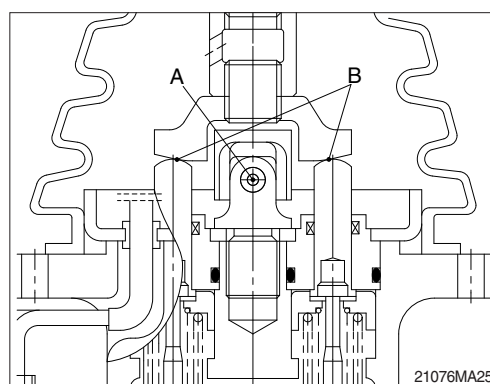


### 31) ADJUSTMENT OF TRACK TENSION

※ It is important to adjust the tension of track properly to extend the lifetime of track and traveling device.

※ The wear of pins and bushings on the undercarriage will vary with the working conditions and soil properties.

It is thus necessary to continually inspect the track tension so as to maintain the standard tension on it.

- (1) Raise the chassis with the boom and arm.
  - (2) Measure the distance between bottom of track frame on track center and track of shoe.
- ※ **Remove mud with rotating the track before measuring.**

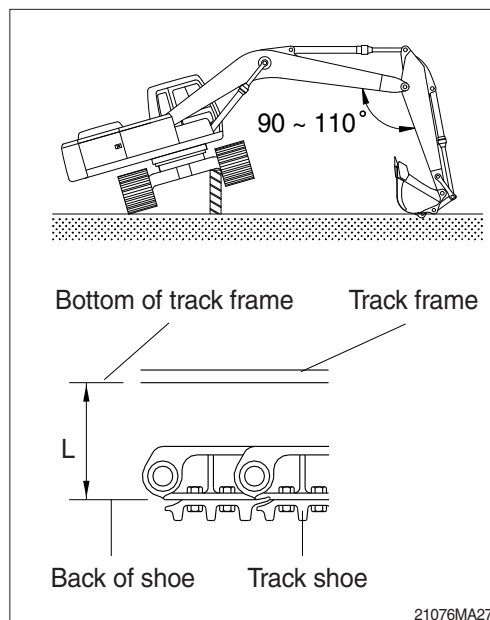

(3) If the tension is tight, drain the grease in the grease nipple and if the tension is loose, charge the grease.

**▲ Personal injury or death can result from grease under pressure.**

**▲ When loosening the grease nipple, do not loosen more than one turn as there is a danger of a spring coming out of the nipple because of the high pressure inside.**

**※ When the grease is drained, move the track to the forward and backward slightly.**

If the track tension is loose even after the grease is charged to the maximum, change the pins and bushings as there are worn seriously.

Working condition	Length (L)	
	mm	in
General	390~420	15.4~16.5
Swamp	420~460	16.5~18.1
Sand, Mud, Pebbles	About 460	About 18.1

### 32) REPLACEMENT OF BUCKET

⚠ When knocking the pin in with a hammer, metal particles may fly and cause serious injury, particularly if they get into your eyes. When carrying out this operation, always wear goggles, helmet, gloves, and other protective equipment.

- ※ When the bucket is removed, place it in a stable condition.
- ※ When performing joint work, make sure signals to each other and work carefully for safety's sake.

(1) Lower the bucket on the ground as the picture shown in the right.

(2) Lock the safety lever to the LOCK position and stop the engine.

(3) Remove the stopper bolts (1) and nuts (2), then remove pins (3, 4) and remove the bucket.

※ When removing the pins, place the bucket so that it is in light contact with the ground.

※ If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.





※ After remove the pins, make sure that they do not become contaminated with sand or mud and that the seals of bushing on both sides do not become damaged.

(4) Align the arm with holes (A) and the link with holes (B), then coat with grease and install pins(3, 4)

※ When installing the bucket, the O-rings are easily damaged, so fit the O-rings on the boss of the bucket as shown in the picture.

After knocking the pin, move the O-ring down to the regular groove.


(5) Install the stopper bolt (1) and nuts (2) for each pin, then grease the pin.

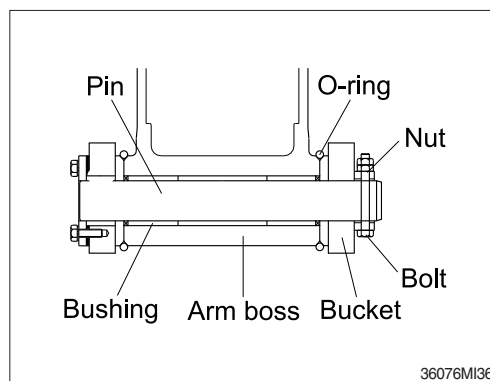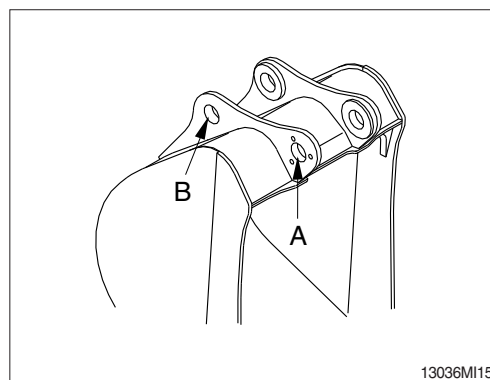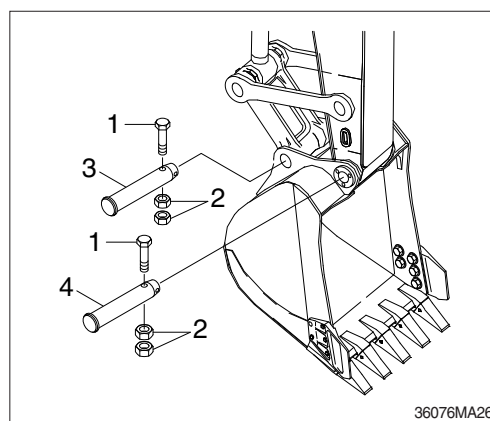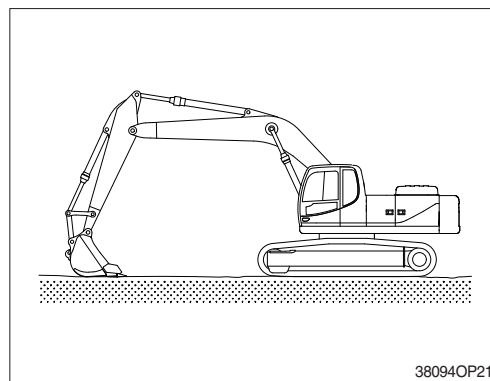

### 33) REPLACEMENT OF BUCKET TOOTH

#### (1) Timing of replacement

- ① Check wearing condition as shown in the illustration and replace tooth tip before adapter starts to wear.
- ② If excessive use, tooth adapter has worn out, replacement may become impossible.

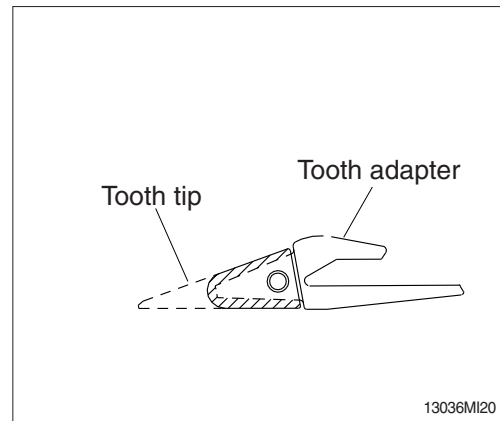


#### (2) Instructions for replacement

- ① Pull out pin by striking pin with punch or hammer, avoiding damage to locking washer.
- ② Remove dust and mud from surface of tooth adapter by using knife.
- ③ Place locking washer in its proper place, and fit tooth tip to adapter.
- ④ Insert pin until locking washer is positioned at tooth pin groove.

▲ Personal injury can result from bucket falling.

▲ Block the bucket before changing tooth tips or side cutters.

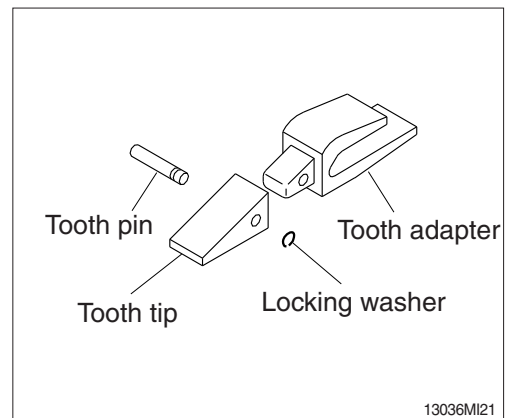


### 34) ADJUSTMENT OF BUCKET CLEARANCE

- (1) Lower the bucket on the ground as the picture shown in the right.
- (2) Swing to the left and keep the arm boss to be contact to the bucket left.
- (3) Lock the safety lever to the LOCK position and stop the engine.
- (4) Measure the clearance (A) between bucket and arm boss. This is the total clearance.

#### (5) Adjusting

- ① Loosen bolt (2), and remove washer (3), plate (1) and shim (4).
- ② Remove the shim equivalent value with measuring value.
- ③ Assemble the parts in the reverse order of removal.
  - Tightening torque :  $29.6 \pm 3.2 \text{ kgf} \cdot \text{m}$   
( $214.0 \pm 23.1 \text{ lbf} \cdot \text{ft}$ )
  - Normal clearance :  $0.5 \sim 1.0 \text{ mm}$   
( $0.02 \sim 0.04 \text{ in}$ )

※ If the bucket is not adjusted correctly, noise and vibration created during operation, and damaged O-ring, pin and bushing quickly.

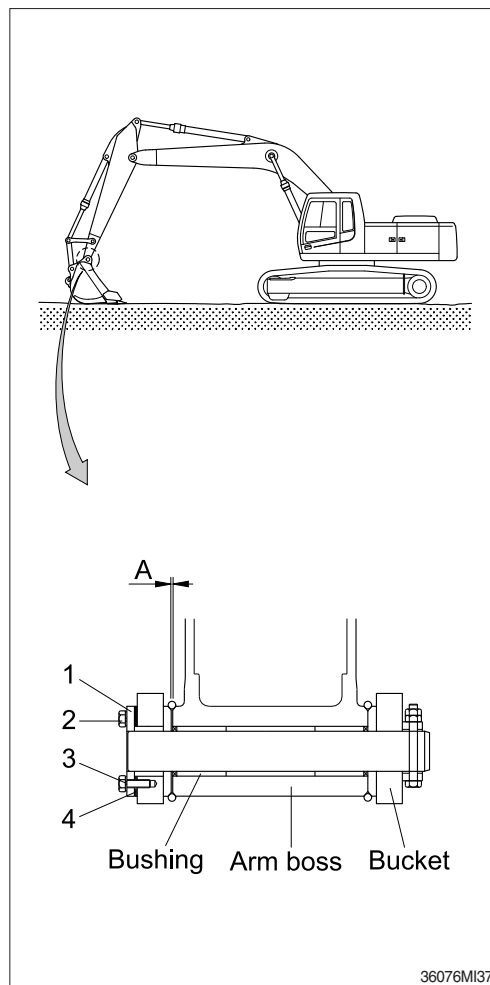


### 35) LUBRICATE PIN AND BUSHING

#### (1) Lubricate to each pin of working device

Lubricate the grease to the grease nipple according to the lubricating interval.


No.	Description	Qty
1	Lubrication manifold at boom	5
2	Boom cylinder pin	2
3	Boom and arm connection pin	1
4	Arm cylinder pin (Rod side)	1
5	Bucket cylinder pin (Head, rod)	2
	Bucket link (Control rod)	3
	Arm and control link connection pin	1
	Arm and bucket connection pin	1
6	Boom rear bearing center	1

※ **Shorten lubricating interval when working in the water or dusty place.**

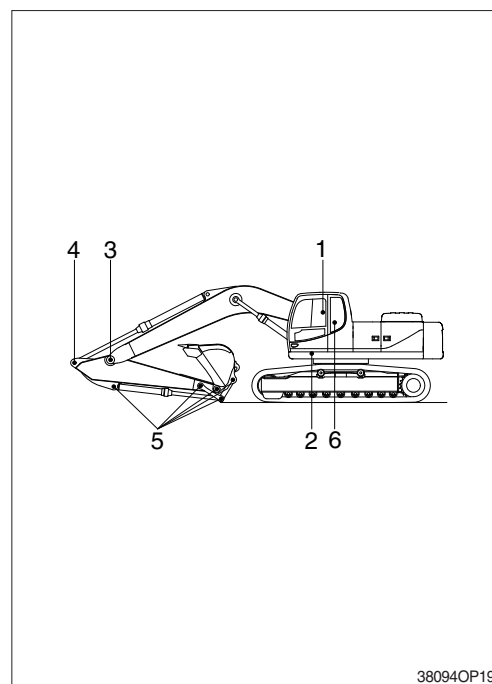


(2) Dust seals are mounted on the rotating part of working device to extend the lubricating interval.

※ **Mount the lip to be faced outside when replace the dust seal.**

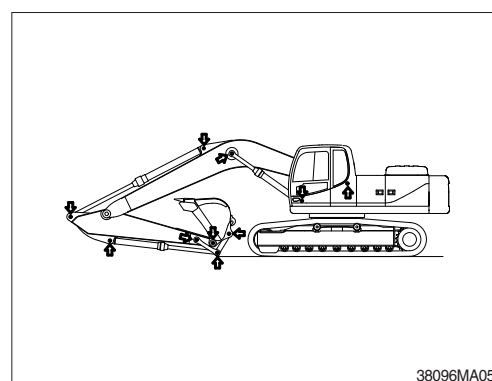

※ **If it is assembled in wrong direction, it will cause fast wear of pin and bushing, and create noise and vibration during operation.**

※ **Assemble the seal same direction with picture and use with plastic hammer when replace.**

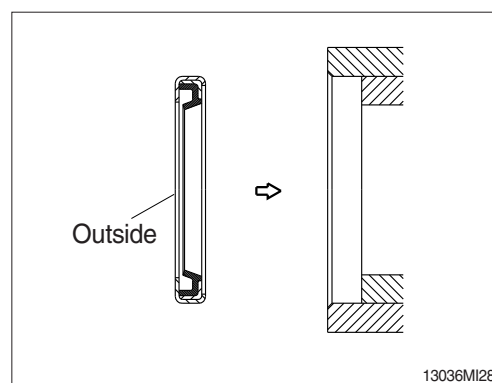




## 7. ELECTRICAL SYSTEM

### 1) WIRING, GAUGES

Check regularly and repair loose or malfunctioning gauges when found.

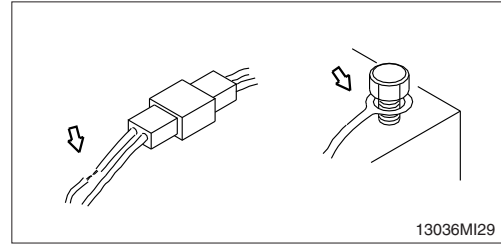

### 2) BATTERY

#### (1) Clean


- ① Wash the terminal with hot water if it is contaminated, and apply grease to the terminals after washing.

⚠ **Battery gas can explode. Keep sparks and flames away from batteries.**

⚠ **Always wear protective glasses when working with batteries.**

⚠ **Do not stain clothes or skin with electrolyte as it is acid.**

Be careful not to get the electrolyte in eyes.  
Wash with clean water and go to the doctor if it enters the eyes.

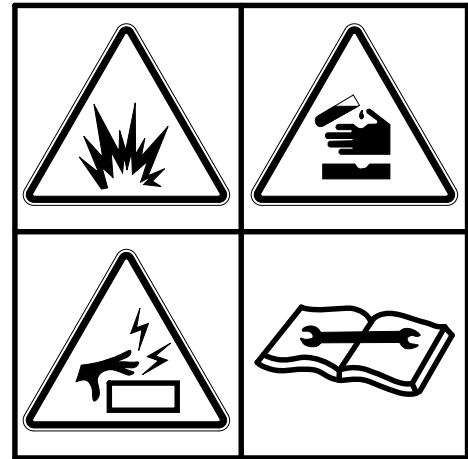

36070FW05

#### (2) Recycle


Never discard a battery.

Always return used batteries to one of the following locations.

- A battery supplier
- An authorized battery collection facility
- Recycling facility

#### (3) Method of removing the battery cable

Remove the cable from the ground connection first (⊖ terminal side) and reconnect it last when reassembling.

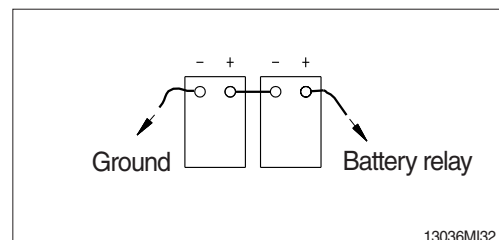

### 3) STARTING THE ENGINE WITH A BOOSTER CABLE


Keep following order when you are going to start engine using booster cable.

#### (1) Connection of booster cable

※ **Use the same capacity of battery for starting.**


- ① Make sure that the starting switches of the normal machine and trouble machine are both at the OFF position.
- ② Connect the red terminal of booster cable to the battery (+) terminal between exhausted and new battery.
- ③ Connect the black terminal of the booster cable between new battery (-) terminal and chassis of trouble machine.

※ **Keep firmly all connection, the spark will be caused when connecting finally.**

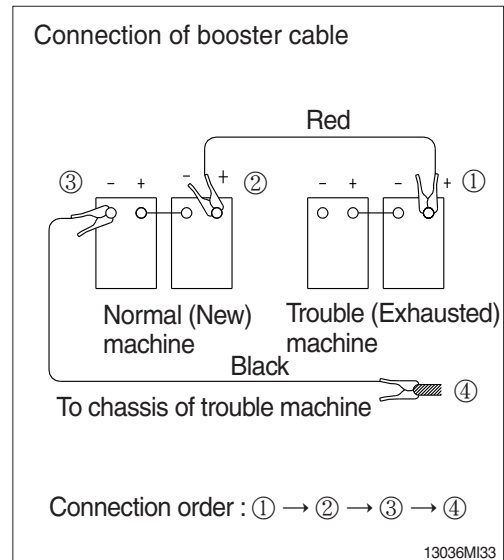

#### (2) Starting the engine

- ① Starting the engine of the normal machine and keep it to run at high idle.
- ② Start engine of the trouble machine with starting switch.
- ③ If you can not start it by one time, restart the engine after 2 minutes.

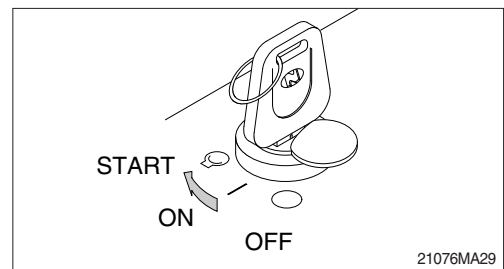

#### (3) Taking off the booster cable


- ① Take off the booster cable (black).
- ② Take off the booster cable (red) connected to the (+) terminal.
- ③ Run engine with high idle until charging the exhausted battery by alternator, fully.

▲ **Explosive gas is generated while using the battery or charging it. Keep away flame and be careful not to cause the spark.**

※ **Charge the battery in the well ventilated place.**

※ **Place the machine on the earth or concrete. Avoid charging the machine on the steel plate.**


※ **Do not connect (+) terminal and (-) terminal when connecting booster cable because it will be shorted.**

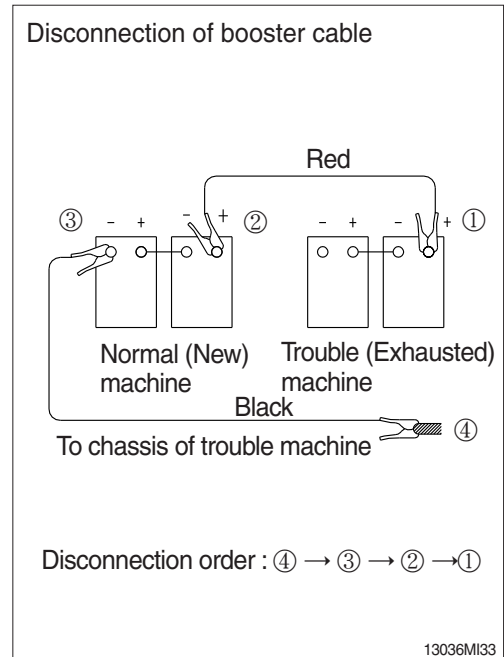

#### (4) Welding repair

Before start to welding, follow the below procedure.

- ① Shut off the engine and remove the starting switch.
  - ② Disconnect ground cable from battery by master switch.
  - ③ Before carrying out any electric welding on the machine, the battery cables should be disconnected and the connectors pulled out of the electronic control units (MCU, cluster etc).
  - ④ Connect the earth (ground) lead of the welding equipment as close to the welding point as possible.
- ※ Do not weld or flame cut on pipes or tubes that contain flammable fluids. Clean them thoroughly with nonflammable solvent before welding or flame cutting on them.
- ▲ Do not attempt to welding work before carry out the above.  
If not, it will caused serious damage at electric system.

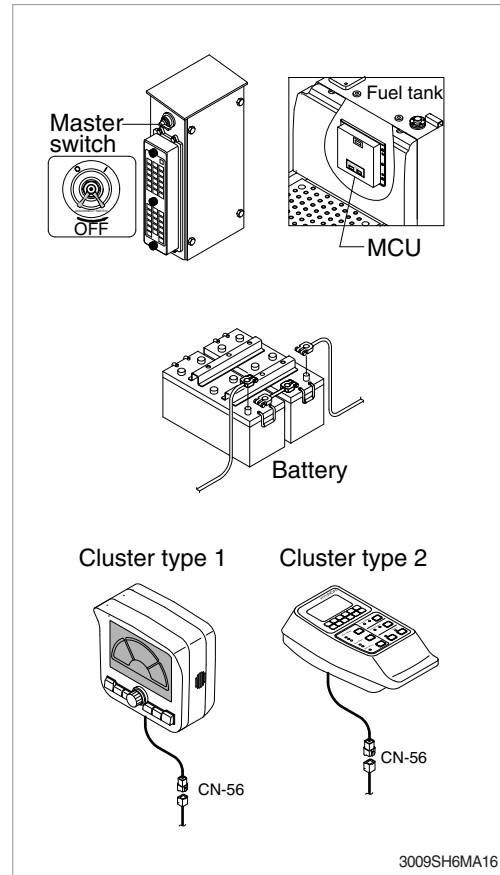


## 8. AIR CONDITIONER AND HEATER

### 1) CLEAN AND REPLACE OF FRESH AIR FILTER


※ **Always stop the engine before servicing.**

(1) Open the LH side cover.

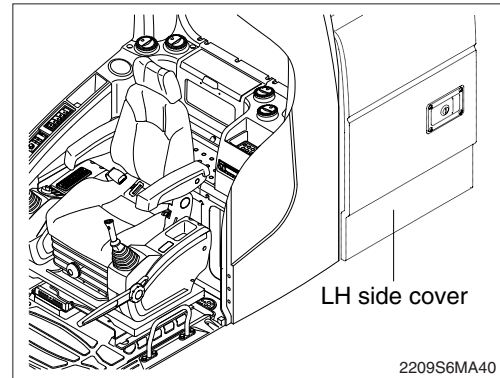

(2) Remove the fresh air filter.


※ **When installing a filter, be careful not to change the filter direction.**

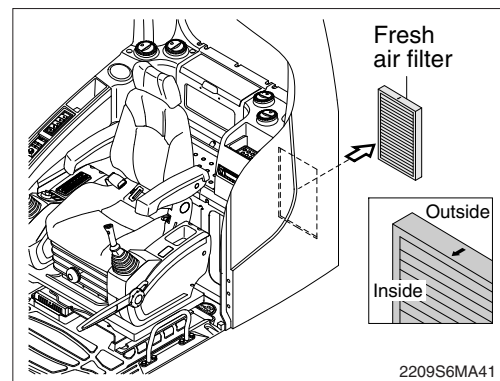

(3) Clean the filter using a pressurized air (below 2 kgf/cm<sup>2</sup>, 28 psi).

△ **When using pressurized air, be sure to wear safety glasses.**


(4) **Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.**

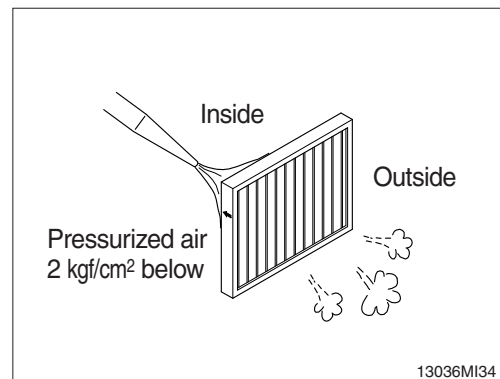


### 2) CLEAN AND REPLACE OF RECIRCULATION FILTER

※ **Always stop the engine before servicing.**

(1) Move seat and console box to arrow direction using the adjust lever.

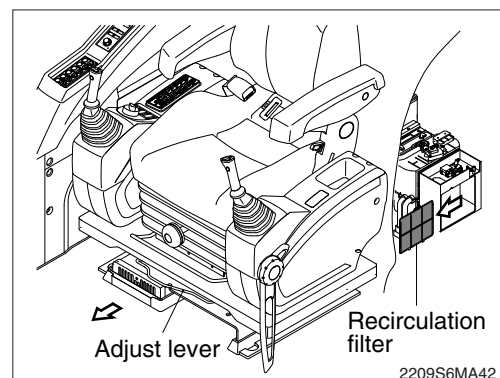

- (2) Remove recirculation filter.

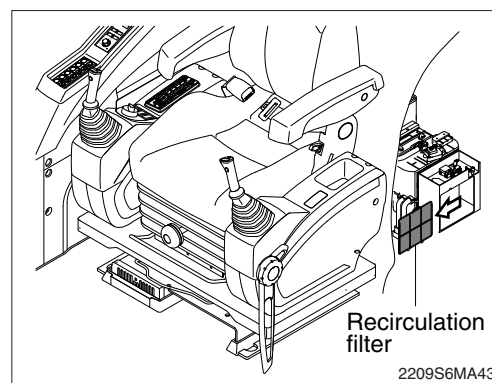


- (3) Clean the recirculation filter using a pressurized air (below 2 kgf/cm<sup>2</sup>, 28 psi) or washing with water.

△ When using pressurized air, be sure to wear safety glasses.

※ Dry off after washing with water.

- (4) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

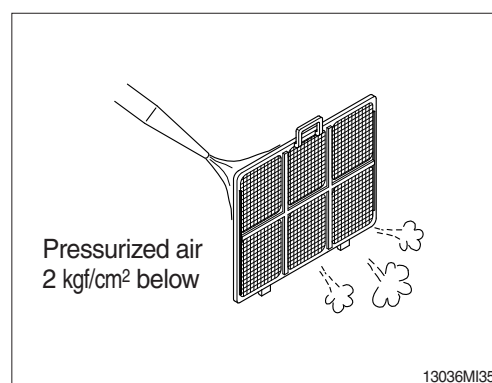

### 3) PRECAUTIONS FOR USING AIR CONDITIONER

- (1) When using the air conditioner for a long time, open the window once every one hour.
- (2) Be careful not to overcool the cab.
- (3) The cab is properly cooled if the operator feels cool when entering there from outside (about 5°C lower than the outside temperature).
- (4) When cooling, change air occasionally.

### 4) CHECK DURING SEASON

Ask the service center for replenishment of refrigerant or other maintenance service so that the cooling performance is not damaged.

### 5) CHECK DURING OFF-SEASON

Operate the air conditioner 2 or 3 times a month (each for a few minutes) to avoid loss of oil film in the compressor.

### 6) Refrigerant (R134-a) amount : 800 ± 20 g

# TROUBLESHOOTING GUIDE

## 1. ENGINE

※ This guide is not intended to cover every conditions, however many of the more common possibilities are listed.

Trouble	Service	Remark
The engine oil pressure lamp lights ON when engine speed is raised after completion of warm up.	<ul style="list-style-type: none"> <li>• Add the oil to the specified level.</li> <li>• Replace the oil filter cartridge.</li> <li>• Check oil leakage from the pipe or the joint.</li> <li>• Replace the monitor.</li> </ul>	
Steam is emitted from the top part of the radiator (the pressure valve). Coolant level warning lamp lights ON.	<ul style="list-style-type: none"> <li>• Supply the coolant and check leakage.</li> <li>• Adjust fan belt tension.</li> <li>• Wash out inside of cooling system.</li> <li>• Clean or repair the radiator fin.</li> <li>• Check the thermostat.</li> <li>• Tighten the radiator cap firmly or replace the packing of it.</li> <li>• Replace the monitor.</li> </ul>	
The engine does not start when the starting motor is turned over.	<ul style="list-style-type: none"> <li>• Add fuel.</li> <li>• Repair where air is leaking into fuel system.</li> <li>• Check the injection pump or the nozzle.</li> <li>• Check the valve clearance.</li> <li>• Check engine compression pressure.</li> <li>• In cold weather, check if fuel warmer system is working normal.</li> </ul>	Refer to the pages 3-34, 4-4 and 4-8.
Exhaust gas is white or blue.	<ul style="list-style-type: none"> <li>• Adjust to specified oil quantity.</li> <li>• Replace with specified fuel.</li> </ul>	
Exhaust gas occasionally turns black.	<ul style="list-style-type: none"> <li>• Clean or replace the air cleaner element.</li> <li>• Check the nozzle.</li> <li>• Check engine compression pressure.</li> <li>• Clean or replace the turbocharger.</li> </ul>	
Combustion noise occasionally changes to breathing sound.	<ul style="list-style-type: none"> <li>• Check the nozzle.</li> </ul>	
Unusual combustion noise or mechanical noise.	<ul style="list-style-type: none"> <li>• Check with specified fuel.</li> <li>• Check over-heating</li> <li>• Replace the muffler.</li> <li>• Adjust valve clearance.</li> </ul>	

## 2. ELECTRICAL SYSTEM

Trouble	Service	Remark
Lamp does not glow brightly even when engine runs at high speed. Lamp flickers while engine runs.	<ul style="list-style-type: none"> <li>• Check for loose terminals and open-circuit wiring.</li> <li>• Adjust belt tension.</li> </ul>	
Battery charging lamp does not go out even when engine runs at high speed.	<ul style="list-style-type: none"> <li>• Check the alternator.</li> <li>• Check and repair wiring.</li> </ul>	
Unusual noise is emitted from the alternator.	<ul style="list-style-type: none"> <li>• Check the alternator.</li> </ul>	
Starting motor does not turn when starting switch is turned ON.	<ul style="list-style-type: none"> <li>• Check and repair the wiring.</li> <li>• Charge the battery.</li> <li>• Check the starting motor.</li> <li>• Check the safety relay.</li> </ul>	
The pinion of the starting motor keeps going in and out.	<ul style="list-style-type: none"> <li>• Charge the battery.</li> <li>• Check the safety relay.</li> </ul>	
Starting motor turns the engine sluggishly.	<ul style="list-style-type: none"> <li>• Charge the battery.</li> <li>• Check the starting motor.</li> </ul>	
The starting motor disengages before the engine starts up.	<ul style="list-style-type: none"> <li>• Check and repair the wiring.</li> <li>• Charge the battery.</li> </ul>	
The engine warming up lamp does not go ON.	<ul style="list-style-type: none"> <li>• Check and repair wiring.</li> <li>• Check the monitor.</li> </ul>	
The engine oil pressure lamp does not light up when engine is stationary (when the starting switch is in ON position.)	<ul style="list-style-type: none"> <li>• Check the monitor.</li> <li>• Check the caution lamp switch.</li> </ul>	
Battery charging lamp does not light up when the engine is stationary. (when the starting switch is in ON position.)	<ul style="list-style-type: none"> <li>• Check the monitor.</li> <li>• Check and repair the wiring.</li> </ul>	

### 3. OTHERS

Trouble	Service	Remark
Track slip out of place. Excessive wear of the sprocket.	<ul style="list-style-type: none"> <li>Adjust tension of track.</li> </ul>	
Bucket either rises slowly or not at all.	<ul style="list-style-type: none"> <li>Add oil to specified level.</li> </ul>	
Slow speed of travel, swing, boom, arm and bucket.	<ul style="list-style-type: none"> <li>Add oil to specified level.</li> </ul>	
Unusual noise emitted from pump.	<ul style="list-style-type: none"> <li>Clean the hydraulic tank strainer.</li> </ul>	
Excessive oil temperature rise of hydraulic oil.	<ul style="list-style-type: none"> <li>Clean the oil cooler.</li> <li>Adjust fan belt tension.</li> <li>Add oil to specified level.</li> </ul>	



# HYDRAULIC BREAKER AND QUICK CLAMP

## 1. SELECTING HYDRAULIC BREAKER

- 1) Become familiar with the manual and select breakers suitable to machine specifications.
- 2) Make careful selection in consideration of oil quantity, pressure and striking force, to enable satisfied performance.
- 3) When apply a breaker to the machine, consult your local dealer of Hyundai for further explanation.

## 2. CIRCUIT CONFIGURATION

- 1) As for breaker oil pressure line, use extra spool of main control valve.
- 2) Set proper breaker pressure on load relief valve.  
※ The initial setting pressure of load relief valve for breaker is 210 bar.
- 3) The pressure of the ROBEX390LC-9 system is 330 kgf/cm<sup>2</sup> (4690 psi).

### 4) Adjusting oil quantity

#### ■ TYPE 1 CLUSTER

- (1) Use the breaker mode from work tool of cluster.  
Use select switch to control the oil flow quantity.
  - Setting oil quantity (245 lpm)

#### Flow set


- Max flow : Set the maximum flow for the attachment.
- Flow level : Reduce the operating flow from maximum flow.
  - Breaker : Max 7 steps, reduced 10 lpm each step.

- (2) If the quantity of hydraulic oil is not controlled properly, it causes short lifecycle of the breaker and the machine by increased breaking force and count.

#### ■ TYPE 2 CLUSTER

- (1) Use accel dial switch to control the oil flow quantity.
- 5) The accumulator should be used to the breaker charging and return line.  
If the accumulator is not used, it will be damage as the input wave is delivered.  
※ **Keep the pressure pulsation of pump below 60 kgf/cm<sup>2</sup> (853 psi) by installing the accumulator.**
- 6) Do not connect the breaker return line to the main control valve, but connect to the return line front of the cooler.
- 7) Do not connect the breaker return line to drain lines, such as of swing motor, travel motor or pump, otherwise they should be damaged.
- 8) One of spool of the main control valve should be connected to the tank.
- 9) Select the size of pipe laying considering the back pressure.
- 10) Shimless tube should be used for the piping. The hose and seal should be used Hyundai genuine parts.
- 11) Weld the bracket for pipe clamp to prevent damage caused by vibration.

Oil quantity setting (type 1 cluster)

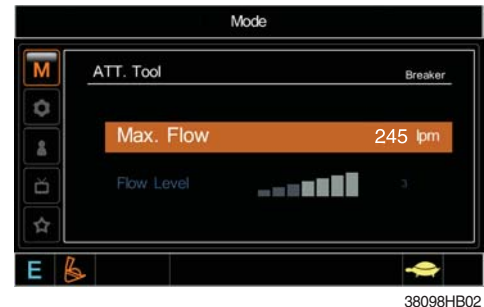

### 3. MAINTENANCE

#### 1) MAINTENANCE OF HYDRAULIC OIL AND FILTER

- (1) As machine with an hydraulic breaker provides the hydraulic oil becomes severely contaminated.
- (2) So, unless frequently maintained, the machine may easily go out of order.
- (3) Inspect and maintain hydraulic oil and 4 kinds of filter elements in particular, in order to prolong machine life.

#### 2) RELEASE THE PRESSURE IN BREAKER CIRCUIT

When breaker operating is finished, stop engine and push pedal or switch for breaker to release pressure in breaker circuit.

If pressure still remains, the lifetime of the diaphragm in the accumulator will be shortened.

- 3) Be careful to prevent contamination by dust, sand and etc.  
If such pollution become mixed into the oil, the pump moving parts will wear abnormally, shorten lifetime and become damaged.
- 4) When operating breaker, bolts and nuts of main equipment may be loosened by vibration. So, it must be inspected periodically.

Service interval unit : hours

Attachment	Operating rate	Hydraulic oil	Filter element
Breaker	100 %	600* <sup>1</sup>	200
		1000* <sup>2</sup>	


\*<sup>1</sup>: Conventional hydraulic oil

\*<sup>2</sup>: Hyundai genuine long life hydraulic oil

#### ● Replace following filter same time

- Hydraulic return filter : 1 EA
- Pilot line filter : 1 EA
- Drain filter cartridge : 1 EA

Hyd oil change guide for hydraulic breaker

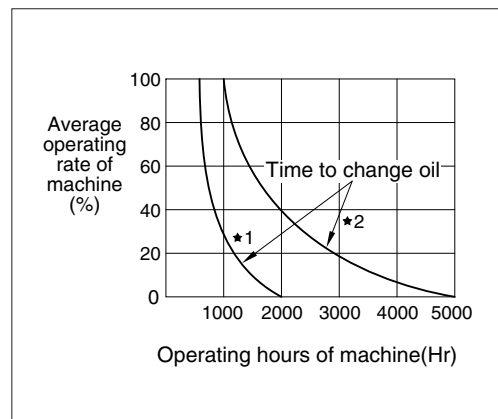

\*<sup>1</sup>: Conventional hydraulic oil

\*<sup>2</sup>: Hyundai genuine long life hydraulic oil


## 4. PRECAUTIONS WHILE OPERATING THE BREAKER

### 1) DO NOT BREAK ROCK WHILE LOWERING

As the breaker is heavy in comparison with bucket, it must be operated slowly.

If breaker is rapidly pushed down, working device may be damaged.

Incorrect

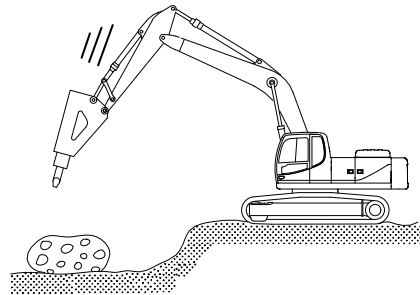


38098OA01

### 2) DO NOT USE BREAKER TO CARRY BROKEN STONE OR ROCK BY SWING OPERATING

This may damage the operation device and swing system.

Incorrect

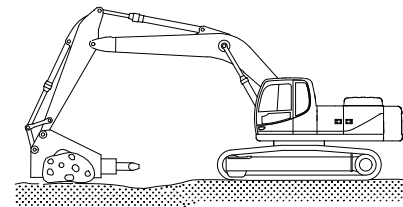


38098OA02

### 3) OPERATE BREAKER WITH A GAP IN EXCESS OF 100 mm (4 inches) FROM THE END OF THE STROKE TIP

If breaker is operated with the end tip, the cylinder may be damaged.

Incorrect

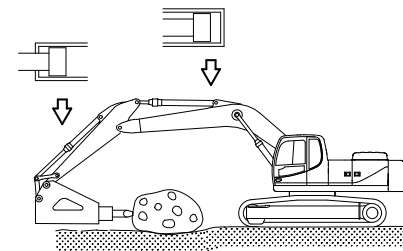


38098OA03

### 4) IF THE HYDRAULIC HOSES VIBRATE EXCESSIVELY

If the machine used in this condition continuously this will effect badly on the machine such as loosening bolt, oil leakage, damage of pump pipe and etc.


Incorrect

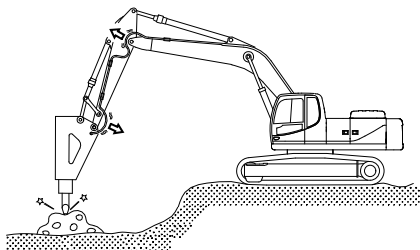

38098OA04

**5) DO NOT CONTINUE TO WORKING OVER ONE MINUTE AT SAME POSITION OF BOOM AND ARM**


This will increase the temperature of the oil, and cause problem in the accumulator and seals.

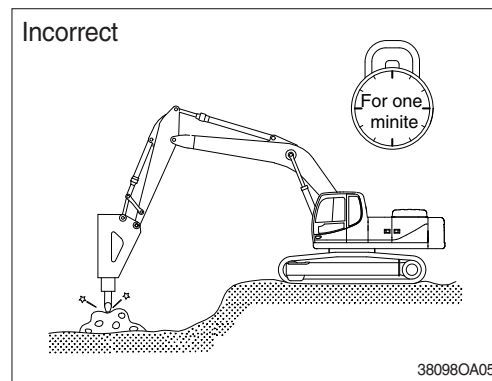

**6) DO NOT MOVE MACHINE OR BREAKER WHILE STRIKING**


Do not move hammer while striking.

This will cause damage to the working device and the swing system.

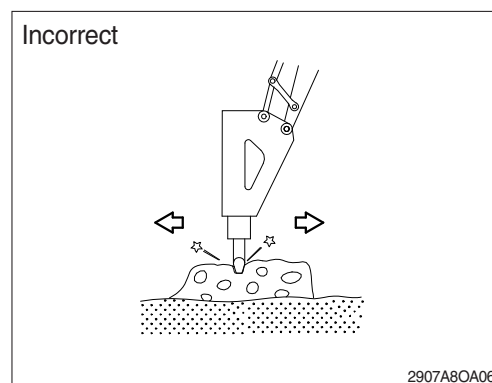


**7) DO NOT WORK WHILE SWING STATE**

Do not work while swing position of superstructure. It cause the band of track shoe, oil leakage of roller.

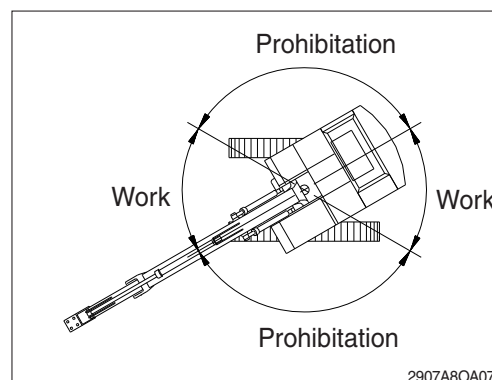

**8) TAKE CARE OF CHISEL AND BOOM INTERFACE**


Make sure of the arm and bucket control lever operation.

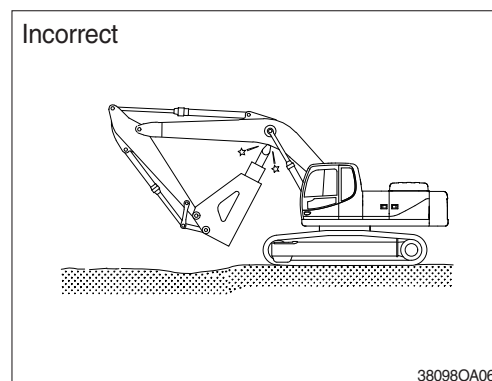


## 5. QUICK CLAMP

### 1) FIXING BUCKET WITH QUICK CLAMP


- (1) Before fixing bucket, remove safety pin of the moving hook.
- (2) Pulling safety button, press the quick clamp switch to unlock position. Then, the moving hook is placed on release position.

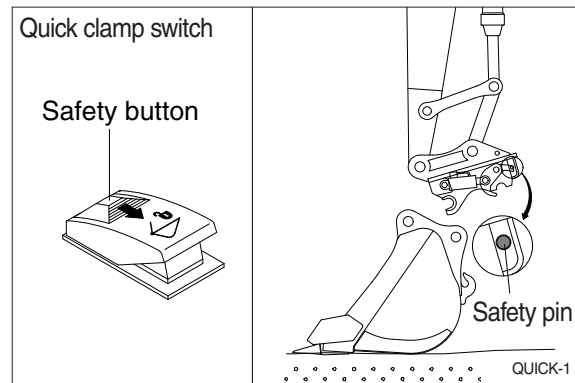


- (3) Aligning the arm and bucket, insert static hook of quick clamp to the bucket pin.

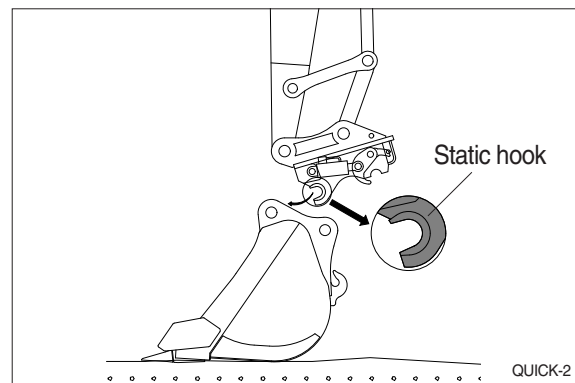


- (4) Operate RCV lever to bucket-in position. Then, the moving hook is coupled with the bucket link pin. Make sure that the moving hook is completely contacted with bucket link pin.

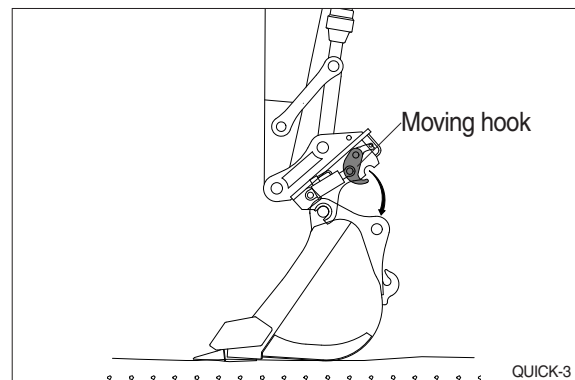

- (5) Push safety button to lock position. Operate RCV lever to bucket-in position.
- ※ **Be sure to check connection status between bucket pins and hooks of quick clamp.**

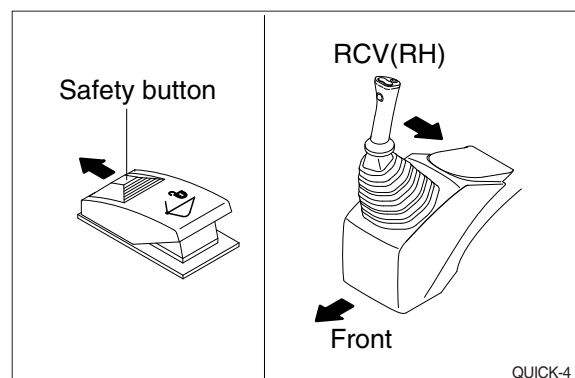

- (6) After checking the connection status between bucket pins and hooks of quick clamp, **insert safety pin of moving hook to lock position.**

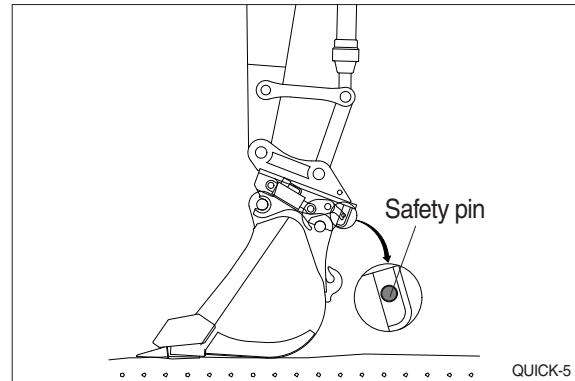

## 2) REMOVE BUCKET FROM QUICK CLAMP

Removing procedure is reverse of fixing.

## 3) PRECAUTION OF USING QUICK CLAMP



- ⚠ When operating the machine with quick clamp, confirm that the quick clamp switch is lock position and safety pin of moving hook is inserted.

Operating the machine with quick clamp switch unlocked and without safety pin of moving hook can cause the bucket to drop off and bring about the accident.

- ⚠ Serious injury or death can result from this accident.

- ⚠ Be careful to operate the machine equipped with quick clamp. The bucket may hit cab, boom and boom cylinders when it reaches vicinity of them.

HYUNDAI will not be responsible for any injury or damage in case that safety pin is not installed properly.

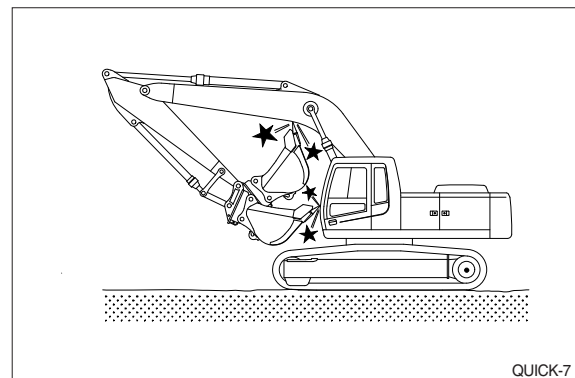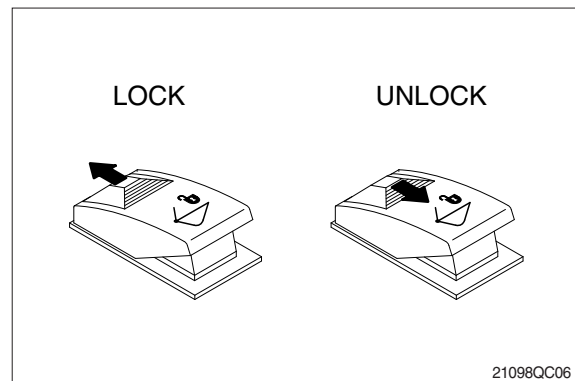

## A

Accel dial switch .....	3-35
After engine start .....	4-5
Air breather element .....	6-31
Air cleaner filter .....	6-25
Air conditioner & heater .....	3-41
Air conditioner filter .....	6-43
Alternate exit .....	0-10
Attachment lowering .....	4-32

## B

Battery .....	6-40
Before starting engine .....	4-2
Boom lowering .....	4-32
Bucket clearance adjustment .....	6-38
Bucket replacement .....	6-36
Bucket selection guide .....	2-22
Bucket tooth replacement .....	6-37

## C

Cab air filter .....	6-43
Cab device .....	3-1
Changing machine control pattern .....	4-35
Cigar lighter .....	3-48
Cluster .....	3-2
Coolant .....	6-21
Cooling fan .....	6-26

## D

Drain filter .....	6-31
--------------------	------

## E

Emergency engine starting connector .....	3-60
Engine oil filter .....	6-20
Engine oil level .....	6-20
Engine starting & stop .....	4-7
Engine starting by booster .....	6-41
Engine stop .....	4-10

## F

Fan belt .....	6-25
Fuel filter .....	6-28
Fuel leakage .....	6-29
Fuel system bleeding .....	6-28
Fuel tank .....	6-26
Fuse & relay box .....	3-59

## G

Gauge .....	3-3, 3-24
-------------	-----------

## H

Hydraulic breaker .....	8-1
Hydraulic oil changing .....	6-30
Hydraulic oil filling .....	6-29
Hydraulic oil level .....	6-29

## L

LCD .....	3-2, 3-26
Levers & pedals .....	3-39
Lifting capacities .....	2-7
Lubricant specification .....	2-18

## M

Maintenance check list .....	6-11
Major component .....	2-1
MCU (Machine Control Unit) .....	3-59
Mode selection system .....	4-11, 4-16
Monitor panel .....	3-2, 3-23
Mounting and dismounting .....	1-13

## N

New machine operation .....	4-1
-----------------------------	-----

## O

Oil cooler .....	6-24
Operating pattern .....	4-35

## P

Pedals .....	3-40
Periodical replacement parts .....	6-5
Pilot filter .....	6-32
Pin & bushing lubrication .....	6-39
Prefilter .....	6-27
Pilot lamps .....	3-7, 3-30

## Q

Quick clamp .....	8-6
-------------------	-----

## R

Radiator flushing .....	6-22
Radio & USB player .....	3-41
RCV lever lubricate .....	6-34
Recommended oils .....	2-18, 6-10
Relieving pressure .....	6-3
Return filter .....	6-31



RCV lever operating pattern .....	4-35
-----------------------------------	------

## S

Safety hints .....	1-1
Safety labels .....	0-5
Safety parts .....	6-5
Seat .....	3-57, 58
Seat belt .....	3-57, 58
Service meter .....	3-60
Service socket .....	3-48, 3-60
Specification for major component .....	2-15
Specification .....	2-2
Start switch .....	3-34
Storage .....	4-33
Suction strainer .....	6-30
Swing bearing grease .....	6-33
Swing gear & pinion grease .....	6-33
Swing reduction gear oil .....	6-32
Switch panel .....	3-32
Switches .....	3-9, 3-34

## T

Torques-major component .....	6-8
Torques-fastener .....	6-6
Towing machine .....	4-24
Track adjustment .....	6-34
Track shoe selection .....	2-14
Transportation .....	5-1
Travel reduction gear oil .....	6-33
Traveling machine .....	4-22
Troubleshooting guide .....	7-1

## U

Undercarriage .....	2-13
USB socket .....	3-37

## W

Warming up operation .....	4-5
Warning lamps .....	3-4, 3-25
Weight .....	2-6
Windshield .....	3-61
Working device operation .....	4-21
Working method .....	4-25
Working range .....	2-3