

CONTENTS

Foreword	0-1	7. Efficient working method	4-27
Before servicing this machine	0-2	8. Operation in the special work sites	4-32
EC regulation approved	0-3	9. Normal operation of excavator	4-34
Table to enter S/No and distribution	0-4	10. Attachment lowering	4-35
Safety labels	0-5	11. Storage	4-36
Machine data plate	0-18	12. RCV lever operating pattern	4-38
Guide (direction, S/No, symbol)	0-19	13. Switching hydraulic attachment circuit	4-39

SAFETY HINTS

1. Before operating the machine	1-1
2. During operating the machine	1-16
3. During maintenance	1-23
4. Parking	1-26

SPECIFICATIONS

1. Major components	2-1
2. Specifications	2-2
3. Working range	2-3
4. Weight	2-4
5. Lifting capacities	2-5
6. Bucket selection guide	2-8
7. Specification for major components	2-10
8. Recommended oils	2-14

CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-34
4. Levers and pedals	3-45
5. Air conditioner and heater	3-48
6. Others	3-55

OPERATION

1. Suggestion for new machine	4-1
2. Check before starting the engine	4-2
3. Starting and stop the engine	4-3
4. Mode selection system	4-10
5. Operation of the working device	4-20
6. Traveling of the machine	4-21

TRANSPORTATION

1. Road traveling	5-1
2. Preparation for transportation	5-2
3. Dimension and weight	5-3
4. Loading the machine	5-5
5. Fixing the machine	5-7
6. Loading and unloading by crane	5-8

MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-6
3. Fuel, coolant and lubricants	6-9
4. Maintenance check list	6-11
5. Maintenance chart	6-16
6. Service instruction	6-18
7. Electrical system	6-45
8. Air conditioner and heater	6-48

TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3. Others	7-3

HYDRAULIC BREAKER AND QUICK CLAMP

1. Selecting hydraulic breaker	8-1
2. Circuit configuration	8-2
3. Maintenance	8-3
4. Precaution while operating the breaker	8-4
5. Quick clamp	8-6

INDEX	9-1
-------------	-----

FOREWORD

This manual contains a number of instructions and safety recommendations regarding driving, handling, lubrication, maintenance, inspection and adjustment of the excavator.

The manual is to promote safety maintenance and enhance machine performance.

Keep this manual handy and have all personnel read it periodically.

If you sell the machine, be sure to give this manual to the new owners.

This machine complies with EC directive "2006/42/EC".

1. **Read** and **understand** this manual before operating the machine.

This operator's manual may contain attachments and optional equipment that are not available in your area. Please consult your local Hyundai distributor for those items you require.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine.

If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses of actions as described in this manual.

2. **Inspect** the jobsite and **follow** the safety recommendations in the **safety hints** section before operating the machine.

3. Use **genuine Hyundai spare parts** for the replacement of parts.

We expressly point out that Hyundai will not accept any responsibility for defects resulting from non-genuine parts or non workmanlike repair.

In such cases Hyundai cannot assume liability for any damage.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Hyundai or your Hyundai distributor for the latest available information for your machine or for questions regarding information in this manual.

BEFORE SERVICING THIS MACHINE

It is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury by keeping this machine properly maintained.

It also is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury while servicing the machine.

No one should service or attempt to repair this machine without proper training and supervision.

All service and maintenance personnel should be thoroughly familiar with the procedures and precautions contained in this manual.

All personnel also must be aware of any federal, state, provincial or local laws or regulations covering the use and service of construction equipment.

The procedures in this manual do not supersede any requirements imposed by federal, state, provincial or local laws.

Hyundai can not anticipate every possible circumstance or environment in which this machine may be used and serviced.

All personnel must remain alert to potential hazards.


Work within your level of training and skill.

Ask your supervisor if you are uncertain about a particular task. Do not try to do too much too fast.

Use your common sense.

EC REGULATION APPROVED

- Noise level (EN474-1 : 2006 and 2000/14/EC) are as followings.
LWA : 101dB (EU only)
LPA : 71dB
- The value of vibrations transmitted by the operator's seat are lower than standard value of (EN474-1 : 2006 and 2002/44/EC)

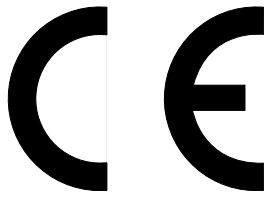

EC Declaration of Conformity

1. HYUNDAI CONSTRUCTION EQUIPMENT EUROPE N.V VOSSENDAAL 11, 2440 GEEL (Belgium), as authorized representative in the European Community of HYUNDAI CONSTRUCTION EQUIPMENT Co. Ltd.(Korea)

certifies that the construction equipment machinery.

Machine Type : *****

Brand : HYUNDAI

Model : *****

Serial No : ***

Year of Manufacturing : 20**

2. Manufacturer

Hyundai Construction Equipment Co. Ltd.
12th, Fl., Hyundai Bldg. 75, Yulgok-ro, Jongno-Gu, Seoul,
Republic of Korea

Authorized representative :
Owner of the technical file for
machine production

HYUNDAI CONSTRUCTION EQUIPMENT EUROPE N.V.
VOSSENDAAL 11, 2440 GEEL
BELGIUM

3. Harmonized European directives :

2006/42/EC (Machinery), 97/68/EC (Exhaust Gas Emission),
2004/108/EC (Electromagnetic Compatibility), 200/14/EC (Noise
Emission)

4. Engine Manufacturer :

Engine Type :

Gross Power :

*** kW / **** rpm (SAE J1995)

Net Power :

*** kW / **** rpm (SAE J1349)

5. Noise level (Noise Emission Directive 2000/14/EC)

Certificate No :

Issue Date :

DD/MM/YYYY

Conformity Assessment Procedure :

Notified Body Involved :

Measured Sound Power Level :

** dB(A)

Guaranteed Sound Power Level :

** dB(A)

6. EMC Certification (EMC Directive 2004/108/EC)

Certificate No :

Issued Date :

DD/MM/YYYY

Notified Body Involved :

Standard(s) :

7. Remarks

J. C. JUNG

MANAGING DIRECTOR

Place and date of issue :


TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR
--

Machine Serial No.	
Engine Serial No.	
Manufacturing year	
Manufacturer Address	Hyundai Construction Equipment co., Ltd. 12th, Fl., Hyundai Bldg. 75, Yulgok-ro, Jongno-Gu, Seoul, 03058, Korea
Distributor for U.S.A Address	Hyundai Construction Equipment U.S.A, Inc 6100 Atlantic Boulevard Norcross GA 30071 U.S.A
Distributor for Europe Address	Hyundai Construction Equipment Europe N. V. Vossendal 11 2240 Geel Belgium
Dealer Address	

SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

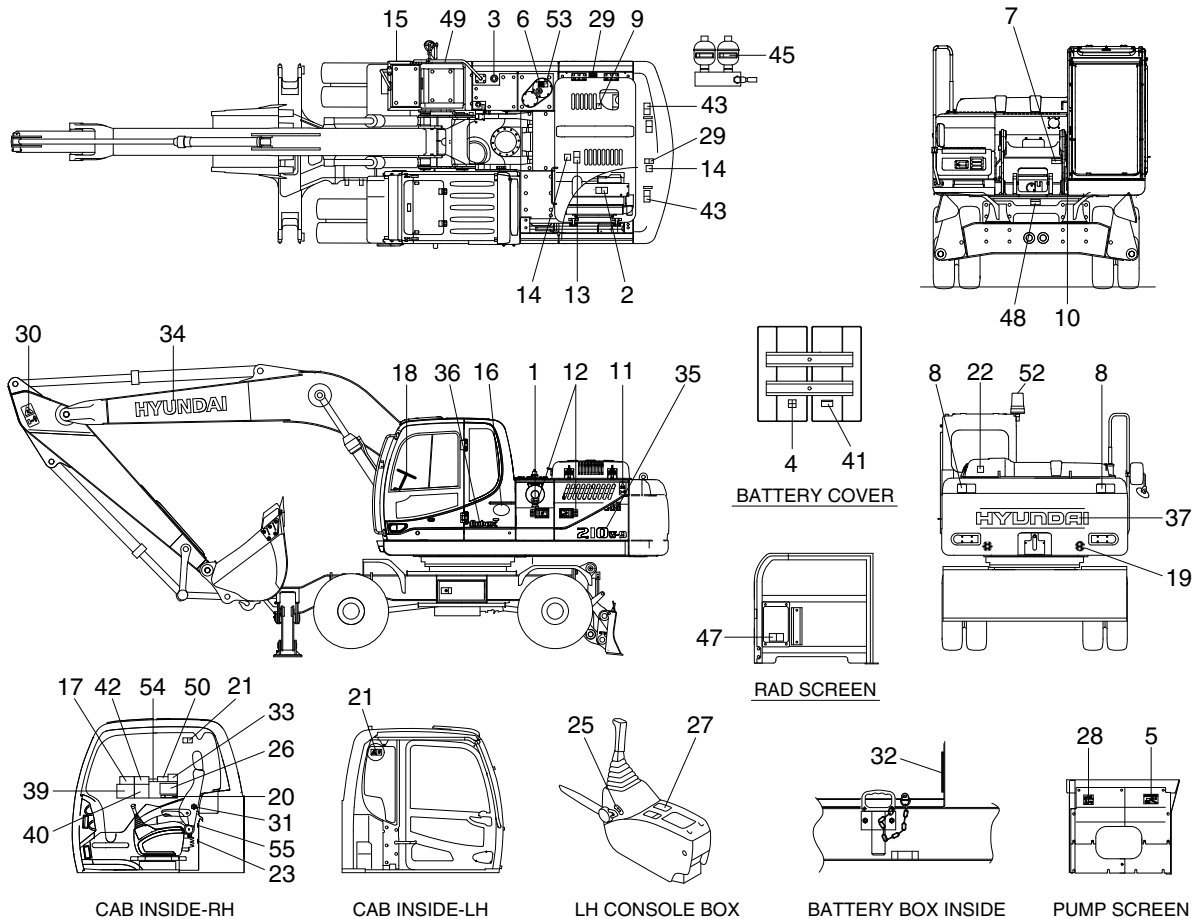

21W9S0SL01

- | | | |
|--------------------------------|---------------------------------------|------------------------|
| 1 Air cleaner filter | 18 Steering wheel | 35 Model name |
| 2 Radiator cap | 19 Reflecting | 36 Logo (ROBEX) |
| 3 Fueling | 20 Ref operator manual-cab. RH pillar | 37 Trade mark (CWT) |
| 4 Battery accident | 21 Safety front window | 39 Service instruction |
| 5 Hydraulic oil level | 22 Emergency exit | 40 Lifting chart |
| 6 Hydraulic oil lubrication | 23 Air conditioner filter | 41 Electric welding |
| 7 Reduction gear grease | 24 Console box tilting | 42 Turbocharger |
| 8 Keep clear-rear | 25 Safety lever | 43 Lifting eye |
| 9 Turbocharger cover | 26 Locking clamp | 45 Accumulator |
| 10 Name plate | 27 Ideogram-dozer/outrigger | 47 RCV-lever pattern |
| 11 Keep clear-side | 28 High pressure hose | 48 Swing-bearing |
| 12 Stay fix | 29 Falling | 49 Battery position |
| 13 Shearing-engine hood | 30 Keep clear-boom/arm | 50 Caution-axle |
| 14 No step engine hood and CWT | 31 Hammer | 52 Beacon lamp |
| 15 Transporting | 32 Swing ideogram | 53 Fuel shut off |
| 16 Low emission engine | 33 Swing lock | 54 Water separator |
| 17 Control ideogram | 34 Trade mark (boom) | 55 MCU connector |

2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the air cleaner cover.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

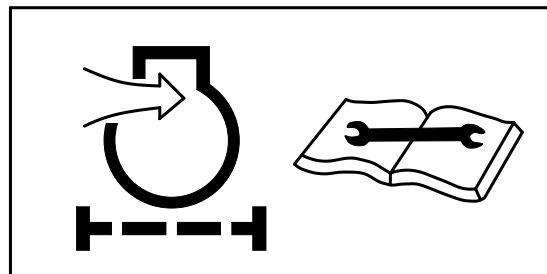

21070FW01

2) RADIATOR CAP (item 2)

This warning label is positioned on the radiator.

- ▲ **Never open the filler cap while engine running or at high coolant temperature.**




14070FW03

3) FUELING (item 3)

This warning label is positioned on the fuel filler neck.

- ▲ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

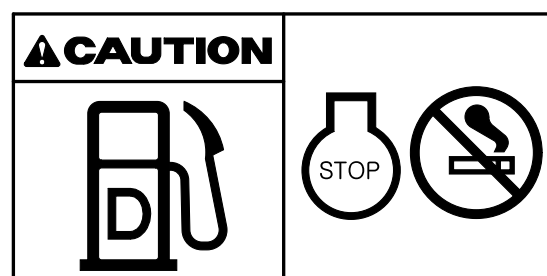

21070FW04

4) BATTERY ACCIDENT (item 4)

This warning label is positioned on the battery cover.

⚠ Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.

※ Maintain the electrolyte at the recommended level.


With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.

⚠ Extinguish all smoking materials and open flames before checking the battery.

⚠ Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.

⚠ Do not allow unauthorized personnel to change the battery or to use booster cables.

⚠ For safety from electric shock, do not battery terminals with a wet hand.

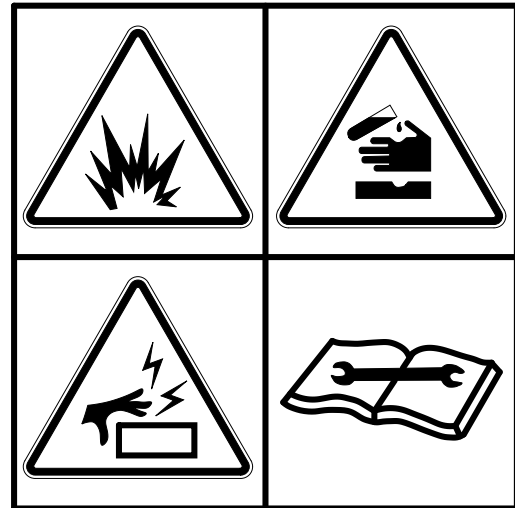

36070FW05


5) HYDRAULIC OIL LEVEL (item 5)

This warning label is positioned on the screen plate.

⚠ Place the bucket on the ground whenever servicing the hydraulic system.

※ Check oil level on the level gauge.

※ Refill the recommended hydraulic oil up to specified level if necessary.

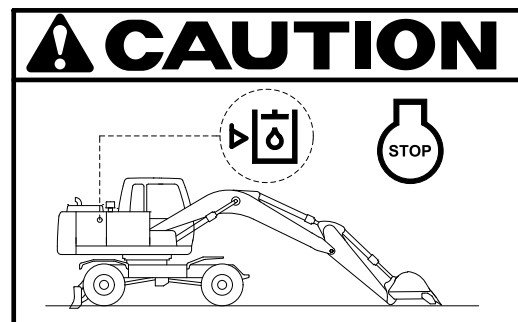

20W70FW07A

6) HYDRAULIC OIL LUBRICATION (item 6)

This warning label is positioned on the top of the hydraulic tank.

※ Do not mix with different brand oils.

▲ Never open the filler cap while engine running or at high hydraulic oil temperature.

▲ Loosen the cap slowly and release internal pressure completely.




21070FW08

7) REDUCTION GEAR GREASE (item 7)

This warning label is positioned in the front of upper frame.

▲ Grease is under high pressure.

Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.

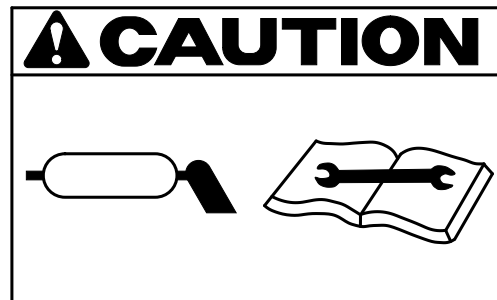


21070FW35

8) KEEP CLEAR-REAR (item 8)

This warning label is positioned on the counterweight.

▲ To prevent serious personal injury or death keep clear of machine swing radius.

▲ Do not deface or remove this label from the machine.

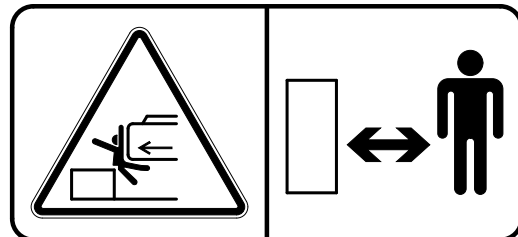

21090FW09

9) TURBOCHARGER COVER (item 9)

This warning label is positioned on the turbo charger cover.

▲ Do not touch turbo charger or it may cause severe burn.




21070FW02

10) KEEP CLEAR-SIDE (item 11)

This warning label is positioned on the LH side cover.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

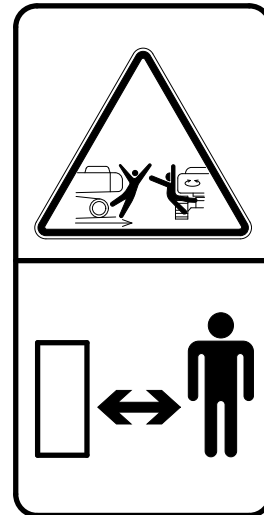

21070FW13

11) STAY FIX (item 12)

This warning label is positioned on the both side cover.

- ▲ Be sure to support the stay when the door needs to be opened.
- ▲ Be careful that the opened door may be closed by the external or natural force like strong wind.




21070FW14

12) SHEARING-ENGINE HOOD (item 13)

This warning label is positioned on the engine hood.

- ▲ Do not open the engine hood during the engine's running.
- ▲ Do not touch exhaust pipe or it may cause severe burn.

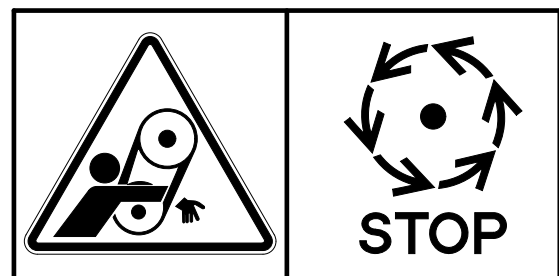


21070FW15

13) NO STEP-ENGINE HOOD (item 14)

This warning label is positioned on the engine hood and counterweight.

- △ Do not step on the engine hood.

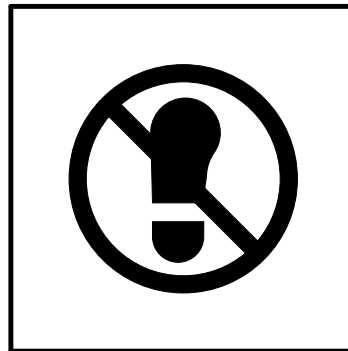


21070FW16

14) TRANSPORTING (item 15)

This warning label is positioned right side of upper frame.

- ▲ Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.
- ※ See page 5-7 for details.

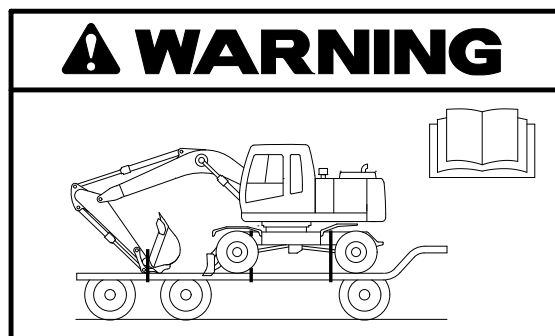


20W70FW17

15) CONTROL IDEOGRAM (item 17)

This warning label is positioned in right window of the cab.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ▲ Failure to do so could result in injury or death.
- ※ See page 4-20 for details.

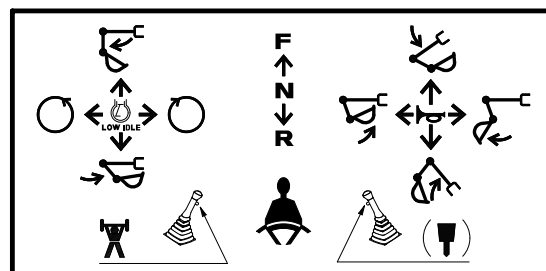


20W70FW19

16) REF OPERATOR MANUAL (item 20)

This warning label is positioned on the right side window of the cab.

- ▲ Study the operator's manual before starting and operating machine.

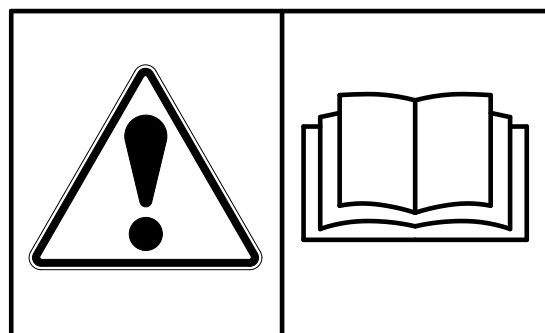


21070FW22

17) MAX HEIGHT (item 20)

This warning label is positioned on the right side window of the cab.

- ⚠ **Serious injury or death can result from contact with electric lines.**

An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

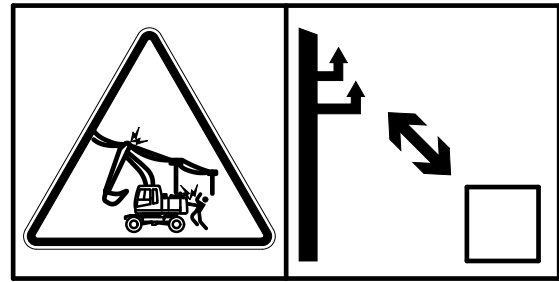


20W70FW23

18) INTERFERENCE (item 20)

This warning label is positioned on the right side window of the cab.

- ⚠ **Be careful to operate machine equipped with quick clamp or extensions.**
- ⚠ **Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.**

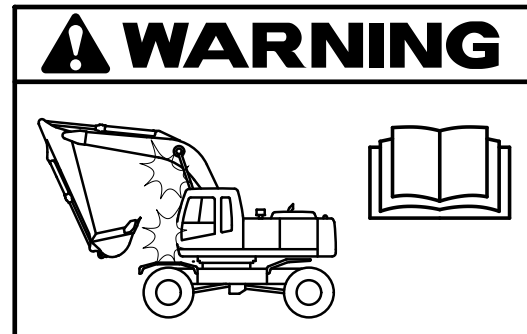


20W70FW62

19) SAFETY FRONT WINDOW (item 21)

This warning label is positioned on the both side window of the cab.

- ⚠ **Be careful that the front window may be promptly closed.**

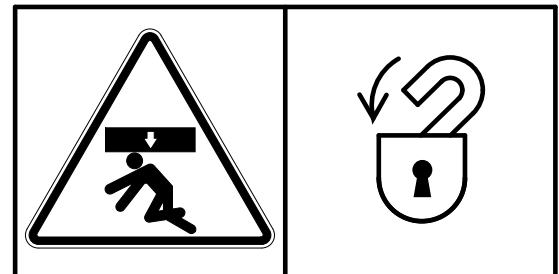

21070FW24

20) EMERGENCY EXIT (item 22)

This warning label is positioned on the inside of rear window.

- ※ **The rear window serves us an alternate exit.**
- ※ **To remove rear window, pull the ring and push out the glass.**




94MT-07280

21) AIR CONDITIONER FILTER (item 23)

This warning label is positioned on the air conditioner cover.

- ※ **Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.**

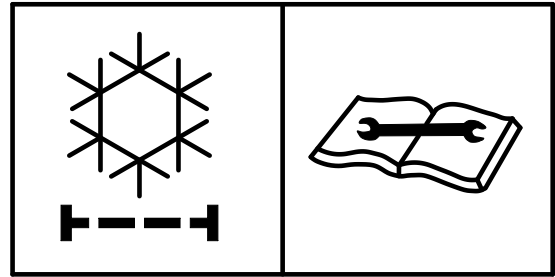


21070FW26

22) CONSOLE BOX TILTING (item 24)

This warning label is positioned on the LH console box.

- ※ **Before you get off the machine be sure to tilt the LH console box.**

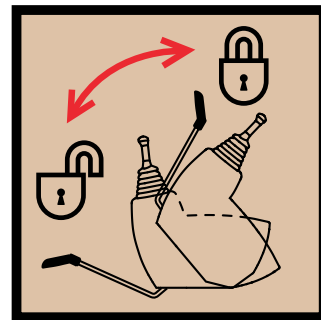


30007A1FW06

23) SAFETY LEVER (item 25)

This warning label is positioned on the cover of the safety lever.

- ▲ **Before you get off the machine be sure to place the safety lever LOCKED position.**

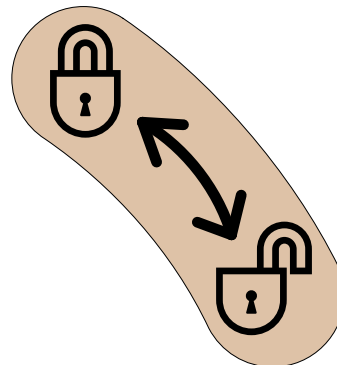


30007A1FW07A

24) CLAMP-LOCKING (item 26)

This warning label is positioned on the right side window of cab.

- ▲ **Serious injury or death can result from dropping bucket.**
- ▲ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

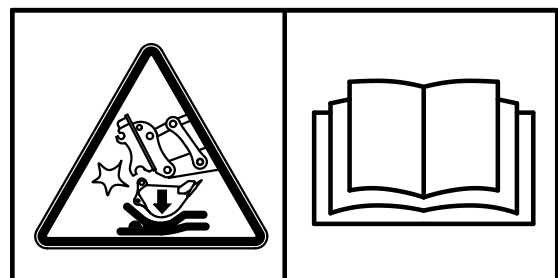


14070FW60

25) DOZER/OUTRIGGER IDEOGRAM (item 27)

This warning label is positioned on the LH console box.

- ※ See page 4-20 for details.
- ※ Guidelines for using the general dozer blade.
 - Be careful not to apply an excessive load when using a blade.
 - Avoid impacts and loads on the bottom due to machine modification or excessive working conditions.
 - Check the BLADE UP status before traveling the machine.
 - Avoid any collision with the upper working device and the blade.
 - Do not move machine in the blade jack up state.
 - When using blade jack up, use it in an environment where the ground is not rough and the machine and ground are same level.

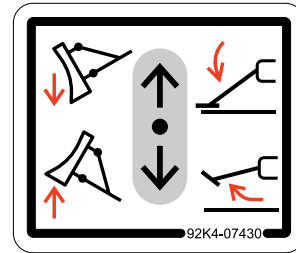

92K4-07430

26) HIGH PRESSURE HOSE (item 28)

This warning label is positioned on the screen plate.

- ▲ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ※ Study the service manual before service job.




14070FW29

27) FALLING (item 29)

This warning label is positioned on the top of the hydraulic tank.

- ▲ Falling is one of the major cause of personal injury.
- ▲ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.

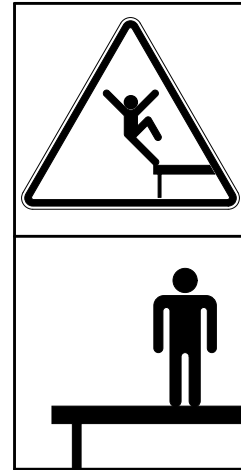

14070FW30

28) KEEP CLEAR-BOOM/ARM (item 30)

This warning label is positioned on both side of the boom.

- ▲ Serious injury or death can result from falling of the attachment.
- ▲ To prevent serious injury or death, keep clear the underneath of attachment.




14070FW31

29) SWING IDEOGRAM (item 32)

This warning label is positioned in the tool box.

- ▲ Before you operating the machine, be sure to release the swing lock pin in the tool box.

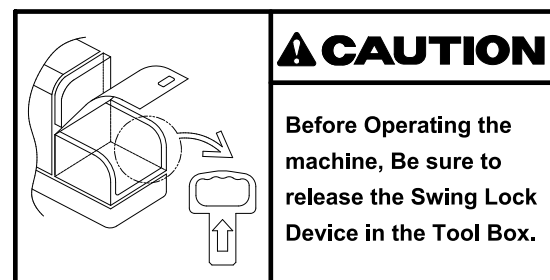


20W70FW63

30) SWING LOCK (item 33)

This warning label is positioned on the right side frame of the cab.

- ⚠ **Before you leaving the machine, always place the swing lock pin securely in the LOCK position.**

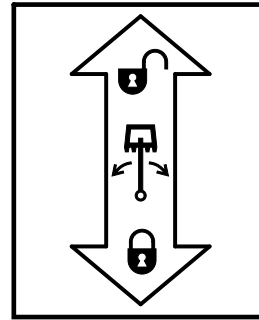


20W70FW64

31) ELECTRIC WELDING (item 41)

This warning label is positioned on the battery cover.

- ⚠ **Before carrying out any electric welding on this machine, follow the below procedure.**
- Pull the connector out of all electric control units.
- Connector the ground lead of the welding equipment as close to the welding point as possible.

※ **See page 6-47 for detail.**

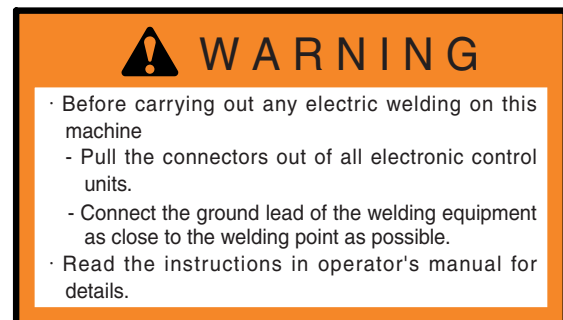


7807AFW20

32) TURBOCHARGER (item 42)

This warning label is positioned in right window of the cab.

- ⚠ **In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.**

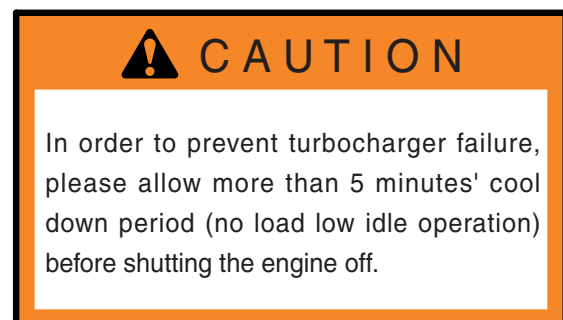


7807AFW20

33) LIFTING EYE (item 43)

This warning label is positioned on the counterweight.

- ⚠ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.

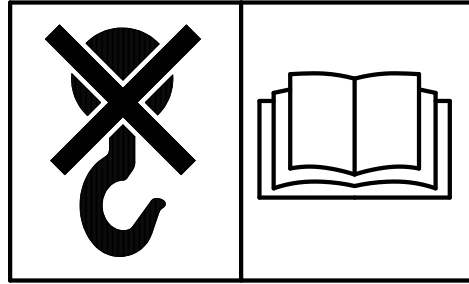

21070FW10

34) ACCUMULATOR (item 45)

This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.
- ⚠ Never make any hole in the accumulator expose it to flame or fire.
- ⚠ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.



1107A0FW46

35) RCV lever pattern (item 47)

This warning label is positioned on the screen plate.

- ※ See page 4-38 for details.




14W90FW47

36) Swing bearing (item 48)

This warning label is positioned in the front of swing ring gear.


※ See page 6-34 for details.

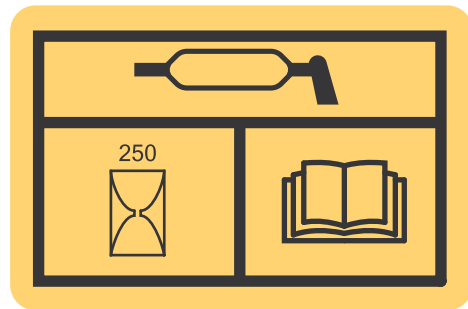

38090FW04

37) Battery position (item 49)

This warning label is positioned right side of tool box.

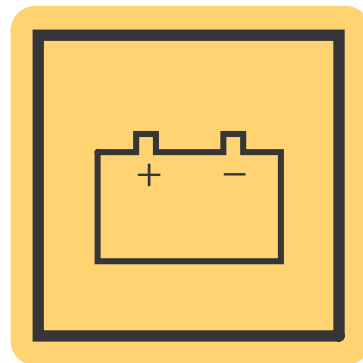

38090FW03


38) BEACON LAMP (item 52)

This warning label is positioned on the center outside of the cabin.

※ Make sure the beacon lamp maintains a vertical position.

A horizontal position can result in a decrease in life time of the lamp due to the infiltration of foreign substances such as dust or water.

※ While the machine transfer, the beacon lamp is easy to break. In that case, change the position of the lamp to the horizontal.

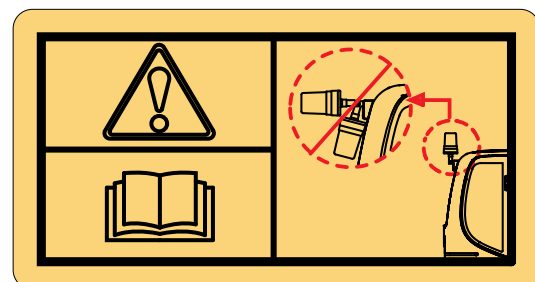


140Z90FW49

39) FUEL SHUT OFF (item 53)

This warning label is positioned on the left side of the hydraulic tank.

※ Fill only the hydraulic oil.

※ Do not fill the diesel fuel.

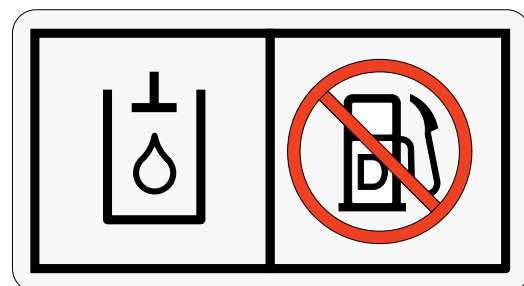


140WH90FW51

40) WATER SEPARATOR (item 54)

This warning label is positioned in right window of the cab.

- ⚠ **In order to protect high pressure fuel system, please drain water in water separator before starting the engine.**

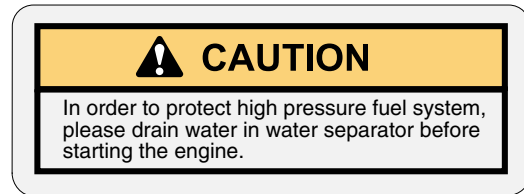


210N90FW50

41) MCU CONNECTOR (item 55)


This warning label is positioned on the low cover of the air conditioner in the cab.

- ※ **MCU communicates the machine data with Laptop computer through RS232 service socket.**
- ※ **See page 3-67 for details.**

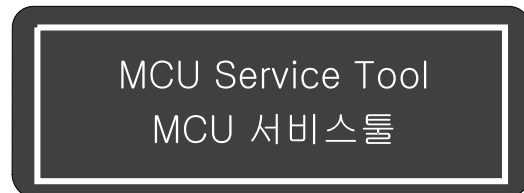


1409S0FW52


MACHINE DATA PLATE

DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE / MODEL	
PRODUCT IDENTIFICATION NUMBER	
ENGINE POWER	
OPERATING MASS	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91LM-14112	


For general

DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE	
MODEL	
MAX. CERTIFIED WEIGHT	
STANDARDS ROPS : ISO 12117-2	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91Q6-91295	


For ROPS

CE UK DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE / MODEL	
PRODUCT IDENTIFICATION NUMBER / VEHICLE IDENTIFICATION NUMBER	
ENGINE POWER	MAX. AXLE LOAD (FRONT / REAR)
OPERATING MASS / GROSS VEHICLE WEIGHT	MFG. YEAR YEAR INTO SERVICE
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91LM-14142	

For EU only

DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE	
MODEL	
STANDARDS FOG : ISO 10262 (LEVEL 2)	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91N6-01283	

For FOPS/FOG

EAC DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE / MODEL	
PRODUCT IDENTIFICATION NUMBER	
ENGINE POWER	
OPERATING MASS	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91LM-14122	

For EAC only


EX0MD01

※ The machine serial number assigned to this particular machine should be used when requesting information or ordering service parts for this machine from your authorized HD Hyundai Construction Equipment dealer. The machine serial number is also stamped on the frame.

GUIDE

1. DIRECTION

The direction of this manual indicate forward, backward, right and left on the standard of operator when the dozer blade is in the rear and machine is on the traveling direction.

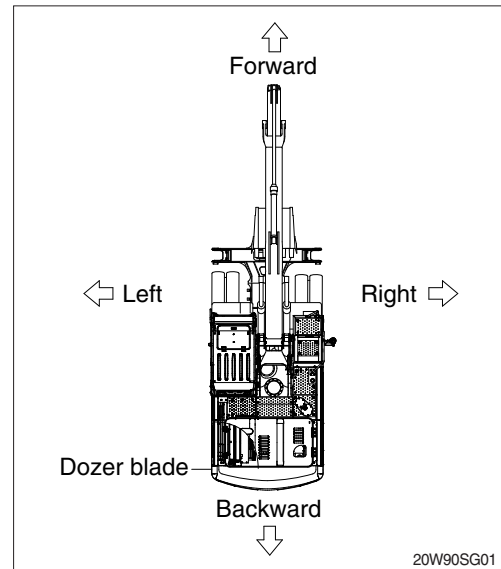


2. SERIAL NUMBER

Inform following when you order parts or the machine is out of order.


1) MACHINE SERIAL NUMBER

The numbers are located below the right window of the operator's cab.

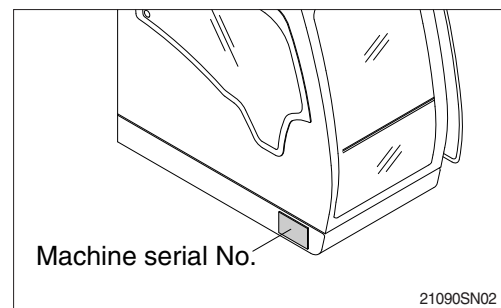

2) ENGINE SERIAL NUMBER

The numbers are located on the engine name plate.

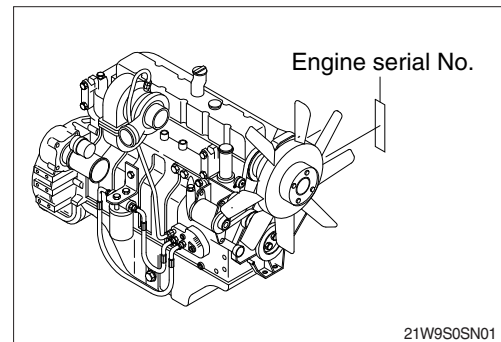

3. INTENDED USE

This machine is designed to be used mainly for the following work.

- Digging work
- Loading work
- Smoothing work
- Ditching work

※ Please refer to the section 4 (efficient working method) further details.

4. SYMBOLS

▲ Important safety hint.

△ It indicates matters which can cause the great loss on the machine or the surroundings.

※ It indicates the useful information for operator.


SAFETY HINTS

1. BEFORE OPERATING THE MACHINE

Think-safety first.


In special situation, wear protective clothing including a safety helmet, safety shoes, gloves, safety glasses and ear protection as required by the job condition.

Almost every accident is caused by disregarding the simple and fundamental safety hints.

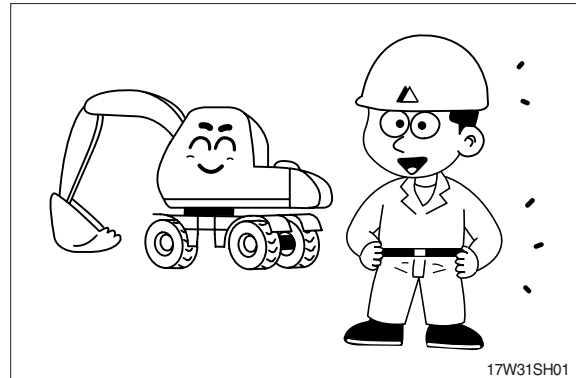


Be sure to understand thoroughly all about the operator's manual before operating the machine.

Proper care is your responsibility.

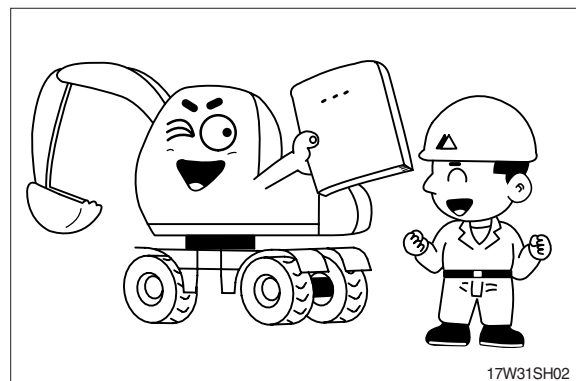


Fully understand the details and process of the construction before starting the work.


If you find anything dangerous on the job, consult with the job supervisor for the preventive measures before operating the machine.

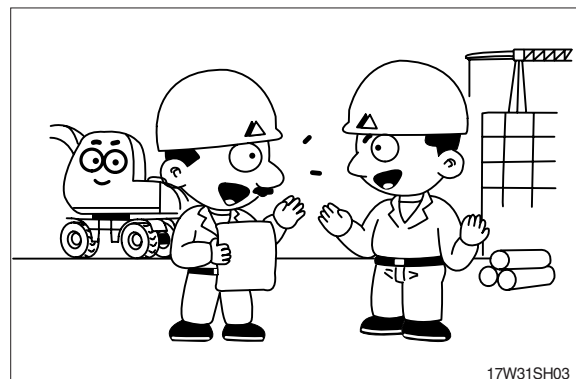


Do not operate when tired, or after drinking alcoholic beverages or any type of drugs.

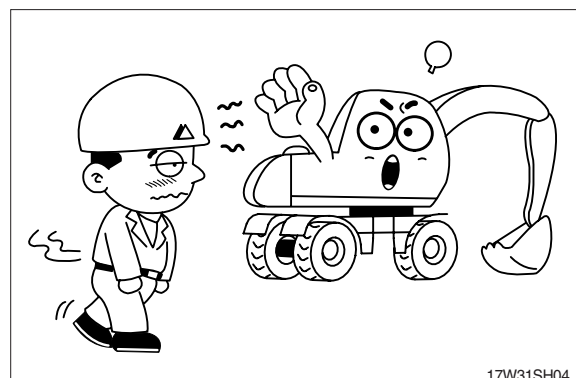


Check daily according to the operation manual.
Repair the damaged parts and tighten the loosened bolts.

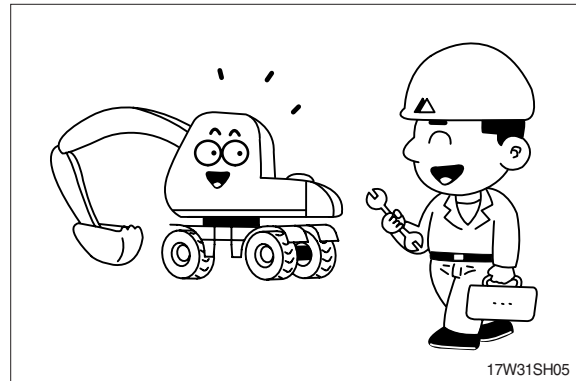


Check for leakage of engine oil, hydraulic oil,
fuel and coolant.
Keep machine clean, clean machine regularly.

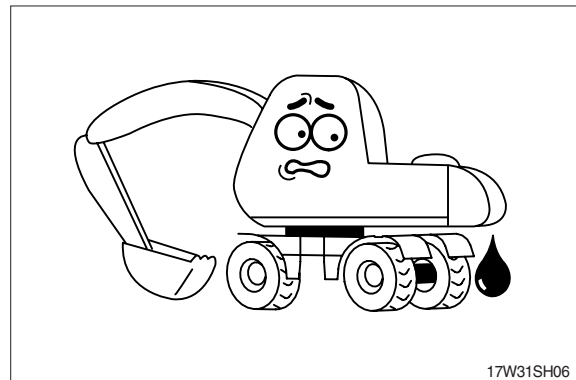

Do not operate the machine if it requires repairs.
Operate after complete repair.

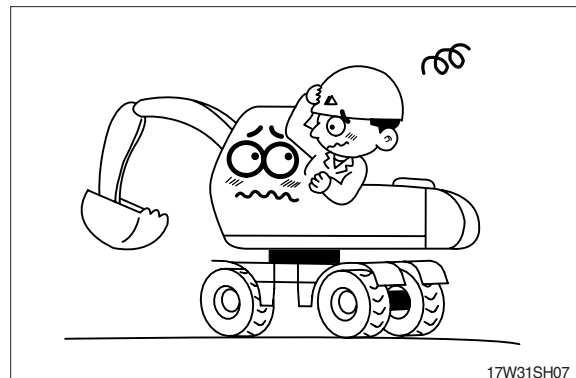

Be prepared if a fire starts.
Keep a fire extinguisher handy and emergency
numbers for a fire department near your tele-
phone.

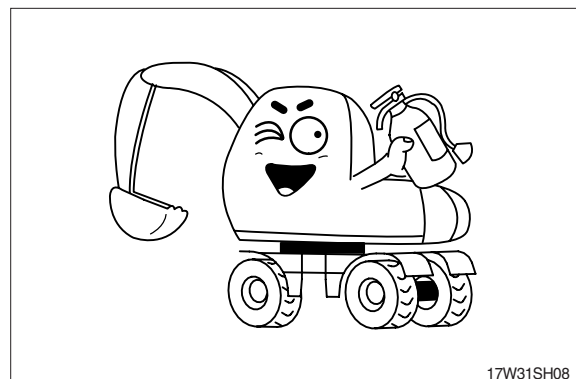


PROTECTION AGAINST FALLING OR FLYING OBJECTS

If there is any danger of falling or flying objects hitting the operator, install protective guards in place to protect the operator as required for each particular situation.

Be sure to close the front window before commencing work.

Make sure to keep all persons other than operator outside the range of falling or flying objects. In case you need top guard, front guard and FOPS (falling object protective structure), please contact Hyundai distributor in Europe.

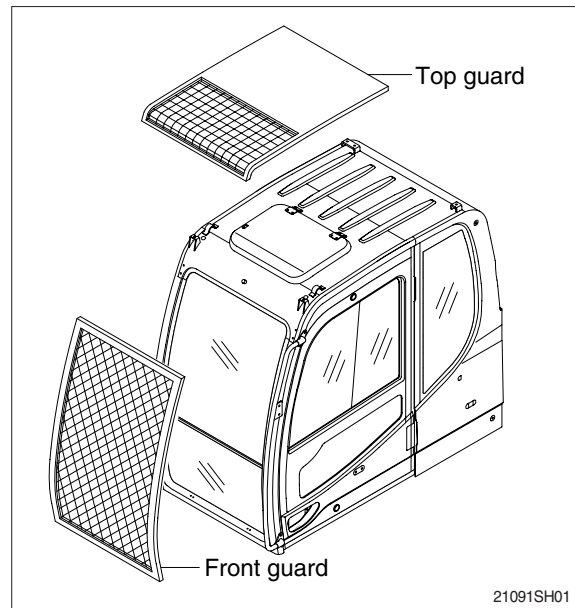

UNAUTHORIZED MODIFICATION

Any modification made without authorization from Hyundai can create hazards.

Before making a modification, consult your Hyundai distributor. Hyundai will not be responsible for any injury or damage caused by any unauthorized modification.


PREPARE FOR EMERGENCY

Only in case of emergency, use the installed hammer for breaking the windshield of the cab, and then exit carefully.

Have a fire extinguisher and first aid kit ready for emergencies such as fires or accidents.

Learn how to use the fire extinguisher.


Be sure you know the phone numbers of persons you should contact in case of an emergency.

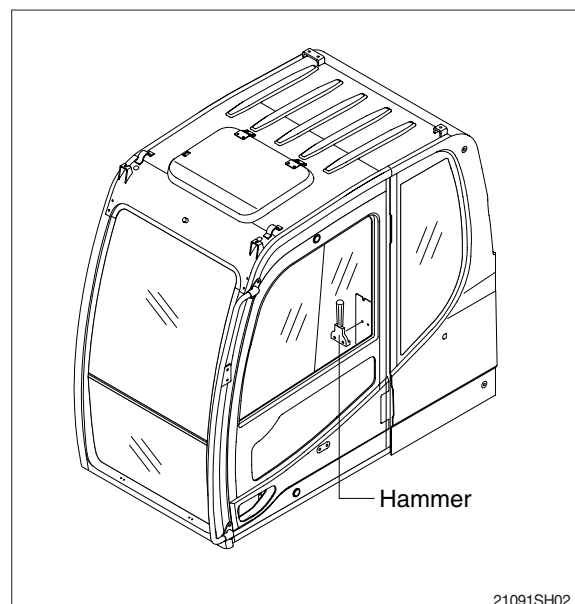

ROTATING BEACON

When you operate a machine on a road or beside a road, a rotating beacon is required to avoid any traffic accident.

Please contact your Hyundai distributor to install it.

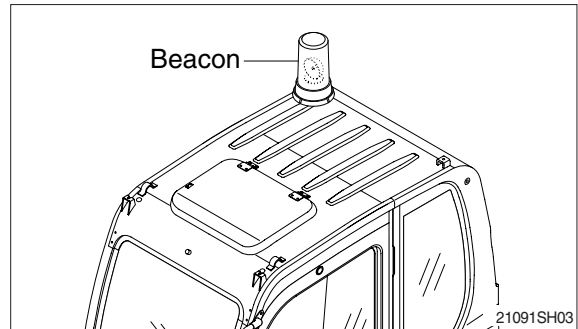

PRECAUTIONS FOR ATTACHMENTS

When installing and using an optional attachment, read the instruction manual for the attachment and the information related to attachments in this manual.

Do not use attachments that are not authorized by Hyundai or your Hyundai distributor. Use of unauthorized attachments could create a safety problem and adversely affect the proper operation and useful life of the machine.

Any injuries, accidents, product failures resulting from the use of unauthorized attachments are not the responsibility of Hyundai.

The stability of this machine is enough to be used for general work. When you operate this machine, allow for the lifting capacity tables. If you want to use other special applications (not covered in this manual), you have to attach additional counterweight or be cautious while running the machine.

SAFETY RULES

Only trained and authorized personnel can operate and maintain the machine.

Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.

When working with another operator or a person on worksite traffic duty, be sure all personnel understand all hand signals that are to be used.

SAFETY FEATURES

Be sure all guards and covers are in their proper position. Have guards and covers repaired if damaged.

Use safety features such as safety lock and seat belts properly.

Never remove any safety features. **Always** keep them in good operating condition.

Improper use of safety features could result in serious bodily injury or death.

MACHINE CONTROL PATTERN

Check machine control pattern for conformance to pattern on label in cab.

If not, change label to match pattern before operating machine.

Failure to do so could result in injury.

CALIFORNIA PROPOSITION 65

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

This product contains or emits chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds.

WASH HANDS AFTER HANDLING



13031SH55

Do not load the machine with the lifting eyes on the counterweight.

▲ The wrong loading method can result in serious bodily injury or death.

FIRE PREVENTION AND EXPLOSION PREVENTION

Regeneration

The exhaust gas temperatures during regeneration will be elevated. Follow proper fire prevention instructions and use the disable regeneration function when appropriate.

General

All fuels, most lubricants, and some coolant mixtures are flammable.

To minimize the risk of fire or explosion, the following actions are recommended.

Always perform a Walk-Around Inspection, which may help you identify a fire hazard.

Do not operate a machine when a fire hazard exists. Contact your dealer for service.



3001SH01

Understand the use of the primary exit and alternative exit on the machine.

Do not operate a machine with a fluid leak. Repair leaks and clean up fluids before resuming machine operation. Fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire. A fire may cause personal injury or death.

Do not weld on or drill holes in the engine cover. Flammable material such as leaves, twigs, papers, trash may accumulate in engine compartment.

Remove flammable material such as leaves, twigs, papers, trash and so on. These items may accumulate in the engine compartment or around other hot areas and hot parts on the machine.

Keep the access doors to major machine compartments closed and access doors in working condition in order to permit the use of fire suppression equipment, in case a fire should occur.

Clean all accumulations of flammable materials such as fuel, oil, and debris from the machine.

Do not operate the machine near any flame.

Keep shields in place. Exhaust shields (if equipped) protect hot exhaust components from oil spray or fuel spray in a break in a line, in a hose, or in a seal. Exhaust shields must be installed correctly.

Do not weld or flame cut on tanks or lines that contain flammable fluids or flammable material. Empty and purge the lines and tanks. Then clean the lines and tanks with a nonflammable solvent prior to welding or flame cutting. Ensure that the components are properly grounded in order to avoid unwanted arcs.

Dust that is generated from repairing nonmetallic hoods or fenders may be flammable and/or explosive. Repair such components in a ventilated area away from open flames or sparks. Use suitable Personal Protection Equipment (PPE).

Inspect all lines and hoses for wear or deterioration. Replace damaged lines and hoses. The lines and the hoses should have adequate support and secure clamps. Tighten all connections to the recommended torque. Damage to the protective cover or insulation may provide fuel for fires.

Store fuels and lubricants in properly marked containers away from unauthorized personnel. Store oily rags and flammable materials in protective containers. Do not smoke in areas that are used for storing flammable materials.



3001SH02

Use caution when you are fueling a machine. Do not smoke while you are fueling a machine. Do not fuel a machine near open flames or sparks. Always stop the engine before fueling. Fill the fuel tank outdoors. Properly clean areas of spillage.



3001SH03

Never store flammable fluids in the operator compartment of the machine.

Battery and battery cables

The following actions are recommended to minimize the risk of fire or an explosion related to the battery.



3001SH04

Do not operate a machine if battery cables or related parts show signs of wear or damage. Contact your dealer for service.

Follow safe procedures for engine starting with jump-start cables. Improper jumper cable connections can cause an explosion that may result in injury.

Do not charge a frozen battery. This action may cause an explosion.

Gases from a battery can explode. Keep any open flames or sparks away from the top of a battery. Do not smoke in battery charging areas.

Never check the battery charge by placing a metal object across the terminal posts. Use a voltmeter in order to check the battery charge.

Daily inspect battery cables that are in areas that are visible. Inspect cables, clips, straps, and other restraint for damage. Replace any damaged parts. Check for signs of the following, which can occur over time due to use and environmental factors :

- Fraying
- Abrasion
- Cracking
- Discoloration
- Cuts on the insulation of the cable
- Fouling
- Corroded terminals, damaged terminals, and loose terminals

Replace damaged battery cable (s) and replace any related parts. Eliminate any fouling, which may have caused insulation failure or related component damage or wear. Ensure that all components are reinstalled correctly.

An exposed wire on the battery cable may cause a short ground if the exposed area comes into contact with a grounded surface. A battery cable short produces heat from the battery current, which may be a fire hazard.

An exposed wire on the ground cable between the battery and the disconnect switch may cause the disconnect switch to be bypassed if the exposed area comes into contact with a grounded surface. This action may result in an unsafe condition for servicing the machine. Repair components or replace components before servicing the machine.

▲ Fire on a machine can result in personal injury or death. Exposed battery cables that come into contact with a grounded connection can result in fires. Replace cables and related parts that show signs of wear or damage. Contact your Hyundai dealer.

Wiring

Check electrical wires daily. If any of the following conditions exist, replace parts before you operate the machine.

- Fraying
- Signs of abrasion or wear
- Cracking
- Discoloration
- Cuts on insulation
- Other damage

Make sure that all clamps, guards, clips, and straps are reinstalled correctly. This action will help to prevent vibration, rubbing against other parts, and excessive heat during machine operation.

Attaching electrical wiring to hoses and tubes that contain flammable fluids or combustible fluids should be avoided.

Consult your Hyundai dealer for repair or for replacement parts.

Keep wiring and electrical connections free of debris.

Lines, Tubes, and Hoses

Do not bend high-pressure lines. Do not strike high-pressure lines. Do not install any lines that are bent or damaged. Use the appropriate backup wrenches in order to tighten all connections to the recommended torque.

Check lines, tubes, and hoses carefully. Wear Personal Protection Equipment (PPE) in order to check for leaks. Always use a board or cardboard when you check for a leak. Leaking fluid that is under pressure can penetrate body tissue. Fluid penetration can cause serious injury and possible death. A pin hole leak can cause severe injury. If fluid is injected into your skin, you must get treatment immediately. Seek treatment from a doctor that is familiar with this type of injury.

Replace the affected parts if any of the following conditions are present :

- End fittings are damaged or leaking.
- Outer coverings are chafed or cut.
- Wires are exposed.
- Outer coverings are swelling or ballooning.
- Flexible parts of the hoses are kinked.
- Outer covers have exposed embedded armoring.
- End fittings are displaced.

Make sure that all clamps, guards, and heat shields are installed correctly. During machine operation, this action will help to prevent vibration, rubbing against other parts, excessive heat, and failure of lines, tubes, and hoses.

Do not operate a machine when a fire hazard exists. Repair any lines that are corroded, loose, or damaged. Leaks may provide fuel for fires. Consult your Hyundai dealer for repair or for replacement parts.

Ether

Ether (if equipped) is commonly used in cold weather applications. Ether is flammable and poisonous.

Do not spray ether manually into an engine if the machine is equipped with a thermal starting aid for cold weather starting.

Use ether in ventilated areas. Do not smoke while you are replacing an ether cylinder or while you are using an ether spray.

Do not store ether cylinders in living areas or in the operator compartment of a machine. Do not store ether cylinders in direct sunlight or in temperatures above 49°C(120.2 °F). Keep ether cylinders away from unauthorized personnel.

Fire Extinguisher

As an additional safety measure, keep a fire extinguisher on the machine.

Be familiar with the operation of the fire extinguisher. Inspect the fire extinguisher and service the fire extinguisher regularly. Follow the recommendations on the instruction plate.

Consider installation of an aftermarket Fire Suppression System, if the application and working conditions warrant the installation.

Fire Safety

- ※ **Locate secondary exits and how to use the secondary exits before you operate the machine.**
- ※ **Locate fire extinguishers and how to use a fire extinguisher before you operate the machine.**

If you find that you are involved in a machine fire, your safety and that of others on site is the top priority. The following actions should only be performed if the actions do not present a danger or risk to you and any nearby people. At all times you should assess the risk of personal injury and move away to a safe distance as soon as you feel unsafe.

Move the machine away from nearby combustible material such as fuel/oil stations, structures, trash, mulch and timber.

Lower any implements and turn off the engine as soon as possible. If you leave the engine running, the engine will continue to feed a fire. The fire will be fed from away damaged hoses that are attached to the engine or pumps.

If possible, turn the battery disconnect switch to the OFF position. Disconnecting the battery will remove the ignition source in the event of an electrical short. Disconnecting the battery will eliminate a second ignition source if electrical wiring is damaged by the fire, resulting in a short circuit.

Notify emergency personnel of the fire and your location.

If your machine is equipped with a fire suppression system, follow the manufacturers procedure for activating the system.

- ※ **Fire suppression systems need to be regularly inspected by qualified personnel. You must be trained to operate the fire suppression system.**

Use the on-board fire extinguisher and use the following procedure :

1. Pull the pin.
2. Aim the extinguisher or nozzle at the base of the fire.
3. Squeeze the handle and release the extinguishing agent.
4. Sweep the extinguisher from side to side across the base of the fire until the fire is out.

Remember, if you are unable to do anything else, shut off the machine before exiting. By shutting off the machine, fuels will not continue to be pumped into the fire.

If the fire grows out of control, be aware of the following risks :

- Tires on wheeled machines pose a risk of explosion as tires burn. Hot shrapnel and debris can be thrown great distances in an explosion.
- Tanks, accumulators, hoses, and fittings can rupture in a fire, spraying fuels and shrapnel over a large area.

Remember that nearby all of the fluids on the machine are flammable, including coolant and oils. Additionally, plastics, rubbers, fabrics, and resins in fiberglass panels are also flammable.

Fire extinguisher Location

Make sure that a fire extinguisher is available. Be familiar with the operation of the fire extinguisher. Inspect the fire extinguisher and service the fire extinguisher. Obey the recommendations on the instruction plate.

Mount the fire extinguisher in the accepted location per local regulations.

If your machine is equipped with a ROPS structure, strap the mounting plate to the ROPS in order to mount the fire extinguisher. If the weight of the fire extinguisher exceeds 4.5 kg (10 lb), mount the fire extinguisher near the bottom of the ROPS. Do not mount the fire extinguisher at the upper one-third area on the ROPS.

Do not weld the ROPS structure in order to install the fire extinguisher. Also, do not drill holes in the ROPS structure in order to mount the fire extinguisher on the ROPS.

Consult your Hyundai dealer for the proper procedure for mounting the fire extinguisher.

THE EUROPEAN UNION PHYSICAL AGENTS (VIBRATION) DIRECTIVE 2002/44/EC

Vibration Data for Earth-moving Machines

Information Concerning Hand/Arm Vibration Level

When the machine is operated according to the intended use, the hand/arm vibration of this machine is below 2.5 m/s^2 .

Information Concerning Whole Body Vibration Level

The highest root mean square value of weighted acceleration to which the whole body is subjected, is less than 0.5 m/s^2 .

This section provides vibration data and a method for estimating the vibration level for earth moving machines.

Vibration levels are influenced by many different parameters. Many items are listed below.

- Operator training, behavior, mode and stress
- Job site organization, preparation, environment, weather and material
- Machine type, quality of the seat, quality of the suspension system, attachments and condition of the equipment

It is not possible to get precise vibration levels for this machine. The expected vibration levels can be estimated with the information in below Table in order to calculate the daily vibration exposure. A simple evaluation of the machine application can be used.

Estimate the vibration levels for the three vibration directions. For typical operating conditions, use the average vibration levels as the estimated level. With an experienced operator and smooth terrain, subtract the Scenario Factors from the average vibration level. For aggressive operations and severe terrain, add the Scenario Factors to the average vibration level in order to obtain the estimated vibration level.

※ All vibration levels are in meter per second squared.

ISO Reference Table A – Equivalent vibration levels of whole body vibration emission for earthmoving equipment.

Machine family	Machine kind	Typical operating condition	Vibration Levels			Scenario Factors		
			X axis	Y axis	Z axis	X axis	Y axis	Z axis
Excavator	Compact crawler excavator	Excavating	0.33	0.21	0.19	0.19	0.12	0.10
		Hydraulic breaker app.	0.49	0.28	0.36	0.20	0.13	0.17
		Transfer movement	0.45	0.39	0.62	0.17	0.18	0.28
	Crawler excavator	Excavating	0.44	0.27	0.30	0.24	0.16	0.17
		Hydraulic breaker app.	0.53	0.31	0.55	0.30	0.18	0.28
		Mining application	0.65	0.42	0.61	0.21	0.15	0.32
		Transfer movement	0.48	0.32	0.79	0.19	0.20	0.23
	Wheeled excavator	Excavating	0.52	0.35	0.29	0.26	0.22	0.13
		Transfer movement	0.41	0.53	0.61	0.12	0.20	0.19

ISO Reference Table A – Equivalent vibration levels of whole body vibration emission for earthmoving equipment.

Machine family	Machine kind	Typical operating condition	Vibration Levels			Scenario Factors		
			X axis	Y axis	Z axis	X axis	Y axis	Z axis
Loader	skid steer loader (tracks)	V-shaped motion	1.21	1.00	0.82	0.30	0.84	0.32
	Wheel backhoe loader	Excavating	0.28	0.26	0.20	0.09	0.16	0.06
	Wheel loader	Load and carry motion	0.84	0.81	0.52	0.23	0.20	0.14
		Mining application	1.27	0.97	0.81	0.47	0.31	0.47
		Transfer movement	0.76	0.91	0.49	0.33	0.35	0.17
		V-shape motion	0.99	0.84	0.54	0.29	0.32	0.14

※ Refer to “ISO/TR 25398 Mechanical Vibration-Guideline for the assessment of exposure to whole body vibration of ride on operated earthmoving machines” for more information about vibration. This publication uses data that is measured by international institutes, organizations and manufacturers. This document provides information about the whole body exposure of operators of earthmoving equipment.

Guidelines for Reducing Vibration Levels on Earthmoving Equipment

Properly adjust machines. Properly maintain machines. Operate machines smoothly. Maintain the conditions of the terrain. The following guidelines can help reduce the whole body vibration level :

1. Use the right type and size of machine, equipment, and attachments.
2. Maintain machines according to the manufacturer's recommendations.
 - a. Tire pressures
 - b. Brake and steering systems
 - c. Controls, hydraulic system and linkages
3. Keep the terrain in good condition.
 - a. Remove any large rocks or obstacles.
 - b. Fill any ditches and holes.
 - c. Provide machines and schedule time in order to maintain the conditions of the terrain.
4. Use a seat that meets "ISO 7096". Keep the seat maintained and adjusted.
 - a. Adjust the seat and suspension for the weight and the size of the operator.
 - b. Inspect and maintain the seat suspension and adjustment mechanisms.
5. Perform the following operations smoothly.
 - a. Steer
 - b. Brake
 - c. Accelerate
 - d. Shift the gears.
6. Move the attachments smoothly.
7. Adjust the machine speed and the route in order to minimize the vibration level.
 - a. Drive around obstacles and rough terrain.
 - b. Slow down when it is necessary to go over rough terrain.
8. Minimize vibrations for a long work cycle or a long travel distance.
 - a. Use machines that are equipped with suspension systems.
 - b. Use the ride control system on machines.
 - c. If no ride control system is available, reduce speed in order to prevent bounce.
 - d. Haul the machines between workplaces.
9. Less operator comfort may be caused by other risk factors. The following guidelines can be effective in order to provide better operator comfort:
 - a. Adjust the seat and adjust the controls in order to achieve good posture.
 - b. Adjust the mirrors in order to minimize twisted posture.
 - c. Provide breaks in order to reduce long periods of sitting.
 - d. Avoid jumping from the cab
 - e. Minimize repeated handling of loads and lifting of loads.
 - f. Minimize any shocks and impacts during sports and leisure activities.

Sources

The vibration information and calculation procedure is based on "ISO/TR 25398 Mechanical Vibration- Guideline for whole body vibration exposure of operators of earthmoving equipment. The method is based on measured vibration emission under real working conditions for all machines.

You should check the original directive. This document summarizes part of the content of the applicable law. This document is not meant to substitute the original sources. Other parts of these documents are based on information from the United Kingdom Health and Safety Executive.

MODIFICATIONS

Modifications to the machine, including use of unauthorized accessories and spare parts, may affect the machine's condition and its ability to function as it was designed. No changes of any kind may be performed without first obtaining written approval from Hyundai Heavy Industries. Hyundai Heavy Industries reserves the right to refuse all warranty claims that have resulted due to or can be attributed to unauthorized modifications.

Never modify the operator's cabin by welding, grinding, drilling holes or adding attachments unless instructed by Hyundai Heavy Industries in writing. Changes to the cabin can cause loss of operator protection from roll-over and falling objects, and result in death or serious injury.

The person who performs unauthorized modifications assumes all responsibility for consequences that arise due to the modification or can be attributed to the modification, including damage to the machine.


Modifications may be considered to be officially approved, if at least one of the following conditions has been met :

1. The attachment, the accessory, or the spare part has been made or distributed by Hyundai Heavy Industries and has been installed according to approved methods described in a publication available from Hyundai Heavy Industries; or
2. The modification has been approved in writing by the Engineering Department at each product company within Hyundai Heavy Industries.

2. DURING OPERATING THE MACHINE


Use the handle and footstep when getting on or off the machine.

Do not jump on or off the machine.

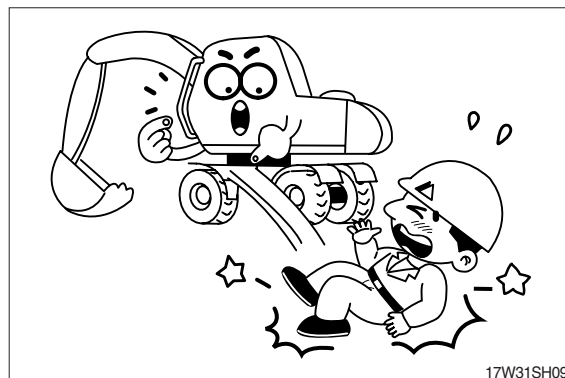


Sound the horn to warn nearby personnel before operating the machine.

Remove all the obstacles like frost on the window before operating the machine for the good visibility.

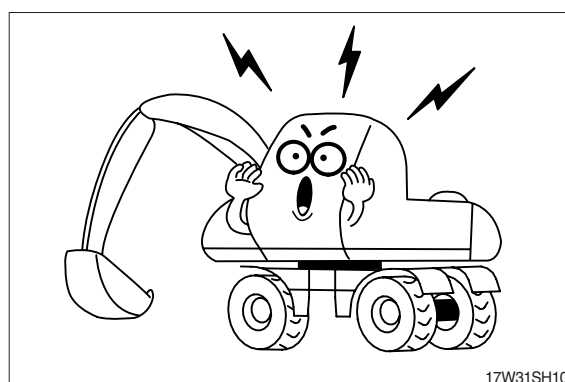

Operate carefully to make sure all personnel or obstacles are clear within the working range of the machine.


Place safety guards if necessary.

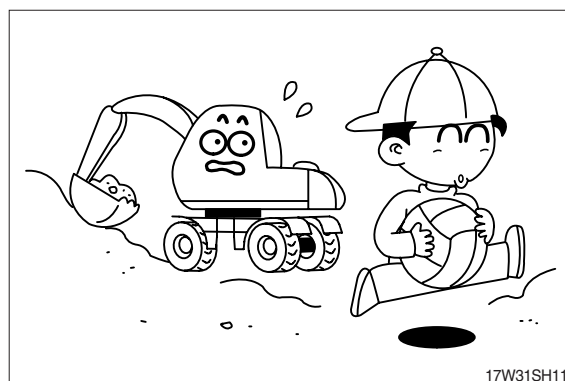


When using the work equipment, pay attention to job site.



Provide proper ventilation when operating engine in a closed area to avoid the danger of exhaust gases.

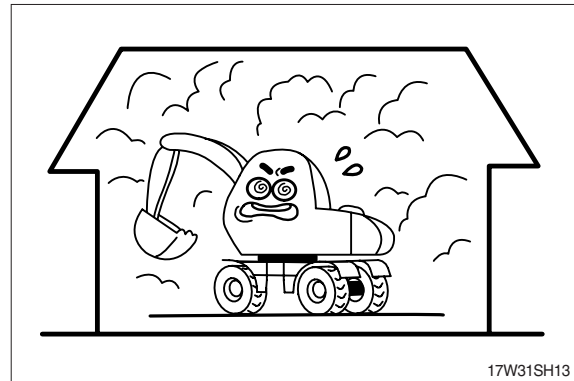


Check the locations of underground gas pipes or water line and secure the safety before operation.

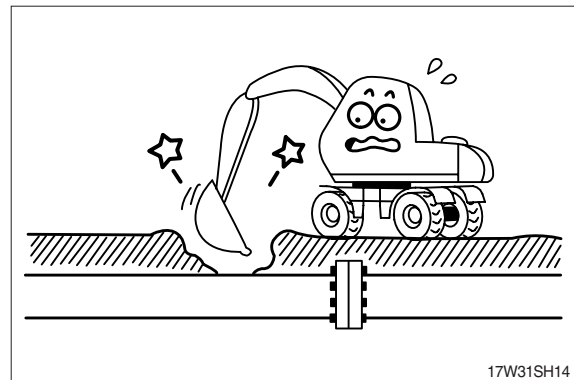


The operating near the electrical lines is very dangerous.

Operate within safe working range permitted as below.

Supply voltage	Min safe separation
6.6 kV	3 m (10 ft)
33.0 kV	4 m (13 ft)
66.0 kV	5 m (16 ft)
154.0 kV	8 m (26 ft)
275.0 kV	10 m (33 ft)

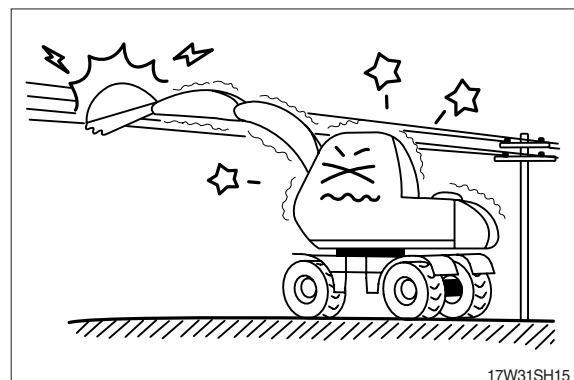


If the machine touches the electric power lines, keep sitting on the operator's seat and make sure the personnel on the ground not to touch the machine until turning off the electric current. Jump off the machine without contacting the machine when you need to get off.

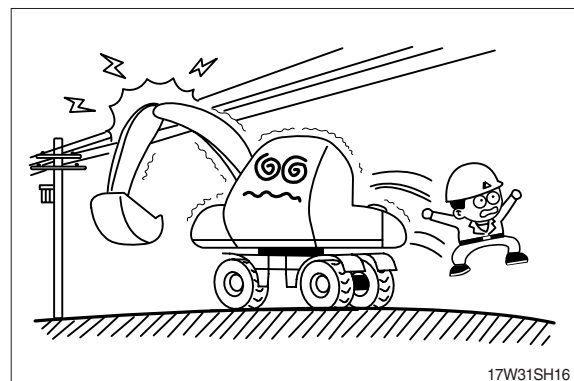


Watch out for obstacles.

Be particularly careful to check the machine clearance during the swing.

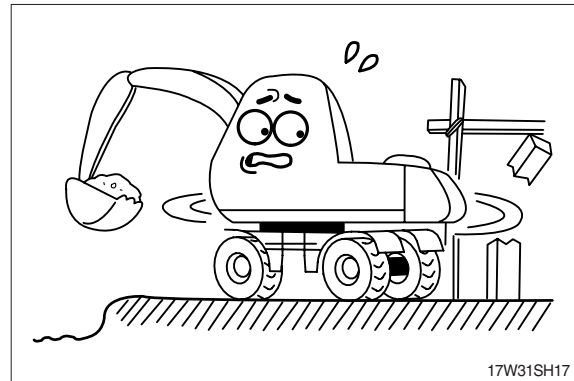


When using the machine as breaker or working in a place where stones may fall down, cab roof guard and head guard should be provided for proper protection.

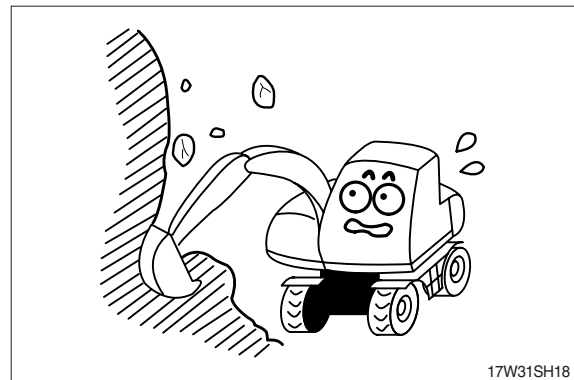


Avoid operating on a cliff or soft ground as there is danger of rolling over.

Make sure to get off easily as keeping the track at a right angle and putting the travel motor into the backward position when working on a cliff or soft ground inevitably.

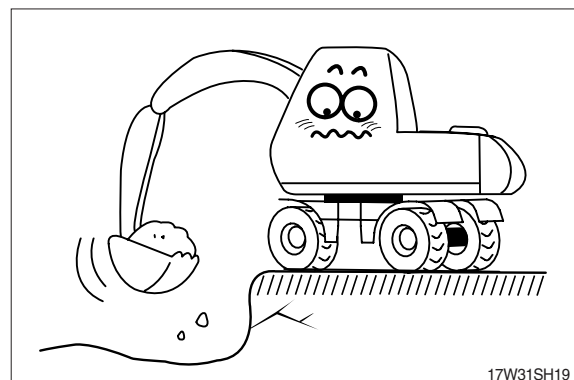


Operate for the lifting work considering the capacity of machine, weight and width of the load.


Be careful not to lift exceeding the machine capacity as it can be the cause of machine damage and safety accident.

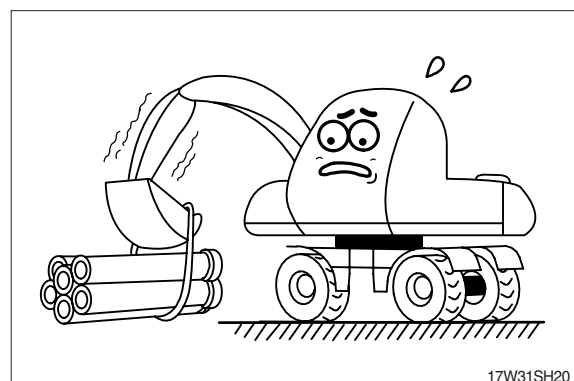


Avoid traveling in a cross direction on a slope as it can cause the danger of rolling over and sliding.

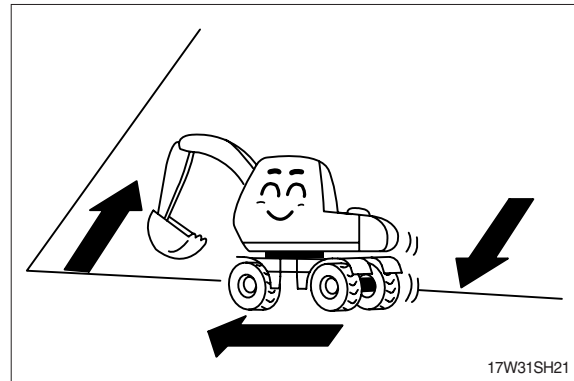


Traveling on a slope is dangerous.
Be sure to operate slowly when traveling down a slope and maintain the bucket at a height of 20~30 cm (1 ft) above the ground so that it can be used as brake in an emergency.

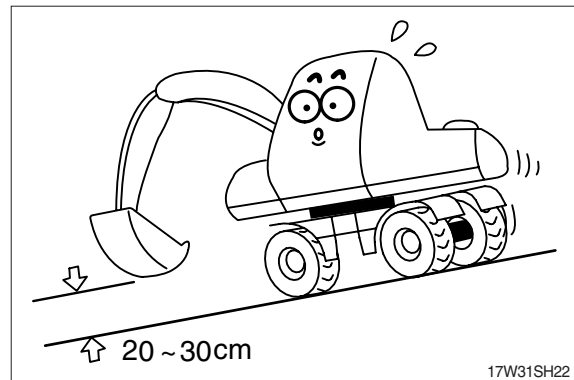


Steering of the machine while traveling on a slope is dangerous.
When an inevitable turning of direction is required, turn on the flat and solid ground.

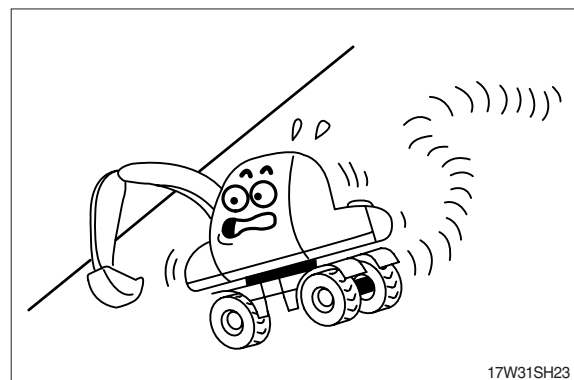


The engine angularity limits are 30 degree.
Do not operate by more than the engine limits in any case.

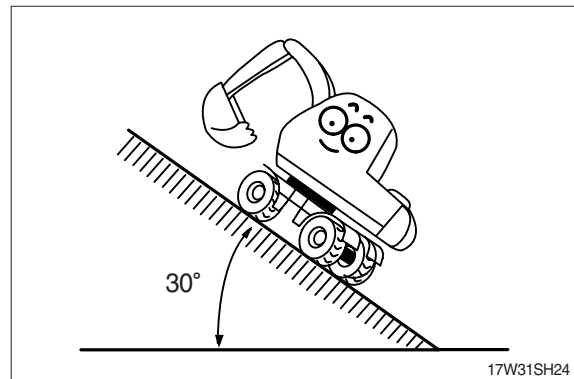


The operation on a slope is dangerous.
Avoid operating the machine on a slope of over 10 degree.

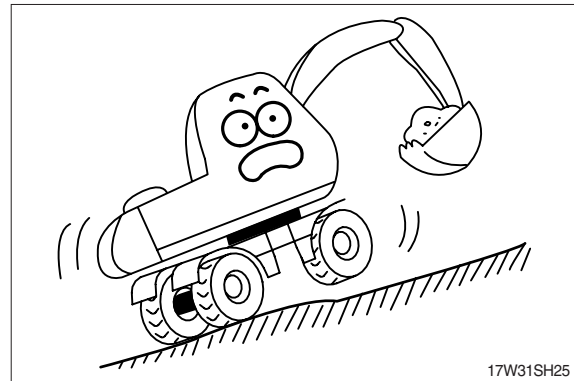


Operate the machine after making ground flat when operation is required on a slope.

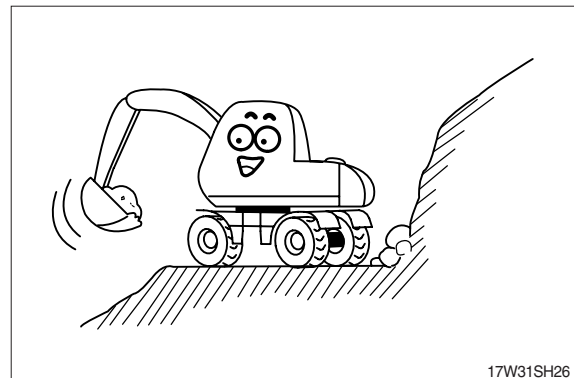

The swing on the slope can be danger of rolling over.
Do not operate to swing the machine with the bucket loaded on a slope since the machine may lose its balance under such an instance.

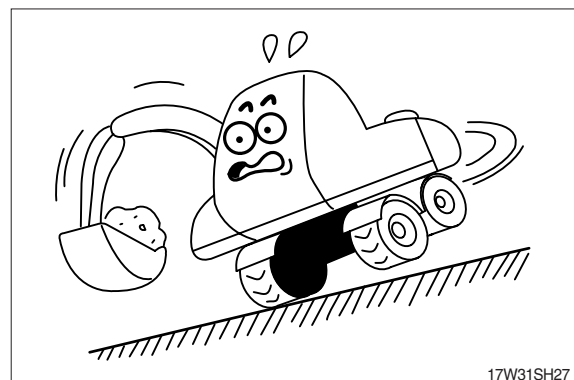


Avoid parking and stopping on a slope.
Lower the bucket to the ground and block the tires when parking.

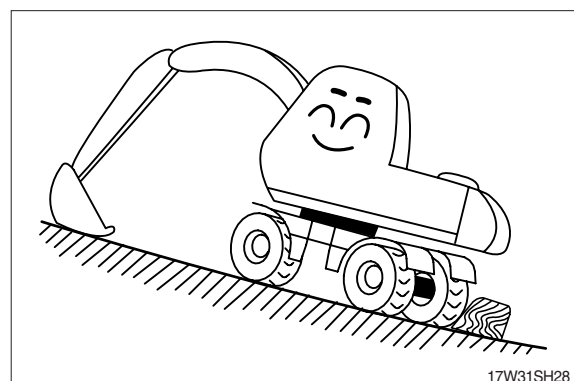


Before traveling the machine, sound the horn to warn nearby personnel.


Operate forward and backward correctly with confirming the location of the travel motor.

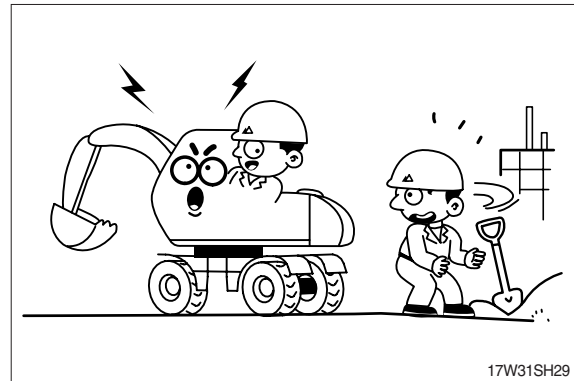

Slow down when traveling through obstacles or uneven ground.

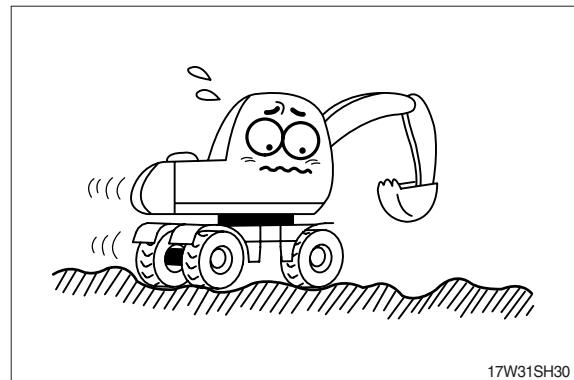

When operating in water or when crossing shallow, check the bed soil condition and depth and flow speed of water, then proceed taking care that water is not above axle center.

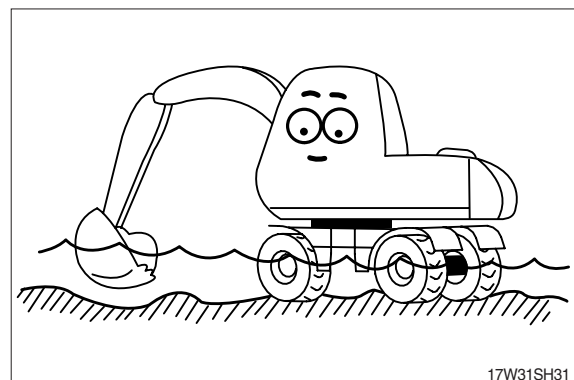

MOUNTING AND DISMOUNTING

Never jump on or off the machine. **Never** get on or off a moving machine.


When mounting or dismounting, always face the machine and use the handrails, machine or foot steps. In this case please contact your Hyundai distributor.

Do not hold any control levers when getting on or off the machine.

Ensure safety by always maintaining at least three-point contact of hands and feet with the handrails, foot steps.

Always remove any oil or mud from the handrails, foot steps. If they are damaged, repair them and tighten any loose bolts.

If grasping the door handrail when mounting or dismounting or moving on the tires, open and lock the door securely in the open position. Otherwise, the door may move suddenly, causing you to lose balance and fall.

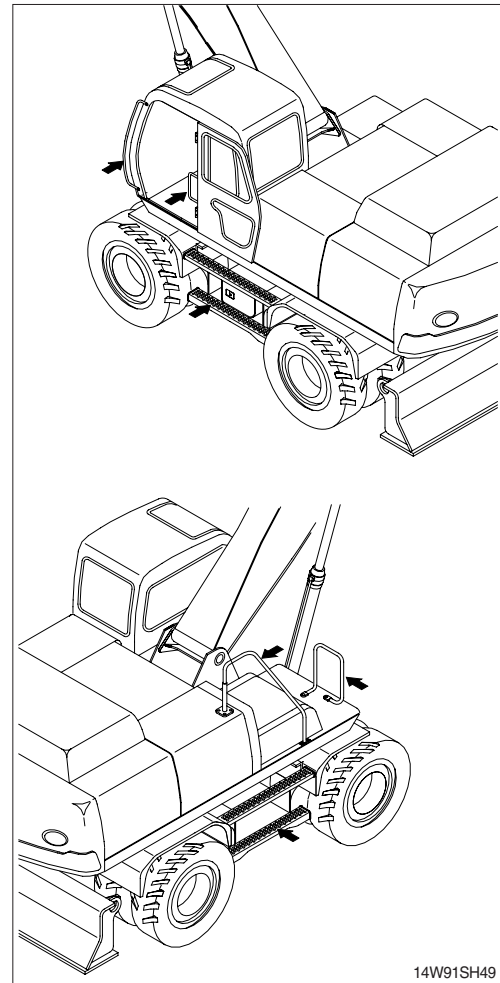

KEEP RIDERS OFF MACHINE

Riders on a machine are subject to injury such as being struck objects and being thrown off the machine.


Only allow the operator on the machine. Keep riders off.

ALWAYS APPLY LOCK WHEN LEAVING MACHINE

When leaving the machine, always place the swing lock pin securely in the LOCK position.

If you accidentally touch the travel or swing lever when they are not locked, the work equipment may suddenly move and cause serious injury or damage.


When leaving the machine, lower the work equipment completely to the ground, stop the engine and use the key to lock all the equipment. Then set the swing lock pin to the lock position. Always take the key with you.

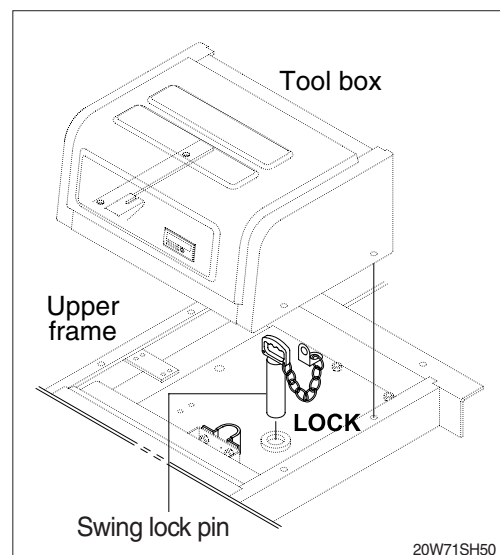

3. DURING MAINTENANCE

Stop the engine immediately when the trouble of the machine is found.


Inspect immediately the cause of trouble such as vibration, overheating and trouble in the cluster then repair.

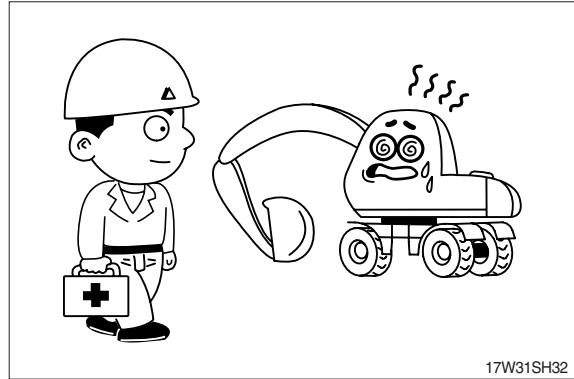

Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)

Extreme care shall be taken during maintenance work. Parts may require additional safe guard.

Lower the dozer blade and/or outrigger to the ground.

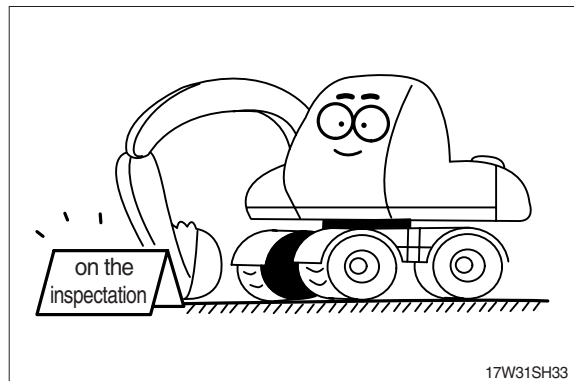


Do not remove the radiator cap from hot engine. Open the cap after the engine cools, below 50°C (122°F) to prevent personal injury from heated coolant spray or steam.




Do not work below the machine.

Be sure to work with proper safety supports.


Do not depend on the hydraulic cylinders to hold up the equipment and attachment.

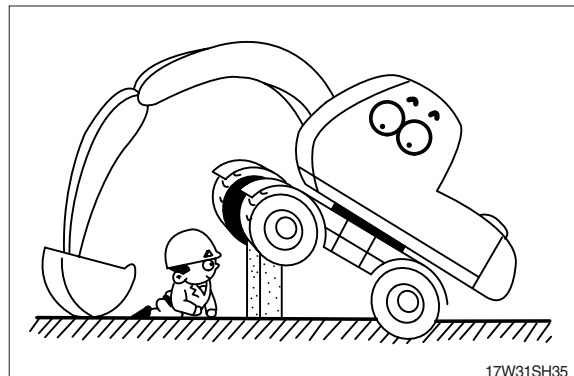


There is the danger of fire in fuel and oil.
Store in cool and dry area, away from any open flames.

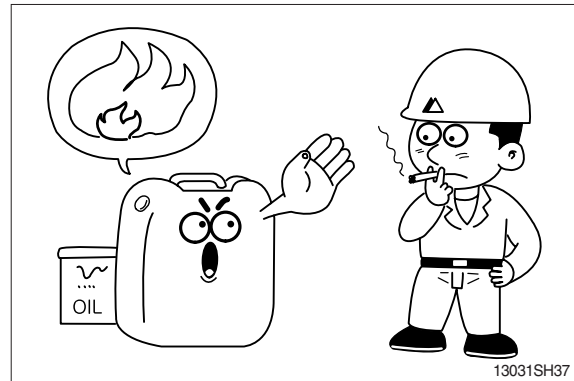


Do not touch exhaust pipe, or may cause severe burn.

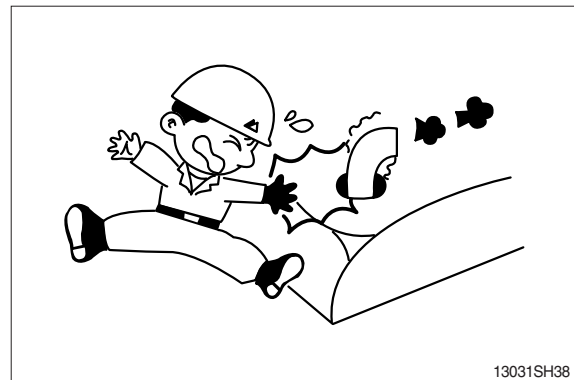

Do not open the engine hood and covers while the engine is running.

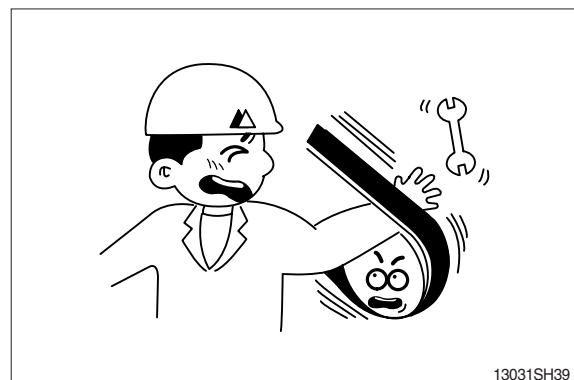

Be careful of not hitting the edges when you service engine.

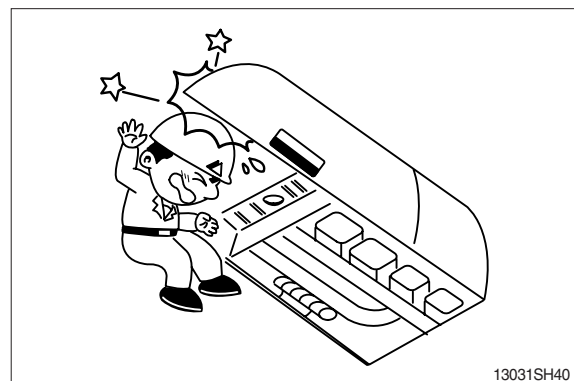

Be careful that the front window may be promptly closed.


Be sure to support stay, when the side door needs to be opened.

Be careful that the open side door may closed by the external or natural force like strong wind.




The antislip protection should be replaced if they have become worn or have been printed over.

Be sure to free of oil, water and grease etc.

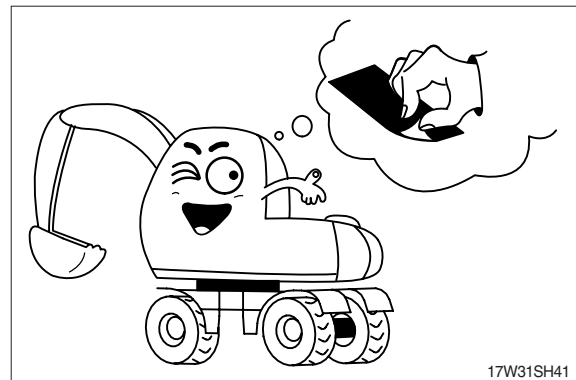

Be careful of not touching slip, fall down etc., when you work at the upper frame to service engine and/or other component.

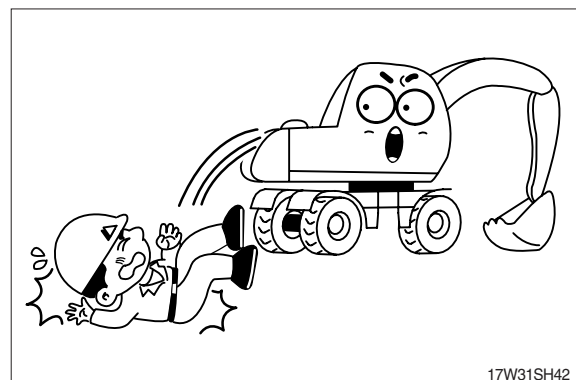


HIGH PRESSURE GAS

Contain high pressure gas.

To avoid explosion and personal injury, do not expose to fire, do not weld, do not drill.

Relieve pressure before discharging.

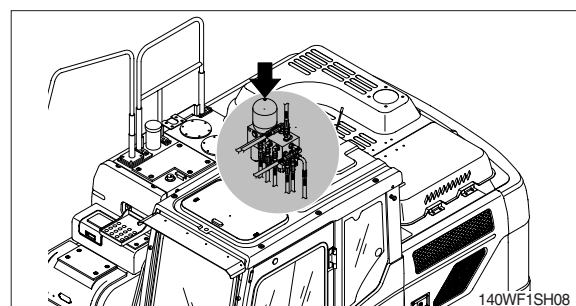

LIFT EYES CAN FAIL


Lift eyes or tank can fail when lifting tank containing fluids resulting in possible personal injury.

Drain tank of all fluids before lifting.


4. PARKING

When leaving the machine after parking, lower the bucket to the ground completely and put the safety lever at parking position then remove the key.

Lock the cab door.

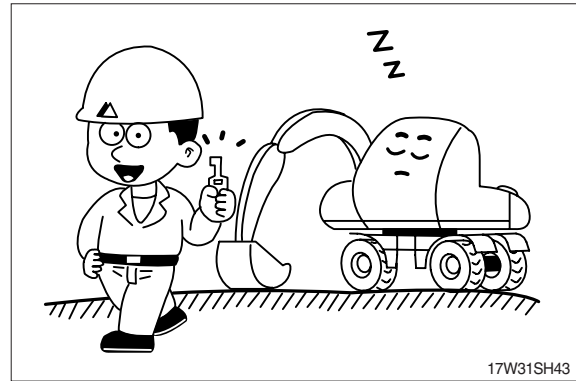


Park the machine in the flat and safe place.

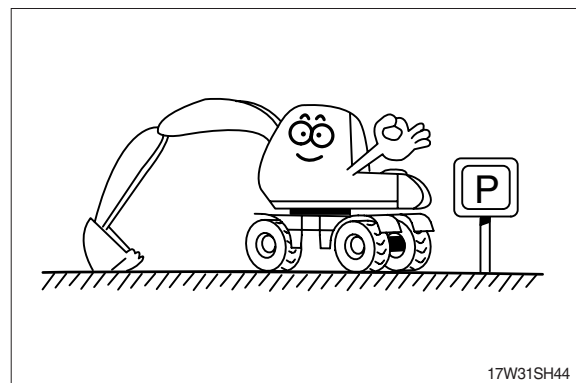



Hope you can work easily and safely observing safety rules.

For safe operation, observe all safety rules.

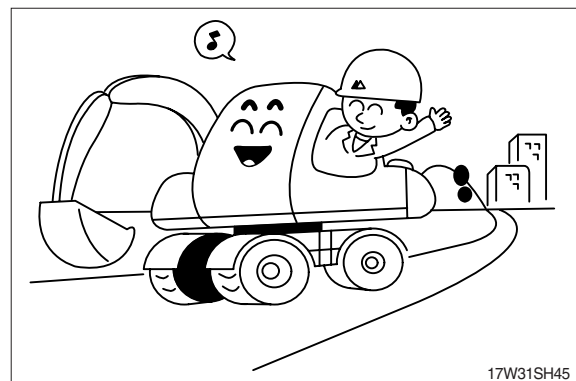

SPECIFICATIONS


1. MAJOR COMPONENTS

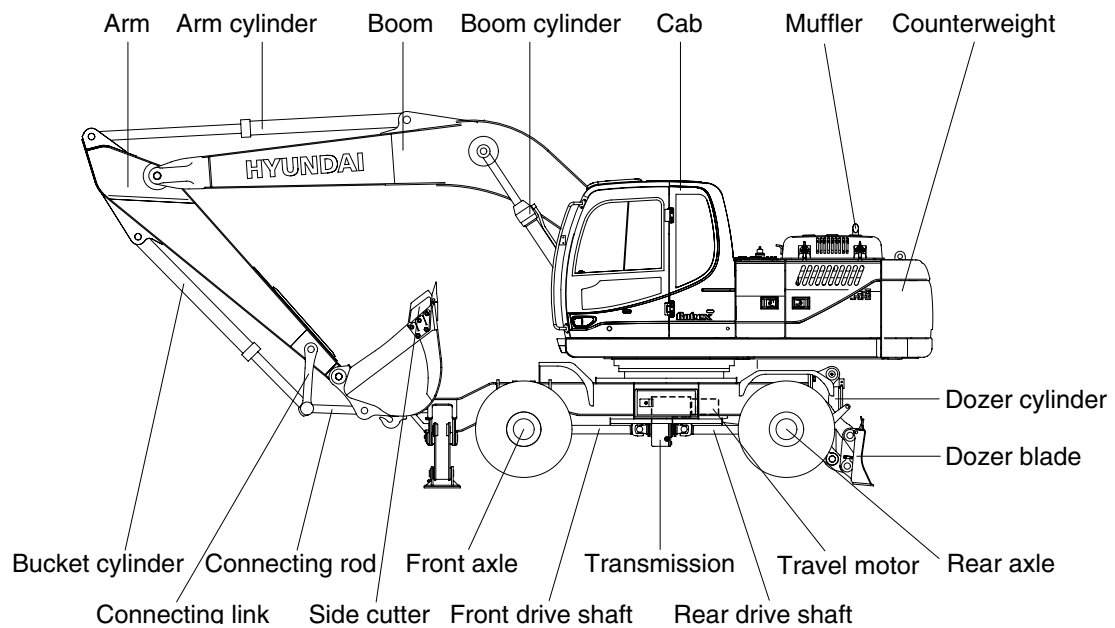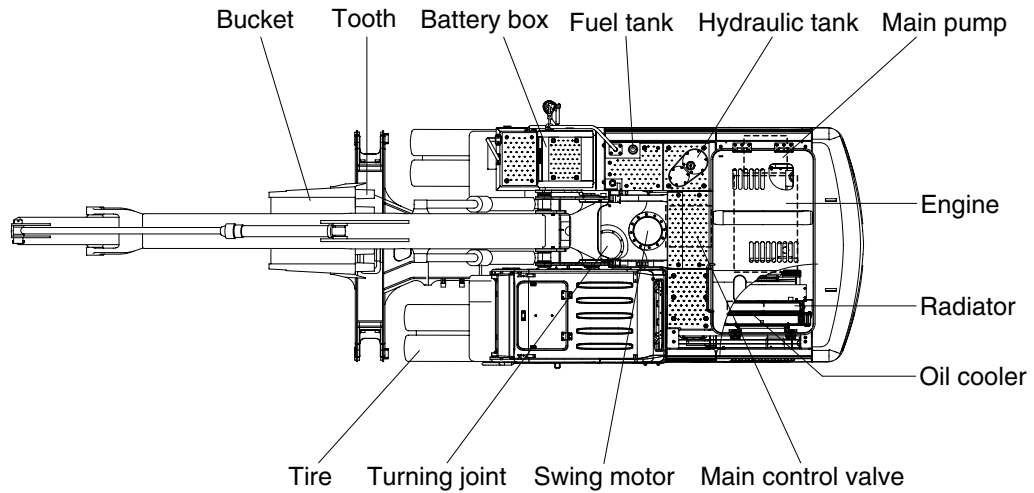

20W92SP01

2. SPECIFICATIONS

1) 5.65 m (18' 6") ONE PIECE BOOM, 2.92 m (9' 7") ARM, FRONT OUTRIGGER AND REAR DOZER BLADE

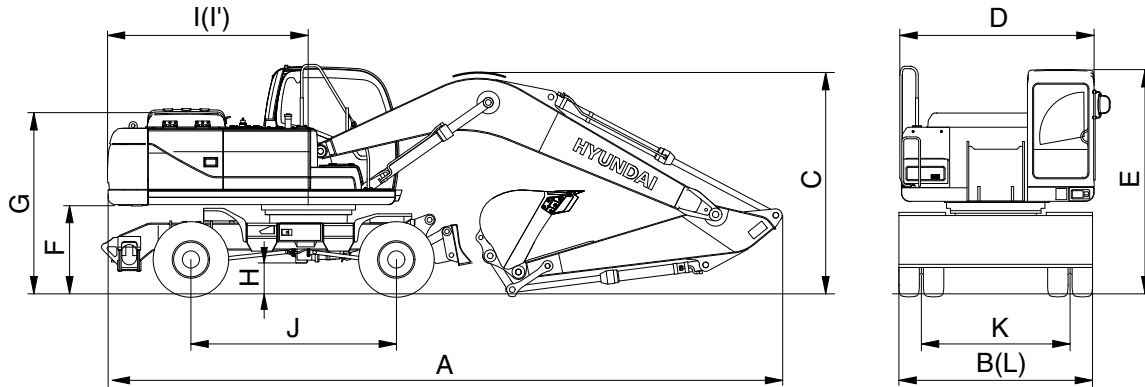


20W92SP02

Description		Unit	Specification
Operating weight		kg (lb)	20500 (45190)
Bucket capacity (SAE heaped)		m ³ (yd ³)	0.80 (1.05)
Overall length (travel/shipping)	A	mm (ft-in)	9380 (30' 1")/9500 (31' 2")
Overall width	B		2530 (8' 4")
Overall height of boom (travel/shipping)	C		4020 (13' 2")/3150 (10' 4")
Upperstructure width	D		2530 (8' 4")
Cab height	E		3180 (10' 5")
Ground clearance of counterweight	F		1305 (4' 3")
Engine cover height	G		2565 (8' 5")
Minimum ground clearance	H		345 (1' 2")
Rear-end distance	I		2765 (9' 1")
Rear-end swing radius	I'		2790 (9' 2")
Wheel base	J		2800 (9' 2")
Tread	K		1914 (6' 3")
Dozer blade width	L		2490 (8' 2")
Travel speed	Low	km/hr (mph)	8.7 (5.4)
	High		30 (18.6)
Swing speed		rpm	10.5
Gradeability		Degree	34
Max traction force		kgf (lbf)	11900 (26240)

3. WORKING RANGE

5.65 m (18' 6") BOOM

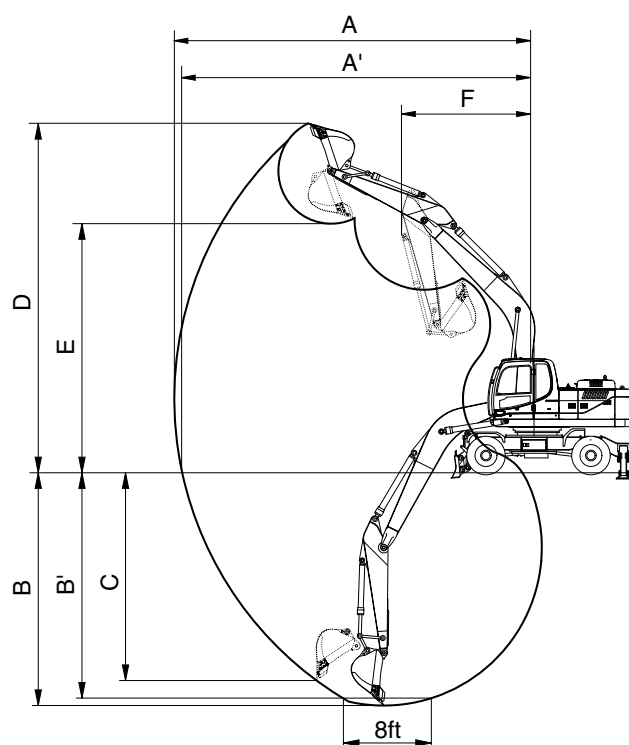

20W92SP03

Description		2.0 m (6' 7") Arm	2.40 m (7' 10") Arm	※ 2.92 m (9' 7") Arm
Max digging reach	A	9110 mm (29' 11")	9480 mm (31' 1")	9960 mm (32' 8")
Max digging reach on ground	A'	8870 mm (29' 1")	9260 mm (30' 5")	9750 mm (32' 0")
Max digging depth	B	5480 mm (18' 0")	5880 mm (19' 3")	6380 mm (20' 11")
Max digging depth (8ft level)	B'	5240 mm (17' 2")	5670 mm (18' 7")	6210 mm (20' 4")
Max vertical wall digging depth	C	4970 mm (16' 4")	5440 mm (17' 10")	5810 mm (19' 1")
Max digging height	D	9500 mm (31' 2")	9730 mm (31' 11")	10000 mm (32' 10")
Max dumping height	E	6670 mm (21' 11")	6900 mm (22' 8")	7160 mm (23' 6")
Min swing radius	F	3700 mm (12' 2")	3620 mm (11' 11")	3580 mm (11' 9")
Bucket digging force	SAE	130.4 [141.6] kN	130.4 [141.6] kN	130.4 [141.6] kN
		13300 [14440] kgf	13300 [14440] kgf	13300 [14770] kgf
		29320 [31830] lbf	29320 [31830] lbf	29320 [32550] lbf
	ISO	149.1 [161.8] kN	149.1 [161.8] kN	149.1 [161.8] kN
		15200 [16500] kgf	15200 [16500] kgf	15200 [16830] kgf
		33510 [36380] lbf	33510 [36380] lbf	33510 [37100] lbf
Arm digging force	SAE	144.2 [156.5] kN	119.6 [129.9] kN	102.0 [110.7] kN
		14700 [15960] kgf	12200 [13250] kgf	10400 [11290] kgf
		32410 [35190] lbf	26900 [29210] lbf	22930 [24900] lbf
	ISO	151.0 [164.0] kN	125.5 [136.3] kN	106.9 [116.1] kN
		15400 [16720] kgf	12800 [13900] kgf	10900 [11830] kgf
		33950 [36860] lbf	28220 [30640] lbf	24030 [26090] lbf

[] : Power boost

※ : Standard













4. WEIGHT

Item	kg	lb
Upperstructure assembly	8950	19730
Main frame weld assembly	1670	3680
Engine assembly	510	1120
Main pump assembly	130	290
Main control valve assembly	230	510
Swing motor assembly	250	550
Hydraulic oil tank weld assembly	165	360
Fuel tank weld assembly	123	270
Counterweight	3400	7500
Cab assembly	380	840
Lower frame weld assembly	2370	5230
Swing bearing	285	630
Travel motor assembly	90	200
Turning joint	124	270
Transmission assembly	140	310
Front axle assembly	740	1630
Rear axle assembly	700	1540
Dozer blade assembly	920	2030
Front attachment assembly (5.65 m boom, 2.92 m arm, 0.80 m ³ SAE heaped bucket)	3935	8680
5.65 m boom assembly	1360	3000
2.92 m arm assembly	760	1680
0.80 m ³ SAE heaped bucket assembly	710	1570
Boom cylinder assembly	180/1EA	400/1EA
Arm cylinder assembly	290	640
Bucket cylinder assembly	175	390
Bucket control link assembly	170	370
Oscillating cylinder assembly	30/1EA	70/1EA
Dozer blade assembly	920	2030
Front outrigger assembly	390	860
Rear outrigger assembly	1020	2250
Outrigger cylinder assembly	145/1EA	320/1EA
Blade cylinder assembly	105/1EA	230/1EA

5. LIFTING CAPACITIES

1) ROBEX 210W-9S

(1) 5.65 m (18' 6") boom, 2.92 m (9' 7") arm equipped with 0.80m³ (SAE heaped) bucket and 4 outrigger down with 3400 kg (7500 lb) counterweight.

Load point height		Load radius										At max. reach		
		1.5 m (5 ft)		3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20 ft)		7.5 m (25 ft)		Capacity		Reach
														m (ft)
9.0 m (30 ft)	kg lb											*3410 *7520	*3410 *7520	6.52 (21.4)
7.5 m (25 ft)	kg lb											*3470 *7650	*3470 *7650	7.96 (26.1)
6.0 m (20 ft)	kg lb									*2690 *5930	*2690 *5930	*3580 *7890	3140 6920	8.85 (29.0)
4.5 m (15 ft)	kg lb							*4210 *9280	*4210 *9280	*3980 *8770	*3980 *8770	*3720 *8200	2770 6110	9.37 (30.7)
3.0 m (10 ft)	kg lb			*10720 *23630	*10720 *23630	*6550 *14440	*6550 *14440	*5090 *11220	*5090 *11220	*4410 *9720	3970 8750	*3890 *8580	2600 5730	9.59 (31.5)
1.5 m (5 ft)	kg lb			*8900 *19620	*8900 *19620	*8350 *18410	*8350 *18410	*6020 *13270	5510 12150	*4900 *10800	3820 8420	*4080 *8990	2570 5670	9.54 (31.3)
Ground Line	kg lb			*10210 *22510	*10210 *22510	*9470 *20880	8490 18720	*6730 *14840	5290 11660	*5300 *11680	3710 8180	*4290 *9460	2710 5970	9.21 (30.2)
-1.5 m (-5 ft)	kg lb	*9470 *20880	*9470 *20880	*13480 *29720	*13480 *29720	*9820 *21650	8360 18430	*7060 *15560	5190 11440	*5440 *11990	3660 8070	*4500 *9920	3060 6750	8.56 (28.1)
-3.0 m (-10 ft)	kg lb	*12940 *28530	*12940 *28530	*14070 *31020	*14070 *31020	*9430 *20790	8410 18540	*6830 *15060	5220 11510			*4640 **10230	3860 8510	7.50 (24.6)
-4.5 m (-15 ft)	kg lb			*11670 *25730	*11670 *25730	*7990 *17610	*7990 *17610							













Note 1. Lifting capacity are based on SAE J1097 and ISO 10567.

2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.













3. The load point is a hook (standard equipment) located on the back of the bucket.

4. *indicates load limited by hydraulic capacity.













(2) 5.65 m (18' 6") boom, 2.92 m (9' 7") arm equipped with 0.80m³ (SAE heaped) bucket and 4 outrigger up with 3400 kg (7500 lb) counterweight.

Load point height		Load radius										At max. reach		
		1.5 m (5 ft)		3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20 ft)		7.5 m (25 ft)		Capacity		Reach
														m (ft)
9.0m (30 ft)	kg lb											*3410 *7520	2840 6260	6.52 (21.4)
7.5 m (25 ft)	kg lb											*3470 *7650	1870 4120	7.96 (26.1)
6.0 m (20 ft)	kg lb									*2690 *5930	2010 4430	2970 6550	1420 3130	8.85 (29.0)
4.5 m (15 ft)	kg lb							*4210 *9280	2990 6590	3880 8550	1930 4250	2610 5750	1190 2620	9.37 (30.7)
3.0 m (10 ft)	kg lb			*10720 *23630	7970 17570	*6550 *14440	4340 9570	*5090 *11220	2730 6020	3740 8250	1810 3990	2450 5400	1070 2360	9.59 (31.5)
1.5 m (5 ft)	kg lb			*8900 *19620	6830 15060	8180 18030	3840 8470	5160 11380	2470 5450	3590 7910	1670 3680	2420 5340	1040 2290	9.54 (31.3)
Ground Line	kg lb			*10210 *22510	6570 14480	7830 17260	3550 7830	4950 10910	2290 5050	3480 7670	1570 3460	2550 5620	1100 2430	9.21 (30.2)
-1.5 m (-5 ft)	kg lb	*9470 *20880	*9470 *20880	*13480 *29720	6590 14530	7710 17000	3450 7610	4850 10690	2200 4850	3440 7580	1530 3370	2880 6350	1290 2840	8.56 (28.1)
-3.0 m (-10 ft)	kg lb	*12940 *28530	*12940 *28530	*14070 *31020	6740 14860	7760 17110	3790 7690	4870 10740	2220 4890			3630 8000	1700 3750	7.50 (24.6)
-4.5 m (-15 ft)	kg lb			*11670 *25730	7050 15540	7980 17590	3670 8090							













(3) 5.65 m (18' 6") boom, 2.92 m (9' 7") arm equipped with 0.80m³ (SAE heaped) bucket, front outrigger and rear dozer blade down with 3400 kg (7500 lb) counterweight.

Load point height		Load radius										At max. reach		
		1.5 m (5 ft)		3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20 ft)		7.5 m (25 ft)		Capacity		Reach
														m (ft)
9.0m (30 ft)	kg lb											*3410 *7520	*3410 *7520	6.52 (21.4)
7.5 m (25 ft)	kg lb											*3470 *7650	3210 7080	7.96 (26.1)
6.0 m (20 ft)	kg lb									*2690 *5930	*2690 *5930	*3580 *7890	2580 5690	8.85 (29.0)
4.5 m (15 ft)	kg lb							*4210 *9280	*4210 *9280	*3980 *8770	3380 7450	*3720 *8200	2250 4960	9.37 (30.7)
3.0 m (10 ft)	kg lb			*10720 *23630	*10720 *23630	*6550 *14440	*6550 *14440	*5090 *11220	4750 10470	*4410 *9720	3250 7170	*3890 *8580	2090 4610	9.59 (31.5)
1.5 m (5 ft)	kg lb			*8900 *19620	*8900 *19620	*8350 *18410	7040 15520	*6020 *13270	4460 9830	*4900 *10800	3100 6830	*4080 *8990	2070 4560	9.54 (31.3)
Ground Line	kg lb			*10210 *22510	*10210 *22510	*9470 *20880	6700 14770	*6730 *14840	4260 9390	*5300 *11680	2990 6590	*4290 *9460	2180 4810	9.21 (30.2)
-1.5 m (-5 ft)	kg lb	*9470 *20880	*9470 *20880	*13480 *29720	*13480 *29720	*9820 *21650	6590 14530	*7060 *15560	4160 9170	*5440 *11990	2950 6500	*4500 *9920	2470 5450	8.56 (28.1)
-3.0 m (-10 ft)	kg lb	*12940 *28530	*12940 *28530	*14070 *31020	14020 30910	*9430 *20790	6640 14640	*6830 *15060	4190 9240			*4640 *10230	3130 6900	7.50 (24.6)
-4.5 m (-15 ft)	kg lb			*11670 *25730	*11670 *25730	*7990 *17610	6850 15100							

(4) 5.65 m (18' 6") boom, 2.92 m (9' 7") arm equipped with 0.80m³ (SAE heaped) bucket, front outrigger and rear dozer blade up with 3400 kg (7500 lb) counterweight.




Load point height		Load radius										At max. reach		
		1.5 m (5 ft)		3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20 ft)		7.5 m (25 ft)		Capacity		Reach
														m (ft)
9.0m (30 ft)	kg lb											*3410 *7520	2840 6260	6.52 (21.4)
7.5 m (25 ft)	kg lb											*3470 *7650	1870 4120	7.96 (26.1)
6.0 m (20 ft)	kg lb									*2690 *5930	2010 4430	2970 6550	1420 3130	8.85 (29.0)
4.5 m (15 ft)	kg lb							*4210 *9280	2990 6590	3880 8550	1930 4250	2610 5750	1190 2620	9.37 (30.7)
3.0 m (10 ft)	kg lb			*10720 *23630	7970 17570	*6550 *14440	4340 9570	*5090 *11220	2730 6020	3740 8250	1810 3990	2450 5400	1070 2360	9.59 (31.5)
1.5 m (5 ft)	kg lb			*8900 *19620	6830 15060	8180 18030	3840 8470	5160 11380	2470 5450	3590 7910	1670 3680	2420 5340	1040 2290	9.54 (31.3)
Ground Line	kg lb			*10210 *22510	6570 14480	7830 17260	3550 7830	4950 10910	2290 5050	3480 7670	1570 3460	2550 5620	1100 2430	9.21 (30.2)
-1.5 m (-5 ft)	kg lb	*9470 *20880	*9470 *20880	*13480 *29720	6590 14530	7710 17000	3450 7610	4850 10690	2200 4850	3440 7580	1530 3370	2880 6350	1290 2840	8.56 (28.1)
-3.0 m (-10 ft)	kg lb	*12940 *28530	*12940 *28530	*14070 *31020	6740 14860	7760 17110	3490 7690	4870 10740	2220 4890			3630 8000	1700 3750	7.50 (24.6)
-4.5 m (-15 ft)	kg lb			*11670 *25730	7050 15540	7980 17590	3670 8090							

(5) 5.65 m (18' 6") boom, 2.92 m (9' 7") arm equipped with 0.80m³ (SAE heaped) bucket, front dozer blade and rear outrigger down with 3400 kg (7500 lb) counterweight.

Load point height		Load radius										At max. reach		
		1.5 m (5 ft)		3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20 ft)		7.5 m (25 ft)		Capacity		Reach
														m (ft)
9.0m (30 ft)	kg lb											*3410 *7520	*3410 *7520	6.52 (21.4)
7.5 m (25 ft)	kg lb											*3470 *7650	3340 7360	7.96 (26.1)
6.0 m (20 ft)	kg lb									*2690 *5930	*2690 *5930	*3580 *7890	2690 5930	8.85 (29.0)
4.5 m (15 ft)	kg lb							*4210 *9280	*4210 *9280	*3980 *8770	3530 7780	*3720 *8200	2350 5180	9.37 (30.7)
3.0 m (10 ft)	kg lb			*10720 *23630	*10720 *23630	*6550 *14440	*6550 *14440	*5090 *11220	4950 10910	*4410 *9720	3390 7470	*3890 *8580	2190 4830	9.59 (31.5)
1.5 m (5 ft)	kg lb			*8900 *19620	*8900 *19620	*8350 *18410	7390 16290	*6020 *13270	4670 10300	*4900 *10800	3240 7140	*4080 *8990	2170 4780	9.54 (31.3)
Ground Line	kg lb			*10210 *22510	*10210 *22510	*9470 *20880	7040 15520	*6730 *14840	4460 9830	*5300 *11680	3130 6900	*4290 *9460	2280 5030	9.21 (30.2)
-1.5 m (-5 ft)	kg lb	*9470 *20880	*9470 *20880	*13480 *29720	*13480 *29720	*9820 *21650	6930 15280	*7060 *15560	4370 9630	*5440 *11990	3090 6810	*4500 *9920	2590 5710	8.56 (28.1)
-3.0 m (-10 ft)	kg lb	*12940 *28530	*12940 *28530	*14070 *31020	*14070 *31020	*9430 *20790	6980 15390	*6830 *15060	4390 9680			*4640 *10230	3280 7230	7.50 (24.6)
-4.5 m (-15 ft)	kg lb			*11670 *25730	*11670 *25730	*7990 *17610	7190 15850							


6. BUCKET SELECTION GUIDE


1) GENERAL BUCKET

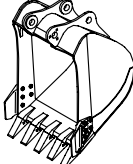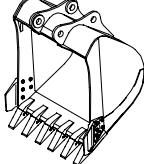
		
0.51 m³ SAE heaped bucket	※ 0.80, 0.87, 0.92, 1.10, 1.20 m³ SAE heaped bucket	1.34 m³ SAE heaped bucket

Capacity		Width		Weight	Recommendation		
					5.65 m (18' 6") Mono boom		
SAE heaped	CECE heaped	Without side cutter	With side cutter		2.0 m arm (6' 7")	2.4 m arm (7' 10")	2.92 m arm (9' 7")
0.51 m³ (0.67 yd³)	0.45 m³ (0.59 yd³)	700 mm (27.6")	820 mm (32.3")	570 kg (1260 lb)			
※ 0.80 m³ (1.05 yd³)	0.70 m³ (0.92 yd³)	1000 mm (39.4")	1120 mm (44.1")	700 kg (1540 lb)			
0.87 m³ (1.14 yd³)	0.75 m³ (0.98 yd³)	1090 mm (42.9")	1210 mm (47.6")	740 kg (1630 lb)			
0.92 m³ (1.20 yd³)	0.80 m³ (1.05 yd³)	1150 mm (45.3")	1270 mm (50.0")	770 kg (1700 lb)			
1.10 m³ (1.44 yd³)	0.96 m³ (1.26 yd³)	1320 mm (52.0")	1440 mm (56.7")	830 kg (1830 lb)			
1.20 m³ (1.57 yd³)	1.00 m³ (1.31 yd³)	1400 mm (55.1")	1520 mm (59.8")	850 kg (1870 lb)			
1.34 m³ (1.75 yd³)	1.15 m³ (1.50 yd³)	1550 mm (61.0")	1670 mm (65.7")	920 kg (2030 lb)			




※ : Standard bucket

 Applicable for materials with density of 2000 kg/m³ (3370 lb/yd³) or less

 Applicable for materials with density of 1600 kg/m³ (2700 lb/yd³) or less

 Applicable for materials with density of 1100 kg/m³ (1850 lb/yd³) or less

2) HEAVY DUTY, ROCK-HEAVY DUTY AND SLOPE FINISHING BUCKET

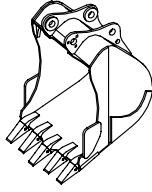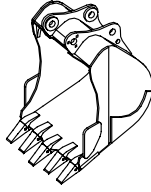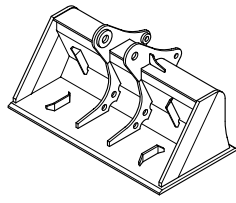Heavy duty bucket	Rock-Heavy duty bucket	Slope finishing bucket
		
◆ 0.74, 0.90, 1.05 m ³ SAE heaped bucket	⊙ 0.87 m ³ SAE heaped bucket	■ 0.75 m ³ SAE heaped bucket

Capacity		Width		Weight	Recommendation		
					5.65 m (18' 6") boom		
SAE heaped	CECE heaped	Without side cutter	With side cutter		2.0 m arm (6' 7")	2.4 m arm (7' 10")	2.92 m arm (9' 7")
◆ 0.74 m ³ (0.97 yd ³)	0.65 m ³ (0.85 yd ³)	985 mm (38.8")	-	770 kg (1700 lb)			
◆ 0.90 m ³ (1.18 yd ³)	0.80 m ³ (1.05 yd ³)	1070 mm (42.1")	-	810 kg (1790 lb)			
◆ 1.05 m ³ (1.37 yd ³)	0.92 m ³ (1.20 yd ³)	1290 mm (50.8")	-	890 kg (1960 lb)			
⊙ 0.87 m ³ (1.14 yd ³)	0.75 m ³ (0.98 yd ³)	1140 mm (44.9")	-	900 kg (1980 lb)			
■ 0.75 m ³ (0.98 yd ³)	0.65 m ³ (0.85 yd ³)	1790 mm (70.5")	-	880 kg (1940 lb)			

◆ : Heavy duty bucket ⊙ : Rock-Heavy duty bucket ■ : Slope finishing bucket

 Applicable for materials with density of 2000 kg/m³ (3370 lb/yd³) or less

 Applicable for materials with density of 1600 kg/m³ (2700 lb/yd³) or less

 Applicable for materials with density of 1100 kg/m³ (1850 lb/yd³) or less

7. SPECIFICATIONS FOR MAJOR COMPONENTS

1) ENGINE

Item	Specification
Model	Cummins B5.9C / HYUNDAI HM 5.9
Type	4-cycle turbocharged diesel engine, low emission
Cooling method	Water cooling
Number of cylinders and arrangement	6 cylinders, in-line
Firing order	1-5-3-6-2-4
Combustion chamber type	Direct injection type
Cylinder borexstroke	102×120 mm (4.02"×4.72")
Piston displacement	5880 cc (359 cu in)
Compression ratio	17.3 : 1
Rated gross horse power (SAE J1995)	178 Hp at 2000 rpm (133 kW at 2000 rpm)
Maximum torque at 1500 rpm	72.2 kgf·m (522 lbf·ft)
Engine oil quantity	24l (6.3 U.S. gal)
Dry weight	505 kg (1113 lb)
High idling speed	2150±50 rpm
Low idling speed	1000±100 rpm
Rated fuel consumption	165.9 g/Hp·hr at 1950 rpm
Starting motor	24 V-4.5 kW
Alternator	24 V-90 A
Battery	2 × 12 V × 100 Ah

2) MAIN PUMP

Item	Specification
Type	Variable displacement tandem axis piston pumps
Capacity	2 × 117 cc/rev
Maximum pressure	330 kgf/cm ² (4694 psi) [360 kgf/cm ² (5120 psi)]
Rated oil flow	2 × 192 l /min (50.7 U.S. gpm / 42.2 U.K. gpm)
Rated speed	2000 rpm

[]: Power boost

3) GEAR PUMP

Item	Specification
Type	Fixed displacement gear pump single stage
Capacity	15cc/rev
Maximum pressure	40 kgf/cm ² (570 psi)
Rated oil flow	28.5 l /min (7.5 U.S. gpm/6.3 U.K. gpm)

4) MAIN CONTROL VALVE

Item	Specification
Type	9 spools
Operating method	Hydraulic pilot system
Main relief valve pressure	350 kgf/cm ² (4980 psi) [380 kgf/cm ² (5400 psi)]
Overload relief valve pressure	400 kgf/cm ² (5690 psi)

[]: Power boost

5) SWING MOTOR

Item	Specification
Type	Fixed displacement axial piston motor
Capacity	151 cc/rev
Relief pressure	265 kgf/cm ² (3770 psi)
Braking system	Automatic, spring applied hydraulic released
Braking torque	59 kgf · m (427 lbf · ft)
Brake release pressure	33~50 kgf/cm ² (470~711 psi)
Reduction gear type	2 - stage planetary

6) TRAVEL MOTOR

Item	Specification
Type	Variable displacement bent-axis axial piston motor
Rated pressure	380 kgf/cm ² (5400 psi)
Counter balance valve	Applied
Capacity	160/61 cc/rev

7) POWER TRAIN

Item	Description		Specification
Transmission	Type		2 speed power shift transmission
	Gear ratio	1st	4.87
		2nd	1.20
Parking brake	Type		Multi disc brake integrated in transmission
	Maximum braking torque		2937 kgf · m (21240 lbf · ft)
Axle	Type		4 wheel drive with differential
	Gear ratio		16.0
	Brake		Multi disc brake

8) CYLINDER

Item		Specification
Boom cylinder	Bore dia × Rod dia × Stroke	ø 120 × ø 85 × 1290 mm
	Cushion	Extend only
Arm cylinder	Bore dia × Rod dia × Stroke	ø 140 × ø 100 × 1510mm
	Cushion	Extend and retract
Bucket cylinder	Bore dia × Rod dia × Stroke	ø 125 × ø 85 × 1055mm
	Cushion	Extend only
Dozer cylinder	Bore dia × Rod dia × Stroke	ø 125 × ø 75 × 222mm
	Cushion	Extend only
Outrigger cylinder	Bore dia × Rod dia × Stroke	ø 130 × ø 80 × 427mm
	Cushion	-
Adjust boom cylinder	Bore dia × Rod dia × Stroke	ø 120 × ø 85 × 1010mm
	Cushion	Extend only

9) BUCKET

Item	Capacity		Tooth quantity	Width	
	SAE heaped	CECE heaped		Without side cutter	With side cutter
Standard	0.80 m ³ (1.05 yd ³)	0.70 m ³ (0.92 yd ³)	5	1000 mm (39.4")	1120 mm (44.1")
Option	0.51 m ³ (0.67 yd ³)	0.45 m ³ (0.59 yd ³)	3	700 mm (27.6")	820 mm (32.3")
	0.87 m ³ (1.14 yd ³)	0.75 m ³ (0.98 yd ³)	5	1090 mm (42.9")	1120 mm (47.6")
	0.92 m ³ (1.20 yd ³)	0.80 m ³ (1.05 yd ³)	5	1150 mm (45.3")	1270 mm (50.0")
	1.10 m ³ (1.44 yd ³)	0.96 m ³ (1.26 yd ³)	5	1320 mm (52.0")	1440 mm (56.7")
	1.20 m ³ (1.57 yd ³)	1.00 m ³ (1.31 yd ³)	5	1400 mm (55.1")	1520 mm (60.0")
	1.34 m ³ (1.75 yd ³)	1.15 m ³ (1.50 yd ³)	6	1550 mm (61.0")	1670 mm (65.7")
	◆0.74 m ³ (0.97 yd ³)	0.65 m ³ (0.85 yd ³)	5	985 mm (38.8")	-
	◆0.90 m ³ (1.18 yd ³)	0.80 m ³ (1.05 yd ³)	5	1070 mm (42.1")	-
	◆1.05 m ³ (1.37 yd ³)	0.92 m ³ (1.20 yd ³)	5	1290 mm (50.8")	-
	⊙0.87 m ³ (1.14 yd ³)	0.75 m ³ (0.98 yd ³)	5	1140 mm (44.9")	-
	■0.75 m ³ (0.98 yd ³)	0.65 m ³ (0.85 yd ³)	-	1790 mm (70.5")	-

◆ : Heavy duty bucket

⊙ : Rock bucket

■ : Slope finishing bucket

8. RECOMMENDED OILS

Use only oils listed below or equivalent.

Do not mix different brand oil.

Service point	Kind of fluid	Capacity l (U.S. gal)	Ambient temperature °C (°F)								
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)
Engine oil pan	Engine oil	14.2 (3.8)	★SAE 5W-40								
							SAE 30				
Transmission case		2.5 (0.66)	SAE 10W								
			SAE 10W-30								
			SAE 15W-40								
Swing drive	Gear oil	5.0 (1.3)	★SAE 75W-90								
			SAE 85W-140								
	Grease	1.2 (0.3)	★NLGI NO.1								
			NLGI NO.2								
Front axle	Gear oil	Center : 9.6 (2.5) Hub : 2.5×2 (0.7×2)	SAE 85W-90 LSD or UTTO								
Rear axle		Center : 13.1(3.5) Hub : 2.5×2 (0.7×2)									
Hydraulic tank	Hydraulic oil	Tank: 165 (43.6) System: 340 (89.8)	★ISO VG 15								
			ISO VG 32								
			ISO VG 46								
			ISO VG 68								
Fuel tank	Diesel fuel	310 (81.9)	★ASTM D975 NO.1								
			ASTM D975 NO.2								
Fitting (Grease nipple)	Grease	As required	★NLGI NO.1								
			NLGI NO.2								
Radiator (Reservoir tank)	Mixture of antifreeze and soft water★ ¹	35 (9.2)	Ethylene glycol base permanent type								
			★Ethylene glycol base permanent type (60 : 40)								

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Materia

UTTO : Universal Tractor Transmission Oil

★ : Cold region

Russia, CIS, Mongolia

★¹ : Soft water

City water or distilled water


CONTROL DEVICES

1. CAB DEVICES

- 1) The ergonomically designed console box and suspension type seat provide the operator with comfort.

2) ELECTRONIC MONITOR SYSTEM

- (1) The centralized electronic monitor system allows the status and conditions of the machine to be monitored at a glance.
- (2) It is equipped with a safety warning system for early detection of machine malfunction.

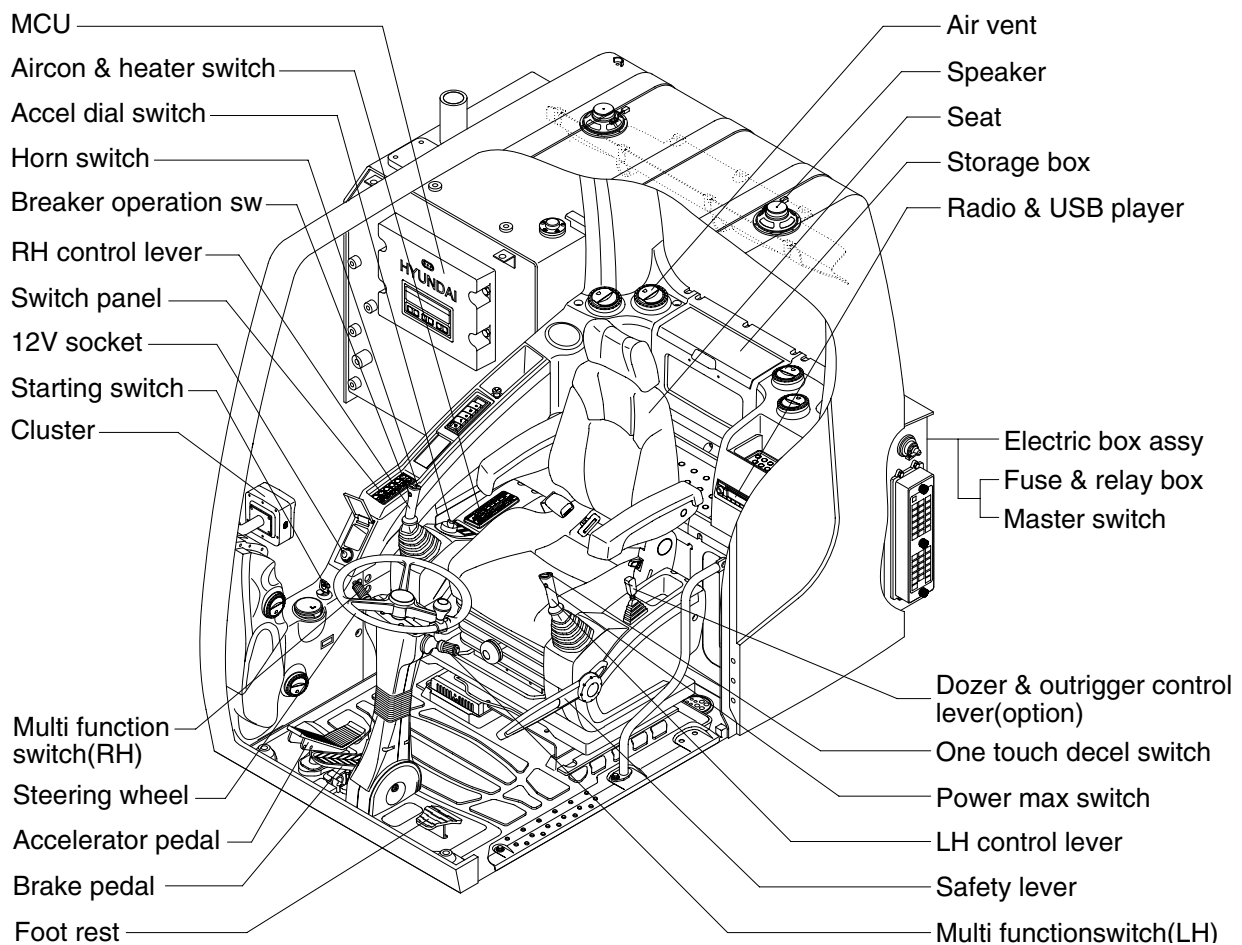

17W9S3CD01


2. CLUSTER (TYPE 1)

1) STRUCTURE

The cluster consists of LCD and switches as shown below. The LCD is to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection. Also, The LCD is to set and display for modes, monitoring and utilities with the switches.

The switches are to set the machine operation modes.

- ※ **The cluster installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.**
- ※ **When the cluster provides a warning immediately check the problem, and perform the required action.**

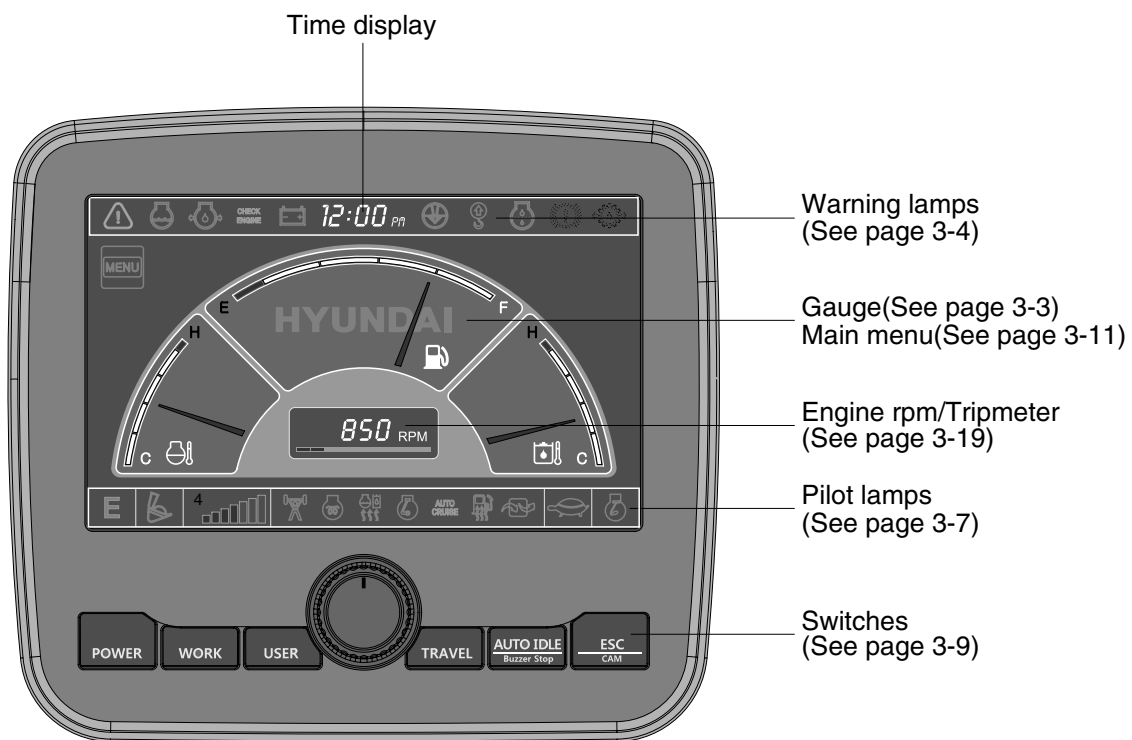


21093CD07

- ※ **The warning lamp pops up and/or blinks and the buzzer sounds when the machine has a problem.**

The warning lamp blinks until the problem is cleared. Refer to page 3-4 for details.


2) GAUGE

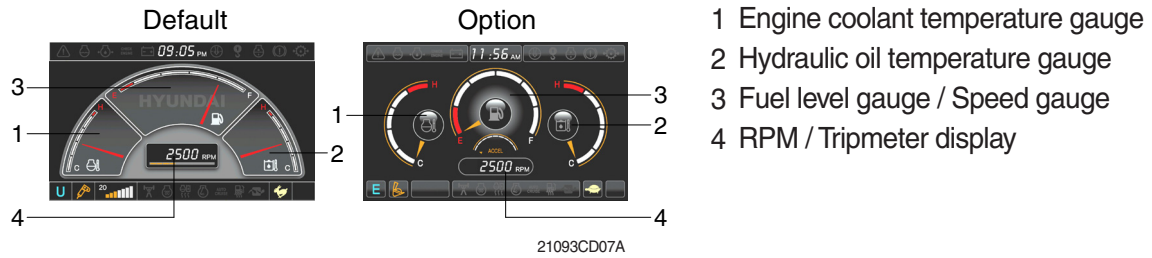

(1) Operation screen




※ Operation screen type can be set by the screen type menu of the display.
Refer to page 3-21 for details.

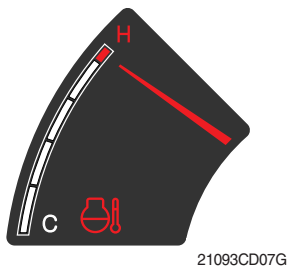

(2) Engine coolant temperature gauge




- ① This gauge indicates the temperature of coolant.
 - White range : 40-105°C (104-221°F)
 - Red range : Above 105°C (221°F)
 - ② If the indicator is in the red range or  lamp blinks in red, turn OFF the engine and check the engine cooling system.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

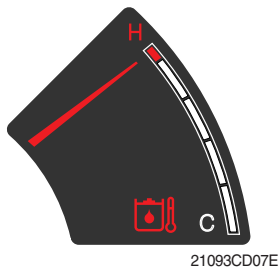(3) Hydraulic oil temperature gauge



- ① This gauge indicates the temperature of hydraulic oil.
 - White range : 40-105°C(104-221°F)
 - Red range : Above 105°C(221°F)
 - ② If the indicator is in the red range or  lamp blinks is red, reduce the load on the system. If the gauge stays in the red range, stop the machine and check the cause of the problem.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.


(4) Fuel level gauge / Speed gauge

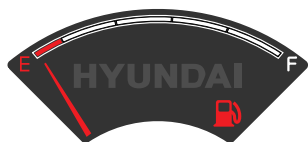


21093CD07F

① This gauge indicates the amount of fuel in the fuel tank.

② Fill the fuel when the red range, or  lamp blinks in red.

※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.


Standard

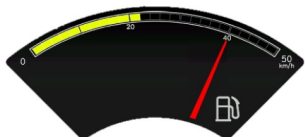

14W93CD10

③ When traveling, the speed gauge is displayed.

Option

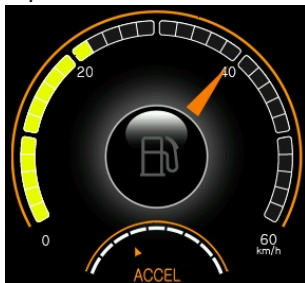

14W93CD11

(5) RPM / Tripmeter display




21093CD02D

① This displays the engine speed or the tripmeter.

※ Refer to page 3-19 for details.


3) WARNING LAMPS

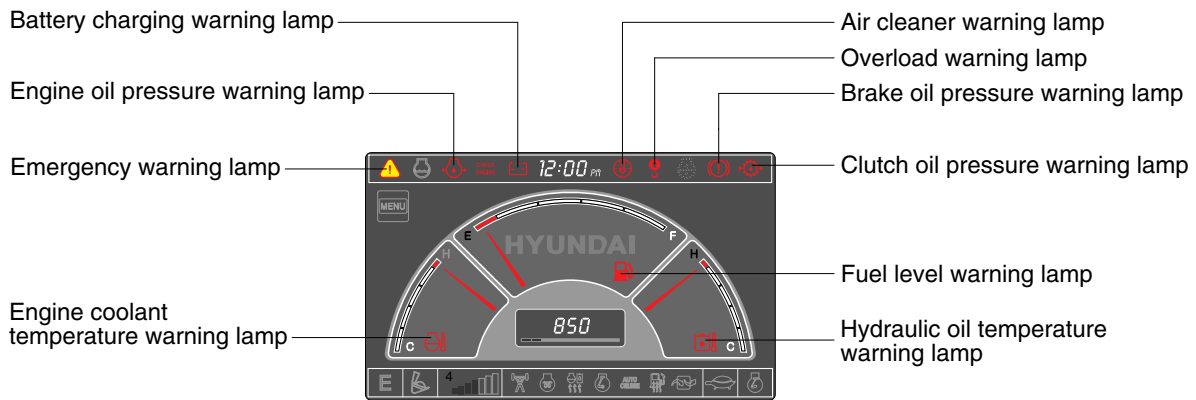

17W9S3CD08

- ※ Each warning lamp on the top of the LCD pops up on the center of LCD and the buzzer sounds when the each warning is happened. The pop-up warning lamp moves to the original position and blinks when the select switch is pushed. And the buzzer stops. Refer to page 3-10 for the select switch.


(1) Engine coolant temperature

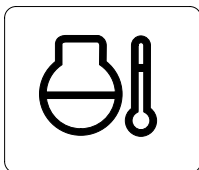

21093CD08A

- ① Engine coolant temperature warning is indicated two steps.
 - 100°C over : The lamp blinks and the buzzer sounds.
 - 105°C over : The lamp pops up on the center of LCD and the buzzer sounds.
- ② The pop-up lamp moves to the original position and blinks when the select switch is pushed. Also, the buzzer stops and lamp keeps blink.
- ③ Check the cooling system when the lamp keeps ON.

(2) Hydraulic oil temperature

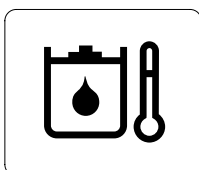

21093CD08C

- ① Hydraulic oil temperature warning is indicated two steps.
 - 100°C over : The lamp blinks and the buzzer sounds.
 - 105°C over : The lamp pops up on the center of LCD and the buzzer sounds.
- ② The pop-up lamp moves to the original position and blinks when the select switch is pushed. Also, the buzzer stops and lamp keeps blink.
- ③ Check the hydraulic oil level and hydraulic oil cooling system.

(3) Fuel level



21093CD08B

- ① This warning lamp blinks and the buzzer sounds when the level of fuel is below 65 l (17.2 U.S. gal).
- ② Fill the fuel immediately when the lamp blinks.

(4) Emergency warning lamp



21093CD30


① This lamp pops up and the buzzer sounds when each of the below warnings is happened.

- Engine coolant overheating (over 105°C)
- Hydraulic oil overheating (over 105°C)
- Pump EPPR circuit abnormal or open
- Attachment flow EPPR circuit abnormal or open
- MCU input voltage abnormal
- Accel dial circuit abnormal or open
- Cluster communication data error

※ **The pop-up warning lamp moves to the original position and blinks when the select switch is pushed. Also the buzzer stops. This is same as following warning lamps.**

② When this warning lamp blinks, machine must be checked and serviced immediately.

(5) Engine oil pressure warning lamp

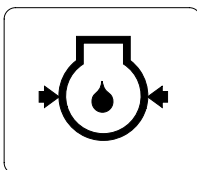


21093CD32

① This lamp blinks when the engine oil pressure is low.

② If the lamp blinks, shut OFF the engine immediately. Check oil level.

(6) Battery charging warning lamp

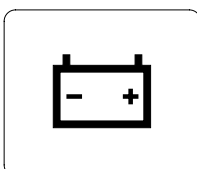


21093CD34

① This lamp blinks when the battery charging voltage is low.

② Check the battery charging circuit when this lamp blinks.

(7) Air cleaner warning lamp

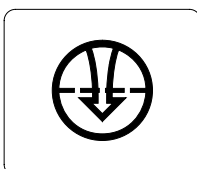


21093CD35

① This lamp blinks when the filter of air cleaner is clogged.

② Check the filter and clean or replace it.

(8) Overload warning lamp (opt)

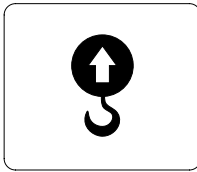

21093CD36

- ① When the machine is overload, the overload warning lamp blinks during the overload switch is ON. (if equipped)
- ② Reduce the machine load.


(9) Brake oil pressure warning lamp



14W93CD95

- ① This lamp blinks when the oil pressure of service brake drops below the normal range.
- ② Stop the engine and check for its cause.
- ※ **Do not operate until any problems are corrected.**


(10) Clutch oil pressure warning lamp

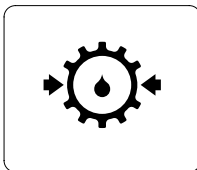

14W93CD96

- ① This lamp blinks when the oil pressure of the transmission drops.
- ② Stop the engine and check the transmission system.

4) PILOT LAMPS

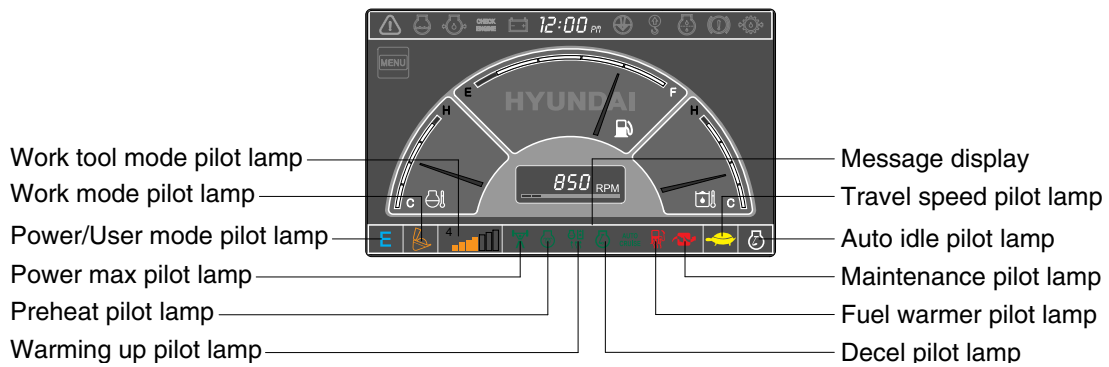

17W9S3CD09

(1) Mode pilot lamps

No	Mode	Pilot lamp	Selected mode
1	Power mode		Heavy duty power work mode
			Standard power mode
			Economy power mode
2	User mode		User preferable power mode
3	Work mode		General operation mode
			Breaker operation mode
			Crusher operation mode
4	Travel mode		Low speed traveling
			High speed traveling
5	Auto idle mode		Auto idle
6	Work tool mode		Oil flow level of breaker or crusher mode
7	Message display		"Setting is completed" display after selection

(2) Power max pilot lamp



21093CD38

① The lamp will be ON when pushing power max switch on the LH RCV lever.

② The power max function is operated maximum 8 seconds.

※ Refer to the page 3-37 for power max function.


(3) Preheat pilot lamp



21093CD39

- ① Turning the start key switch ON position starts preheating in cold weather.
- ② Start the engine after this lamp is OFF.


(4) Warming up pilot lamp

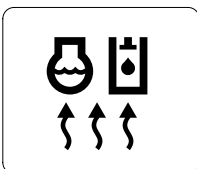

21093CD40

- ① This lamp is turned ON when the coolant temperature is below 30°C (86°F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30°C, or when 10 minutes have passed since starting the engine.

(5) Decel pilot lamp

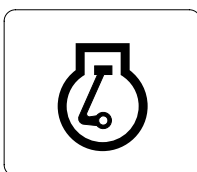


21093CD41

- ① Operating one touch decel switch on the RCV lever makes the lamp ON.
- ② Also, the lamp will be ON and engine speed will be lowered automatically to save fuel consumption when all levers and pedals are at neutral position, and the auto idle function is selected.

※ **One touch decel is not available when the auto idle pilot lamp is turned ON. Refer to the page 3-37.**


(6) Fuel warmer pilot lamp

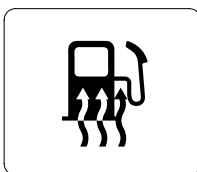

21093CD43

- ① This lamp is turned ON when the coolant temperature is below 10°C (50°F) or the hydraulic oil temperature 20°C (68°F).
- ② The automatic fuel warming is cancelled when the engine coolant temperature is above 60°C, or the hydraulic oil temperature is above 45°C since the start switch was ON position.


(7) Maintenance pilot lamp

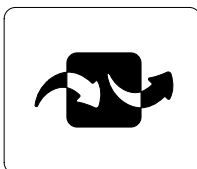

21093CD44

- ① This lamp will be ON when the consuming parts are needed to change or replace. It means that the change or replacement interval of the consuming parts remains below 30 hours.
- ② Check the message in maintenance information of main menu. Also, this lamp lights ON for 3 minutes when the start switch is ON position.


5) SWITCHES

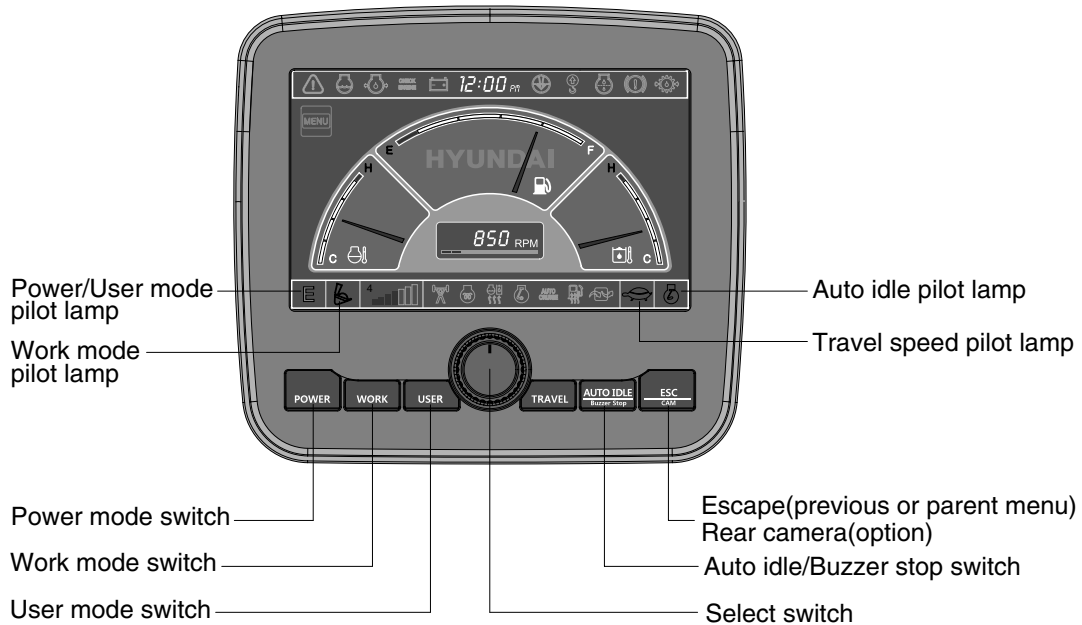

14W93CD45

※ When the switches are selected, the pilot lamps are displayed on the LCD. Refer to the page 3-7 for details.


(1) Power mode switch

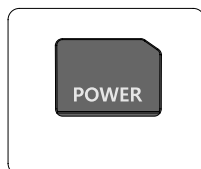




21093CD45A

- ① This switch is to select the machine power mode and selected power mode pilot lamp is displayed on the pilot lamp position.
 - P : Heavy duty power work.
 - S : Standard power work.
 - E : Economy power work.
- ② The pilot lamp changes E → S → P → E in order.

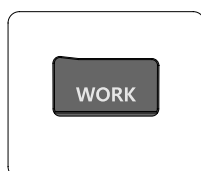(2) Work mode switch




21093CD45C

- ① This switch is to select the machine work mode, which shifts from general operation mode to optional attachment operation mode.
 -  : General operation mode
 -  : Breaker operation mode (if equipped)
 -  : Crusher operation mode (if equipped)
 - Not installed : Breaker or crusher is not installed.

※ Refer to the page 4-10 for details.


(3) User mode switch

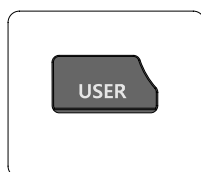

21093CD45D

- ① This switch is used to memorize the current machine operating status in the MCU and activate the memorized user mode.
 - Memory : Push more than 2 seconds.
 - Action : Push within 2 seconds.
 - Cancel : Push this switch once more within 2 seconds.
- ② Refer to the page 3-12 for another set of user mode.

(4) Select switch

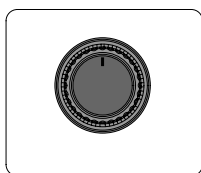

21093CD45E

- ① This switch is used to select or change the menu and input value.
- ② Knob push
 - Long (over 2 sec) : Return to the operation screen
 - Medium (0.5~2 sec) : Return to the previous screen
 - Short (below 0.5 sec) : Select menu
- ③ Knob rotation

This knob changes menu and input value.

 - Right turning : Down direction / Increase input value
 - Left turning : Up direction / Decreased input value

(5) Auto idle/ buzzer stop switch




21093CD45F

- ① This switch is used to activate or cancel the auto idle function.
 - Pilot lamp ON : Auto idle function is activated.
 - Pilot lamp OFF : Auto idle function is cancelled.
- ② The buzzer sounds when the machine has a problem.

In this case, push this switch and buzzer stops, but the warning lamp blinks until the problem is cleared.

(6) Escape/Camera switch

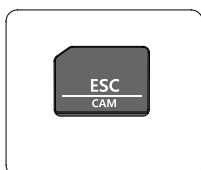


21093CD45H

- ① This switch is used to return to the previous menu or parent menu.
- ② In the operation screen, pushing this switch will display the view of the camera on the machine (if equipped).



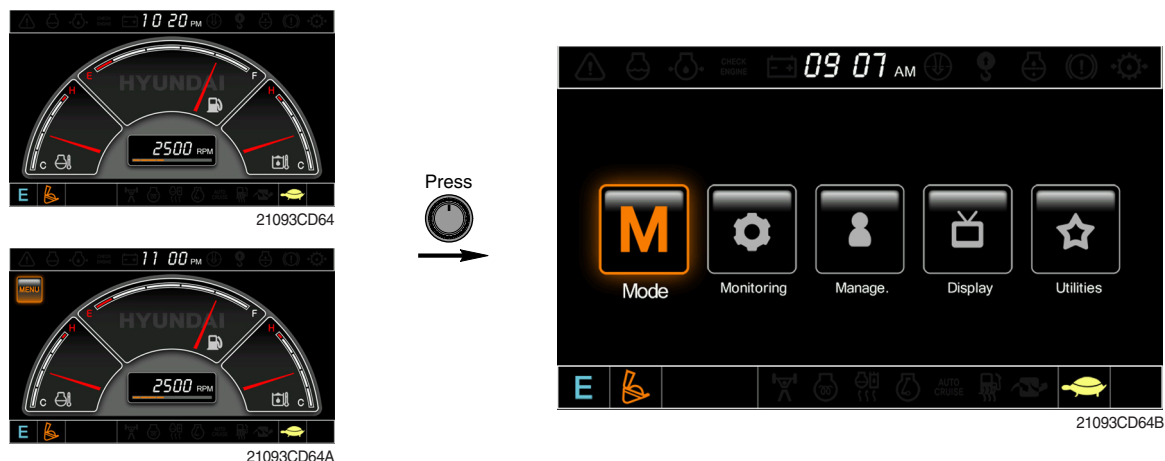


Please refer to page 3-22 for the camera.
- ③ If the camera is not installed, this switch is used only ESC function.

6) MAIN MENU




※ Please refer to select switch, page 3-10 for selection and change of menu and input value.

(1) Structure

No	Main menu	Sub menu	Description
1	 Mode 21093CD64D	Work tool U mode power Boom/Arm speed Auto power boost Initial mode Cluster switch (back up)	Breaker, Crusher, Not installed User mode only Boom speed, Arm speed Enable, Disable Default, U mode Switch function
2	 Monitoring 21093CD64E	Active fault Logged fault Delete logged fault Monitoring (analog) Monitoring (digital) Operating hours	MCU MCU All logged fault delete, Initialization canceled Machine information Switch status, Output status Operating hours for each mode
3	 Management 21093CD64F	Maintenance information Machine security Machine Information A/S phone number Service menu	Replacement, Change interval oils and filters ESL mode setting, Password change Cluster, MCU, Engine, Machine A/S phone number, A/S phone number change Power shift, Hourmeter, Replacement history, Update
4	 Display 21093CD64G	Display item Clock Brightness Unit Language Screen type	Engine speed, Tripmeter A, Tripmeter B, Tripmeter C Clock Manual, Auto Temperature, Pressure, Flow, Date format Korean, English, Chinese A type, B type
5	 Utilities 21093CD64H	Tripmeter DMB (-#0449) Entertainment (-#0449) Camera setting Message box	3 kinds (A, B, C) DMB select, DAB select, Channel scan, Exit Play MP4, codec. Basic direction, Display switching, Full screen Record for fault, attachment etc.


(2) Mode setup

① Work tool

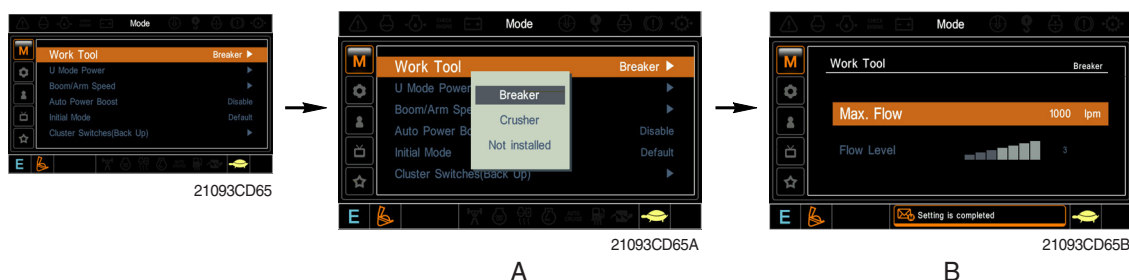

- A : Select one installed optional attachment.
 - B : Max flow - Set the maximum flow for the attachment.
 Flow level - Reduce the operating flow from maximum flow.
 Breaker - Max 7 steps, Reduced 10 lpm each step.
 Crusher - Max 4 steps, Reduced 20 lpm each step.
- ※ The flow level is displayed with the work mode pilot lamp.


② U mode power

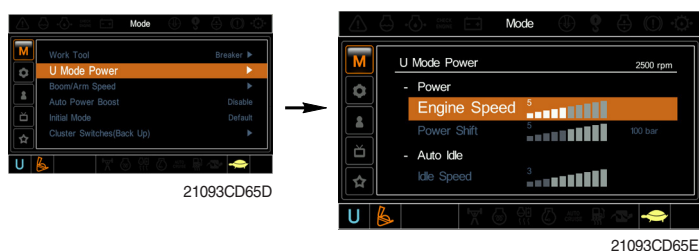

- Engine high idle rpm, auto idle rpm and pump torque (power shift) can be modulated and memorized separately in U-mode.
- U-mode can be activated by user mode switch.


Step (I)	Engine speed (rpm)	Idle speed (rpm)	Power shift (bar)
1	1500	1000 (low idle)	0
2	1600	1050	3
3	1700	1100	6
4	1800	1150 (decel rpm)	9
5	1850	1200	12
6	1900	1250	16
7	1950	1300	20
8	2000	1350	26
9	2050	1400	32
10	2100	1450	38

③ Boom/Arm speed

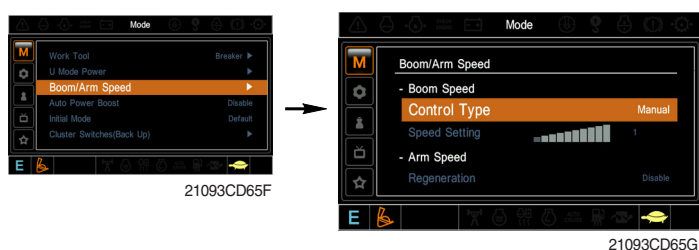


- Boom speed
 - Control type
 Manual - Boom up speed is fixed as set steps.
 Auto - Boom up speed is automatically adjusted as working conditions by the MCU.
 - Speed setting - Boom up speed is increased as much as activated steps.
- Arm speed
 - Regeneration - Arm regeneration function can be activated or cancelled.
 Enable - Arm in speed is up.
 Disable - Fine operation.

④ Auto power boost

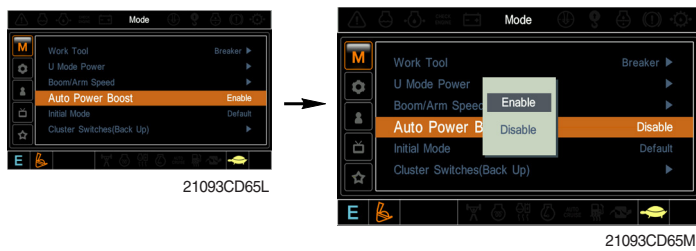


- The power boost function can be activated or cancelled.
- Enable - The digging power is automatically increased as working conditions by the MCU. It is operated max 8 seconds.
- Disable - Not operated.

⑤ Initial mode

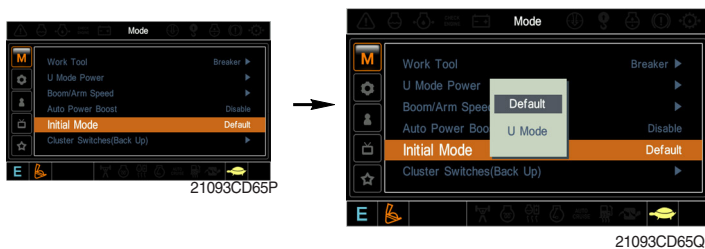

- Default - The initial power mode is set E mode when the engine is started.
- U mode - The initial power mode is set U mode when the engine is started.


⑥ Cluster switch (back up)

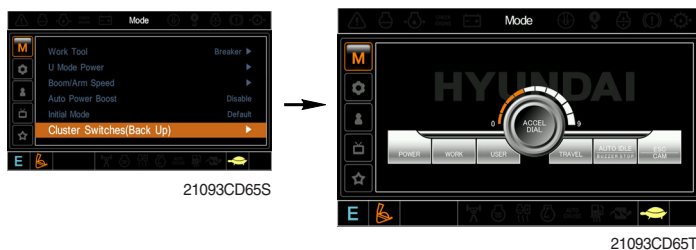

- The cluster switch can be selected and changed by this menu when the switches are abnormal on the cluster.
- In order to exit "Cluster switch" mode, please put the cursor on the ESC/CAM switch by turning the select switch and push the select switch.
- In "Cluster switch", other switches except "Select switch" do not work.


(3) Monitoring

① Active fault

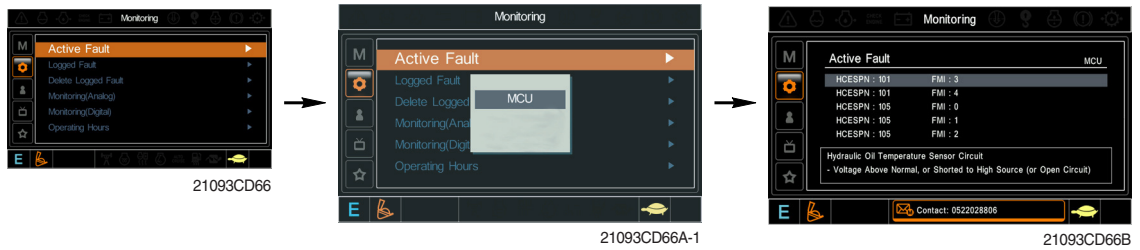


- The active faults of the MCU can be checked by this menu.

② Logged fault

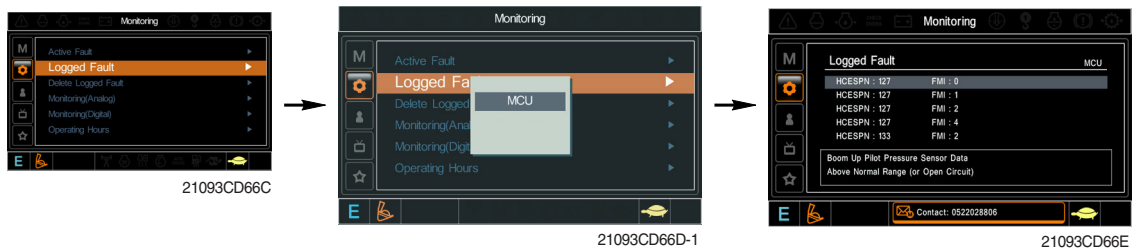


- The logged faults of the MCU can be checked by this menu.

③ Delete logged fault

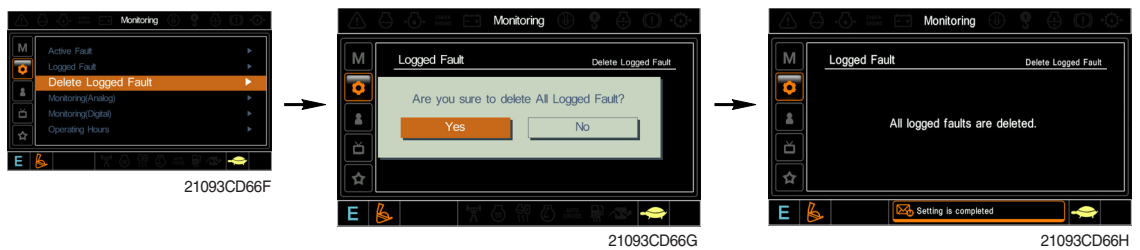


- The logged faults of the MCU can be deleted by this menu.


④ Monitoring(analog)

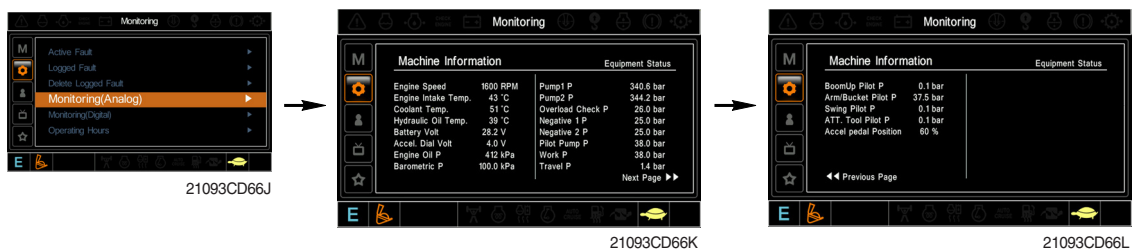


- The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu.

⑤ Monitoring (digital)

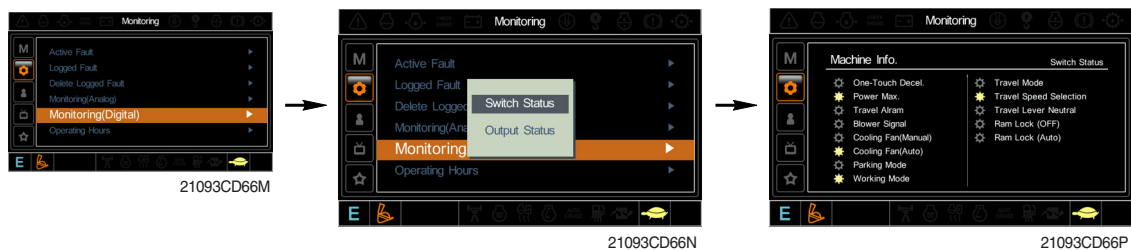

- The switch status or output status can be confirmed by this menu.
- The activated switch or output pilot lamps  are light ON.

⑥ Operating hours

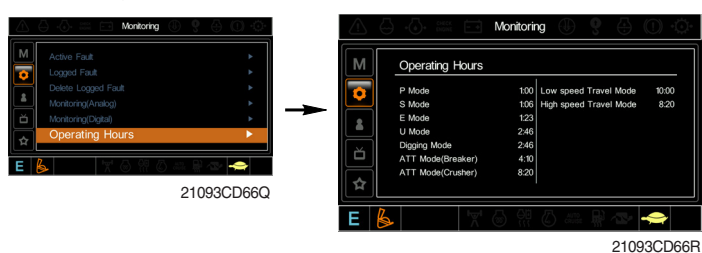

- The operating hour of each mode can be confirmed by this menu.

(4) Management

① Maintenance information




- Alarm (Gray ⚙️ Yellow ⚠️ Red 🔴) : Gray ⚙️ - Normal
Yellow ⚠️ - First warning
Red 🔴 - Second warning
- Replacement : The elapsed time will be reset to zero (0).
- Change interval : The change or replace interval can be changed in the unit of 50 hours.
- OK : Return to the item list screen.
- Change or replace interval**


No	Item	Interval	No	Item	Interval
1	Engine oil	250	11	Hydraulic tank breather	1000
3	Swing gear oil	1000	12	Air cleaner (inner)	500
4	★Hydraulic oil	5000	13	Radiator coolant	2000
5	Pilot line filter	1000	14	Swing gear pinion grease	1000
6	Drain filter	1000	15	Transmission oil	1000
7	Hydraulic oil return filter	1000	16	Front axle differential gear oil	1000
8	Engine oil filter	250	17	Rear axle differential gear oil	1000
9	Fuel filter	500	18	Axle planetary gear oil	1000
10	Pre-filter	500			

★ : Hyundai genuine long life hydraulic oil

② Machine security

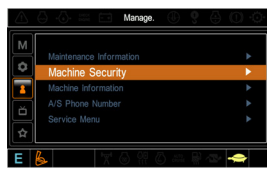

21093CD67C

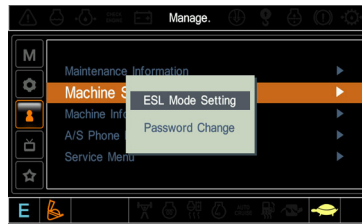

21093CD67D



21093CD67E


• ESL mode

- ESL : Engine Starting Limit
- ESL mode is designed to be a theft deterrent or will prevent the unauthorized operation of the machine.
- If the ESL mode was selected Enable, the password will be required when the start switch is turned ON.
- Disable : Not used ESL function


Enable (always) : The password is required whenever the operator start engine.

Enable (interval) : The password is required when the operator start engine first. But the operator can restart the engine within the interval time without inputting the password.


The interval time can be set maximum 4 hours.

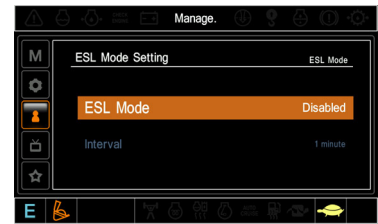

21093CD67EE

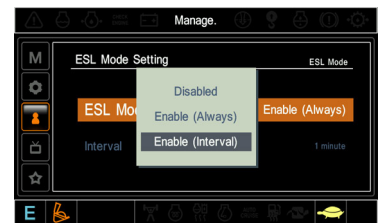

21093CD67H

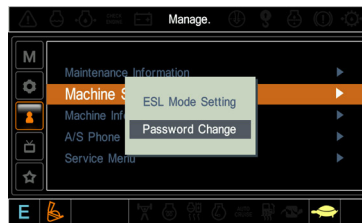

21093CD67U




Enter the current password 21093CD67V

• Password change

- The password is 5~10 digits.




Enter the new password 21093CD67VV

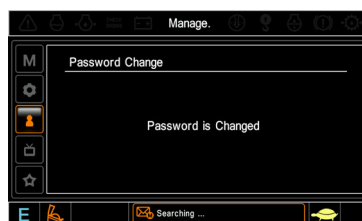

21093CD67X


The new password is stored in the MCU.

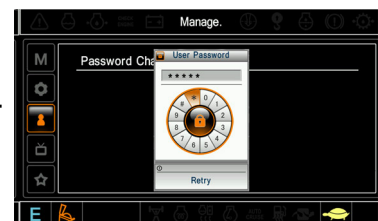

21093CD67XX

Enter the new password again

③ Machine Information

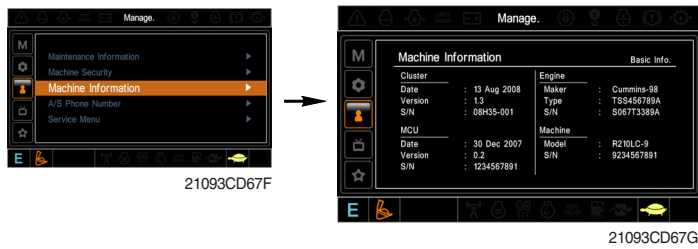


- This can confirm the identification of the cluster, MCU, engine and machine.

④ A/S phone number




⑤ Service menu

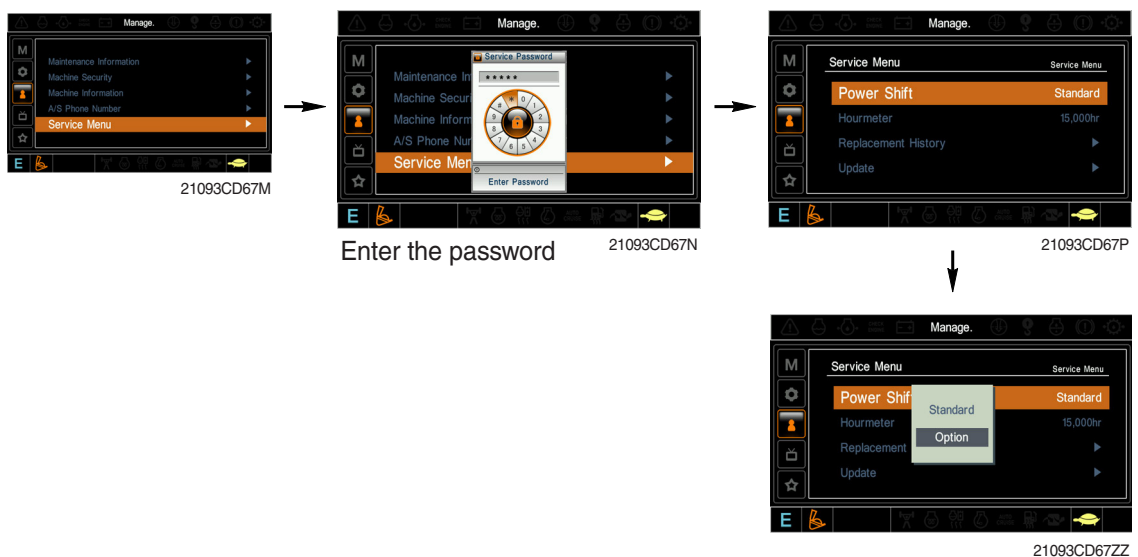

- Power shift (standard/option) : Power shift pressure can be set by option menu.
- Hourmeter : Operating hours since the machine line out can be checked by this menu.
- Replacement history : Replacement history of the MCU and cluster can be checked by this menu.
- Update : Firm ware can be upgraded by this menu. (the USB port is located under the cluster)


(5) Display

① Display item

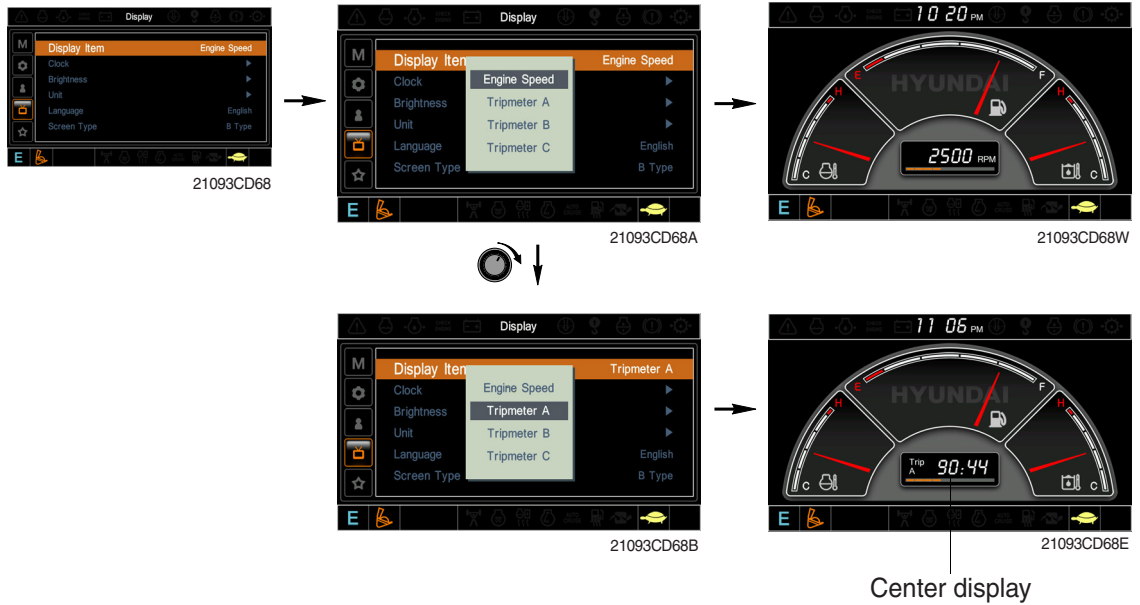


- The center display type of the LCD can be selected by this menu.
- The engine speed or each of the tripmeter (A,B,C) is displayed on the center display.

② Clock

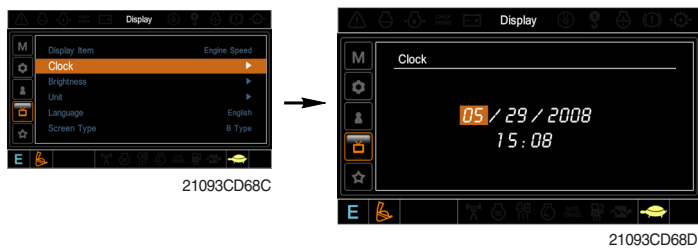


- The first line's three spots "**/**/****" represent Month/Day/Year each.
- The second line shows the current time. (0:00~23:59)

③ Brightness

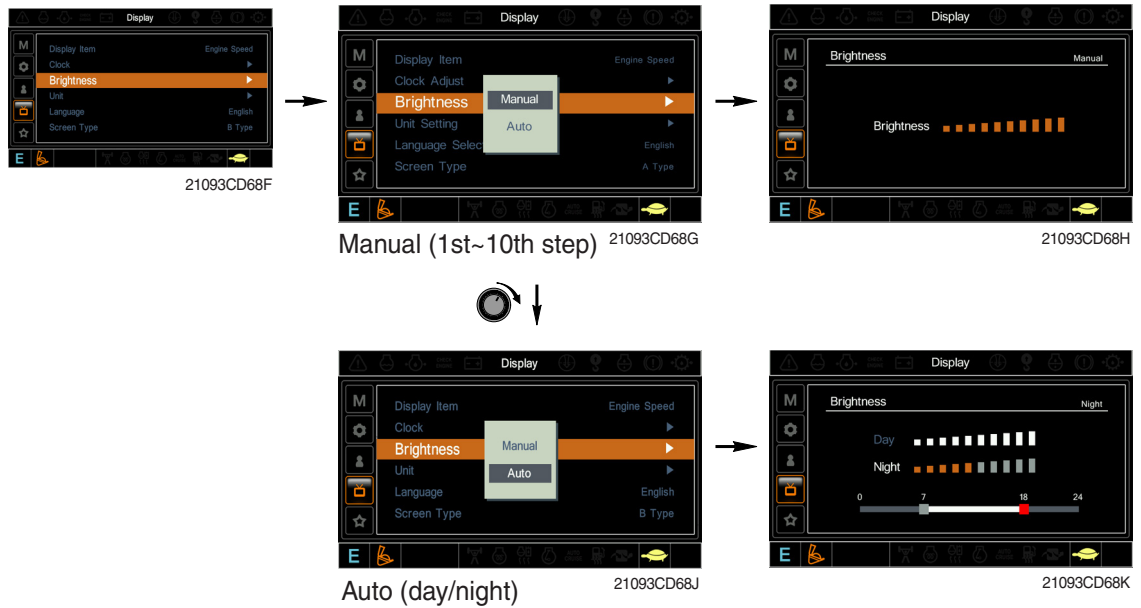


※ If "Auto" is chosen, brightness for day and night can be differently set up. Also by using the bar in lower side, users can define which time interval belongs to day and night. (in bar figure, gray area represents night time while white shows day time)

④ Unit

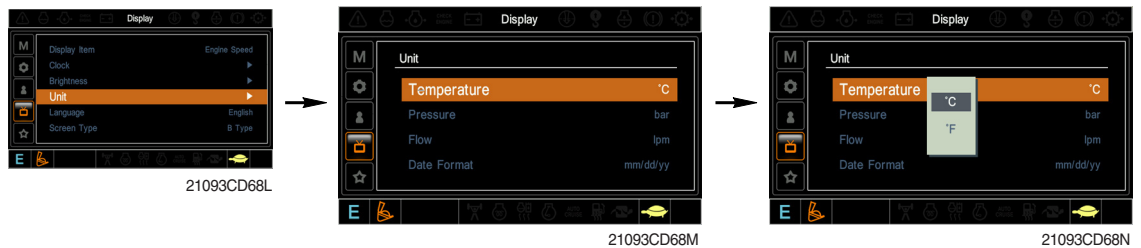


- Temperature : °C ↔ °F
- Pressure : bar ↔ MPa ↔ kgf/cm²
- Flow : lpm ↔ gpm
- Date format : yy/mm/dd ↔ mm/dd/yy ↔ dd-Mar-yy

⑤ Language

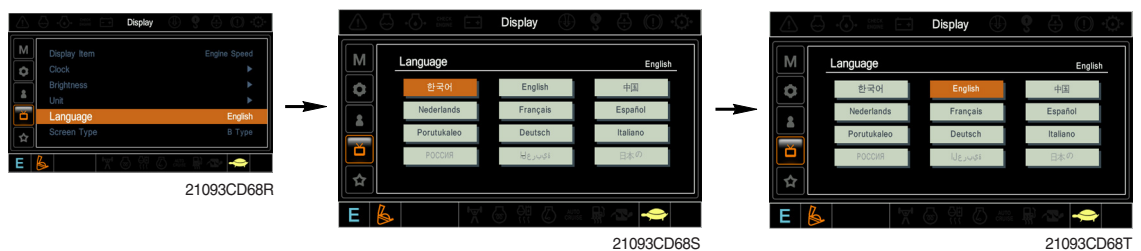


- User can select preferable language and all displays are changed the selected language.

⑥ Screen type

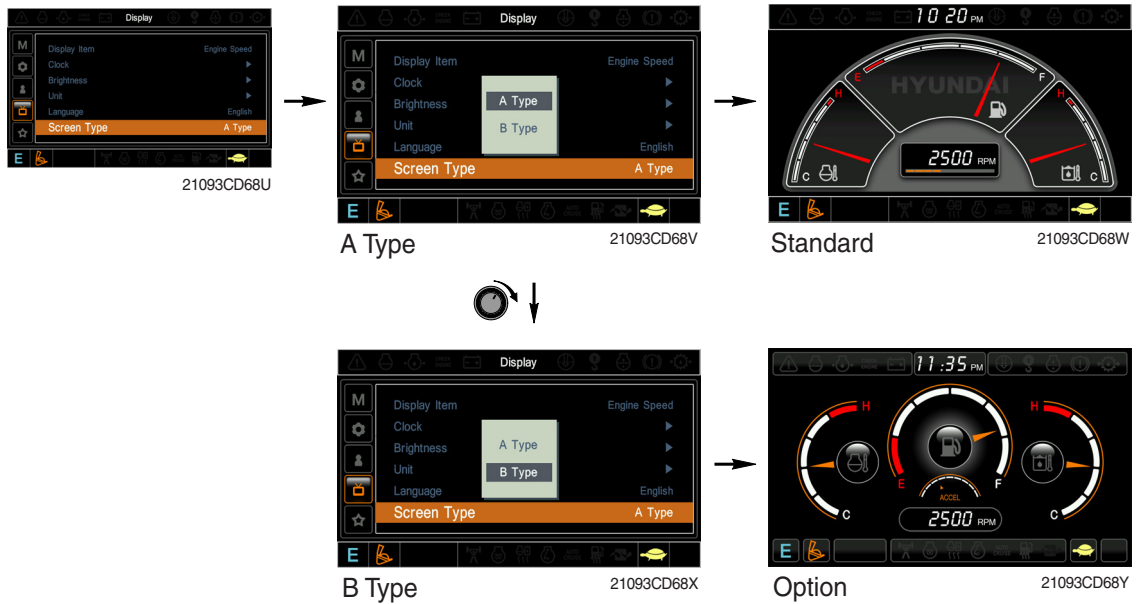


(6) Utilities

① Tripmeter

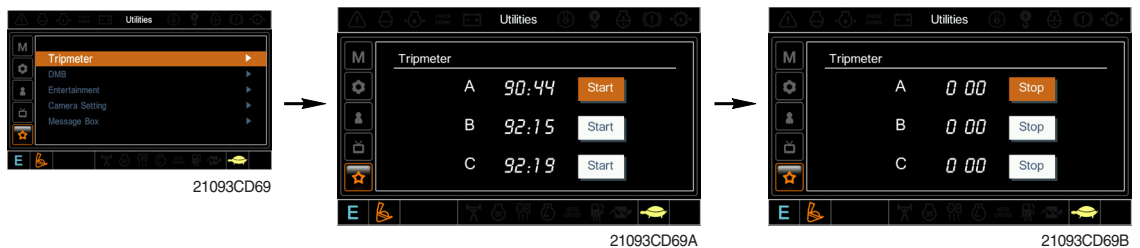

- Maximum 3 kinds of tripmeters can be used at the same time.
- Each tripmeter can be turned on by choosing "Start" while it also can be turned off by choosing "Stop".
- If the tripmeter icon is activated in the operation screen, it can be controlled directly there.


② DMB (-#0449)

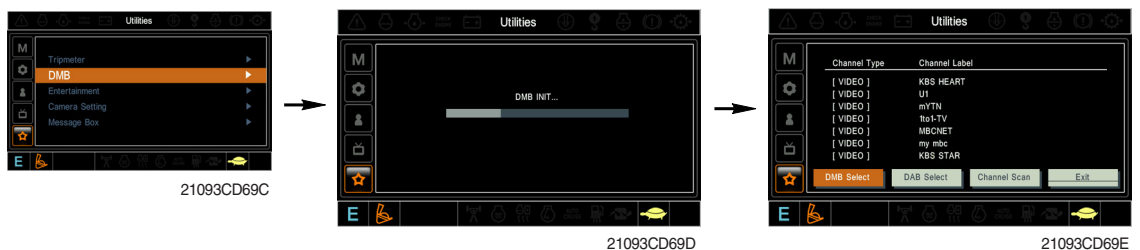


- DMB select : TV channel can be selected by this menu.
- DAB select : Audio channel can be selected by this menu.
- Channel scan : This menu can be used other region for TV/Audio.
- Exit : Exit DMB menu

③ Entertainment (-#0449)

- Play MP4 or codec file of external hard disk through USB port.
- The USB port is located under the cluster.

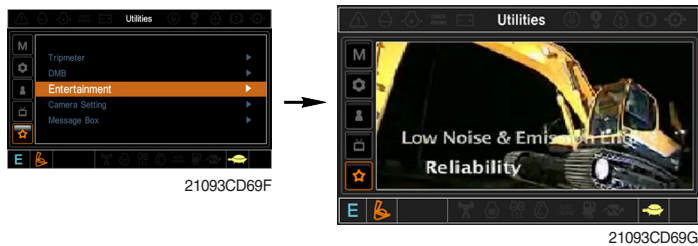

④ Camera setting

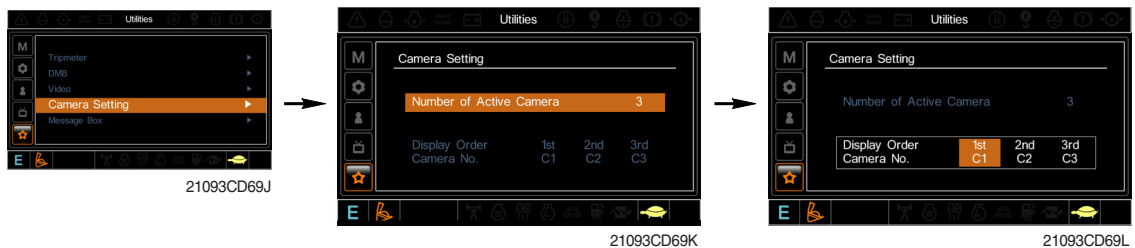


- Three cameras can be installed on the machine.
- The display order can be set by this menu.



- If the camera was not equipped, this menu is not useful.
- In the operation screen, if the ESC/CAM switch is pushed, the first ordered display camera will be viewed.
- Turnning the select switch in clockwise direction, the next ordered will be shown and in counter-clockwise direction, the previously ordered will be shown.
- Push the select switch, the displayed screen will be enlargement.

⑤ Message box

- The history of the machine operating status can be checked by this menu.

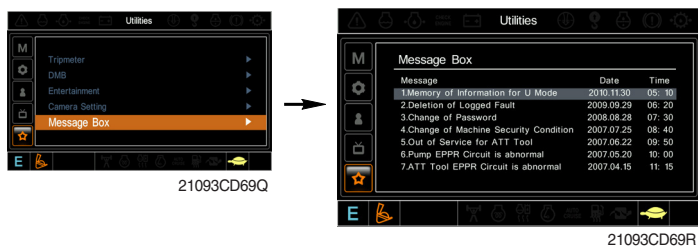


■ CLUSTER (TYPE 2)

1) MONITOR PANEL

The monitor panel consists of LCD and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.

- LCD : Indicate operating status of the machine.
- Warning lamp : Indicate abnormality of the machine (red).
- Pilot lamp : Indicate operating status of the machine (amber).



- ※ The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.
- ※ When the monitor provides a warning immediately check the problem, and perform the required action.

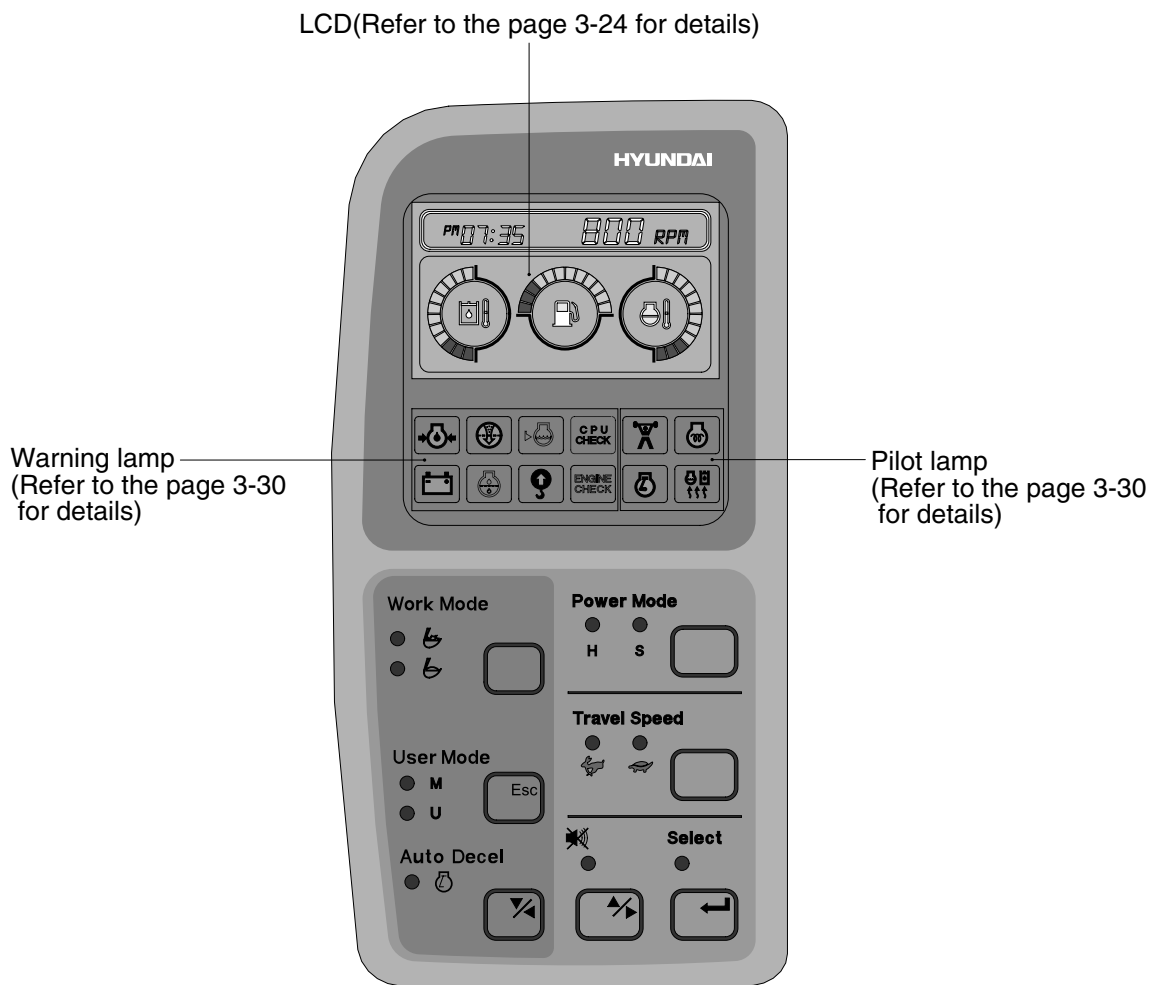

2209S3CD02

- ※ The warning lamp lights ON and the buzzer sounds when the machine has a problem. In this case, press the buzzer stop switch and buzzer stop, but the warning lamp lights until the problem is cleared.

2) LCD main operation display

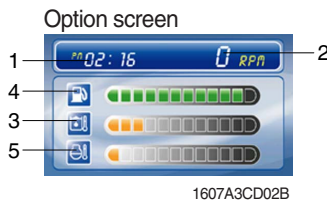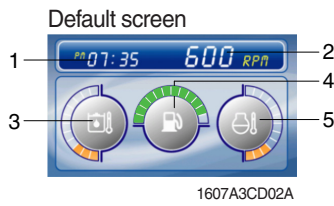

- 1 Time display
- 2 RPM display
- 3 Hydraulic oil temperature gauge
- 4 Fuel level gauge
- 5 Engine coolant temperature gauge

(1) Time display



- ① This displays the current time.


※ Refer to the page 3-28 to set time for details.

(2) RPM display



- ① This displays the engine rpm.

(3) Hydraulic oil temperature gauge

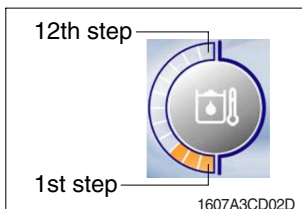


- ① This gauge indicates the temperature of hydraulic oil in 12 step gauge.

- 1st step : Below 30°C (86°F)
- 2nd~10th step : 30-105°C (86-221°F)
- 11th~12th step : Above 105°C (221°F)

- ② The gauge between 2nd and 10th steps illuminates when operating.
- ③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.
- ④ When the gauge of 11th and 12th steps illuminates, reduce the load on the system. If the gauge stays in the 11th~12th steps, stop the machine and check the cause of the problem.


(4) Fuel level gauge

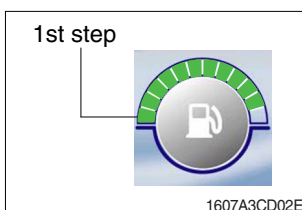

- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when the 1st step or fuel icon blinks in red.

※ If the gauge illuminates the 1st step or fuel icon blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

(5) Engine coolant temperature gauge

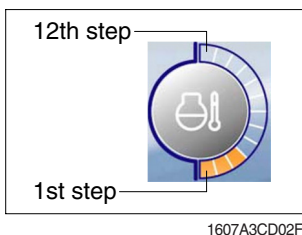

- ① This gauge indicates the temperature of coolant in 12 step gauge.

- 1st step : Below 30°C (86°F)
- 2nd~10th step : 30-105°C (86-221°F)
- 11th~12th step : Above 105°C (221°F)

- ② The gauge between 2nd and 10th steps illuminates when operating.
- ③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.
- ④ When the gauge of 11th and 12th steps illuminates, turn OFF the engine, check the radiator and engine.

3) Warning of main operation screen

(1) Warning display

① Engine coolant temperature



- This lamp blinks and the buzzer sounds when the temperature of coolant is over the normal temperature 105°C (221°F).
- Check the cooling system when the lamp blinks.

② Fuel level



- This lamp blinks and the buzzer sounds when the level of fuel is below 65 l (17.2 U.S. gal).
- Fill the fuel immediately when the lamp blinks.

③ Hydraulic oil temperature



- This warning lamp operates and the buzzer sounds when the temperature of hydraulic oil is over 105°C (221°F).
- Check the hydraulic oil level when the lamp blinks.
- Check for debris between oil cooler and radiator.

④ All gauge



- This lamp blinks and the buzzer sounds when the all gauge is abnormal.
- Check the each system when the lamp blinks.

⑤ Communication error




- Communication problem between MCU and cluster makes the lamp blinks and the buzzer sounds.
- Check if any fuse for MCU burnt off.
If not check the communication line between them.






(2) Pop-up icon display

No	Switch	Selected mode	Interval
1	Work mode switch	General work mode	
		Heavy duty work mode	
2	Power mode switch	High power work mode	
		Standard power work mode	

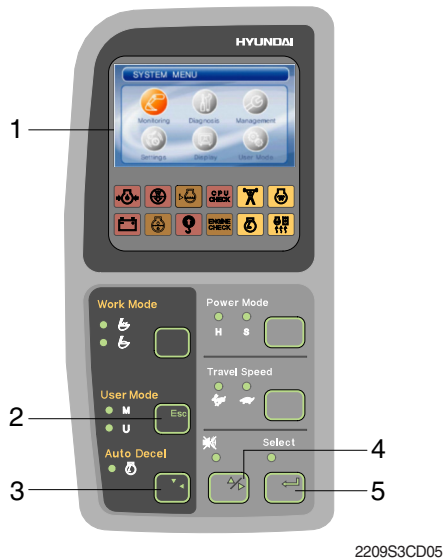
No	Switch	Selected mode	Interval
3	Auto deceleration switch	Light ON	
		Light OFF	
4	Travel speed control switch	Low speed	
		High speed	








4) LCD

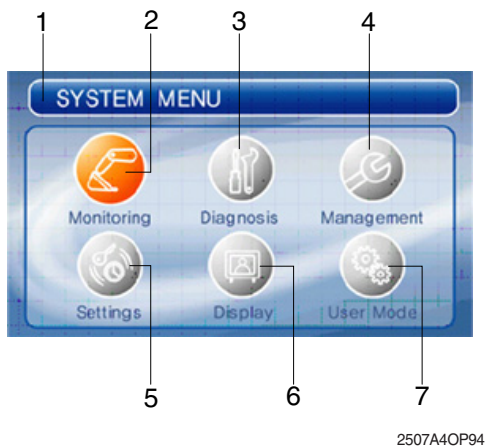

- 1  : LCD
- 2  : Escape,
Return to the previous menu
- 3  : Down / Left Direction
- 4  : Up/Right Direction
- 5  : Select (enter)
Activate the currently chosen item


(1) Main menu



- 1  : Menu information
- 2  : Monitoring
- Equipment, Switch, Output
- 3  : Diagnosis
- Current error, Recorded error
- 4  : Maintenance
- 5  : Settings
- Time set, Dual mode
- System lock (reserved)
- 6  : Display
- Operation skin, Brightness, Language
- 7  : User mode


① Monitoring

① Monitoring

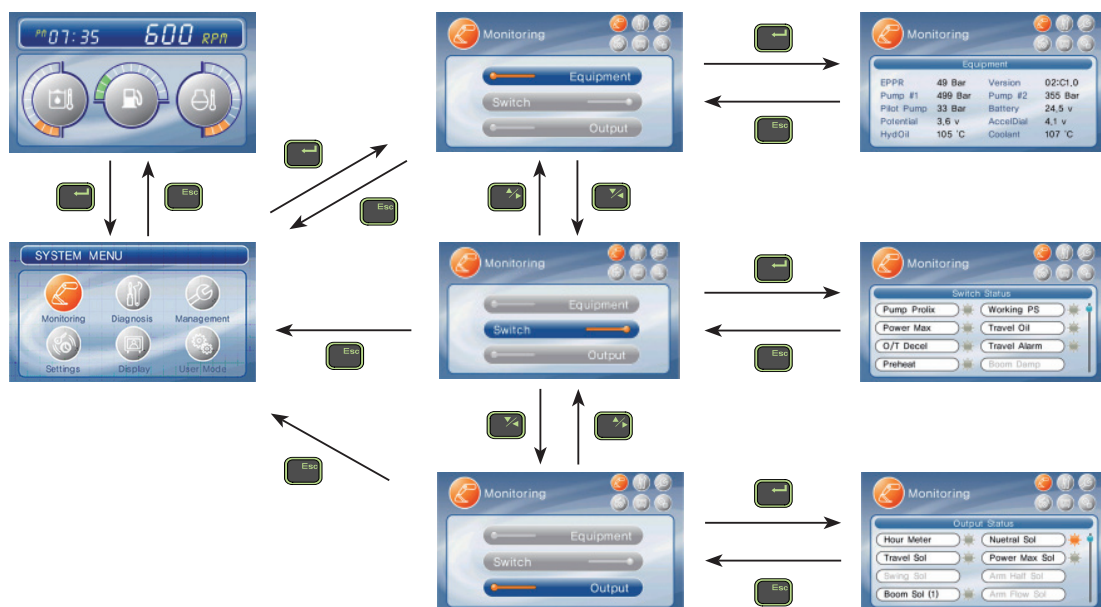




② Diagnosis

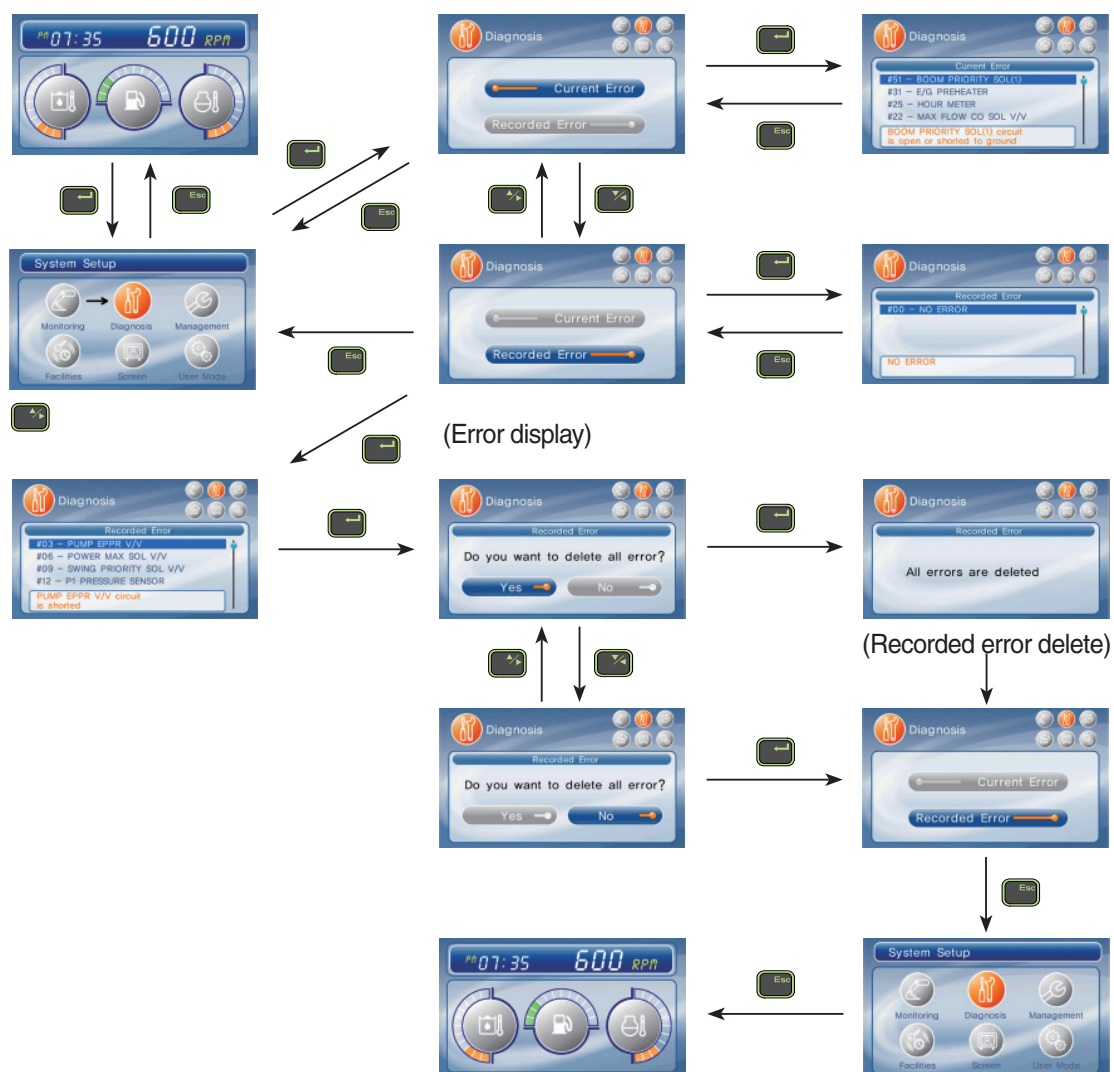a. Protocol type 1




b. Protocol type 2

- If there are more than 2 error codes, each one can be displayed by pressing  or  switch respectively.
- 3 error codes (①SPN200200, ②FMI06, ③SPN6789, ④FMI04, ⑤345) display.

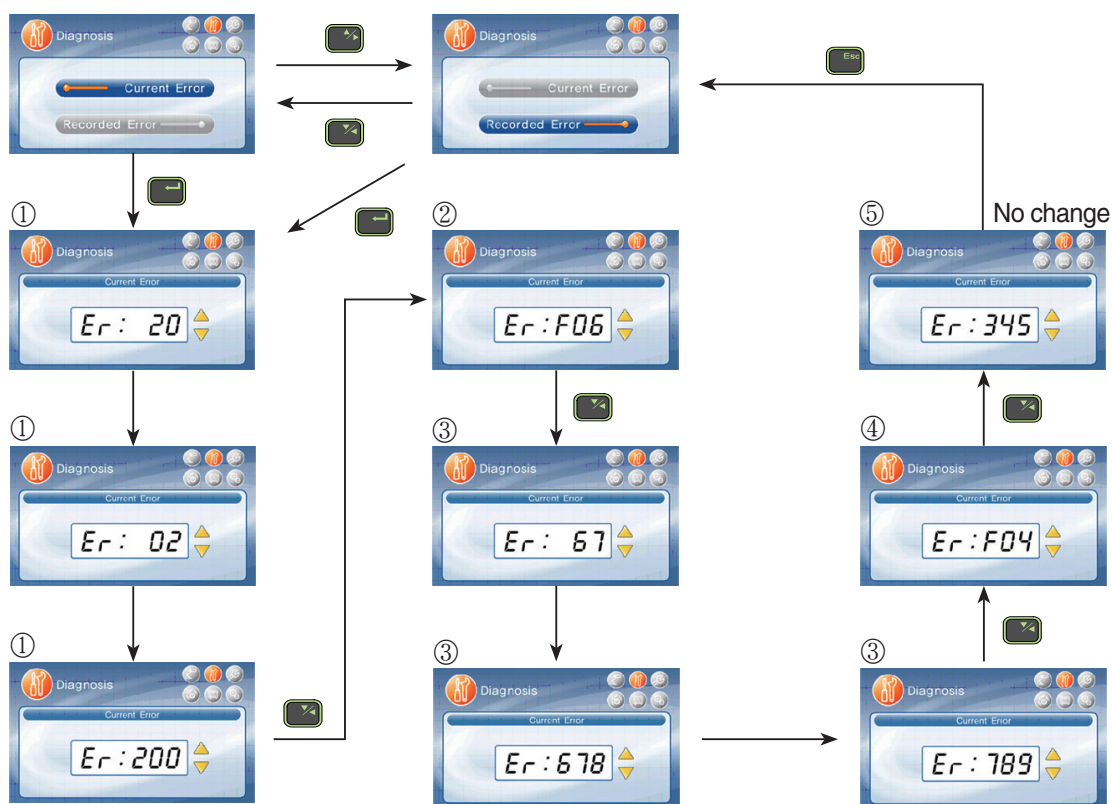


③ Maintenance

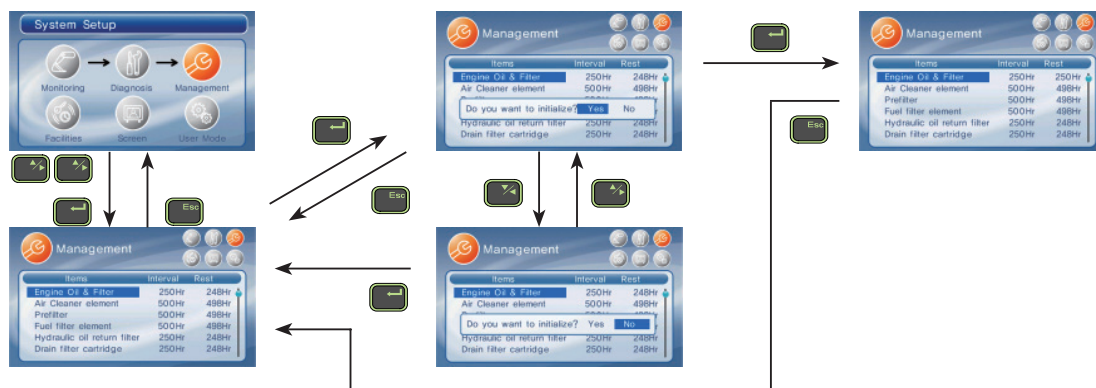


④ Setting

a. Time set

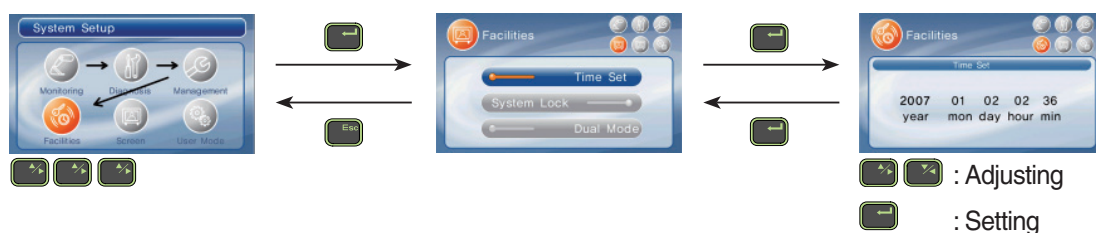

b. System lock - Reserved

- c. Dual mode
- Changing the MCU mode

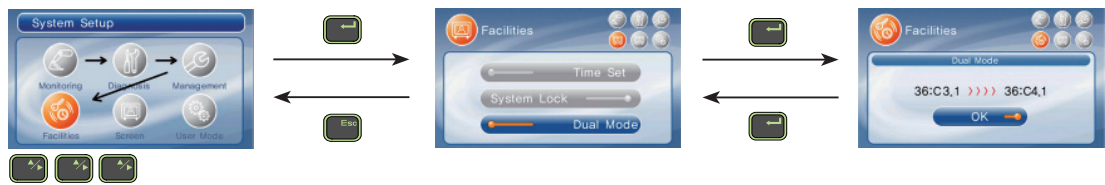


⑤ Display


- a. Operation skin




- b. Brightness

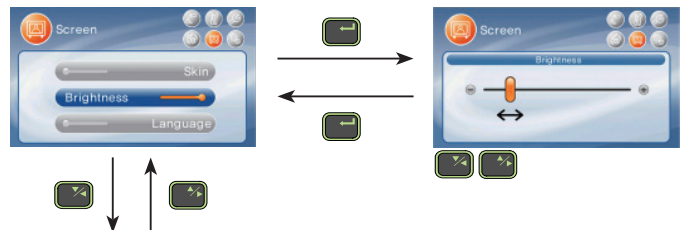

- c. Language

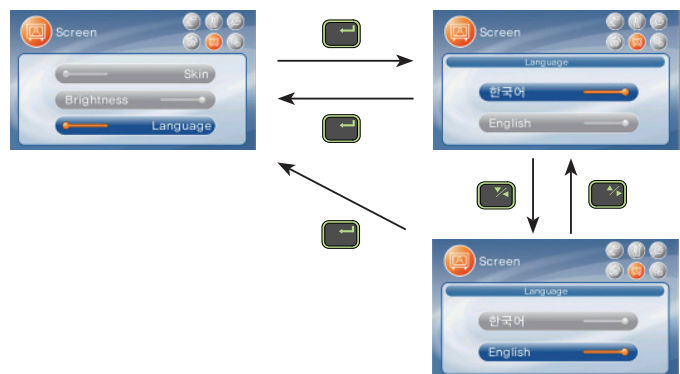


⑥ User mode

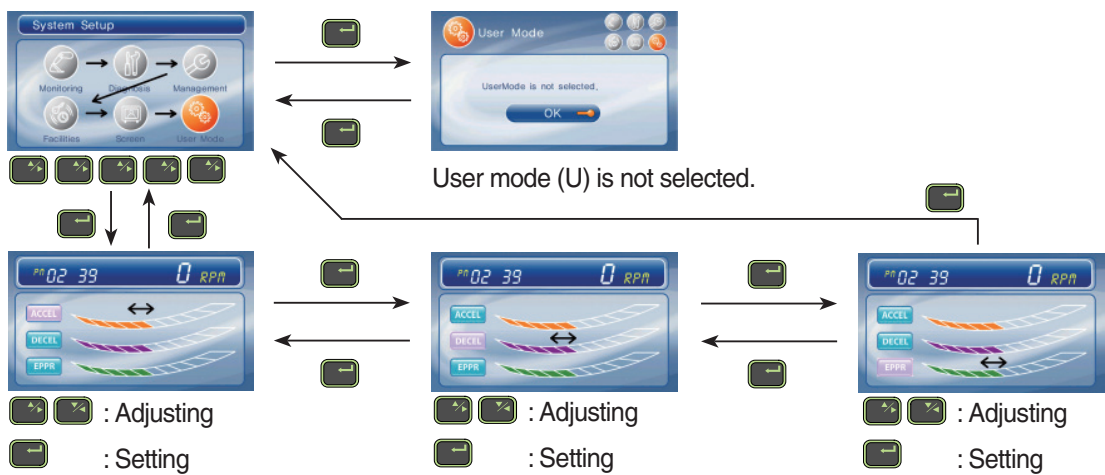

5) Warning and pilot lamp


(1) Engine oil pressure warning lamp

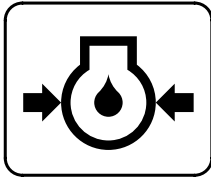

21073CD07

- ① This lamp blinks and the buzzer sounds after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.


(2) Air cleaner warning lamp

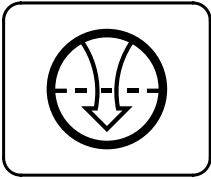

21073CD08

- ① This lamp blinks and the buzzer sounds when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.


(3) MCU check warning lamp

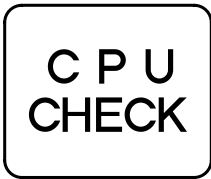

21073CD10

- ① If any fault code is received from MCU, this lamp blinks and the buzzer sounds.
- ② Check the communication line between MCU and cluster.


(4) Battery charging warning lamp

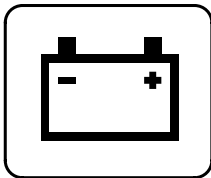

21073CD13

- ① This lamp blinks and the buzzer sounds when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.

(5) Overload warning lamp (opt)

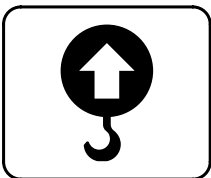

21073CD15

- ① When the machine is overload, the overload warning lamp blinks during the overload switch is ON.


(6) Power max pilot lamp



21073CD11

- ① The lamp will be ON when pushing power max switch on the LH RCV lever.


(7) Decel pilot lamp

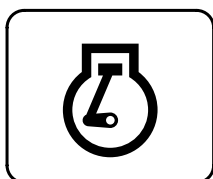

21073CD17

- ① Operating auto decel or one touch decel makes the lamp ON.
- ② The lamp will be ON when pushing one touch decel switch on the LH RCV lever.


(8) Warming up pilot lamp

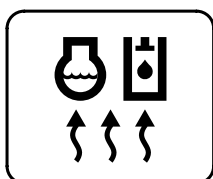

21073CD18

- ① This lamp is turned ON when the coolant temperature is below 30°C (86°F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30°C, or when 10 minutes have passed since starting.


(9) Preheat pilot lamp

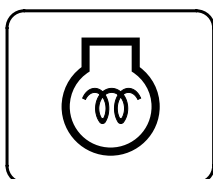

21073CD12

- ① Turning the start key switch ON position starts preheating in cold weather.
- ② Start the engine as this lamp is OFF.


6) SWITCH PANEL

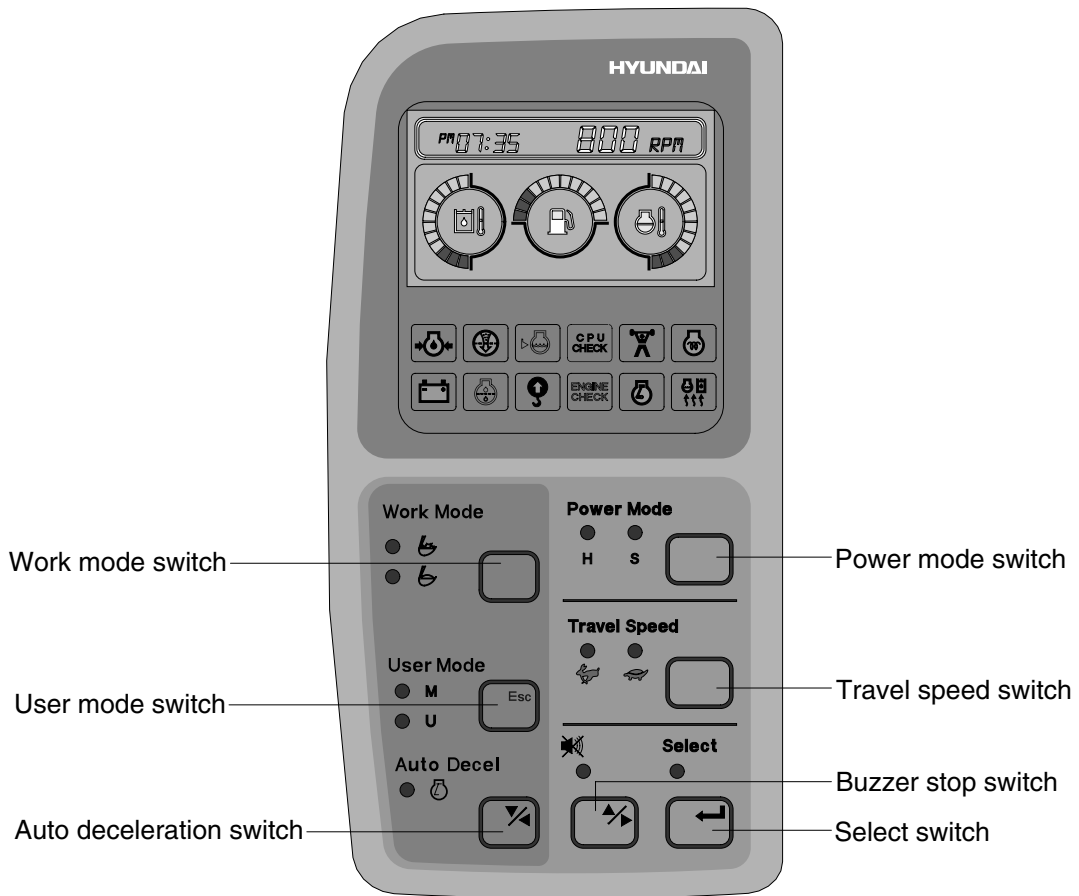

2209S3CD10

※ When the switches (Work mode, Power mode, Auto decel, Travel speed control) are selected, the pop-up icon is displayed on the LCD.
Refer to the page 3-25 for details.


(1) Work mode switch

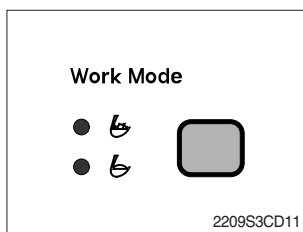

- ① This switch is to select the machine operation mode, which shifts from general operation mode to heavy duty operation mode by pressing the switch.
- : Heavy duty work mode
 - : General work mode

※ Refer to the page 4-15 for details.


(2) User mode switch

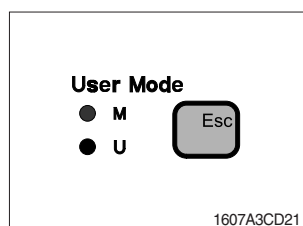

- ① This switch is to select the maximum power or user mode.
- M : Maximum power
 - U : Memorizing operators preferable power setting.


※ Refer to the page 4-15 for details.


(3) Auto deceleration switch

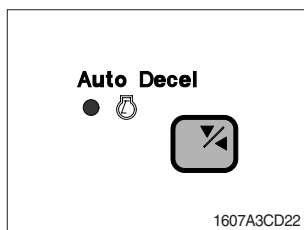


- ① This switch is used to actuate or cancel the auto deceleration function.
- ② When the switch actuated and all control levers and pedals are at neutral position, engine speed will be lowered automatically to save fuel consumption.
 - Light ON : Auto deceleration function is selected.
 - Light OFF : a. Auto deceleration function is cancelled so that the engine speed increased to previous setting value.
b. One touch decel function is available.

(4) Power mode switch

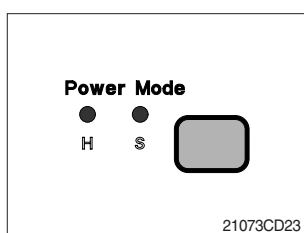


- ① The lamp of selected mode is turned ON by pressing the switch ().
- H : High power work.
- S : Standard power work.

(5) Travel speed control switch

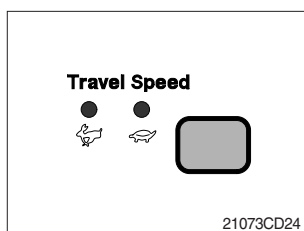


- ① This switch is to control the travel speed which is changed to high speed (rabbit mark) by pressing the switch and low speed (turtle mark) by pressing it again.

(6) Buzzer stop switch

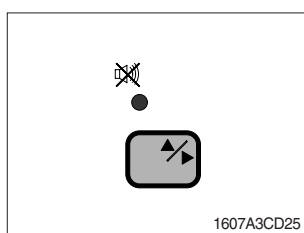


- ① When the starting switch is turned ON first, normally the alarm buzzer sounds for 2 seconds during lamp check operation.
- ② The red lamp lights ON and the buzzer sounds when the machine has a problem.
In this case, press this switch and buzzer stops, but the red lamp lights until the problem is cleared.

(7) Select switch

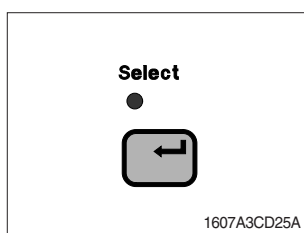


- ① This switch is used to enter main menu and sub menu of LCD.
- ※ Refer to the page 3-26 for details.

3. SWITCHES

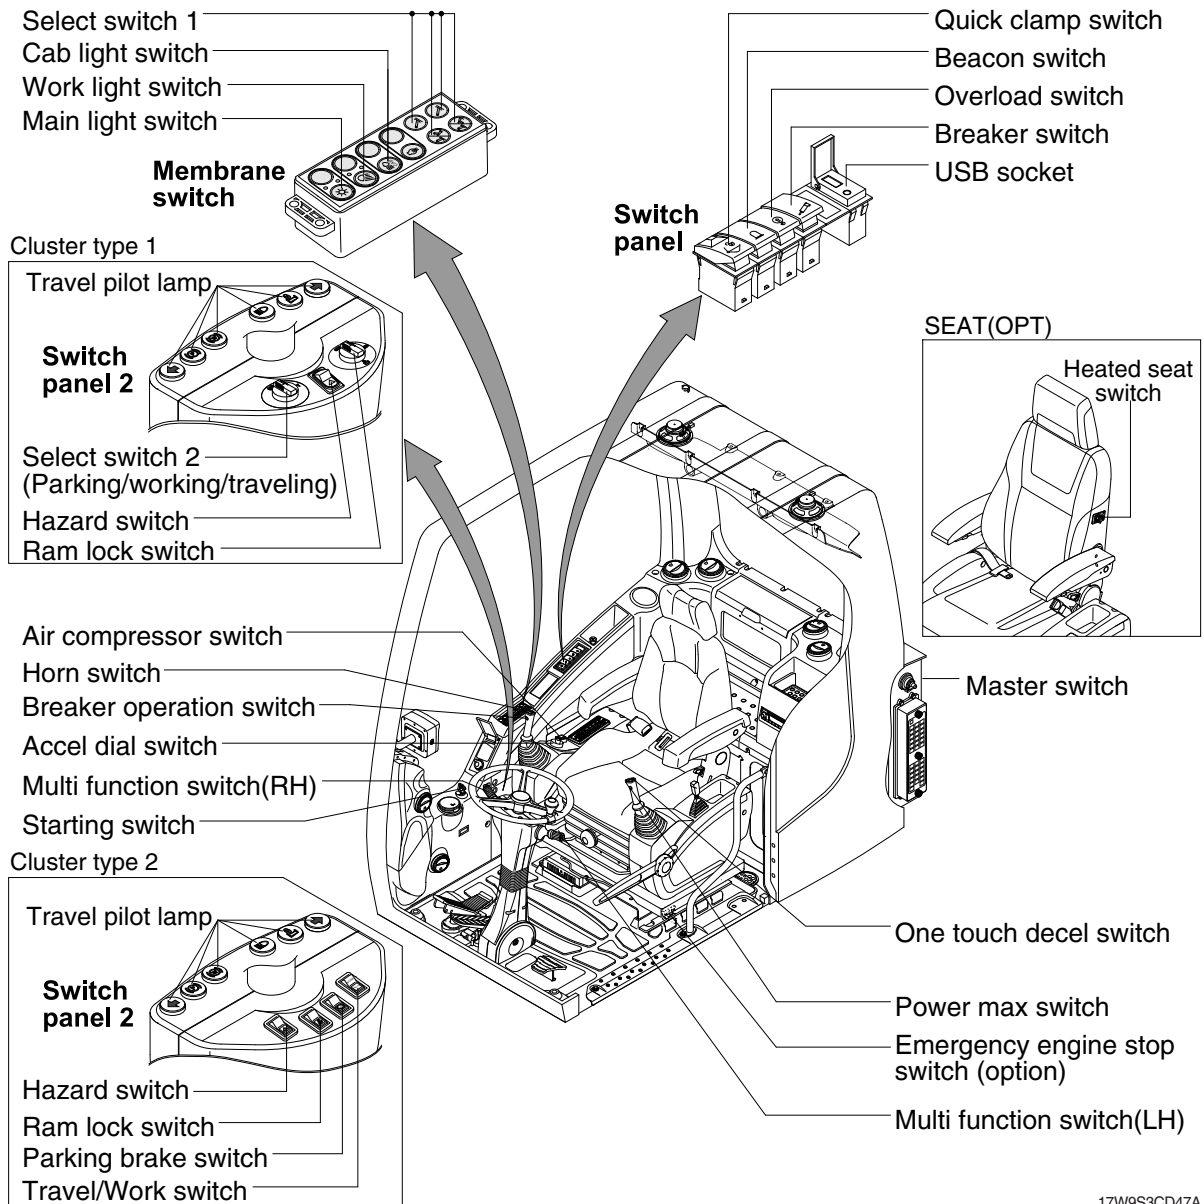

17W9S3CD47A

1) STARTING SWITCH

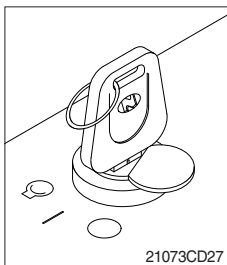


(1) There are three positions, OFF, ON and START.

- ○(OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ○(START) : Use when starting the engine.

Release key immediately after starting.

- ※ If you turn ON the starting switch in cold weather, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature. Start the engine in 1~2 minutes after turning ON the starting switch. More time may take according to ambient temperature.
- ※ Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.


2) MASTER SWITCH

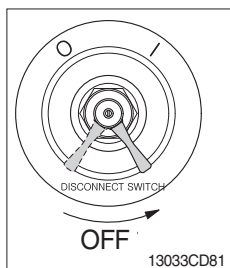

- (1) This switch is used to shut off the entire electrical system.
- (2) I : The battery remains connected to the electrical system.
O : The battery is disconnected to the electrical system.


※ **Never turn the master switch to O (OFF) with the engine running.**
Engine and electrical system damage could result.

3) ACCEL DIAL SWITCH

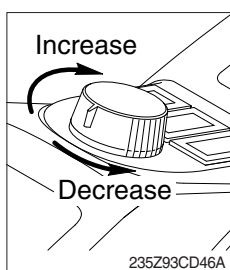


- (1) There are 10 dial setting.
- (2) Setting 1 is low idle and setting 10 is high idle.
 - By rotating the accel dial to right : Engine speed increases
 - By rotating the accel dial to left : Engine speed decreases

4) MAIN LIGHT SWITCH

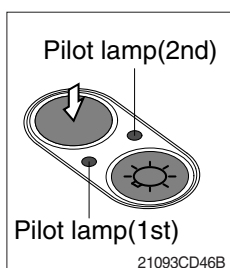


- (1) This switch used to operate the head light and work light.
 - Press the switch once, the head light comes ON and the 1st pilot lamp ON.
 - Press the switch once more, the work light comes ON and the 2nd pilot lamp ON.
 - Press the switch again, return to a first step position.
 - Press the switch more than one second to turn off lights.

5) WORK LIGHT SWITCH

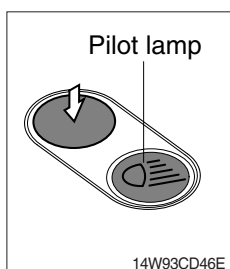


- (1) This switch used to operate the work lights at the boom.
- (2) The pilot lamp is turned ON when operating this switch.

6) CAB LIGHT SWITCH (option)

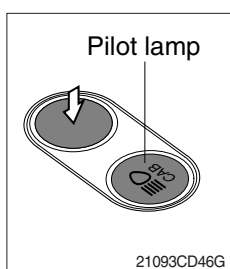

- (1) This switch turns ON the cab light on the cab.

7) SELECT SWITCH 1 (outrigger / dozer, option)

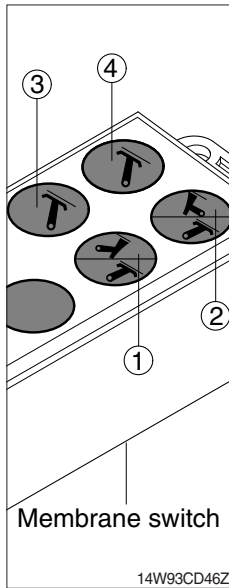

(1) This switch is used to select dozer blade or outrigger operation.

Switch	Operation
①	Front left outrigger or front dozer blade
②	Rear left outrigger or rear dozer blade
③	Front right outrigger
④	Rear right outrigger


※ **Please check the installed equipment (outrigger or dozer) on your machine before selecting the switches.**

(2) The lamps are turned ON when selecting these switches.

(3) If the dozer and outrigger lever is moved forward position, the dozer blade or outrigger is downed, if the lever is moved backward, the dozer blade or outrigger moved upward.

Please refer to the dozer and outrigger lever at page 3-46.


8) OVERLOAD SWITCH (option)

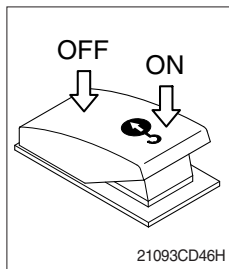

(1) When this switch turned ON, buzzer makes sound and overload warning lamp comes ON in case that the machine is overload.

(2) When it turned OFF, buzzer stops and warning lamp goes out.


9) QUICK CLAMP SWITCH (option)

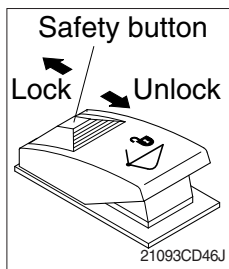

(1) This switch is used to engage or disengage the moving hook on quick clamp.

※ **Refer to the page 8-6 for details.**


10) BEACON SWITCH (option)

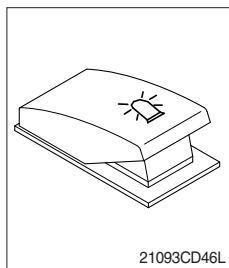

(1) This switch turns ON the rotary light on the cab.


(2) The indicator lamp is turned ON when operating this switch.

11) HEATED SEAT SWITCH (option)

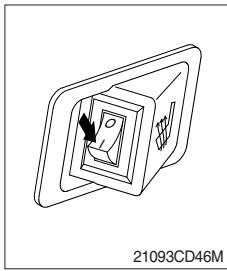


- (1) This switch is used to heat the seat.
 - Heater ON (I) : $10 \pm 3.5^{\circ}\text{C}$
 - Heater OFF (O) : $20 \pm 3^{\circ}\text{C}$
- (2) On pressing the switch, the indicator lamp is turned ON.

12) HORN SWITCH

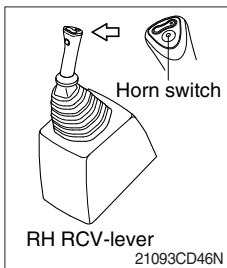


- (1) This switch is at the top of right side control lever.
On pressing, the horn sounds.

13) BREAKER OPERATION SWITCH

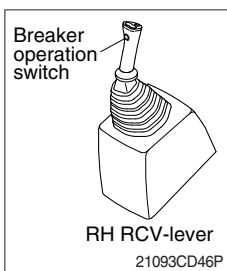


- (1) On pressing this switch, the breaker operates only when the breaker operation mode is selected.

14) ONE TOUCH DECEL SWITCH

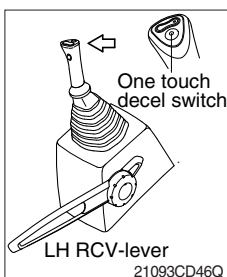


- (1) This switch is used to actuate the deceleration function quickly.
- (2) The engine speed is increased to previous setting value by pressing the switch again.
- (3) One touch decel function is available only when the auto idle pilot lamp is turned OFF.

15) POWER MAX SWITCH

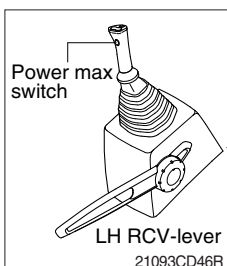


- (1) This switch activate power max function.
When this switch is kept pressed, hydraulic power of work equipment will be increased to approx 110 percent during 8 seconds.
 - (2) After 8 seconds, function is cancelled automatically even the switch keeps pressed.
- ※ **Do not use for craning purposes.**

16) AIR COMPRESSOR SWITCH (option)

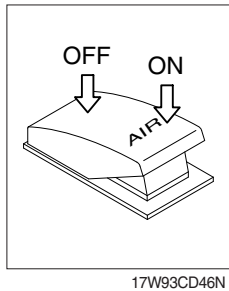


- (1) This switch is used to activate the air compressor.
- (2) The indicator lamp is turned on when operating this switch

17) BREAKER SELECTION SWITCH (option)

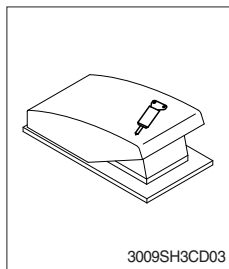


- (1) This switch is used to select breaker.
- ※ **The breaker operates only when this switch is selected.**

18) USB SOCKET

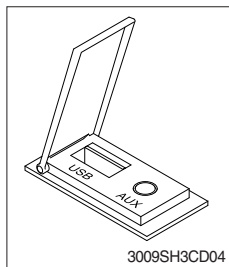

- (1) MP3 files are played when a USB device is connected to the USB port.
- (2) In addition, the AUX port enables headphone and other devices.


19) TRAVEL/WORKING SWITCH (option, CLUSTER TYPE 2)

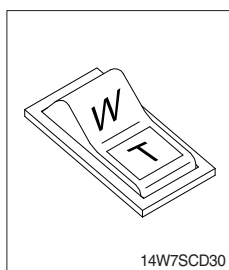

- (1) This switch is used to select mode between travel and work.
- (2) **Travel (T)**
 - ① Only traveling is possible to operate.
 - ② The engine RPM and travel speed can be controlled by accel pedal.
- (3) **Work (W)**
 - ① All the working functions including traveling are possible to operate.
 - ② Engine RPM and work & travel speed can be controlled by accel pedal.

20) RH MULTI FUNCTION SWITCH

(1) FNR lever

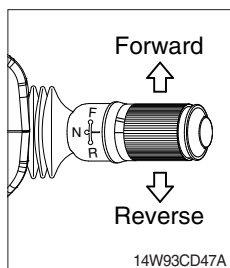

① This lever changes travel direction of machine.

- F : Machine moves forward
- N : Neutral position
- R : Machine moves backward


▲ Travel direction will be reversed if lower structure is positioned with dozer in front.

② The warning buzzer sounds when the lever is in the reverse position.

▲ If this lever is not in the neutral position, engine does not started.

▲ Be sure to stop the machine when changing the direction forward or backward while traveling.

(2) Travel speed switch

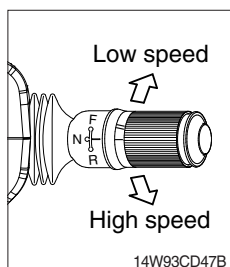


① This switch is for selecting travelling speed between high and low.

- Low speed (—) : 8 km/hr (5.0 mph)
- High speed (=) : 29 km/hr (18.0 mph)

21) LH MULTI FUNCTION SWITCH

(1) Direction indication lamp switch

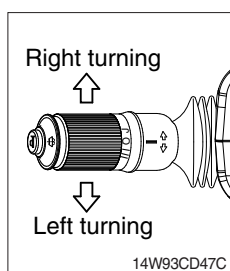


① This switch is used to warn or signal the turning direction of the machine to other machines or equipment.

② Push the lever to forward for turning right (↗), pull the lever to backward for turning left (↖).

③ The turning pilot lamp comes ON at the travel pilot lamp on the steering column.

(2) Dimmer switch

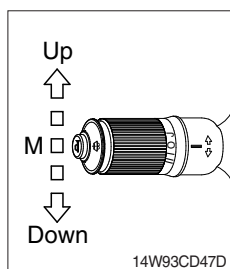


① This switch is used to turn the head lights direction.

② Switch positions.

- Up (↗) : To flash for passing
- Middle (↖) : Head lights low beam ON
- Down (↘) : Head lights high beam ON


③ If you release the switch when it's in up position, the switch will return to middle.

(3) WIPER SWITCH

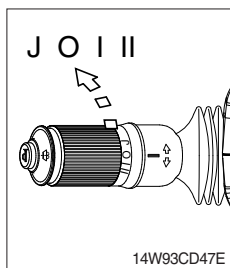


- ① When the switch is in J position, the wiper moves intermittently.
- ② When placed in I or II position, the wiper moves continuously.

(4) WASHER SWITCH

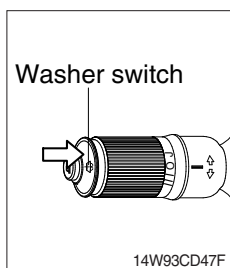


- ① If you push the grip of the lever, washer liquid will be sprayed and the wiper will be activated 2-3 times.
- ※ Check the quantity of washer liquid in the tank. If the level of the washer liquid is LOW, add the washer liquid (in cold, winter days) or water. The capacity of tank is 1.5 liter.

(5) HORN SWITCH

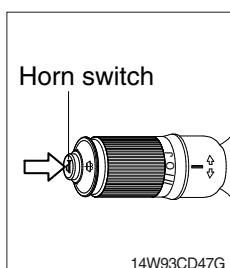


- ① This switch is at the end of left side multifunction switch. On pressing, the horn sounds.

22) HAZARD SWITCH

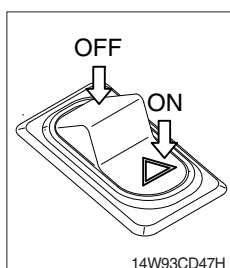

- (1) Use for parking, or roading machine.
- (2) LH and RH turn signal lamps come ON at the same time by this switch.
- ※ If the switch is left ON for a long time, the battery may be discharged.

23) RAM LOCK SWITCH (CLUSTER TYPE 1)

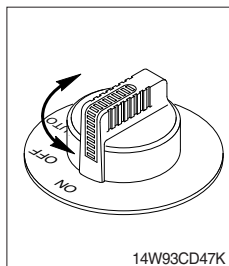


(1) This switch activate front axle oscillation cylinder to locking position for increase of stability.

- ON : Set front axle to locking position for excavation work or travels even ground. Also, the ram lock pilot lamp comes ON at the travel pilot lamp.
- OFF : Front axle will be oscillate depend on ground condition when the machine travel uneven ground.
- AUTO : Set front axle to locking or unlocking as table.

Select switch 2 (parking/working/ traveling)	Ram lock	Conditions
Parking	Locking	· Always
Traveling	Unlocking	· Always
Working	Locking	· FNR lever in neutral position · Service brake pedal is depressed.
	Unlocking	· FNR lever in forward/reverse position and service brake pedal is not depressed. · 2 way pedal is equipped and service brake pedal is not depressed.

24) SELECT SWITCH 2 (parking / working / traveling, CLUSTER TYPE 1)

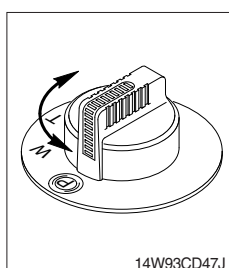


(1) This switch is used to select the operation mode as below.

- Parking (P) : The parking brake is applied.
- Working (W) : The machine needs to be working.
- Traveling (T) : The machine needs to be traveling.

(2) When you set this switch to parking or working, the parking or working lock pilot lamp comes ON at the travel pilot lamp.


25) AIR COMPRESSOR SWITCH (option)

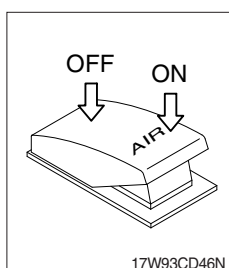

(1) This switch is used to activate the air compressor.

(2) The indicator lamp is turned on when operating this switch.


26) RAM LOCK SWITCH (CLUSTER TYPE 2)

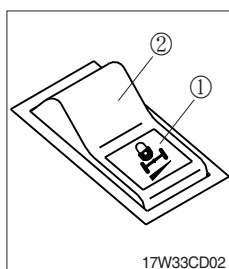

(1) This switch activate front axle oscillation cylinder to locking position for increase of stability.


- Push rear(1) : Set front axle to locking position for excavation work or travels even ground. Also, the ram lock warning lamp comes ON at the warning indicator.
- Push front(2) : Front axle will be oscillate depend on ground condition when the machine travel uneven ground.

27) PARKING BRAKE SWITCH (CLUSTER TYPE 2)

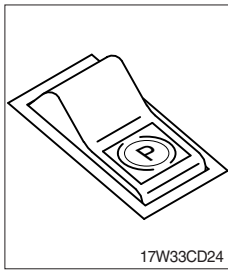

- (1) This switch is used to operate parking brake.
- (2) On pressing the switch, the below indicator lamp is turned ON and the pilot lamp comes ON at the warning indicator.


28) EMERGENCY ENGINE STOP SWITCH (option)

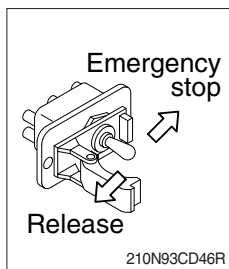


- (1) This switch is used to stop the engine in the event of an emergency.
- ※ **Be sure to return the emergency switch to the release or run position before trying to restart the engine.**

29) TRAVEL PILOT LAMP

■ Switch panel 2(CLUSTER TYPE 1)

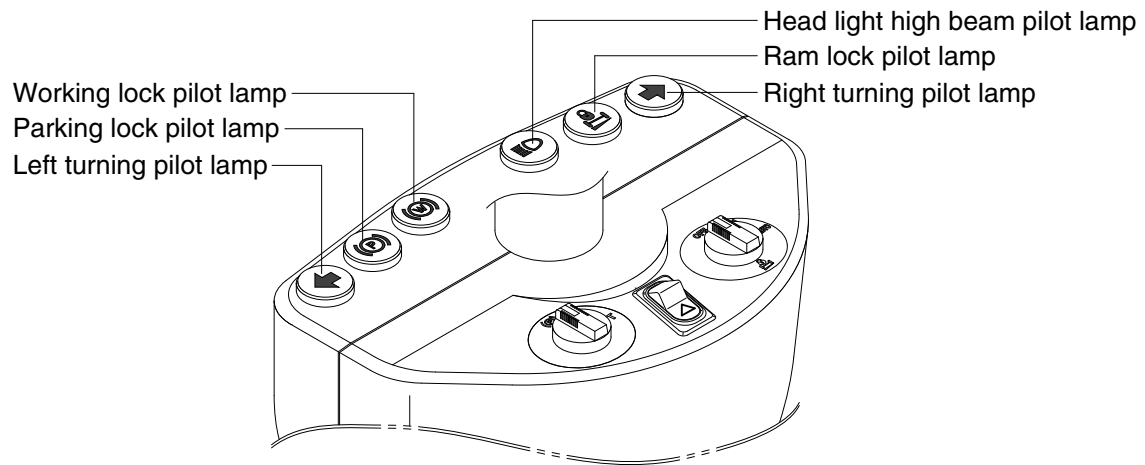


■ Switch panel 2(CLUSTER TYPE 2)

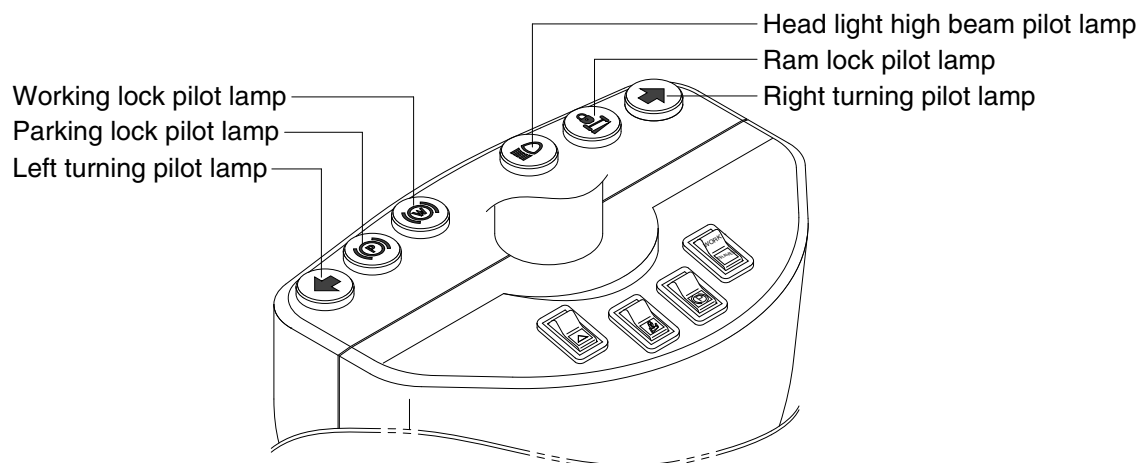


17W9S3CD54

(1) Left turning pilot lamp

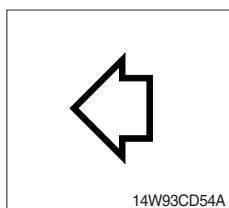


- ① This lamp flashes with sound when the LH multifunction switch is move to backward position.

(2) Right turning pilot lamp

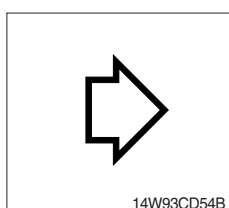

- ① This lamp flashes with sound when the LH multifunction switch is move to forward position.

(3) Head light high beam pilot lamp

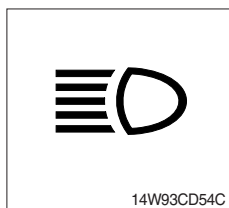


- ① This lamp is ON when the head light switch is high beam position or passing function.
- ② When passing other machines ahead, this lamp must be used for a few seconds to give other machines warning for a few seconds.

(4) Parking lock pilot lamp




- ① This lamp lights ON when the select switch 2 (parking / working / traveling) is set to parking.
- ② Please refer to select switch 2 at page 3-29 for details.
- ※ **Check the lamp is OFF before driving.**

(5) Working lock pilot lamp

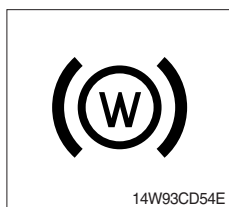


- ① This lamp lights ON when the select switch 2 (parking / working / traveling) is set to working.
- ※ **Please refer to select switch 2 at page 3-29 for details.**

(6) Ram lock pilot lamp

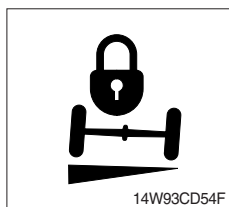


- ① This pilot lamp lights ON when ram lock is activated.
- ※ **Please refer to ram lock switch at page 3-29 for details.**

4. LEVERS AND PEDALS

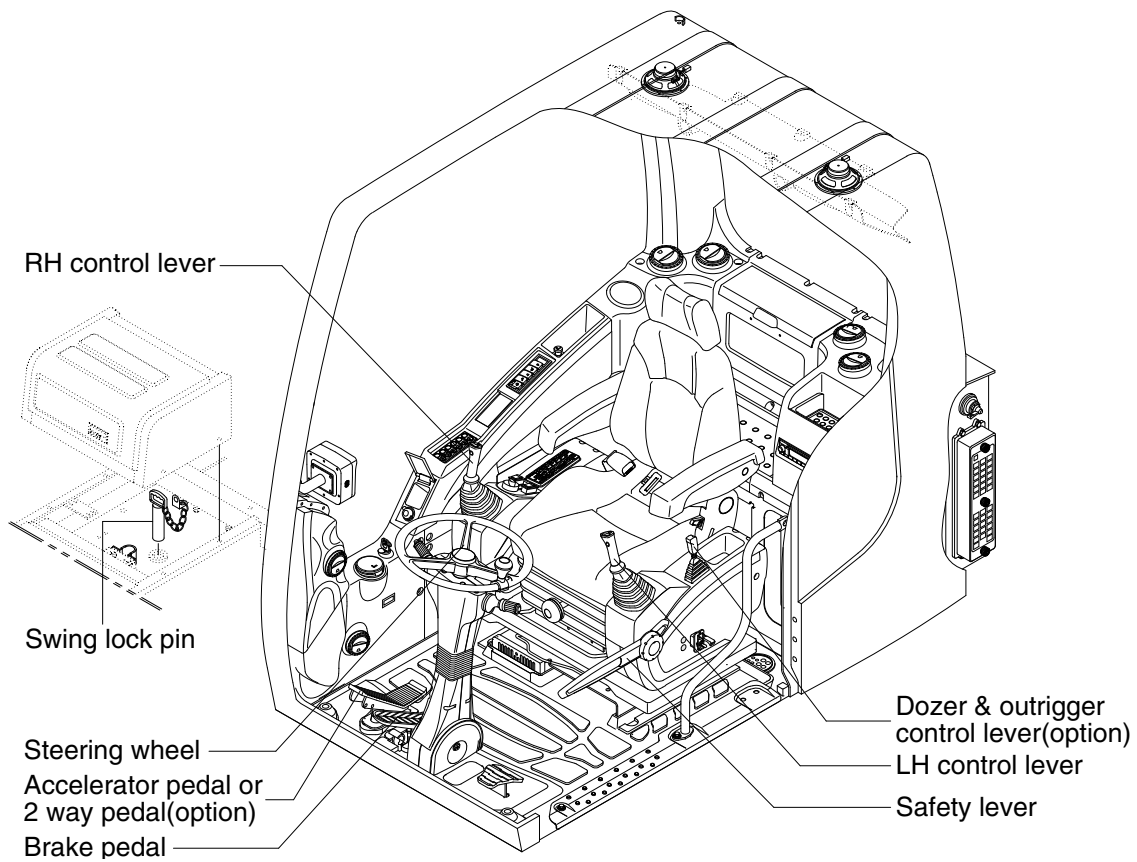


17W9S3CD48

1) LH CONTROL LEVER

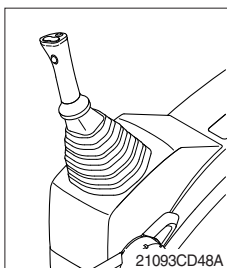


- (1) This joystick is used to control the swing and the arm.
- (2) Refer to operation of working device in chapter 4 for details.

2) RH CONTROL LEVER

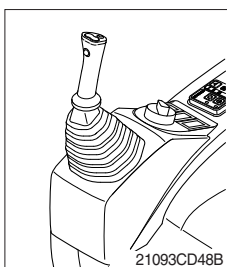

- (1) This joystick is used to control the boom and the bucket.
- (2) Refer to operation of working device in chapter 4 for details.

3) SAFETY LEVER

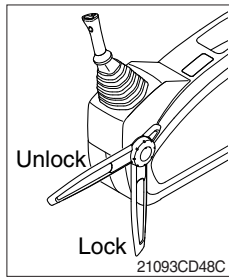

(1) All control levers and pedals are disabled from operation by locating the lever to lock position as shown.


※ **Be sure to lower the lever to LOCK position when leaving from operator's seat.**

(2) By pull lever to UNLOCK position, the machine is operational.

※ **Do not use the safety lever for handle when getting on or off the machine.**

▲ **The machine is able to travel even when the safety lever is in the LOCK position.**


4) STEERING WHEEL

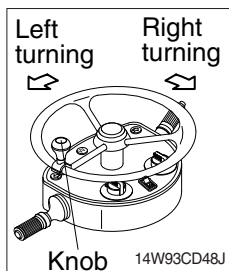

(1) If the steering wheel is turned to left, the machine will move to the left and turn it to the right, the machine will move to the right.

(2) As the handle is equipped with a knob, it is convenient to operate with one hand or quickly.

5) DOZER AND OUTRIGGER LEVER

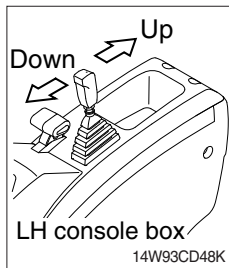


(1) This lever is used to operate dozer blade or outrigger by selecting the select switch 1 (dozer / outrigger).

※ **Please refer to the select switch 1 (dozer / outrigger) at page 3-36.**

(2) If the lever is pushed forward, the dozer blade or outrigger will be going down. And if the lever is pulled back, the dozer blade or outrigger will be going up the dozer blade.


6) SEAT AND CONSOLE BOX ADJUST LEVER

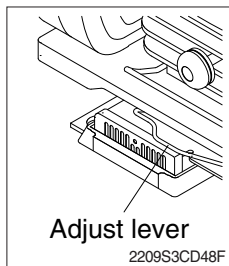

(1) This lever is used to move the seat and console box to fit the contours of the operator's body.

(2) Pull the lever to adjust forward or backward over 170 mm (6.7").


7) ACCELATOR PEDAL

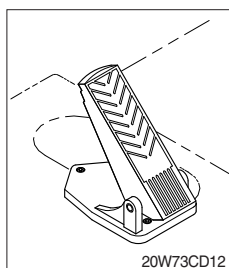

(1) When this pedal is stepped, the machine starts traveling.


▲ **Before starting the machine with stepping on the pedal, check if the underframe is certainly in the traveling direction.**

8) 2 WAY PEDAL (option)

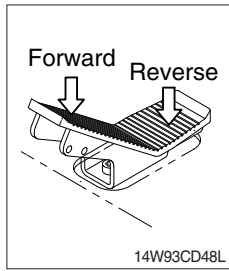


- (1) This pedal is used to select traveling direction and to accelerate of the machine.
- (2) Push the pedal to front for forward traveling, push the pedal to rear for reverse traveling regardless RNR lever at working mode of select switch 2.

9) BRAKE PEDAL

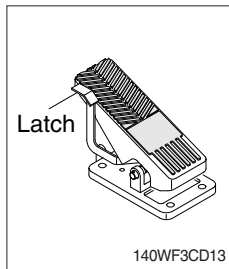

- (1) Pedal and latch provide two kinds of service brake function.
- (2) To operate service brake, push pedal with latch by foot.
 - ▲ Push pedal and latch at once to avoid unexpected locking of pedal in traveling condition.
 - ▲ During travel, do not push pedal only in full stroke. It is dangerous due to the locking of service brake.
- (3) If you want to choose working brake, just push pedal in full stroke without latch then the latch locks pedal and service brake is working continuously until you push the latch to release the pedal.
- (4) Push latch to release working brake.

10) SWING LOCK LEVER

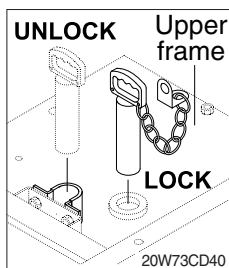

- (1) This is the system to lock the swing by connecting the upper swing part and the lower frame mechanically.
- (2) The swing is locked when the lever is down and unlocked when the lever is up.
 - ※ Before operating the machine, be sure to unlock the swing lock device.



5. AIR CONDITIONER AND HEATER

■ FULL AUTO AIR CONDITIONER AND HEATER (standard)

Full auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.


※ Refer to the page 3-52 for semi auto air conditioner and heater.

· Location of air flow ducts

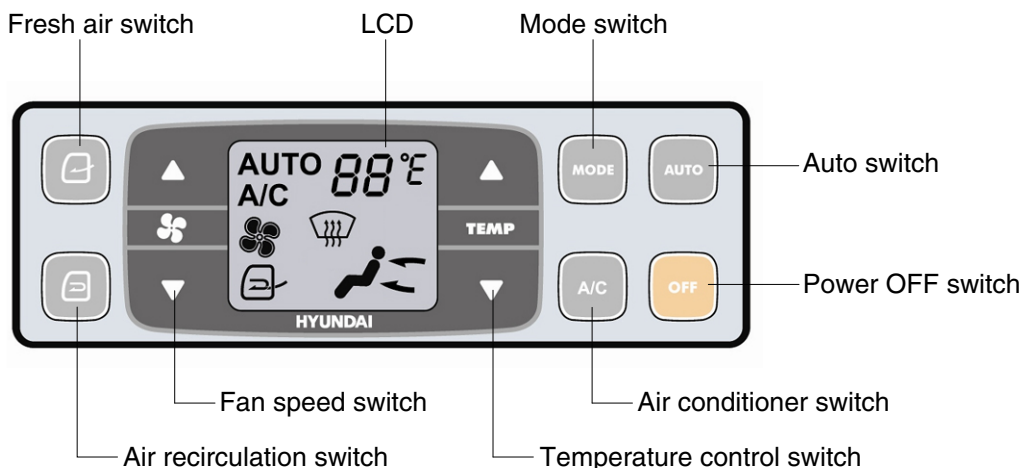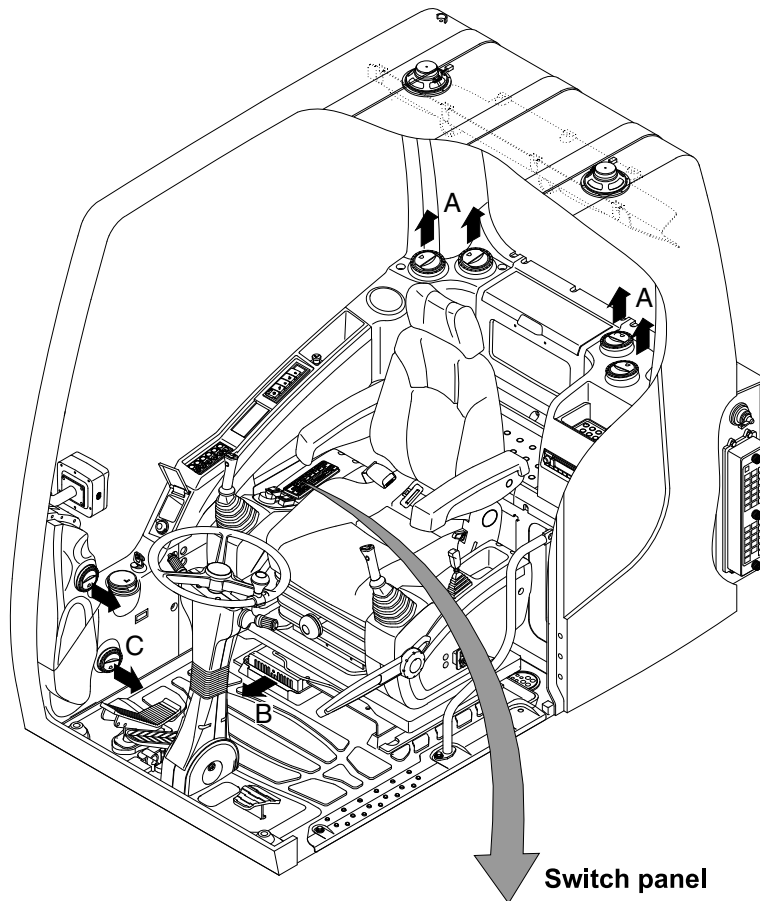

17W9S3CD49

1) POWER OFF SWITCH

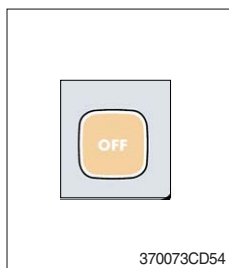


- (1) This switch makes the system and the LED OFF.
Just before the power OFF, set values are stored.

(2) Default setting values


Function	Air conditioner	In/outlet	LCD	Temperature	Mode
Value	OFF	Inlet	OFF	Previous sw OFF	Previous sw OFF

2) AUTO SWITCH

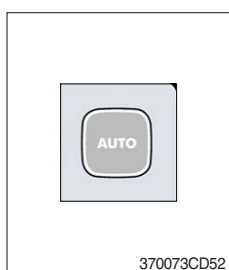


- (1) Turn the starting switch to ON position, LCD lights ON.
Auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.
- (2) This switch can restart system after system OFF.

3) AIR CONDITIONER SWITCH (compressor switch)

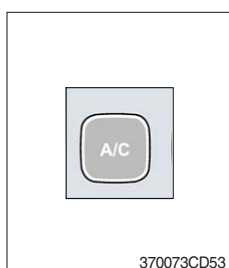


- (1) This switch turns the compressor and the LCD ON.
- (2) In accordance with the temperature sensed by duct (evaporator) sensor, compressor turns ON or OFF automatically.
- ※ **Air conditioner operates to remove vapor and drains water through a drain hose. Water can be sprayed into the cab in case that the drain cock at the ending point of drain hose has a problem.**
In this case, exchange the drain cock.

4) FAN SPEED SWITCH

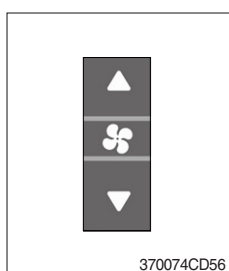

- (1) Fan speed is controlled automatically by set temperature.
- (2) This switch controls fan speed manually.
- There are 8 up/down steps to control fan speed.
 - The maximum step or the minimum step beeps 5 times.
- (3) This switch makes the system ON.

5) TEMPERATURE CONTROL SWITCH

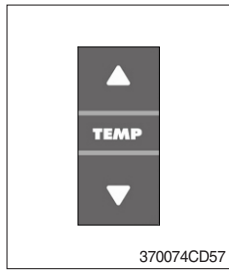


- (1) Setting temperature indication (Lo, 18~31°C, Hi, scale : 1°C)
- (2) Max cool and max warm beeps 5 times.
- (3) The max cool or the max warm position operates as following table.

Temperature	Compressor	Fan speed	In/Outlet	Mode
Max cool	ON	Max (Hi)	Recirculation	Vent
Max warm	OFF	Max (Hi)	Fresh	Foot

- (4) Temperature unit can be changed between celsius (°C) and fahrenheit (°F)
 - ① Default status (°C)
 - ② Push Up/Down temperature control switch simultaneously more than 5 second displayed temperature unit change (°C → °F)

6) MODE SWITCH

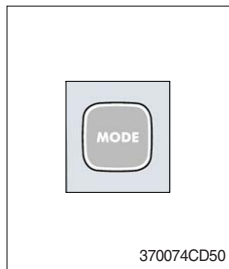

- (1) Operating this switch, it beeps and displays symbol of each mode in order.

· A type : Vent → Vent/Foot → Foot → Foot/Def → Vent


Mode switch		Vent	Vent/Foot	Foot	Foot/Def
Outlet	A	●	●		
	B		●	●	●
	C				●

· B type : Vent → Vent/Foot → Def/Foot → Def/Vent → Def/Vent/Foot

Mode switch		Vent	Vent/Foot	Def/Foot	Def/Vent	Def/Vent/Foot
Outlet	A	●	●		●	●
	B		●	●		●
	C			●	●	●

- (2) When defroster mode operating, FRESH AIR/AIR RECIRCULATION switch turns to FRESH AIR mode and air conditioner switch turns ON.

7) FRESH AIR/AIR RECIRCULATION SWITCH

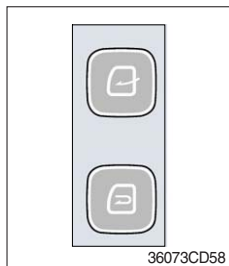

- (1) It is possible to change the air-inlet method.

① Fresh air ()

Inhaling air from the outside.

※ Check out the fresh air filter periodically to keep a good efficiency.

② Air recirculation ()


It recycles the heated or cooled air to increase the energy efficiency.

※ Change air occasionally when using recirculation for a long time.

※ Check out the recirculation filter periodically to keep a good efficiency.

8) SELF DIAGNOSIS FUNCTION

(1) Procedure

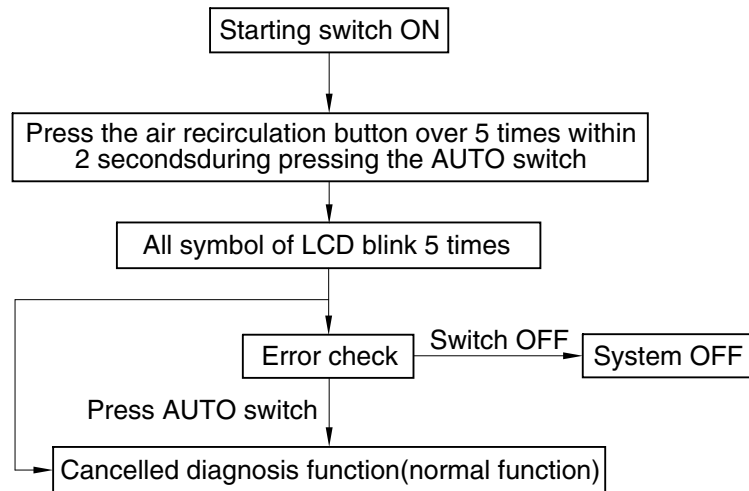

3607A3CD69

(2) Error check

- The corresponding error code flickers on the setup temperature display panel, the other symbol will turn OFF.
- Error code flickers every 0.5 second.
- If error code is more than two, each code flickers 2 times in sequence.
- Error code

Error code	Description	Error code	Description
11	Cabin inside sensor	16	Mode actuator 1
12	Ambient sensor	17	Mode actuator 2
14	Duct (evaporator) sensor	18	Intake actuator
15	Temp actuator	-	-

(3) Fail safe function


Error description	Fail safe function
Cabin inside sensor (11)	25°C alternate value control
Ambient sensor (12)	20°C alternate value control
Duct (evaporator) sensor (14)	1°C alternate value control
Temp actuator (15)	If opening amount is 0 %, the alternate value is 0 %
	If not, the alternate value is 100 %
Mode actuator 1, 2 (16, 17)	The alternate value is Vent

▪ **SEMI AUTO AIR CONDITIONER AND HEATER (option)**

Semi auto air conditioner and heater are equipped for pleasant operation against outside temperature and defrost on window glass.


※ Refer to the page 3-48 for full auto air conditioner and heater.

• Location of air flow ducts

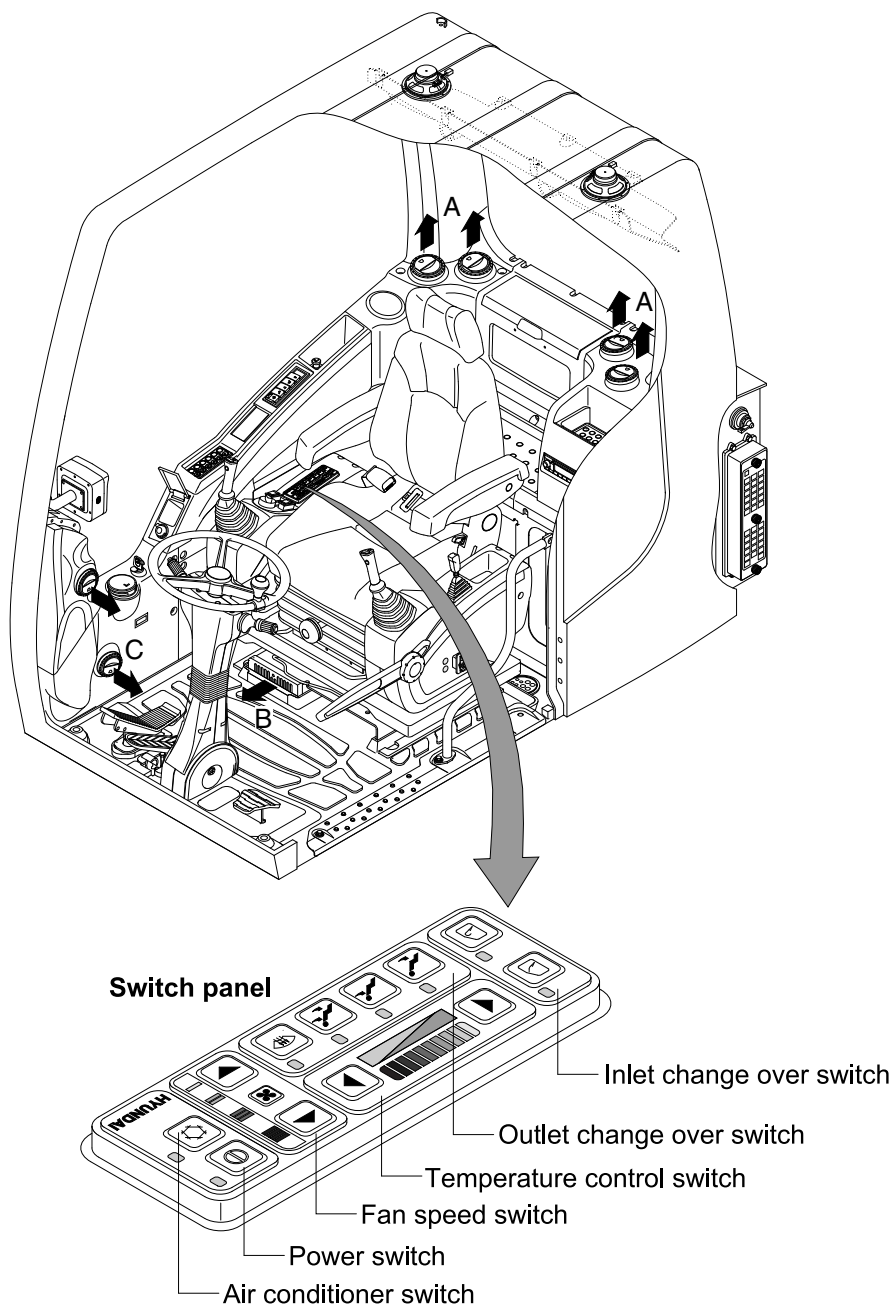

17W9S3CD53

1) POWER SWITCH

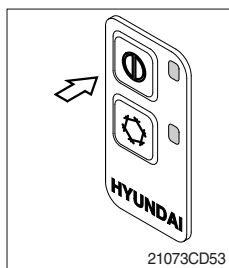


(1) This switch makes the system and the LED simultaneously ON or OFF.

(2) Default setting values

Function	Air conditioner	Fan speed	Temperature	Outlet	Inlet
Value	OFF	1	Max cool	Face	Recirculation

2) AIR CONDITIONER SWITCH (compressor switch)

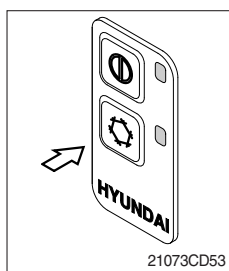


(1) Operating this switch turns the compressor and the LED simultaneously ON or OFF.

(2) In accordance with the evaporator temperature, compressor turns on or off automatically without changing LED state.

※ **Air conditioner operates to remove vapor and drains water through a drain hose. Water can be sprayed into the cab in case that the vacuum valve of drain hose has a problem. In this case, exchange the vacuum valve.**


3) FAN SPEED SWITCH

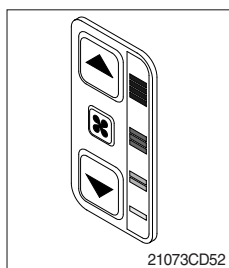

(1) It is possible to control the fan to four steps.

(2) The first step or the fourth step gives 5 times beeps.

4) TEMPERATURE CONTROL SWITCH

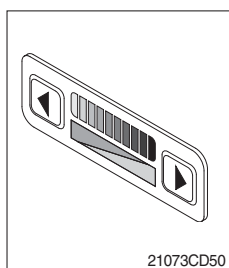


(1) There are 9 steps to control temperature from max cool to max warm controlled up and down by 1 step.

(2) Max cool and max warm arouse 5 times beeps.

(3) For the max warm or the max cool it's better to be configured as following table.

Temperature	Air conditioner	Fan speed	Outlet	Inlet
Max cool	ON	4	Face	Recirculation
Max warm	OFF	3	Foot	Fresh

5) OUTLET CHANGE OVER SWITCH

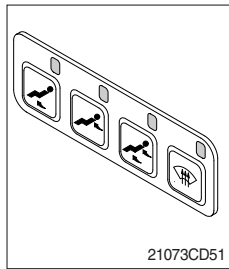


(1) There are four steps of air flow.

Switch position		Mode			
Outlet	A		●	●	
	B	●		●	●
	C				●

(2) When defroster switch operating, INLET switch turns to FRESH mode and air conditioner switch turns ON.

(3) In case of heating range (5~Max warm), air conditioner won't turns ON.

6) INLET CHANGE OVER SWITCH

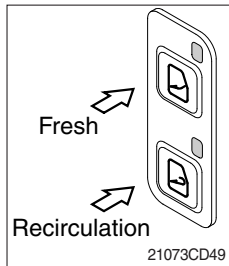

(1) It is possible to change the air-inlet method.

① Fresh

Inhaling air from the outside to pressurize cab inside.

※ **Check out the fresh air filter periodically to keep a good efficiency.**

② Recirculation


It recycles the heated or cooled air to increase the energy efficiency.

※ **Change air occasionally when using recirculation for a long time.**

※ **Check out the recirculation filter periodically to keep a good efficiency.**


(2) Recirculation function operates when the system is OFF but it can be changed whenever needed.

6. OTHERS

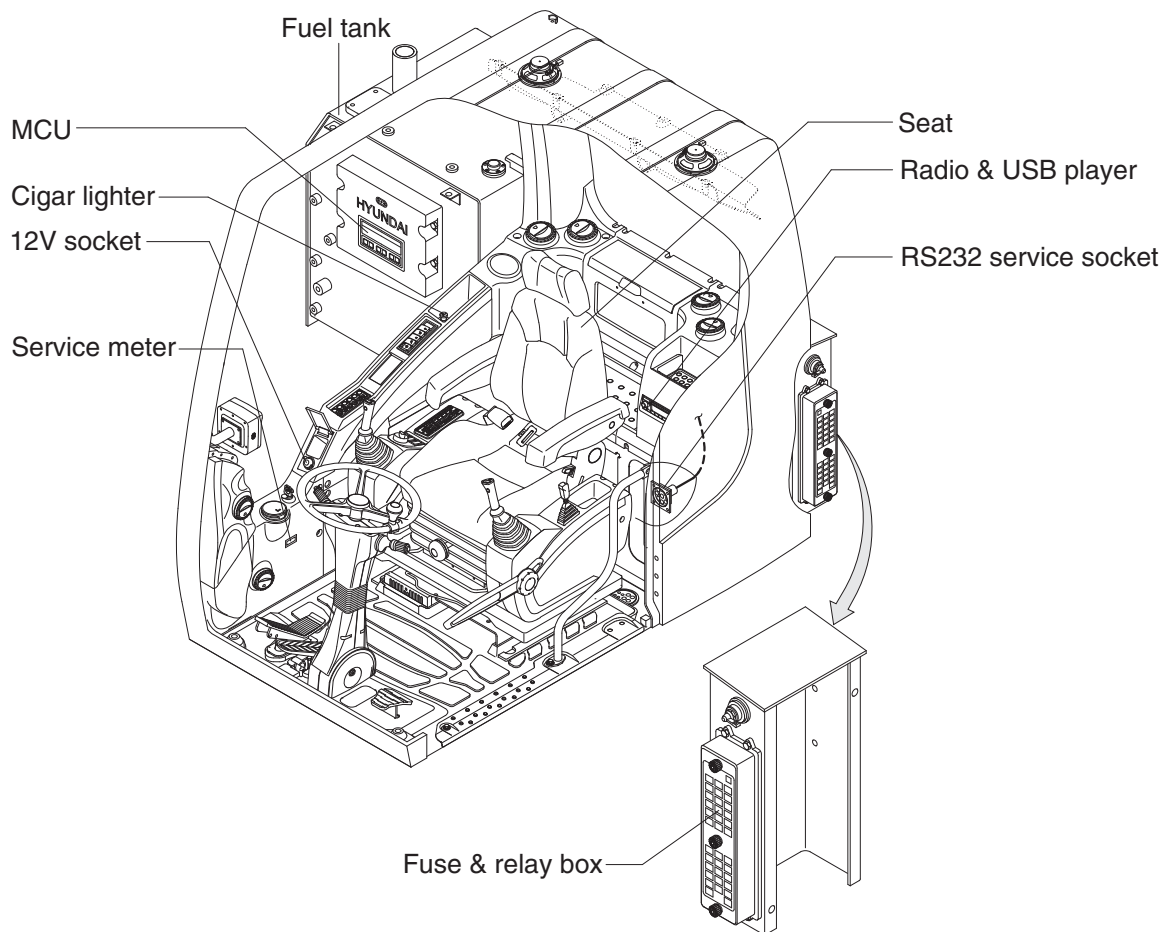

17W9S3CD50

1) CIGAR LIGHTER

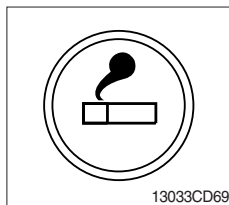


- (1) This can be used when the engine starting switch is ON.
- (2) The lighter can be used when it springs out in a short while after being pressed down.

※ Service socket


**Use cigar lighter socket when you need emergency power.
Do not use the lighter exceeding 24V, 100W.**

2) 12V SOCKET

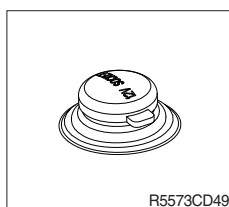

- (1) Utilize the power of 12V as your need and do not exceed power of 12 V, 30 W.

3) RADIO AND USB PLAYER : MACHINE SERIAL NO.: -#0746

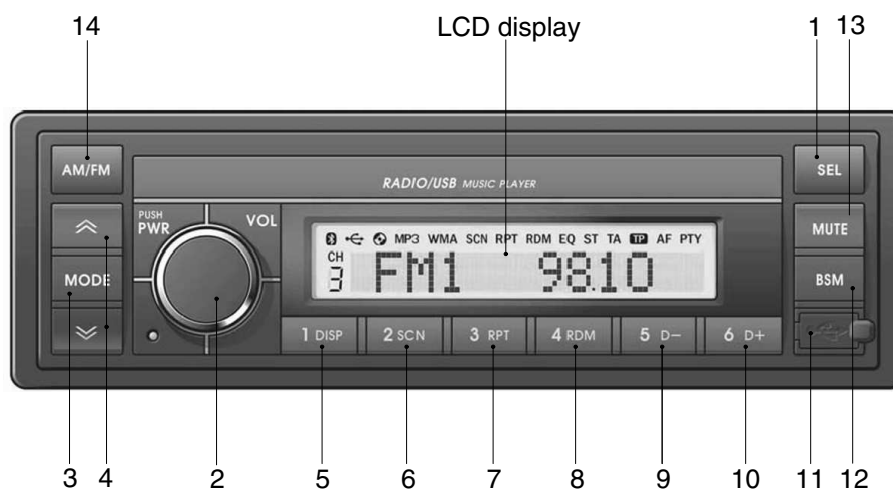


75793CD62

■ FRONT PANEL PRESENTATION

- | | | | | | |
|---|--|---|----|--|--|
| 1 | | Sound function selection button (audio selection) | 10 | | Preset memory button 6 D+ Directory up |
| 2 | | Power and volume button | 11 | | Aux function |
| 3 | | Mode button (select RADIO / USB / AUX) | 12 | | Preset scan (PS) Best station memory (BSM) |
| 4 | | UP / DOWN tuning button | 13 | | Audio mute button |
| 5 | | Preset memory button 1 DISP ID3 v2 display | 14 | | AM / FM button (radio) |
| 6 | | Preset memory button 2 SCN File scan | | | |
| 7 | | Preset memory button 3 RPT Repeat play selector | | | |
| 8 | | Preset memory button 4 RDM Random play selector | | | |
| 9 | | Preset memory button 5 D- Directory down | | | |

■ GENERAL

(1) Power and volume button

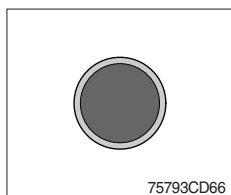

① Power ON/OFF button


Press power button to turn the unit ON or OFF shortly.

When the power is ON, the previous mode (last memory) will appear.

② Volume up / down control

Turn volume up / down button right to increase the volume level. The level will be shown in VOLUME xx on the LCD display. Turn it left to decrease the volume level. After 5 seconds of volume indication, display will return to the previous mode.

(2) Sound function selection button (audio selection)

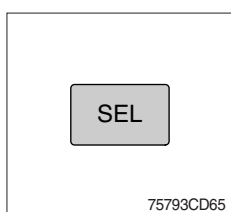


- ① This button is to adjust the sound. Each time you press power button shortly, LCD displays each mode as follows :

BASS → TREBLE → BAL → BEEP → LOUD → VOLUME



※ When this button is pressed, LCD display shows selected function for 5 seconds and then returns back to the previous mode. On selected function, level can be controlled by turning this button. The display will automatically return to normal indication in 5 seconds after the last adjustment is made or when another function is activated.


② Bass control

To adjust the bass level, first select the bass mode by pressing the select button  until BASS indication appears on the LCD display. Within 5 seconds of choosing the bass mode, turn power button right / left to adjust the bass level as desired.

The bass level will be shown on the LCD display from a minimum of BASS -10 to a maximum of BASS +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.


③ Treble control

To adjust the treble level, first select the treble mode by pressing the select button  until TREBLE indication appears on the LCD display. Within 5 seconds of choosing the treble mode, turn power button right / left to adjust the treble level as desired.

The treble level will be shown on the LCD display from a minimum of TREBLE -10 to a maximum of TREBLE +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing the select button  until the BAL indication appears on the LCD display.


Within 5 seconds of choosing the balance mode, turn power button right / left to adjust the balance as desired.

The balance position will be shown on the LCD display from BAL 10L (full left) to BAL 10R (full right).

When the volume level between the left and right speakers is equal, BAL L=R will be shown on the LCD display panel.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

⑤ Beep control

To adjust the beep mode, first select the beep mode by pressing the select button  until BEEP indication appears on the LCD display.

The beep mode will be shown on the LCD display from BEEP 2ND, BEEP OFF and BEEP ON by turning power button right / left.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.


Select BEEP ON when you wish to hear the BEEP sound whenever any function button is pressed.

Select BEEP 2ND when you wish to hear the BEEP sound whenever any tuner pre-set button and/or tune seek buttons are pressed for more than 3 seconds.


⑥ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response.

This action will compensate for the reduction in bass and treble performance experienced at low volume.


To select the loudness feature, press select button  until LOUD ON or LOUD OFF is displayed, then turn power button left or right to activate or deactivate loudness.

(3) Mode button

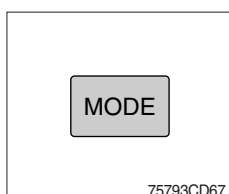

- ① Press mode button to select RADIO / USB / AUX.


(4) Audio mute button

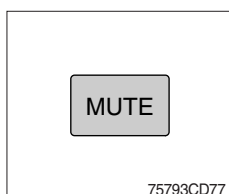

- ① Press mute button momentarily to mute volume and MUTE mark will blink on the LCD display.
Press the button again to return to the mode in use before the mute mode was activated.

■ RADIO

(1) AM / FM / LW band selector

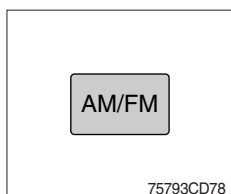


- ① Each time this button is pressed, the radio button is changed. Each time this button is pressed, LCD displays each band as follows :

FM1 → FM2 → FM3 → AM → LW

※ LW band is only available for Europe.

(2) Up / down tuning

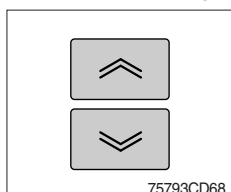


- ① To automatically select a radio station, momentarily press the up tune seek button ⤴ or down tune seek button ⤵ for less than 3 seconds to search for the closest radio station.

To manually select a radio station, press the up tuning & down tuning button for longer than 3 seconds.

The radio frequency will move up or down step by step each time you press button.

(3) Station pre-set button

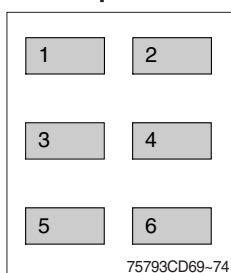


- ① Pressing these buttons shortly will recall your favorite pre-set radio stations.

To store your favorite stations into any of the 6 pre-set memories in each band (AM/FM/LW), use the following procedure :

- Turn the radio ON and select the desired band.
- Select the first station to be pre-set using the manual up/down or automatic seek tuning control button.
- Press the chosen pre-set button to store your selected station into and continue to hold it in. The beep sound will be momentarily heard and the pre-set number will appear on the LCD display indicating that the station is now set into that pre-set memory position and can be recalled at any time, by pressing that pre-set button.

(4) Pre-set scan (PS) / Best station memory (BSM) button

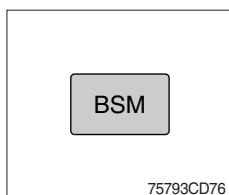

① Pre-set scan (PS)

Press BSM button shortly to scan the 6 pre-set station stored the memories on each band (AM/FM/LW).

The unit will stop at each pre-set station (the pre-set number on the LCD display will flash during pre-set scan operation) and remain on the selected frequency. Press the button momentarily again to remain on the station currently being heard.

② Best station memory (BSM)

Pressing BSM button for longer than 2 seconds will activate the BSM tuning feature which will automatically scan and enter each station into memory.

If you have already set the pre-set memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter the new ones.

This BSM feature is most useful when traveling in a new area where you are not familiar with the local stations.

■ USB PLAYER

(1) USB function

There are two ways to play mp3 files in a USB device : using USB socket in the cab and the USB / AUX cable connected to the front side of the player.

· Use of USB socket


- ① Connect a USB device, which saves mp3 files, to USB socket in the cabin.
- ② If a USB device has not been connected, MP3 files are automatically played when you insert it into the USB port.
- ③ If a USB device has connected, MP3 files are played when you press mode for USB.

· Use of USB/AUX cable (option)



- ① Connect the USB/AUX cable to the player in order to play MP3 files in a USB device.
- ② If a USB device has not been connected, MP3 files are automatically played when you insert it into the cable.
- ③ If a USB device has connected, MP3 files are played when you press mode for USB.

(2) File selection & cue / review button

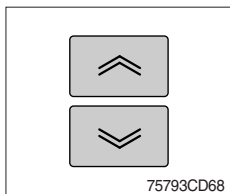

① File selection function

This button is used to select file up / down. Each time the forward file select \Rightarrow is pressed, file number is increased.

Each time the backward file select \Leftarrow is pressed, file number is decreased.

② Cue / review functions

High-speed audible search of file on a USB can be made by this button (the cue and review functions).

Press and hold the cue button \Rightarrow to advance rapidly in the forward direction or the review button \Leftarrow to advance rapidly in the backward direction.

(3) MP3 directory / file searching

① The power button is used to select a particular directory and file.

Press and hold for more than 3 seconds while playing MP3 file.

Turn right / left the power button to search the directory. Press the button when you find the wanted directory.


For example, the directory search generally changes in two methods depending on the order of writing as follows.

- Method 1 : ROOT → Dir01 → Dir02 → Dir03 → Dir04 → Dir05 → Dir06 → Dir07
- Method 2 : ROOT → Dir01 → Dir02 → Dir05 → Dir03 → Dir06 → Dir04 → Dir07


If you want to search the file in the located directory, turn right / left the power button consecutively. Press the button when you find the wanted file. The unit will then play the selected file. For instance, the file search changes in Dir01 as follows.

File01 → File02 → File03 → File04
↑

※ MP3 direction / file configuration

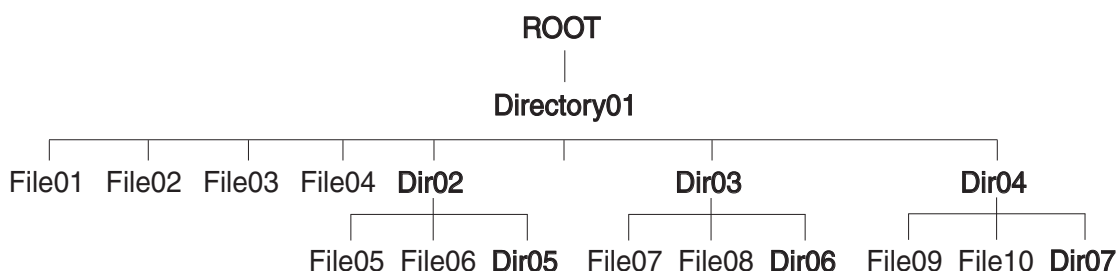

(4) ID3 v2 display

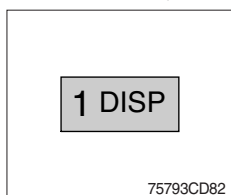


- ① Disp button is used to change the display information.


While playing an MP3 file, you can change the file information shown on the LCD display.

Each time you press DISP (display), the display changes to show the following.

- ※ If the MP3 disc does not have any ID3 information, the display will show NO ID3 on LCD display.

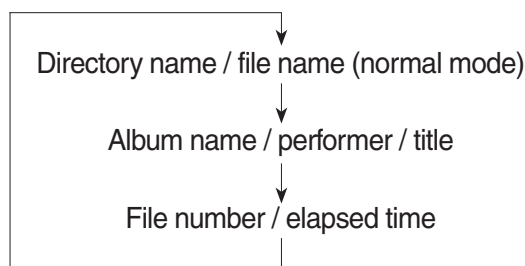

(5) File scan (SCN)

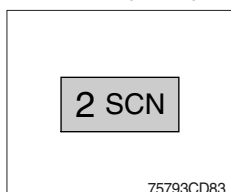


- ① During USB play, press SCN button to play the first 10 seconds of each file on the whole file on the USB (SCN mark will appear on the LCD display).

When a desired file is reached, press the SCN button again to cancel the function.

The unit will then play the selected file.

- ※ In case of playing MP3 file, when the SCN (scan) button is pressed and held for longer than 2 seconds, the SCN mark will blink on the LCD display and all files in the selected directory will be introduced until the file scan mode is cancelled by pressing the SCN button again or by activating the random or repeat functions.

(6) Repeat play selector (RPT)

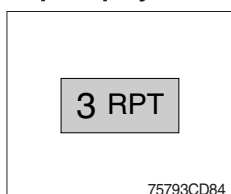


- ① During USB play, press RPT button to play the selected file repeatedly (RPT will appear on the LCD display).

Play of the file will continue to repeat until this button is pressed again and the RPT disappears from the LCD display.

- ※ In case of playing MP3 file, when the RPT button is pressed and held longer than 2 seconds, the RPT mark will blink on the LCD display and play all files in the selected directory and will be repeated until the directory repeat mode is cancelled by pressing the repeat button again or by activating the scan or random functions (RPT mark will disappear from LCD display).

(7) Random play selector (RDM)

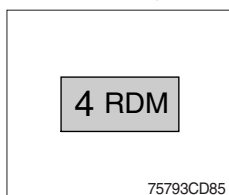


- ① During USB play, press RDM button to play the files on the USB in a random shuffled order (RDM will appear on the LCD display). The file select function will also select file in the random order instead of the normal process.

The random play mode can be cancelled by this button again.


- ※ In case of MP3 file, when the random button is pressed and held longer than 2 seconds, the RDM mark will blink on the LCD display and play all files in directory randomly until the directory random mode is cancelled by pressing the random button again or by activating the scan or repeat functions (RDM mark will disappear from LCD display).

(8) Directory down

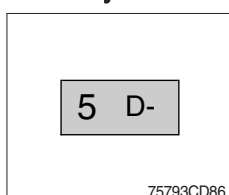

- ① Press D- button briefly while playing MP3. The previous directory is located each time you press this button.

(9) Directory up

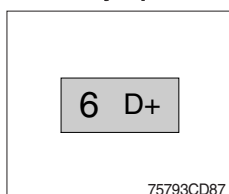


- ① Press D+ button briefly while playing MP3 . The next directory is located each time you press this button.
- ※ If the MP3 file does not have a directory, the unit play MP3 at 10-file intervals.
- ※ If any MP3 file does not exist in USB, this button can not operate.

■ AUX PLAYER


(1) Aux function

· Use of USB socket

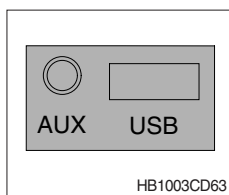

- ① If you want to listen to music of a external audio device, connect a external audio device into the USB port.
- ② Press mode button to change a current mode for AUX. If audio file of audio device is playing, you can listen to music through speaker.

· Use of USB/AUX cable (option)

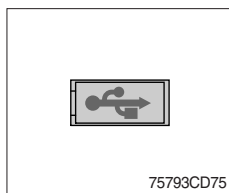

- ① If you want to listen to music of a external audio device, connect a external audio device through USB/AUX cable.
- ② Press mode button to change a current mode for AUX. If audio file of audio device is playing, you can listen to music through speaker.

3) RADIO AND USB PLAYER : MACHINE SERIAL NO.: #0747-#1299




75793CD62-2

■ FRONT PANEL PRESENTATION

- | | | | | | |
|---|--|--|----|--|---|
| 1 | | Audio selection button | 10 | | Preset memory button 6
D+ Directory up |
| | | Audio selection knob | 11 | | Aux function |
| 2 | | Power and volume button | 12 | | Preset scan (PS)
Best station memory (BSM) |
| 3 | | Mode button
(select RADIO / USB / AUX) | 13 | | Audio mute button |
| 4 | | UP / DOWN tuning button | 14 | | AM / FM button (radio) |
| 5 | | Preset memory button 1
DISP ID3 v2 display | 15 | | Send |
| 6 | | Preset memory button 2
SCN File scan | 16 | | End |
| 7 | | Preset memory button 3
RPT Repeat play selector | 17 | | MIC (microphone) |
| 8 | | Preset memory button 4
RDM Random play selector | 18 | | Aux connector |
| 9 | | Preset memory button 5
D- Directory down | | | |

■ GENERAL

(1) Power and volume button

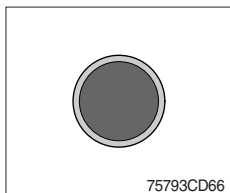

① Power ON/OFF button


Press power button to turn the unit ON or OFF shortly.

When the power is ON, the previous mode (last memory) will appear.

② Volume up / down control

Turn volume up / down button right to increase the volume level. The level will be shown in VOLUME xx on the LCD display. Turn it left to decrease the volume level. After 5 seconds of volume indication, display will return to the previous mode.

(2) Sound function selection button (audio selection)

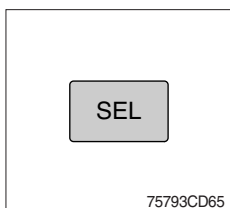

① This button is to adjust the sound. Each time you press SEL button shortly, LCD displays each mode as follows :

BASS → TREBLE → BAL → LOUD → EQ



※ When this button is pressed, LCD display shows selected function for 5 seconds and then returns back to the previous mode. On selected function, level can be controlled by turning this button. The display will automatically return to normal indication in 5 seconds after the last adjustment is made or when another function is activated.

② Bass control

To adjust the bass level, first select the bass mode by pressing the SEL button until BASS indication appears on the LCD display. Within 5 seconds of choosing the bass mode, turn button selection knob right / left to adjust the bass level as desired.

The bass level will be shown on the LCD display from a minimum of BASS -10 to a maximum of BASS +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

③ Treble control

To adjust the treble level, first select the treble mode by pressing the SEL button until TREBLE indication appears on the LCD display. Within 5 seconds of choosing the treble mode, turn button selection knob right / left to adjust the treble level as desired.

The treble level will be shown on the LCD display from a minimum of TREBLE -10 to a maximum of TREBLE +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing the SEL button until the BAL indication appears on the LCD display.

Within 5 seconds of choosing the balance mode, turn button selection knob right / left to adjust the balance as desired.

The balance position will be shown on the LCD display from BAL 10L (full left) to BAL 10R (full right).

When the volume level between the left and right speakers is equal, BAL L=R will be shown on the LCD display panel.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

⑤ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response.

This action will compensate for the reduction in bass and treble performance experienced at low volume.


To select the loudness feature, press SEL button until LOUD ON or LOUD OFF is displayed, then turn power button (type A) or selection knob (type B) left or right to activate or deactivate loudness.

⑥ Equalizer (EQ)

You can select an equalizer curve designed for 4 music types (POP, ROCK, CLASSIC, JAZZ).


To select the desired curve, first select the EQ mode by pressing SEL button until the "EQ OFF" indication appears on the display panel. Within 5 seconds of choosing the EQ mode, turn power and volume button (type A) or selection knob (type B) to select an equalizer curve as desired.

(3) Mode button

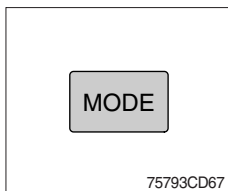

- ① Press mode button to select RADIO / USB / AUX / BT audio.


(4) Audio mute button

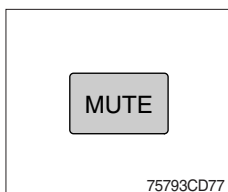

- ① Press mute button momentarily to mute volume and MUTE mark will blink on the LCD display. Press the button again to return to the mode in use before the mute mode was activated.

■ RADIO

(1) AM / FM / LW band selector

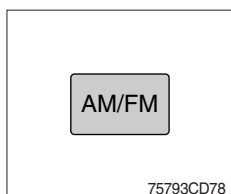


- ① Each time this button is pressed, the radio button is changed. Each time this button is pressed, LCD displays each band as follows :

FM1 → FM2 → FM3 → AM → LW


※ LW band is only available for Europe.

(2) Up / down tuning

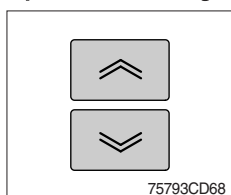


- ① To automatically select a radio station, momentarily press the up tune seek button \approx or down tune seek button \approx for less than 3 seconds to search for the closest radio station. To manually select a radio station, press the up tuning & down tuning button for longer than 3 seconds. The radio frequency will move up or down step by step each time you press button.

(3) Station pre-set button

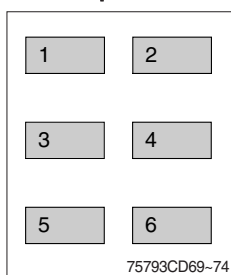

- ① Pressing these buttons shortly will recall your favorite pre-set radio stations. To store your favorite stations into any of the 6 pre-set memories in each band (AM/FM/LW), use the following procedure :
- Turn the radio ON and select the desired band.
 - Select the first station to be pre-set using the manual up/down or automatic seek tuning control button.
 - Press the chosen pre-set button to store your selected station into and continue to hold it in. The beep sound will be momentarily heard and the pre-set number will appear on the LCD display indicating that the station is now set into that pre-set memory position and can be recalled at any time, by pressing that pre-set button.

(4) Pre-set scan (PS) / Best station memory (BSM) button

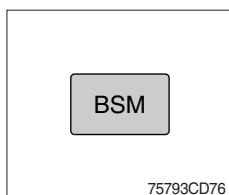

① Pre-set scan (PS)

Press BSM button shortly to scan the 6 pre-set station stored the memories on each band (AM/FM/LW).

The unit will stop at each pre-set station (the pre-set number on the LCD display will flash during pre-set scan operation) and remain on the selected frequency. Press the button momentarily again to remain on the station currently being heard.

② Best station memory (BSM)

Pressing BSM button for longer than 2 seconds will activate the BSM tuning feature which will automatically scan and enter each station into memory.

If you have already set the pre-set memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter the new ones.

This BSM feature is most useful when traveling in a new area where you are not familiar with the local stations.

■ USB PLAYER




(1) USB function

- ① Connect a USB device if you want to listen to MP3 file in a USB device.
 - ② It will automatically play MP3 file in the USB device and the LCD display will show "READING USB".
- ※ If there are no files on USB device, playback will revert back to the previous mode after displaying "NO FILE".

(2) AUX function

- ① If you want to listen to music of a external audio device, connect a external audio device through AUX cable.
 - ② Change AUX mode by pressing MODE button.
- If audio file of Audio device is playing, you can listen to music through speaker.

(3) File selection & cue / review button

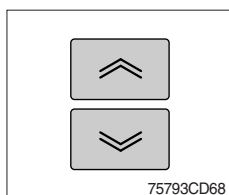

① File selection function

This button is used to select file up / down.

Each time the forward file select ≧ is pressed, file number is increased.

Each time the backward file select ≦ is pressed, file number is decreased.

② Cue / review functions

High-speed audible search of file on a USB can be made by this button (the cue and review functions).

Press and hold the cue button ≧ to advance rapidly in the forward direction or the review button ≦ to advance rapidly in the backward direction.

(4) MP3 directory / file searching

① The D-, D+ button is used to select a particular directory and file.

Press and hold for more than 3 seconds while playing MP3 file.

Turn right / left the power button (type A) or selection knob (type B) to search the directory. Press the button when you find the wanted directory.

For example, the directory search generally changes in two methods depending on the order of writing as follows.


- Method 1 : ROOT → Dir01 → Dir02 → Dir03 → Dir04 → Dir05 → Dir06 → Dir07
- Method 2 : ROOT → Dir01 → Dir02 → Dir05 → Dir03 → Dir06 → Dir04 → Dir07

If you want to search the file in the located directory, turn right / left the power button (type A) or selection knob (type B) consecutively. Press the button when you find the wanted file. The unit will then play the selected file.


For instance, the file search changes in Dir01 as follows.

File01 → File02 → File03 → File04

※ MP3 directory / file configuration

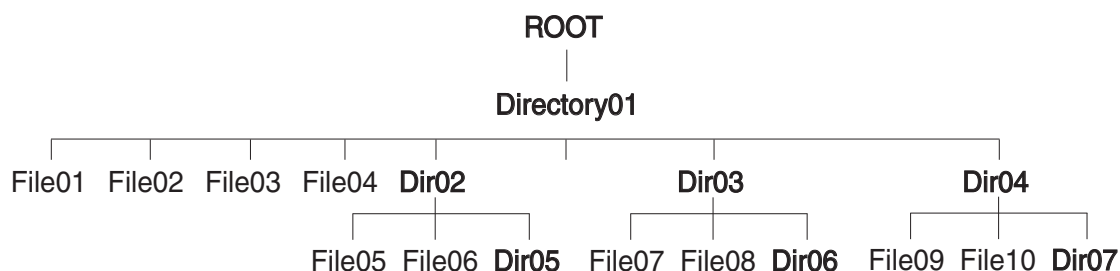

(5) ID3 v2 display

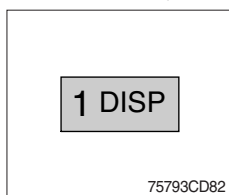


- ① Disp button is used to change the display information.


While playing an MP3 file, you can change the file information shown on the LCD display.

Each time you press DISP (display), the display changes to show the following.

- ※ If the MP3 disc does not have any ID3 information, the display will show NO ID3 on LCD display.

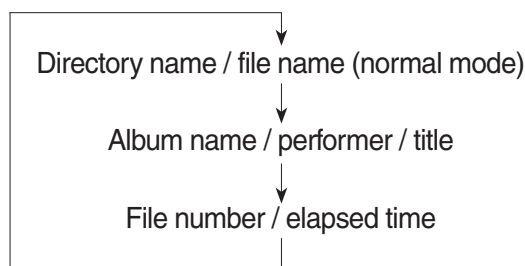

(6) File scan (SCN)

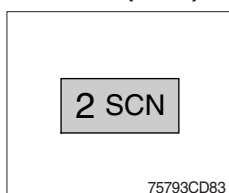


- ① During USB play, press SCN button to play the first 10 seconds of each file on the whole file on the USB (SCN mark will appear on the LCD display).

When a desired file is reached, press the SCN button again to cancel the function.

The unit will then play the selected file.

- ※ In case of playing MP3 file, when the SCN (scan) button is pressed and held for longer than 2 seconds, the SCN mark will blink on the LCD display and all files in the selected directory will be introduced until the file scan mode is cancelled by pressing the SCN button again or by activating the random or repeat functions.

(7) Repeat play selector (RPT)

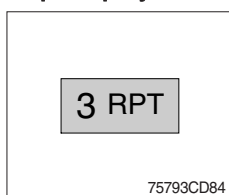


- ① During USB play, press RPT button to play the selected file repeatedly (RPT will appear on the LCD display).

Play of the file will continue to repeat until this button is pressed again and the RPT disappears from the LCD display.

- ※ In case of playing MP3 file, when the RPT button is pressed and held longer than 2 seconds, the RPT mark will blink on the LCD display and play all files in the selected directory and will be repeated until the directory repeat mode is cancelled by pressing the repeat button again or by activating the scan or random functions (RPT mark will disappear from LCD display).

(8) Random play selector (RDM)

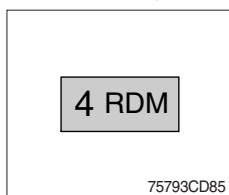


- ① During USB play, press RDM button to play the files on the USB in a random shuffled order (RDM will appear on the LCD display). The file select function will also select file in the random order instead of the normal process.

The random play mode can be cancelled by this button again.


- ※ In case of MP3 file, when the random button is pressed and held longer than 2 seconds, the RDM mark will blink on the LCD display and play all files in directory randomly until the directory random mode is cancelled by pressing the random button again or by activating the scan or repeat functions (RDM mark will disappear from LCD display).

(9) Directory down

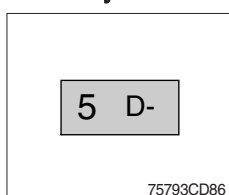

- ① Press D- button briefly while playing MP3. The previous directory is located each time you press this button.

(10) Directory up

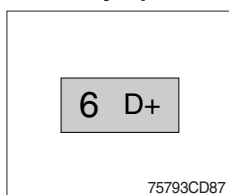


















- ① Press D+ button briefly while playing MP3 . The next directory is located each time you press this button.
- ※ If the MP3 file does not have a directory, the unit play MP3 at 10-file intervals.
- ※ If any MP3 file does not exist in USB, this button can not operate.

RADIO AND USB PLAYER (WITH BLUETOOTH) : MACHINE SERIAL NO.: #1300-



9403CD100

■ FRONT PANEL PRESENTATION

















- | | |
|---|---|
| <p>1  Power ON/OFF,
Volume UP/DOWN button</p> <p>2  Manual UP/DOWN Tuning,
File search, SEL button</p> <p>3  Mode button,
Audio mute button</p> <p>4  Call & Pair button</p> <p>5  Call end button</p> <p>6  Station preset 1
DIS Display button</p> <p>7  Station preset 2</p> <p>8  Station preset 3
RPT Repeat play button</p> <p>9  Station preset 4
RDM Random play button</p> | <p>10  Station preset 5
DIR- Directory down button</p> <p>11  Station preset 6
DIR+ Directory up button</p> <p>12  Scan play button (SCAN)
Best station memory (BSM) button</p> <p>13  Auto tune up, Seek up button</p> <p>14  Auto tune down, Track down button</p> <p>15  USB connector</p> <p>16  AUX IN Jack</p> <p>17  MIC hole</p> |
|---|---|

RADIO AND USB PLAYER (WITHOUT BLUETOOTH) : MACHINE SERIAL NO.: #1300-



9403CD101

■ FRONT PANEL PRESENTATION

- | | |
|--|---|
| <p>1  Power ON/OFF,
Volume UP/DOWN button</p> <p>2  Manual UP/DOWN Tuning,
File search, SEL button</p> <p>3  Mode button,
Audio mute button</p> <p>4  Radio seek up button</p> <p>5  Radio seek down button</p> <p>6  Station preset 1
DIS Display button</p> <p>7  Station preset 2</p> <p>8  Station preset 3
RPT Repeat play button</p> <p>9  Station preset 4
RDM Random play button</p> | <p>10  Station preset 5
DIR- Directory down button</p> <p>11  Station preset 6
DIR+ Directory up button</p> <p>12  Scan play button (SCAN)
Best station memory (BSM) button</p> <p>13  Track up button</p> <p>14  Track down button</p> <p>15  USB connector</p> <p>16  AUX IN Jack</p> |
|--|---|

■ GENERAL

(1) Power and volume button



① Power ON / OFF button

Press power button (1) to turn the unit on or off.

② Volume UP/DOWN control knob

Turn VOL knob (1) right to increase the volume level.

Turn VOL knob (1) left to decrease the volume.

After 5 seconds the display will return to the previous display mode.

③ Initial volume level set up

I-VOL is the volume level the unit will play at when next turned on.

To adjust the I-VOL level, press and hold VOL button (1) for longer than 2 seconds. The current volume level displays on the display panel.

Then turn button (1) right or left to set the volume level as the I-VOL level.

④ Clock ON/OFF control

The CLOCK was default at off status. To turn CLOCK ON, press and hold VOL button (1) for longer than 2 seconds to display I-VOL, then short press VOL again, turn VOL knob while CLOCK OFF display, then the CLOCK ON will be displayed.

※ Due to time tolerance, the clock display on the Audio unit might have little difference.

⑤ Clock adjustment

With CLOCK ON selected, press VOL knob again after CLOCK ON display, the hour will blink, turn VOL knob right or left to adjust hour.

Simply press VOL again, the minute will blink, turn VOL knob to adjust minute. Then press VOL again to confirm the clock once finished.

(2) Menu Selection



- ① This button can adjust the sound effect and other things.

Each time you press this button (2), LCD displays as follows :

BAS → TREB → BAL L=R → FAD F=R → EQ → LOUD ON →
BEEP 2ND

On each setting, the level can be controlled by turning TUNE knob (2). When the last adjustment is made, after 5 seconds, the display will automatically return to the previous display mode.

② Bass control

To adjust the bass tone level, first select the bass mode by pressing SEL button (2) repeatedly until BASS appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the bass level as desired. The bass level will be shown on the display panel from a minimum of BASS-7 to a maximum of BASS+7.

③ Treble control

To adjust the treble tone level, first select the treble mode by pressing SEL button (2) repeatedly until TREB appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the treble level as desired. The treble level will be shown on the display panel from a minimum of TREB -7 to a maximum of TREB +7.

④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing SEL button (2) repeatedly until BAL indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the balance as desired. The balance position will be shown by the bars on the display panel from BAL 10R (full right) to BAL 10L (full left).

⑤ Fader control

To adjust the front-rear speaker balance, first select the fader mode by pressing SEL button (2) repeatedly until FADER indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the front-rear speaker level as desired. The fader position will be shown by the bars on the display panel from FAD 10F (full front) to FAD 10R (full rear).

⑥ EQ control

You can select an equalizer curve for 4 music types (CLASSIC, POP, ROCK, JAZZ). Press button (2) until EQ is displayed, then turn knob (2) right or left to select the desired equalizer curve. Each time you turn the knob, LCD displays as follows :

EQ OFF → CLASSIC → POP → ROCK → JAZZ

※ When the EQ mode is activated, the BASS and TREBLE modes are not displayed.

⑦ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response. This action will compensate for the reduction in bass and treble performance experienced at low volume.

To select the loudness feature, press button (2) until LOUD is displayed, then turn knob (2) right or left to activate or deactivate loudness.

⑧ Beep control

To adjust the BEEP mode, first select the BEEP mode by pressing button (2) repeatedly until BEEP indication appears on the display panel. Then turn knob (2) left or right within 5 seconds to select BEEP 2ND, BEEP OFF or BEEP ON.

- BEEP 2ND : You will only hear the beep sound when the buttons are held down for more than 2 seconds.
- BEEP OFF : You can not hear the sound beep when you press the buttons.
- BEEP ON : You can hear the beep sound each time you press the buttons.

(3) Mute control

- ① Press and hold MUTE button (3) for over 2 seconds to mute sound output and MUTE ON will blink on the LCD. Press the button again to cancel MUTE function and resume to normal playing mode.

(4) Mode selection

- ① Repeat press MODE button (3) to switch between FM1, FM2, AM, USB, AUX, BT MUSIC.
- ※ If there is no USB, AUX, Bluetooth Phone connected, it would not display USB, AUX, BT when you press button (3).

■ RADIO

(1) Mode button



- ① Repeat press MODE button to select FM1, FM2 or AM.

(2) Manual tuning button



- ① To manually tune to a radio station, simply turn encoder TUNE (2) left or right to increase or decrease the radio frequency.

(3) Auto tuning button



- ① To automatically select a radio station, simply press Seek up or Track down button.




(4) Station preset button



- ① In radio mode, pressing buttons (6) to (11) will recall the radio stations that are memorized. To store desired stations into any of the 6 preset memories, in either the AM or FM bands, use the following procedure :
 - a. Select the desired station.
 - b. Press and hold one of the preset buttons for more than 2 seconds to store the current station into preset memory. Six stations can be memorized on each of FM1, FM2, and AM.

(5) Preset scan (PS) / Best station memory (BSM) button

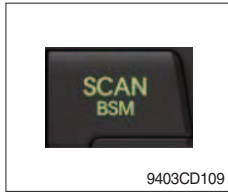

① Press BSM button (12) momentarily to scan the 6 preset stations stored in the selected band. When you hear your desired station, press it again to listen to it.

Press BSM button (12) for longer than 2 seconds to activate the Best Station Memory feature which will automatically scan and enter each station into memory.

※ **If you have already set the preset memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter into the new ones. This BSM feature is most useful when travelling in a new area where you are not familiar with the local stations.**

■ USB PLAYER

(1) USB playback



- ① The unit was equipped with a front USB jack and also a rear USB Jack.

With a USB device plugged in the front USB jack, it will be detected as front USB mode. And with a USB device plugged in the rear USB jack, it will be detected as rear USB. To get to a USB mode, press MODE (3) button momentarily or insert the USB device in front or rear USB jack.

※ If no mp3 or wma files in USB device, it will convert to the previous mode after display NO FILE.

(2) Track Up / Down button



- ① Press SEEK up (13) or TRACK down (14) to select the next or previous track. Press and hold the buttons to advance the track rapidly in the forward or backward direction.



(3) MP3 directory / File searching



- ① Button (2) is used to select a particular directory and file in the device. Turn button (2) right or left to display the available directories. Press button (2) momentarily when the desired directory is displayed, then turn button (2) right or left again to display the tracks in that directory. Press button (2) to begin playback when the desired file is displayed.


(4) Directory Up / Down button



- ① During MP3/WMA playback, simply press DIR- button (10) to select the previous directory (if available in the device); simply press DIR+ button (11) to select the next directory (if available in the device).

※ If the USB device does not contain directories, it would play MP3/WMA tracks at 10- file when you press DIR- button (10), and play MP3/WMA tracks at 10+ file when you press DIR+ (11) button.

(5) Track Scan Play (SCAN) button

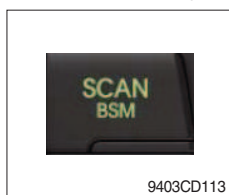

- SCAN playback : Simply press SCAN (12) button to play the first 10 seconds of each track.
- SCAN folder : Press and hold SCAN button for longer than 2 seconds to scan play the tracks in current folder.
- SCAN off : Simply press it again to cancel SCAN feature.

(6) Track Repeat Play (RPT) button



- REPEAT playback : Simply press RPT (8) button to play current track repeatedly.
- REPEAT folder : Press and hold RPT for longer than 2 seconds to repeat play the tracks in current folder.
- REPEAT off : Simply press it again to cancel REPEAT feature.

(7) Track Random Play (RDM) button



- RANDOM playback : Simply press RDM (9) button to play the tracks in the device in a random sequence.
- RANDOM folder : Press and hold RDM button for longer than 2 seconds to random play the tracks in current folder.
- RANDOM off : Simply press it again to cancel RANDOM feature.

(8) ID3 v2 (DISP)



- ① While a MP3 file is playing, press DISP button (6) to display ID3 information. Repeat push DISP button (6) to show directory name / file name and album name / performer / title.

※ **If the MP3 disc does not have any ID3 information, it will show NO ID3.**

* USB Information and Notice

- Playback FILE SYSTEM and condition allowance.
 - FAT, FAT12, FAT16 and FAT32 in the file system.
 - V1.1, V2.2 and V2.3 in the TAG (ID3) version.
 - Display up to 32 characters in the LCD display.
 - No support any of MULTI-CAED Reader.
 - No high speed playback but only playing with normal full speed.
- ※ **DRM files in the USB may cause malfunction to playback in the radio unit.**
- ※ **The temperature below -10 Celsius, the audio unit with USB hook up would be affected to play well.**

■ AUX OPERATION

It is possible to connect your portable media player to the audio system for playback of the audio tracks via the cab speakers.


To get the best results when connecting the portable media to the audio system, follow these steps :

- Use a 3.5 mm stereo plug cable to connect the media player headphone socket at each end as follows.
 - Adjust the portable media player to approximately 3/4 volume and start playback.
 - Press the MODE button (3) on the audio unit to change into AUX mode.
 - The volume and tone can now be adjusted on the audio unit to the desired level.
- ※ The audio quality of your media player and the audio tracks on it may not be of the same sound quality as the audio system is CD Player.
 - ※ If the sound of the media player is too low compared with the radio or CD, increase the volume of the player.
 - ※ If the sound of the media player is too loud and/or distorted, decrease the volume of the player.
 - ※ When in AUX mode, only the Volume, Bass, Treble, EQ and Mode functions of the audio unit can be used.

■ BLUETOOTH (if equipped)


1) Using a bluetooth wireless connection

- (1) Your audio unit supports bluetooth wireless technology. You can set up a wireless link with bluetooth cellular phone.
 - (2) Keep PAIRING the cellular phone with audio unit in a few minutes as the phone are being switched on well enough.
- ※ Since this audio unit is on standby to connect with your cellular phone via bluetooth wireless technology, using this audio unit without running the engine can result battery drainage.
 - ※ This audio unit phone call reception is on standby when ignition switch is set to ACC OFF or ON.
 - ※ The line-of-sight distance between this audio unit and your cellular phone must be 10 meters or less for sending and receiving voice and data via bluetooth wireless technology. However the transmission distance may become shorter than the estimated distance depending on the environment in use.
 - ※ Digital Noise & Echo suppression system provides the best sound clarity with little or no distortion (Echo & side tone will happen depending on cellular phone or service network).
 - ※ To ensure the quality of calling, you should select a proper bluetooth VR level. This audio unit has already set with the best bluetooth VR level.

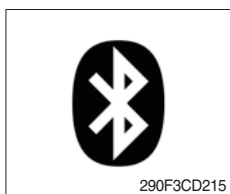

① Bluetooth icon

It will blink while establishing the bluetooth pairing.
It will light after a bluetooth device connected.

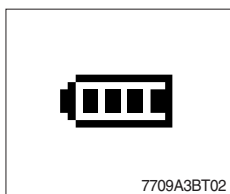

② Battery icon

It indicates the battery status of the connected bluetooth device.



③ Single strength icon

It indicates the signal strength of the connected bluetooth device.

2) Pairing in hands free modes



- (1) Press and hold CALL button (4) for 2 seconds until you hear beep sound, then appears PAIR STR on the display.
- (2) For the next procedure, go to cellular phone pairing mode.
- (3) If it is in pairing status with audio unit and cellular phone, PAIRING will show on the display.
- (4) If you want to exit pairing mode, press CALL END button (5) briefly while pairing, then it will show PAIR CLR on the display.
- (5) Bluetooth Icon and PAIR OK appear on the display when pairing is successful.

3) Cellular phone pairing mode

- (1) Browse your cellular phone menu and find the connectivity or bluetooth connection section.
 - (2) Select search for a new handsfree device function and allow the phone to find the mobile.
 - (3) HYUNDAI should appear on your cellular phone screen.
 - (4) Press connect menu among the handsfree option on your cellular phone.
 - (5) The cellular phone should prompt for a pin code. Insert the pin code 1234.
 - (6) The cellular phone should confirm that it has established a new paired connection.
 - (7) Close the menu. The pairing is now completed. It appears PAIR FAIL on the display for 3 seconds.
- ※ Each cellular phone type has distinct phone menu so you may need to refer to your manufactures instruction for the correct procedure on how to connect a new bluetooth device.
 - ※ Please retry to the pairing instruction if HYUNDAI does not appear on the cellular phone screen.
 - ※ Please select authorized, if there is authorized menu in the menu of bluetooth connection in your cellular phone.
 - ※ Once the bluetooth pairing is completed between your cellular pone and this audio unit, the both units will be automatically recognized on its paring and when you turn on the key in your car even though this audio unit is turned off.
 - ※ This audio unit can store up to 6 phones pairings. If the memory is full, the first stored paired phone will be deleted.
 - ※ The connecting priority will be given to the last connected cellular phone.
 - ※ If you want to change the connecting priority, try to connect this audio unit from the cellular phone.

4) Bluetooth connection and disconnection

- (1) When established bluetooth connection between this audio unit and the cellular phone, bluetooth icon on the display appears and then the display shows HF/AV CONN when handsfree & AV profile connected.



- (2) To disconnect bluetooth link
Press and hold CALL END button (4) for 2 seconds, it shows DIS CON and disappears bluetooth icon on the display.



- (3) To disconnect bluetooth link
Press CALL button (3) briefly, it blinks bluetooth icon on the display while bluetooth is being connected. If the connection is completed, it appears bluetooth icon on the display.

- ※ When your cellular phone battery is at low charge, the bluetooth connection may occasionally be lost. To maintain good connectivity ensure that your phone battery is adequately charged.
- ※ In case of failure of bluetooth pairing :
 - Delete item in paired list on your phone.
 - Reset both phone by power off/on and the audio unit by ACC off/on.
- ※ Connecting priority of handsfree profile is higher than headset profile.
- ※ The headset mode does not support caller ID, reject call and call Transfer.

5) Using the audio unit as a handsfree device

- (1) When the audio unit is ringing, it shows CALL and follows with the phone number ***** on the display.



- (2) To accept call
Press CALL button (4), it appears ANSWER CALL and follows TALKING on the display.
- (3) To end call
To end call, press CALL END button (5), it appears REJECT on the display.
- ※ If reject call is activated in your phone, then your cellular phone does not support reject call function.

6) Audio transfer between the audio unit and phone

The audio transfer function is for switching the call from the audio unit to the cellular phone for private conversation.



(1) Press CALL button (4) briefly during conversation, it appears CALL TRANS on the display. To switch back to the audio unit, press button (4) briefly during private conversation, then it appears CALL TRANS on the display again.

※ This function will be a cause of disconnection of bluetooth link in some nokia phones, but you do not worry just press button (4) during private conversation, then switch back to the audio unit automatically.

※ The quality of calling between cellular phone and audio unit is better than calling between one audio unit and another one.

7) Last call number dialing



(1) Press CALL button (4) briefly, it appears CALL TO, then simply press CALL button once again, it would make the last call with phone number display on LCD.

If Reject call is activated in your phone, then your cellular phone does not support Reject Call function.

※ If you are using SAMSUNG phone, then you may need to press once more send button. First press button shows phone contact list in your phone, then second press make the last call.

8) To make a call by cellular phone

The audio transfer function is for switching the call from the audio unit to the cellular phone for private conversation.

(1) The audio unit activated automatically when you make a call by cellular phone.

(2) When you make a call processing by cellular phone, it shows CALLING on the display.

(3) When you receive a call, the phone number ***** appears on the display.

9) Using the audio unit as bluetooth music

The audio unit supports A2DP (Audio Advanced Distribution Profile) and AVRCP (Audio Video Remote Control Profile), and both profiles are available to listen music at the audio unit via cellular phone which is supporting the two profiles above.

(1) To play music, search the menu on your cellular phone as below :

i.e : Menu → File manager → Music → Option → Play via bluetooth.

It appears BT MP3 on the display.

(2) During BT MP3 playing, you could select the previous or next track by pressing SEEK up or TRACK down button on audio unit or operate via your cellular phone.

(3) To stop music, press button (5) briefly and it will automatically switch into the previous mode.

(4) To resume music playing, press the play button on your cellular phone.

※ This function maybe different depends on cellular phone. Please follow the cellular phone menu. Some kinds of phone need to pair once more for bluetooth MP3 connection.

※ This function will be caused to disconnect A2DP, AVRCP depends on cellular phone.

※ Information about songs (e.g.: the elapsed playing time, song title, song index, etc.) cannot be displayed on this audio unit.

■ RESET AND PRECAUTIONS

1) Reset function

Interfere noise or abnormal compressed files in the MP3 disc or USB instrument may cause extraordinary operation (or unit frozen/locking up). It's strongly recommended to use appropriate USB storage not cause any malfunction to the audio unit. In the unlikely event that the player fails to operate correctly, try out to reset unit by any of following two methods.

- (1) press and hold   simultaneously for about 5 seconds. (without Bluetooth)

Press and hold   simultaneously for about 5 seconds. (with Bluetooth)

- (2) Take out the fuse for the audio system in the vehicle once and then plug again.

※ It will be necessary to re-enter the radio preset memories as these will have been erased when the microprocessor was reset.

After resetting the player, ensure all functions are operation correctly.

2) Precautions

When the inside of the car is very cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible.

If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.

- (1) Operation voltage : 9~32 volts DC, negative
(2) Output power : 40 watts maximum (20 watts x 2 channels)
(3) Tuning range

Area	Band	Frequency range	Step
USA	FM	87.5~107.9 MHZ	200K
	AM	530~1710 KHZ	10K
EUROPE	FM	87.5~108.0 MHZ	50K
	AM	522~1620 KHZ	9K
ASIA	FM	87.5~108.0 MHZ	100K
	AM	531~1602 KHZ	9K
LATIN	FM	87.5~107.9 MHZ	100K
	AM	530~1710 KHZ	10K

● AREA Selection :

- To select an area, press and hold related buttons at FM1 band for about 3 seconds.
- USA Area: Press and hold mode + 1DIS buttons for 3 seconds
- EUROPE Area: Press and hold mode + 2 buttons for 3 seconds
- ASIA Area: Press and hold mode + 3RPT buttons for 3 seconds
- LATIN Area: Press and hold mode + 4RDM buttons for 3 seconds.

- (4) USB version : USB 1.1


- (5) Bluetooth version : V2.1

- (6) Bluetooth supported profile :

- A2DP : Advanced Audio Distribution Profile
- AVRCP : Audio/Video Remote Control Profile
- HFP : Hands-Free Profile

4) SEAT (standard)

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

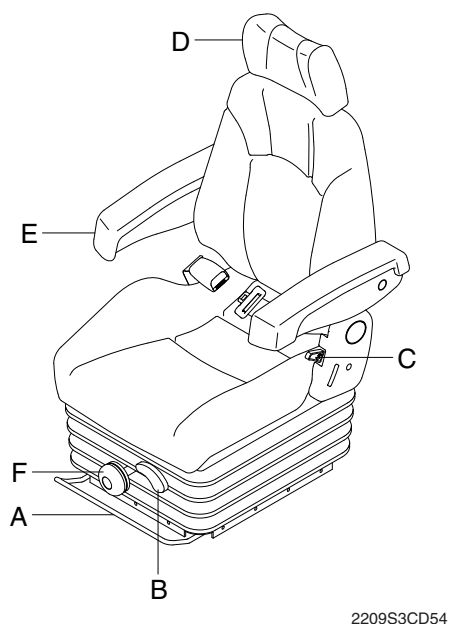

(1) Horizontal adjustment (A)

- ① Pull lever A to adjust seat forward or backward.
- ② The seat can be moved forward and backward over 169 mm (6.7") in 13 steps.

(2) Tilt adjustment (B)

Pull or push lever B to adjust seat cushion upward or downward.

(3) Adjustable Backrest

Pull lever C to adjust seat backrest.

(4) Arm rest adjustment (E)

This can be adjusted by turning the knob E.

(5) Head rest adjustment (D)

This is adjustable vertically to fit operator's requirements, over a 75 mm (3.0") height range and 79.5° angle.

(6) Weight adjustment (F)



Adjust the handle to the operator's weight (50~130 kg).

▲ Always check the condition of the seat belt and mounting hardware before operating the machine.

▲ Replace the seat belt at least once every three years, regardless of appearance.

5) SEAT (heated, option)

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

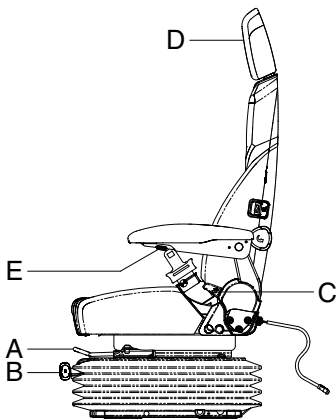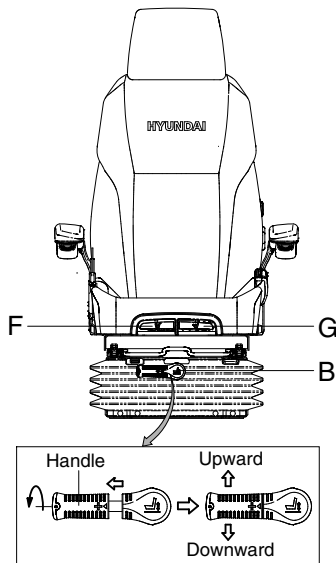

21093CD55

(1) Forward/Backward adjustment (A)

- ① Pull lever A to adjust seat forward or backward.
- ② The seat can be moved forward and backward over 140 mm (5.5") in 13 steps.

(2) Height/weight adjustment (B)

- ① Turn the handle to adjust seat upward or downward
 - Turn to clockwise, the seat is moved to upward and the weight is increased.
 - If it is turned to counterclockwise, the seat is moved to downward and the weight is decreased.

② Method of changing direction (up/down)

- First, pull the handle to outside.
- Second, rotate 180° and release the handle.

(3) Reclining adjustment (C)

Pull lever C to adjust seat back rest.

(4) Arm rest adjustment (E)

This can be adjusted by pushing the button E to right and left.

(5) Head rest adjustment (D)

This is adjustable vertically to fit operator's requirements over 60 mm (2.4").

(6) Seat cushion tilt adjustment (F)


Pull lever F to adjust seat cushion tilting angle.

(7) Seat cushion length adjustment (G)

- ▲ Pull lever G to adjust seat cushion forward or backward.


- ▲ Always check the condition of the seat belt and mounting hardware before operating the machine. Replace the seat belt at least once every three years, regardless of appearance.

8) SERVICE METER

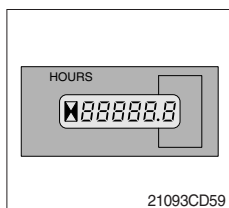


- (1) This meter shows the total operation hours of the machine.
- (2) Always ensure the operating condition of the meter during the machine operation. Inspect and service the machine based on hours as indicated in chapter 6, maintenance.

9) RS232 SERVICE SOCKET

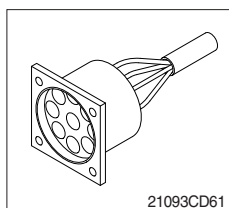


- (1) MCU communicates the machine data with Laptop computer through RS232 service socket.

10) UPPER WINDSHIELD

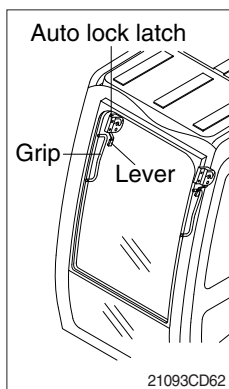

- (1) Perform the following procedure in order to open the upper windshield.
 - ① Pull both levers with hold both grips that are located at the top of the windshield frame and push the windshield upward.
 - ② Hold both grips and back into the lock position until auto lock latch is engaged, then release the lever locked position.

▲ When working, without having locked the windshield by the auto lock (by pushing the windshield to the rear until it's completely fixed), please be careful as it can cause personal injury if the windshield is not fixed or falls off.

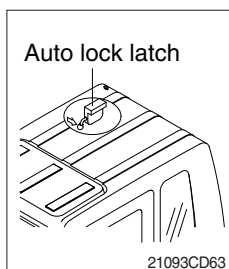

- (2) Perform the following procedure in order to close the upper windshield.
 - ① Pull the lever of the auto lock latch in order to release the auto lock latch.
 - ② Reverse above step ① and ② in order to close the upper windshield.

1. SUGGESTION FOR NEW MACHINE

- 1) It takes about 100 operation hours to enhance its designed performance.
- 2) Operate according to below three steps and avoid excessive operation for the initial 100 hours.

Service meter	Load
Until 10 hours	About 60 %
Until 100 hours	About 80 %
After 100 hours	100 %

※ **Excessive operation may deteriorate the potential performance of machine and shorten lifetime of the machine.**


3) Be careful during the initial 100 hours operation

- (1) Check daily for the level and leakage of coolant, engine oil, hydraulic oil and fuel.
- (2) Check regularly the lubrication and fill grease daily all lubrication points.
- (3) Tighten bolts.
- (4) Warm up the machine fully before operation.
- (5) Check the gauges occasionally during the operation.
- (6) Check if the machine is operating normally during operation.

4) Replace followings after initial operation hours.

Checking items	Hours
Engine oil	250
Engine oil filter element	
Fuel filter	
Prefilter	
Transmission oil	
Hydraulic oil return filter element	
Hydraulic oil tank drain filter cartridge	
Line filter element	
Swing reduction gear oil	500
Axle oil	


Avoid excessive operation for initial 100 hours

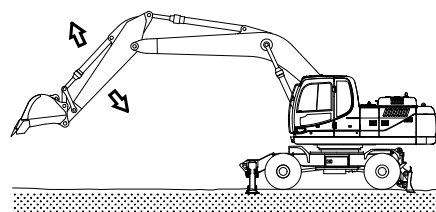

20W94OP01

2. CHECK BEFORE STARTING THE ENGINE


- 1) Look around the machine and under the machine to check for loosen nut or bolts, collection of dirt, or leakage of oil, fuel or coolant and check the condition of the work equipment and hydraulic system. Check also loosen wiring, and collection of dust at places which reach high temperature.
※ **Refer to the daily check on the chapter 6, maintenance.**
- 2) After checking air pressure of tire, make sure that around the machine is clear.
- 3) Adjust seat to fit the contours of the operator's body for the pleasant operation.
- 4) Adjust the rear view mirror.

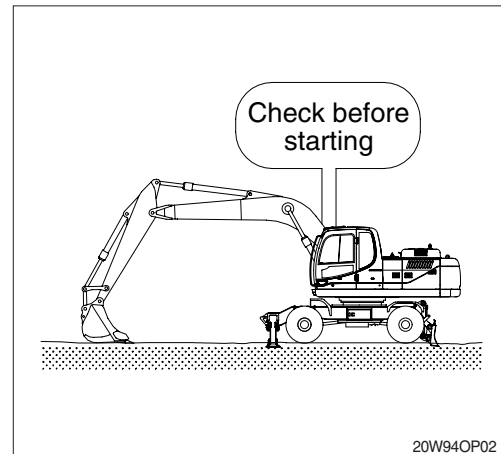

3. STARTING AND STOP THE ENGINE (CLUSTER TYPE 1)


1) CHECK INDICATOR LIGHTS

- (1) Check if all the operating levers are in the neutral position.
- (2) Turn the starting switch to the ON position.
Buzzer sounding for 4 seconds with HYUNDAI logo on cluster.
 - ※ If the ESL mode is set to the enable, enter the password to start engine.
 - ※ If the password has failed 5 times, please wait 30 minutes before re-attempting to enter the password.
 - ※ Refer to page 3-17 for ESL mode.
- (3) After initialization of cluster, the operating screen is displayed on LCD (1).
Also, self-diagnostic function is carried out.

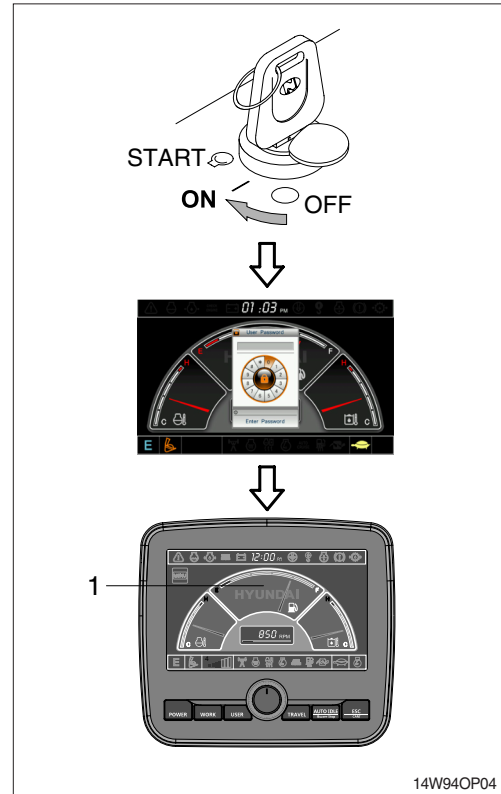

2) STARTING ENGINE IN NORMAL TEMPERATURE


- ※ Sound the horn to warn the surroundings after checking if personnel or obstacles are in the area.
- (1) Turn the accel dial switch to low idle position.
 - (2) Turn the starting switch to START position to start the engine.
 - ※ Do not hold the starting switch in the START position for longer than 20 seconds.
The start system may be seriously damaged.
 - ※ If the engine does not start, allow the starter to cool for about 2 minutes before re-attempting to start the engine again.
 - (3) Release the starting switch instantly after the engine starts to avoid possible damage to the starting motor.

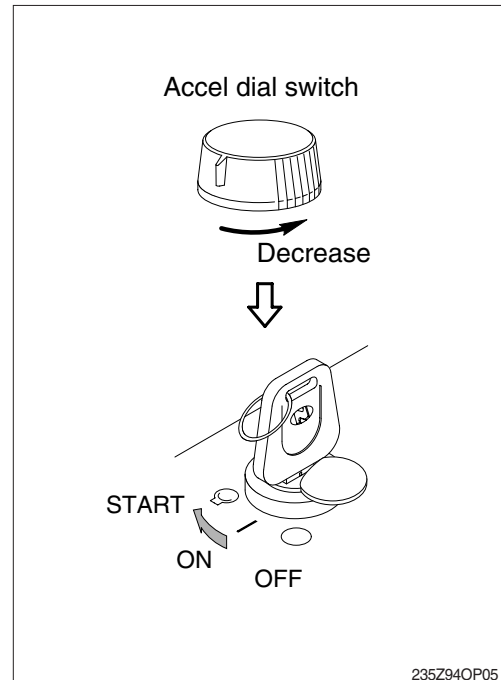

3) STARTING ENGINE IN COLD WEATHER

- ※ Sound horn to warn surroundings after checking if there are obstacles in the area.
- ※ Replace the engine oil and fuel referring to recommended oils at page 2-14.
- ※ Fill the anti-freeze solution to the coolant as required.
- ※ If you turn ON the starting switch, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature.


- (1) Check if all the levers are in the neutral position.
 - (2) Turn the accel dial switch to low idle position.
 - (3) Turn the starting switch to the ON position, and wait 1~2 minutes. More time may take according to ambient temperature.
 - (4) Wait for five minutes to warm up the engine after the preheating pilot lamp off, and then turn the starting switch to the START position to start the engine.
- ※ If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (5) Release the starting switch immediately after starting engine.
 - (6) If the temperature of the coolant is lower than 30°C the warming up automatically starts.
- ※ Do not operate the working devices, or convert the operation mode into other mode during the warming up.

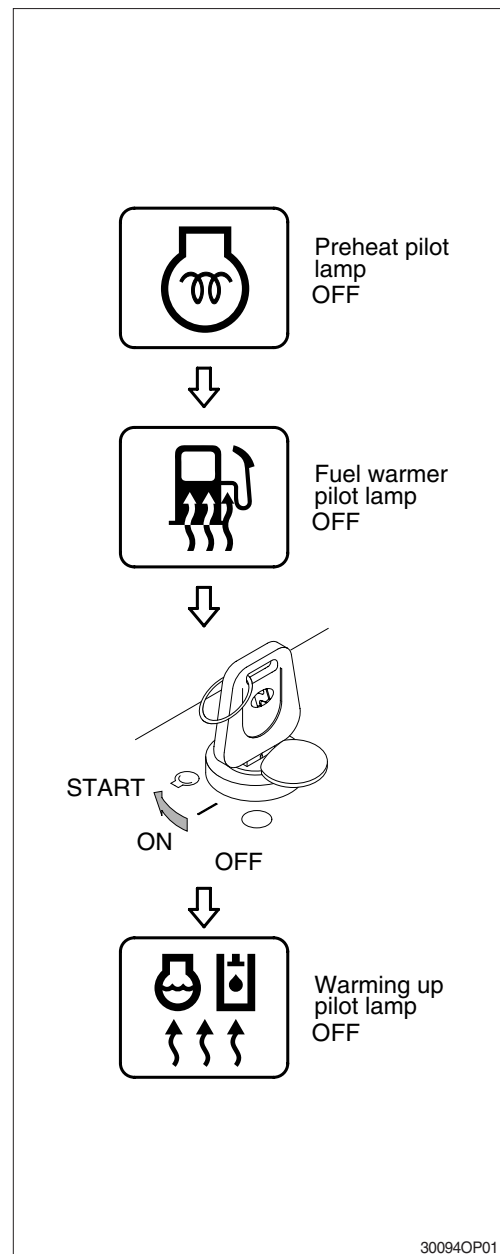

4) INSPECTION AFTER ENGINE START

Inspect and confirm the following after engine starts.

- (1) Is the level gauge of hydraulic oil tank in the normal level?
 - (2) Are there leakages of oil or water?
 - (3) Are all the warning lamps turned OFF (1-11)?
 - (4) Are the indicator of water temperature gauge (12) and hydraulic temperature gauge (13) in the operating range?
 - (5) Are the engine sound and the color of exhaust gas normal?
 - (6) Are the sound and vibration normal?
- ※ **Do not increase engine speed quickly after starting, it can damage engine or turbocharger.**
 - ※ **If there are problems in the cluster, stop the engine immediately and correct problems as required.**

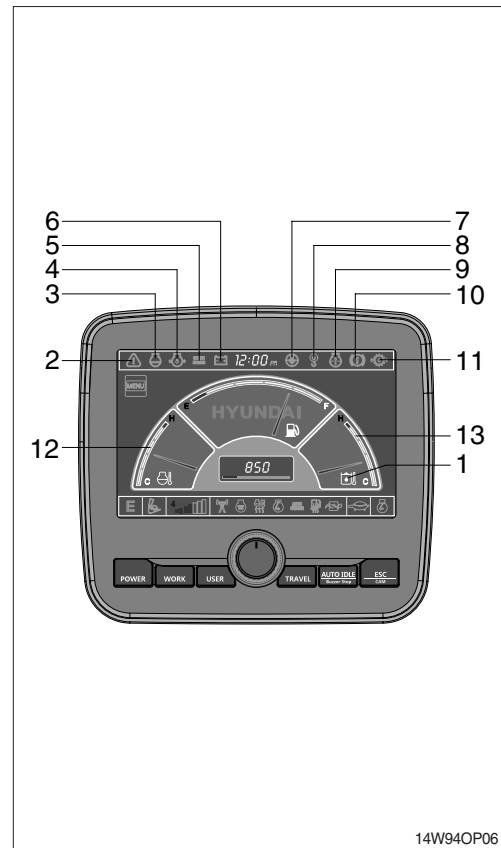


14W94OP06

5) WARMING-UP OPERATION

- ※ **The most suitable temperature for the hydraulic oil is about 50°C (122°F).**
It can cause serious trouble in the hydraulic system by sudden operation when the hydraulic oil temperature is below 25°C (77°F).
Then temperature must be raised to at least 25°C (77°F) before starting work.

- (1) Run the engine at low idle speed for 5 minutes.
 - (2) Speed up the engine by accel dial and run the engine at mid-range speed.
 - (3) Operate bucket lever for 5 minutes.
- ※ **Do not operate anything except bucket lever.**
 - (4) Run the engine at the high speed and operate the bucket lever and arm lever for 5-10 minutes.
 - ※ **Operate only the bucket lever and arm lever.**
 - (5) This warming-up operation will be completed by operation of all cylinders several times, and operation of swing and traveling.
 - ※ **Increase the time for warming-up during winter.**

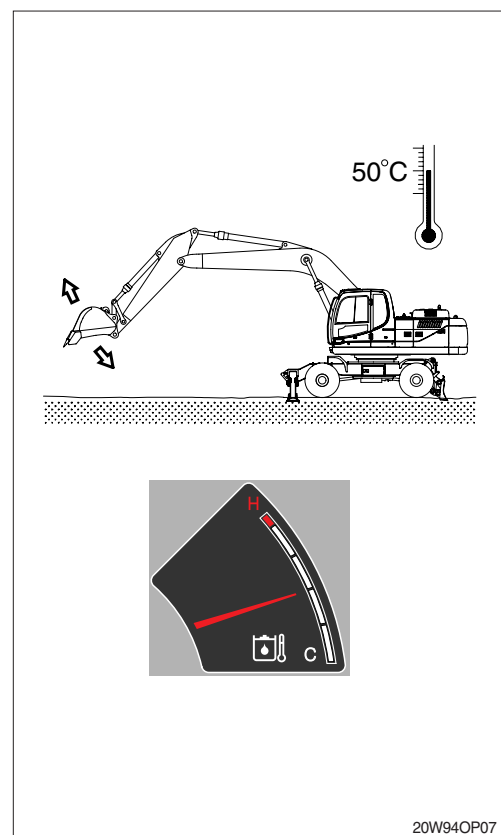


20W94OP07

6) TO STOP THE ENGINE

- ※ If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.
- ※ In particular, if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.


- (1) Place the FNR lever in the neutral.
- (2) Down the bucket, outrigger and dozer blade on the ground then put all the levers in the neutral position.
- (3) Put the select switch 2 in the parking position.
- (4) Run the engine at low idling speed for about 5 minutes.
- (5) Return the key of starting switch to the OFF position.
- (6) Remove the key to prevent other people using the machine and LOCK safety lever.
- (7) Lock the cab door.

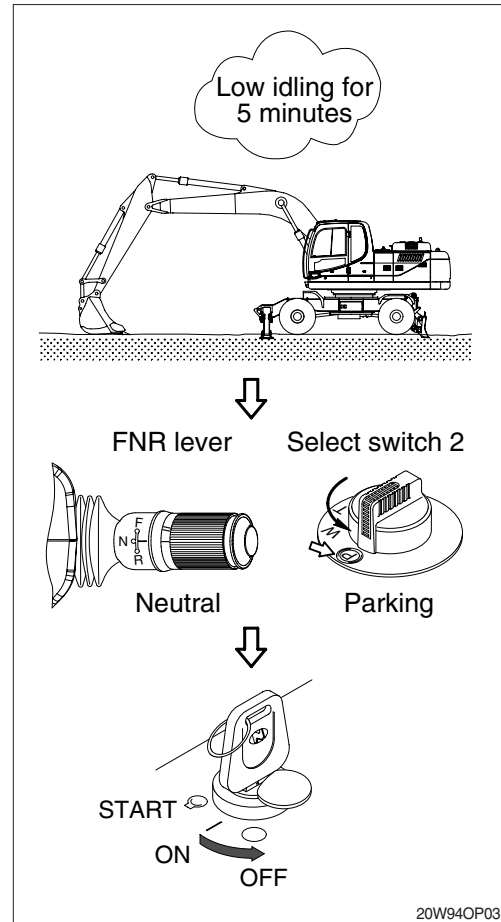

■ STARTING AND STOP THE ENGINE (CLUSTER TYPE 2)

1) CHECK INDICATOR LIGHTS


- (1) Check if all the operating lever is on the neutral position.
- (2) Turn the starting switch to the ON position, and check following.
 - ① If all the lamps light ON and buzzer sounding for 2 seconds.
 - ② After lamp check 「1.00」, the version of cluster program, is displayed on 「LCD (3)」 for 5 seconds and the cluster returns to default.
 - ③ Only below lamps will light ON and all the other lights will turn OFF after 2 seconds.
 - Engine oil pressure warning lamp (1)
 - Battery charging warning lamp (2)

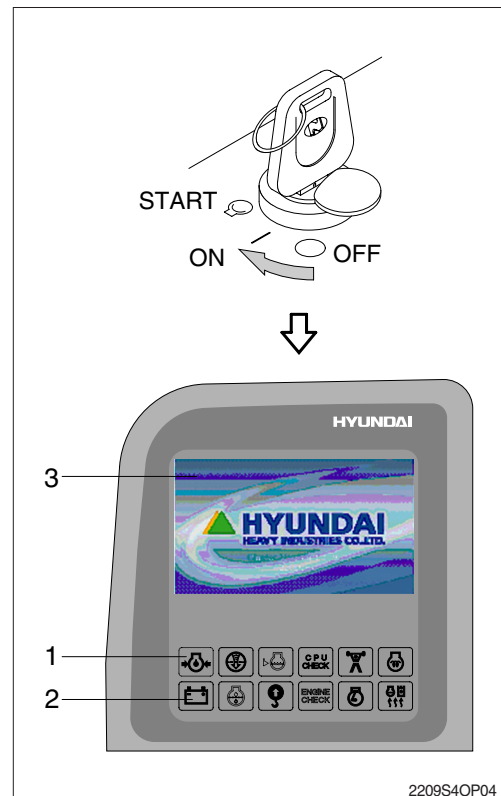

2) STARTING ENGINE IN NORMAL TEMPERATURE

※ Sound the horn to warn the surroundings after checking if personnel or obstacles are in the area.


- (1) Turn the starting switch to START position to start the engine.
 - ※ If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (2) Release the starting switch instantly after the engine starts to avoid possible damage to the starting motor.

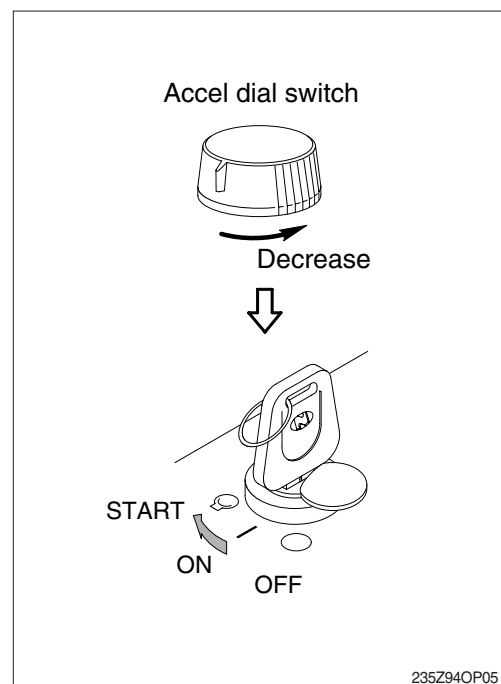

3) STARTING ENGINE IN COLD WEATHER

- ※ Sound horn to warn surroundings after checking if there are obstacles in the area.
- ※ Replace the engine oil and fuel referring to recommended oils at page 2-14.
- ※ Fill the anti-freeze solution to the coolant as required.
- ※ If you turn ON the starting switch, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature.


- (1) Check if all the levers are in the neutral position.
 - (2) Turn the accel dial switch to low idle position.
 - (3) Turn the starting switch to the ON position, and wait 1~2 minutes. More time may take according to ambient temperature.
 - (4) Wait for five minutes to warm up the engine after the preheat pilot lamp OFF, and then turn the starting switch to the START position to start the engine.
- ※ If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (5) Release the starting switch immediately after starting engine.
 - (6) If the temperature of the coolant is lower than 30°C the warming up automatically starts.
- ※ Do not operate the working devices, or convert the operation mode into other mode during the warming up.

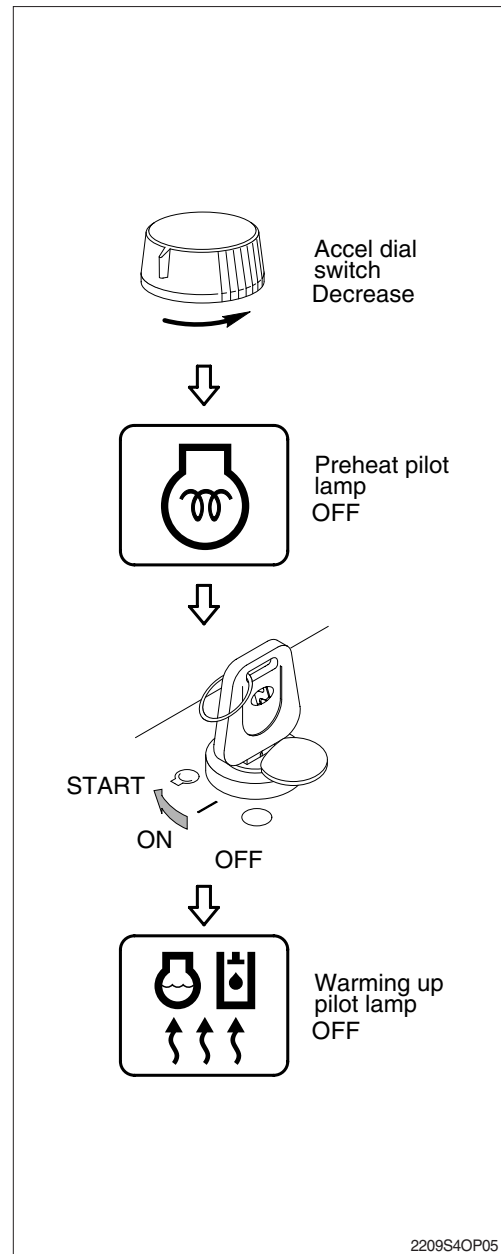

4) INSPECTION AFTER ENGINE START

Inspect and confirm the following after engine starts.


- (1) Is the level gauge of hydraulic oil tank in the normal level?
 - (2) Are there leakages of oil or water?
 - (3) Are all the warning lamps turned OFF (1-6)?
 - (4) Are the indicator of water temperature gauge (7) and hydraulic temperature gauge (8) in the green zone?
 - (5) Are the engine sound and the color of exhaust gas normal?
 - (6) Are the sound and vibration normal?
- ※ **Do not increase engine speed quickly after starting, it can damage engine or turbocharger.**
 - ※ **If there are problems in the control panel, stop the engine immediately and correct problem as required.**

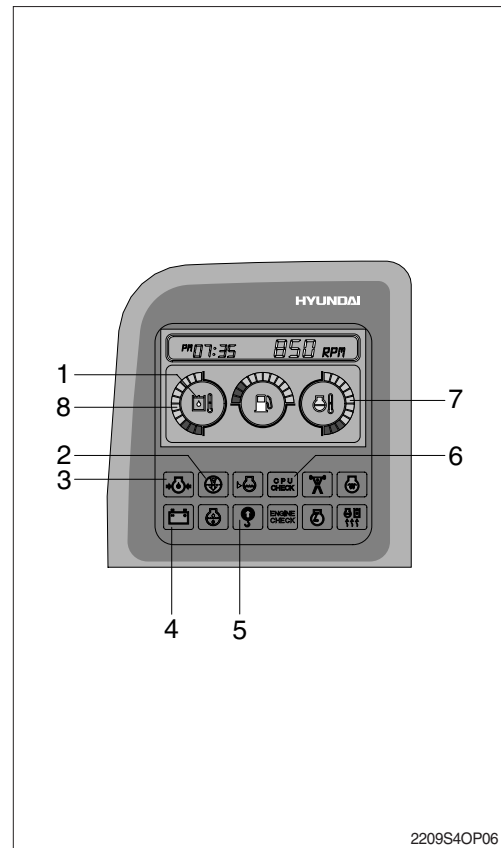

5) WARMING-UP OPERATION

- ※ The most suitable temperature for the hydraulic oil is about 50°C (122°F). It can cause serious trouble in the hydraulic system by sudden operation when the hydraulic oil temperature is below 25°C (77°F). Then temperature must be raised to at least 25°C (77°F) before starting work.

- (1) Run the engine at low idling for 5 minutes.
 - (2) Speed up the idling and run the engine at mid-range speed.
 - (3) Operate bucket lever for 5 minutes.
- ※ **Do not operate anything except bucket lever.**
- (4) Run the engine at the high speed and operate the bucket lever and arm lever for 5-10 minutes.
- ※ **Operate only the bucket lever and arm lever.**
- (5) This warming-up operation will be completed by operation of all cylinders several times, and operation of swing and traveling.

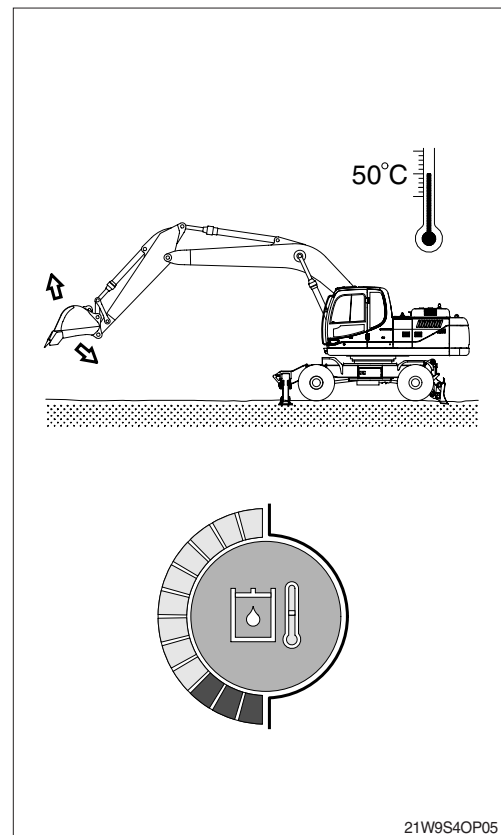

4. MODE SELECTION SYSTEM (CLUSTER TYPE 1)

1) STRUCTURE OF MECHATRONICS SYSTEM

CAPO, Computer Aided Power Optimization system, is the name of mode selection system developed by Hyundai.

※ Please refer to chapter 3, cluster for below modes setting.

(1) Power mode

Power mode designed for various work loads supports high performance and reduces fuel consumption.

- P mode : Heavy duty power
- S mode : Standard power
- E mode : Economy power

(2) Work mode

One of the two work modes can be selected for the optimal work condition of the machine operation.

① General work mode (bucket)

When key switch is turned ON, this mode is selected automatically.

② Work tool mode (breaker, crusher)

It controls the pump flow and system pressure for the optimal operation of breaker or crusher.

(3) User mode

① User mode is useful for setting the user preferable power quickly.

(engine speed, power shift and idle speed)

② There are two methods for use of user mode.

a. In operation screen



User mode switch is used to memorize the current machine operating status and activate the memorized user mode.

Refer to page 3-10.

b. In menu

Engine high idle rpm, auto idle rpm and pump torque (power shift) can be modulated and memorized separately in menu status.

- Each memory mode has a initial set which are mid-range of max engine speed, power shift and auto idle speed.

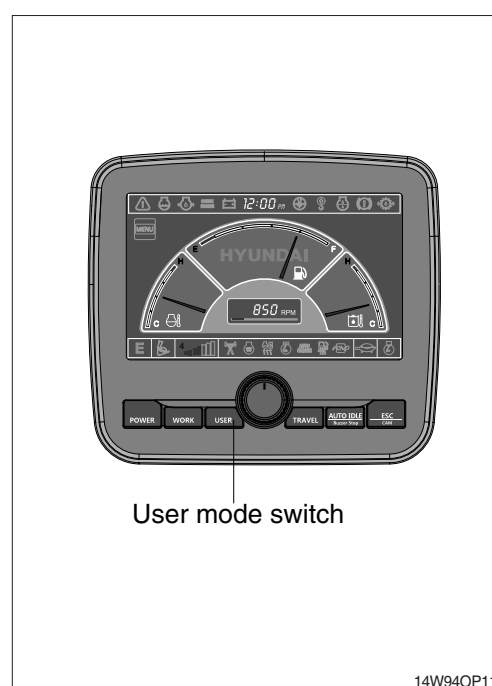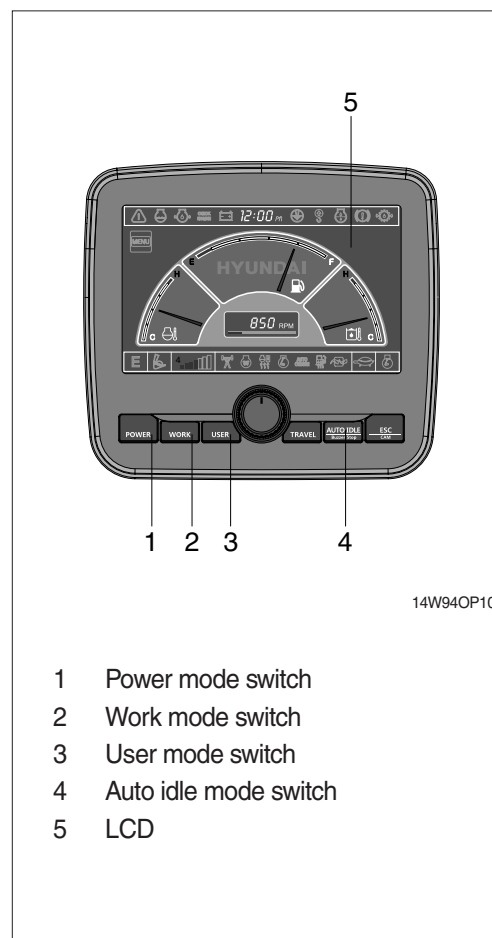


- High idle rpm, auto idle rpm and EPPR pressure can be adjusted and memorized in the U-mode.

※ Refer to the page 3-12 for setting the user mode (available on U mode only).

- LCD segment vs parameter setting

Step (■)	Engine speed (rpm)	Idle speed (rpm)	Power shift (bar)
1	1500	1000 (low idle)	0
2	1600	1050	3
3	1700	1100	6
4	1800	1150 (decel rpm)	9
5	1850	1200	12
6	1900	1250	16
7	1950	1300	20
8	2000	1350	26
9	2050	1400	32
10	2100	1450	38

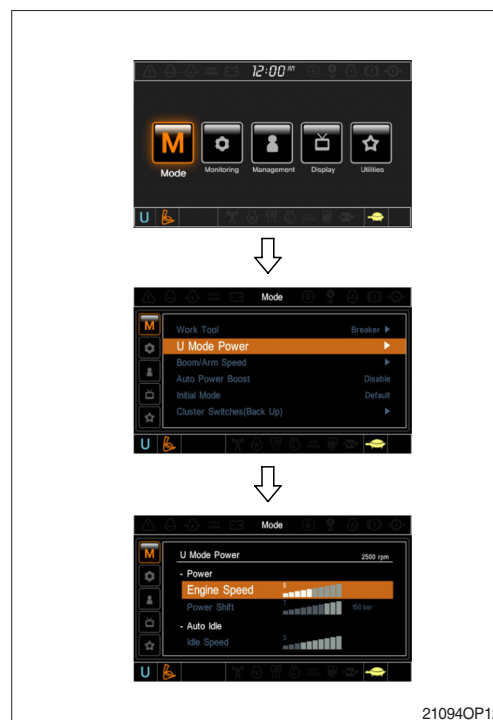

(4) Auto idle mode

Pilot lamp ON : Auto idle function is activated.

Pilot lamp OFF : Auto idle function is canceled.

(5) Monitoring system

Information of machine performance as monitored by the MCU can be displayed on the LCD. Refer to the page 3-11.

(6) Self diagnostic system


MCU (Machine Control Unit)

The MCU diagnoses machine status and problems and displays fault code in the cluster (fault code detected by MCU is composed of HCESPN and FMI).

※ Refer to the page 3-11 for LCD display.

(7) Anti-restart system

The system protects the starter from inadvertent restarting after the engine is already operational.

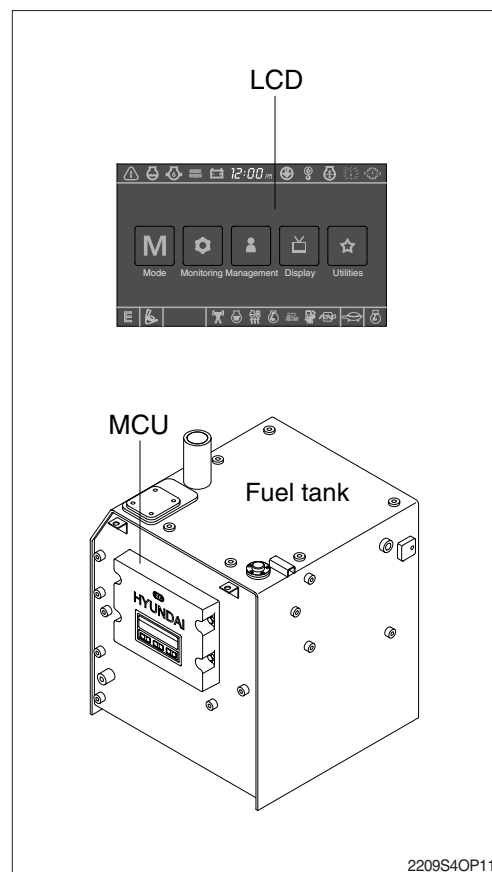

2) HOW TO OPERATE MODE SELECTION SYSTEM


(1) When start key switch is turned ON

- ① When start key switch is turned on, the cluster turns on and buzzer sounds for 4 seconds. And then main information as gauges and engine speed are displayed on LCD.
- ② Initial default mode settings are displayed in the cluster.

Mode		Status
Power mode	E	ON
Work mode		ON
Travel mode	Low ()	ON
Auto idle		ON


※ These setting can be changed at U mode.

- ③ Self-diagnostic function can be carried out from this point.

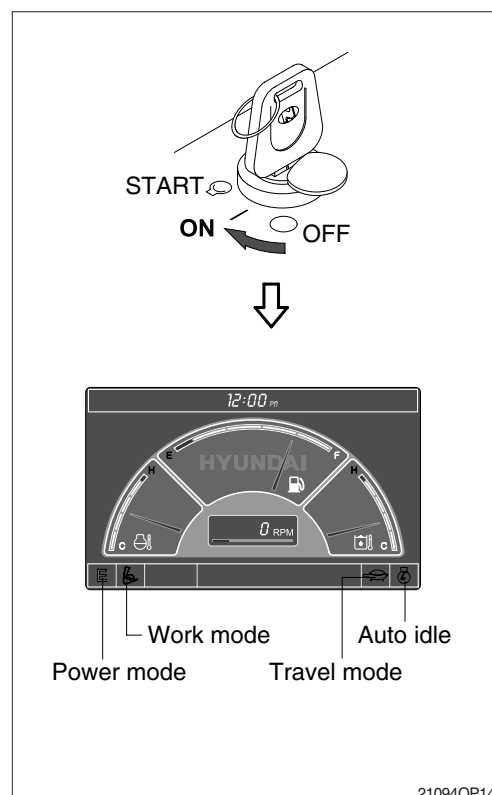

(2) After engine start

- ① When the engine is started, rpm display indicates low idle, 1000 ± 100 rpm.
- ② If coolant temperature is below 30°C , the warming up pilot lamp lights ON and after 4 seconds the engine speed increases to 1150 ± 100 rpm automatically to warm up the machine.
 - After 2-3 minutes, you can select any mode depending on job requirement.

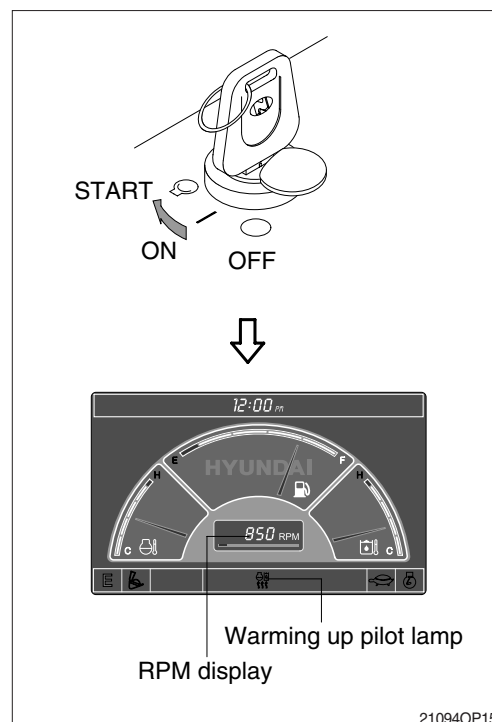


3) SELECTION OF POWER MODE

(1) E mode

The accel dial is set 10 and the auto idle mode is canceled.

Engine rpm	Effect
1700 ± 50	Variable power control in proportion to lever stroke (improvement in fuel efficiency) ※ Same power as S mode in full lever operation.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

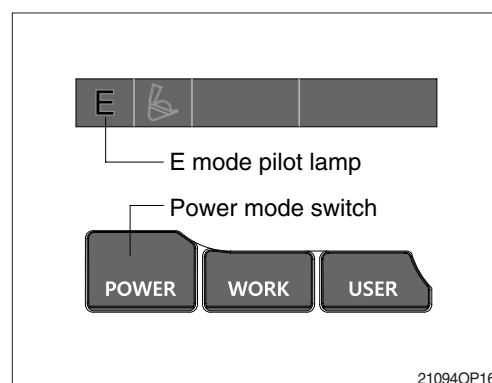


(2) S mode

The accel dial is set 10 and the auto idle mode is canceled.

Engine rpm	Effect
1800 ± 50	Standard power

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

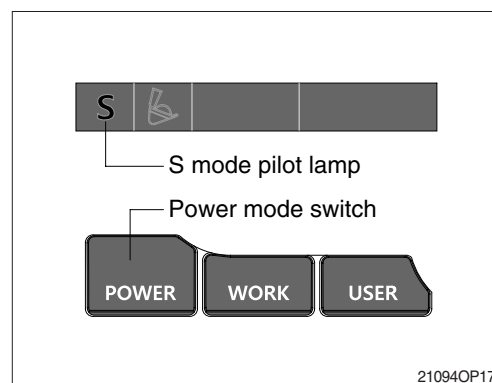


(3) P mode

The accel dial is set 10 and the auto idle mode is canceled.

Engine rpm	Effect
1900 \pm 50	Approximately 120 % of power and speed available than S mode.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

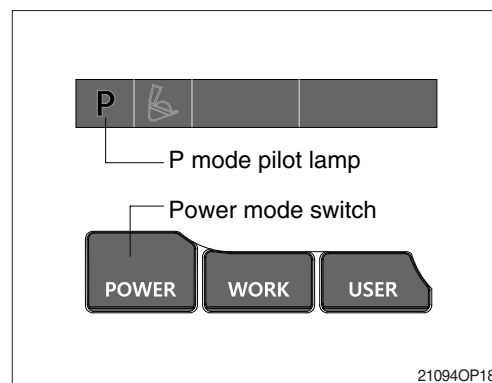

■ MODE SELECTION SYSTEM (CLUSTER TYPE 2)

1) STRUCTURE OF CAPO SYSTEM

CAPO, Computer Aided Power Optimization system, is the name of mode selection system developed by Hyundai.

(1) Work mode

2 work modes can be selected for the optimal work speed of the machine operation.

① Heavy duty work mode

The boom priority solenoid is activated to make the boom operation speed faster.

② General work mode

When key switch is turned ON, this mode is selected automatically and swing operation speed is faster than heavy duty work mode.

(2) Power mode

Power mode designed for various work loads maintains high performance and reduces fuel consumption.


- H mode : High power
- S mode : Standard power

(3) User mode


- M : Maximum power
- U : You can change the engine and pump power and memorize it for your preference

How to modulate the memory set

- ① Each memory mode has a initial set which are mid-range of max engine speed, auto decel rpm, and EPPR valve input current.

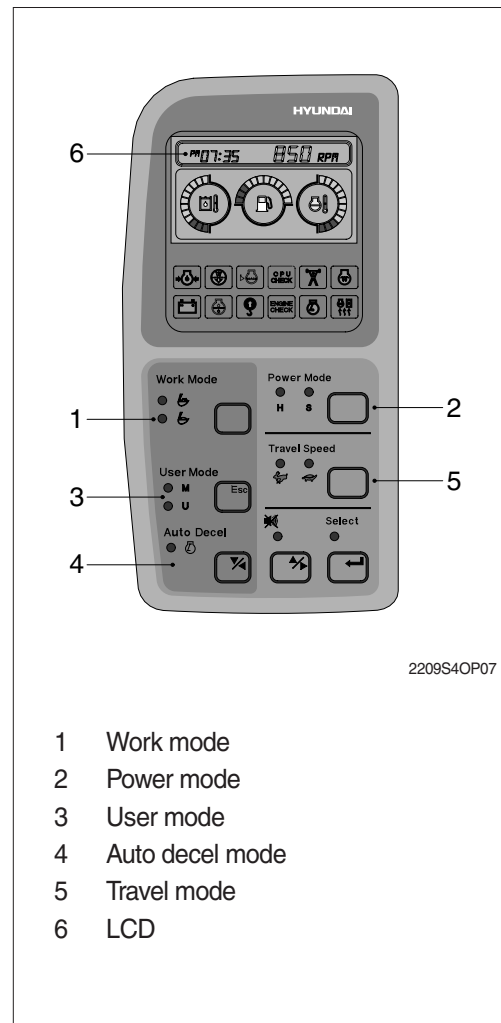

- 1 Work mode
- 2 Power mode
- 3 User mode
- 4 Auto decel mode
- 5 Travel mode
- 6 LCD

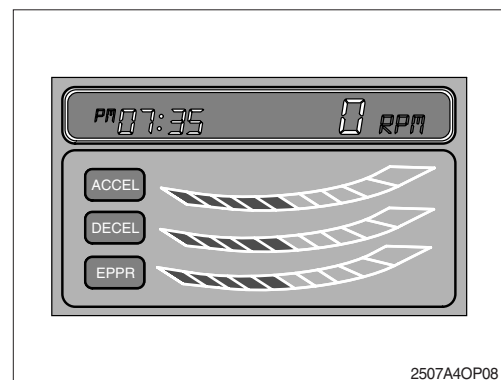


- ② High idle rpm, auto decel rpm, EPPR pressure can be modulated and memorized separately in the U-mode.

※ Refer to the page 3-29 for set of user mode.

· LCD segment vs parameter setting

Step ()	Engine speed (rpm)	Idle speed (rpm)	EPPR (mA)
1	1500	1000 (low idle)	150
2	1600	1050	200
3	1700	1100	250
4	1800	1150 (decel rpm)	300
5	1850	1200	350
6	1900	1250	400
7	1950	1300	450
8	2000	1350	500
9	2050	1400	550
10	2100	1450	600

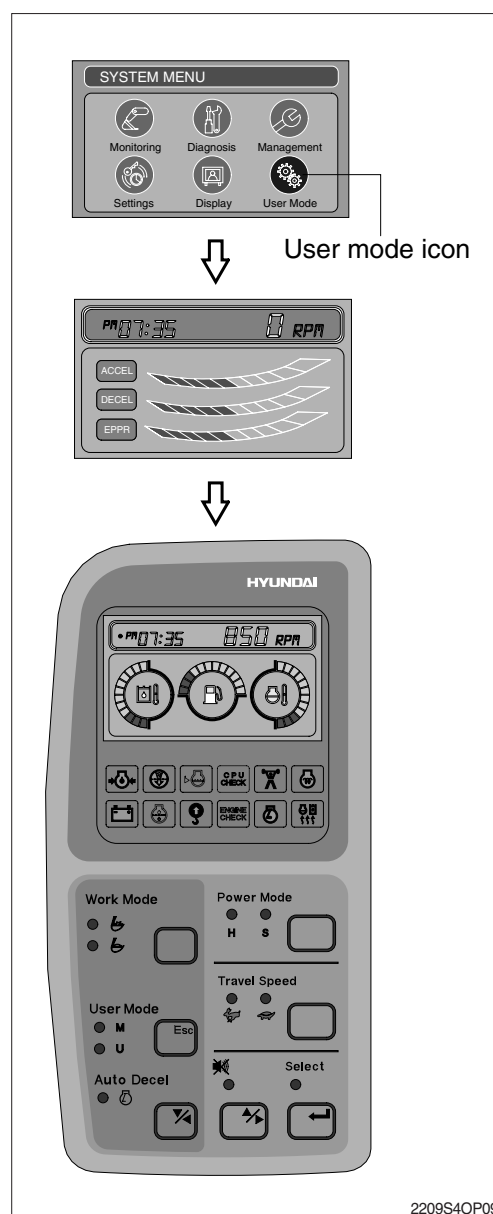


2209S4OP09

(4) Auto decel mode

Engine quick deceleration.

(5) Travel mode

 : Low speed traveling.

 : High speed traveling.

(6) Monitoring system

Information of machine performance as monitored by the MCU can be displayed on the **LCD**. Refer to the page 3-26.

(7) Self diagnostic system

① MCU (Machine Control Unit)


The MCU diagnoses problems in the CAPO system caused by electric parts' malfunction and by open or short circuit, which are displayed on the **LCD** as error codes (2 digit).

※ Consult hyundai or huyndai dealer for details.

※ Refer to the page 3-26 for LCD display.

(8) Anti-restart system

The system protects the starter from inadvertent restarting after the engine is already operational.

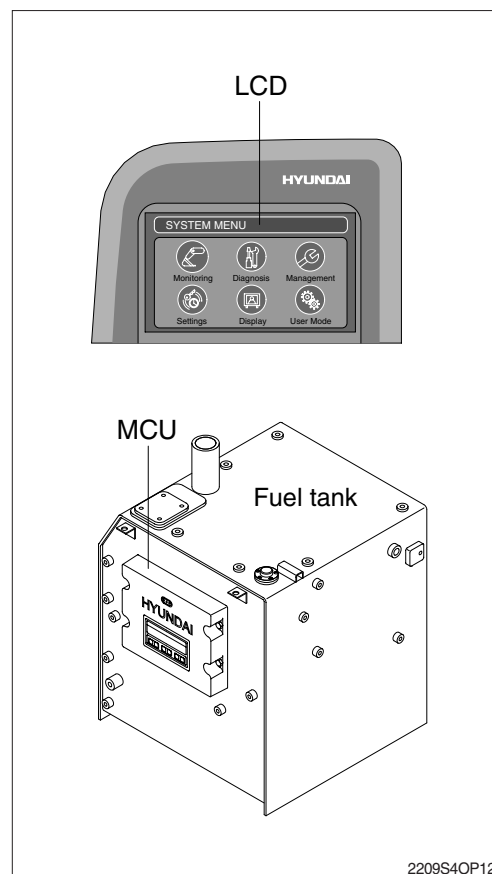

2209S4OP12

2) HOW TO OPERATE MODE SELECTION SYSTEM

(1) When start key switch is turned ON

- ① When start key is turned ON, all illumination lamps are ON and all lamps are OFF automatically after 5 seconds. But a battery charging warning lamp and an engine oil pressure warning lamp keep turned ON until engine starting.
- ② After lamp check 「1.00」, the version of cluster program, is displayed on **LCD** for 2 seconds.
- ③ After the version of program is displayed, the cluster returns to default. Exactly engine rpm, battery charging warning lamp and engine oil pressure warning lamp are turned ON and S mode, auto decel, low travel speed (turtle mark) are displayed.
- ④ In default condition self-diagnostic function including trouble detecting of electric system can be carried out.



2209S4OP13

(2) After engine start

- ① When the engine is started, three lamps are ON as below.

Mode		Status
Work mode		ON
Power mode	S	ON
Travel mode	Low (ON
Auto decel mode		ON

- In this condition, tachometer indicates low idle, 1000 ± 100 rpm.
- If coolant temperature is below 30°C , after 10 seconds the engine speed increases to 1150 ± 100 rpm automatically to warm up the machine.
- After 2-3 minutes, you can select any mode depending on job requirement.

- ② Self-diagnostic function can be carried out the same as start key is ON.

※ Refer to the page 3-27 for details.




3) SELECTION OF POWER MODE

(1) S mode

When the accel dial is at setting 10 and auto decel mode is cancelled and S mode is selected.

Engine rpm	Effect
1700 ± 50	Same power as non mode type machine.

- ※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

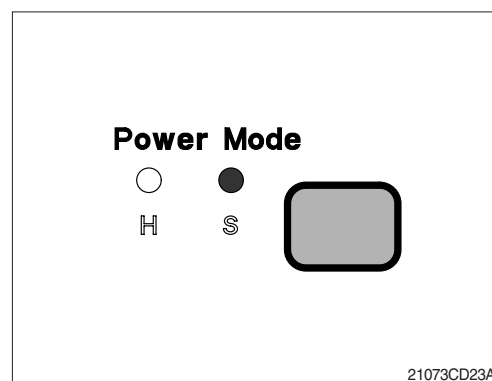


(2) H mode

When the accel dial is at setting 10 and auto decel mode is cancelled and H mode is selected.

Engine rpm	Effect
1800 ± 50	Approximately 110% of power and speed available than non mode type machine or S mode.

- ※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

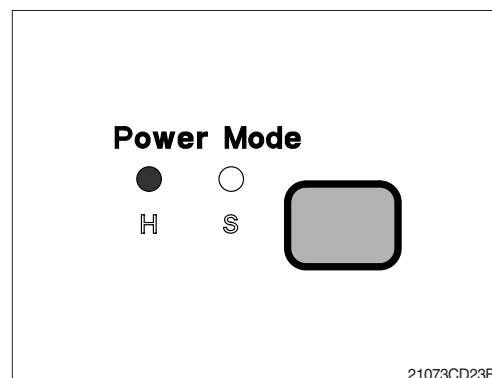


(3) M mode

When the accel dial is at setting 10 and auto decel mode is cancelled and M mode is selected.

Engine rpm	Effect
1900 \pm 50	Approximately 130% of power and speed available than non mode type machine or S mode.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

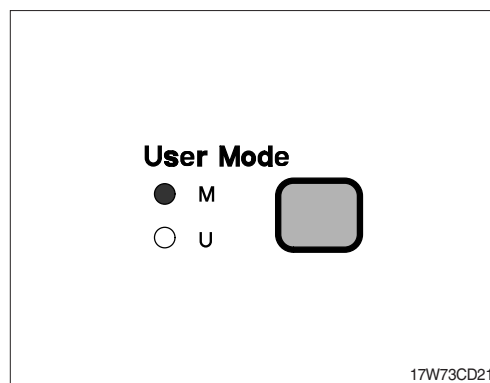


5. OPERATION OF WORKING DEVICE

※ **Confirm the operation of control lever and working device.**

- 1) Left control lever controls arm and swing.
- 2) Right control lever controls boom and bucket.
- 3) When you release the control lever, control lever returns to neutral position automatically.


※ **When operating swing, consider the swing distance by inertia.**

※ **Refer to the switching method at page 3-36, when installed dozer or outrigger.**

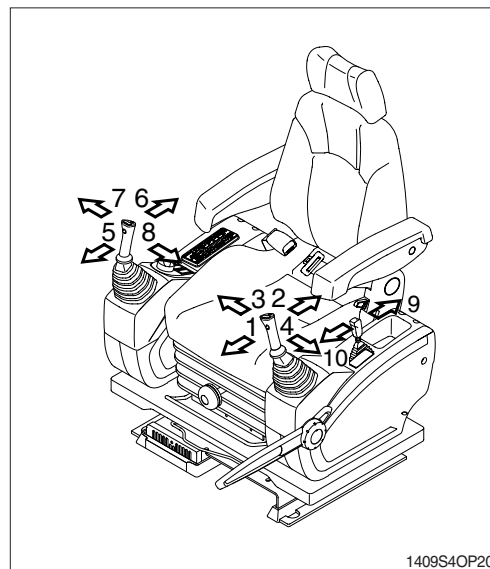

※ **Left control lever**

- 1 Arm roll-out
- 2 Arm roll-in
- 3 Swing right
- 4 Swing left

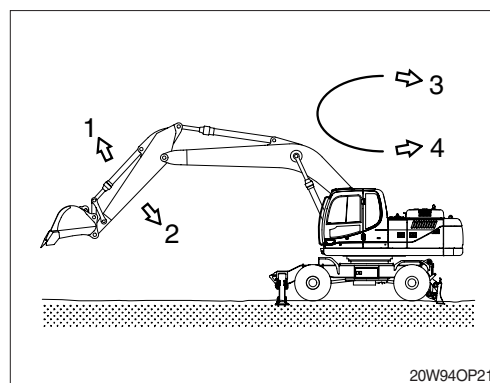


※ **Right control lever**

- 5 Boom lower
- 6 Boom raise
- 7 Bucket roll-out
- 8 Bucket roll-in

※ **Dozer and outrigger control lever**

- 9 Dozer blade or outrigger up
- 10 Dozer blade or outrigger down

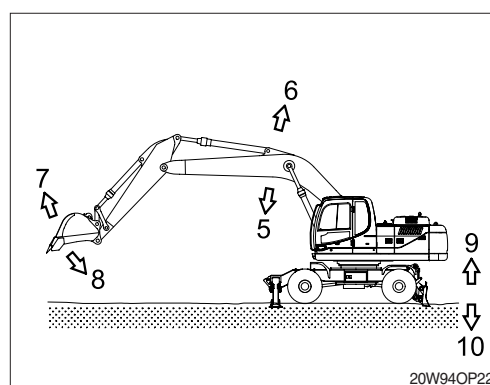


6. TRAVELING OF THE MACHINE

1) BASIC OPERATION

(1) Traveling position

It is the position which the dozer and rear axle is in the rear and the working device is forward.


- ▲ **Travel directions will be reversed if lower structure is positioned with dozer in front.**

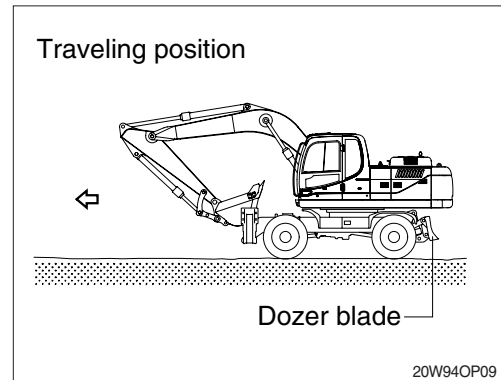

(2) Traveling operation


When warm-up operation is completed after the engine is started, move the machine according to the following procedure.

- ① Set the swing lock lever to lock position.
 - ② Release the safety lever.
 - ③ Put the select switch 2 in the traveling position.
(CLUSTER TYPE 1)
Put the parking switch in the traveling position and travel/working switch in the travel position.
(CLUSTER TYPE 2)
 - ④ Lift up the dozer blade or outrigger.
 - ⑤ Select traveling direction.
 - ⑥ Place the two speed switch in low speed.
 - ⑦ Press gently the accelerator pedal to move the machine.
- ※ **When speed up on a slope, a noise for valve of travel motor may occur. It is not out of order in machine but peculiar sound.**
- ※ **Be sure that the brake works normally on the safe place before fast traveling.**

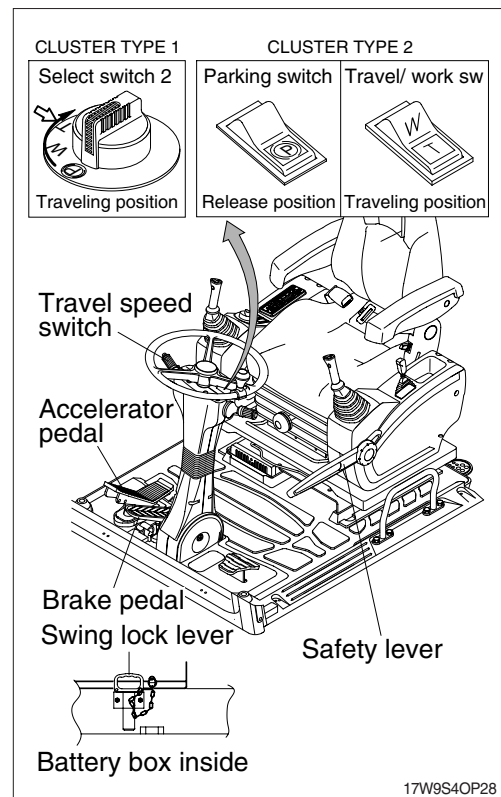


(3) Changing speed

If you want to change the speed, select the travel speed switch desired position.

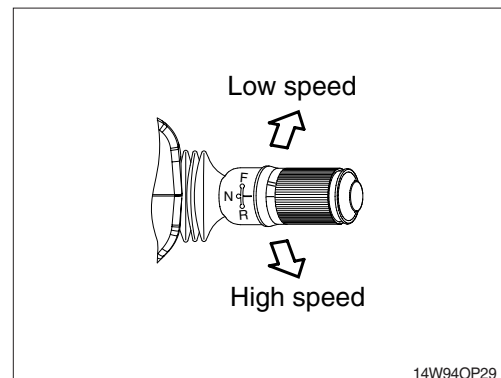


(4) Changing direction (forward/reverse)

- ① Be sure to stop the machine when changing the direction forward or backward while traveling.
 - ② Put the FNR lever in the desired position to change direction.
- ※ **When changing direction, check beforehand there is no obstacle in the direction you will be headed.**
 - ※ **It could be cause of machine failure to change the direction forward or backward while traveling.**

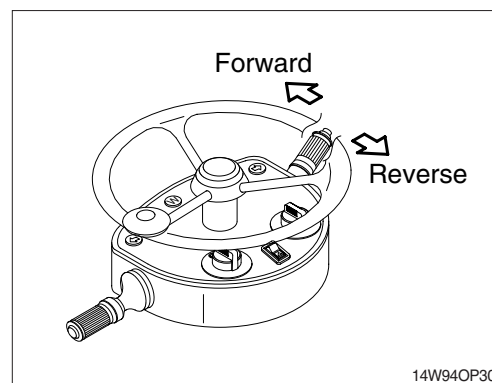

(5) Turning the machine


- ① Turn the machine by moving the steering wheel into the desired direction.
 - ② You can turn the machine to the left or right.
- ※ **Do not turn the machine abruptly when traveling at high speed and avoid turn on a slope.**
- ▲ **Steering does not function with engine OFF.**

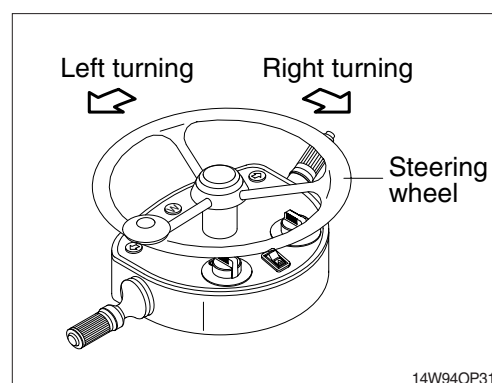

(6) Precautions when driving


The operators must be familiar with the following precautions including general safety hints.

- ① If the warning lamp lights up on the cluster, stop the machine immediately and check carefully whether the relevant parts are out of order or not.
- ② Do not allow the engine to run at overload.
- ③ Stop the engine and check as soon as finding out abnormal noise or smell.
- ④ Check the pilot lamp of switch panel 2 frequently.
- ⑤ Do not allow passengers or riders on the machine while it is running or in operation.
- ⑥ Never get on or off the machine while it is moving.

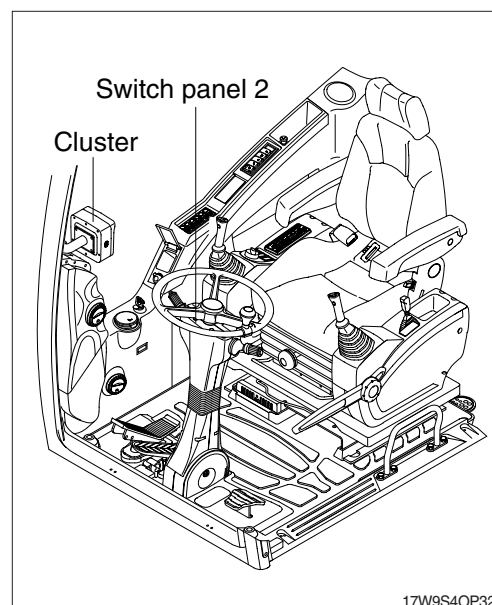

2) TRAVELING ON A SLOPE


- (1) Never travel down a slope in neutral.
 - (2) Lower the bucket 20 to 30 cm (1 ft) to the ground so that it can be used as a brake in an emergency.
 - (3) If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
 - (4) When parking on a slope, use the bucket as a brake and place blocks behind the tires to prevent sliding.
- ※ **Machine can not travel effectively on a slope when the oil temperature is low. Do the warming-up operation when it is going to travel on a slope.**
 - ※ **Be careful when working on slopes. It may cause the machine to lose its balance and turn over.**

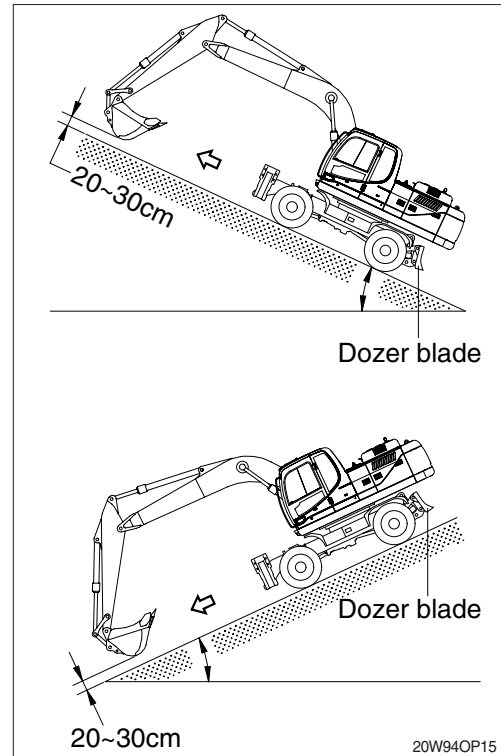

3) PARKING THE MACHINE

To park the machine, keep the steps below.

- (1) Release the accelerator pedal slowly.
 - (2) Depress the brake pedal.
 - (3) Place the FNR lever in the neutral.
 - (4) Put the select switch 2 in the parking position and release the brake pedal.(CLUSTER TYPE 1)
Put the parking switch in the parking position and release the brake pedal.(CLUSTER TYPE 2)
 - (5) Lower the bucket, outrigger and dozer blade to the ground.
 - (6) Stop the engine, place the start key switch in the OFF and remove the key.
 - (7) Lower the safety lever to lock position.
 - (8) Lock the swing lock lever and the cab door.
- ※ **Whenever parking on a slope, always block the tires after lowering the bucket to the ground.**
 - ※ **Contain the outrigger lock pin in the tool box to avoid loss.**

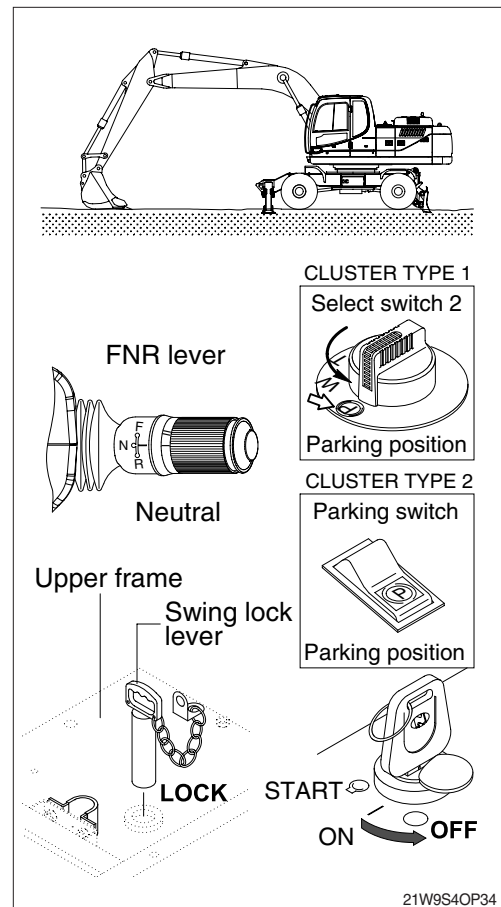

4) TOWING THE MACHINE

Except for an emergency, do not tow this machine.
If it is inevitable to tow this machine, observe the following.

(1) General

- ① Parking brake cylinder of the machine is operated by the spring force and released by hydraulic pressure.

If the engine does not operate, the brake will be operated to stop the machine.

- ② When the machine is towed move it for a repair to nearby place at the low speed.

Transport it on a trailer, if it has to be moved for a long distance.

- ③ When the steering device and the brake of the machine to be towed can not be operated, transport by trailer.

▲ Injury or death could result if a disabled machine is towed incorrectly.

▲ If your machine is towed by another machine, ALWAYS use a wire rope with a sufficient towing capacity.

▲ NEVER allow a disabled machine to be towed on a slope.

▲ When connecting up a towing machine, do not let anyone enter the area between the towing machine and the equipment being towed.

▲ Set the towing machine and the towing connection of the equipment being towed in a straight line when connecting it.

▲ Never tow machine using a light-duty towing hook.

(2) Towing the machine

- ① The emergency device is to interrupt the power flow between input and output in case of control pressure failure or a travel motor defect and thus allows an emergency towing of the machine.

Towing speed : Max 10km/h

Towing distance : Max 5km


- ② Since there is no transmission lubrication, damages may occur due to lacking oil supply if the instruction are no observed. For a long distance it is best to have transported the defective machine on a trailer.

③ Activate the emergency device

- Turn the start key OFF position.
- Block the machine against rolling away.
- By means of a grease gun pump in the grease on the grease nipple(1) until it comes visibly out at the pressure relief valve(3) of the emergency device.

④ Deactivate the emergency device


- The bleeder(2) of the emergency device must be opened and then shift into the road speed(apply a control pressure of 30 to 35 bar at the connection of the brake).
- Then close the bleeder again.

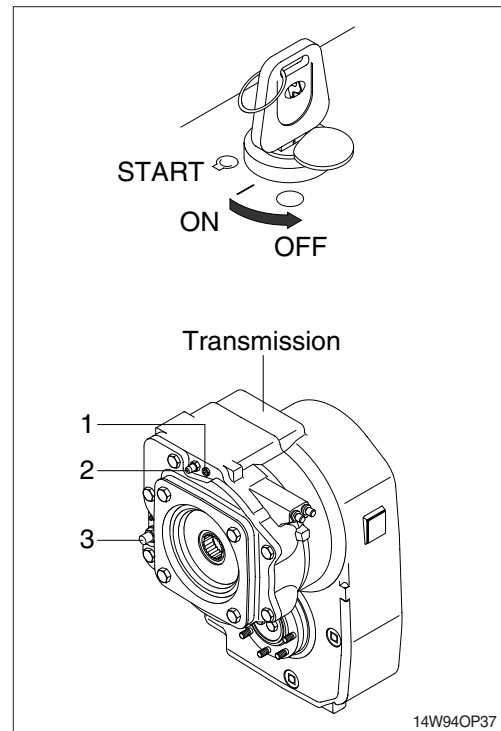

5) PRECAUTIONS FOR OPERATION


(1) Permissible water depth

- ① Do not immerse the machine in water by more than the permissible depth (axle center).
- ② For parts that have been immersed in water for a long time, pump in grease until the old grease comes out from the bearings.

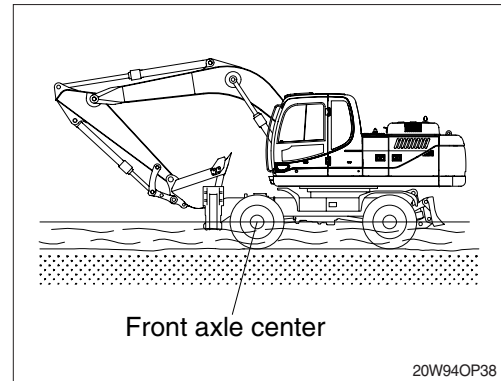

(2) When the brake does not operate


- ① If the machine does not stop even though the brake pedal is applied, put the parking position to activate the emergency brake by select switch 2.
- ※ **After using the parking brake as an emergency brake, ask Hyundai dealer to check complete brake system.**
- ▲ **Never use emergency brake, except when the service brake fails.**

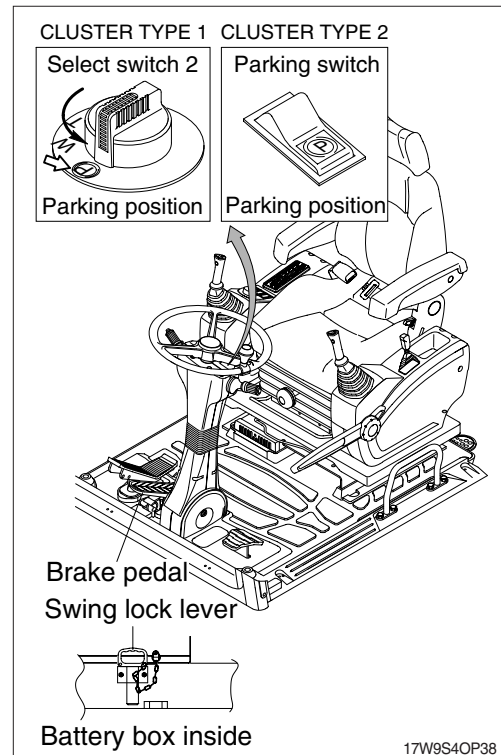

7. EFFICIENT WORKING METHOD


1) Do the digging work by arm.

Use the pulling force of arm for digging and use together with the digging force of the bucket if necessary.

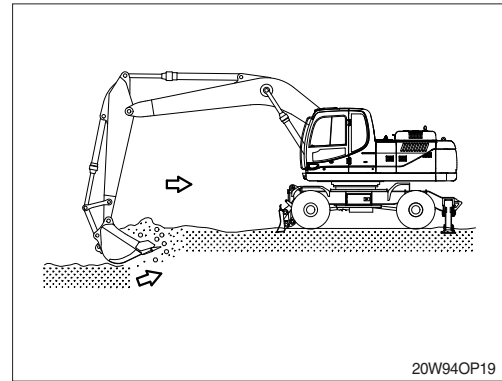


2) When lowering and raising the boom operate softly for the beginning and the end.


In particularly, sudden stops while lowering the boom may cause damage to the machine.

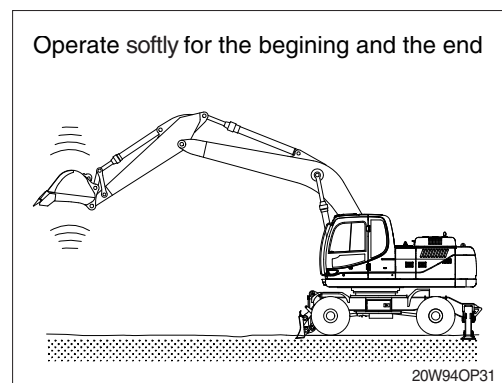


3) The digging resistance and wearing of tooth can be reduced by putting the end of bucket tooth to the digging direction.

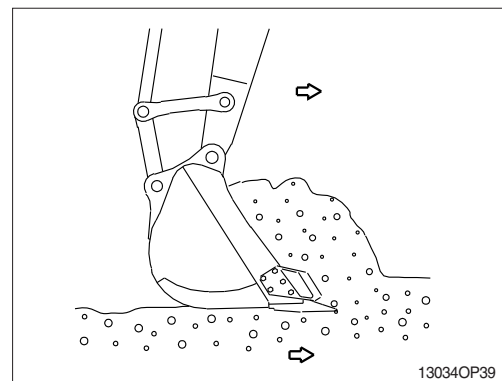


4) Set the tracks parallel to the line of the ditch to be excavated when digging ditch. Do not swing while digging.

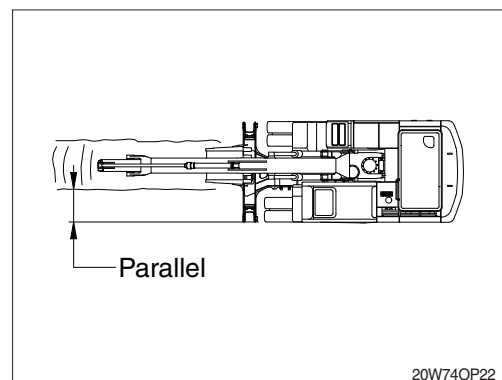

- 5) Dig slowly with keeping the angle of boom and arm, 90-110 degree when maximum digging force is required.

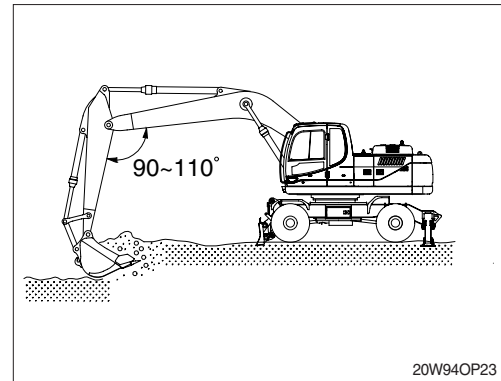


- 6) Operate leaving a small safety margin of cylinder stroke to prevent damage of cylinder when working with the machine.

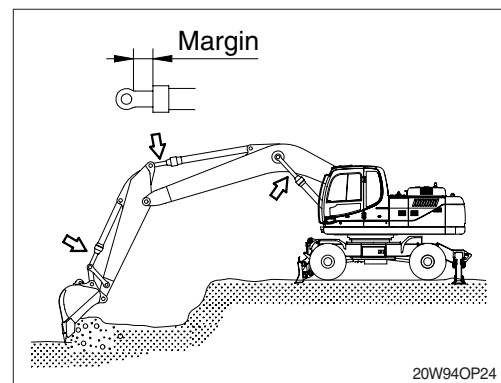


- 7) Keep the bucket to the dumping position and the arm horizontal when dumping the soil from the bucket.
Operate bucket lever 2 or 3 times when hard to dump.


※ Do not use the impact of bucket tooth when dumping.

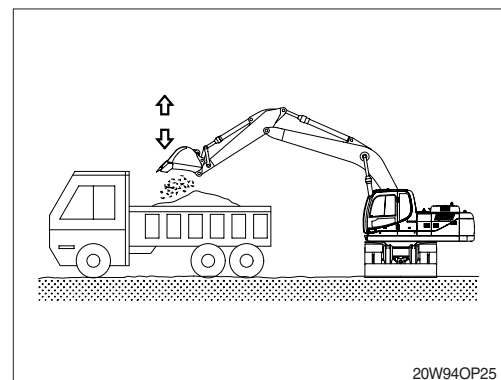


- 8) Operate stop of swing considering the swing slip distance is created by inertia after neutralizing the swing lever.

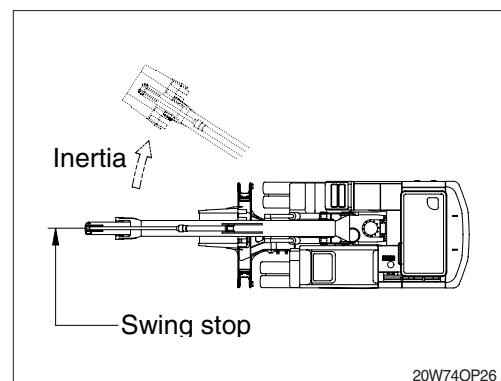


- 9) If the excavation is in an underground location or in a building, make sure that there is adequate overhead clearance and that there is adequate ventilation.

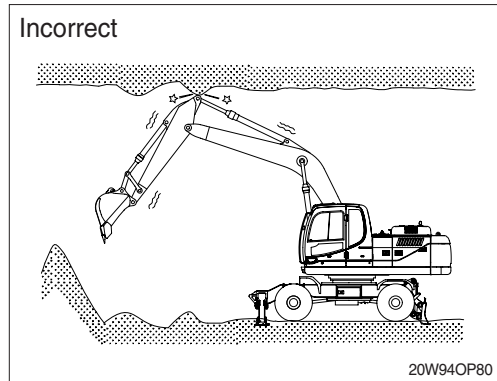


- 10) Do not use the dropping force of the work equipment for digging.
The machine can be damaged by the impact.

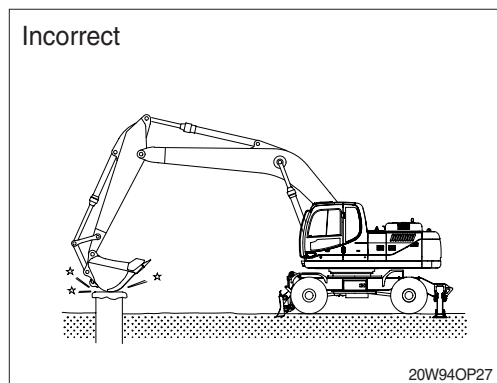

- 11) Do not use the bucket to crack hard objects like concrete or rocks.
This may break a tooth or pin, or bend boom.

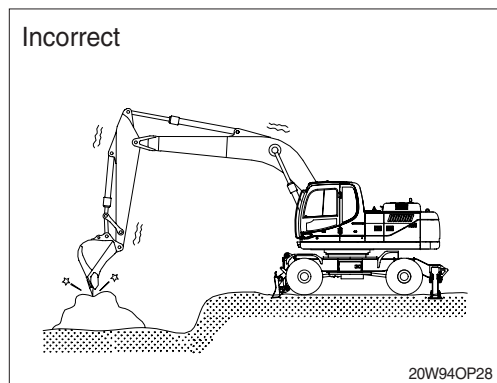

- 12) Do not use the dropping force of the machine for digging.

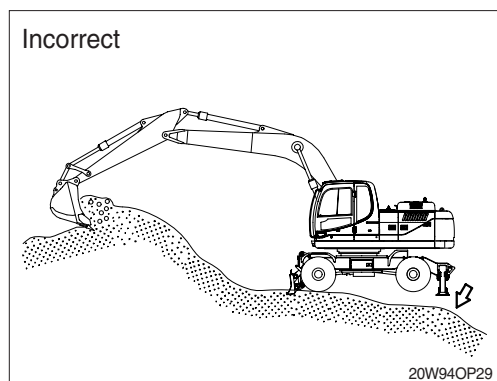

13) NEVER CARRY OUT EXCESSIVE OPERATIONS


Operation exceeding machine performance may result in accident or failure.

Carry out lifting operation within specified load limit.

Never carry out operations which may damage the machine such as overload or over-impact-load.

Never travel while carrying a load.

In case you need installing over load warning device for object handling procedure, please contact Hyundai distributor.

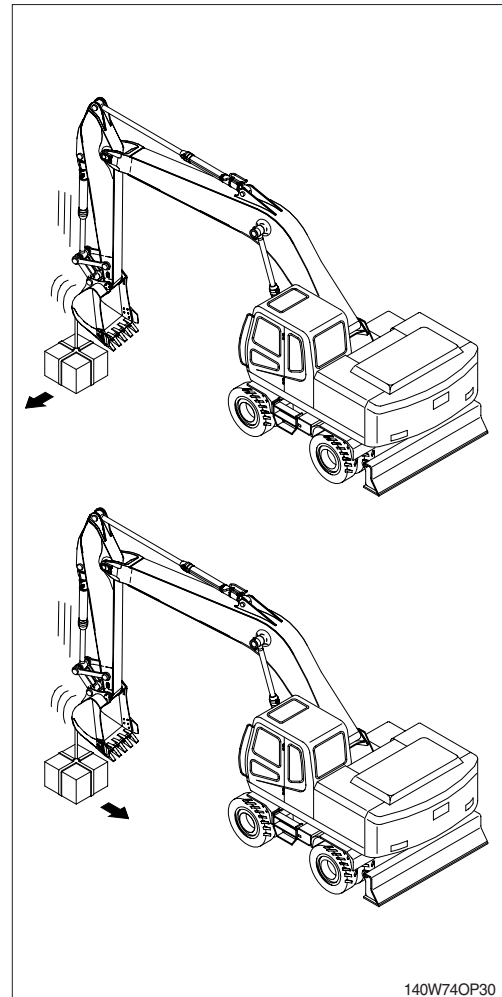

14) BUCKET WITH HOOK

When carrying out lifting work, the special lifting hook is necessary.

The following operations are prohibited.

- Lifting loads with a wire rope fitted around the bucket teeth.
- Lifting loads with the wire rope wrapped directly around the boom or arm.

When performing lifting operation, securely hook the wire rope onto the special lifting hook.

When performing lifting operation, never raise or lower a person.


Due to the possible danger of the load falling or of collision with the load, no persons shall be allowed in the working area.

Before performing lifting operation, designate an operation supervisor.

Always execute operation according to his instructions.

- Execute operating methods and procedures under his direction.
- Select a person responsible for signaling. Operate only on signals given by such person.


Never leave the operator's seat while lifting a load.

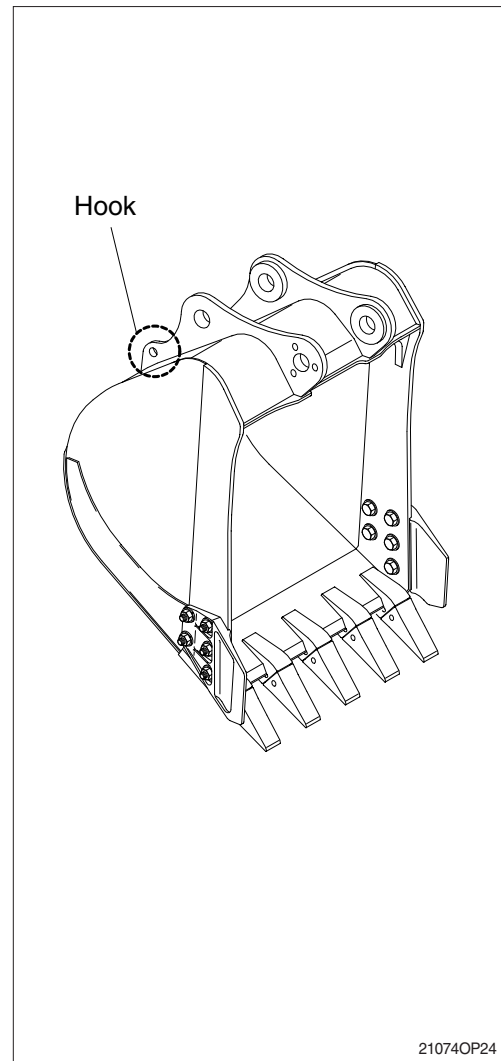

8. OPERATION IN THE SPECIAL WORK SITES

1) OPERATION THE MACHINE IN A COLD WEATHER

- (1) Use proper engine oil and fuel for the weather.
- (2) Fill the required amount of antifreeze in the coolant.
- (3) Refer to the starting engine in cold weather.
Start the engine and extend the warming up operation.
- (4) Be sure to open the heater cock when using the heater.
- (5) Always keep the battery completely charged.
※ **Discharged batteries will freeze more easily than fully charged.**
- (6) Clean the machine and park on the wood plates.

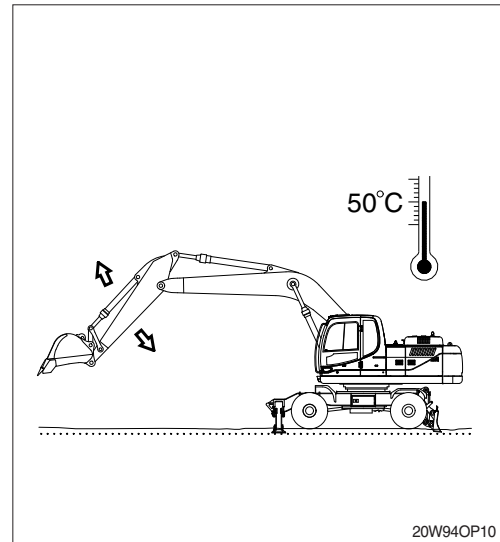

2) OPERATION IN SANDY OR DUSTY WORK SITES

- (1) Inspect air cleaner element frequently. Clean or replace element more frequently, if warning lamp comes ON and buzzer sounds simultaneously, regardless of inspection period.
※ **Replace the inner and outer element after 4 times of cleaning.**
- (2) Inspect radiator, oil cooler and condenser frequently, and keep cooling fins clean.
- (3) Prevent sand or dust from getting into fuel tank and hydraulic tank during refilling.
- (4) Prevent sand or dust from penetrating into hydraulic circuit by tightly closing breather cap of hydraulic oil tank. Replace hydraulic oil filter and air breather element frequently. Also, replace the fuel filter frequently.
- (5) Keep all lubricated part, such as pins and bushings, clean at all times.
- (6) If the air conditioner and heater filters clogged, the heating or cooling capacity will drop. Clean or replace the filter element more frequently.
- (7) Clean electrical components, especially the starting motor and alternator to avoid accumulation of dust.

3) SEA SHORE OPERATION

- (1) Prevent ingress of salt by securely tightening plugs, cocks and bolts of each part.
- (2) Wash machine after operation to remove salt residue.
Pay special attention to electrical parts, and hydraulic cylinders and track tension cylinder to prevent corrosion.
- (3) Inspection and lubrication must be carried out more frequently.
Supply sufficient grease to replace all old grease in bearings which have been submerged in water for a long time.

4) OPERATION IN MUD, WATER OR RAIN WORK SITES

- (1) Perform a walk around inspection to check for any loose fittings, obvious damage to the machine or any fluid leakage.
- (2) After completing operations, clean mud, rocks or debris from the machine. Inspect for damage, cracked welds or loosened parts.
- (3) Perform all daily lubrication and service.
- (4) If the operations were in salt water or other corrosive materials, make sure to flush the affected equipment with fresh water.


5) OPERATION IN ROCKY WORK SITES

- (1) Check for damage to the undercarriage and for looseness, flaws, wear and damage in bolts and nut.
- (2) Loosen the track tension a little when working in such areas.
- (3) Do not turn the undercarriage directly over the sharp edge rock.

9. NORMAL OPERATION OF EXCAVATOR

Followings may occur during operation due to the nature of a hydraulic excavator.

- 1) When rolling in the arm, the roll-in movement stop momentary at point **X** in the picture shown, then recovers speed again after passing point **X**.
The reason for this phenomenon is that movement by the arm weight is faster than the speed of oil flow into the cylinder.
- 2) When lowering the boom, one may hear continuous sound.
This is caused by oil flow in the valve.
- 3) Overloaded movement will produce sound caused by the relief valves, which are for the protection of the hydraulic systems.
- 4) When the machine is started swing or stopped, a noise near the swing motor may be heard. The noise is generated when the brake valve relieves.

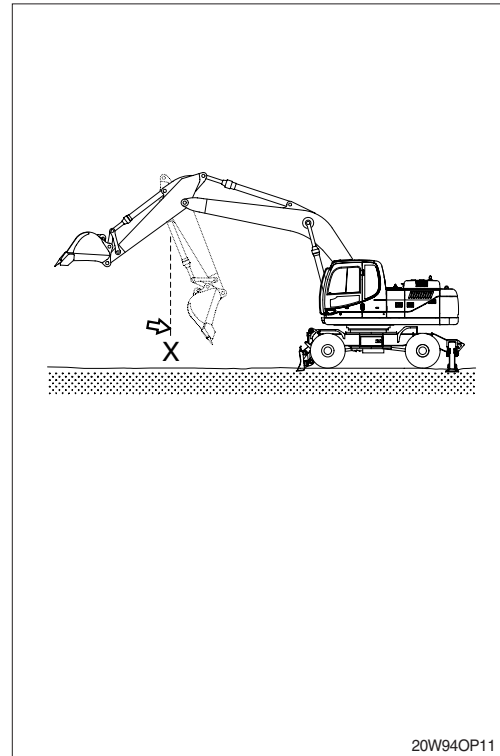

10. ATTACHMENT LOWERING (When engine is stopped)

1) On machines equipped with an accumulator, for a short time(within 2 minutes) after the engine is stopped, the attachment will lower under its own weight when the attachment control lever is shifted to LOWER. That is happen only starting switch ON position and safety lever UNLOCK position. After the engine is stopped, set the safety lever to the LOCK position.


▲ Be sure no one is under or near the attachment before lowering the boom.

2) The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

▲ Never make any hole in the accumulator expose it to flame or fire.

▲ Do not weld anything to the accumulator.

※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.

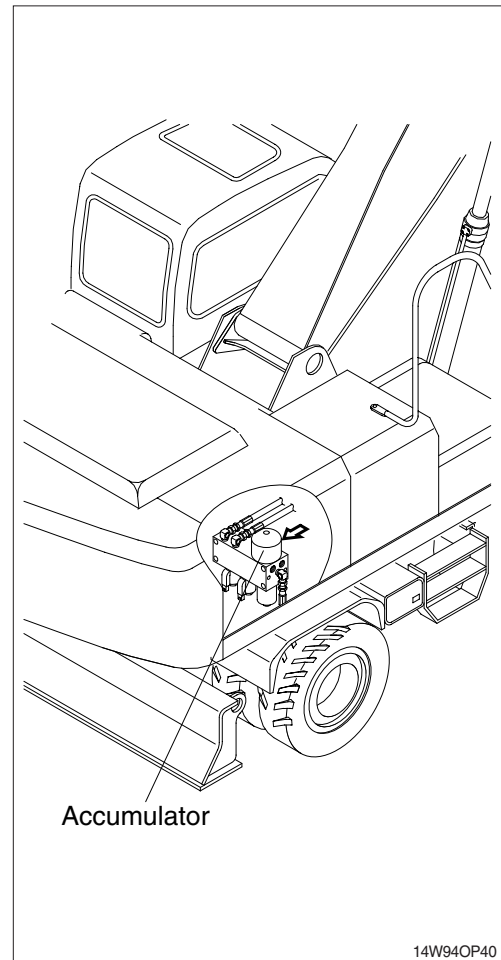

14W940P40

11. STORAGE

Maintain the machine taking care of following to prevent the deterioration of machine when storing the machine for a long time, over 1 month.

1) BEFORE STORAGE

(1) Cleaning the machine

Clean the machine and dried.
Grease each lubrication part.


(2) Lubrication position of each part

Change all oil.

※ Be particularly careful when you reuse the machine.

As oil can be diluted during storage.


Apply an anticorrosive lubricant on the exposed part of piston rod of cylinder and in places where the machine rusts easily.

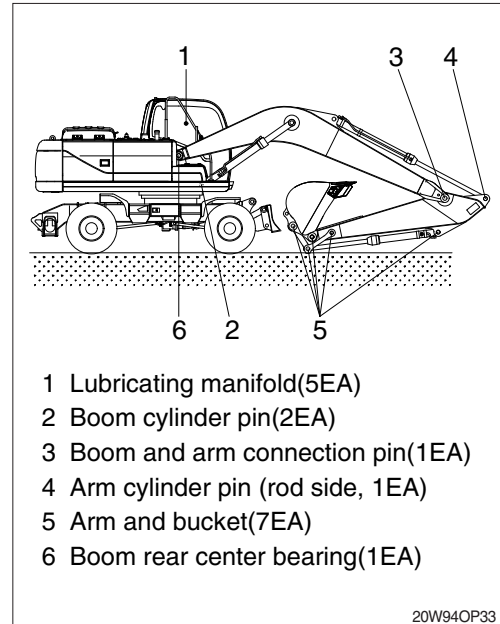

(3) Master switch

Turn OFF the master switch mounted electric box and store the machine.


(4) Be sure to mix anticorrosive antifreezing solution in the radiator.

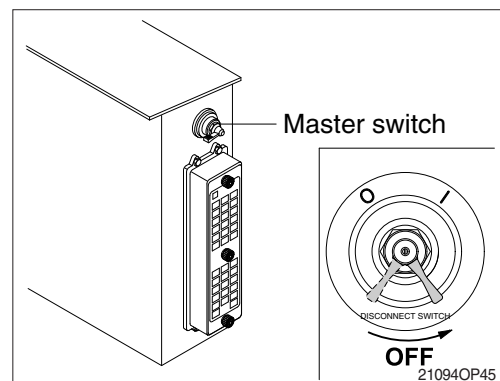

(5) Prevention of dust and moisture

Keep machine dry. Store the machine setting wood on the ground.


- ※ Cover exposed part of piston rod of cylinder.
- ※ Lower the bucket to the ground and set a support under track.

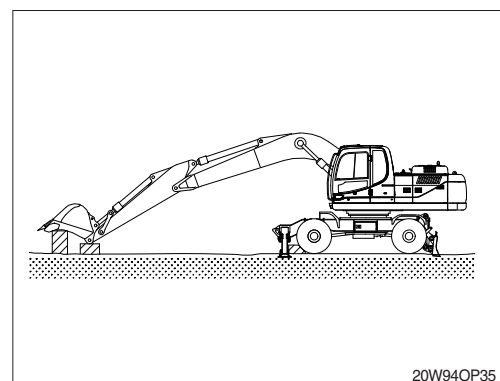

2) DURING STORAGE

Start engine and move the machine and work equipment once a month and apply lubrication to each part.

- ※ Check the level of engine oil and coolant and fill if required when starting engine.
- ※ Clean the anticorrosive on the piston rod of cylinder.
- ※ Operate the machine such as traveling, swing and work equipment operation to make sure enough lubrication of all functional components.

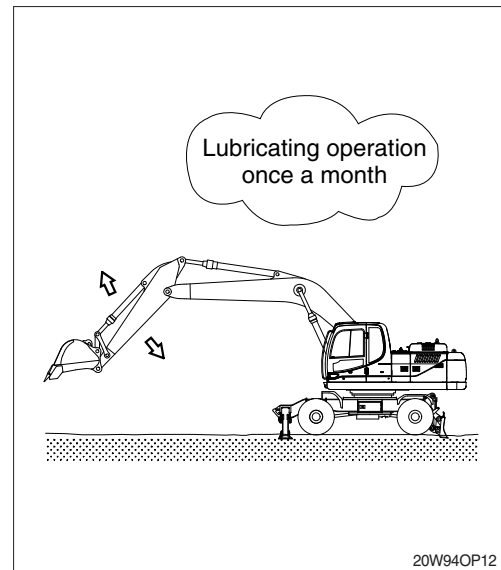

※ BATTERY

- ① Once a month, start the engine for 15 minutes (or use a charger) to charge the battery.
- ② Every 2 months, check the battery voltage and keep battery voltage over 25.08V.
- ③ If the machine stock period is over 6 months, disconnect the battery negative (-) terminal.

3) AFTER STORAGE

Carry out the following procedure when taking out of a long time storage.

- (1) Wipe off the anticorrosive lubricant on the hydraulic piston rod.
- (2) Completely fill fuel tank, lubricate and add oil.

(3) When storage period is 6 months over


If the machine stock period is over 6 months, carry out the following procedure.

This procedure is to drain condensation water for the **swing reduction gear** durability.

- ※ Remove the drain port plug and drain the water until the gear oil comes out and then tighten the drain plug.
- ※ Refer to the service instruction, section 6 for the drain plug location.
- ※ If the machine is stored without carrying out the monthly lubricating operation, consult your Hyundai dealer for service.

12. RCV LEVER OPERATING PATTERN

1) PATTERN CHANGE VALVE NOT INSTALL (standard)

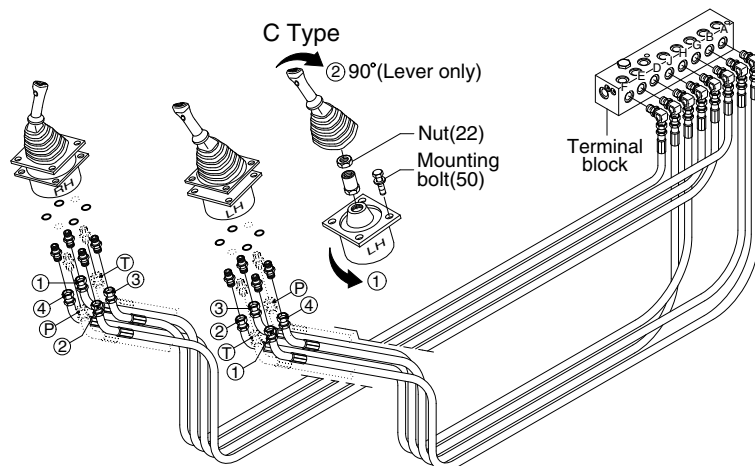

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.


※ The hose modification works must be carried out between RCV lever and terminal block (Not between terminal block and MCV).

20W940P50

Pattern	Operation		Control function	Hose connection (port)			
	Left RCV lever	Right RCV lever		RCV lever	Change of Terminal block		
					From	To	
ISO Type			Left	1 Arm out	②	D	-
Hyundai				2 Arm in	④	E	-
				3 Swing right	③	B	-
				4 Swing left	①	A	-
				5 Boom lower	④	J	-
Hyundai			Right	6 Boom raise	②	H	-
				7 Bucket out	①	G	-
				8 Bucket in	③	F	-
A Type			Left	1 Boom lower	②	D	J
A Type				2 Boom raise	④	E	H
				3 Swing right	③	B	-
				4 Swing left	①	A	-
			Right	5 Arm out	④	J	D
				6 Arm in	②	H	E
				7 Bucket out	①	G	-
				8 Bucket in	③	F	-
B Type			Left	1 Boom lower	②	D	J
B Type				2 Boom raise	④	E	H
				3 Bucket in	③	B	F
				4 Bucket out	①	A	G
			Right	5 Arm out	④	J	D
				6 Arm in	②	H	E
				7 Swing right	①	G	B
				8 Swing left	③	F	A
C Type			Left	① Loosen the RCV lever mounting bolt (50) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut (22) and rotates only lever 90° clockwise.			
C Type			Right	Same as ISO type			

13. SWITCHING HYDRAULIC ATTACHMENT CIRCUIT

- 1) The combined hydraulic attachment circuit is capable of providing single action or double action.
- 2) The position of 3 way valve selects the single action hydraulic attachment circuit or the double action hydraulic attachment circuit.
- 3) Before you change the flow mode of hydraulic attachment circuit, place the machine in the servicing position as shown. Stop the engine.

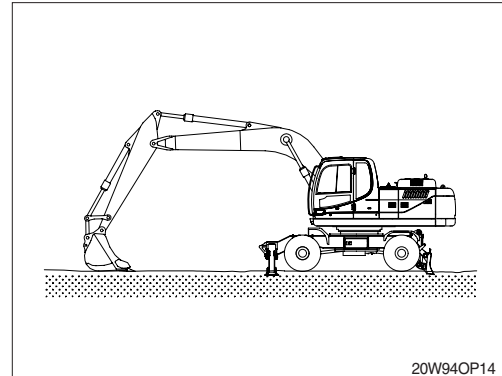


- 4) Use the spanner to turn the bolt of 3 way valve. Make sure that you turn the bolt between ⑥ and ③.

(1) One way flow (hydraulic breaker)

Position the groove parallel to the piping (⑥).

(2) Two way flow (clamshell or shear)

Position the groove perpendicular to the piping (③).

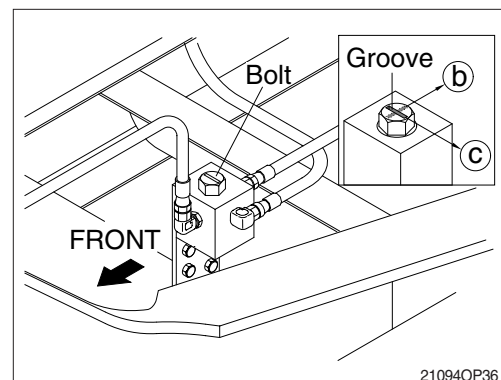


1. ROAD TRAVELING

As this machine can run at the maximum speed of 31 km/h, it is not necessary to transport the machine on trailer in a short distance.

But the transportation by the trailer is convenient in a long distance.

If it is necessary to travel on a road, observe the followings.


- 1) Comply with regulations regarding this machine for the sake of safety.
- 2) Perform daily inspection before starting the machine.
- 3) Cross the bridge after checking that it will safely support the machine weight. If the bridge can not support, a detour must be prepared or the bridge must be reinforced.
- 4) When traveling for a long distance, stop every hour to allow tires and other components to cool down and check any abnormality.
- 5) Drive with the bucket empty.

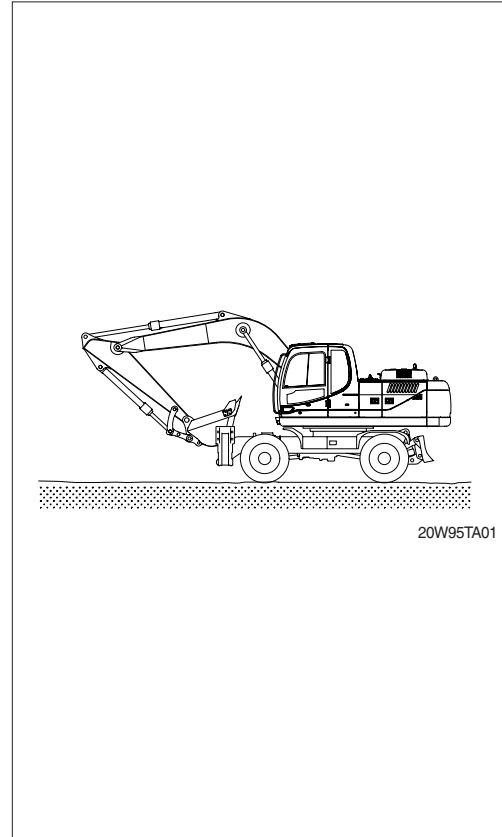

20W95TA01


2. PREPARATION FOR TRANSPORTATION

- 1) When transporting the machine, observe the various road rules, road transportation vehicle laws and vehicle limit ordinances, etc.
- 2) Select proper trailer after confirming the weight and dimension from the chapter 2, specification.
- 3) Check the whole route such as the road width, the height of bridge and limit of weight and etc., which will be passed.
- 4) Get the permission from the related authority if necessary.
- 5) Prepare suitable capacity of trailer to support the machine.

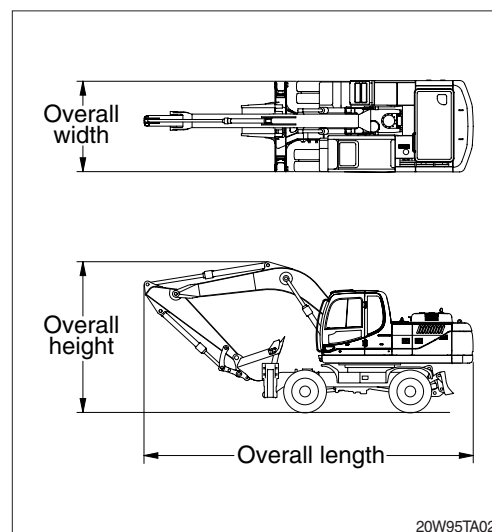

- 6) Prepare gangplank for safe loading referring to the below table and illustration.

A	B
1.0	3.65 ~ 3.85
1.1	4.00 ~ 4.25
1.2	4.35 ~ 4.60
1.3	4.75 ~ 5.00
1.4	5.10 ~ 5.40
1.5	5.50 ~ 5.75

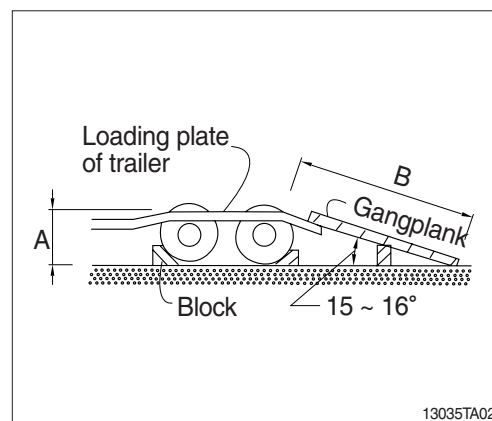


3. DIMENSION AND WEIGHT

1) ROBEX 210W-9S

(1) Base machine

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	5220 (17' 2")
H	Height	mm (ft-in)	3180 (10' 5")
W	Width	mm (ft-in)	2530 (8' 4")
Wt	Weight	kg (lb)	16200 (35720)


※ 3400 kg (7500 lb) counterweight.

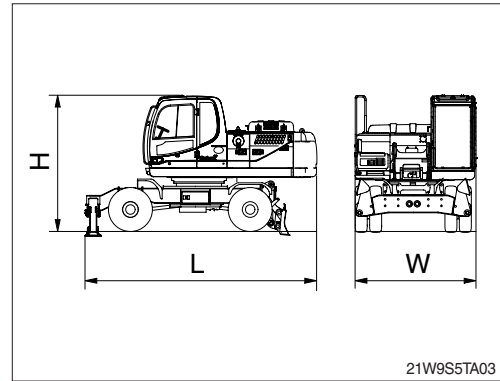

(2) Boom assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	5840 (19' 2")
H	Height	mm (ft-in)	1550 (5' 1")
W	Width	mm (ft-in)	630 (2' 1")
Wt	Weight	kg (lb)	1870 (4120)


※ 5.65 m (18' 6") boom with arm cylinder (included piping and pins).

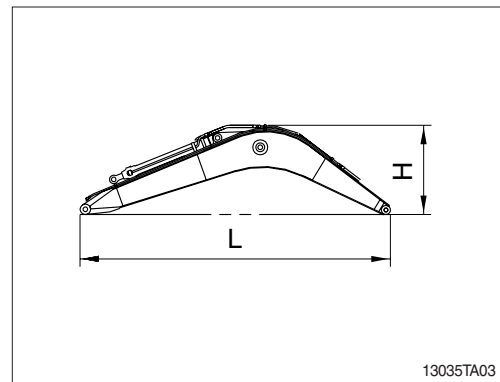

(3) Arm assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	3910 (12' 0")
H	Height	mm (ft-in)	870 (2' 10")
W	Width	mm (ft-in)	350 (1' 2")
Wt	Weight	kg (lb)	1095 (2410)


※ 2.92 m (9' 7") arm with bucket cylinder (included linkage and pins).

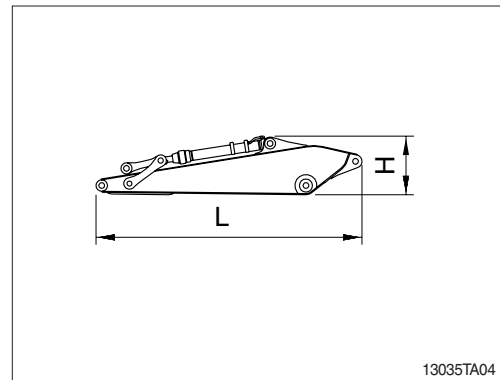

(4) Bucket assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1600 (5' 3")
H	Height	mm (ft-in)	980 (3' 3")
W	Width	mm (ft-in)	1160 (3' 10")
Wt	Weight	kg (lb)	710 (1570)


※ 0.80 m³ (1.05 yd³) SAE heaped bucket (included tooth and side cutters).

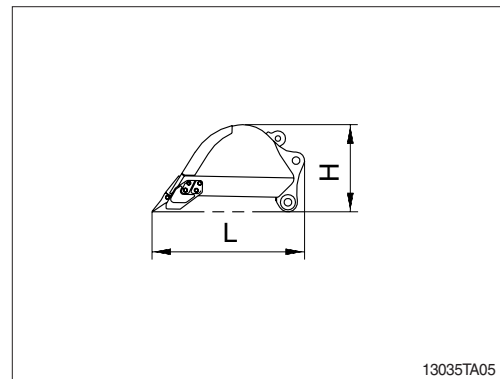

(5) Boom cylinder


Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1960 (6' 5")
H	Height	mm (ft-in)	230 (0' 9")
W	Width	mm (ft-in)	330 (1' 1")
Wt	Weight	kg (lb)	360 (794)/2EA

※ Included piping.

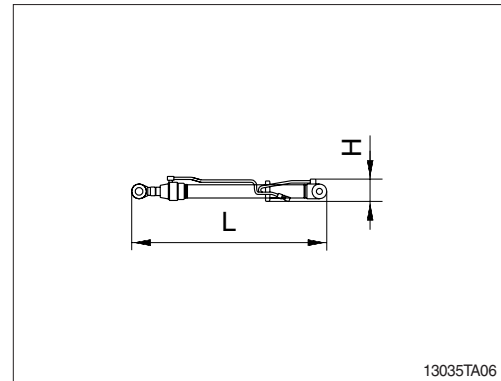


(6) Cab assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	2000 (6' 7")
H	Height	mm (ft-in)	1740 (5' 9")
W	Width	mm (ft-in)	1288 (4' 2")
Wt	Weight	kg (lb)	400 (970)

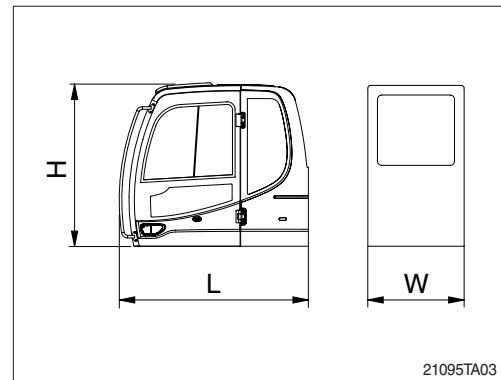


(7) Counterweight

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	2530 (8' 4")
H	Height	mm (ft-in)	1050 (3' 5")
W	Width	mm (ft-in)	560 (1' 10")
Wt	Weight	kg (lb)	3400 (7500)

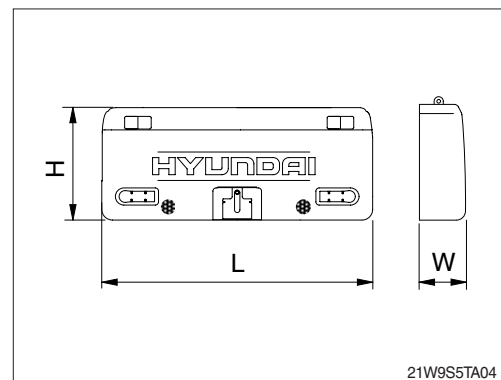


4. LOADING THE MACHINE


- 1) Load and unload the machine on a flat ground.
- 2) Use the gangplank with sufficient length, width, thickness and gradient.
- 3) Place block tires of the truck and the trailer not to move the trailer.
- 4) Place the swing lock device to the **LOCK** position before fixing the machine at the bed of trailer and confirm if the machine parallels the bed of trailer.
- 5) Drive straight and depress the acceleration pedal slowly on the gangplank with the two speed switch positioned as low speed.

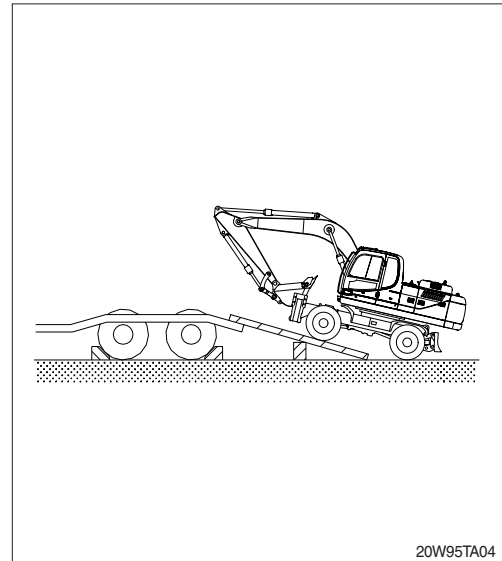

- 6) Do the following after loading the machine to the trailer.
 - (1) Stop loading when the machine is located horizontally with the rear wheel of trailer.

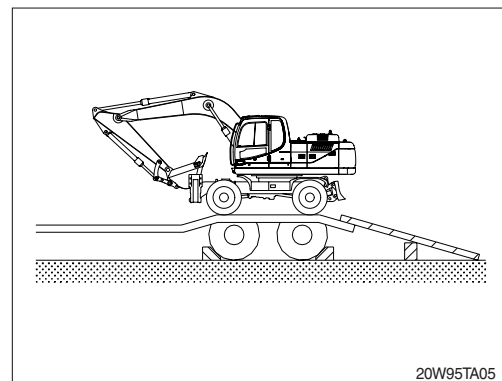

- (2) Place the swing lock device to the **LOCK** position after the swing the machine 180 degree.

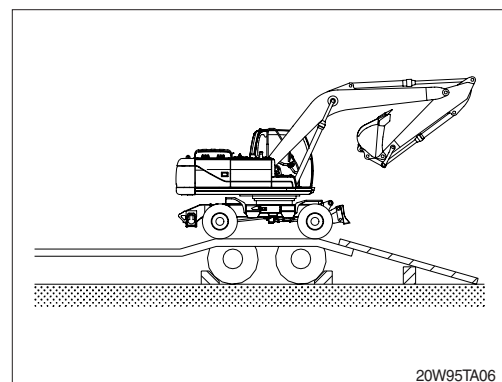

(3) Lower the working equipment gently after the location is determined.


※ **Place rectangular timber under the bucket cylinder to prevent the damage of it during transportation.**

▲ **Be sure to keep the travel speed switch on the low speed while loading and unloading the machine.**

▲ **Avoid using the working equipment for loading and unloading since it will be very dangerous.**


▲ **Do not operate any other device when loading.**

▲ **Be careful on the boundary place of loading plate or trailer as the balance of machine will abruptly be changed on the point.**

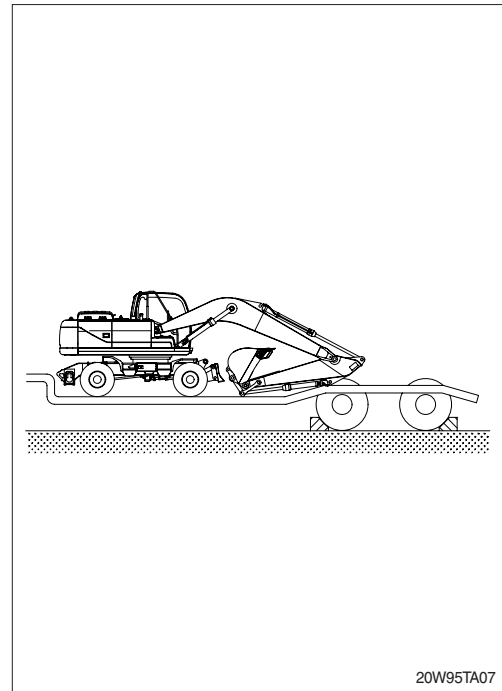


5. FIXING THE MACHINE


- 1) Place the swing lock device on the LOCK position.
- 2) Place the select switch 2 to the parking position.
(CLUSTER TYPE 1)
Place the parking switch to the parking position.
(CLUSTER TYPE 2)
- 3) Keep the safety lever on the SAFETY position.
- 4) Turn OFF all the switches and remove the key.

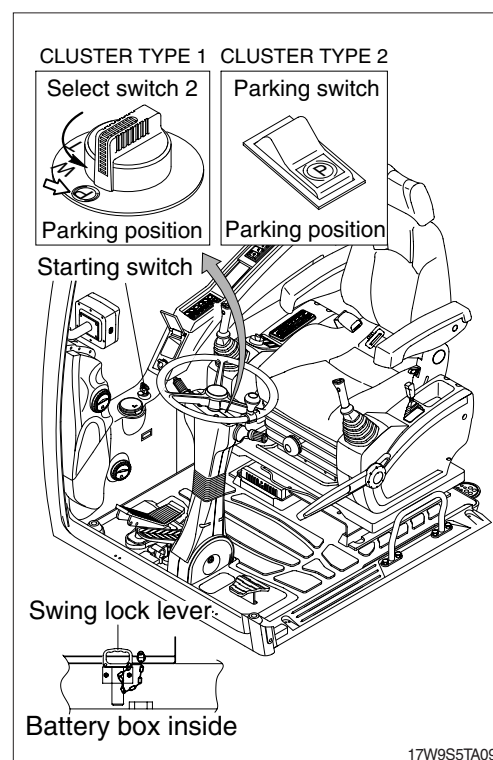

- 5) Secure all locks.

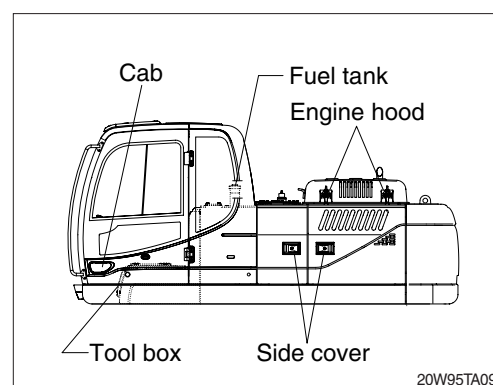


- 6) Place timber underneath of the tires and fix firmly with wire rope to prevent the machine from moving forward, backward, right or left.

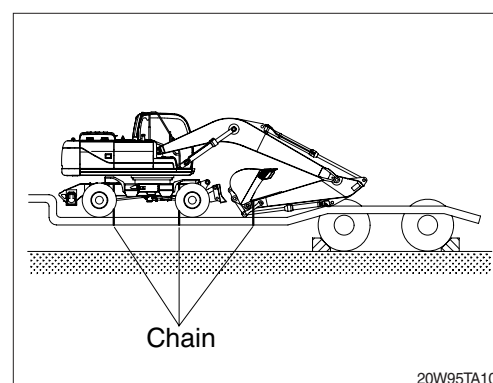

6. LOADING AND UNLOADING BY CRANE

- 1) Check the weight, length, width and height of the machine referring to the chapter 2, specification when you are going to hoist the machine.
- 2) Use long wire rope and stay to keep the distance with the machine as it should avoid touching with the machine.
- 3) Put a rubber plate where the wire rope contact with the machine's body to prevent damage.
- 4) Place crane on the proper place.
- 5) After the boom is raised to the maximum high, install the wire rope and stay like the illustration.


- ⚠ **Make sure wire rope is proper size.**
- ⚠ **Place the safety lever to LOCK position to prevent the machine moving when hoisting the machine.**
- ⚠ **The wrong hoisting method or installation of wire rope can cause damage to the machine.**
- ⚠ **Do not load abruptly.**
- ⚠ **Keep area clear of personnel.**
- ⚠ **Recommend to manufacture the stays separately as per lifting conditions.**

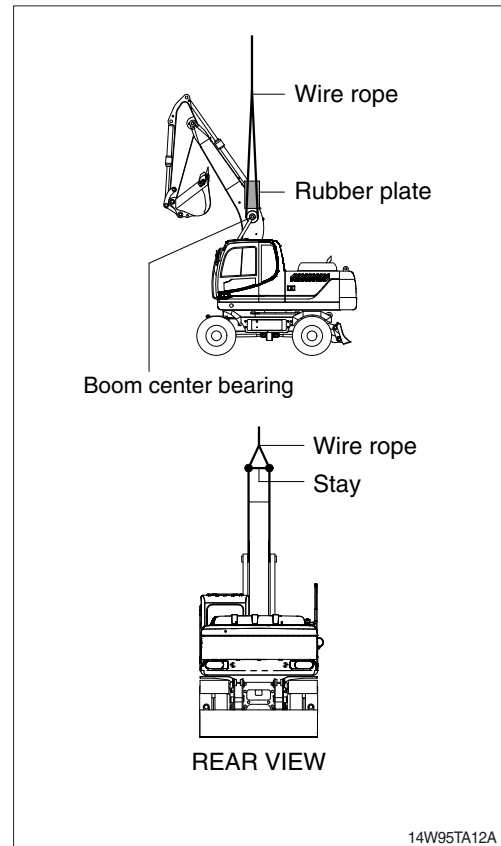

1. INSTRUCTION

1) INTERVAL OF MAINTENANCE

- (1) You may inspect and service the machine by the period as described at page 6-11 based on hour meter at control panel.
- (2) Shorten the interval of inspect and service depending on site condition. (such as dusty area, quarry, sea shore and etc.)
- (3) Practice the entire related details at the same time when the service interval is doubled.
For example, in case of 100hours, carry out all the maintenance 「Each 100hours, each 50 hours and daily service」 at the same time.

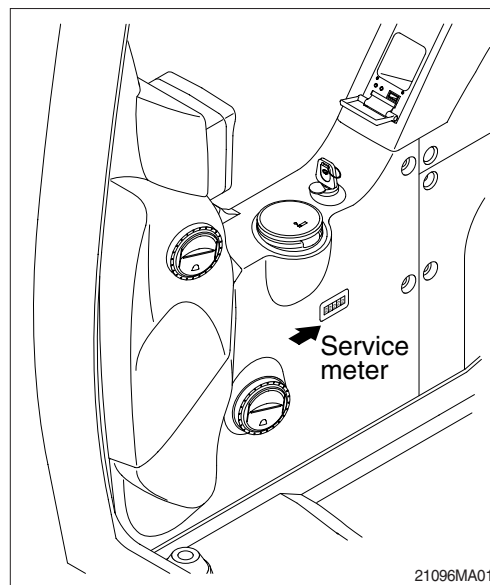

2) PRECAUTION

- (1) Start to maintenance after you have the full knowledge of machine.
- (2) The monitor installed on this machine does not entirely guarantee the condition of the machine.
Daily inspection should be performed according to clause 4, maintenance check list.
- (3) Engine and hydraulic components have been preset in the factory.
Do not allow unauthorized personnel to reset them.
- (4) Ask to your local dealer or Hyundai for the maintenance advice if unknown.
- (5) Drain the used oil and coolant in a container and handle according to the method of handling for industrial waste to meet with regulations of each province or country.

3) PROPER MAINTENANCE

(1) Replace and repair of parts

It is required to replace the wearable and consumable parts such as bucket tooth, side cutter, filter and etc., regularly.

Replace damaged or worn parts at proper time to keep the performance of machine.


- (2) Use genuine parts.
 - (3) Use the recommended oil.
 - (4) Remove the dust or water around the inlet of oil tank before supplying oil.
 - (5) Drain oil when the temperature of oil is warm.
 - (6) Do not repair anything while operating the engine.
Stop the engine when you fill the oil.
 - (7) Relieve hydraulic system of the pressure before repairing the hydraulic system.
 - (8) Confirm if the cluster is in the normal condition after completion of service.
 - (9) For more detail information of maintenance, please contact local Hyundai dealer.
- ※ **Be sure to start the maintenance after fully understand the chapter 1, safety hints.**

4) RELIEVING THE PRESSURE IN THE HYDRAULIC SYSTEM

- ※ Spouting of oil can cause the accident when loosening the cap or hose right after the operating of machine as the machine or oil is on the high pressure on the condition.


Be sure to relieve the pressure in the system before repairing hydraulic system.

- (1) Place machine in parking position, and stop the engine.

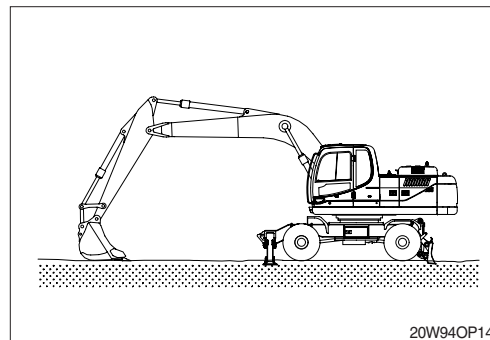


- (2) Set the safety lever completely in the release position, operate the control levers and pedals fully to the front, rear, left and right, to release the pressure in the hydraulic circuit.

- ※ This does not completely release the pressure, so when serving hydraulic component, loosen the connections slowly and do not stand in the direction where the oil spurt out.

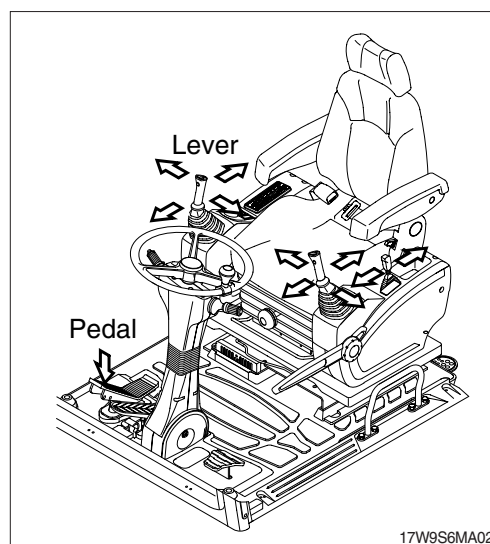

- (3) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.

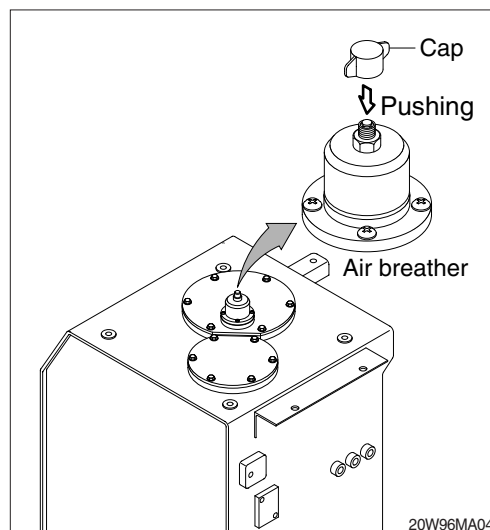

5) PRECAUTION WHEN INSTALLING HYDRAULIC HOSES OR PIPES

- (1) Be particularly careful that the joint of hose, pipe and functioning item are not damaged.
Avoid contamination.
- (2) Assemble after cleaning the hose, pipe and joint of functioning item.
- (3) Use genuine parts.
- (4) Do not assemble the hose in the condition of twisted or sharp radius.
- (5) Keep the specified tighten torque.

6) PERIODICAL REPLACEMENT OF SAFETY PARTS

- (1) It is desirable to do periodic maintenance the machine for using the machine safely for a long time.

However, recommend to replace regularly the parts related safety not only safety but maintain satisfied performance.

- (2) These parts can cause the disaster of life and material as the quality changes by passing time and it is worn, diluted, and gets fatigued by using repeatedly.

These are the parts which the operator can not judge the remained lifetime of them by visual inspection.

- (3) Repair or replace if an abnormality of these parts is found even before the recommended replacement interval.

Periodical replacement of safety parts			Interval
Engine		Fuel hose (tank-engine)	Every 2 years
		Heater hose (heater-engine)	
Hydraulic system	Main circuit	Pump suction hose	Every 2 years
		Pump delivery hose	
		Swing hose	
	Working device	Boom cylinder line hose	Every 2 years
		Arm cylinder line hose	
		Bucket cylinder line hose	
	Brake line	Service brake line hose	Every 2 years
		Parking brake line hose	
		Steering line hose	

- ※ 1. Replace O-ring and gasket at the same time when replacing the hose.

Replace clamp at the same time if the hose clamp is cracked when checking and replacing the hose.

2. TIGHTENING TORQUE

Use following table for unspecified torque.

1) BOLT AND NUT

(1) Coarse thread

Bolt size	8T		10T	
	kg · m	lb · ft	kg · m	lb · ft
M 6 × 1.0	0.9 ~ 1.3	6.5 ~ 9.4	1.1 ~ 1.7	8.0 ~ 12.3
M 8 × 1.25	2.0 ~ 3.0	14.5 ~ 21.7	2.7 ~ 4.1	19.5 ~ 29.7
M10 × 1.5	4.0 ~ 6.0	28.9 ~ 43.4	5.5 ~ 8.3	39.8 ~ 60.0
M12 × 1.75	7.4 ~ 11.2	53.5 ~ 81.0	9.8 ~ 15.8	70.9 ~ 114
M14 × 2.0	12.2 ~ 16.6	88.2 ~ 120	16.7 ~ 22.5	121 ~ 163
M16 × 2.0	18.6 ~ 25.2	135 ~ 182	25.2 ~ 34.2	182 ~ 247
M18 × 2.5	25.8 ~ 35.0	187 ~ 253	35.1 ~ 47.5	254 ~ 344
M20 × 2.5	36.2 ~ 49.0	262 ~ 354	49.2 ~ 66.6	356 ~ 482
M22 × 2.5	48.3 ~ 63.3	349 ~ 458	65.8 ~ 98.0	476 ~ 709
M24 × 3.0	62.5 ~ 84.5	452 ~ 611	85.0 ~ 115	615 ~ 832
M30 × 3.0	124 ~ 168	898 ~ 1214	169 ~ 229	1223 ~ 1656
M36 × 4.0	174 ~ 236	1261 ~ 1704	250 ~ 310	1808 ~ 2242

(2) Fine thread

Bolt size	8T		10T	
	kg · m	lb · ft	kg · m	lb · ft
M 8 × 1.0	2.2 ~ 3.4	15.9 ~ 24.6	3.0 ~ 4.4	21.7 ~ 31.8
M10 × 1.2	4.5 ~ 6.7	32.5 ~ 48.5	5.9 ~ 8.9	42.7 ~ 64.4
M12 × 1.25	7.8 ~ 11.6	56.4 ~ 83.9	10.6 ~ 16.0	76.7 ~ 116
M14 × 1.5	13.3 ~ 18.1	96.2 ~ 131	17.9 ~ 24.1	130 ~ 174
M16 × 1.5	19.9 ~ 26.9	144 ~ 195	26.6 ~ 36.0	192 ~ 260
M18 × 1.5	28.6 ~ 43.6	207 ~ 315	38.4 ~ 52.0	278 ~ 376
M20 × 1.5	40.0 ~ 54.0	289 ~ 391	53.4 ~ 72.2	386 ~ 522
M22 × 1.5	52.7 ~ 71.3	381 ~ 516	70.7 ~ 95.7	511 ~ 692
M24 × 2.0	67.9 ~ 91.9	491 ~ 665	90.9 ~ 123	658 ~ 890
M30 × 2.0	137 ~ 185	990 ~ 1339	182 ~ 248	1314 ~ 1796
M36 × 3.0	192 ~ 260	1390 ~ 1880	262 ~ 354	1894 ~ 2562

2) PIPE AND HOSE (FLARE type)

Thread size (PF)	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

3) PIPE AND HOSE (ORFS type)

Thread size (UNF)	Width across flat (mm)	kgf · m	lbf · ft
9/16-18	19	4	28.9
11/16-16	22	5	36.2
13/16-16	27	9.5	68.7
1-3/16-12	36	18	130
1-7/16-12	41	21	152
1-11/16-12	50	35	253

4) FITTING

Thread size	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

4) TIGHTENING TORQUE OF MAJOR COMPONENT

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt (bracket-frame, FR)	M20 × 2.5	55±3.5	398±25.3
2		Engine mounting bolt (bracket-frame, RR)	M24 × 3.0	97±7.0	702±50.6
3		Engine mounting bolt (engine-bracket)	M12 × 1.75	12.8±3.0	92.6±21.7
4		Radiator mounting bolt, nut	M16 × 2.0	29.7±4.5	215±32.5
5		Coupling mounting bolt	M18 × 2.5	32.0±1.0	231±7.2
6	Hydraulic system	Main pump mounting bolt	M10 × 1.5	6.9±1.3	49.9±9.4
7		Main pump mounting bolt (bracket)	M10 × 1.5	6.9±1.4	49.9±10.1
8		Main control valve mounting bolt	M12 × 1.75	12.2±1.3	88.2±9.4
9		Travel motor mounting bolt	M16 × 2.0	29.7±4.5	215±32.5
10		Fuel tank mounting bolt	M20 × 2.5	57.9±8.7	419±62.9
11		Hydraulic oil tank mounting bolt	M20 × 2.5	57.9±8.7	419±62.9
12		Turning joint mounting bolt, nut	M12 × 1.75	12.8±3.0	92.6±21.7
13	Power train system	Swing motor mounting bolt	M20 × 2.5	57.9±5.8	419±42.0
14		Swing bearing upper mounting bolt	M20 × 2.5	57.9±6.0	419±43.4
15		Swing bearing lower mounting bolt	M20 × 2.5	57.9±6.0	419±43.4
16		Real axle mounting bolt, nut	M24 × 2.0	100±10	723±72.3
17		Transmission bracket mounting bolt	M20 × 2.5	44±2.0	318±14.5
18		Transmission mounting bolt	M20 × 2.5	39±4.2	282±30.4
19		Oscillating cylinder mounting bolt	M22 × 1.5	69.4±10.4	502±75.2
20		Oscillating cylinder support bolt	M16 × 2.0	29.7±4.5	215±32.5
21		Wheel nut	M22 × 1.5	60 ⁺⁰ ₋₅	433 ⁺⁰ _{-36.2}
22		Front drive shaft mounting bolt, nut	M10 × 1.0	5.9±0.6	42.7±4.3
23		Rear drive shaft mounting bolt, nut	M10 × 1.0	5.9±0.6	42.7±4.3
24	Others	Counterweight mounting bolt	M36 × 3.0	337±33	2440±72.3
25		Cab mounting bolt, nut	M12 × 1.75	12.8±3.0	92.6±21.7
26		Operator's seat mounting bolt	M 8 × 1.25	4.05±0.8	29.3±5.8

※ For tightening torque of engine and hydraulic components, see engine maintenance guide and service manual.

3. FUEL, COOLANT AND LUBRICANTS

1) NEW MACHINE

New machine used and filled with following lubricants.

Description	Specification
Engine oil	SAE 15W-40 (API CH-4), ★SAE 5W-40 (API CH-4)
Hydraulic oil	Hyundai genuine long life hydraulic oil (ISO VG32, VG46, VG68) Conventional hydraulic oil (ISO VG15★)
Swing reduction gear oil	SAE 85W-140 (API GL-5)
Transmission oil	SAE 10W-30 (API CF-4)
Axle oil	SAE 85W-90 LSD-Additive (API GL-5) or UTTO
Grease	Lithium base grease NLGI No. 2
Fuel	ASTM D975-No. 2
Coolant	Mixture of 50% ethylene glycol base antifreeze and 50% water. Mixture of 60% ethylene glycol base antifreeze and 50% water. ★

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Material

UTTO : Universal Tractor Transmission Oil

★ : Cold region

Russia, CIS, Mongolia

2) RECOMMENDED OILS

Use only oils listed below or equivalent.

Do not mix different brand oil.

Service point	Kind of fluid	Capacity l (U.S. gal)	Ambient temperature °C (°F)								
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)
Engine oil pan	Engine oil	14.2 (3.8)	★SAE 5W-40								
							SAE 30				
Transmission case		2.5 (0.66)	SAE 10W								
			SAE 10W-30								
			SAE 15W-40								
Swing drive	Gear oil	5.0 (1.3)	★SAE 75W-90								
				SAE 85W-140							
	Grease	1.2 (0.3)	★NLGI NO.1								
				NLGI NO.2							
Front axle	Gear oil	Center : 9.6 (2.5) Hub : 2.5×2 (0.7×2)	SAE 85W-90 LSD or UTTO								
Rear axle		Center : 13.1(3.5) Hub : 2.5×2 (0.7×2)									
Hydraulic tank	Hydraulic oil	Tank: 165 (43.6) System: 340 (89.8)	★ISO VG 15								
				ISO VG 32							
				ISO VG 46							
				ISO VG 68							
Fuel tank	Diesel fuel	310 (81.9)	★ASTM D975 NO.1								
						ASTM D975 NO.2					
Fitting (Grease nipple)	Grease	As required	★NLGI NO.1								
						NLGI NO.2					
Radiator (Reservoir tank)	Mixture of antifreeze and soft water★1	35 (9.2)	Ethylene glycol base permanent type								
			★Ethylene glycol base permanent type (60 : 40)								

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Materia

UTTO : Universal Tractor Transmission Oil

★ : Cold region

Russia, CIS, Mongolia

★1 : Soft water

City water or distilled water

4. MAINTENANCE CHECK LIST

1) DAILY SERVICE BEFORE STARTING

Check items	Service	Page
Visual check		
Fuel tank	Check, Refill	6-25
Hydraulic oil level	Check, Add	6-31
Engine oil level	Check, Add	6-18
Coolant level	Check, Add	6-20
Control panel & pilot lamp	Check, Clean	6-45
Prefilter	Check, Clean	6-26
Fan belt tension & damage	Check, Adjust	6-24
★ Attachment pin and bushing	Lubricate	6-44
• Boom cylinder tube end		
• Boom foot		
• Boom cylinder rod end		
• Arm cylinder tube end		
• Arm cylinder rod end		
• Boom + Arm connecting		
• Bucket cylinder tube end		

★ Lubricate every 10 hours or daily for initial 100 hours.

2) EVERY 50 HOURS SERVICE

Check items	Service	Page
Fuel tank (water sediment)	Drain	6-25
Drive shaft grease (flange bearing)	Check, Add	6-35
Wheel nuts	Check, Tighten	6-37
Tires (air pressure)	Check, Inflate	6-37
Front axle pivot pin bushing	Check, Lubricate	6-36
Lubricate pin and bushing	Lubricate	6-44
• Bucket cylinder rod end		
• Arm + Bucket connecting		
• Arm + Bucket control link		
• Bucket control rod		
• Bucket link connecting		
• Dozer blade cylinder (rod end, tub end)		6-36
• Dozer blade pivot pin		6-36
• Outrigger (pivot pin, cylinder pin)		6-36

3) INITIAL 50 HOURS SERVICE

Check items	Service	Page
Bolts & Nuts · Power train mounting bolts · Swing motor mounting bolts · Swing bearing mounting bolts · Engine mounting bolts · Counterweight mounting bolts · Turning joint locating bolts · Hydraulic pump mounting bolts	Check, Tight	6-8

※ Service the above items only for the new machine, and thereafter keep the normal service interval.

4) EVERY 100 HOURS SERVICE

Check items	Service	Page
Front axle steering case grease	Add, Lubricate	6-36

5) EVERY 200 HOURS SERVICE

Check items	Service	Page
★ Return filter	Replace	6-32
★ Pilot line filter	Replace	6-33
★ Drain filter cartridge	Replace	6-33

★ Replace 3 filters for continuous hydraulic breaker operation only.

6) INITIAL 250 HOURS SERVICE

Check items	Service	Page
Engine oil	Change	6-18, 19
Engine oil filter	Replace	6-18, 19
Prefilter (water, element)	Replace	6-26
Fuel filter element	Replace	6-27
Swing reduction gear oil	Change	6-34
Swing reduction gear grease	Check, Add	6-34
Pilot line filter	Replace	6-33
Hydraulic return filter	Replace	6-32
Drain filter cartridge	Replace	6-33
Transmission oil	Change	6-40

※ Service the above items only for the new machine, and thereafter keep the normal service interval.

7) EVERY 250 HOURS SERVICE

Check items	Service	Page
★ Engine oil	Change	6-18, 19
★ Engine oil filter	Replace	6-18, 19
Battery (voltage)	Check	6-45
Swing bearing grease	Lubricate	6-34
Aircon & heater fresh air filter	Check, Clean	6-48
Front & rear axle differential gear oil	Add, Lubricate	6-38
Axle planetary gear oil (front, rear)	Add, Lubricate	6-38
Bolts & Nuts	Check, Tight	6-8
· Power train mounting bolts		
· Swing motor mounting bolts		
· Swing bearing mounting bolts		
· Engine mounting bolts		
· Counterweight mounting bolts		
· Turning joint locating bolts		
· Hydraulic pump mounting bolts		
Attachment pin and bushing	Lubricate	6-44
· Boom cylinder tube end		
· Boom foot		
· Boom cylinder rod end		
· Arm cylinder tube end		
· Arm cylinder rod end		
· Boom + Arm connecting		
· Bucket cylinder tube end		

★ If you use high sulfur containing fuel above than 0.5% or use low grade of engine oil reduce change interval.

8) INITIAL 500 HOURS SERVICE

Check items	Service	Page
Front & rear axle differential gear oil	Change	6-39
Axle planetary gear oil (front, rear)	Change	6-39

9) EVERY 500 HOURS SERVICE

Check items	Service	Page
Prefilter	Change	6-26
Radiator, cooler fin and charge air cooler	Check, Clean	6-23
☆ Air cleaner element (primary)	Check, Clean	6-25
Fuel filter element	Replace	6-27

☆ Clean the primary element only after 500 hours operation or when the air cleaner warning lamp blinks. Replace primary element and safety element after 4 times cleanings of primary element.

10) EVERY 1000 HOURS SERVICE

Check items	Service	Page
Air breather element	Replace	6-33
Swing reduction gear oil	Change	6-34
Swing reduction gear grease	Change	6-34
Grease in swing gear and pinion	Change	6-34
Transmission oil	Change	6-39
Hydraulic oil return filter	Replace	6-32
Pilot line filter	Replace	6-33
Drain filter cartridge	Replace	6-33

11) EVERY 1500 HOURS SERVICE

Check items	Service	Page
Front & rear axle differential gear oil	Change	6-39
Axle planetary gear oil (front, rear)	Change	6-39

12) EVERY 2000 HOURS SERVICE

Check items	Service	Page
Hydraulic tank		
★ Oil ★ ¹	Change	6-31
· Suction strainer	Check, Clean	6-32
Coolant	Change	6-20, 21, 22, 23
Hoses, fittings, clamps (fuel, coolant, hydraulic)	Check, Retighten, Replace	-

★¹ Conventional hydraulic oil

★ **Change oil every 600 hours of continuous hydraulic breaker operation.**

13) EVERY 5000 HOURS SERVICE

Check items	Service	Page
Hydraulic tank		
★ Oil ★ ²	Change	6-31

★² Hyundai genuine long life hydraulic oil



★ **Change oil every 1000 hours of continuous hydraulic breaker operation.**

13) WHEN REQUIRED

Whenever you have trouble in the machine, you must perform the service of related items, system by system.

Check items	Service	Page
Fuel system		
· Fuel tank	Drain or Clean	6-25
· Prefilter	Clean or Replace	6-26
· Fuel filter element	Replace	6-27
Engine lubrication system		
· Engine oil	Change	6-18, 19
· Engine oil filter	Replace	6-18, 19
Engine cooling system		
· Coolant	Add or Change	6-20, 21, 22, 23
· Radiator	Clean or Flush	6-20, 21, 22, 23
· Charge air cooler	Check	6-23
Engine air system		
· Air cleaner element	Replace	6-25
Hydraulic system		
· Hydraulic oil	Add or Change	6-31
· Return filter	Replace	6-32
· Drain filter cartridge	Replace	6-33
· Pilot line filter	Replace	6-33
· Air breather element	Replace	6-33
· Suction strainer	Clean	6-32
Tire pressure	Check, Inflate	6-37
Bucket		
· Tooth	Replace	6-42
· Side cutter	Replace	6-42
· Linkage	Adjust	6-43
· Bucket assy	Replace	6-41
Air conditioner and heater		
· Fresh filter	Clean, Replace	6-48
· Recirculation filter	Clean	6-49

5. MAINTENANCE CHART

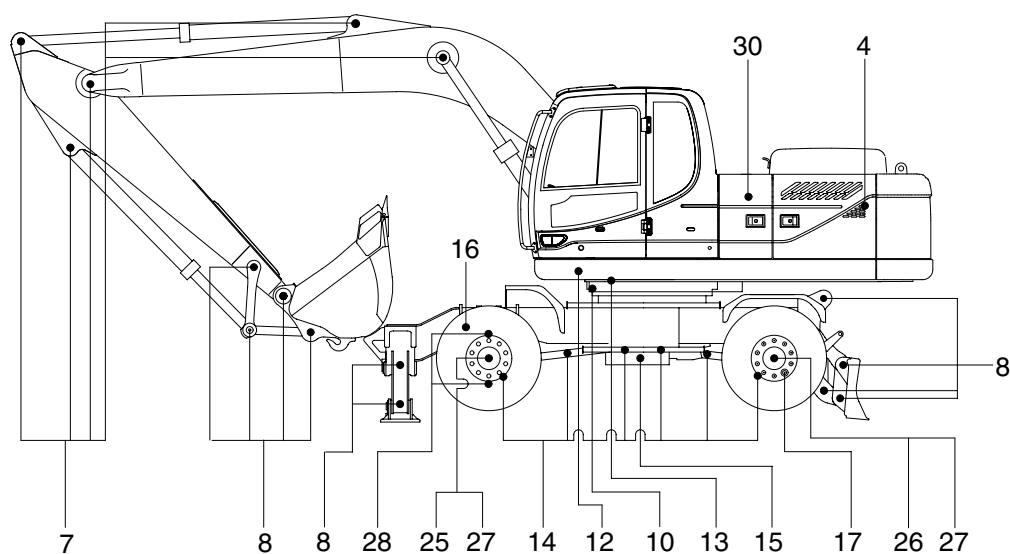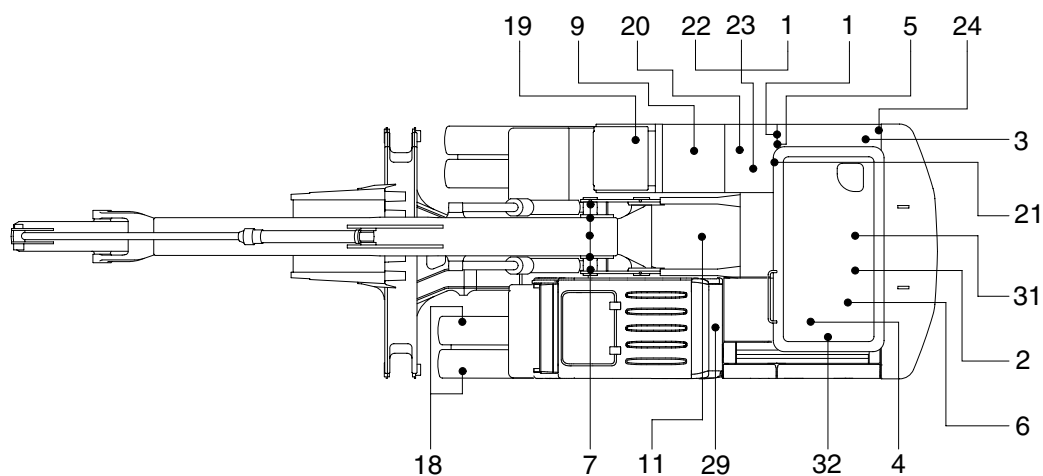

20W96MA05

Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.
4. For other details, refer to the service manual.

Service interval	No.	Description	Service action	Oil symbol	Capacity ℓ (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	165 (43.6)	1
	2	Engine oil level	Check, Add	EO	14.2 (3.8)	1
	4	Radiator coolant level	Check, Add	C	35 (9.2)	1
	5	Prefilter (water, element)	Check, Clean	-	-	1
	6	Fan belt tension & damage	Check, Clean	-	-	1
50 Hours or weekly	8	Bucket linkage & lower frame pins	Check, Add	PGL	-	34
	9	Fuel tank (water, sediment)	Check, Clean	DF	-	1
	11	Swing reduction gear case	Check, Add	GO	5.0 (1.3)	1
	14	Drive shaft grease (flange bearing)	Check, Add	PGL	-	6
	16	Front axle pivot pin bushing	Check, Add	PGL	-	1
	17	Wheel nuts	Check, Tighten	-	-	40
	18	Tire (air pressure)	Check, Add	-	-	8
100 Hours	28	Front axle steering case	Add, Lubricate	PGL	-	4
250 Hours	2	Engine oil	Change	EO	14.2 (3.8)	1
	3	Engine oil filter	Replace	-	-	1
	7	Attachment pins	Check, Add	PGL	-	11
	10	Swing bearing grease	Check, Add	PGL	-	2
	19	Battery (voltage)	Check	-	-	1
	25	Front axle differential gear case	Add, Lubricate	GO	9.6 (2.54)	1
	26	Rear axle differential gear case	Add, Lubricate	GO	13.1 (3.46)	1
	27	Axle planetary gear case (front, rear)	Add, Lubricate	GO	2.5 (0.66)	4
500 Hours	29	Aircon & heater fresh air filter	Check, Clean	-	-	1
	5	Prefilter (water, element)	Replace	-	-	1
	30	Air cleaner element (primary)	Check, Clean	-	-	1
	31	Fuel filter element	Replace	-	-	1
1000 Hours	32	Radiator, oil cooler, charge air cooler	Check, Clean	-	-	3
	11	Swing reduction gear case	Change	GO	5.0 (1.3)	1
	12	Swing reduction gear grease	Change	PGL	1.1 kg (2.4 lb)	1
	13	Swing gear and pinion grease	Change	PGL	13 kg (28.7 lb)	1
	15	Transmission case	Change	EO	2.5 (0.66)	1
	20	Hydraulic oil return filter	Replace	-	-	1
	21	Drain filter cartridge	Replace	-	-	1
	22	Air breather element	Replace	-	-	1
1500 Hours	24	Pilot line filter element	Replace	-	-	1
	25	Front axle differential gear case	Change	GO	9.6 (2.54)	1
	26	Rear axle differential gear case	Change	GO	13.1 (3.46)	1
2000 Hours	27	Axle planetary gear case (front, rear)	Change	PGL	2.5 (0.66)	4
	1	Hydraulic oil ^{*1}	Change	HO	165 (43.6)	1
	4	Radiator coolant	Change	C	35 (9.2)	1
	23	Hydraulic oil suction strainer	Check, Clean	-	-	1
5000 Hours	-	Hoses, fittings, clamps (fuel, coolant, hydraulic)	Check, Retighten, Replace	-	-	-
	1	Hydraulic oil ^{*2}	Change	HO	165 (43.6)	1
As required	29	Aircon & heater fresh filter	Replace	-	-	1
	29	Aircon & heater recirculation filter	Clean, Replace	-	-	1
	30	Air cleaner element (safety)	Replace	-	-	1
	30	Air cleaner element (primary)	Replace	-	-	1

^{*1} Conventional hydraulic oil

^{*2} Hyundai genuine long life hydraulic oil

※ Oil symbol

Please refer to the recommended lubricants for specification.

DF : Diesel fuel

GO : Gear oil

HO : Hydraulic oil

C : Coolant

PGL : Grease


EO : Engine oil

6. SERVICE INSTRUCTION

1) CHECK ENGINE OIL LEVEL


Check the oil level with the machine on a flat ground before starting engine.

- (1) Pull out the dipstick and wipe with a clean cloth.
- (2) Check the oil level by inserting the dipstick completely into the hole and pulling out again.
- (3) If oil level is **LOW**, add oil and then check again.
 - ※ If the oil is contaminated or diluted, change the oil regardless of the regular change interval.
 - ※ Check oil level after engine has been stopped for 15 minutes.
 - ▲ Do not operate unless the oil level is in the normal range.

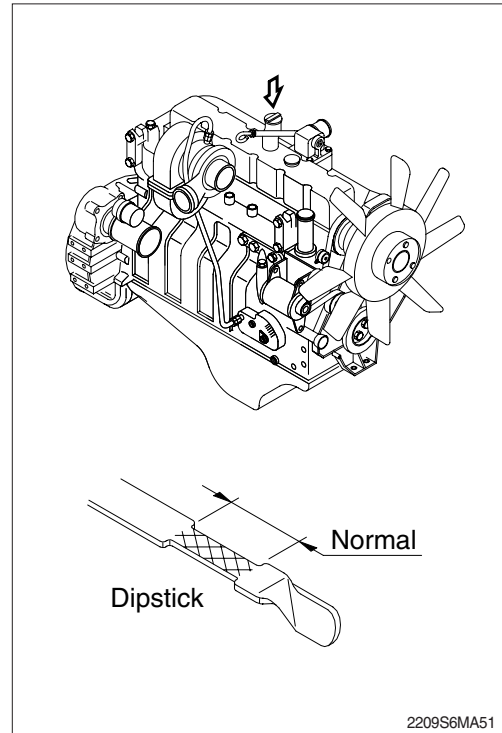


2) REPLACEMENT OF ENGINE OIL AND OIL FILTER

- (1) Warm up the engine.
- (2) Turn the lever to open position.
 - ※ A drain pan with a capacity of 24 liters (6.3 U.S. gallons) will be adequate.

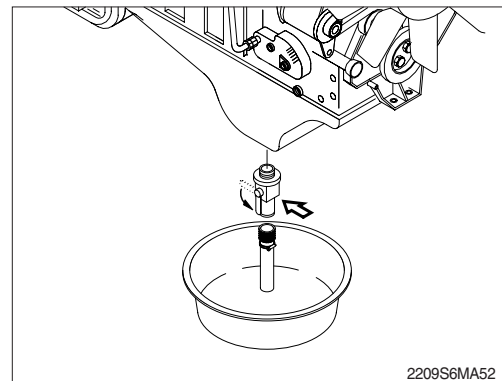


- (3) Clean around the filter head, remove the filter and clean the gasket surface.
 - Wrench size : 90 ~ 95 mm (3.5~3.8 in)

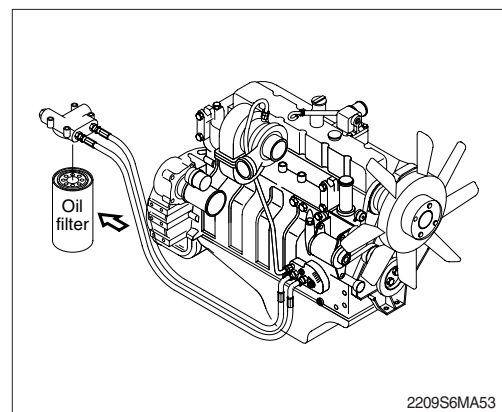

(4) Apply a light film of lubricating oil to the gasket sealing surface before installing the filters.


※ **Fill the filters with clean lubricating oil.**

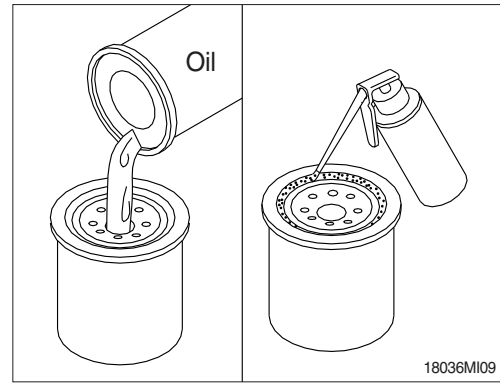

(5) Install the filter to the filter head.


※ **Mechanical over-tightening may distort the threads or damage the filter element seal.**

• Install the filter as specified by the filter manufacturer.

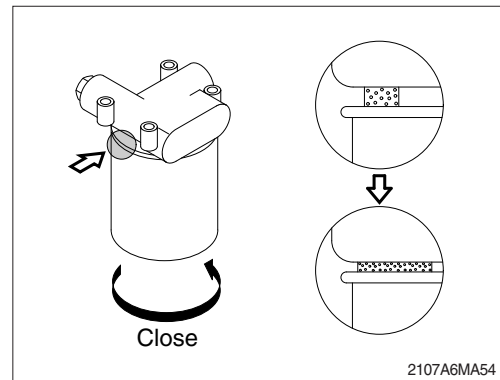


(6) Fill the engine with clean oil to the proper level.

• Quantity : 14.2 l (3.8 U.S. gallons)

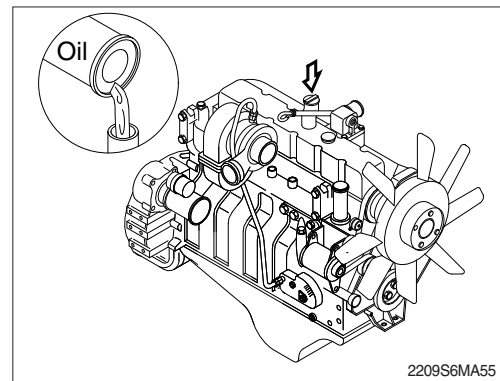

(7) Operate the engine at low idle and inspect for leaks at the filters and the drain plug.



Shut the engine off and check the oil level with the dipstick. Allow 15minutes for oil to drain down before checking.

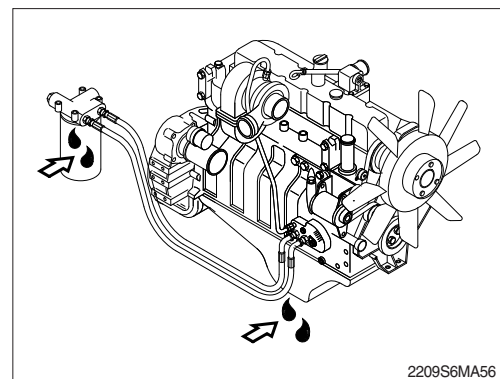

3) CHECK COOLANT

- (1) Check if the level of coolant in reservoir tank is between FULL and LOW.
- (2) Add the mixture of antifreeze and water after removing the cap of the reservoir tank if coolant is not sufficient.
- (3) Be sure to add the coolant by opening the cap of radiator when coolant level is below LOW.
- (4) Replace gasket of radiator cap when it is damaged.

⚠ Hot coolant can spray out if radiator cap is removed while engine is hot. Remove the cap after the engine has cooled down.

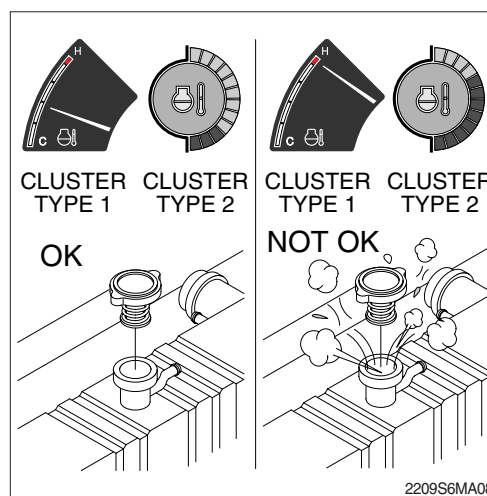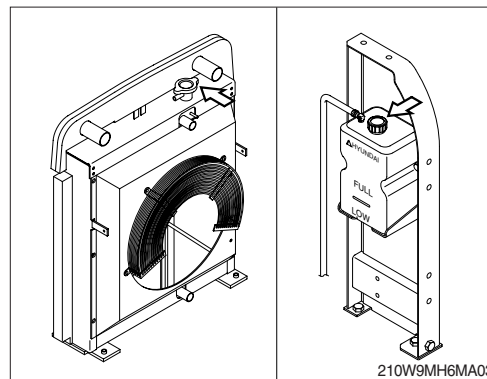

4) FLUSHING AND REFILLING OF RADIATOR

- (1) Change coolant

⚠ Avoid prolonged and repeated skin contact with used antifreeze. Such prolonged repeated contact can cause skin disorders or other bodily injury.


Avoid excessive contact-wash thoroughly after contact.

Keep out of reach of children.

※ **Protect the environment : Handling and disposal of used antifreeze can be subject to federal, state, and local law regulation.**

Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for the receipt of used antifreeze.


If in doubt, contact your local authorities for guidance as to proper handling of used antifreeze.

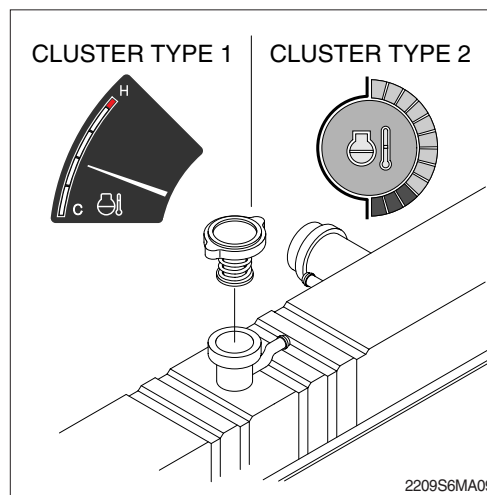

- ▲ Wait until the temperature is below 50 °C (122 °F) before removing the coolant system pressure cap.


Failure to do so can cause personal injury from heated coolant spray.

Drain the cooling system by opening the drain valve on the radiator and removing the plug in the bottom of the water inlet. A drain pan with a capacity of 40 liters (10 U.S. gallons) will be adequate in most applications.

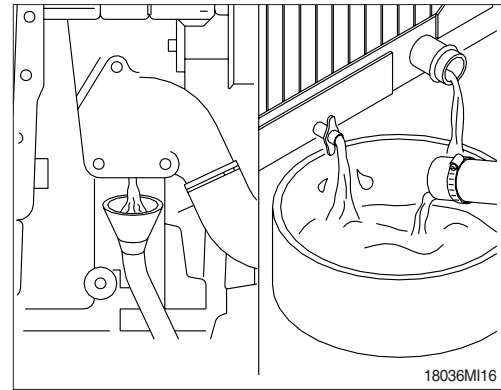


(2) Flushing of cooling system

- ① Fill the system with a mixture of sodium carbonate and water (or a commercially available equivalent).
 - ※ Use 0.5kg (1.0 pound) of sodium carbonate for every 23 liters (6.0 U.S. gallons) of water.
 - ※ Do not install the radiator cap. The engine is to be operated without the cap for this process.

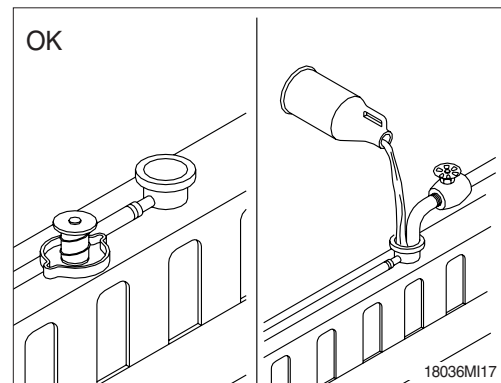


- ※ During filling, air must be vented from the engine coolant passages. Open the engine venting petcock.


The system must be filled slowly to prevent air locks. Wait 2 to 3 minutes to allow air to be vented, then add mixture to bring the level to the top.

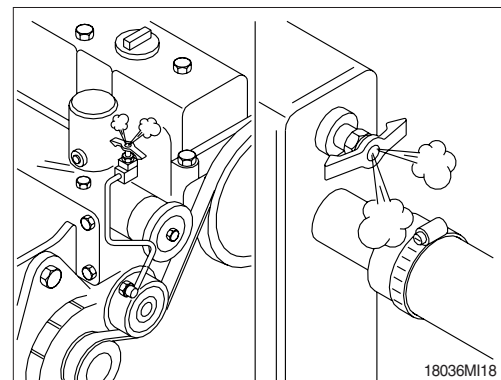


- ② Operate the engine for 5 minutes with the coolant temperature above 80 °C (176 °F). Shut the engine off, and drain the cooling system.

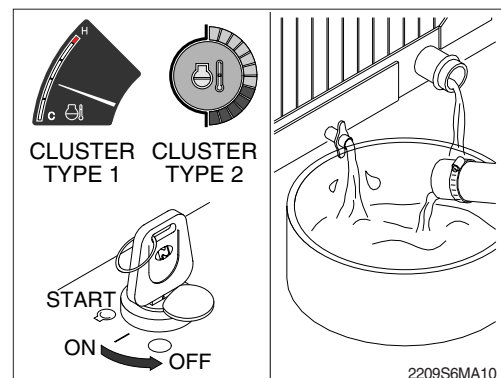

- ③ Fill the cooling system with clean water.
- ※ **Be sure to vent the engine and aftercooler for complete filling.**
 - ※ **Do not install the radiator cap or the new coolant filter.**

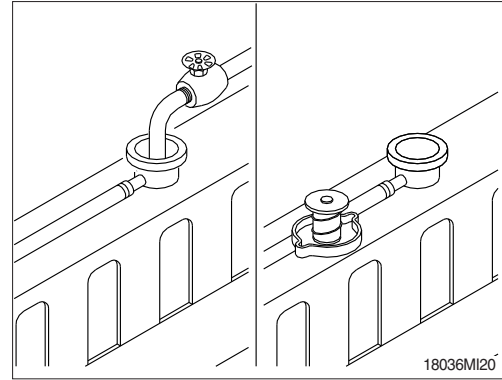


- ④ Operate the engine for 5 minutes with the coolant temperature above 80 °C (176 °F) . Shut the engine off, and drain the cooling system.
- ※ **If the water being drained is still dirty, the system must be flushed again until the water is clean.**

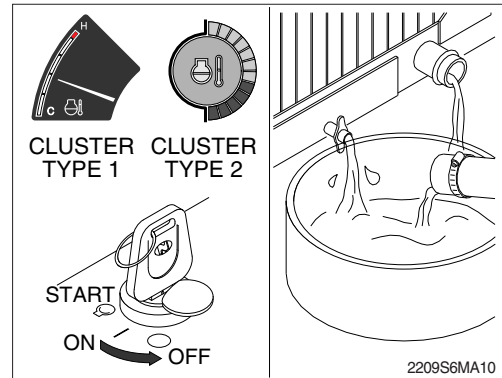


(3) Cooling system filling


- ① Use a mixture of 50 percent soft water and 50 percent ethylene glycol antifreeze to fill the cooling system. Refer to the page 6-10. Coolant capacity (engine only) : 9.8 l (2.6 U.S. gallons)
- ※ **Do not use hard water such as river water or well water.**

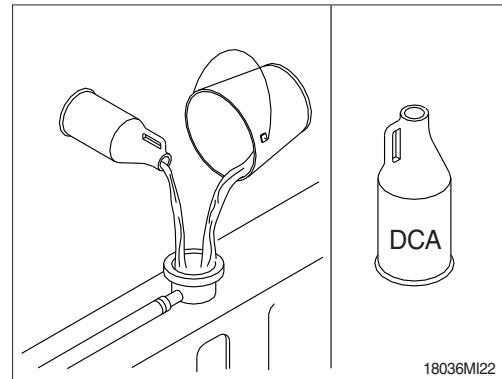

- ② The system has a maximum fill rate of 14 liters (3.5 U.S. gallons) per minute. Do not exceed this fill rate.
- ※ **The system must be filled slowly to prevent air locks.**
During filling, air must be vented from the engine coolant passage.

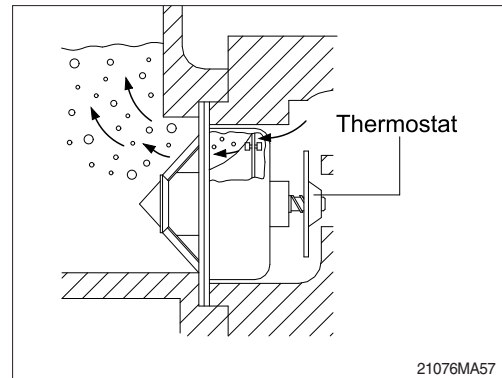



- ③ Install the pressure cap. Operate the engine until it reaches a temperature 80 °C (176 °F), and check for coolant leaks. Check the coolant level again to make sure the system is full of coolant.

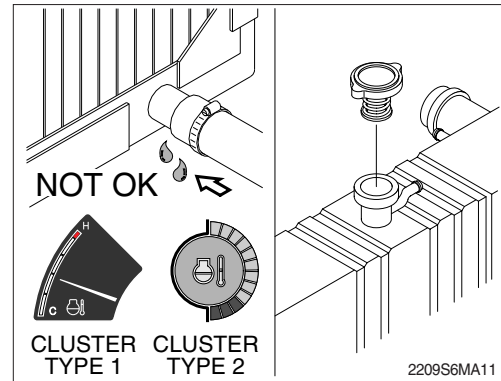

5) CLEAN RADIATOR AND OIL COOLER


Check, and if necessary, clean and dry outside of radiator and oil cooler. After working in a dusty place, clean radiator more frequently.

- (1) Visually inspect the radiator for clogged radiator fins.
- (2) Use 550 kPa (80 psi) air pressure to blow the dirt and debris from the fins.
Blow the air in the opposite direction of the fan air flow.
- (3) Visually inspect the radiator for bent or broken fins.
※ **If the radiator must be replaced due to bent or broken fins which can cause the engine to overheat, refer to the manufacturer's replacement procedures.**
- (4) Visually inspect the radiator for core leaks.

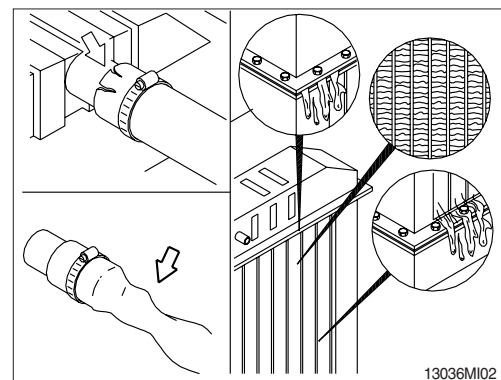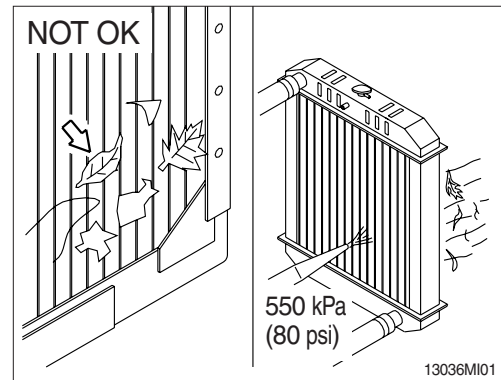

6) CHECK CHARGE AIR COOLER


Inspect the charge air cooler for dirt and debris blocking the fins. Check for cracks, holes, or other damage. If damage is found, please contact Hyundai distributor.

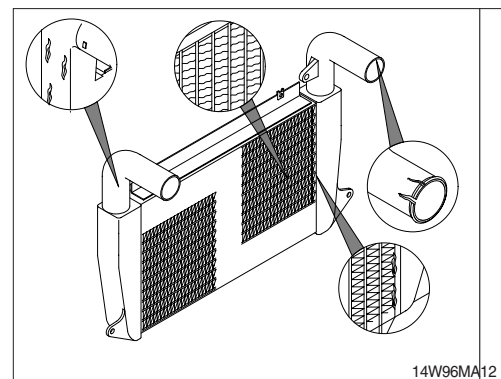


7) FAN BELT TENSION

- (1) Measure the belt deflection at the longest span of the belt.


• Maximum deflection : 9.5 - 12.7 mm
(3/8 to 1/2 inch)

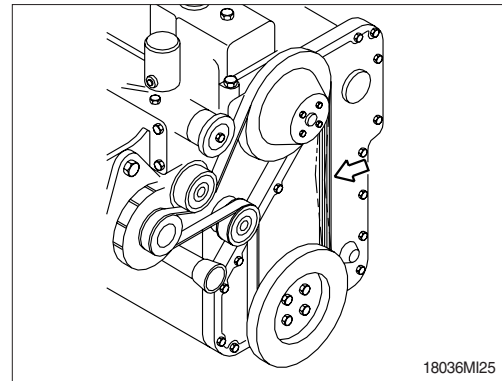

- (2) Inspect the drive for damage.

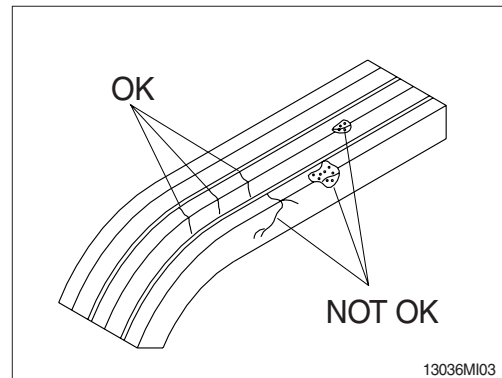

- (3) Inspect the drive belt, tension bearing and fan hub.

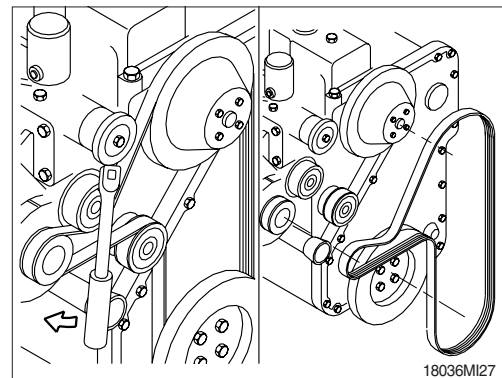

8) INSPECTION OF COOLING FAN

▲ Personal injury can result from a fan blade failure. Never pull or pry on the fan. This can damage the fan blade and cause fan failure.


※ Rotate the crankshaft by using the engine barring gear.

※ A visual inspection of the cooling fan is required daily.

Check for cracks, loose rivets, and bent or loose blades.

Check the fan to make sure it is securely mounted. Tighten the capscrews if necessary.

Replace any fan that is damaged.

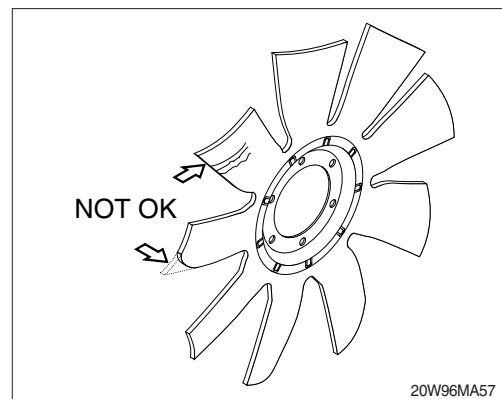



9) CLEANING OF AIR CLEANER

(1) Primary element

- ① Loosen the clamps and remove the element.
 - ② Clean the inside of the body.
 - ③ Clean the element with pressurized air.
 - Remove the dust inside of the element by the pressurized air (below 3 kgf/cm², 40 psi) forward and backward equally.
 - ④ Inspect for cracks or damage of element by putting a light bulb inside of the element.
 - ⑤ Insert element and tighten wing nut.
- ※ **Replace the primary element after 4 times cleanings.**


(2) Safety element

- ※ **Replace the safety element only when the primary element is cleaned for the 4 times.**
- ※ **Always replace the safety element. Never attempt to reuse the safety element by cleaning the element.**

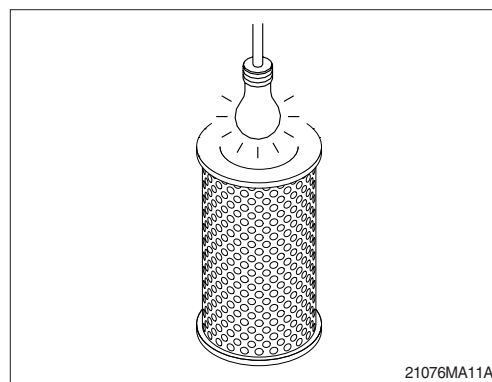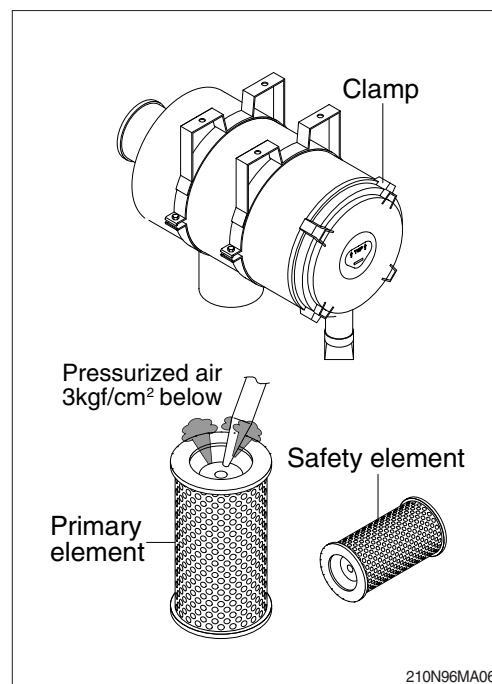

10) FUEL TANK

- (1) Fill fuel fully when system the operation to minimize water condensation, and check it with fuel gauge before starting the machine.
 - (2) Drain the water and sediment in the fuel tank by opening the drain cock.
 - ※ **Be sure to LOCK the cap of fuel tank.**
 - ※ **Remove the strainer of the fuel tank and clean it if contaminated.**
- ▲ **Stop the engine when refueling.**
All lights and flames shall be kept at a safe distance while refueling.

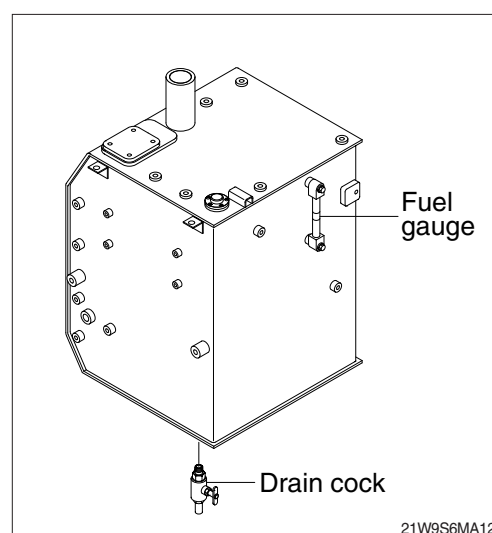


11) PREFILTER

※ Inspect or drain the collection bowl of water daily and replace the element every 500 hours.



(1) Drain water

- ① Open bowl drain valve to evacuate water.
- ② Close drain valve.

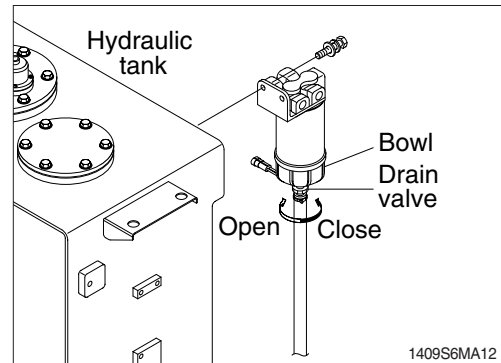


(2) Replace element

- ① Drain the unit of fuel. Follow "Drain water" instructions above.
- ② Remove element and bowl from filter head.
- ※ **The bowl is reusable, do not damage or discard.**
- ③ Separate element from bowl. Clean bowl and seal gland.
- ④ Lubricate new bowl seal with clean fuel or motor oil and place in bowl gland.
- ⑤ Attach bowl to new element firmly by hand.
- ⑥ Lubricate new element seal and place in element top gland.
- ⑦ Attach the element and bowl to the head.

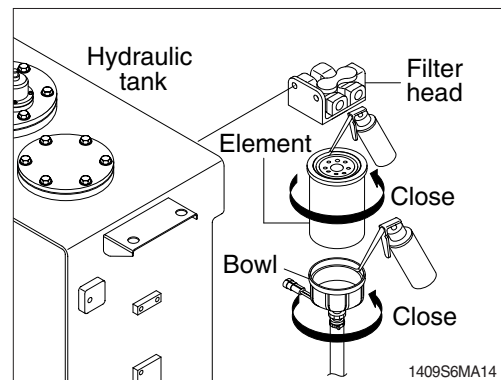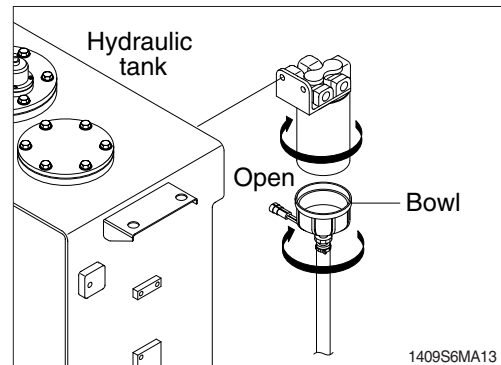


12) REPLACEMENT OF FUEL FILTER

- (1) Clean around the filter head, remove the filter and clean the gasket surface.
 - Wrench size : 90~95 mm (3.5~3.8 in)
 - (2) Replace the O-ring.
 - (3) Fully fill fuel in the new filter.
 - (4) Apply engine oil on the gasket of new filter when mounting, and tighten 3/4 to 1 turn more after the gasket touches the filter head.
 - (5) Relieve the air after mounting.
- ※ **Check for fuel leakage after the engine starts.**
If air is in the fuel system, the engine will not start, Start engine after bleeding the air according to the method of bleeding air.

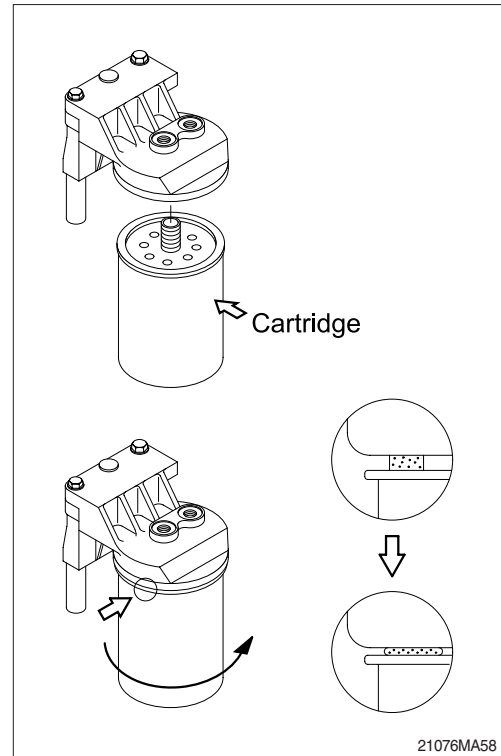


13) BELT TENSIONER, AUTOMATIC ADJUSTMENT


- (1) Every 1000hours, or 1 year, whichever occurs first, inspect the automatic belt tensioner.
With the engine turned off, check that neither the top nor bottom tensioner arm stop is touching the cast boss on the tensioner body. If either of the stops is touching a boss, the alternator belt must be replaced. Check to make sure the correct belt part number is being used if either condition exists.

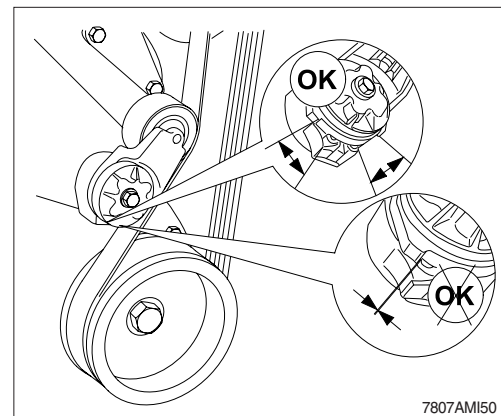


- (2) Check the tensioner pulley and body for cracks. If any cracks are noticed, the tensioner must be replaced. Refer to a Cummins Authorized Repair facility. Check the tensioner for dirt build-up. If this condition exists, the tensioner must be removed and steam-cleaned.

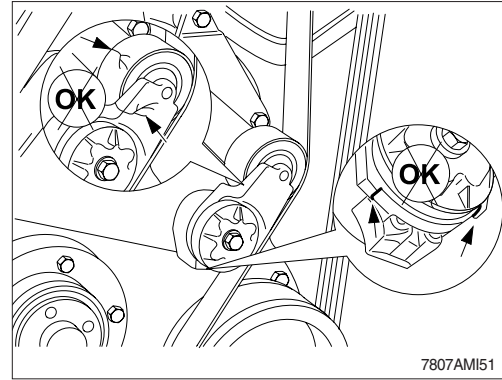

- (3) Check that the bottom tensioner arm stop is in contact with the bottom tensioner arm stop boss on the tensioner body. If these two are not touching, the tensioner must be replaced.

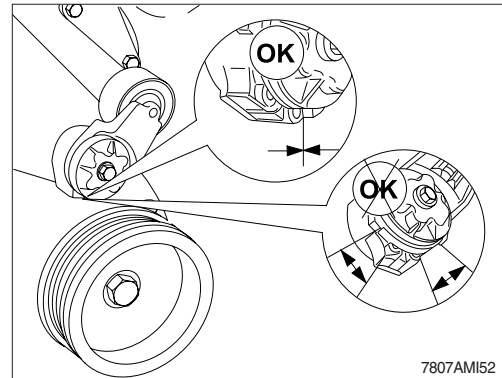


- (4) Inspect the tensioner for evidence of the pivoting tensioner arm contacting the stationary circular base. If there is evidence of these two areas touching, the pivot tube bushing has failed and the tensioner must be replaced.

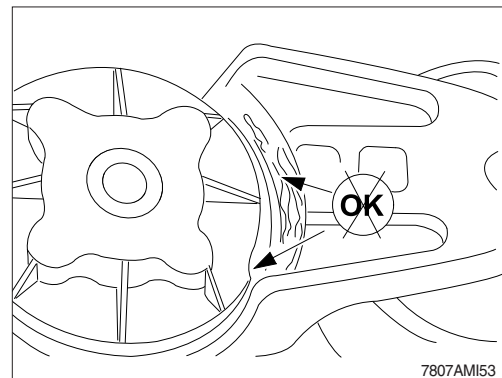

- (5) A worn tensioner that has play in it or a belt that “walks” off its pulley possibly indicates pulley misalignment.

※ **Maximum pulley misalignment is three degrees. This measurement can be taken with a straightedge and an inclinometer.**

- (6) Install the belt.

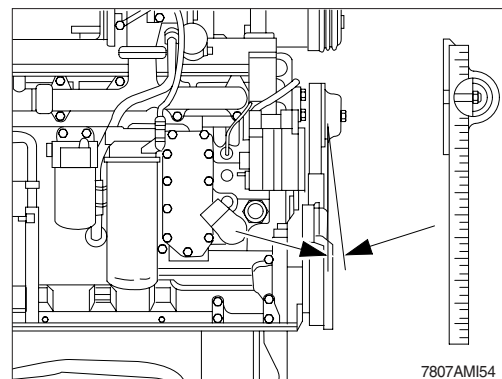


14) BLEEDING THE FUEL SYSTEM

- (1) Controlled venting is provided at the injection pump through the fuel drain manifold. Small amounts of air introduced by changing the fuel filters or fuel injection pump supply line will be vented automatically, if the fuel filter is changed in accordance with the instructions.

※ **Manual bleeding is required if :**


- The fuel filter is not filled prior to installation.
- Fuel injection pump is replaced.
- High pressure fuel line connections are loosened or fuel lines replaced.
- Initial engine start up or start up after an extended period of no engine operation.
- Machine fuel tank has been run until empty.

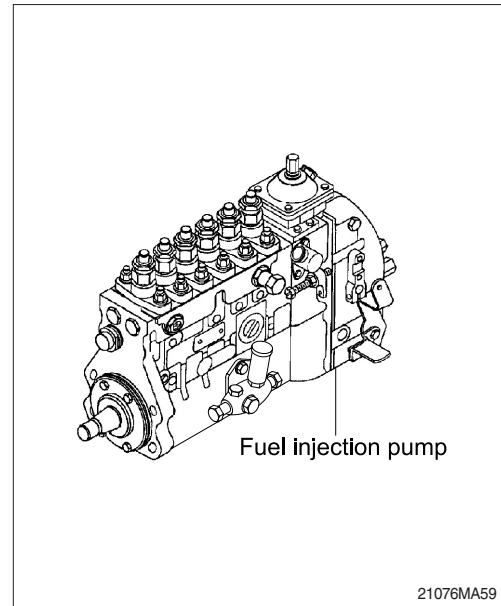

(2) Venting the low pressure lines and fuel filter

- ① Open the bleed screw.


- Wrench size : 17 mm

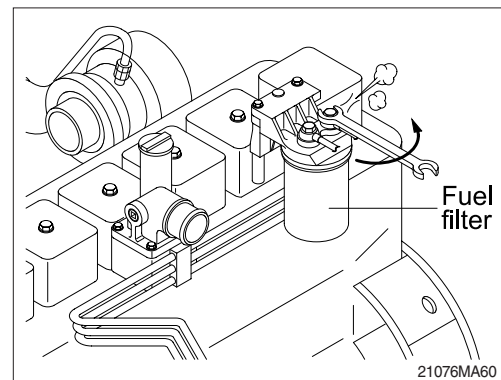

- ② Operate the hand lever until the fuel flowing from the fitting is free of air.

Tighten the bleed screw.


- Torque : 2.45 kgf-m (18 lbf-ft)

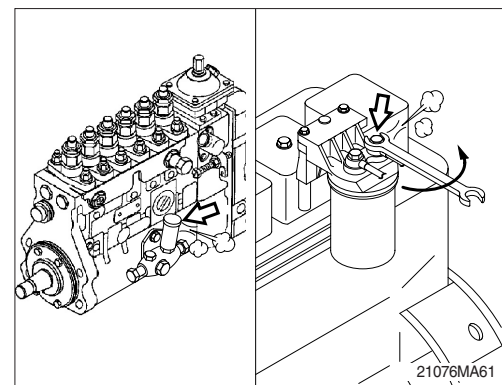

(3) Venting the high pressure lines


▲ The pressure of the fuel in the line is sufficient to penetrate the skin and cause serious bodily harm.

- ① Loosen the fittings at the injectors, and crank the engine to allow entrapped air to bleed from the lines. Tighten the fittings.
 - Wrench size :19 mm
- ② Start the engine and vent one line at a time until the engine runs smoothly.

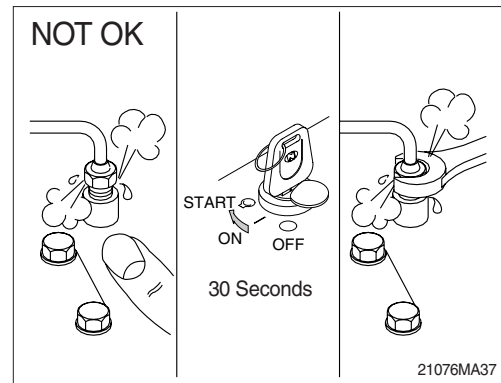


※ Do not engage the starter for more than 30 seconds each time when it is used to vent the system : wait 2 minutes between engagements.

▲ Do not bleed a hot engine as this could cause fuel to spill onto a hot exhaust manifold creating a danger of fire.

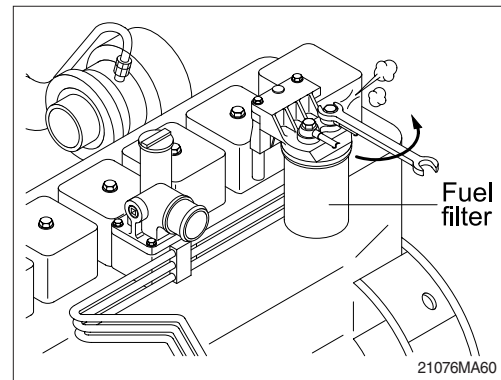


15) LEAKAGE OF FUEL

▲ Be careful and clean the fuel hose, injection pump, fuel filter and other connections as the leakage from these part can cause fire.

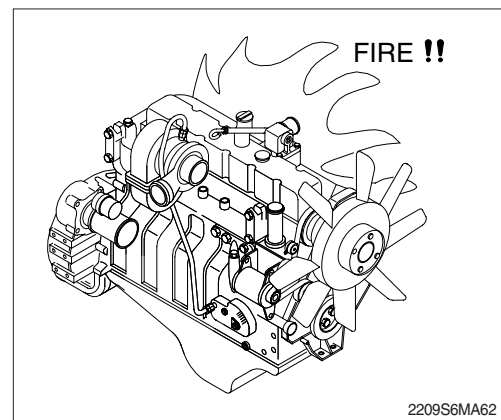


16) HYDRAULIC OIL CHECK

- (1) Stop the engine after retract the arm and bucket cylinders, then lower the boom and set the bucket on the ground at a flat location as in the illustration.
- (2) Check the oil level at the level gauge of hydraulic oil tank.
- (3) The oil level is normal if between the red lines.

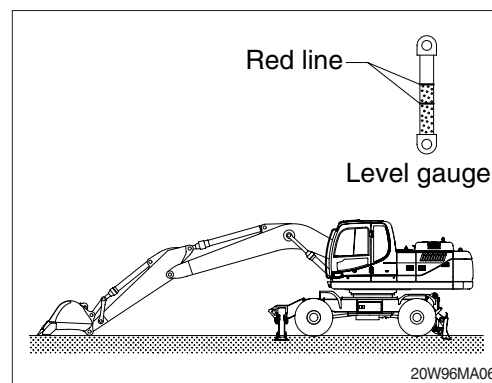


17) FILLING HYDRAULIC OIL

- (1) Stop the engine to the position of level check.
- (2) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- (3) Remove the breather on the top of oil tank and fill the oil to the specified level.
 - Tightening torque : $1.44 \pm 0.3 \text{ kgf} \cdot \text{m}$
($10.4 \pm 2.1 \text{ lbf} \cdot \text{ft}$)
- (4) Start engine after filling and operate the work equipment several times.
- (5) Check the oil level at the level check position after engine stops.

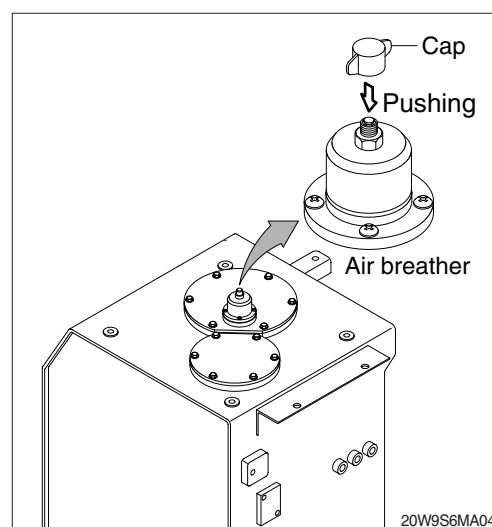

18) CHANGE HYDRAULIC OIL


- (1) Lower the bucket on the ground pulling the arm and bucket cylinder to the maximum.
- (2) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- (3) Remove the cover.
 - Tightening torque : $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$
($50 \pm 10 \text{ lbf} \cdot \text{ft}$)
- (4) Prepare a suitable container.
- (5) To drain the oil loosen the drain plug at the bottom of the oil tank.
- (6) Fill proper amount of recommended oil.
- (7) Put the breather in the right position.
- (8) Bleed air hydraulic pump loosen the air breather at top of hydraulic pump assembly.
- (9) Start engine and run continually. Release the air by full stroke of each control lever.

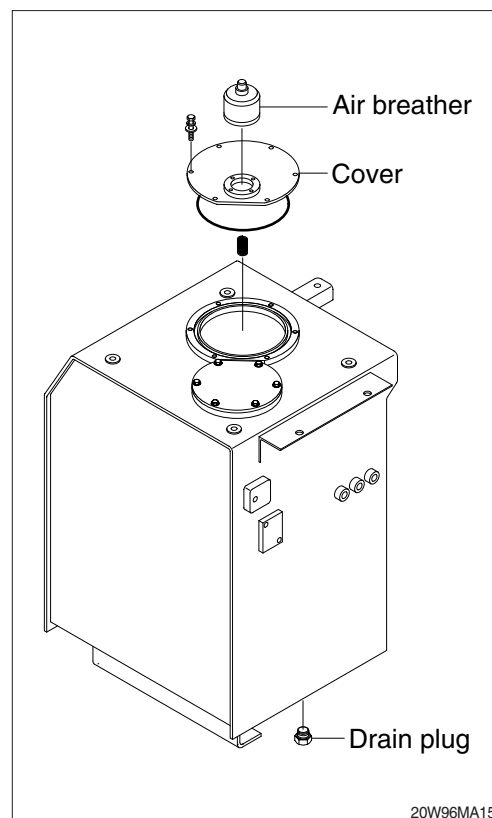

19) CLEAN SUCTION STRAINER

Clean suction strainer as follows paying attention to the cause to be kept during oil filling.


- (1) Remove the cover on the top of the oil tank.
 - Tightening torque : $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$
($50 \pm 10 \text{ lbf} \cdot \text{ft}$)
 - (2) Pull out the strainer in the tank.
 - (3) Wash the foreign material on the suction strainer with gasoline or cleaning oil.
 - (4) Replace the suction strainer if it is damaged.
 - (5) Assemble with reverse order of disassembly.
Be sure to install a new O-ring and reinsert in the oil tank.
- ※ Loosen the bolt slowly at the cover can be spring out by the spring when removing it.

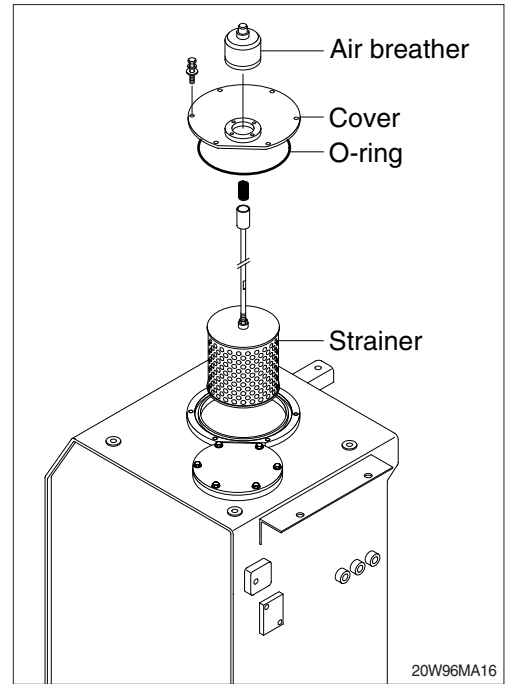

20) REPLACEMENT OF RETURN FILTER


Replace as follows paying attention to the cause to be kept during the replacement.

- (1) Remove the cover.
 - Tightening torque : $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$
($50 \pm 10 \text{ lbf} \cdot \text{ft}$)
- (2) Remove the spring, by-pass valve, and return filter in the tank.
- (3) Replace the element with new one.

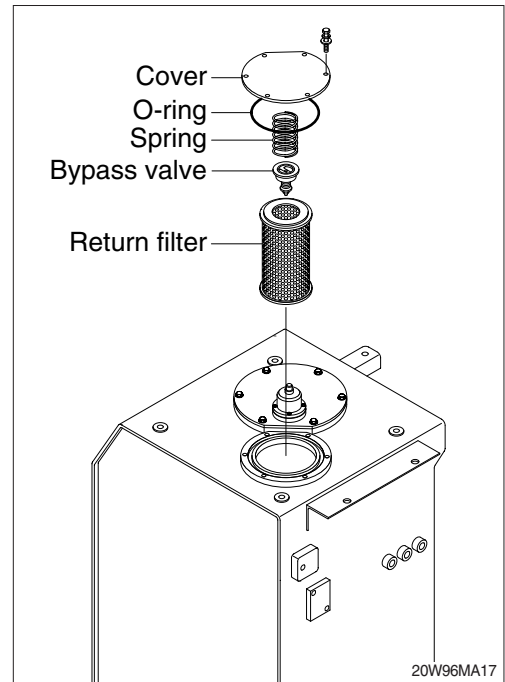

21) REPLACEMENT OF ELEMENT IN HYDRAULIC TANK BREATHER


- (1) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- (2) Loosen the lock nut and remove the cover.
- (3) Pull out the filter element.
- (4) Replace the filter element new one.
- (5) Reassemble by reverse order of disassembly.
 - Tightening torque : 0.2~0.3 kgf · m
(1.4~2.1 lbf · ft)

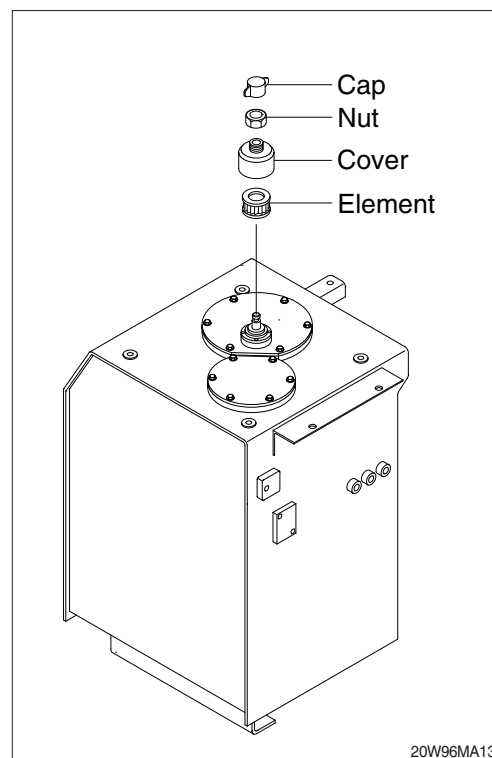

22) REPLACE OF DRAIN FILTER CARTRIDGE


Clean the dust around filter and replace with new one after removing the cartridge.

- ※ Tighten about 2/3 turn more after the gasket of cartridge contacts seal side of filter body for mounting.
- ※ Change cartridge after initial 250 hours of operation. Thereafter, change cartridge every 1000 hours.

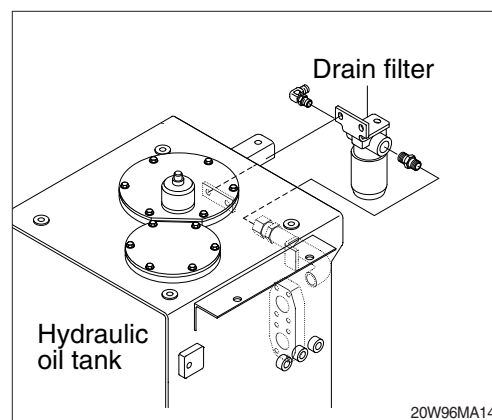


23) REPLACE OF PILOT LINE FILTER

- (1) Loosen the nut positioned on the filter body.
 - (2) Pull out the filter element and clean filter housing.
 - (3) Install the new element and tighten using specified torque.
- ※ Change cartridge after initial 250 hours of operation. Thereafter, change cartridge every 1000 hours.

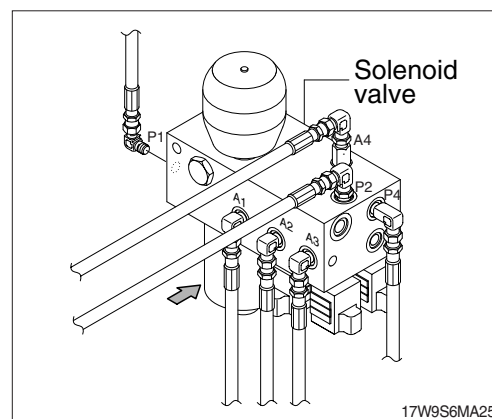


24) CHECK THE SWING REDUCTION GEAR OIL

- (1) Pull out the dipstick and clean it.
- (2) Insert it again.
- (3) Pull out one more time to check the oil level and fill the oil if the level is not sufficient.

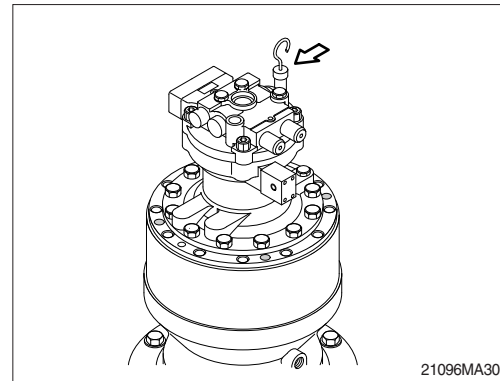


25) CHANGE SWING REDUCTION GEAR OIL

- (1) Raise the temperature of oil by swinging the machine before replace the oil and park the machine on the flat ground.
- (2) Prepare a proper container.
- (3) Remove the cap and open the drain valve.
- (4) Clean around the valve and close the drain valve and cap.
- (5) Fill proper amount of recommended oil.
 - Amount of oil : 5.0 ℓ (1.3 U.S.gal)

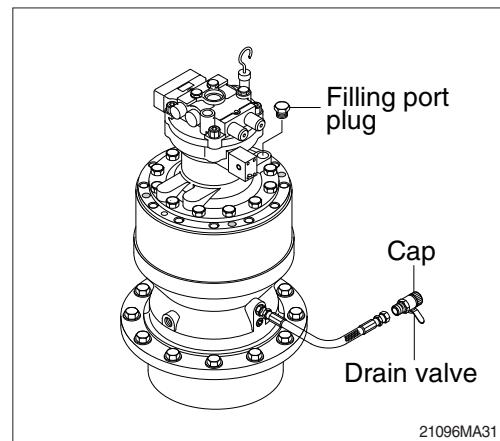


26) LUBRICATE BEARING OF OUTPUT SHAFT IN REDUCTION GEAR

- (1) Remove air vent plug.
- (2) Lubricate NLGI No.2 with grease gun until comes out new grease from air vent port.
 - Amount of oil : 1.1 kg (2.4 lb)

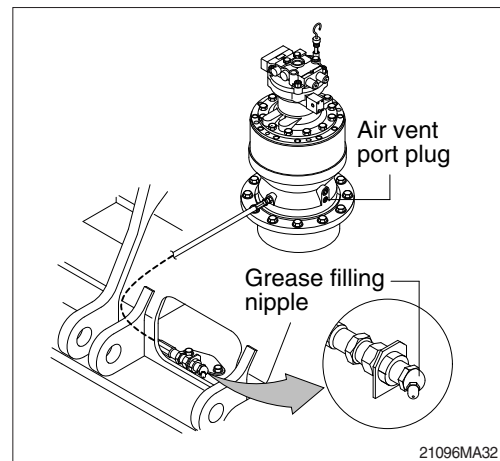

27) LUBRICATE SWING BEARING


- (1) Grease at 2 fitting.
- ※ Lubricate every 250 hours.

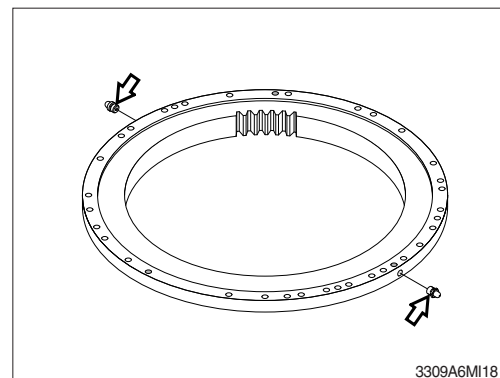

28) SWING GEAR AND PINION


(1) Drain old grease

- ① Remove under cover of lower frame.
- ② Remove drain cover of lower frame.
- ③ Remove filler cover of upper frame.
- ④ Operate full turn (360°) of swing several times.

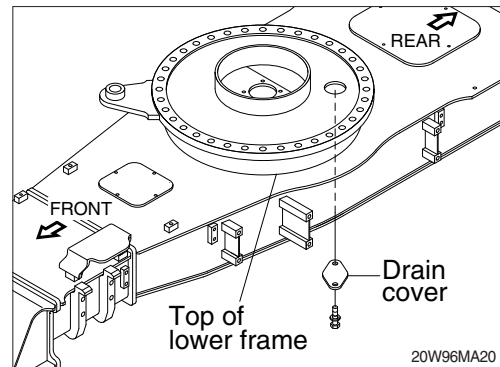


(2) Refill new grease

- ① Install drain cover.
 - ② Fill with new grease.
 - ③ Install filler cover.
- Capacity : 13 kg (28.7 lb)

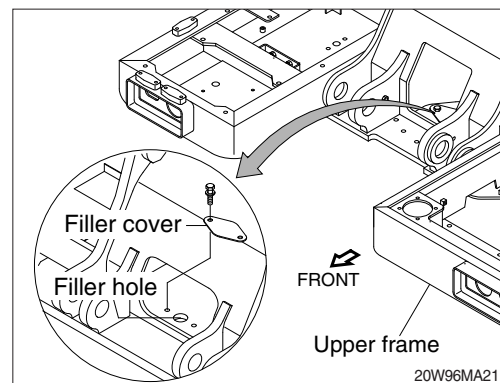

29) LUBRICATE RCV LEVER


Remove the bellows and with a grease gun grease the joint part (A) and sliding parts (B).

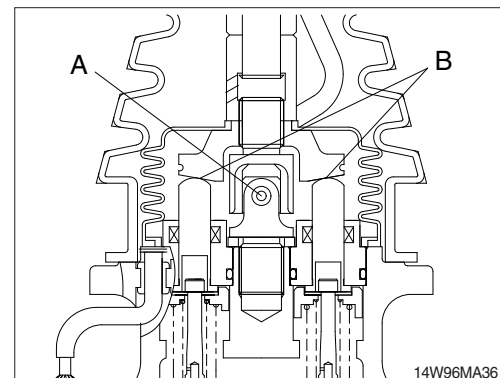

30) LUBRICATE


(1) Drive shaft

- ① Front drive shaft : 3 point
- ② Rear drive shaft : 3 point

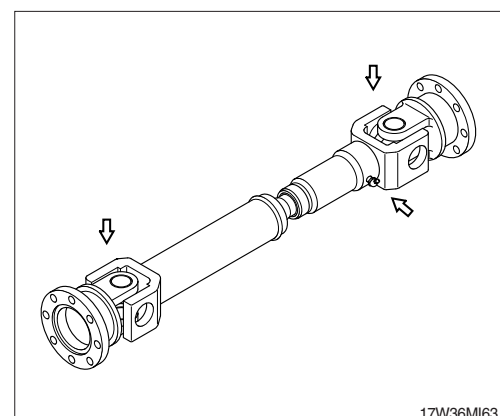


(2) Axle


- ① Front axle : 1 point

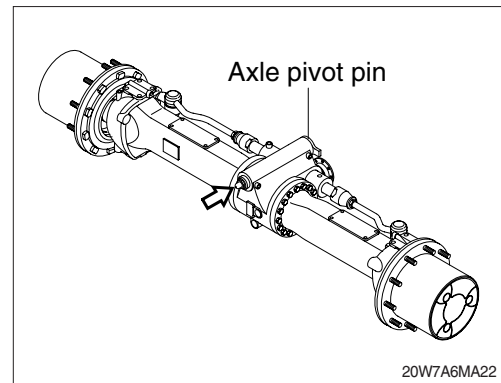


(3) Steering case : 4 point

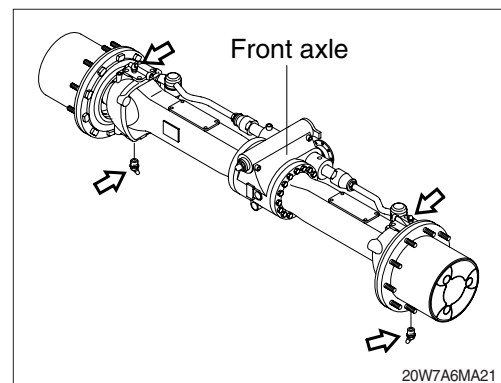

(4) Outrigger : 8 point

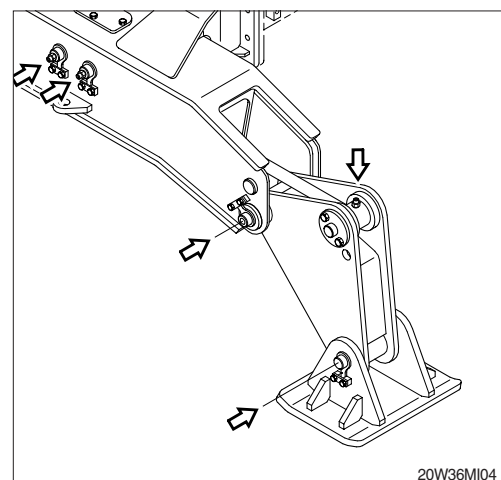

(5) Dozer blade : 12 point

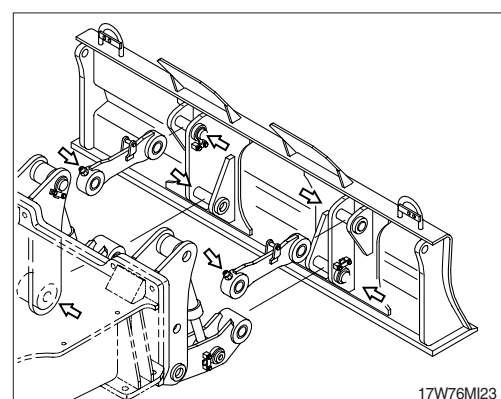

31) TIRE

(1) Air pressure


It is important to keep air pressure properly for maximizing tire life. Both excessive and insufficient air pressure of tires should be avoided not to damage tires.

Specification : 7.0 kgf/cm² (100 psi)

(2) Handling of tire


① Removal of tire

- Lift the main body until a tire separate from the ground, and place the block under front and rear axle.
- Loosen wheel nut with torque wrench and remove tire.

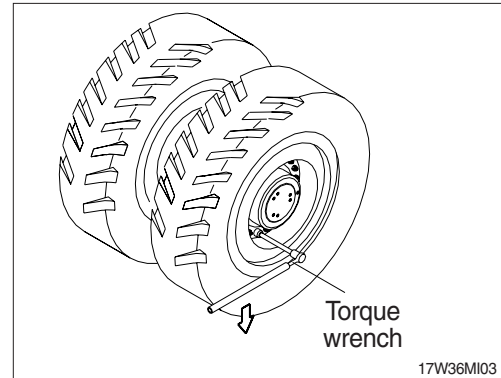


② Installation of tire

- Coat some grease on wheel stud and nut screw.
- Install the tires and tighten a nut slightly and get down a tire on the ground, and then tighten the torque in the order as figure.
 - Tightening torque : 60^{+0}_{-5} kgf · m
($433^{+0}_{-36.2}$ lbf · ft)

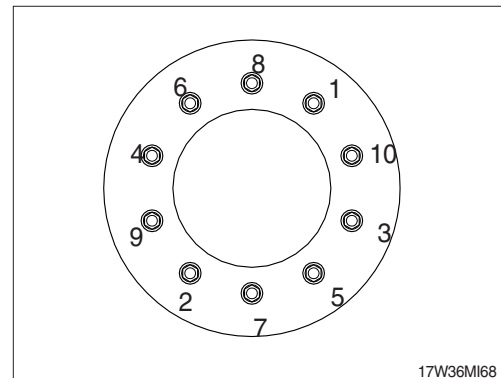

③ Position change of tire

- Tire is worn out differently part by part according to installing position, so change position regularly as figure.
- ※ **Keep air pressure at standard.**
- ※ **Use same pattern of groove and same maker's tire.**
- ※ **Always check the tire before operation.**

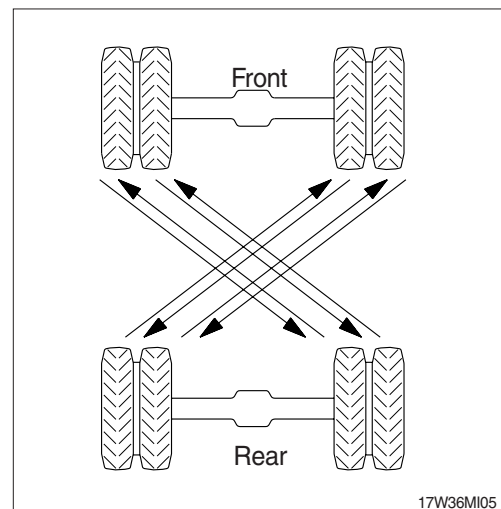


(3) Tire size

Specification : 10.00×20 - 14PR


32) CHECK AND SUPPLYING PLANETARY GEAR OIL

- (1) Move the machine to flat ground.
- (2) Remove the plug and check the oil amount.
 ※ **Set the oil level check line of planetary gear in parallel to the around.**
- (3) If the oil level is below the plug hole, supply oil through a plug hole.
- (4) After checking, install plug.

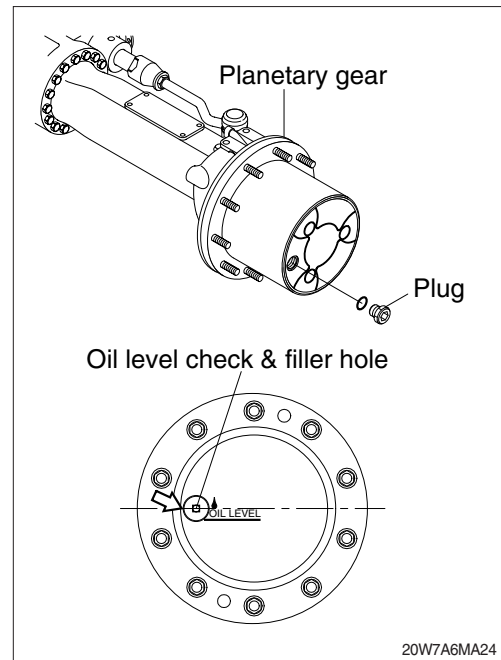


33) CHECK AND SUPPLYING DIFFERENTIAL GEAR OIL

- (1) Move the machine to flat ground.
- (2) Open the axle air breather to relieve internal air pressure.

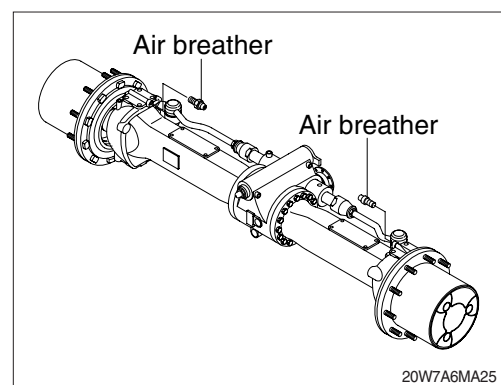

- (3) Remove the plug and check the oil amount.
 If the oil level is at the hole of the plug, it is normal.
 - (4) If the oil level is below the plug hole, supply oil through a plug hole.
- ▲ **When checking the oil level, set the select switch 2 to parking position.**
- ▲ **As the machine is hot after operation, wait until the oil temperature has dropped.**

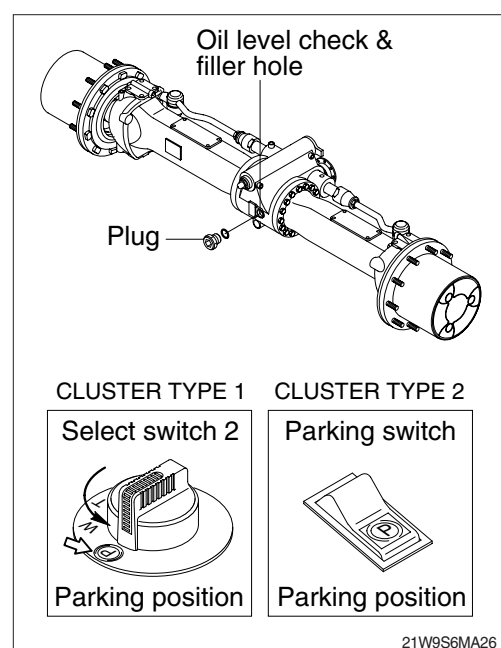


34) CHANGE THE AXLE OIL

- (1) Place a drain box under drain plug to catch oil.
- (2) Remove the air breather to relieve internal pressure.


(3) Drain oil the differential gear

- ① Remove the filling plug and remove the drain plug to drain oil off.
- ② Wash drain plug and install it.

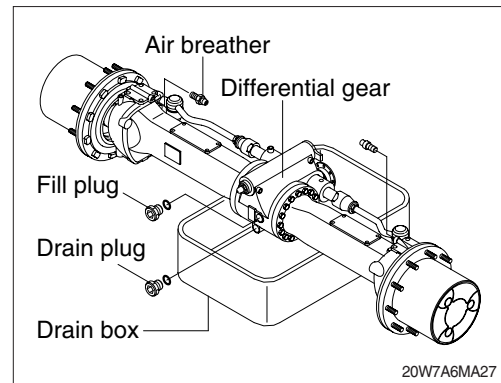

(4) Drain oil planetary gear

- ① Drain oil by removing drain plug.
- ※ The drain plug should be facing the ground.

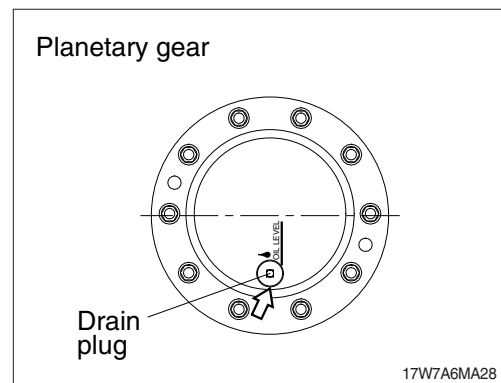


- (5) Supply oil into the differential gear and the planetary gear.
- Oil amount

Description	Capacity
Front axle differential gear	9.6 l (2.54 U.S. gal)
Rear axle differential gear	13.1 l (3.46 U.S. gal)
Planetary gear case (each)	2.5 l (0.66 U.S. gal)

- (6) Supply oil until it overflows from the oil filler, then install the plug.


▲ As the machine is hot after operation, wait until the temperature has dropped.

- ※ If a work requires frequent use of brake, replace it earlier than normal change interval.

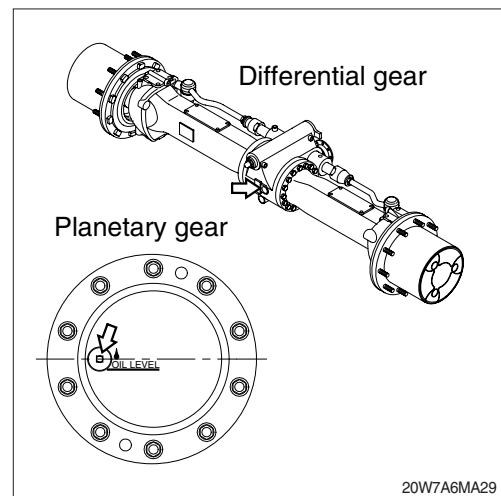

35) CLEANING AXLE BREATHER


- (1) Remove dust or debris around the breather.
- (2) Remove the breather and wash it with cleaning oil.

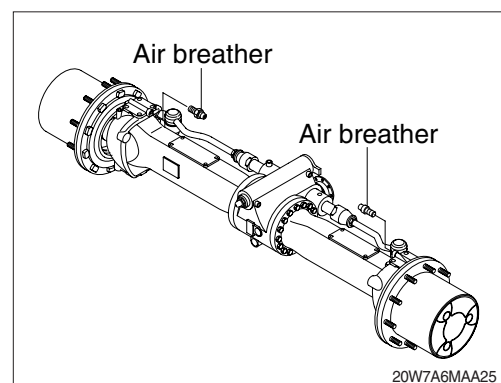

36) CHECK AND SUPPLYING TRANSMISSION OIL

- (1) Move the machine to flat ground.
- (2) Open the transmission air breather to relieve internal air pressure.
- (3) Remove the plug and check the oil amount.
If the oil level is at the hole of the plug, it is normal.
- (4) If the oil level is below the plug hole, supply oil through a plug hole.


▲ As the machine is hot after operation, wait until the oil temperature has dropped.

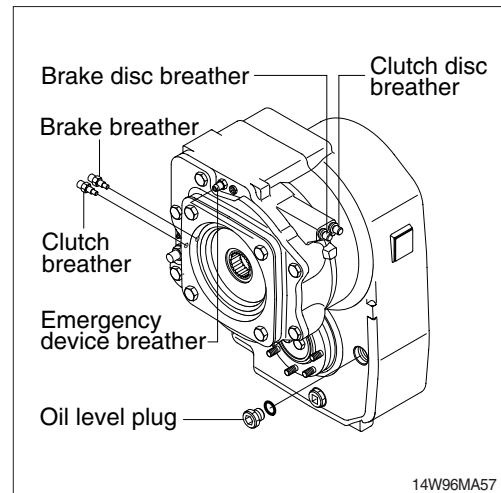

37) CHANGE THE TRANSMISSION OIL


- (1) Place a drain box under drain plug to catch oil.
- (2) Open the transmission air breather to relieve internal air pressure.
- (3) Remove the drain plug to drain oil.
- (4) Wash drain plug and install it.
- (5) Supply oil into the transmission case.
· Oil amount : 2.5 l (0.66 U.S. gal)

▲ As the machine is hot after operation, wait until the temperature has dropped.

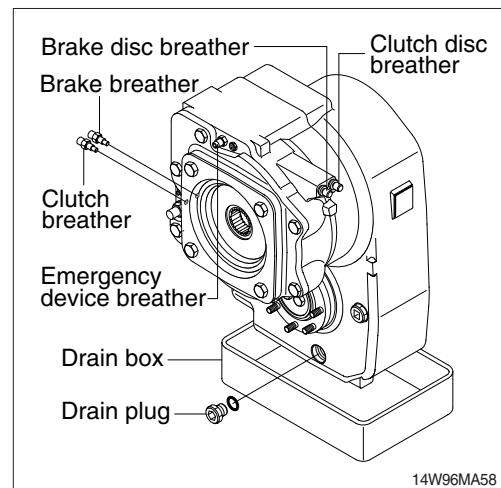

38) CLEANING TRANSMISSION AIR BREATHER

- (1) Remove dust or debris around the air breather.
- (2) Remove the air breather and wash it with cleaning oil.

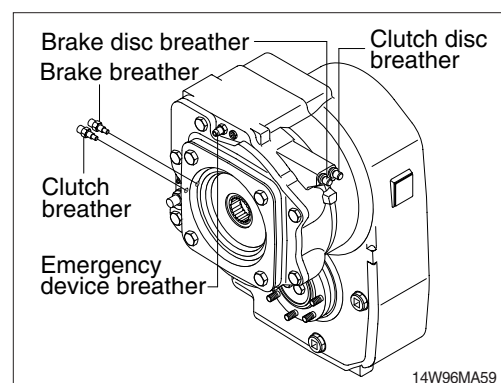

39) REPLACEMENT OF BUCKET

⚠ When knocking the pin in with a hammer, metal particles may fly and cause serious injury, particularly if they get into your eyes. When carrying out this operation, always wear goggles, helmet, gloves, and other protective equipment.

- ※ When the bucket is removed, place it in a stable condition.
- ※ When performing joint work, make sure signals to each other and work carefully for safety's sake.

(1) Lower the bucket on the ground as the picture shown in the right.

(2) Lock the safety lever to the LOCK position and stop the engine.

(3) Remove the stopper bolts (1) and nuts (2), then remove pins (3, 4) and remove the bucket.

※ When removing the pins, place the bucket so that it is in light contact with the ground.





※ If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.

※ After remove the pins, make sure that they do not become contaminated with sand or mud and that the seals of bushing on both sides do not become damaged.

(4) Align the arm with holes (A) and the link with holes (B), then coat with grease and install pins(3, 4)

※ When installing the bucket, the O-rings are easily damaged, so fit the O-rings on the boss of the bucket as shown in the picture. After knocking the pin, move the O-ring down to the regular groove.


(5) Install the stopper bolt (1) and nuts (2) for each pin, then grease the pin.

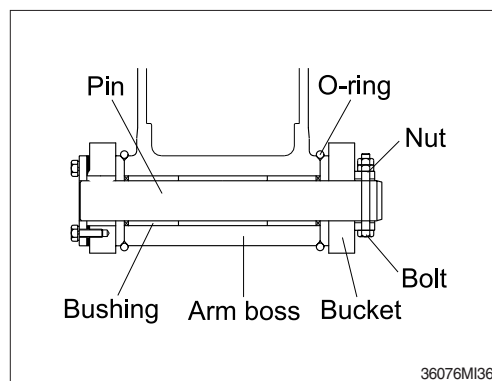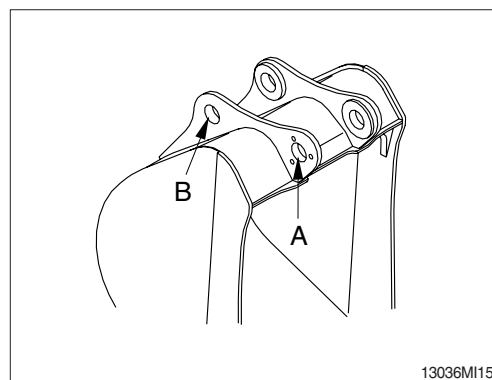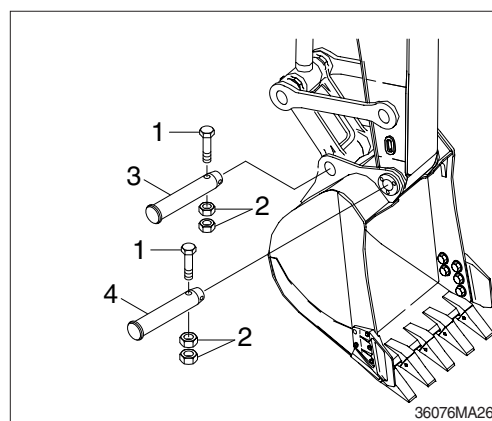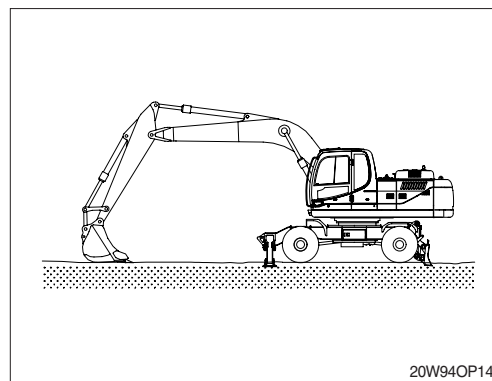

40) REPLACEMENT OF BUCKET TOOTH

(1) Timing of replacement

- ① Check wearing condition as shown in the illustration and replace tooth tip before adapter starts to wear.
- ② If excessive use, tooth adapter has worn out, replacement may become impossible.

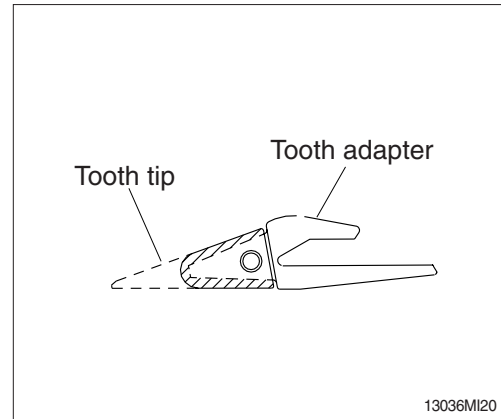


(2) Instructions for replacement

- ① Pull out pin by striking pin with punch or hammer, avoiding damage to locking washer.
- ② Remove dust and mud from surface of tooth adapter by using knife.
- ③ Place locking washer in its proper place, and fit tooth tip to adapter.
- ④ Insert pin until locking washer is positioned at tooth pin groove.

⚠ Personal injury can result from bucket falling.

⚠ Block the bucket before changing tooth tips or side cutters.

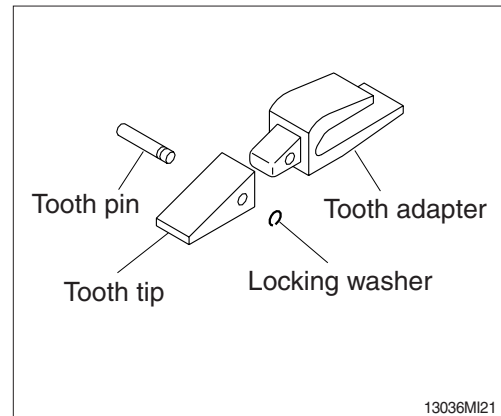


41) ADJUSTMENT OF BUCKET CLEARANCE

- (1) Lower the bucket on the ground as the picture shown in the right.
- (2) Swing to the left and keep the arm boss to be contact to the bucket left.
- (3) Lock the safety lever to the LOCK position and stop the engine.
- (4) Measure the clearance (A) between bucket and arm boss. This is the total clearance.

(5) Adjusting

- ① Loosen bolt (2), and remove washer (3), plate (1) and shim (4).
- ② Remove the shim equivalent value with measuring value.
- ③ Assemble the parts in the reverse order of removal.
 - Tightening torque : $29.6 \pm 3.2 \text{ kgf} \cdot \text{m}$
($214.0 \pm 23.1 \text{ lbf} \cdot \text{ft}$)
 - Normal clearance : $0.5 \sim 1.0 \text{ mm}$
($0.02 \sim 0.04 \text{ in}$)

※ If the bucket is not adjusted correctly, noise and vibration created during operation, and damaged O-ring, pin and bushing quickly.

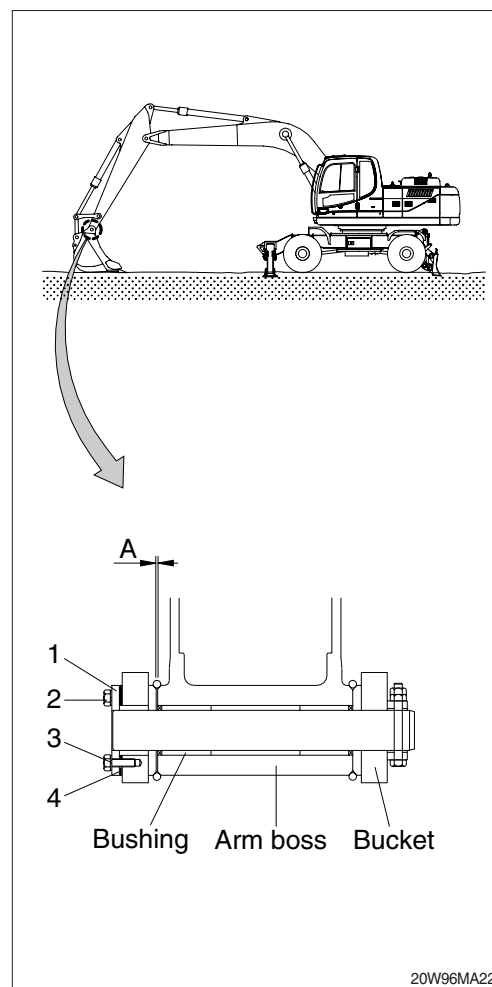


42) LUBRICATE PIN AND BUSHING

(1) Lubricate to each pin of working device

Lubricate the grease to the grease nipple according to the lubricating interval.


No.	Description	Qty
1	Lubrication manifold at boom	5
2	Boom cylinder pin	2
3	Boom and arm connection pin	1
4	Arm cylinder pin (Rod side)	1
5	Bucket cylinder pin (Head, rod)	2
	Bucket link (Control rod)	3
	Arm and control link connection pin	1
	Arm and bucket connection pin	1
6	Boom rear bearing center	1

※ Shorten lubricating interval when working in the water or dusty place.

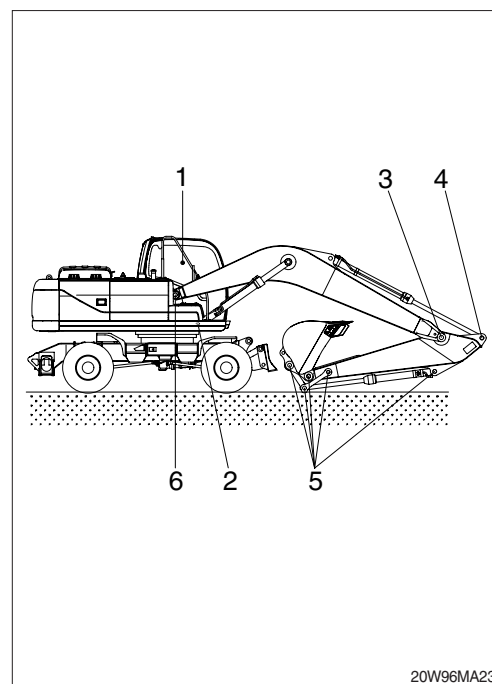


(2) Dust seals are mounted on the rotating part of working device to extend the lubricating interval.

※ Mount the lip to be faced outside when replace the dust seal.

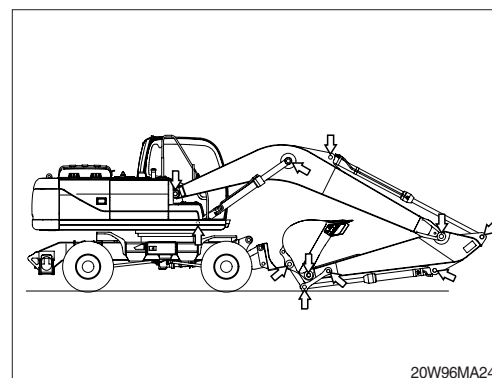

※ If it is assembled in wrong direction, it will cause fast wear of pin and bushing, and create noise and vibration during operation.


※ Assemble the seal same direction with picture and use with plastic hammer when replace.

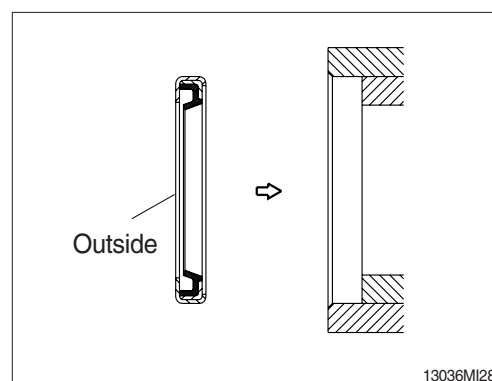

7. ELECTRICAL SYSTEM

1) WIRING, GAUGES

Check regularly and repair loose or malfunctioning gauges when found.

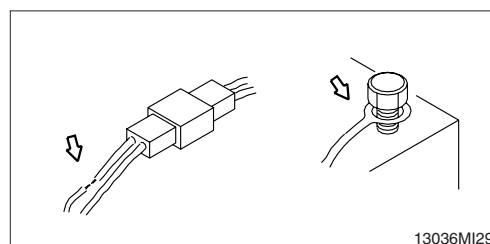

2) BATTERY

(1) Clean

① Wash the terminal with hot water if it is contaminated, and apply grease to the terminals after washing.


⚠ **Battery gas can explode. Keep sparks and flames away from batteries.**

⚠ **Always wear protective glasses when working with batteries.**

⚠ **Do not stain clothes or skin with electrolyte as it is acid.**

Be careful not to get the electrolyte in eyes.

Wash with clean water and go to the doctor if it enters the eyes.

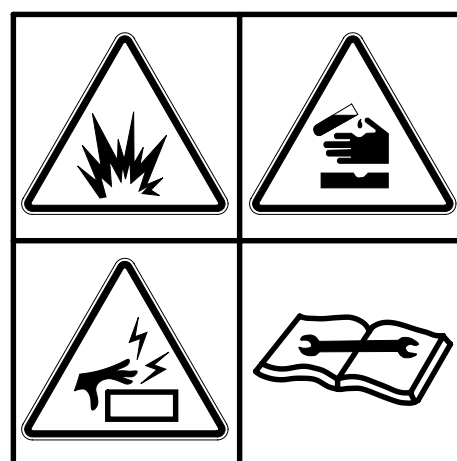

(2) Recycle


Never discard a battery.

Always return used batteries to one of the following locations.

- A battery supplier
- An authorized battery collection facility
- Recycling facility

(3) Method of removing the battery cable

Remove the cable from the ground connection first (⊖ terminal side) and reconnect it last when reassembling.

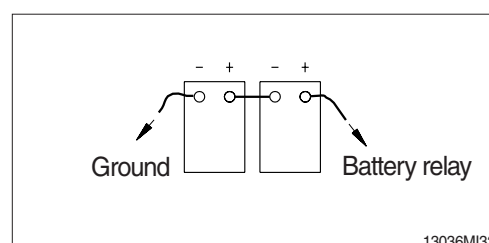

3) STARTING THE ENGINE WITH A BOOSTER CABLE


Keep following order when you are going to start engine using booster cable.

(1) Connection of booster cable

※ **Use the same capacity of battery for starting.**


- ① Make sure that the starting switches of the normal machine and trouble machine are both at the OFF position.
- ② Connect the red terminal of booster cable to the battery (+) terminal between exhausted and new battery.
- ③ Connect the black terminal of the booster cable between new battery (-) terminal and chassis of trouble machine.

※ **Keep firmly all connection, the spark will be caused when connecting finally.**

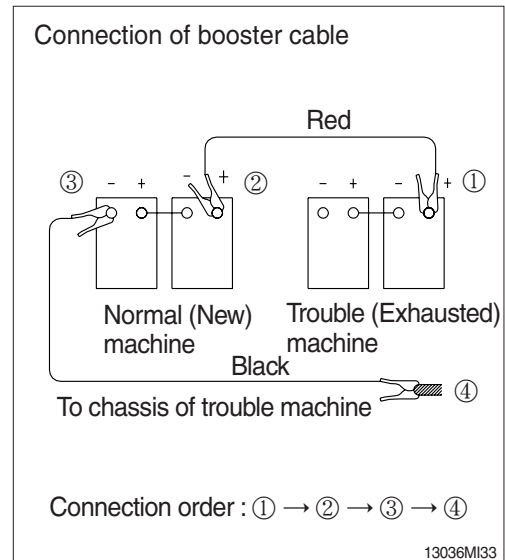

(2) Starting the engine

- ① Starting the engine of the normal machine and keep it to run at high idle.
- ② Start engine of the trouble machine with starting switch.
- ③ If you can not start it by one time, restart the engine after 2 minutes.

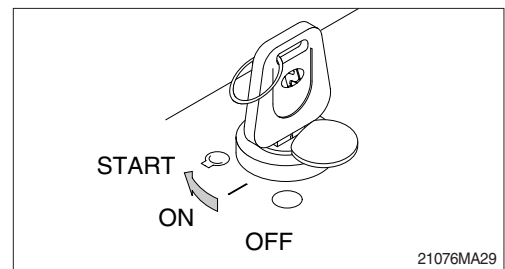

(3) Taking off the booster cable


- ① Take off the booster cable (black).
- ② Take off the booster cable (red) connected to the (+) terminal.
- ③ Run engine with high idle until charging the exhausted battery by alternator, fully.

▲ **Explosive gas is generated while using the battery or charging it. Keep away flame and be careful not to cause the spark.**

※ **Charge the battery in the well ventilated place.**

※ **Place the machine on the earth or concrete. Avoid charging the machine on the steel plate.**


※ **Do not connect (+) terminal and (-) terminal when connecting booster cable because it will be shorted.**

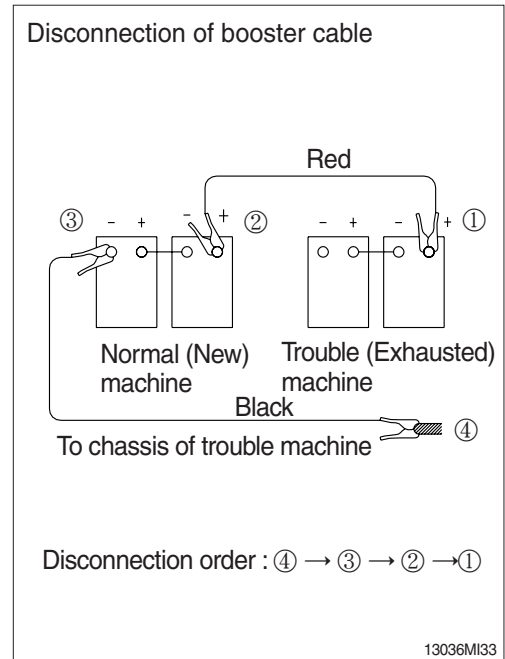

(4) Welding repair

Before start to welding, follow the below procedure.

- ① Shut off the engine and remove the starting switch.
 - ② Disconnect ground cable from battery by master switch.
 - ③ Before carrying out any electric welding on the machine, the battery cables should be disconnected and the connectors pulled out of the electronic control units (MCU, cluster etc).
 - ④ Connect the earth (ground) lead of the welding equipment as close to the welding point as possible.
- ※ Do not weld or flame cut on pipes or tubes that contain flammable fluids. Clean them thoroughly with nonflammable solvent before welding or flame cutting on them.
- ▲ Do not attempt to welding work before carry out the above.
If not, it will caused serious damage at electric system.

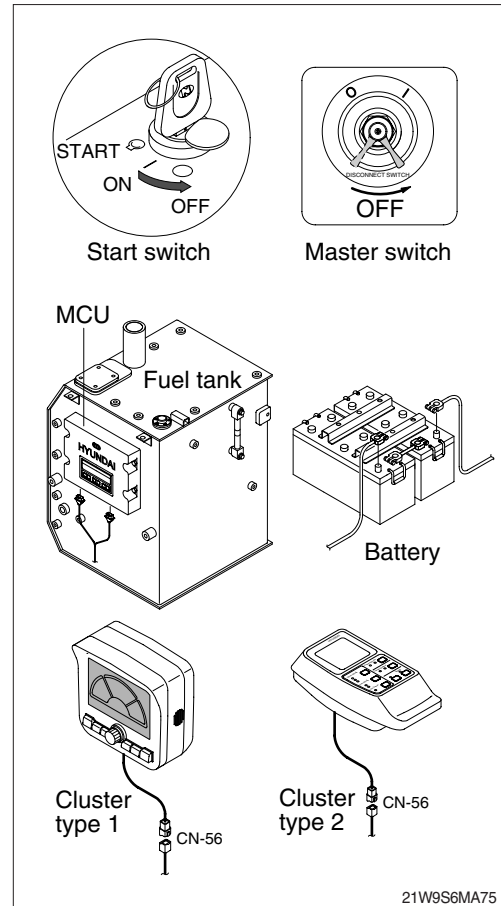


8. AIR CONDITIONER AND HEATER

1) CLEAN AND REPLACE OF FRESH AIR FILTER


※ **Always stop the engine before servicing.**

(1) Open the LH side cover.

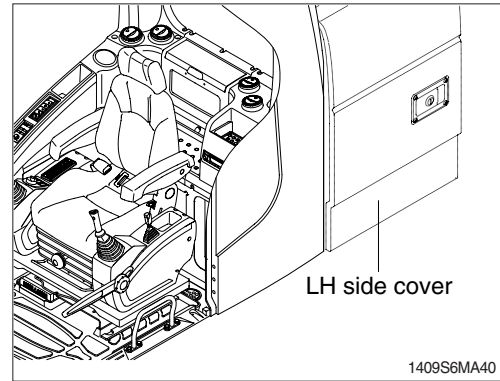

(2) Remove the fresh air filter.


※ **When installing a filter, be careful not to change the filter direction.**

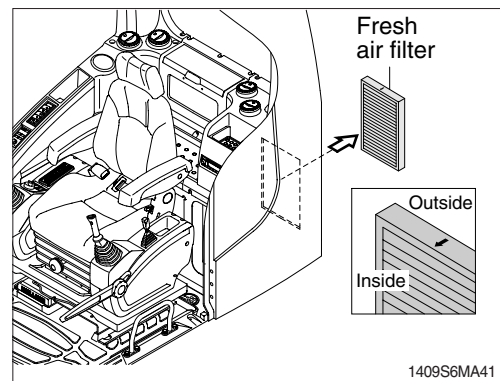

(3) Clean the filter using a pressurized air (below 2 kgf/cm², 28 psi).

△ **When using pressurized air, be sure to wear safety glasses.**


(4) **Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.**

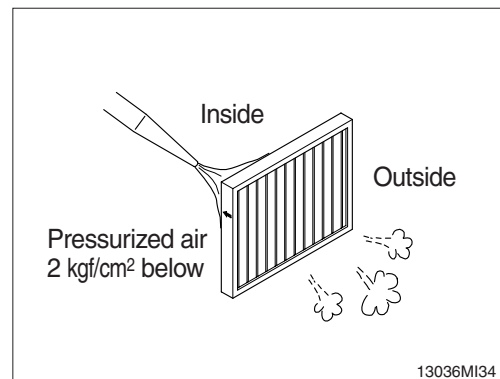


2) CLEAN AND REPLACE OF RECIRCULATION FILTER

※ **Always stop the engine before servicing.**

(1) Move seat and console box to arrow direction using the adjust lever.

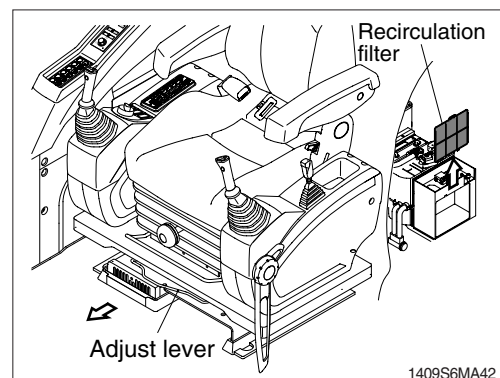

(2) Remove recirculation filter.

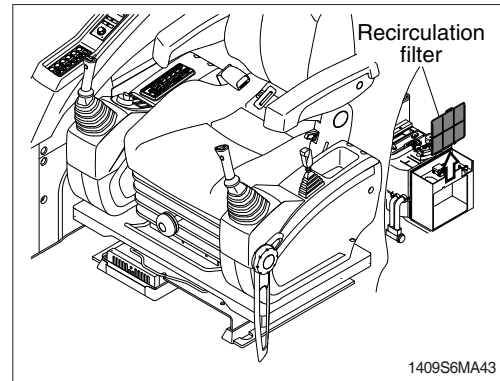


(3) Clean the recirculation filter using a pressurized air (below 2 kgf/cm², 28 psi) or washing with water.

△ When using pressurized air, be sure to wear safety glasses.

※ Dry off after washing with water.

(4) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

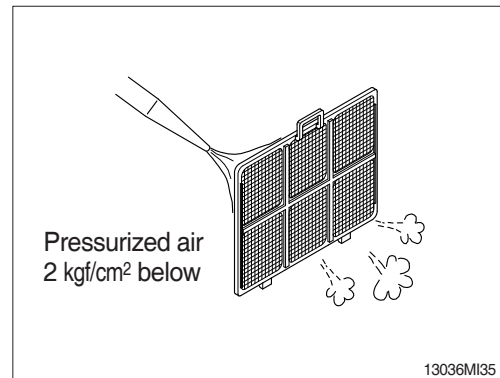

3) PRECAUTIONS FOR USING AIR CONDITIONER

- (1) When using the air conditioner for a long time, open the window once every one hour.
- (2) Be careful not to overcool the cab.
- (3) The cab is properly cooled if the operator feels cool when entering there from outside (about 5°C lower than the outside temperature).
- (4) When cooling, change air occasionally.

4) CHECK DURING SEASON

Ask the service center for replenishment of refrigerant or other maintenance service so that the cooling performance is not damaged.

5) CHECK DURING OFF-SEASON

Operate the air conditioner 2 or 3 times a month (each for a few minutes) to avoid loss of oil film in the compressor.

6) REFRIGERANT (R134-a) AMOUNT : 750 ± 20 g

7) COMPRESSOR LUBRICANT OIL (SYNTHETIC OIL) : 265mL

TROUBLESHOOTING GUIDE

1. ENGINE

※ This guide is not intended to cover every conditions, however many of the more common possibilities are listed.

Trouble	Service	Remark
The engine oil pressure lamp lights ON when engine speed is raised after completion of warm up.	<ul style="list-style-type: none"> • Add the oil to the specified level. • Replace the oil filter cartridge. • Check oil leakage from the pipe or the joint. • Replace the monitor. 	
Steam is emitted from the top part of the radiator (the pressure valve). Coolant level warning lamp lights ON.	<ul style="list-style-type: none"> • Supply the coolant and check leakage. • Adjust fan belt tension. • Wash out inside of cooling system. • Clean or repair the radiator fin. • Check the thermostat. • Tighten the radiator cap firmly or replace the packing of it. • Replace the monitor. 	
The engine does not start when the starting motor is turned over.	<ul style="list-style-type: none"> • Add fuel. • Repair where air is leaking into fuel system. • Check the injection pump or the nozzle. • Check the valve clearance. • Check engine compression pressure. • In cold weather, check if fuel warmer system is working normal. 	
Exhaust gas is white or blue.	<ul style="list-style-type: none"> • Adjust to specified oil quantity. • Replace with specified fuel. 	
Exhaust gas occasionally turns black.	<ul style="list-style-type: none"> • Clean or replace the air cleaner element. • Check the nozzle. • Check engine compression pressure. • Clean or replace the turbocharger. 	
Combustion noise occasionally changes to breathing sound.	<ul style="list-style-type: none"> • Check the nozzle. 	
Unusual combustion noise or mechanical noise.	<ul style="list-style-type: none"> • Check with specified fuel. • Check over-heating • Replace the muffler. • Adjust valve clearance. 	

2. ELECTRICAL SYSTEM

Trouble	Service	Remark
Lamp does not glow brightly even when engine runs at high speed. Lamp flickers while engine runs.	<ul style="list-style-type: none"> • Check for loose terminals and open-circuit wiring. • Adjust belt tension. 	
Battery charging lamp does not go out even when engine runs at high speed.	<ul style="list-style-type: none"> • Check the alternator. • Check and repair wiring. 	
Unusual noise is emitted from the alternator.	<ul style="list-style-type: none"> • Check the alternator. 	
Starting motor does not turn when starting switch is turned ON.	<ul style="list-style-type: none"> • Check and repair the wiring. • Charge the battery. • Check the starting motor. • Check the safety relay. 	
The pinion of the starting motor keeps going in and out.	<ul style="list-style-type: none"> • Charge the battery. • Check the safety relay. 	
Starting motor turns the engine sluggishly.	<ul style="list-style-type: none"> • Charge the battery. • Check the starting motor. 	
The starting motor disengages before the engine starts up.	<ul style="list-style-type: none"> • Check and repair the wiring. • Charge the battery. 	
The engine warming up lamp does not go ON.	<ul style="list-style-type: none"> • Check and repair wiring. • Check the monitor. 	
The engine oil pressure lamp does not light up when engine is stationary (when the starting switch is in ON position.)	<ul style="list-style-type: none"> • Check the monitor. • Check the caution lamp switch. 	
Battery charging lamp does not light up when the engine is stationary. (when the starting switch is in ON position.)	<ul style="list-style-type: none"> • Check the monitor. • Check and repair the wiring. 	

3. OTHERS

Trouble	Service	Remark
Bucket either rises slowly or not at all.	<ul style="list-style-type: none"> • Add oil to specified level. 	
Slow speed of travel, swing, boom, arm and bucket.	<ul style="list-style-type: none"> • Add oil to specified level. 	
Unusual noise emitted from pump.	<ul style="list-style-type: none"> • Clean the hydraulic tank strainer. 	
Excessive oil temperature rise of hydraulic oil.	<ul style="list-style-type: none"> • Clean the oil cooler. • Adjust fan belt tension. • Add oil to specified level. 	

HYDRAULIC BREAKER AND QUICK CLAMP

1. SELECTING HYDRAULIC BREAKER

- 1) Become familiar with the manual and select breakers suitable to machine specifications.
- 2) Make careful selection in consideration of oil quantity, pressure and striking force, to enable satisfied performance.
- 3) When apply a breaker to the machine, consult your local dealer of Hyundai for further explanation.

2. CIRCUIT CONFIGURATION

- 1) As for breaker oil pressure line, use extra spool of main control valve.
- 2) Set proper breaker pressure on load relief valve.
※ The initial setting pressure of load relief valve for breaker is 200 bar.
- 3) The pressure of the ROBEX210W-9S system is 350 kgf/cm² (4980 psi).

4) Adjusting oil quantity

■ CLUSTER TYPE 1

- (1) Use the breaker mode from work tool of cluster.
Use select switch to control the oil flow quantity.
 - Setting oil quantity (143 lpm)

Flow set


- Max flow : Set the maximum flow for the attachment.
- Flow level : Reduce the operating flow from maximum flow.
 - Breaker : Max 7 steps, reduced 10 lpm each step.

- (2) If the quantity of hydraulic oil is not controlled properly, it causes short lifecycle of the breaker and the machine by increased breaking force and count.

■ CLUSTER TYPE 2

- (1) Use accel dial switch to control the oil flow quantity.
- 5) The accumulator should be used to the breaker charging and return line.
If the accumulator is not used, it will be damage as the input wave is delivered.
※ **Keep the pressure pulsation of pump below 60 kgf/cm² (853 psi) by installing the accumulator.**
- 6) Do not connect the breaker return line to the main control, but connect to the return line front of the cooler.
- 7) Do not connect the breaker return line to drain lines, such as of swing motor, travel motor or pump, otherwise they should be damaged.
- 8) One of spool of the main control valve should be connected to the tank.
- 9) Select the size of pipe laying considering the back pressure.
- 10) Shimless tube should be used for the piping. The hose and seal should be used Hyundai genuine parts.
- 11) Weld the bracket for pipe clamp to prevent damage caused by vibration.

Oil quantity setting (cluster type 1)

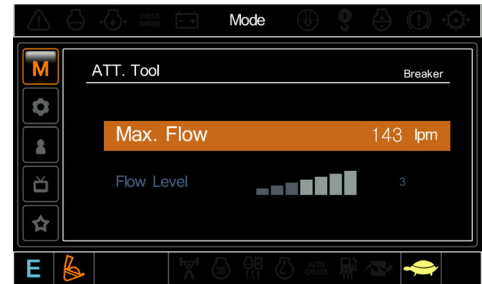

21W98HB01

3. MAINTENANCE

1) MAINTENANCE OF HYDRAULIC OIL AND FILTER

- (1) As machine with an hydraulic breaker provides the hydraulic oil becomes severely contaminated.
- (2) So, unless frequently maintained, the machine may easily go out of order.
- (3) Inspect and maintain hydraulic oil and 3 kinds of filter elements in particular, in order to prolong machine life.

2) RELEASE THE PRESSURE IN BREAKER CIRCUIT

When breaker operating is finished, stop engine and push pedal or switch for breaker to release pressure in breaker circuit.

If pressure still remains, the lifetime of the diaphragm in the accumulator will be shortened.

- 3) Be careful to prevent contamination by dust, sand and etc.
If such pollution become mixed into the oil, the pump moving parts will wear abnormally, shorten lifetime and become damaged.
- 4) When operating breaker, bolts and nuts of main equipment may be loosened by vibration. So, it must be inspected periodically.

Service interval unit : hours

Attachment	Operating rate	Hydraulic oil	Filter element
Breaker	100 %	600* ¹	200
		1000* ²	


*¹: Conventional hydraulic oil

*²: Hyundai genuine long life hydraulic oil

● Replace following filter same time

- Hydraulic return filter : 1 EA
- Pilot line filter : 1 EA
- Drain filter cartridge : 1 EA

Hyd oil change guide for hydraulic breaker

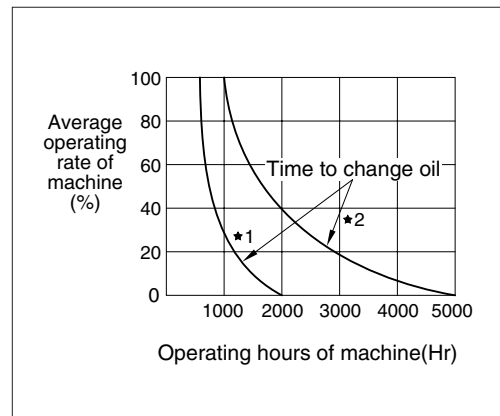

*¹: Conventional hydraulic oil


*²: Hyundai genuine long life hydraulic oil

4. PRECAUTIONS WHILE OPERATING THE BREAKER

1) DO NOT BREAK ROCK WHILE LOWERING


As the breaker is heavy in comparison with bucket, it must be operated slowly.

If breaker is rapidly pushed down, working device may be damaged.

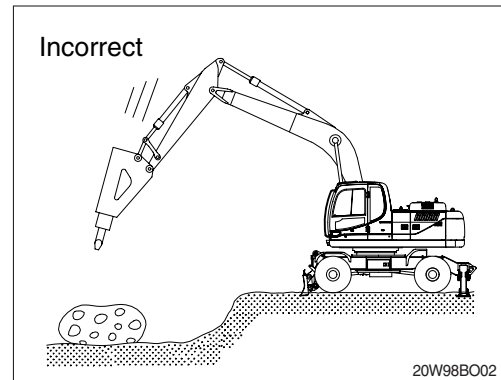


2) DO NOT USE BREAKER TO CARRY BROKEN STONE OR ROCK BY SWING OPERATING

This may damage the operation device and swing system.

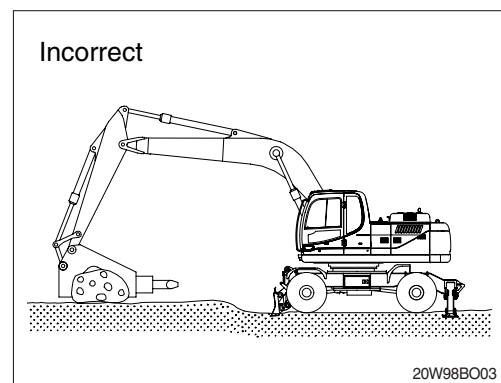


3) OPERATE BREAKER WITH A GAP IN EXCESS OF 100 mm (4 inches) FROM THE END OF THE STROKE TIP

If breaker is operated with the end tip, the cylinder may be damaged.

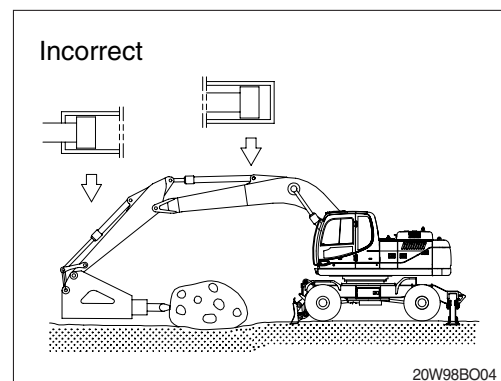


4) IF THE HYDRAULIC HOSES VIBRATE EXCESSIVELY

If the machine used in this condition continuously this will effect badly on the machine such as loosening bolt, oil leakage, damage of pump pipe and etc.

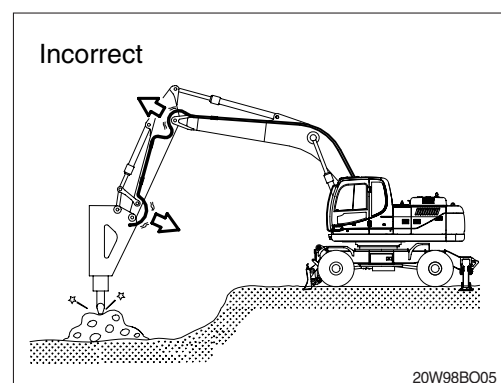

5) DO NOT CONTINUE TO WORKING OVER ONE MINUTE AT SAME POSITION OF BOOM AND ARM


This will increase the temperature of the oil, and cause problem in the accumulator and seals.

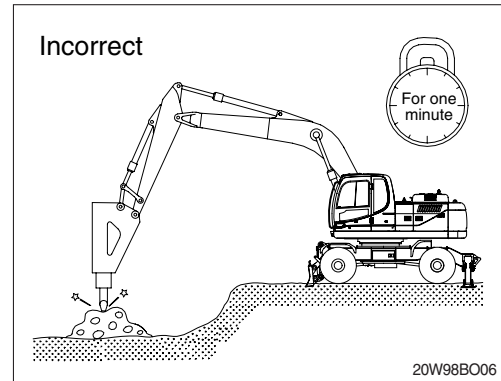

6) DO NOT MOVE MACHINE OR BREAKER WHILE STRIKING


Do not move hammer while striking.

This will cause damage to the working device and the swing system.

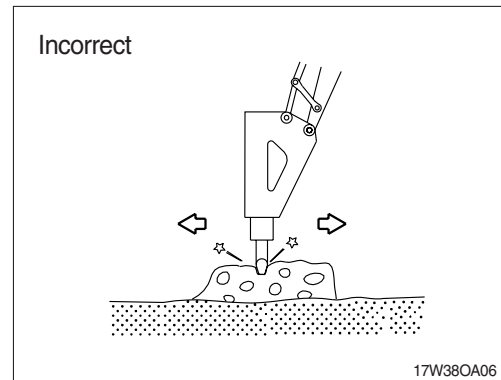


7) TAKE CARE OF CHISEL AND BOOM INTERFACE

Make sure of the arm and bucket control lever operation.

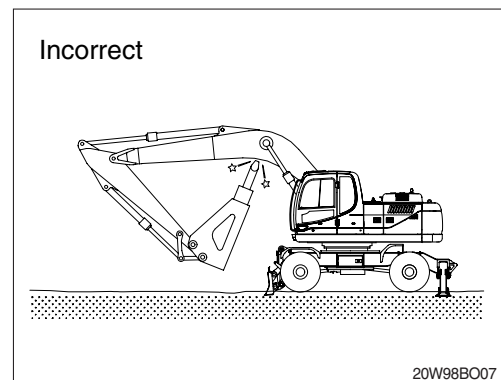


8) Do not extend the bucket cylinder fully and thrusting to raise the machine off the ground.

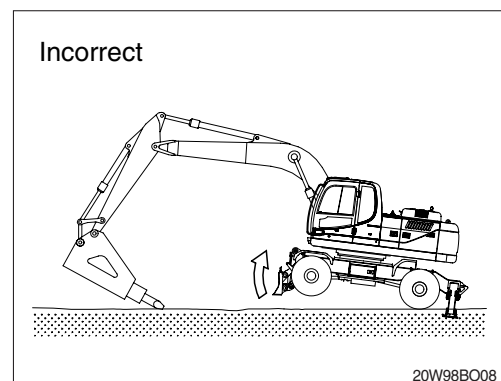


5. QUICK CLAMP

1) FIXING BUCKET WITH QUICK CLAMP


- (1) Before fixing bucket, remove safety pin of the moving hook.
- (2) Pulling safety button, press the quick clamp switch to unlock position. Then, the moving hook is placed on release position.

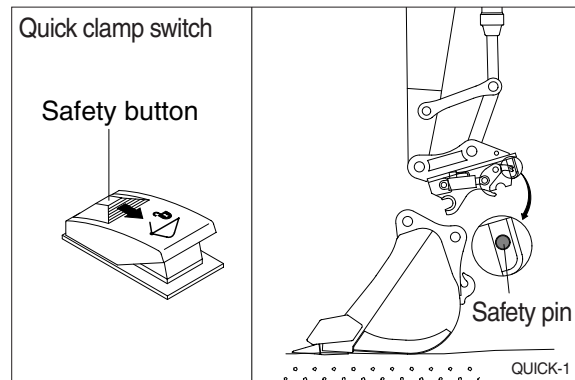


- (3) Aligning the arm and bucket, insert static hook of quick clamp to the bucket pin.

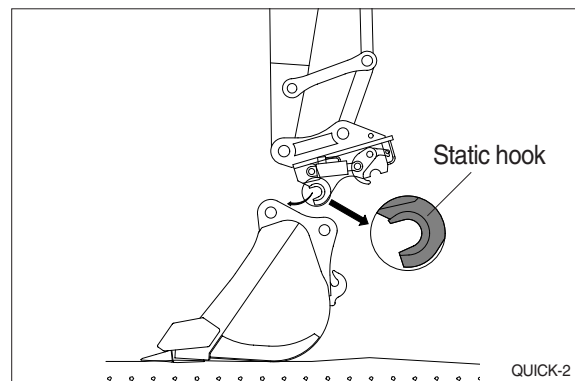


- (4) Operate RCV lever to bucket-in position. Then, the moving hook is coupled with the bucket link pin. Make sure that the moving hook is completely contacted with bucket link pin.

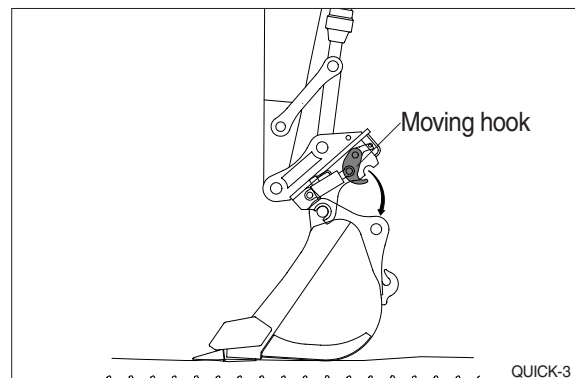

- (5) Push safety button to lock position. Operate RCV lever to bucket-in position.
- ※ **Be sure to check connection status between bucket pins and hooks of quick clamp.**

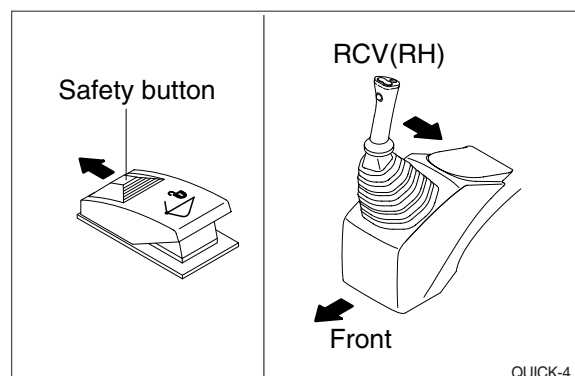

- (6) After checking the connection status between bucket pins and hooks of quick clamp, **insert safety pin of moving hook to lock position.**

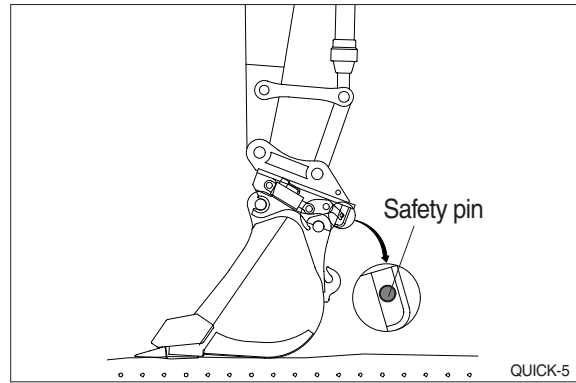

2) REMOVE BUCKET FROM QUICK CLAMP

Removing procedure is reverse of fixing.

3) PRECAUTION OF USING QUICK CLAMP



- ⚠ When operating the machine with quick clamp, confirm that the quick clamp switch is lock position and safety pin of moving hook is inserted.

Operating the machine with quick clamp switch unlocked and without safety pin of moving hook can cause the bucket to drop off and bring about the accident.

- ⚠ Serious injury or death can result from this accident.

- ⚠ Be careful to operate the machine equipped with quick clamp. The bucket may hit cab, boom and boom cylinders when it reaches vicinity of them.

HYUNDAI will not be responsible for any injury or damage in case that safety pin is not installed properly.

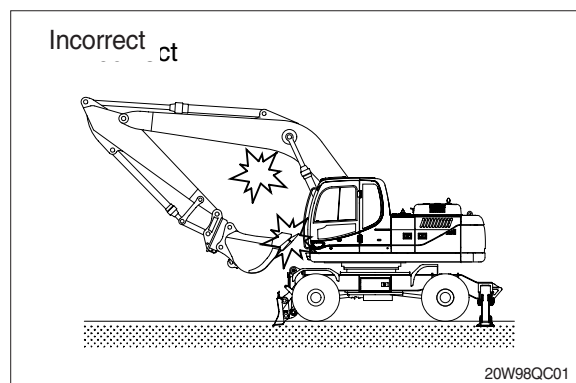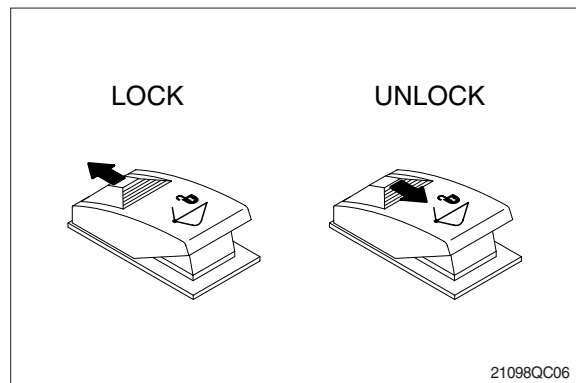

A

Accel dial switch	3-35
Accel pedal	3-47
Air engine start	4-5, 4-9
Air breather element	6-33
Air cleaner filter	6-25
Air conditioner & heater	3-48
Air conditioner filter	6-45
Alternate exit	0-11
Attachment lowering	4-35
Axle gear oil	6-38

B

Battery	6-45
Before starting engine	4-2
Boom lowering	4-35
Breaker pedal	3-47
Bucket clearance adjustment	6-43
Bucket replacement	6-41
Bucket selection guide	2-8
Bucket tooth replacement	6-42

C

Cab air filter	6-48
Cab device	3-1
Changing machine control pattern	4-38
Charge air cooler	6-23
Cigar lighter	3-55
Cluster	3-2, 3-23
Coolant	6-20
Cooling fan	6-23

D

Drain filter	6-33
Dimension and weight	5-3

E

Emergency engine starting connector	3-67
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3, 4-7
Engine starting by booster	6-46
Engine stop	4-6

F

Fan belt	6-24
Fixing the machine	5-7
FNR lever	3-39

Fuel filter	6-26
Fuel leakage	6-30
Fuel system bleeding	6-29
Fuel tank	6-25
Fuse & relay box	3-66

G

Gauge	3-3, 3-24
-------------	-----------

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-28
Hydraulic oil filling	6-31
Hydraulic oil level	6-31

L

LCD	3-4, 3-26
LCD display map	3-5, 3-27
LCD main operation display	3-3, 3-24
Levers & pedals	3-45
Lifting capacities	2-5
Loading the machine	5-5
Lubricant specification	2-14

M

Maintenance check list	6-11
Major component	2-1
Master switch	3-35
MCU (Machine Control Unit)	3-66
Mode selection system	4-10, 4-15
Monitor panel	3-2, 3-23
Mounting and dismounting	1-12
Multifunction switch	3-39

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-30

P

Pedals	3-45
Periodical replacement parts	6-5
Pilot lamps	3-7, 3-30
Pilot line filter	6-30
Pin & bushing lubrication	6-44
Prefilter	6-26

Q

Quick clamp 8-6

R

Radiator flushing 6-20

Radio & USB player 3-56

RCV lever lubricate 6-35

Recommended oils 2-14, 6-10

Relieving pressure 6-3

Return filter 6-33

RCV lever operating pattern 4-38

RS 232 service socket 3-67

S

Safety hints 1-1

Safety labels 0-5

Safety parts 6-5

Seat 3-64, 65

Seat belt 3-64, 65

Start switch 1 (dozer/outrigger) 3-36

Start switch 2 (parking/working/traveling) 3-41

Service meter 3-67

Service socket 3-67

Socket 12V 3-55

Specification for major component 2-10

Specification 2-2

Start switch 3-34

Storage 4-36

Suction strainer 6-32

Swing bearing grease 6-34

Swing gear 6-34

Swing lock lever 3-47, 6-35

Swing reduction gear oil 3-33

Switch panel 3-9

Switches 3-34

T

Tires air pressure 6-37

Torques-major component 6-6

Torques-fastener 6-6

Towing machine 4-25

Transportation 5-2

Transmission gear oil 6-40

Traveling machine 4-21

Travel pilot lamo 3-43

Troubleshooting guide 7-1

W

Warming up operation 4-5, 4-9

Warning lamps 3-4, 3-25

Weight 2-4

Windshield 3-68

Working device operation 4-20

Working method 4-27

Working range 2-3