
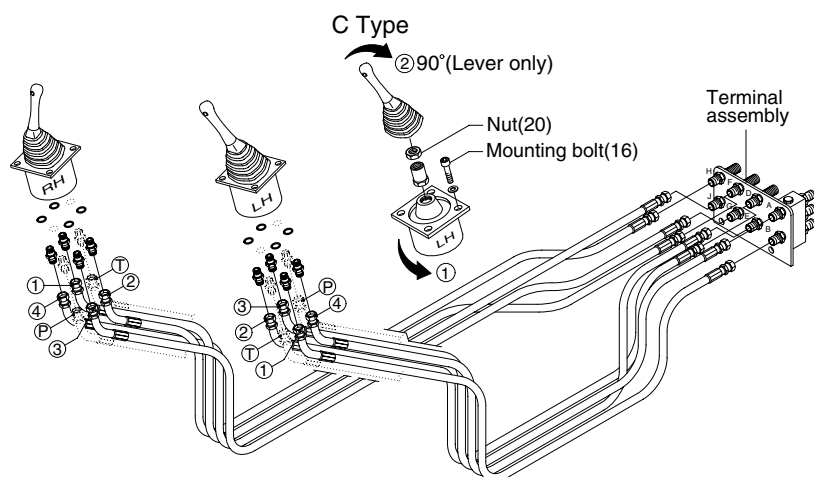
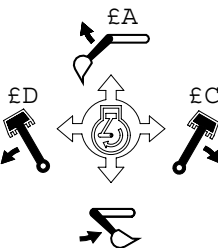
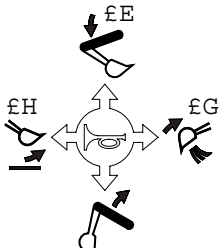
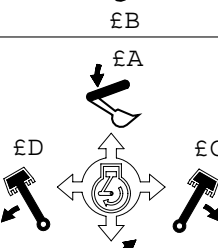
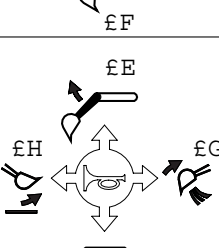
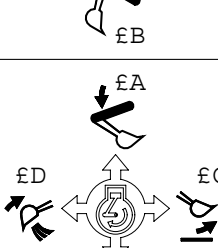
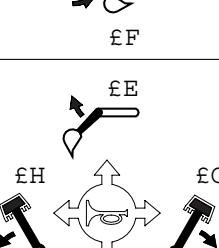
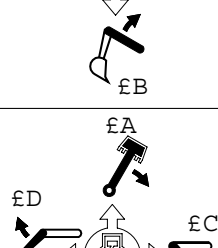
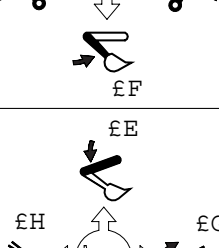
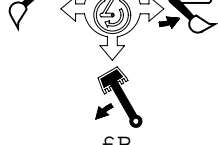


12. RCV LEVER OPERATING PATTERN

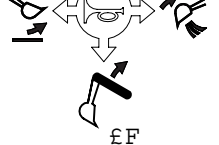

i Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

8007A4OP02

Pattern	Operation		Control function	Hose connection(Port)			
	Left	Right		RCV lever	Change of MCV port		
					From	To	
ISO Type			Left	£A Arm out	□L	D	-
Hyundai				£B Arm in	□E	E	-
			£C Swing right	□Ø	A	-	
			£D Swing left	□	B	-	
			Right	£E Boom lower	□E	J	-
£F Boom raise	□L	H		-			
£G Bucket out	□	F		-			
£H Bucket in	□Ø	G		-			
A Type			Left	£A Boom lower	□L	D	J
Right	£B Boom raise	□E		E	H		
	£C Swing right	□Ø		A	-		
	£D Swing left	□		B	-		
	£E Arm out	□E	J	D			
B Type			£F Arm in	□L	H	E	
			£G Bucket out	□	F	-	
			£H Bucket in	□Ø	G	-	
			Left	£A Boom lower	□L	D	J
£B Boom raise	□E	E		H			
£C Bucket in	□Ø	A		G			
£D Bucket out	□	B		F			
Right	£E Arm out	□E	J	D			
	£F Arm in	□L	H	E			
	£G Swing right	□	F	A			
	£H Swing left	□Ø	G	B			
C Type			Left	□ Loosen the RCV lever mounting bolt(21) and rotates lever assy 90°; □counterclockwise; then install. □L To put lever in correct position, disassemble nut(20) and rotates only lever 90°; □clockwise.			
Right	Same as ISO type						