SECTION 6 TROUBLESHOOTING

Group	1	Before Troubleshooting	6-1
Group	2	Hydraulic and Mechanical System	6-4
Group	3	Electrical System	6-24
Group	4	Mechatronics System ·····	6-42
Group	5	Air conditioner and Heater System	6-71


GROUP 1 BEFORE TROUBLESHOOTING

1. INTRODUCTION

When a trouble is occurred in the machine, this section will help service men repair the machine with easy.

The trouble of machine is parted Hydraulic & Mechanical system, Electrical system and Mechatronics system. At each system part, service men can check the machine according to the troubleshooting process diagram.

* Before carring out troubleshooting procedure, check monitoring menu in the cluster.

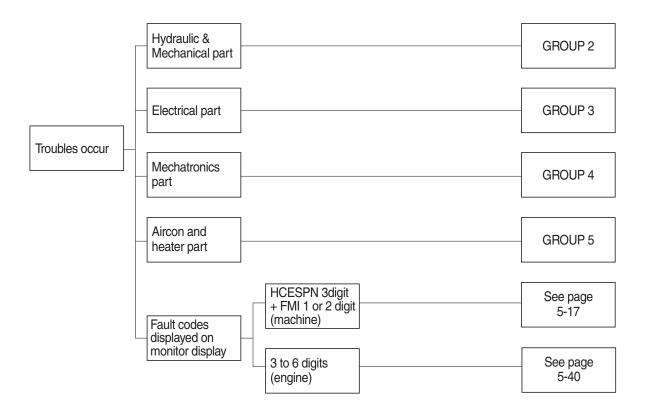


2. DIAGNOSING PROCEDURE

To carry out troubleshooting efficiently, the following steps must be observed.

STEP 1. Study the machine system

Study and know how the machine is operating, how the system is composing, what kinds of function are installed in the machine and what are specifications of the system components by the machine service manual.


Especially, deepen the knowledge for the related parts of the trouble.

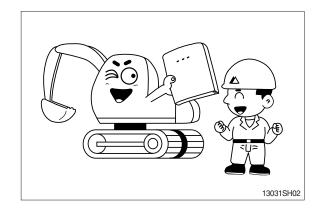

STEP 2. Ask the operator

Before inspecting, get the full story of malfunctions from a witness --- the operator.


- 1) How the machine is used and when it is serviced?
- 2) When the trouble was noticed and what work the machine was doing at that time?
- 3) What is the phenomenon of the trouble? Was the trouble getting worse, or did it come out suddenly for the first time?
- 4) Did the machine have any troubles previously? If so, which parts were repaired before.

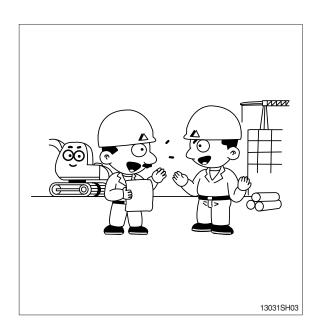

STEP 3. Inspect the machine

Before starting troubleshooting, check the machine for the daily maintenance points as shown in the operator's manual.


And also check the electrical system including batteries, as the troubles in the electrical system such as low battery voltage, loose connections and blown out fuses will result in malfunction of the controllers causing total operational failures of the machine.

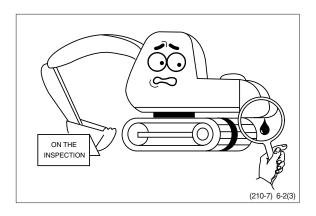

STEP 4. Inspect the trouble actually on the machine


In case that some trouble cannot be confirmed, obtain the details of the malfunction from the operator.

Also, check if there are any in complete connections of the wire harnesses are or not.

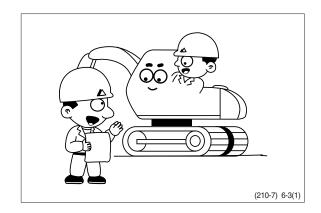

STEP 5. Perform troubleshooting


According to where the trouble parts are located, hydraulic & mechanical system part or electrical system part or mechatronics system part, perform troubleshooting the machine refer to the each system part's troubleshooting process diagram.

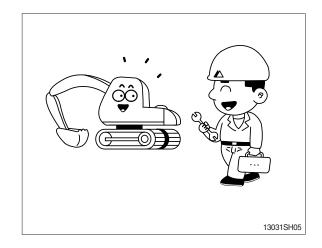

STEP 6. Trace a cause

Before reaching a conclusion, check the most suspectible causes again. Try to trace what the real cause of the trouble is.

Make a plan of the appropriate repairing procedure to avoid consequential malfunctions.

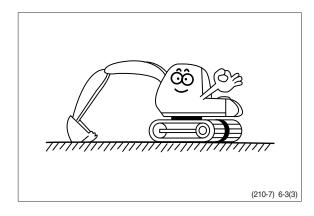

GROUP 2 HYDRAULIC AND MECHANICAL SYSTEM

1. INTRODUCTION

1) MACHINE IN GENERAL

- (1) If even a minor fault is left intact and operation is continued, a fatal failure may be caused, entailing a large sum of expenses and long hours of restoration.
 - Therefore when even a small trouble occurs, do not rely on your intuition and experience, but look for the cause based on the troubleshooting principle and perform maintenance and adjustment to prevent major failure from occurring. Keep in mind that a fault results from a combination of different causes.
- (2) The following lists up commonly occurring faults and possible causes with this machine. For the troubleshooting of the engine, refer to the coming troubleshooting and repair.
- (3) When carrying out troubleshooting, do not hurry to disassemble the components. It will become impossible to find the cause of the problem.
- (4) Ask user or operator the following.
- ① Was there any strange thing about machine before failure occurred?
- ② Under what conditions did the failure occur?
- 3 Have any repairs been carried out before the failure?
- (5) Check before troubleshooting.
- ① Check oil and fuel level.
- ② Check for any external leakage of oil from components.
- 3 Check for loose or damage of wiring and connections.

2) MACHINE STATUS MONITORING ON THE CLUSTER

(1) The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu.





Alle


Analog 2

(2) Specification


No.	Description	Specification
Note 1	Work pilot pressure	40 ⁺² bar
Note 2	Swing pilot pressure	0~40 bar
Note 3	Boom up pilot pressure	0~40 bar
Note 4	Arm/bucket pilot pressure	0~40 bar
Note 5	Pump 1 regulator pressure	0~50 bar
Note 6	Pump 2 regulator pressure	0~50 bar
Note 7	Pump 1 pressure	330 bar

2. DRIVE SYSTEM

1) UNUSUAL NOISE COMES OUT OF PUMP CONNECTION

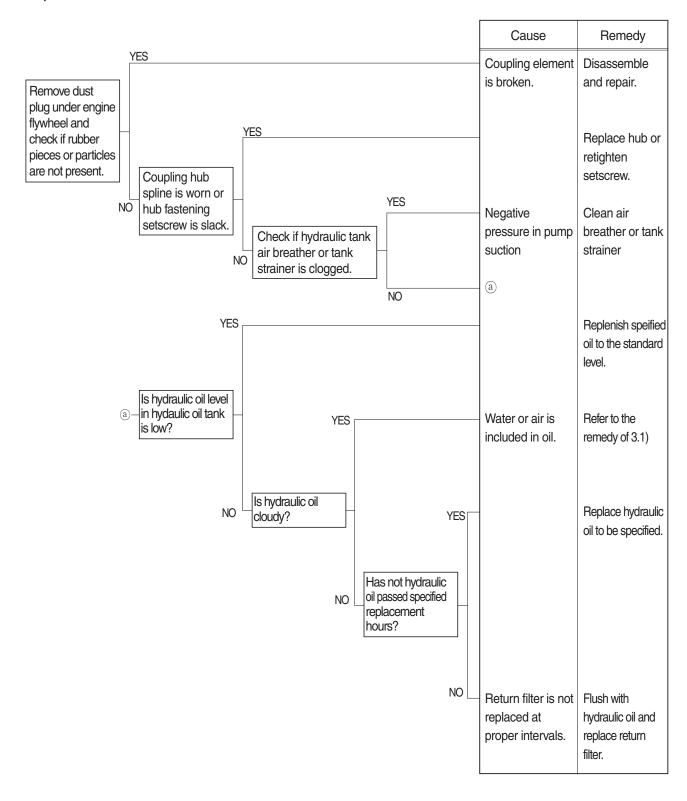


2) ENGINE STARTS BUT MACHINE DOES NOT OPERATE AT ALL

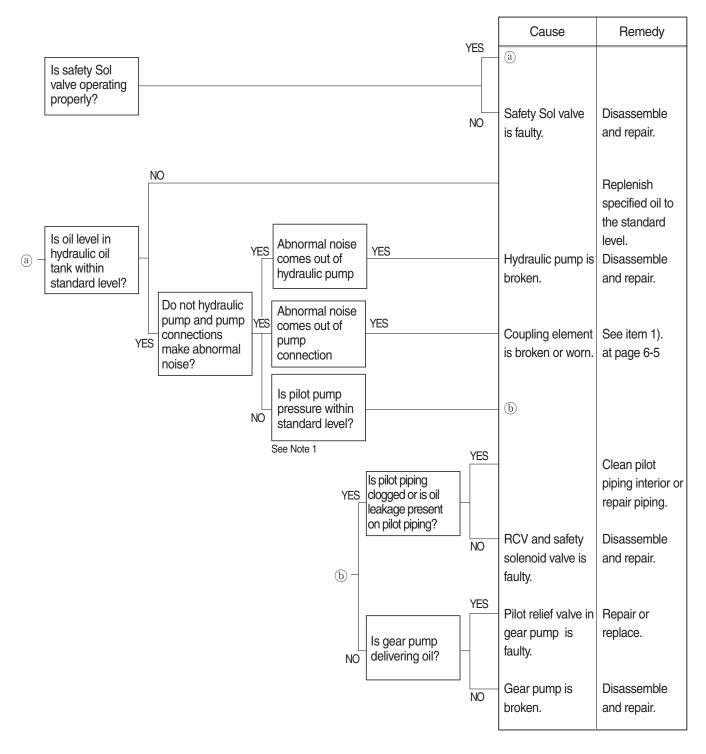


3. HYDRAULIC SYSTEM


1) HYDRAULIC OIL IS CLOUDY

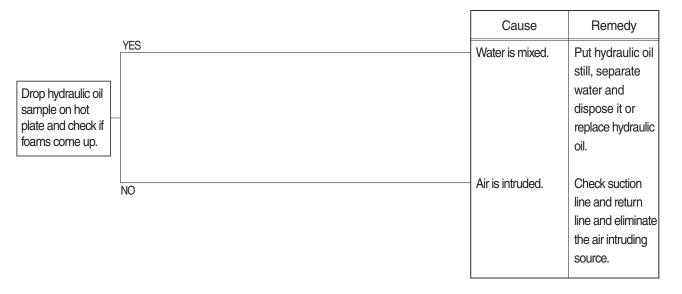


2) HYDRAULIC OIL TEMPERATURE HAS RISEN ABNORMALLY

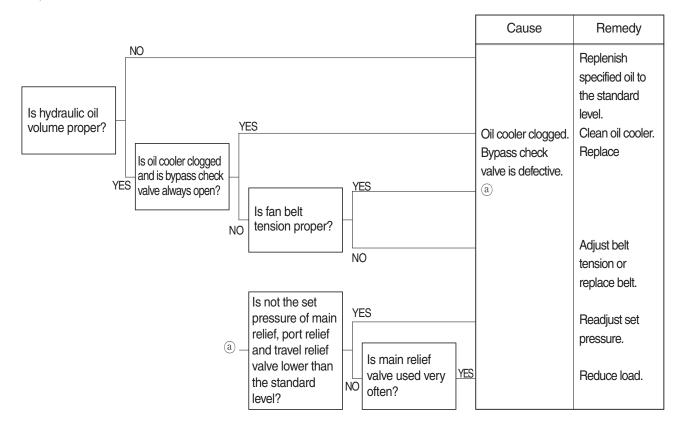

3) CAVITATION OCCURS WITH PUMP

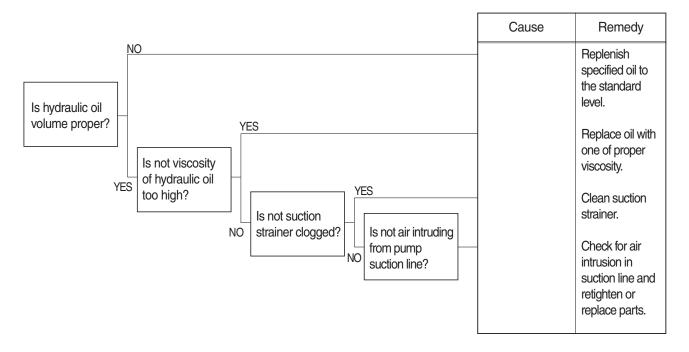


4) HYDRAULIC OIL IS CONTAMINATED

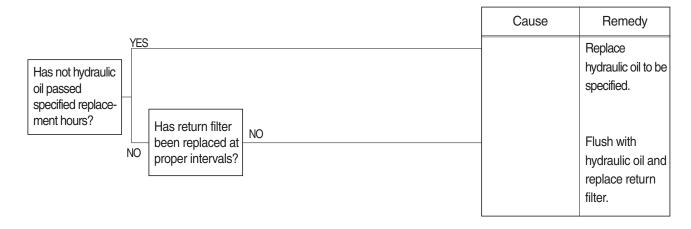


4. SWING SYSTEM


1) BOTH LH AND RH SWING ACTIONS ARE IMPOSSIBLE

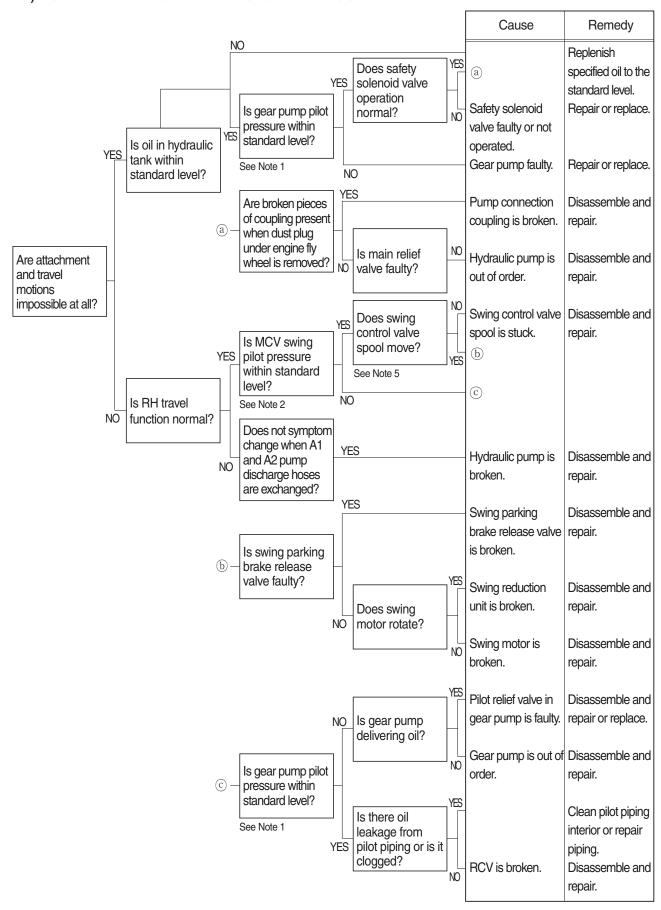


2) SWING SPEED IS LOW

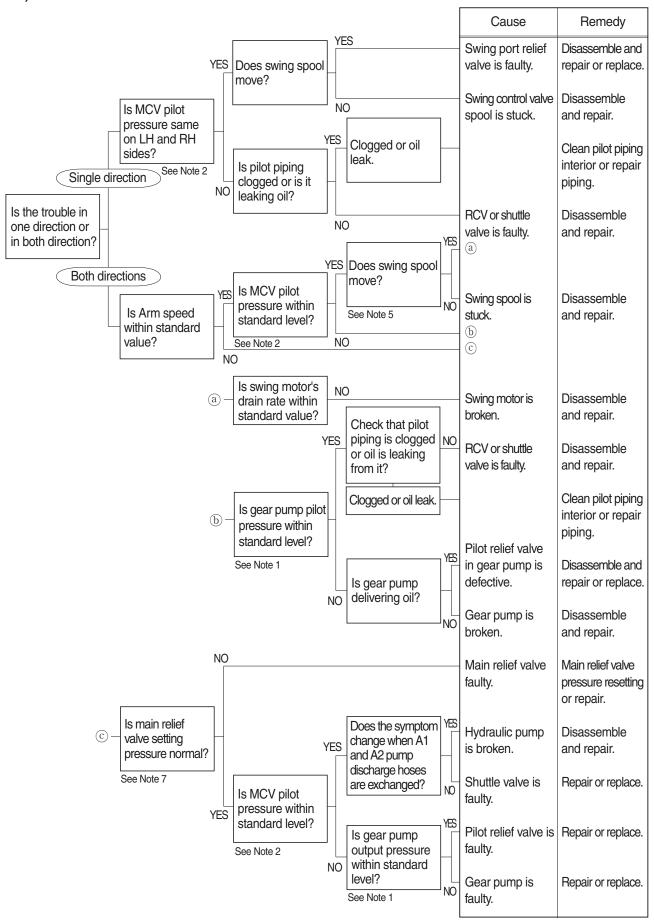


3) SWING MOTION IS IMPOSSIBLE IN ONE DIRECTION

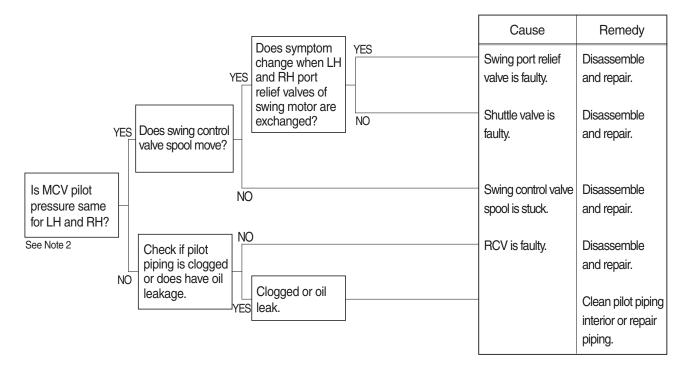


4) MACHINE SWINGS BUT DOES NOT STOP

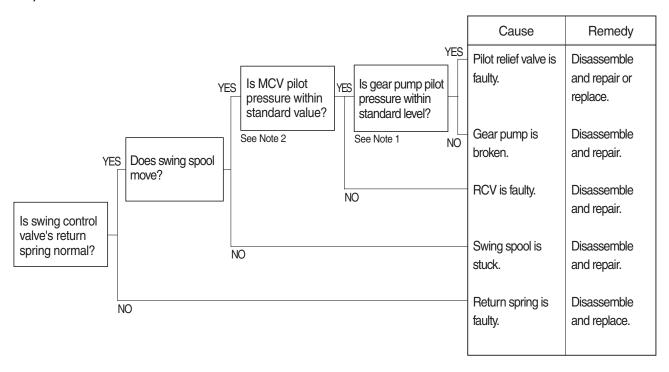


5) THE SWING UNIT DRIFTS WHEN THE MACHINE IS AT REST ON A SLOPE

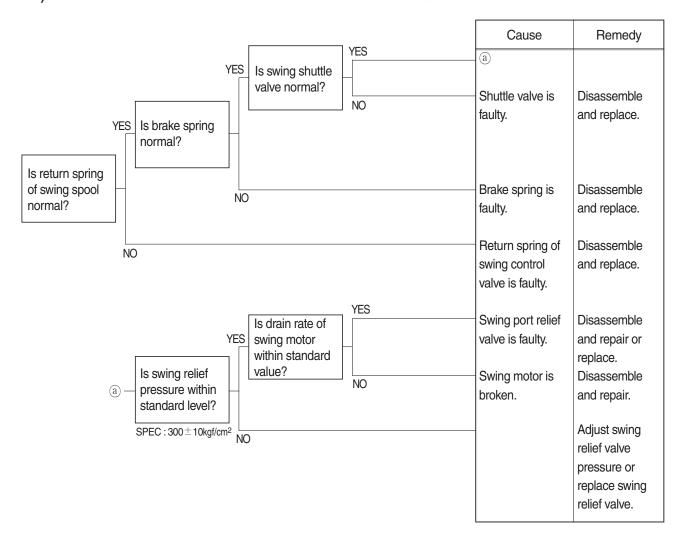

6) LARGE SHOCK OCCURS WHEN STOP SWINGING

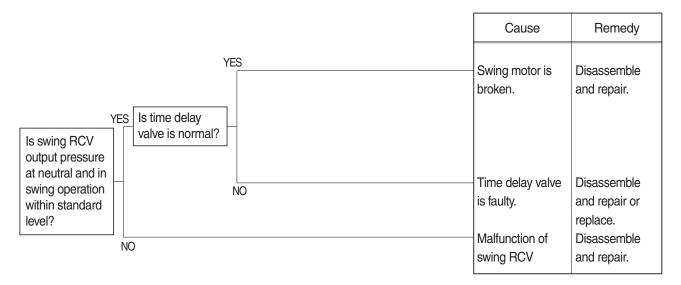


7) LARGE SOUND OCCURS WHEN STOP SWINGING

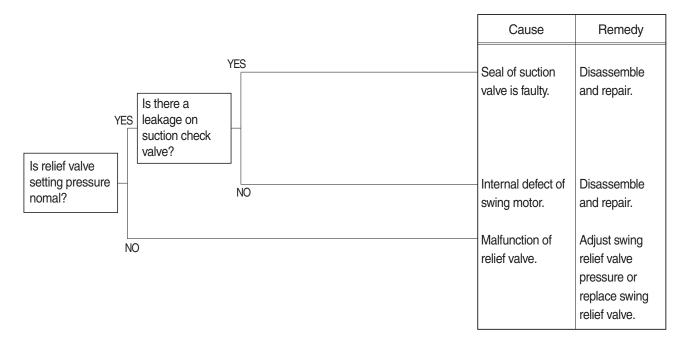


5. TRAVEL SYSTEM

1) TRAVEL DOES NOT FUNCTION AT ALL ON ONE SIDE

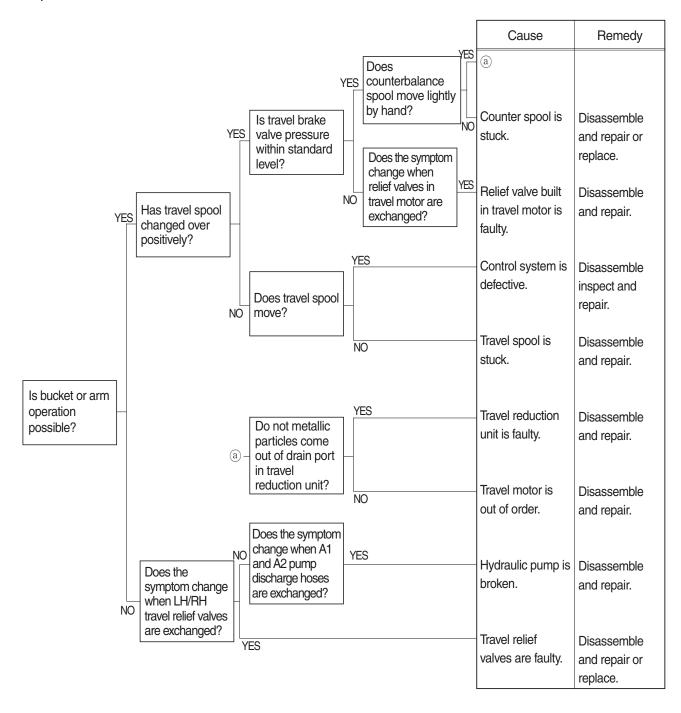


2) SPEED ON ONE SIDE FALLS AND THE MACHINE CURVES

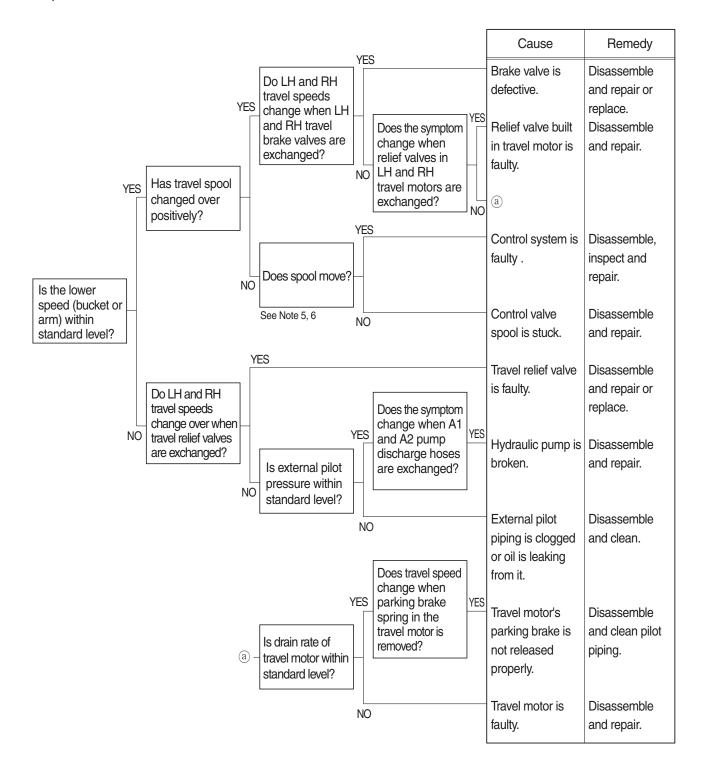


3) MACHINE DOES NOT STOP ON A SLOPE


Machine is pulled forward as sprocket rotates during digging operation.

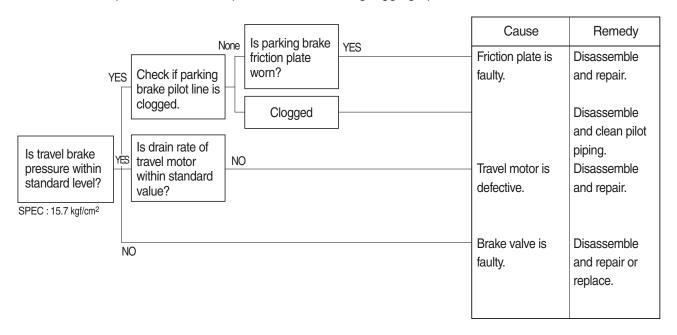

4) LH AND RH TRAVEL MOTIONS ARE IMPOSSIBLE

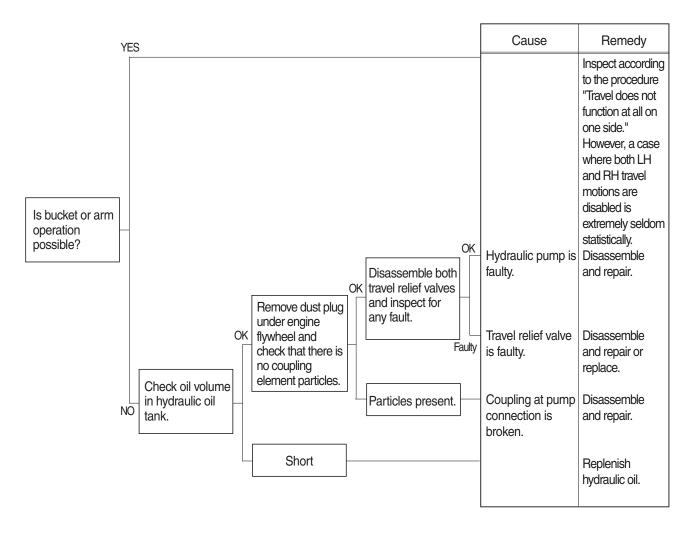


5) TRAVEL ACTION IS POWERLESS (travel only)

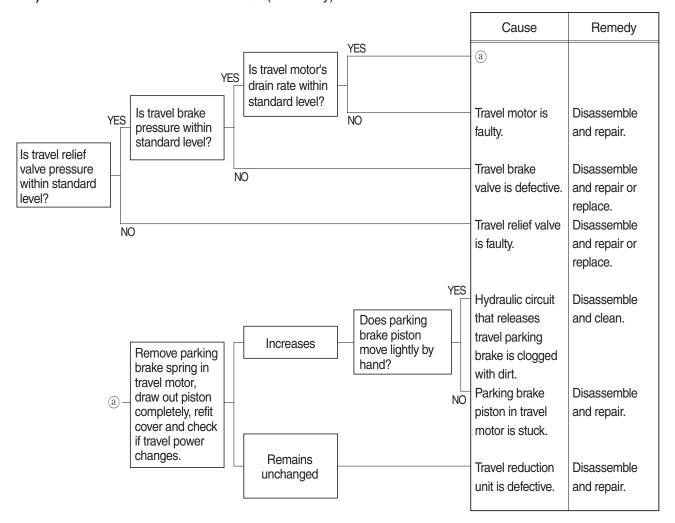

6) MACHINE RUNS RECKLESSLY ON A SLOPE


Travel brake valve	Cause	Remedy
(counterbalance valve) is faulty.		Disassemble and repair or replace.

7) MACHINE MAKES A CURVED TRAVEL OR DOES NOT TRAVEL AT ALL WHEN TRAVEL AND ATTACHMENT OPERATIONS ARE EXECUTED AT THE SAME TIME

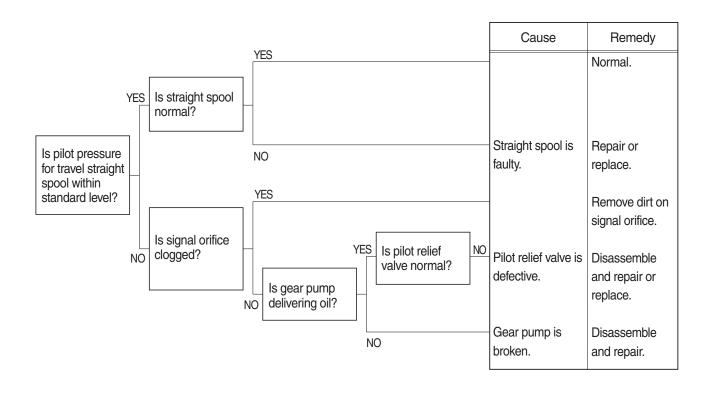


6. ATTACHMENT SYSTEM


1) BOOM OR ARM ACTION IS IMPOSSIBLE AT ALL

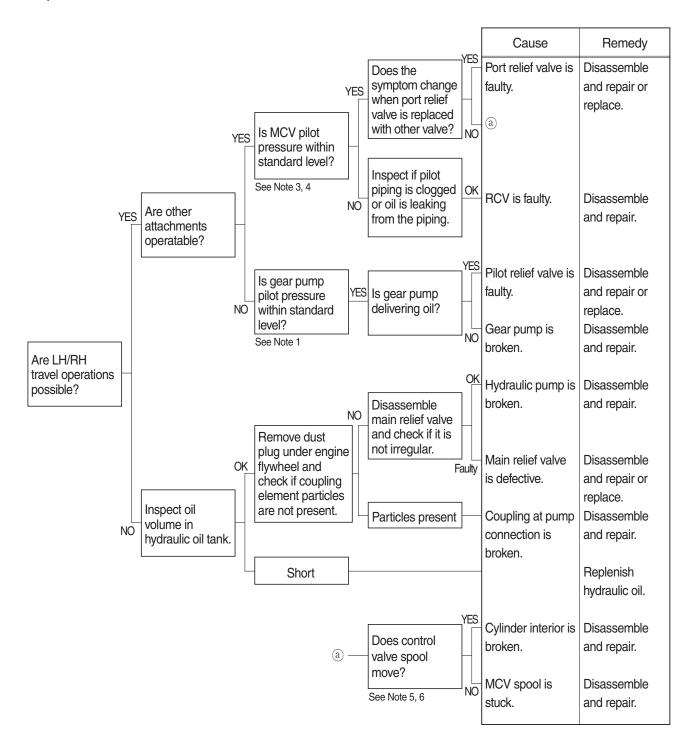


2) BOOM, ARM OR BUCKET SPEED IS LOW

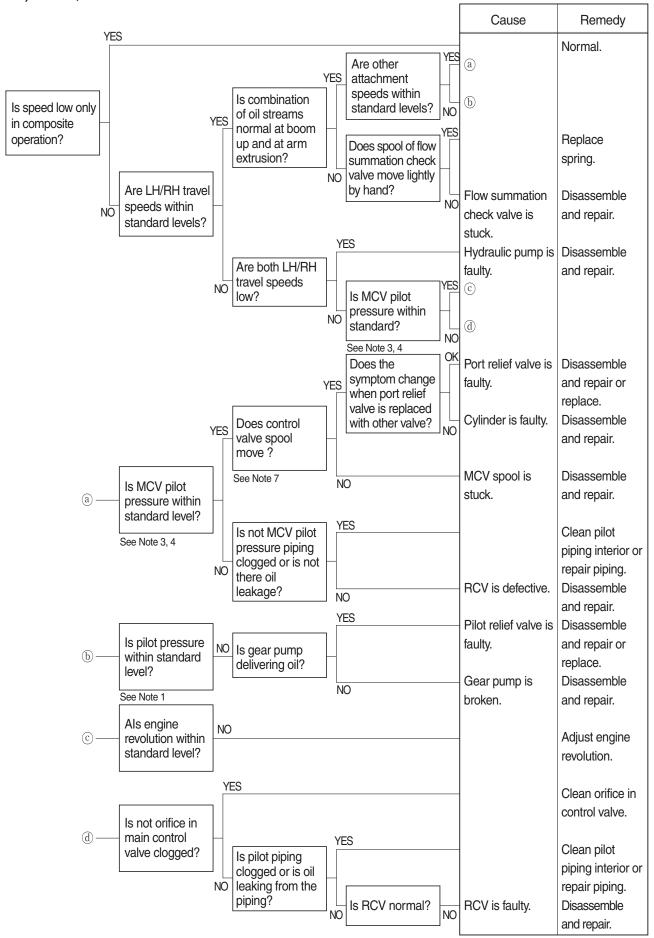


3) BOOM, ARM OR BUCKET CYLINDER EXTENDS OR CONTRACTS ITSELF AND ATTACHMENT FALLS

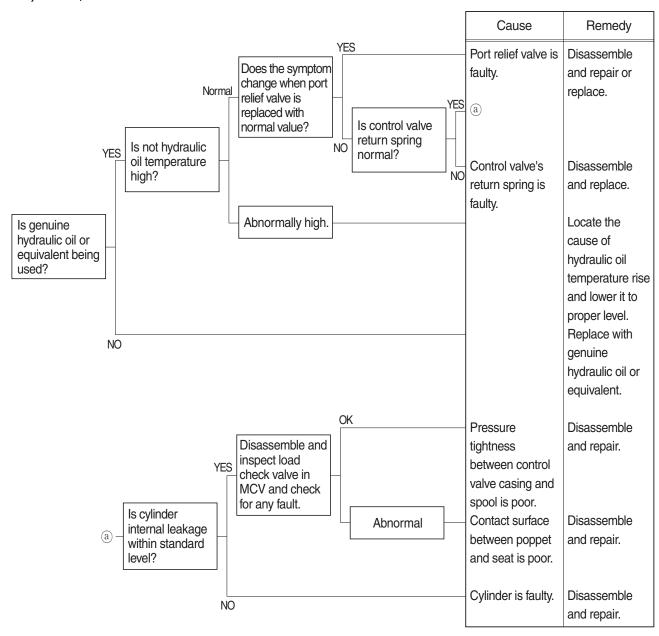


4) BOOM, ARM OR BUCKET POWER IS WEAK

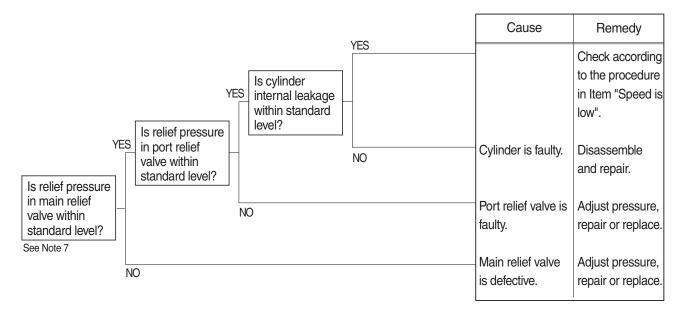


5) ONLY BUCKET OPERATION IS TOTALLY IMPOSSIBLE

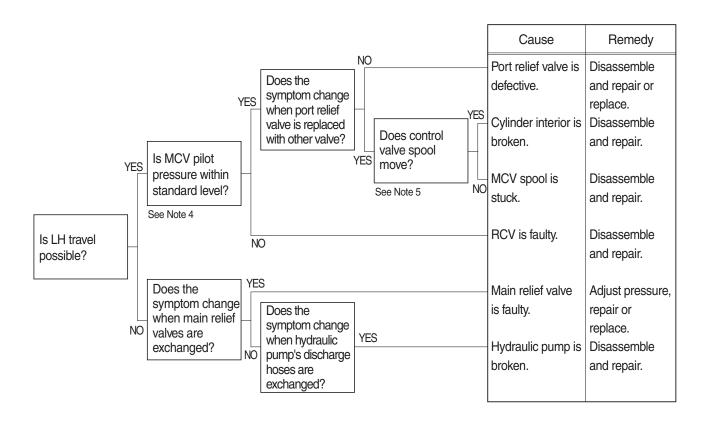

6) BOOM MAKES A SQUEAKING NOISE WHEN BOOM IS OPERATED

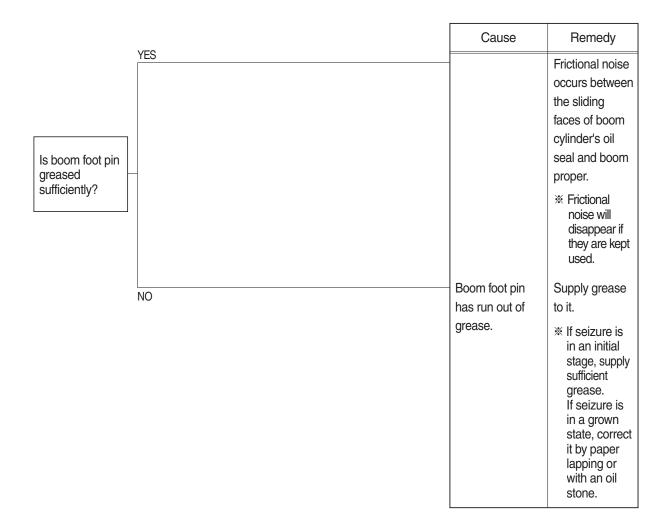


7) TIME LAG OF MACHINE WORKING IS LARGE.

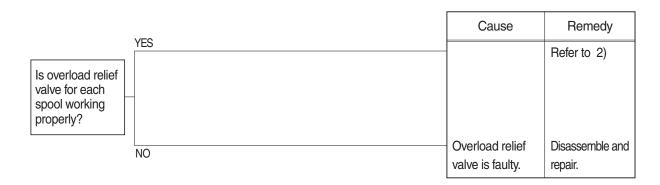

GROUP 3 ELECTRICAL SYSTEM


1. WHEN STARTING SWITCH IS TURNED ON, CLUSTER DISPLAY DOES NOT APPEAR

- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 7, 10.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

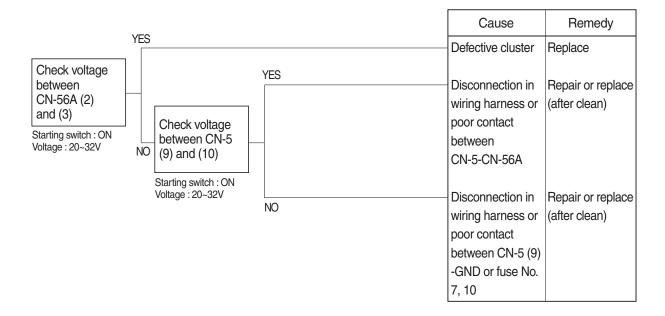


Check voltage

YES	20~32V			
NO	0V			

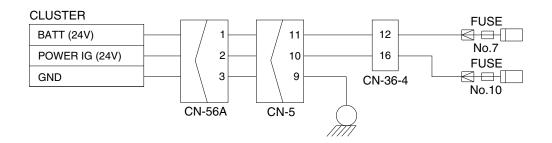


2. COMMUNICATION ERROR FLASHES ON THE CLUSTER (HCESPN 840, FMI 2)

- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

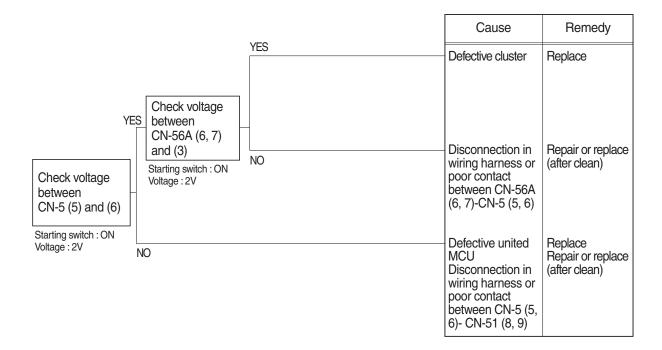


Check voltage

YES	2V
NO	0V

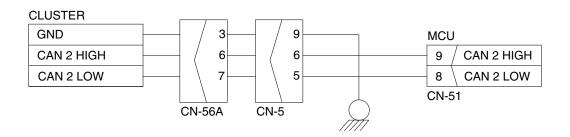


3. Fig. 3. BATTERY CHARGING WARNING LAMP LIGHTS UP (Starting switch : ON)

- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

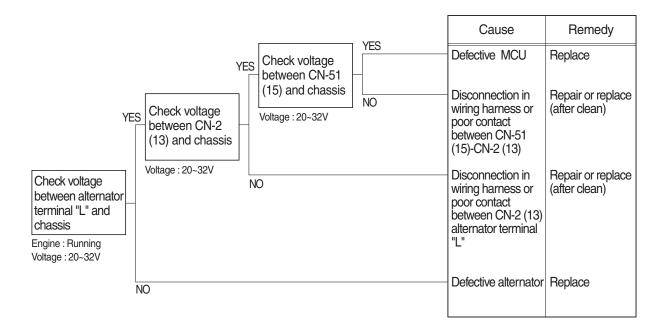


Check voltage

YES	20~32V
NO	0V

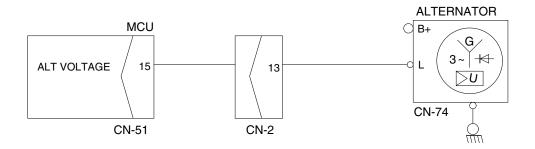

4. OF WHEN COOLANT OVERHEAT WARNING LAMP LIGHTS UP (engine is started)


- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

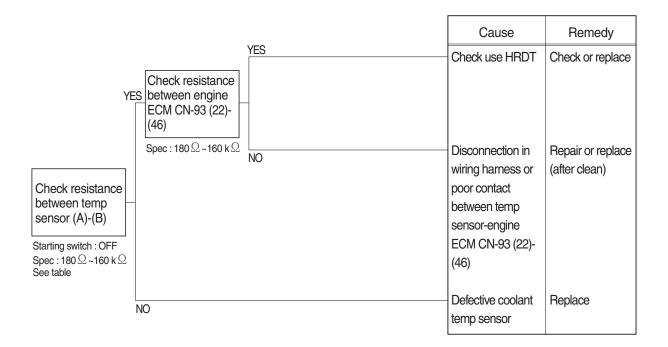




Check Table

one of table							
Temperature (°C)	0	25	50	80	95		
Resistance ($k\Omega$)	30~37	9.3~10.7	3.2~3.8	1.0~1.3	0.7~0.8		

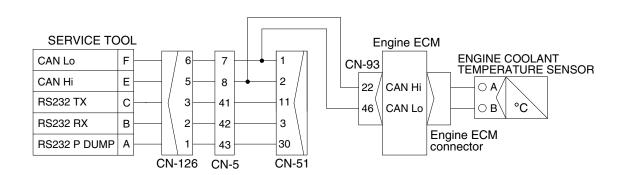


5. WHEN AIR CLEANER WARNING LAMP LIGHTS UP (engine is started)

- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

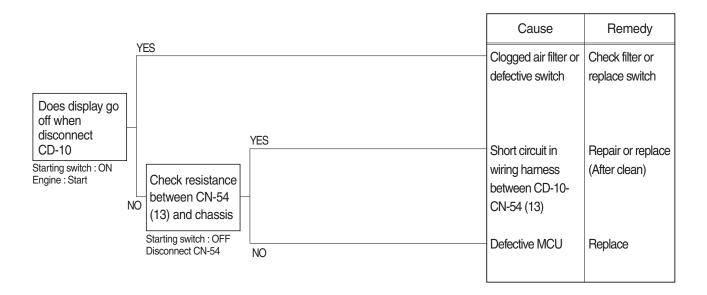


Check resistance


YES	MAX 1 Ω
NO	MIN 1M $Ω$

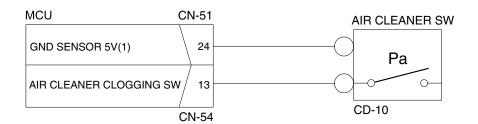

6. WHEN ENGINE OIL PRESSURE WARNING LAMP LIGHTS UP (engine is started)


- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

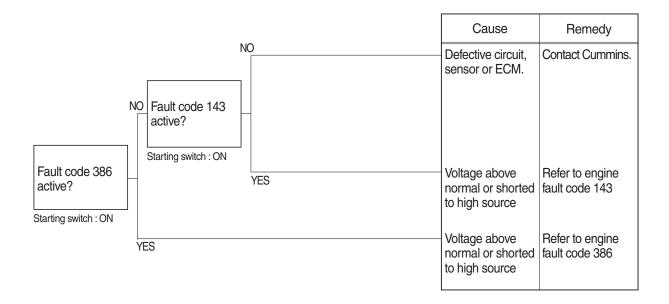

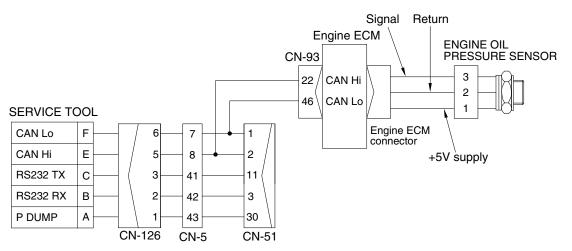

7. WHEN HYDRAULIC OIL TEMPERATURE WARNING LAMP LIGHTS UP (engine is started)


- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

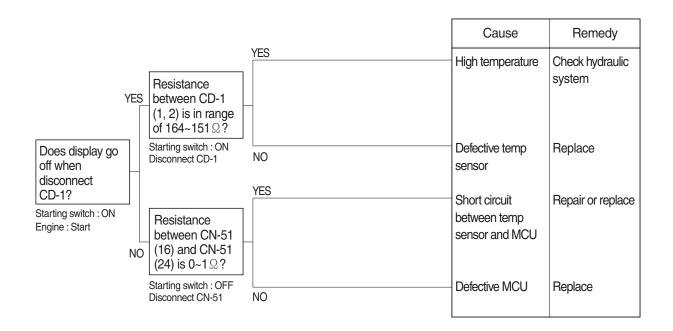

B


Check Table

Temperature (°C)	~ -30	~ -10	~ 0	~ 40	~ 70	~ 80	~ 90	~ 100	105~
Resistance (kΩ)	22.22	8.16	5.18	1.06	0.39	0.322	0.243	0.185	0.164
	~31.78	~10.74	~ 6.6	~1.28	~0.476	~0.298	~0.219	~0.167	~0.151

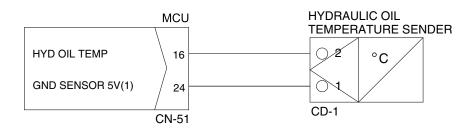

8. WHEN COOLANT TEMPERATURE GAUGE DOES NOT OPERATE


- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

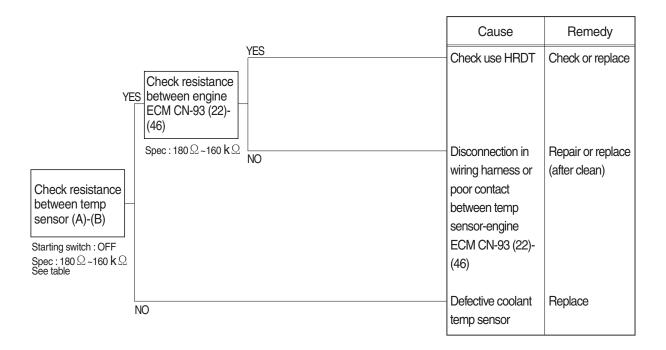




Check Table

Temperature (°C)	0	25	50	80	95
Resistance ($k\Omega$)	30~37	9.3~10.7	3.2~3.8	1.0~1.3	0.7~0.8

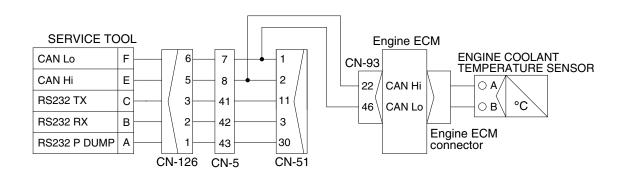

9. WHEN FUEL GAUGE DOES NOT OPERATE (HCESPN 301, FMI 3 or 4)


- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

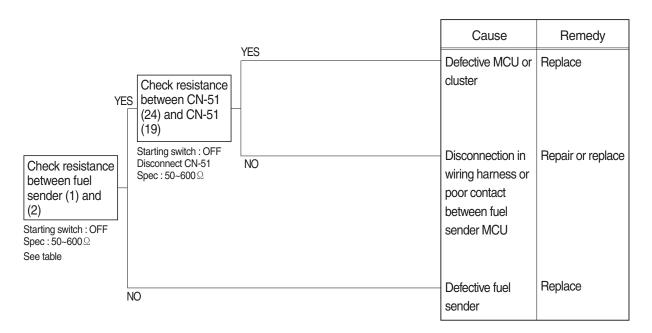




Check Table


Range	Resistance (Ω)	Range	Resistance (Ω)				
Full	50	5/12	400				
11/12	100	4/12	450				
10/12	150	3/12	500				
9/12	200	2/12	550				
8/12	250	1/12	600				
7/12	300	Empty warning	700				
6/12	350	-	-				

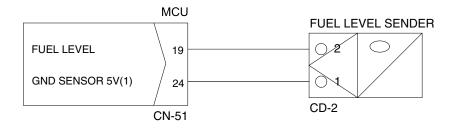

10. WHEN SAFETY SOLENOID DOES NOT OPERATE


- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 26.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.
- · Auto safety lock function execution condition : When the RCV pilot pressure increases above certain pressure within the standard time after changing the safety knob LOCK \rightarrow UNLOCK
- · Under the above conditions, the electric current is turned off to the safety solenoid, and the function of RCV and pedal is disabled.

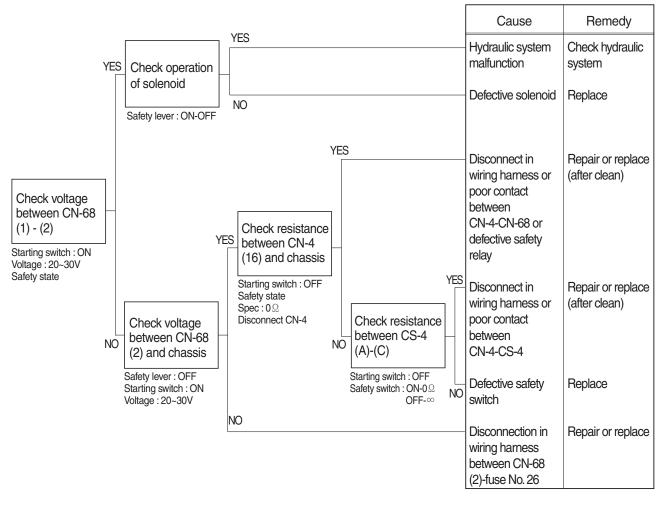


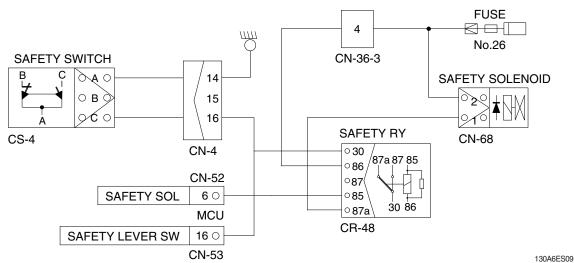


11. WHEN TRAVEL SPEED 1, 2 DOES NOT OPERATE (HCESPN 167, FMI 4 or 6)


- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 24.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

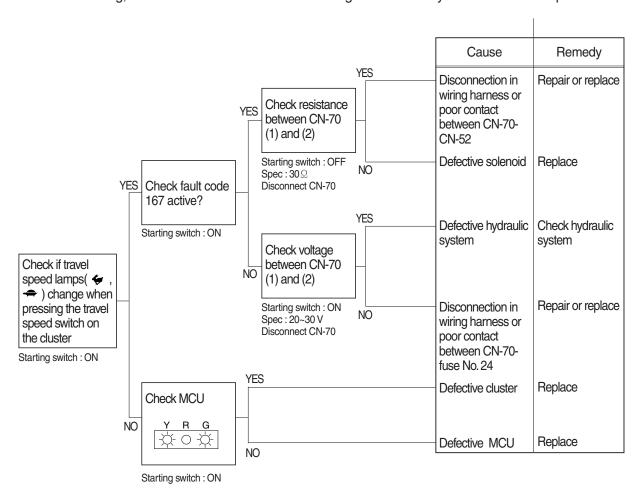

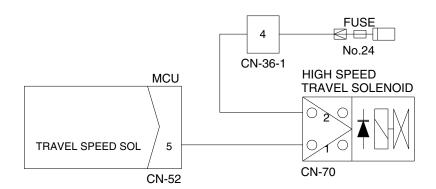


12. TRAVEL ALARM DOES NOT SOUND OR DOES NOT STOP SOUNDING

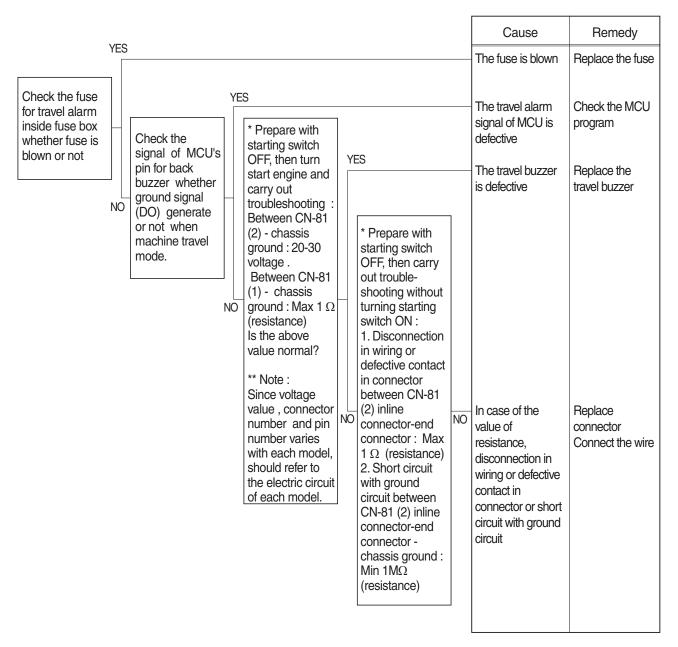

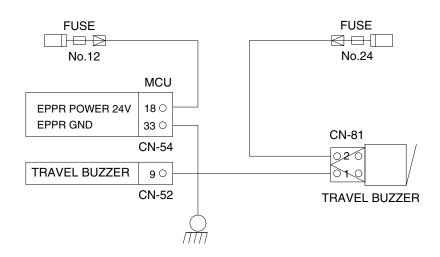



13. HORN DOES NOT SOUND

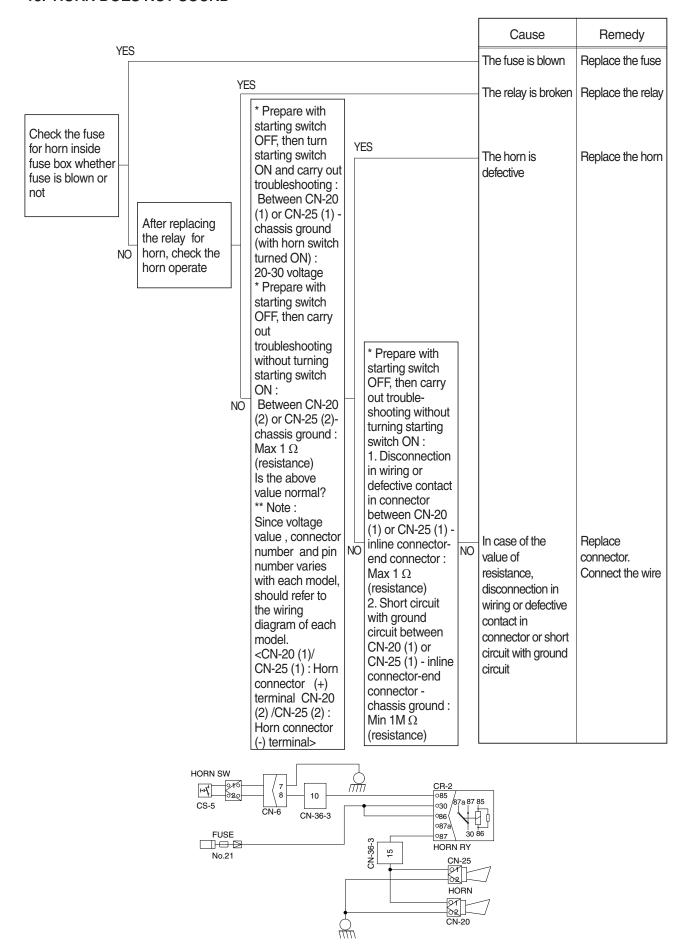

14. WHEN ENGINE DOES NOT START (| - + | lights up condition)

- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 1, 2, 12, 13, 15.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

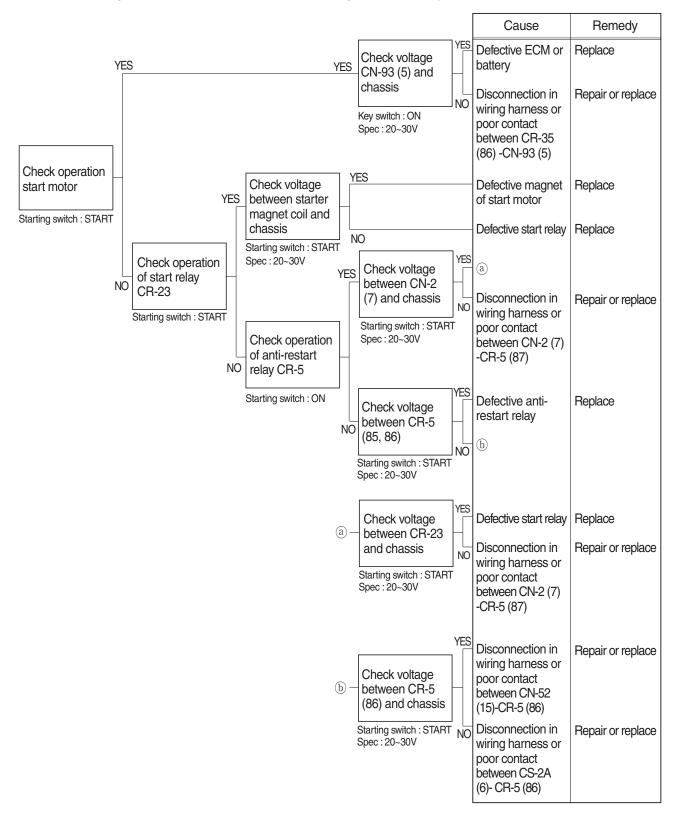


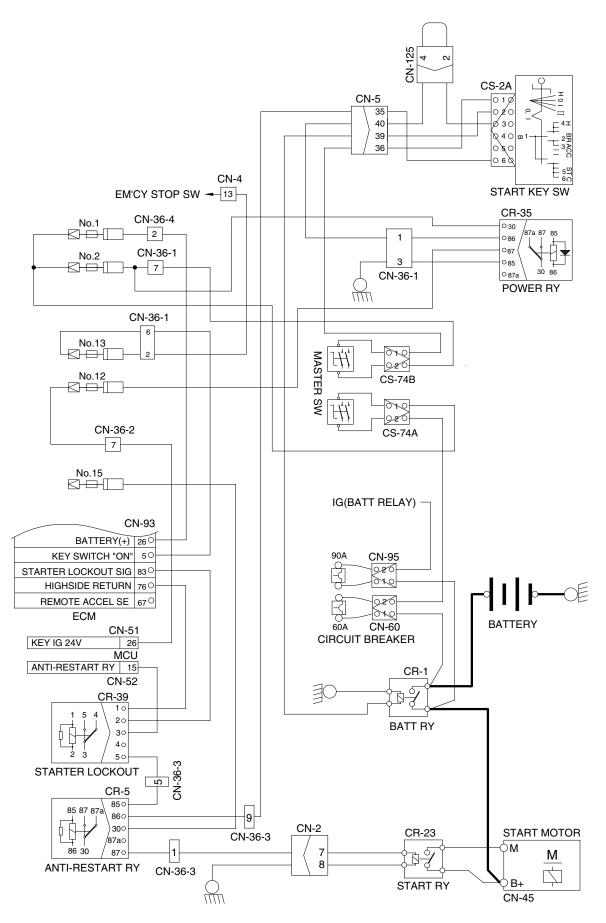


130A6ES17

15. WHEN STARTING SWITCH ON DOES NOT OPERATE


- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted, master switch ON and check open circuit of circuit breaker (CN-60).
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

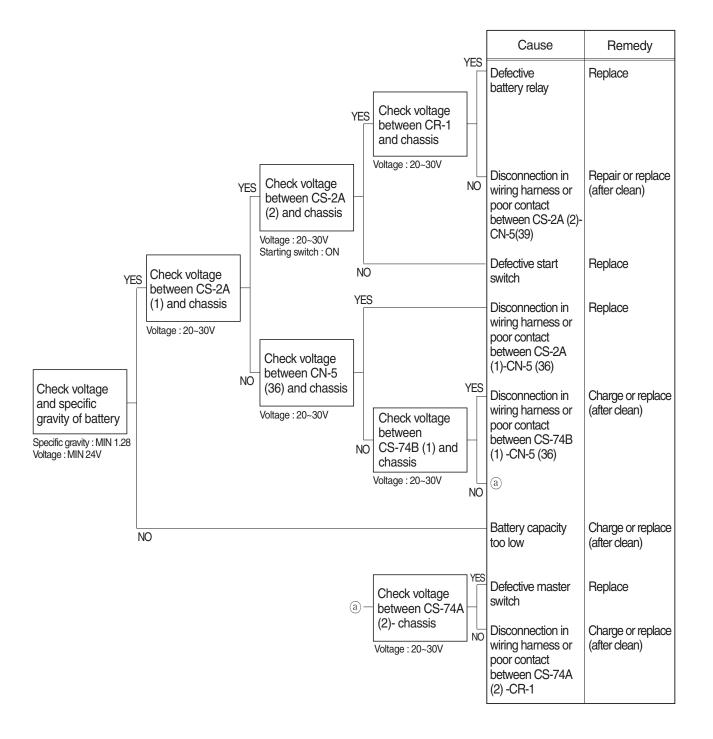


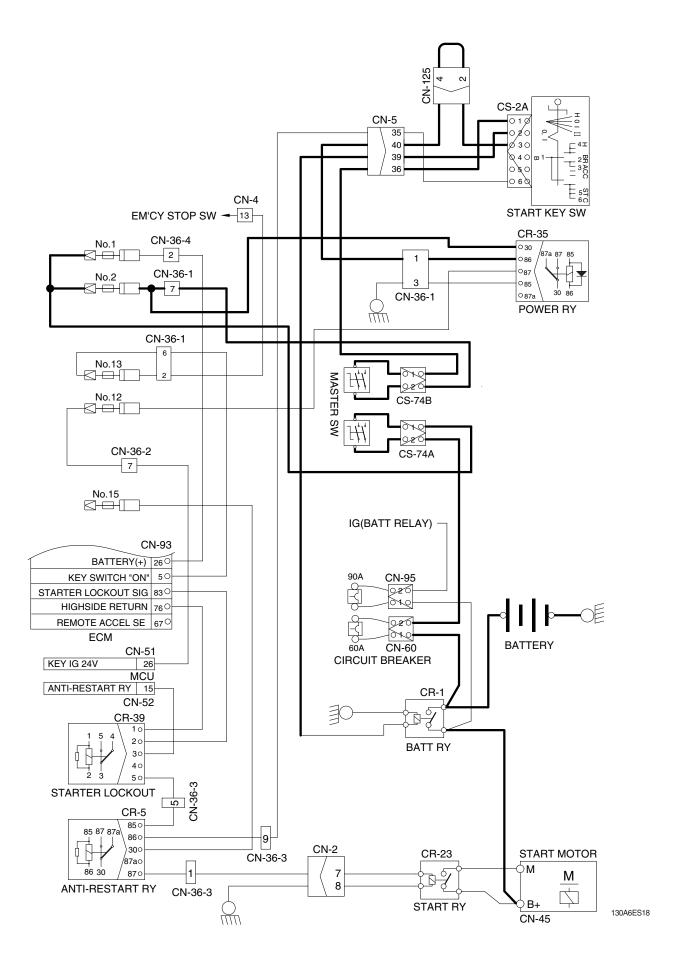

16. WHEN STARTING SWITCH IS TURNED ON, WIPER MOTOR DOES NOT OPERATE

- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted and the fuse No. 6, 11 and 21 is not blown out.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

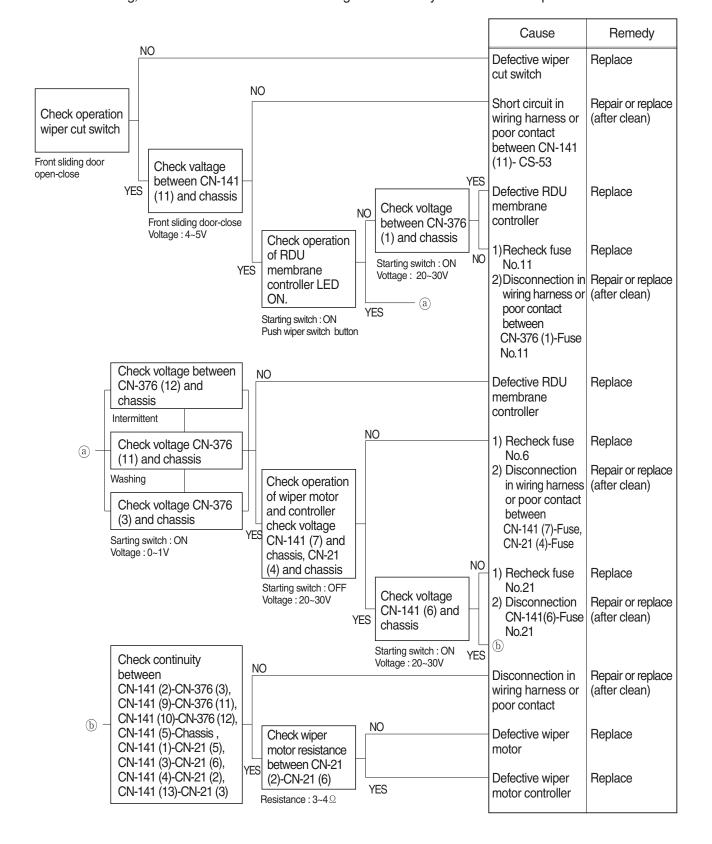


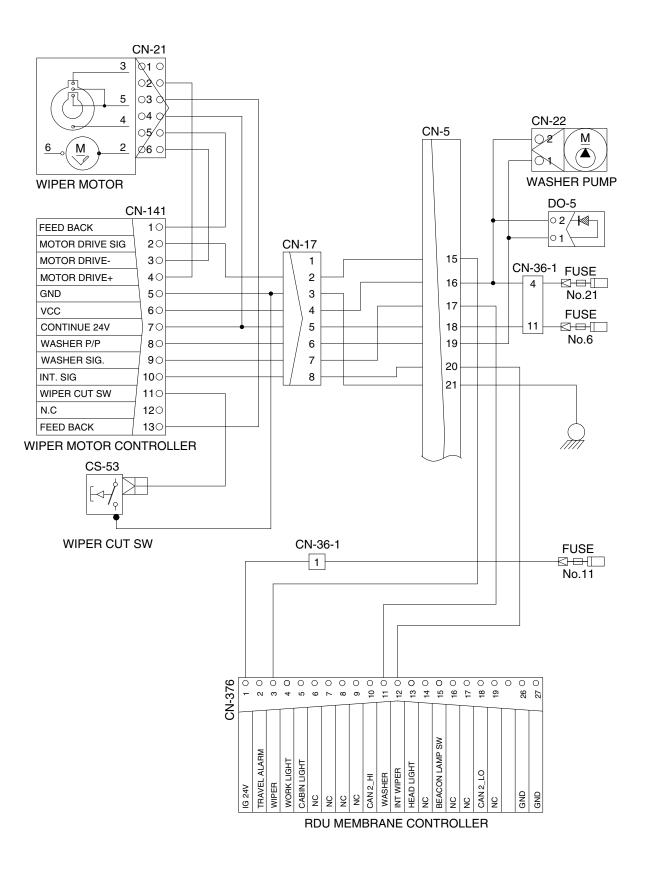


130A6ES19

17. WHEN STARTING SWITCH IS TURNED ON, HEAD LAMP DOES NOT LIGHTS UP

- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No.11 & 16.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

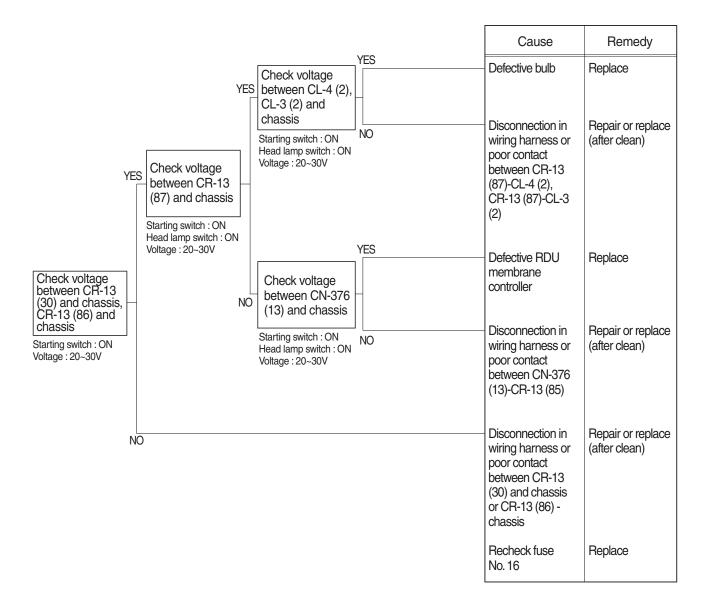

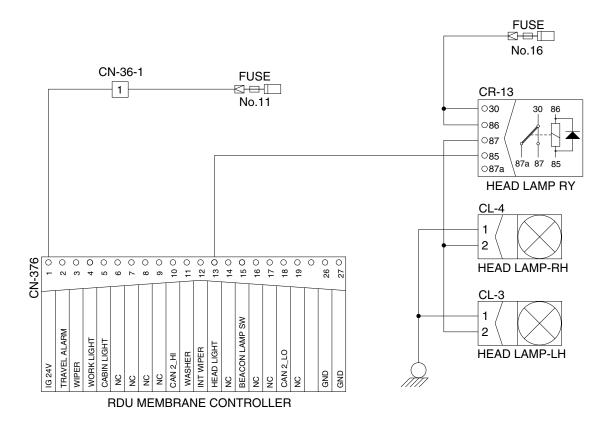



130A6ES20

6-40

18. WHEN STARTING SWITCH IS TURNED ON, WORK LAMP DOES NOT LIGHTS UP

- · Before disconnecting the connector, always turn the starting switch OFF.
- · Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No.11 & 17.
- · After checking, insert the disconnected connectors again immediately unless otherwise specified.

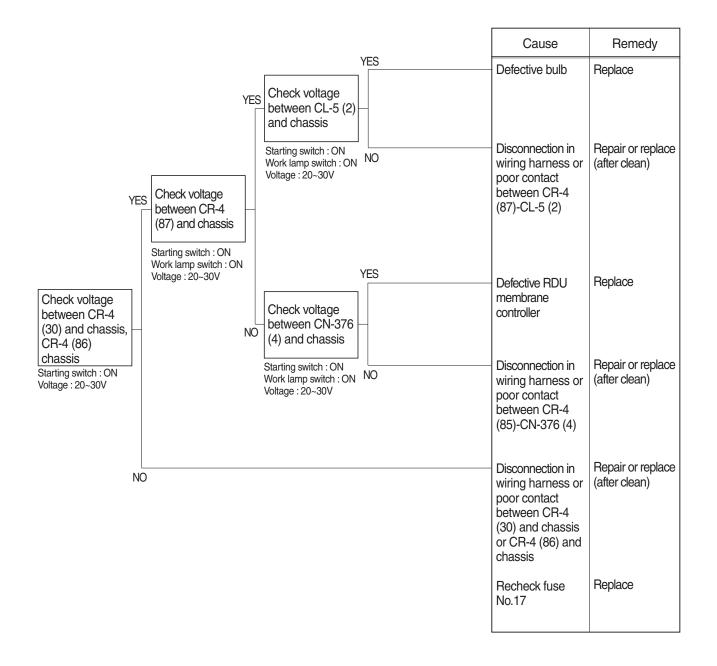

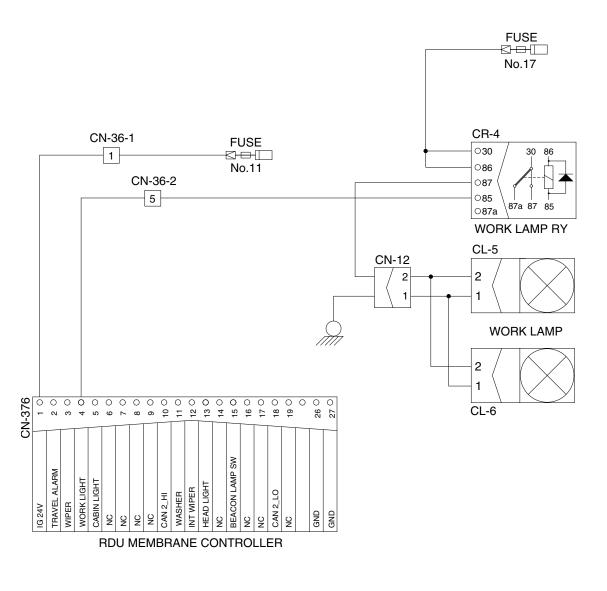

130A6ES21


6-41

GROUP 4 MECHATRONICS SYSTEM


1. ALL ACTUATORS SPEED ARE SLOW

- * Boom, Arm, Bucket, Swing and travel speed are slow, but engine speed is good.
- lpha Spec : P-mode 1900 \pm 50 rpm S -mode 1750 \pm 50 rpm E-mode 1700 \pm 50 rpm
- * Before carrying out below procedure, check all the related connectors are properly inserted and fault code on the cluster.


1) INSPECTION PROCEDURE

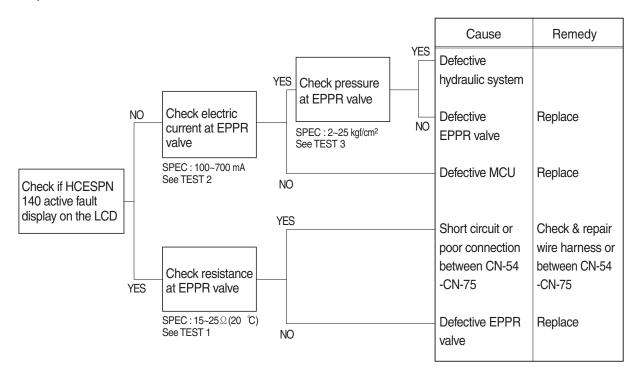


Wiring diagram

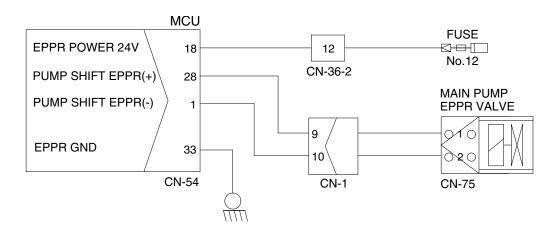


- (1) **Test 1**: Check resistance at connector CN-75.
- ① Starting switch OFF.
- ② Disconnect connector CN-75 from EPPR valve at main hydraulic pump.
- ③ Check resistance between 2 lines as figure.

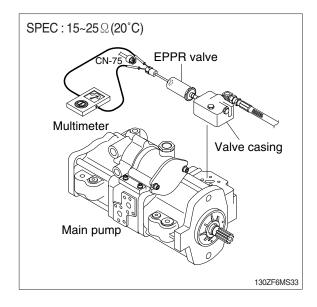

- (2) Test 2 : Check electric current at EPPR valve.
- ① Disconnect connector CN-75 from EPPR valve.
- ② Insert the adapter to CN-75 and install multimeter as figure.
- ③ Start engine.
- 4 Set S-mode and cancel auto decel mode.
- (5) Position the accel dial at 10.
- ⑥ If tachometer show approx 1750±50 rpm disconnect one wire harness from EPPR valve.
- ⑦ Check electric current at bucket circuit relief position.

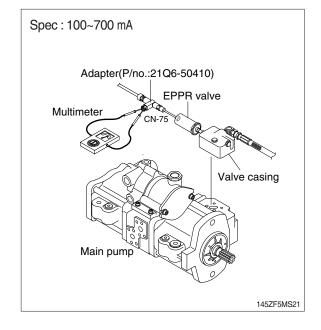


- (3) Test 3: Check pressure at EPPR valve.
 - ① Remove plug and connect pressure gauge as figure.
 - · Gauge capacity : 0 to 50 kgf/cm² (0 to 725 psi)
 - ② Start engine.
 - 3 Set S-mode and cancel auto decel mode.
 - 4 Position the accel dial at 10.
 - Slowly operate control lever of bucket functions at full stroke over relief and measure the EPPR valve pressure by the the monitoring menu of the cluster.
 - 6 If pressure is not correct, adjust it.
 - 7 After adjust, test the machine.

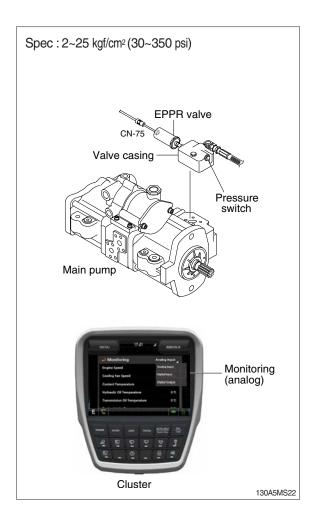


2. ENGINE STALL

* Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

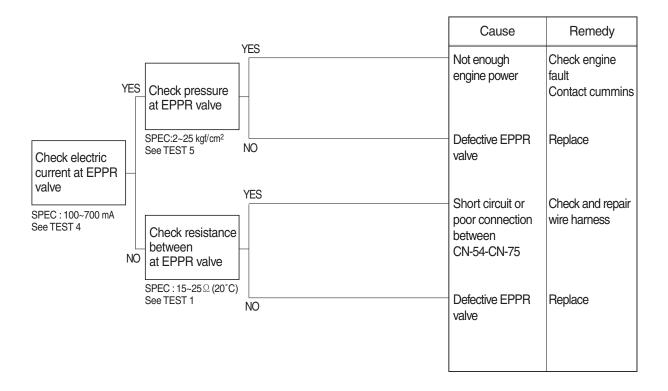


Wiring diagram

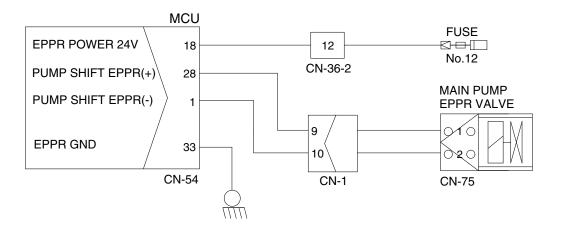

- (1) **Test 4**: Check electric current at EPPR valve.
 - ① Disconnect connector CN-75 from EPPR valve.
 - ② Insert the adapter to CN-75 and install multimeter as figure.
 - ③ Start engine.
 - Set S-mode and cancel auto decel mode.
 - 5 Position the accel dial at 10.
 - 6 If rpm show approx 1750 \pm 50 rpm disconnect one wire harness from EPPR valve.
 - Theck electric current at bucket circuit relief position.

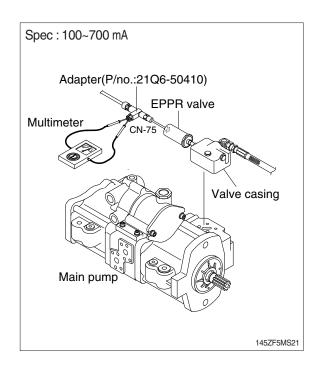


- (2) Test 5 : Check pressure at EPPR valve.
 - ① Remove plug and connect pressure gauge as figure.
 - · Gauge capacity : 0 to 50 kgf/cm² (0 to 725 psi)
 - ② Start engine.
 - ③ Set S-mode and cancel auto decel mode.
 - 4 Position the accel dial at 10.
 - Slowly operate control lever of bucket functions at full stroke over relief and measure the EPPR valve pressure by the the monitoring menu of the cluster.
 - 6 If pressure is not correct, adjust it.
 - 7 After adjust, test the machine.

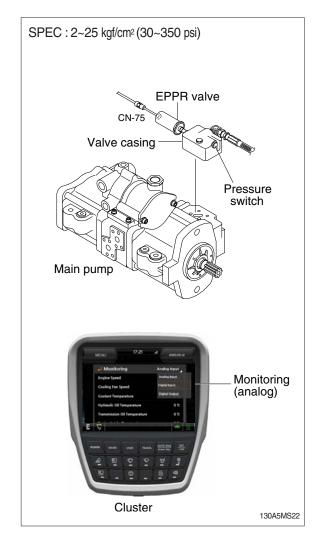


3. MALFUNCTION OF CLUSTER OR MODE SELECTION SYSTEM

* Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

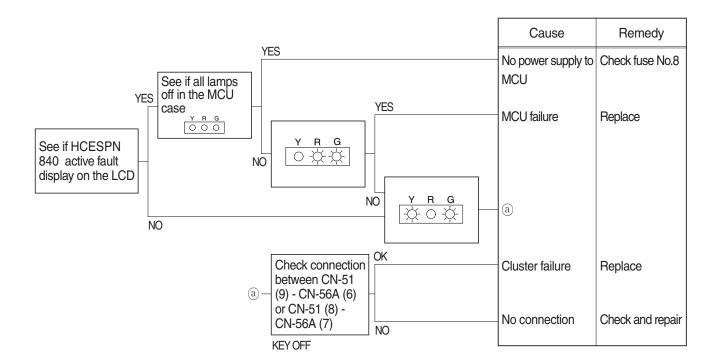


Wiring diagram

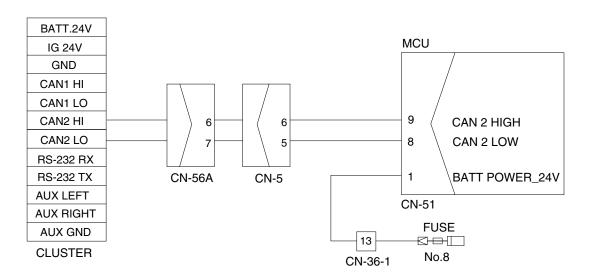


4. AUTO DECEL SYSTEM DOES NOT WORK (N.A)


- Fault code: HCESPN 105, FMI 0~4 (work pressure sensor)
 HCESPN 108, FMI 0~4 (travel oil pressure sensor)
- * Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

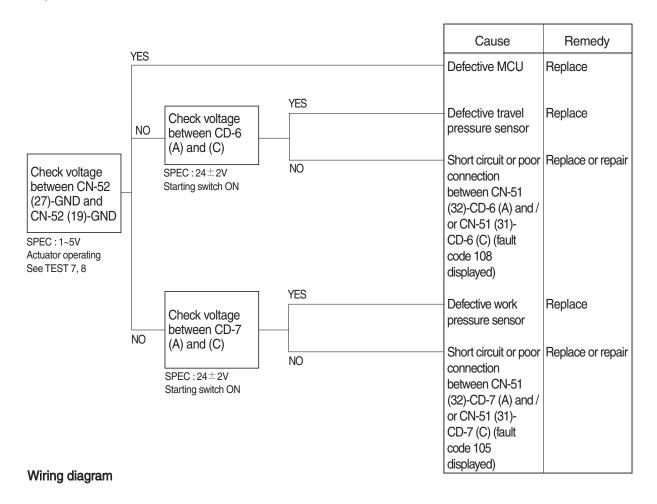

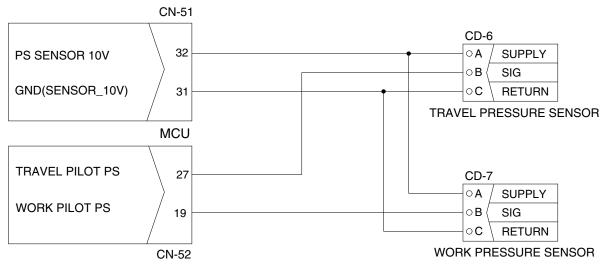


- (1) Test 7: Check voltage at CN-52 (27) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (27) of CN-52.
- ③ Starting switch ON.
- 4 Check voltage as figure.
- (2) Test 8: Check voltage at CN-52 (19) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper
- ② Insert prepared pin to rear side of connectors: One pin to (19) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

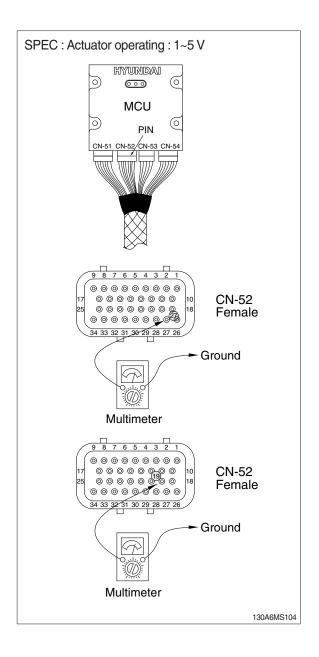


5. MALFUNCTION OF PUMP 1 PRESSURE SENSOR

- · Fault code: HCESPN 120, FMI 0~4
- * Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

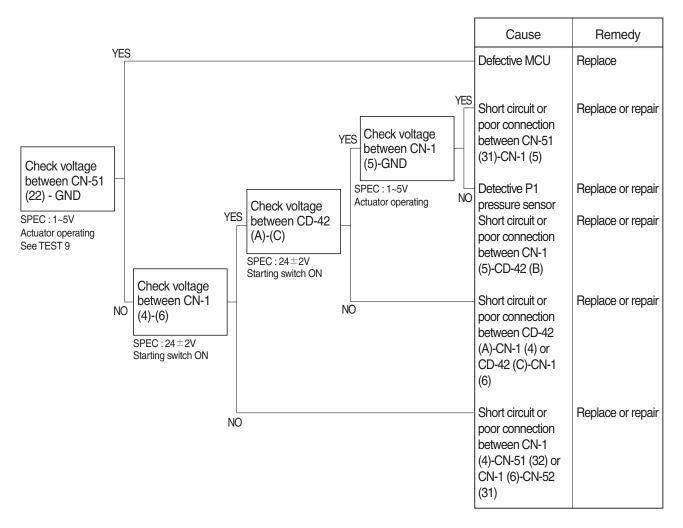

Wiring diagram

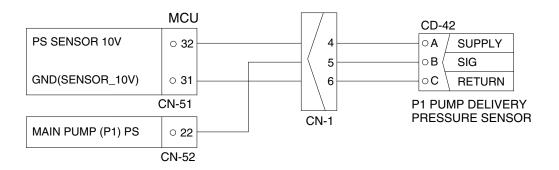


- (1) Test 9: Check voltage at CN-52 (22) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (22) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

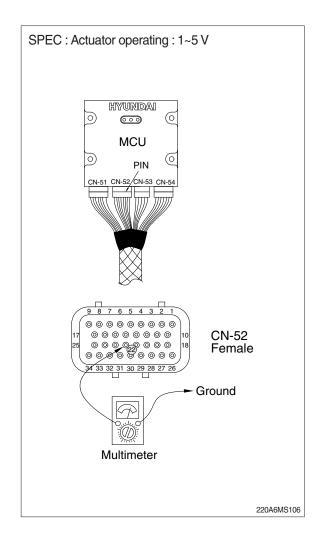


6. MALFUNCTION OF PUMP 2 PRESSURE SENSOR

- · Fault code: HCESPN 121, FMI 0~4
- * Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

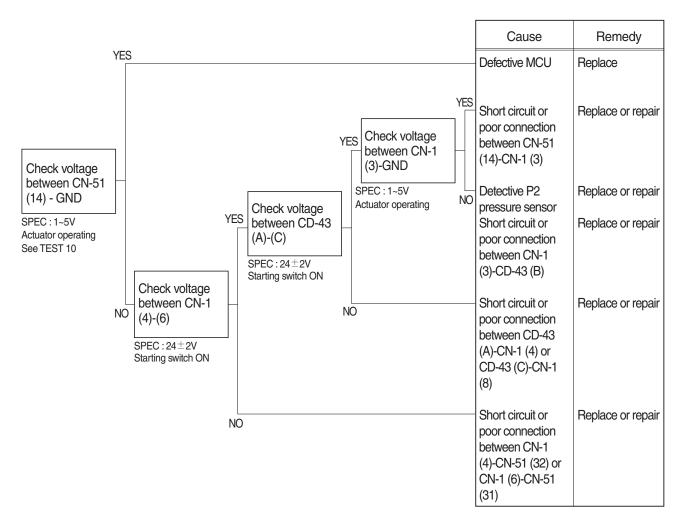

Wiring diagram

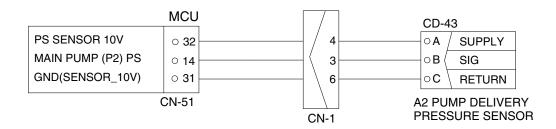


- (1) Test 10: Check voltage at CN-51 (14) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (14) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

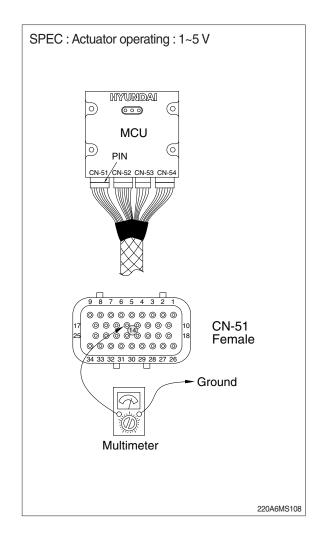


7. MALFUNCTION OF NEGATIVE 1 PRESSURE SENSOR

- · Fault code: HCESPN 123, FMI 0~4
- * Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

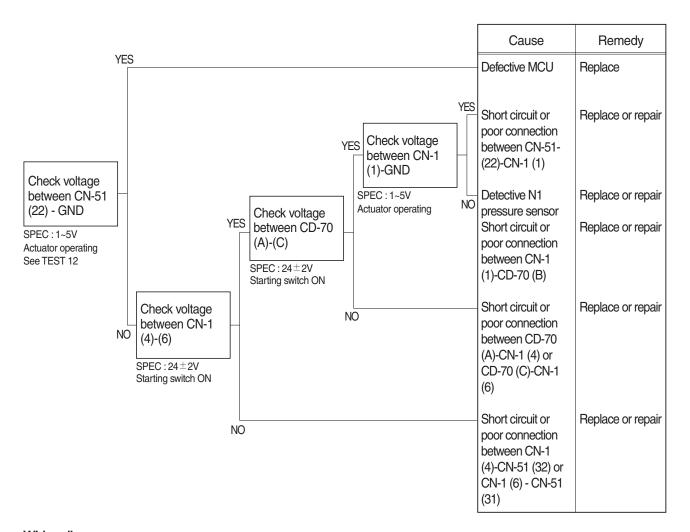

Wiring diagram

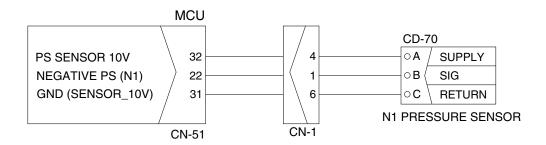


- (1) Test 12: Check voltage at CN-51 (22) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (22) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

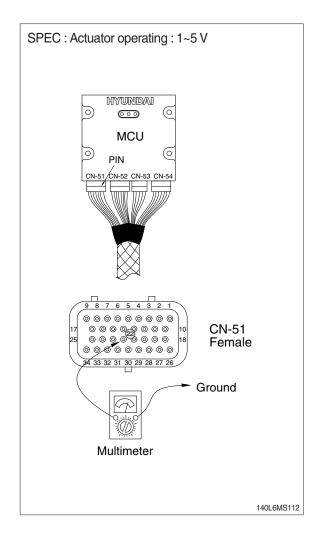


8. MALFUNCTION OF NEGATIVE 2 PRESSURE SENSOR


- · Fault code: HCESPN 124, FMI 0~4
- * Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

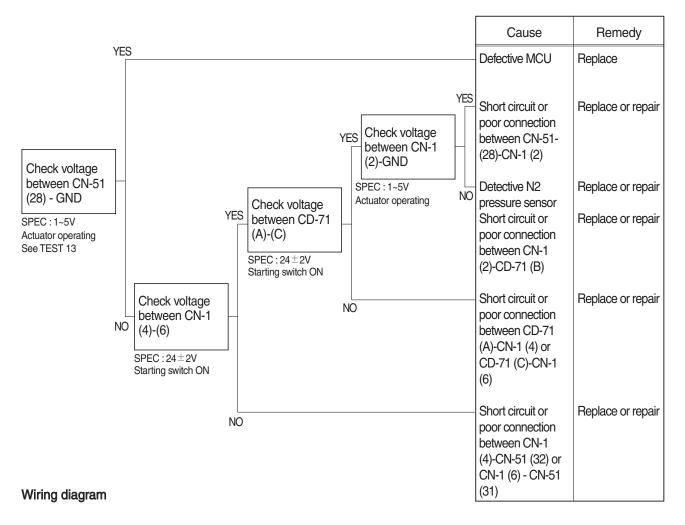

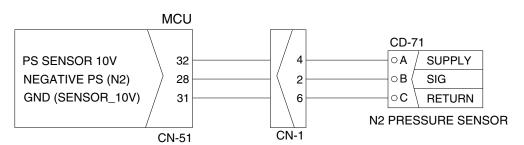


- (1) Test 13: Check voltage at CN-51 (28) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (28) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

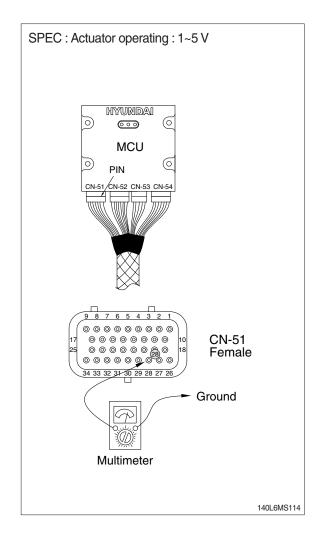


9. MALFUNCTION OF SWING PRESSURE SENSOR

- · Fault code: HCESPN 135, FMI 0~4
- * Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

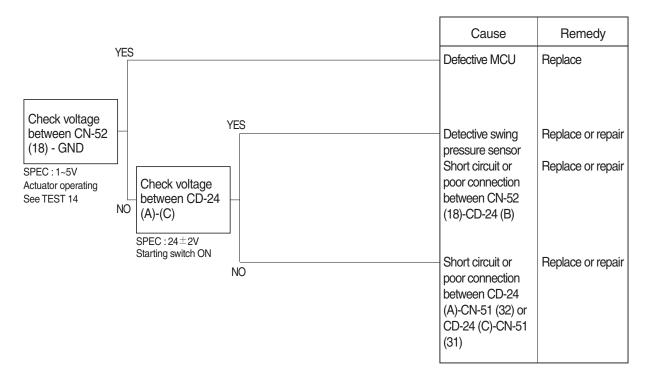

Wiring diagram

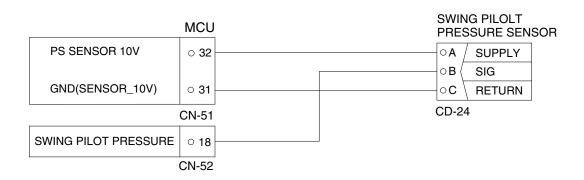


- (1) Test 14: Check voltage at CN-52 (18) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (18) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

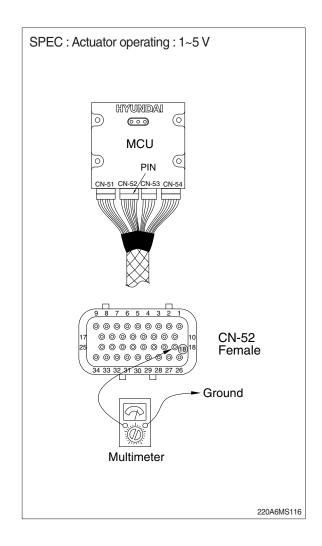


10. MALFUNCTION OF ARM OUT PRESSURE SENSOR

- · Fault code: HCESPN 133, FMI 0~4
- * Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

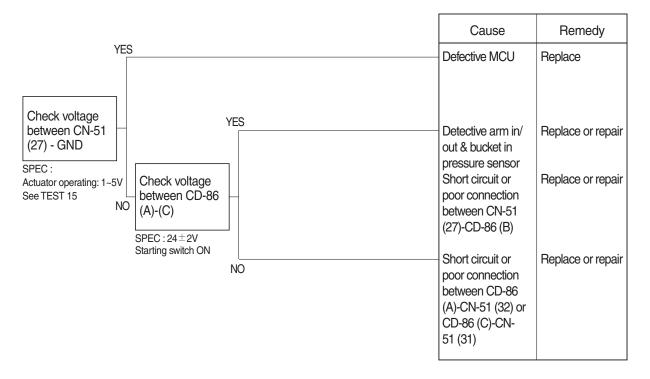

Wiring diagram

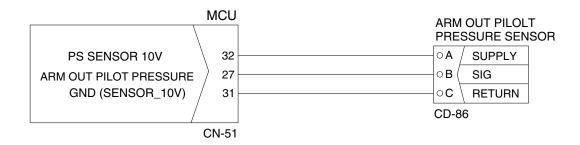


- (1) Test 15: Check voltage at CN-51 (27) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (27) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

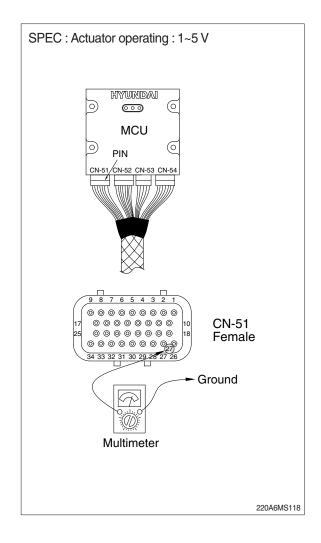


11. MALFUNCTION OF BOOM UP PRESSURE SENSOR

- · Fault code: HCESPN 127, FMI 0~4
- * Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

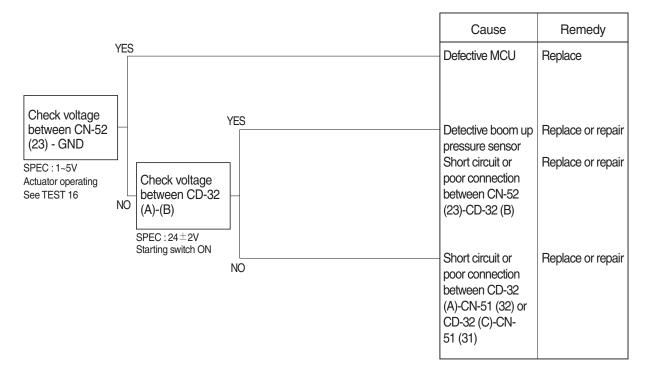

Wiring diagram

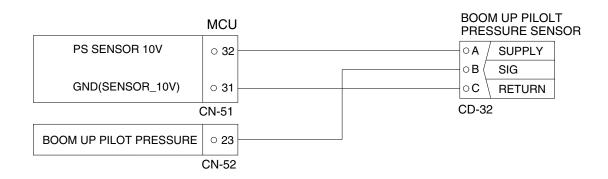


- (1) Test 16: Check voltage at CN-52 (23) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (23) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

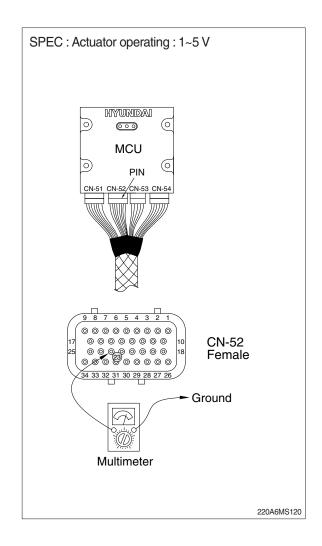


12. MALFUNCTION OF BOOM DOWN PRESSURE SENSOR

- · Fault code: HCESPN 128, FMI 0~4
- * Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

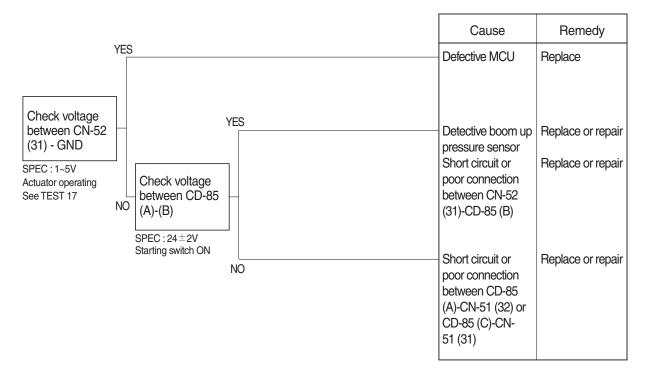

Wiring diagram

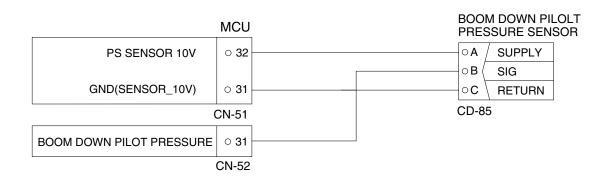

- (1) Test 17: Check voltage at CN-52 (31) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (31) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

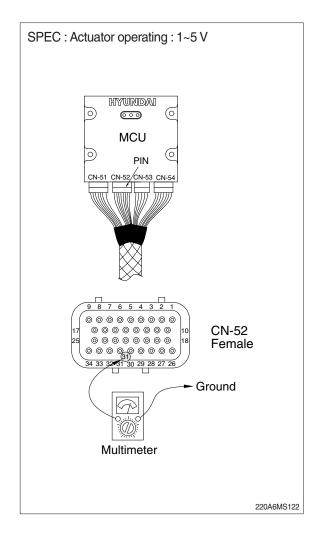


13. MALFUNCTION OF POWER MAX


· Fault code: HCESPN 166, FMI 4 or 6

* Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

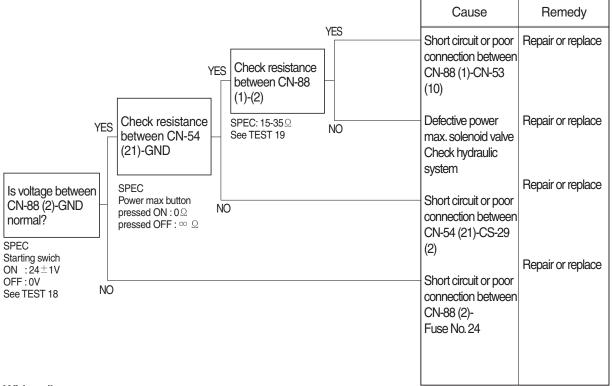


Wiring diagram

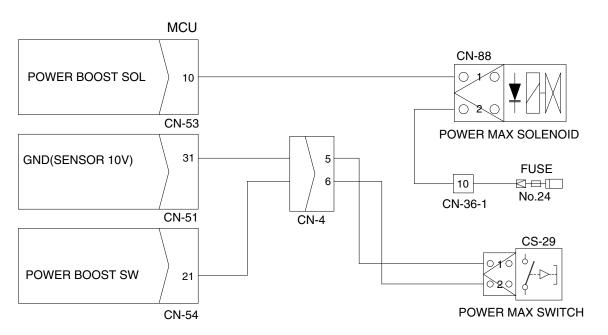

- (1) Test 18: Check voltage between connector CN-88 (2) GND.
- ① Disconnect connector CN-88 from power max solenoid valve.
- ② Start switch ON.
- ③ Check voltage as figure.

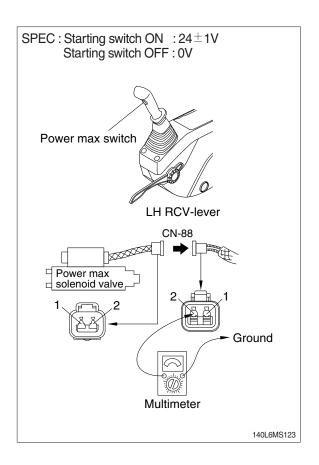

- (2) Test 19: Check resistance of the solenoid valve between CN-88 (1)-(2).
- ① Starting switch OFF.
- ② Disconnect connector CN-88 from power max solenoid valve.
- ③ Check resistance as figure.

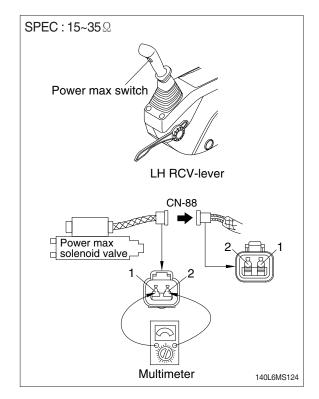


14. MALFUNCTION OF BOOM PRIORITY EPPR VALVE


· Fault code: HCESPN 141, FMI 5 or 6

* Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

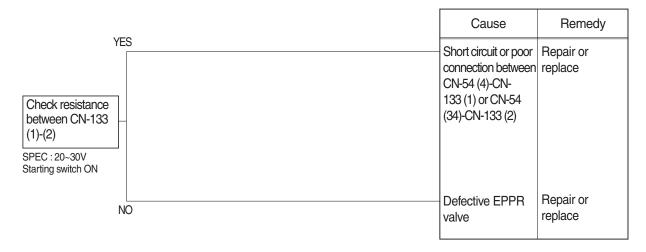

Wiring diagram

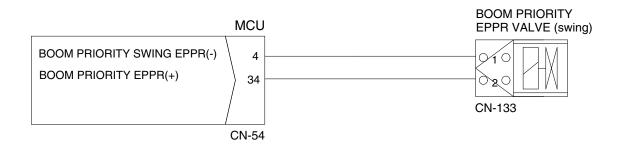


15. MALFUNCTION OF ARM REGENERATION SOLENOID

· Fault code: HCESPN 170, FMI 4 or 6

* Before carrying out below procedure, check all the related connectors are properly inserted.


1) INSPECTION PROCEDURE

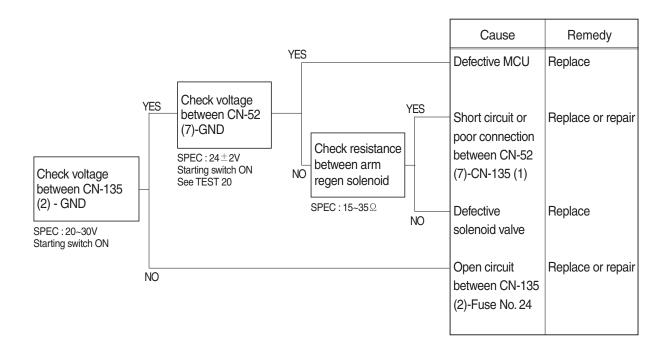

Wiring diagram




- (1) Test 20: Check voltage at CN-52 (7) and ground.
- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors: One pin to (7) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

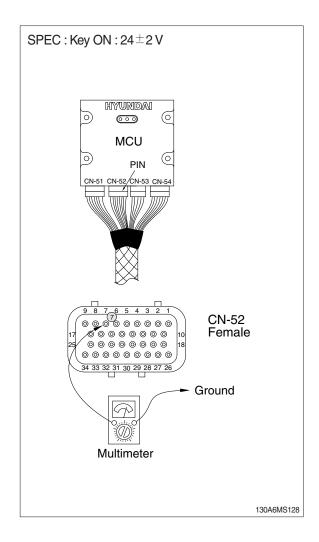

GROUP 5 AIR CONDITIONER & HEATER SYSTEM

1. AIR CONDITIONER DOES NOT OPERATE

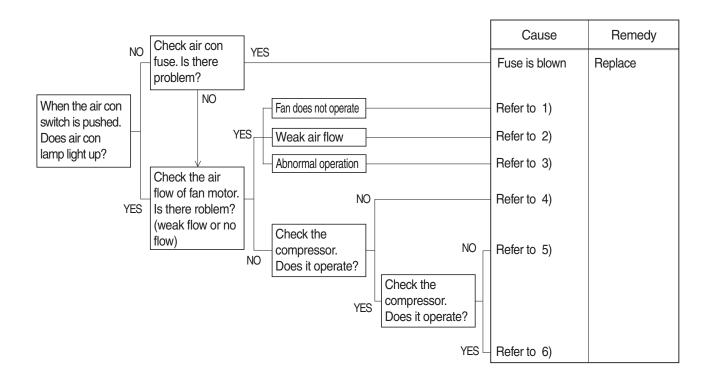

1) FAN DOES NOT OPERATE

Cause	Check	Remedy
Fuse is blown or abnormal relay operation	* Fuse * Does relay normally operate?	Replace
Harness short or poor contact	Check any harness short or abnormal contact of connnector	Repair shortage
Fan motor failure	Supply 24V to 2 lead wire from motor and check the operation	Replace
Resistor is broken	Check current flow of resistor with tester	Replace
Fan switch failure	Push fan switch by turn and check the operation	Replace

2) WEAK AIR FLOW FROM FAN MOTOR

Cause	Check	Remedy
Clogged evaporator or obstacles around air inlet	Check if evaporator is contaminated	Clean
Leakage of air flow	Check HVAC case assembly	Adjust
Duct sensor failure	Check if evaporator is frozen	Replace

3) ABNORMAL OPERATION OF FAN MOTOR

Cause	Check	Remedy
Abnormal operation of each step of control	4 step only operate	Replace resistor
	1 or 2 step does not operate	Replace control
	3 or 4 step does not operate	Replace relay

4) COMPRESSOR DOES NOT ROTATE OR HARDLY ROTATE

Cause	Check	Remedy
Loose belt	Belt shaking is severe	Adjust tension
Failure of compressor itself	Belt slip	Repair or Replace
Low voltage of battery	Slip when rotate	Charge battery
Fieldcoil short	Slip when rotate	Replace magnetic clutch
Oily clutch face	Contamination around clutch	Replace magnetic clutch, clean
Fieldcoil is broken	Magnetic clutch does not operate or "∞" resistance	Replace compressor
Leakage of refrigerant or oil inside	Check if wet with oil	Replace compressor Charge refrigerant

5) COMPRESSOR OPERATE NORMALLY AND AIR FLOW IS NORMAL

Cause	Check	Remedy
Shortage of refrigerant	When air con operate during 5~10 min small temperature difference between high and low pressure pipes.	Repair leakage joint Charge refrigerant
Overcharge of refrigerant	*Magnetic clutch on/off rapidly *High pressure over specification *Lukewarm air from nozzle	Recharge refrigerant following specification
Lower pressure than normal condition at low side	Shortage of refrigerant	Make up refrigerant
	Clogged receive dryer	Replace receive dryer
	Clogged expansion valve	Replace expansion valve
	Clogged or crushed pipe	Replace pipe or clean
	Failure of duct sensor	Replace duct sensor

6) COMPRESSOR OPERATE NORMALLY AND AIR FLOW IS NORMAL

Cause	Check	Remedy
Lower pressure than normal condition at low side	Failure of duct sensor Magnetic clutch off before air temperature sufficiently down	Replace duct sensor or adjust location
	Defective compressor gasket When compressor off, high and low pressure balance immediatly	Repair compressor or Replace
Higher pressure than normal condition at high side	Failure of condensing Contamination on condenser or insufficient air flow from fan	Clean the condenser Repair fan
	Overcharge of refrigerant	Adjust refrigerant
	Entrained air	Vacuum and recharge
Lower pressure than normal condition at high side	Shortage of refrigerant	Make up refrigerant