

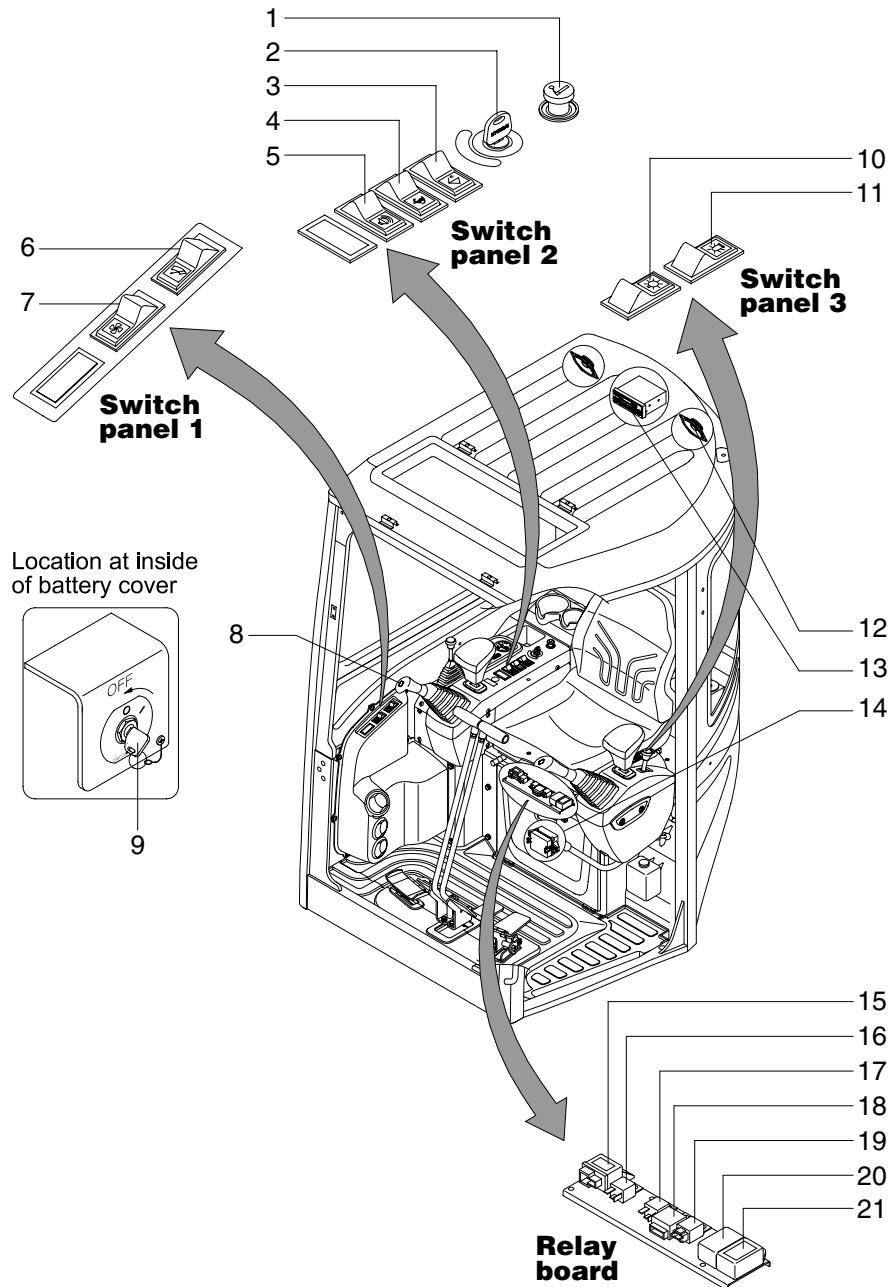
SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Monitoring system	4-3
Group 3 Electrical Circuit	4-9
Group 4 Electrical Component Specification	4-25
Group 5 Connectors	4-31

SECTION 4 ELECTRICAL SYSTEM

GROUP 1 COMPONENT LOCATION


1. LOCATION 1



R35Z94EL02

- | | | |
|-------------------------------|----------------------|------------------------|
| 1 Cigar light | 8 Horn switch | 15 Safety relay |
| 2 Start switch | 9 Master switch | 16 Power relay |
| 3 Quick clamp switch | 10 Main light switch | 17 Aircon power relay |
| 4 Travel speed control switch | 11 Beacon switch | 18 Detector |
| 5 Travel alarm switch | 12 Speaker | 19 Stop solenoid relay |
| 6 Washer/wiper switch | 13 Cassette & radio | 20 Stop solenoid timer |
| 7 Heater switch | 14 Fuse box | 21 Air heater timer |

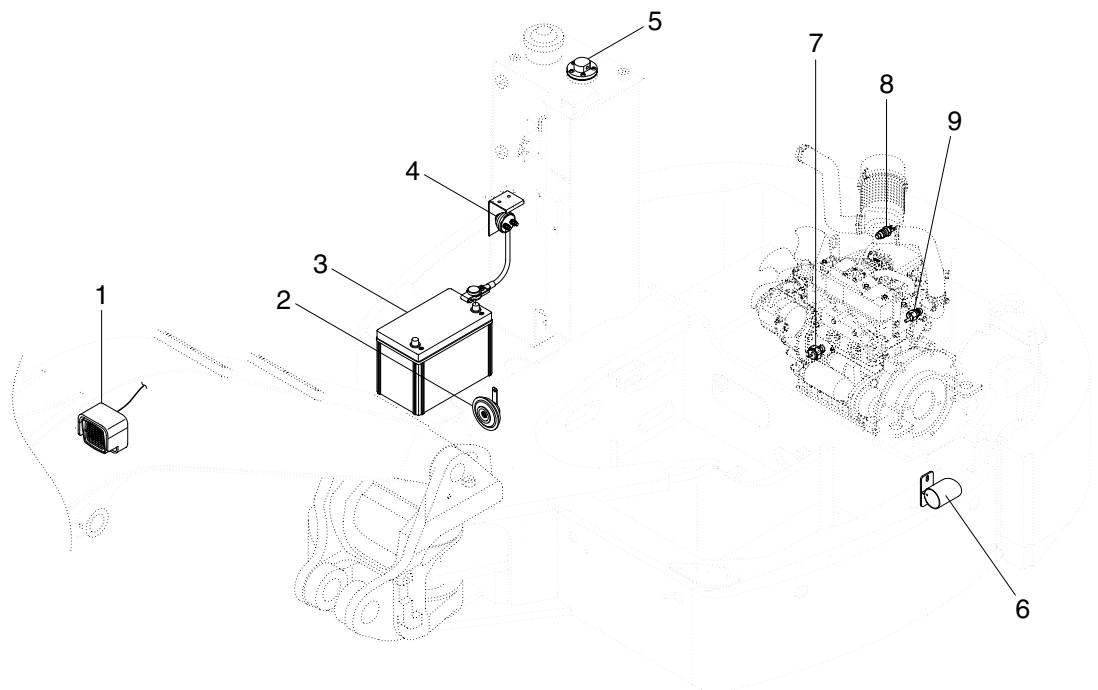2. LOCATION 2



R35Z94EL22

- | | | |
|-------------|-----------------------|-------------------------------|
| 1 Work lamp | 4 Master switch | 7 Engine oil pressure switch |
| 2 Horn | 5 Fuel sender | 8 Air cleaner pressure switch |
| 3 Battery | 6 Travel alarm buzzer | 9 Water temperature sender |

GROUP 2 MONITORING SYSTEM

1. OUTLINE

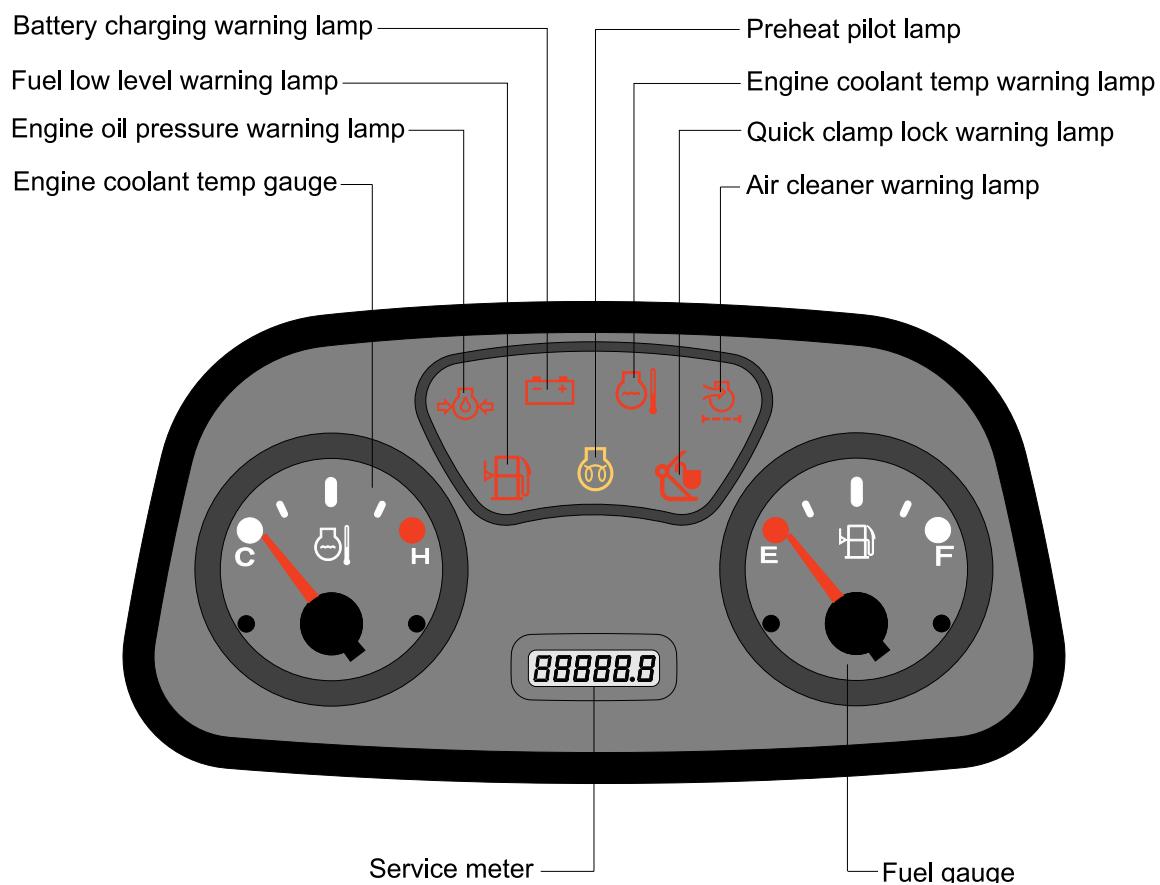
Monitoring system consists of the monitor part and switch part.

The monitor part gives warnings when any abnormality occurs in the machine and informs the condition of the machine.

Various select switches are built into the monitor panel, which act as the control portion of the machine control system.

2. CLUSTER (MACHINE SERIAL NO.:~#1273)

1) MONITOR PANEL



R35Z73CD01

2) CLUSTER CHECK PROCEDURE

(1) Start key : ON

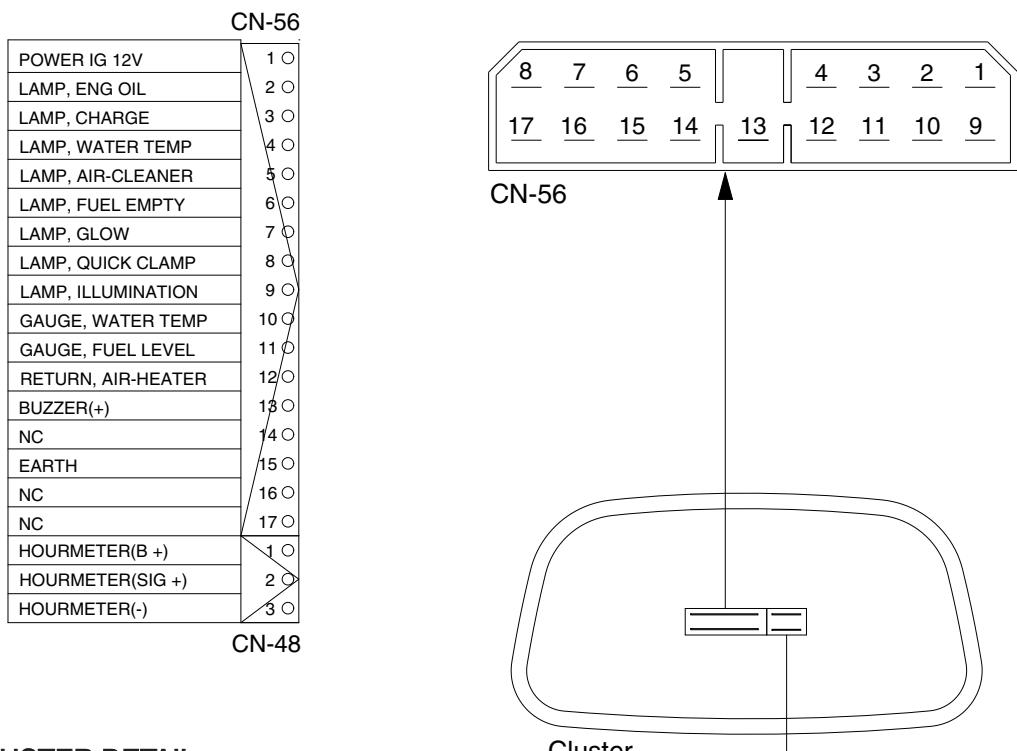
- ① Check monitor initial 6 seconds
 - a. All lamps light up.
 - ② Check monitor after 2 seconds : Indicate machine condition
 - a. Tachometer : 0 rpm
 - b. Fuel gauge : Pointed at appropriate level
 - c. Engine coolant temperature gauge : Pointed at appropriate level
 - d. Warning lamp
- * During start key ON the engine oil pressure lamp and battery charging lamp go on, but it is not abnormal.

(2) Start of engine


- ① Check machine condition
 - a. Tachometer pointed at present rpm
 - b. Gauge and warning lamp : Indicate at present condition.
- * When normal condition : All warning lamp OFF
- ② When abnormal condition
 - a. The lamp lights up.
 - b. The lamp light up until normal condition.

3) CLUSTER CONNECTOR

1) CONNECTOR



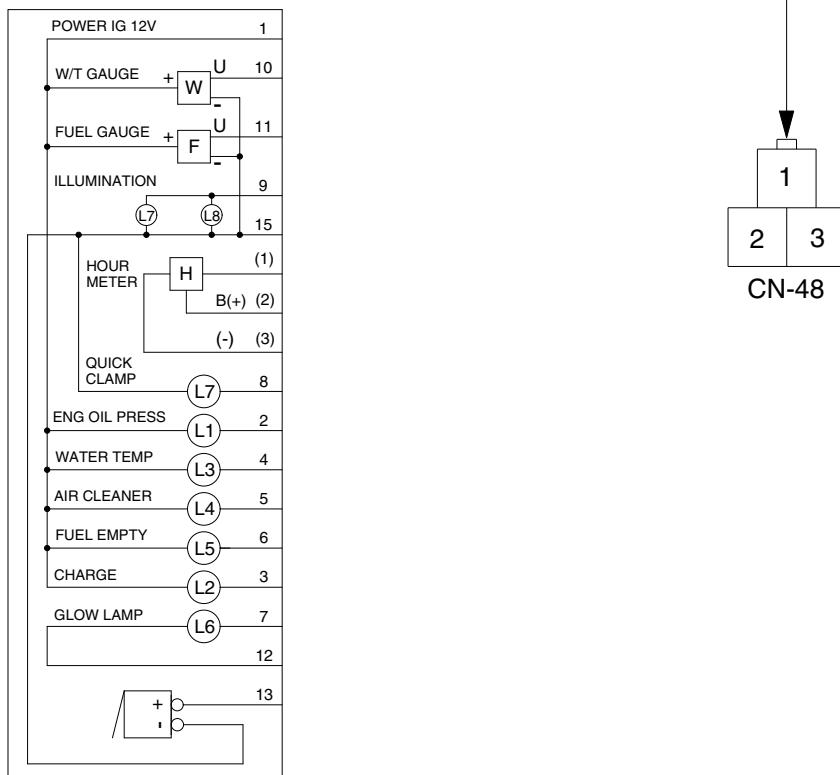2) CLUSTER DETAIL



4) CLUSTER FUNCTION

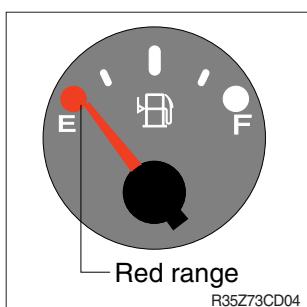
1) GAUGES AND DISPLAYS

(1) Service meter




- ① This meter shows the total operation hours of the machine.
- ② Always ensure the operating condition of the meter during the machine operation.
Inspect and service the machine based on hours as indicated in chapter 6, maintenance.

(2) Fuel gauge



- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when the red range or warning lamp ON.
 - * If the gauge illuminates the red range or warning lamp ON even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

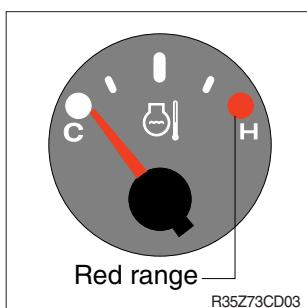(3) Engine coolant temperature gauge



- ① This indicates the temperature of coolant.
 - Red range : Above 105°C (221°F)
- ② When the red range pointed or warning lamp ON, engine do not abruptly stop but run it at medium speed to allow it to cool gradually, then stop it.
Check the radiator and engine.
 - * If the engine is stopped without cooled down running, the temperature of engine parts will rise suddenly, this could cause severe engine trouble.

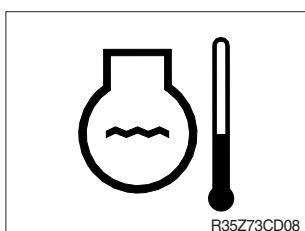
2) WARNING AND PILOT LAMPS

(1) Fuel low level warning lamp




- ① This lamp blinks when the level of fuel is low.
- ② Fill the fuel immediately when the lamp blinks.

(2) Engine coolant temperature warning lamp




- ① This lamp blinks when the temperature of coolant is over the normal temperature 110°C (230°F).
- ② Check the cooling system when the lamp blinks.

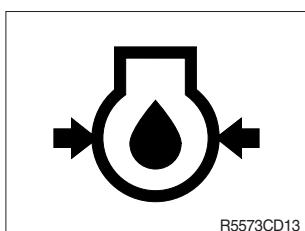(3) Engine oil pressure warning lamp




- ① This lamp blinks after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.

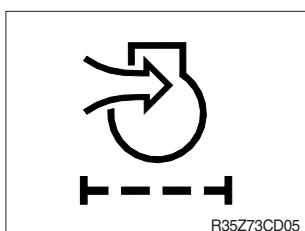(4) Air cleaner warning lamp




- ① This lamp blinks when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.

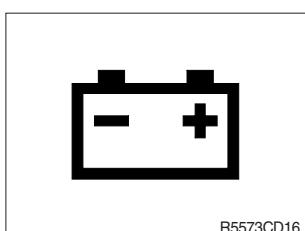(5) Battery charging warning lamp




- ① This lamp blinks when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.

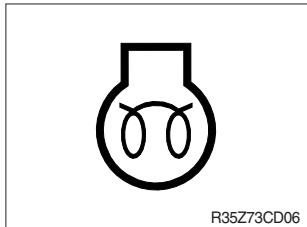(6) Preheat pilot lamp



- ① When the start switch turn to HEAT position, pilot lamp comes ON.
- ② Refer to "4-2) STARTING ENGINE" of operator's manual for details.

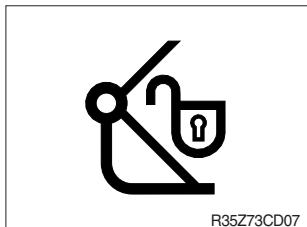(7) Quick clamp warning lamp




- ① When the quick clamp switch turned ON, this lamp turn ON and the buzzer sounds.
- ② This lamp turned OFF and the buzzer stop when the quick clamp switch turned OFF.

CLUSTER (MACHINE SERIAL NO.: #1274~)

The cluster consists of gauges and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.

- Gauges : Indicate operating status of the machine.
- Warning lamp : Indicate abnormality of the machine (red).
- Pilot lamp : Indicate operating status of the machine.

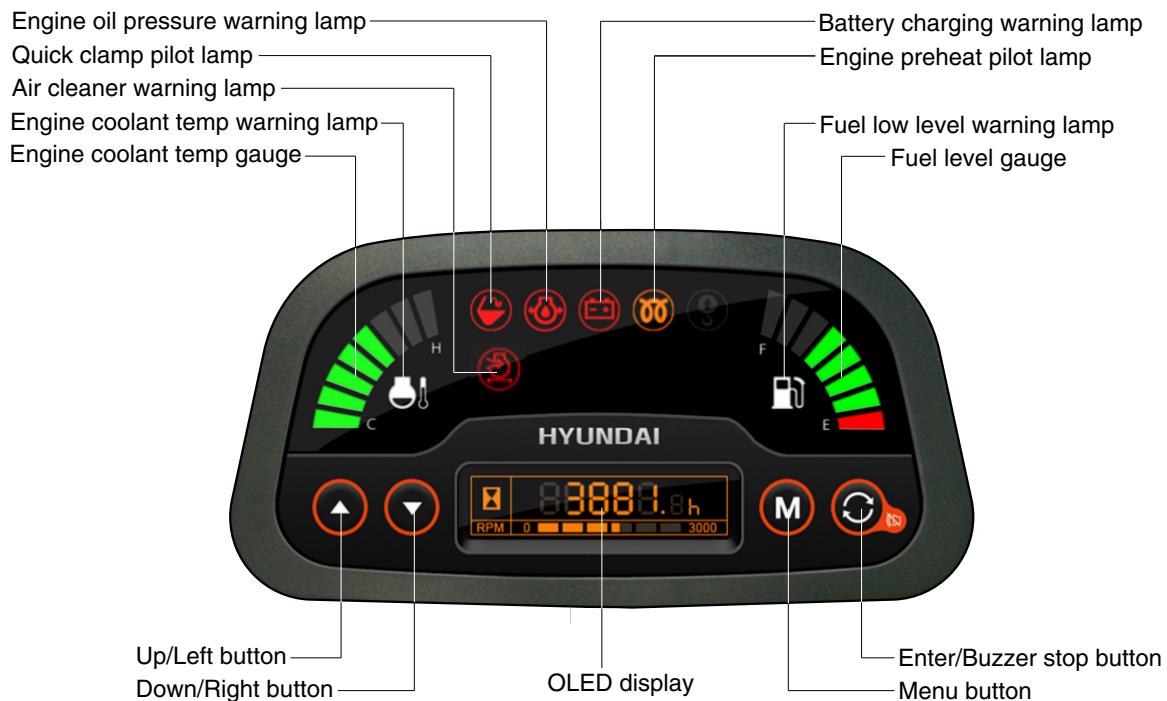- ※ The cluster installed on this machine does not entirely guarantee the condition of the machine.
Daily inspection should be performed according to chapter 6, Maintenance.
- ※ When the cluster provides a warning, immediately check the problem and perform the required action.



R25Z9AK3CD03-3

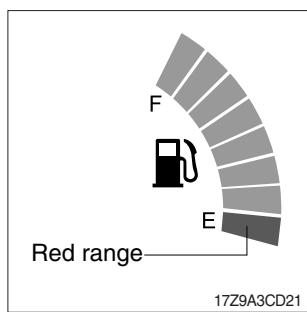
1) GAUGES AND DISPLAYS

(1) Service meter




- ① This meter shows the total operation hours of the machine.
- ② Always ensure the operating condition of the meter during the machine operation.
Inspect and service the machine based on hours as indicated in chapter 6, maintenance.

(2) Fuel gauge



- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when the red range or warning lamp ON.
※ If the gauge illuminates the red range or warning lamp ON even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

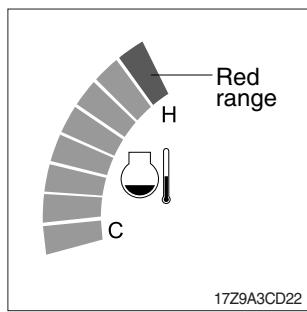(3) Engine coolant temperature gauge



- ① This indicates the temperature of coolant.
 - Red range : Above 115°C (239°F)
- ② When the red range pointed or warning lamp ON, engine do not abruptly stop but run it at medium speed to allow it to cool gradually, then stop it.
Check the radiator and engine.
※ If the engine is stopped without cooled down running, the temperature of engine parts will rise suddenly, this could cause severe engine trouble.

2) WARNING AND PILOT LAMPS

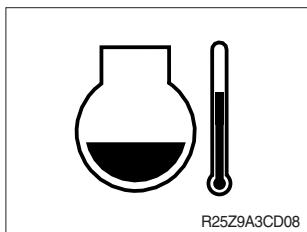
(1) Fuel low level warning lamp



R5573CD10

- ① This lamp ON and buzzer sounds when the level of fuel is below 5.5 l (1.5 U.S. gal).
- ② Fill the fuel immediately when the lamp ON.


(2) Engine coolant temperature warning lamp



R25Z9A3CD08

- ① This lamp ON and buzzer sounds when the temperature of coolant is over the normal temperature 115°C (239°F) .
- ② Check the cooling system when the lamp ON.

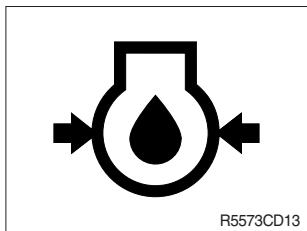
(3) Engine oil pressure warning lamp



R5573CD13

- ① This lamp ON and buzzer sounds after starting the engine because of the low oil pressure.
- ② If the lamp ON during engine operation, shut OFF engine immediately. Check oil level.

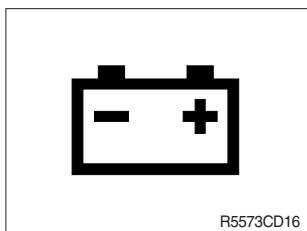
(4) Battery charging warning lamp



R5573CD16


- ① This lamp ON and buzzer sounds when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.

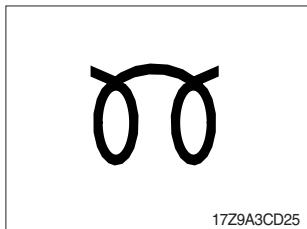(5) Engine preheat pilot lamp




- ① When the start switch turn to HEAT position, pilot lamp comes ON.
- ② Refer to the page 4-4 for details.

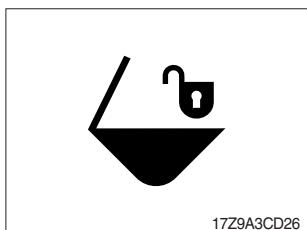(6) Quick clamp lock pilot lamp



- ① When the quick clamp switch turned ON, this lamp turn ON and the buzzer sounds.
- ② This lamp turned OFF and the buzzer stop when the quick clamp switch turned OFF.

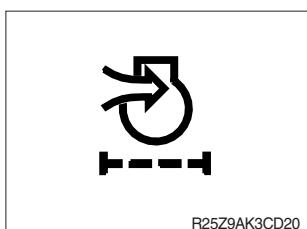
(7) Air cleaner warning lamp



- ① This lamp ON when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.


3) BUTTONS

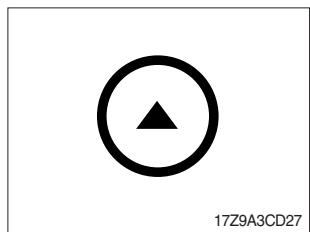(1) Up/left button




- ① Move in menu (up, left)
- ② Increase input value.

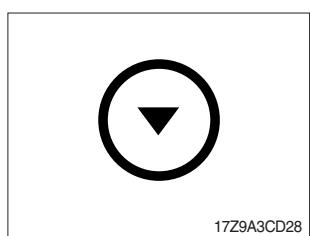(2) Down/right button




- ① Move in menu (down, right)
- ② Decrease input value.

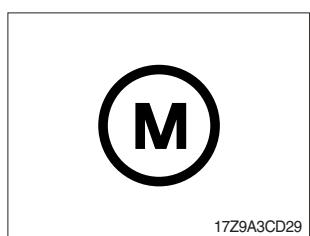(3) Menu button



- ① Current display to next display.

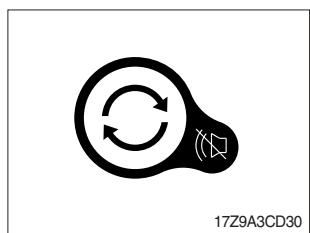
(4) Enter and buzzer stop button



- ① Select menu (enter).
- ② Stop buzzer sound when sound is ON.

4) OLED display

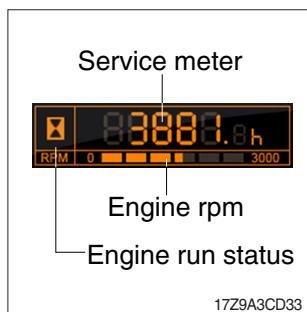(1) Main display




① **Service meter** : This meter shows the total operation hours of the machine.

* Always ensure the operating condition of the service meter during the machine operation.

② **Engine rpm** : This displays the engine speed.

③ **Engine run status** : This displays the engine run status.

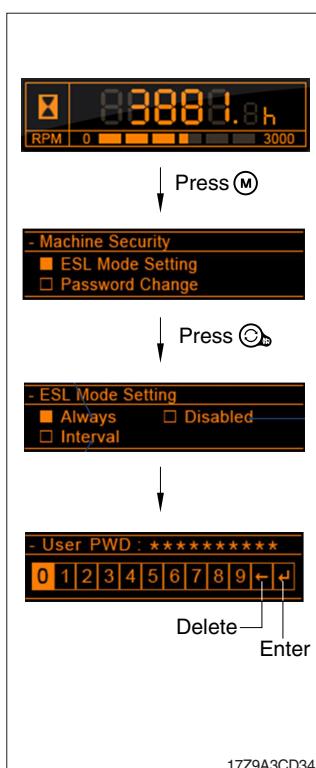(2) Machine security



① ESL (Engine Starting Limit) mode setting

- ESL mode is designed to be a theft deterrent or will prevent the unauthorized operation of the machine.

- If the ESL mode was selected Always, the password will be required when the start switch is turned ON.

- Disable : Not used ESL function.

Always: The password is required whenever the operator starts the engine.

Interval : The password is required when the operator starts the engine first. But the operator can restart the engine within the interval time without inputting the password.

The interval time can be set maximum 2 days.

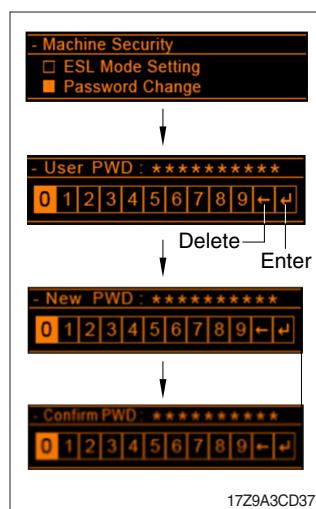
· Interval time

- If set interval time to 5 minutes, ESL system is activated after 5 minutes. Therefore, the password does not need to be entered again within 5 minutes.


* Default password : 00000

② Password change


- Input 5 to 10 digits and press Enter.



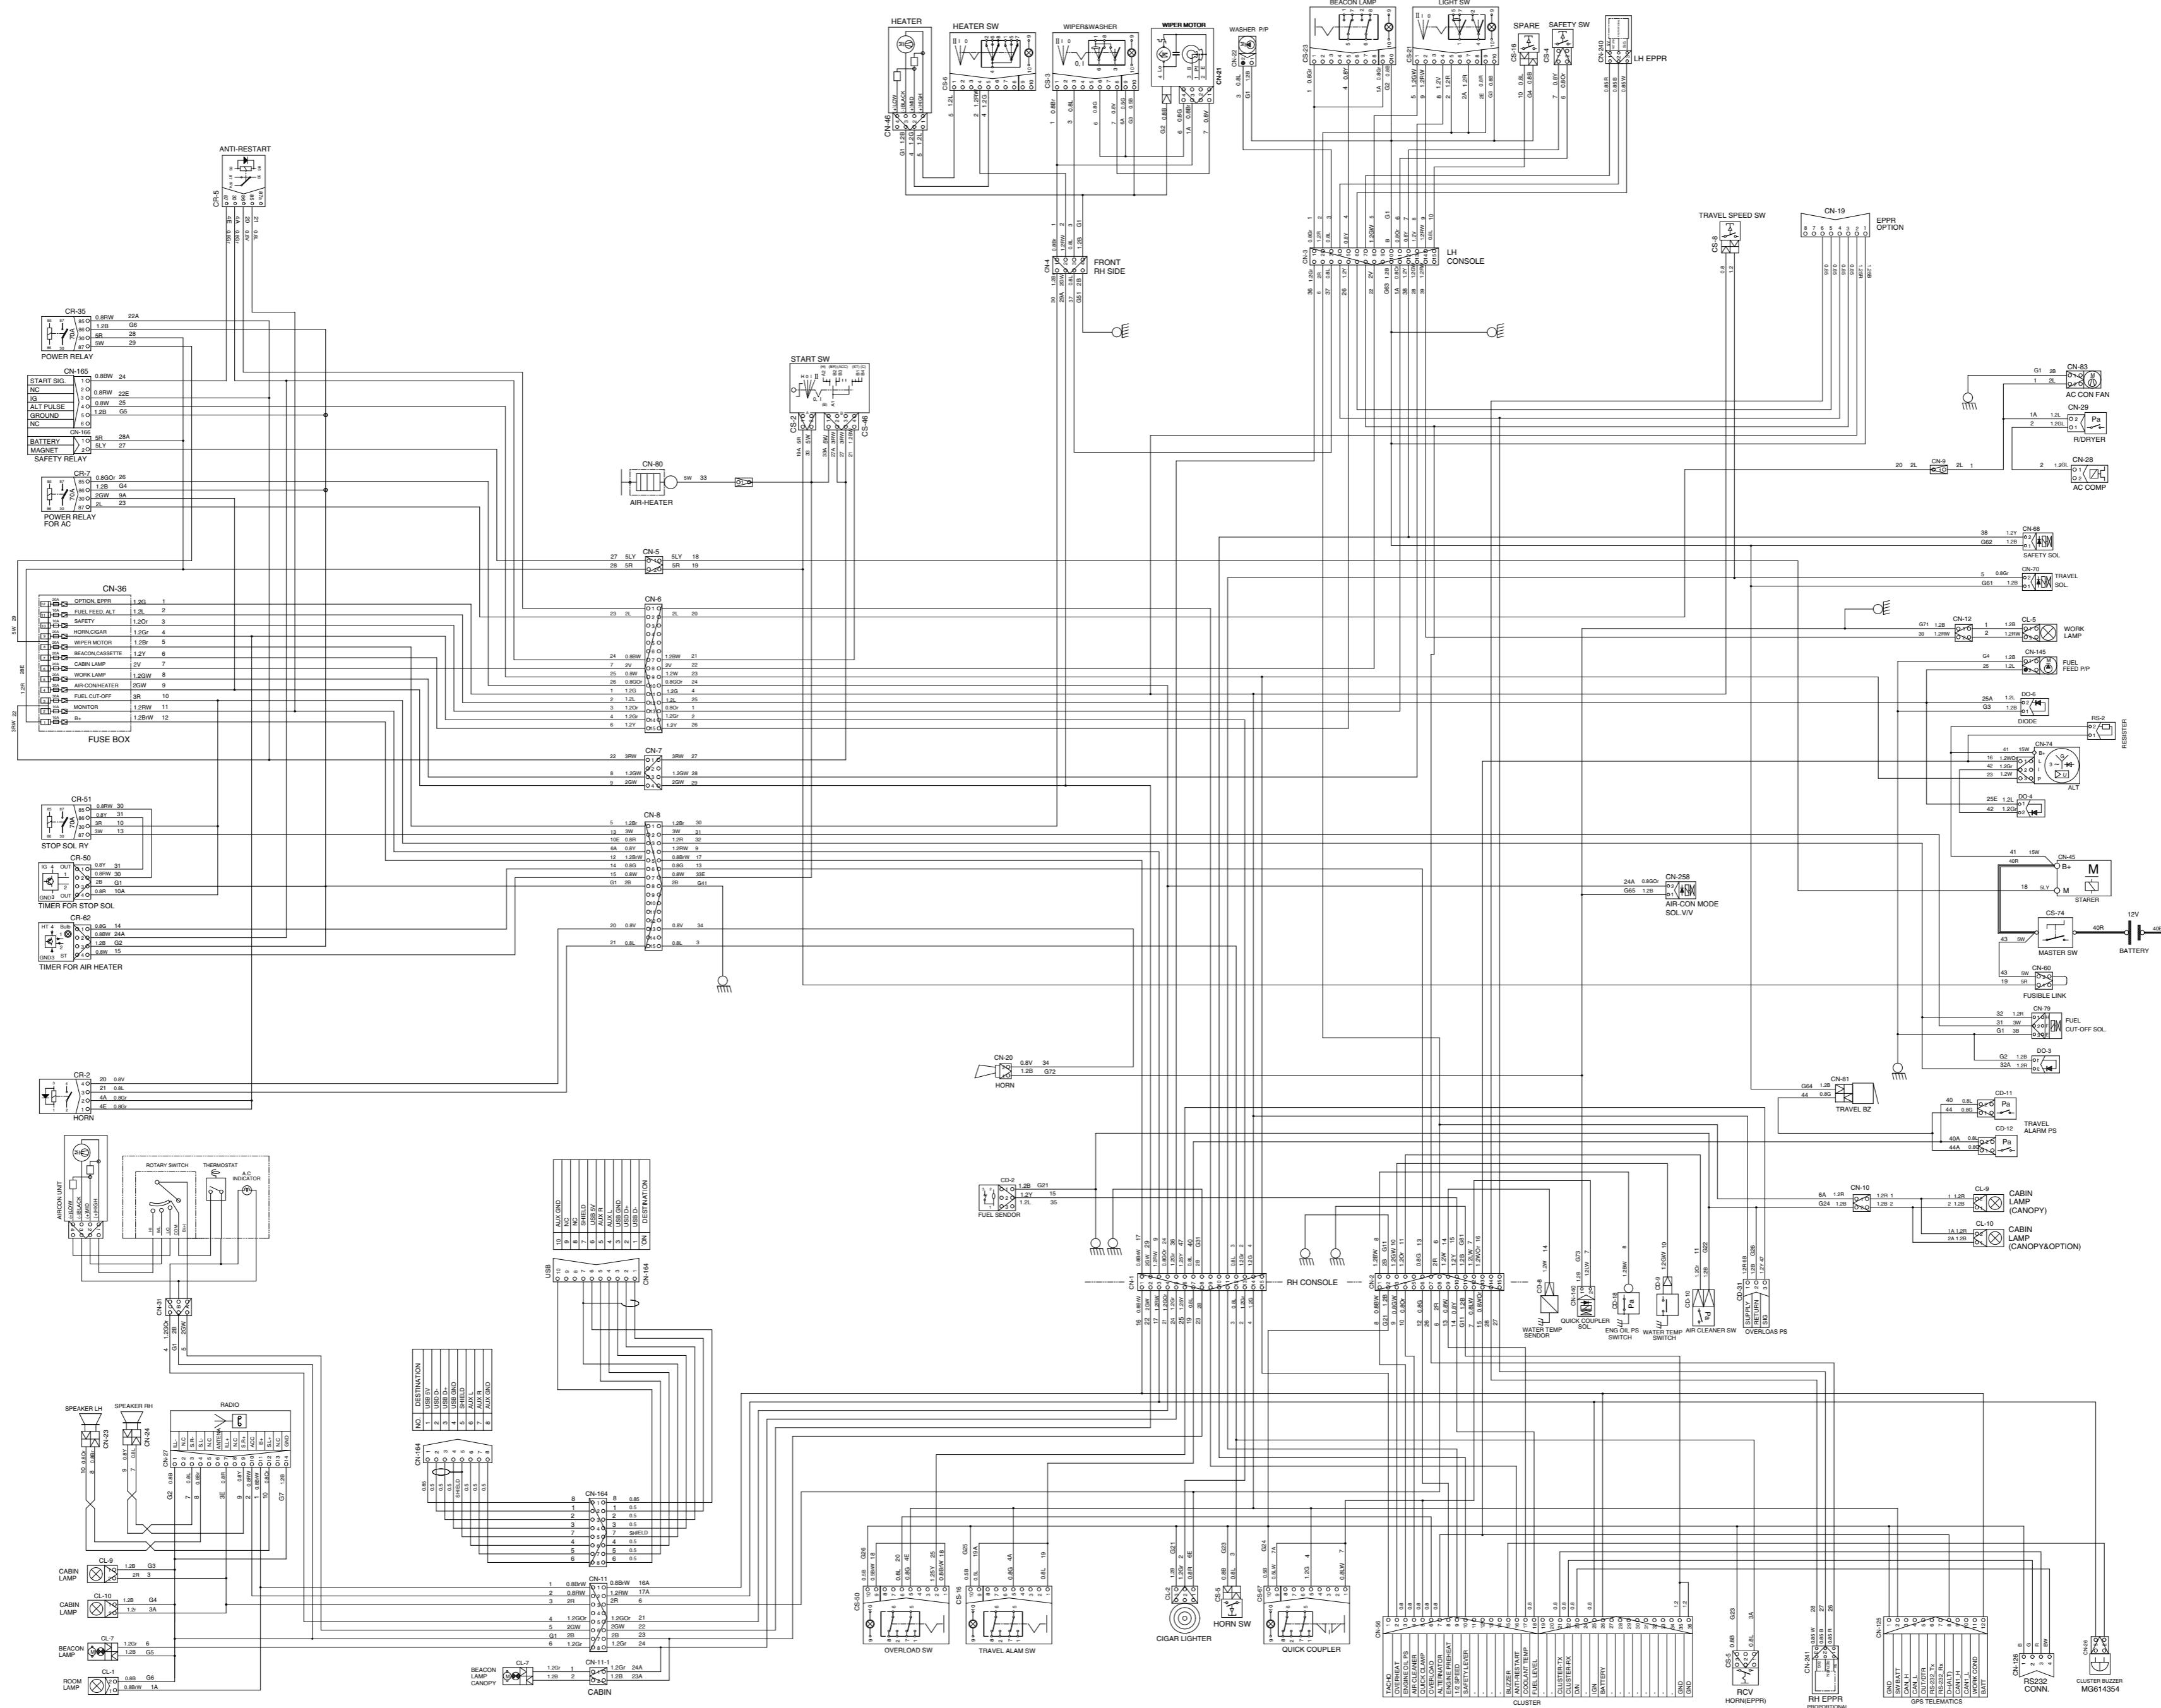
GROUP 3 ELECTRICAL CIRCUIT (machine serial No. : ~#1621)



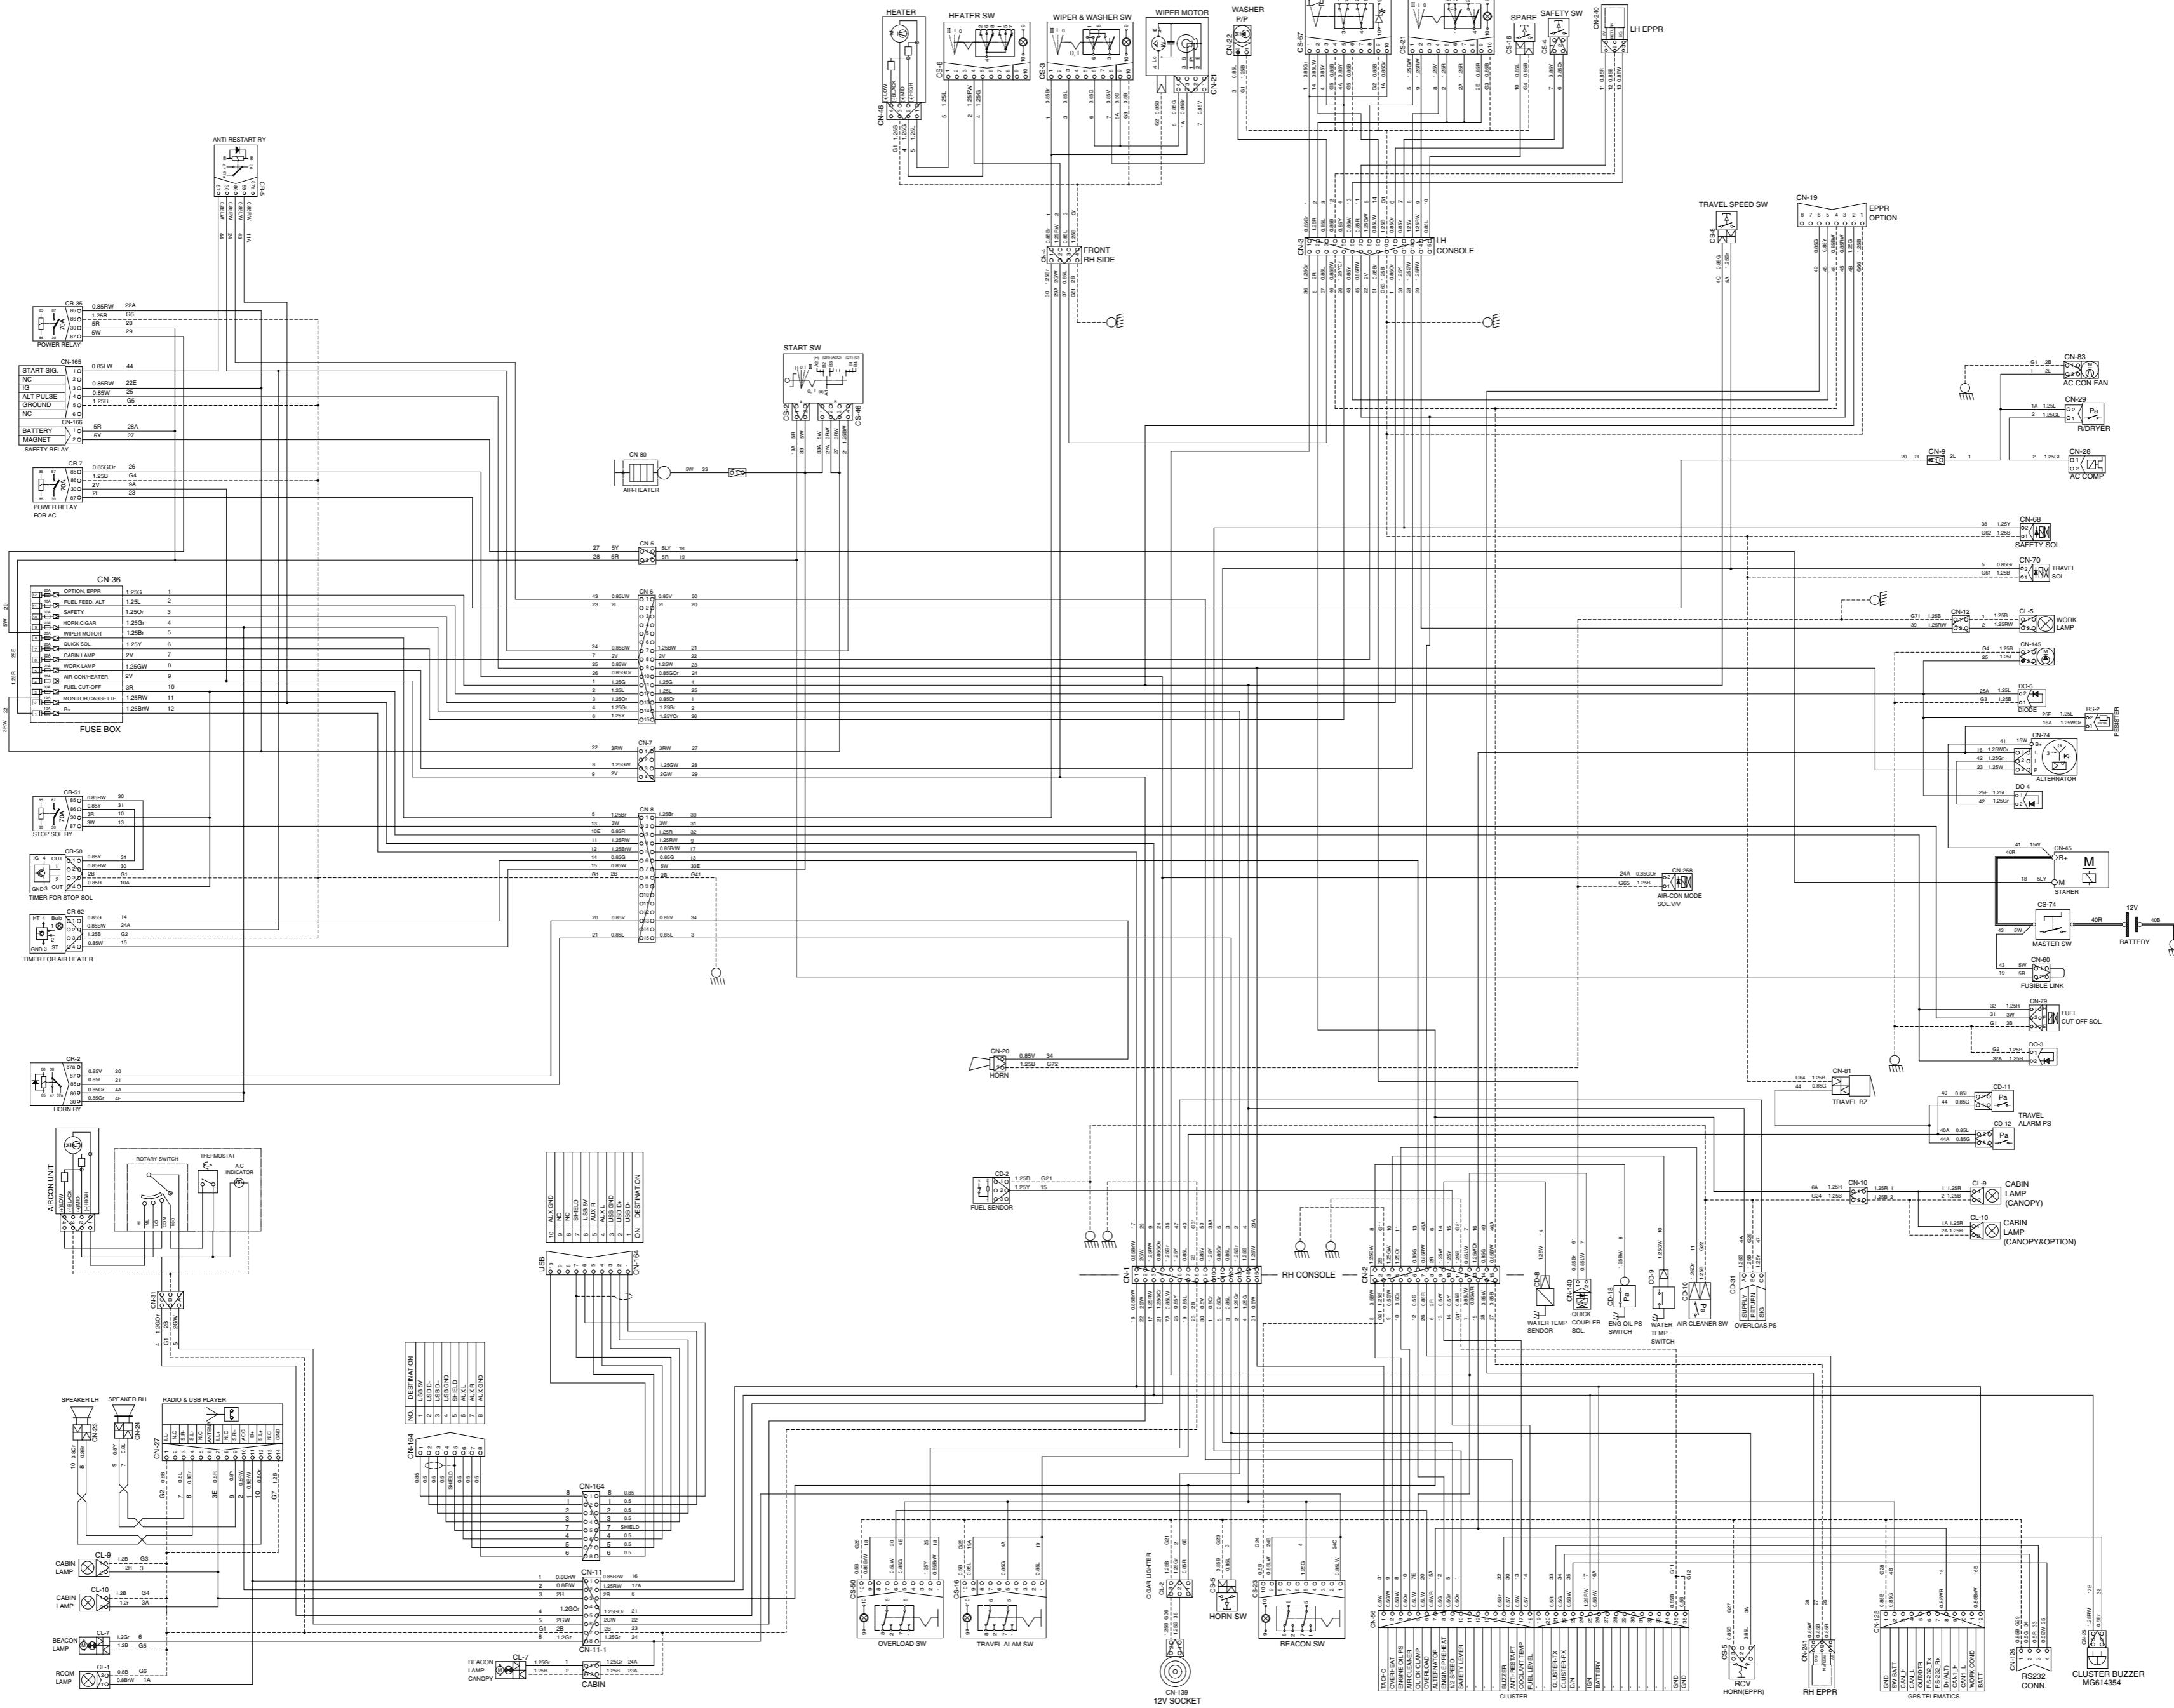ELECTRICAL CIRCUIT (machine serial No. : ~ #2252)



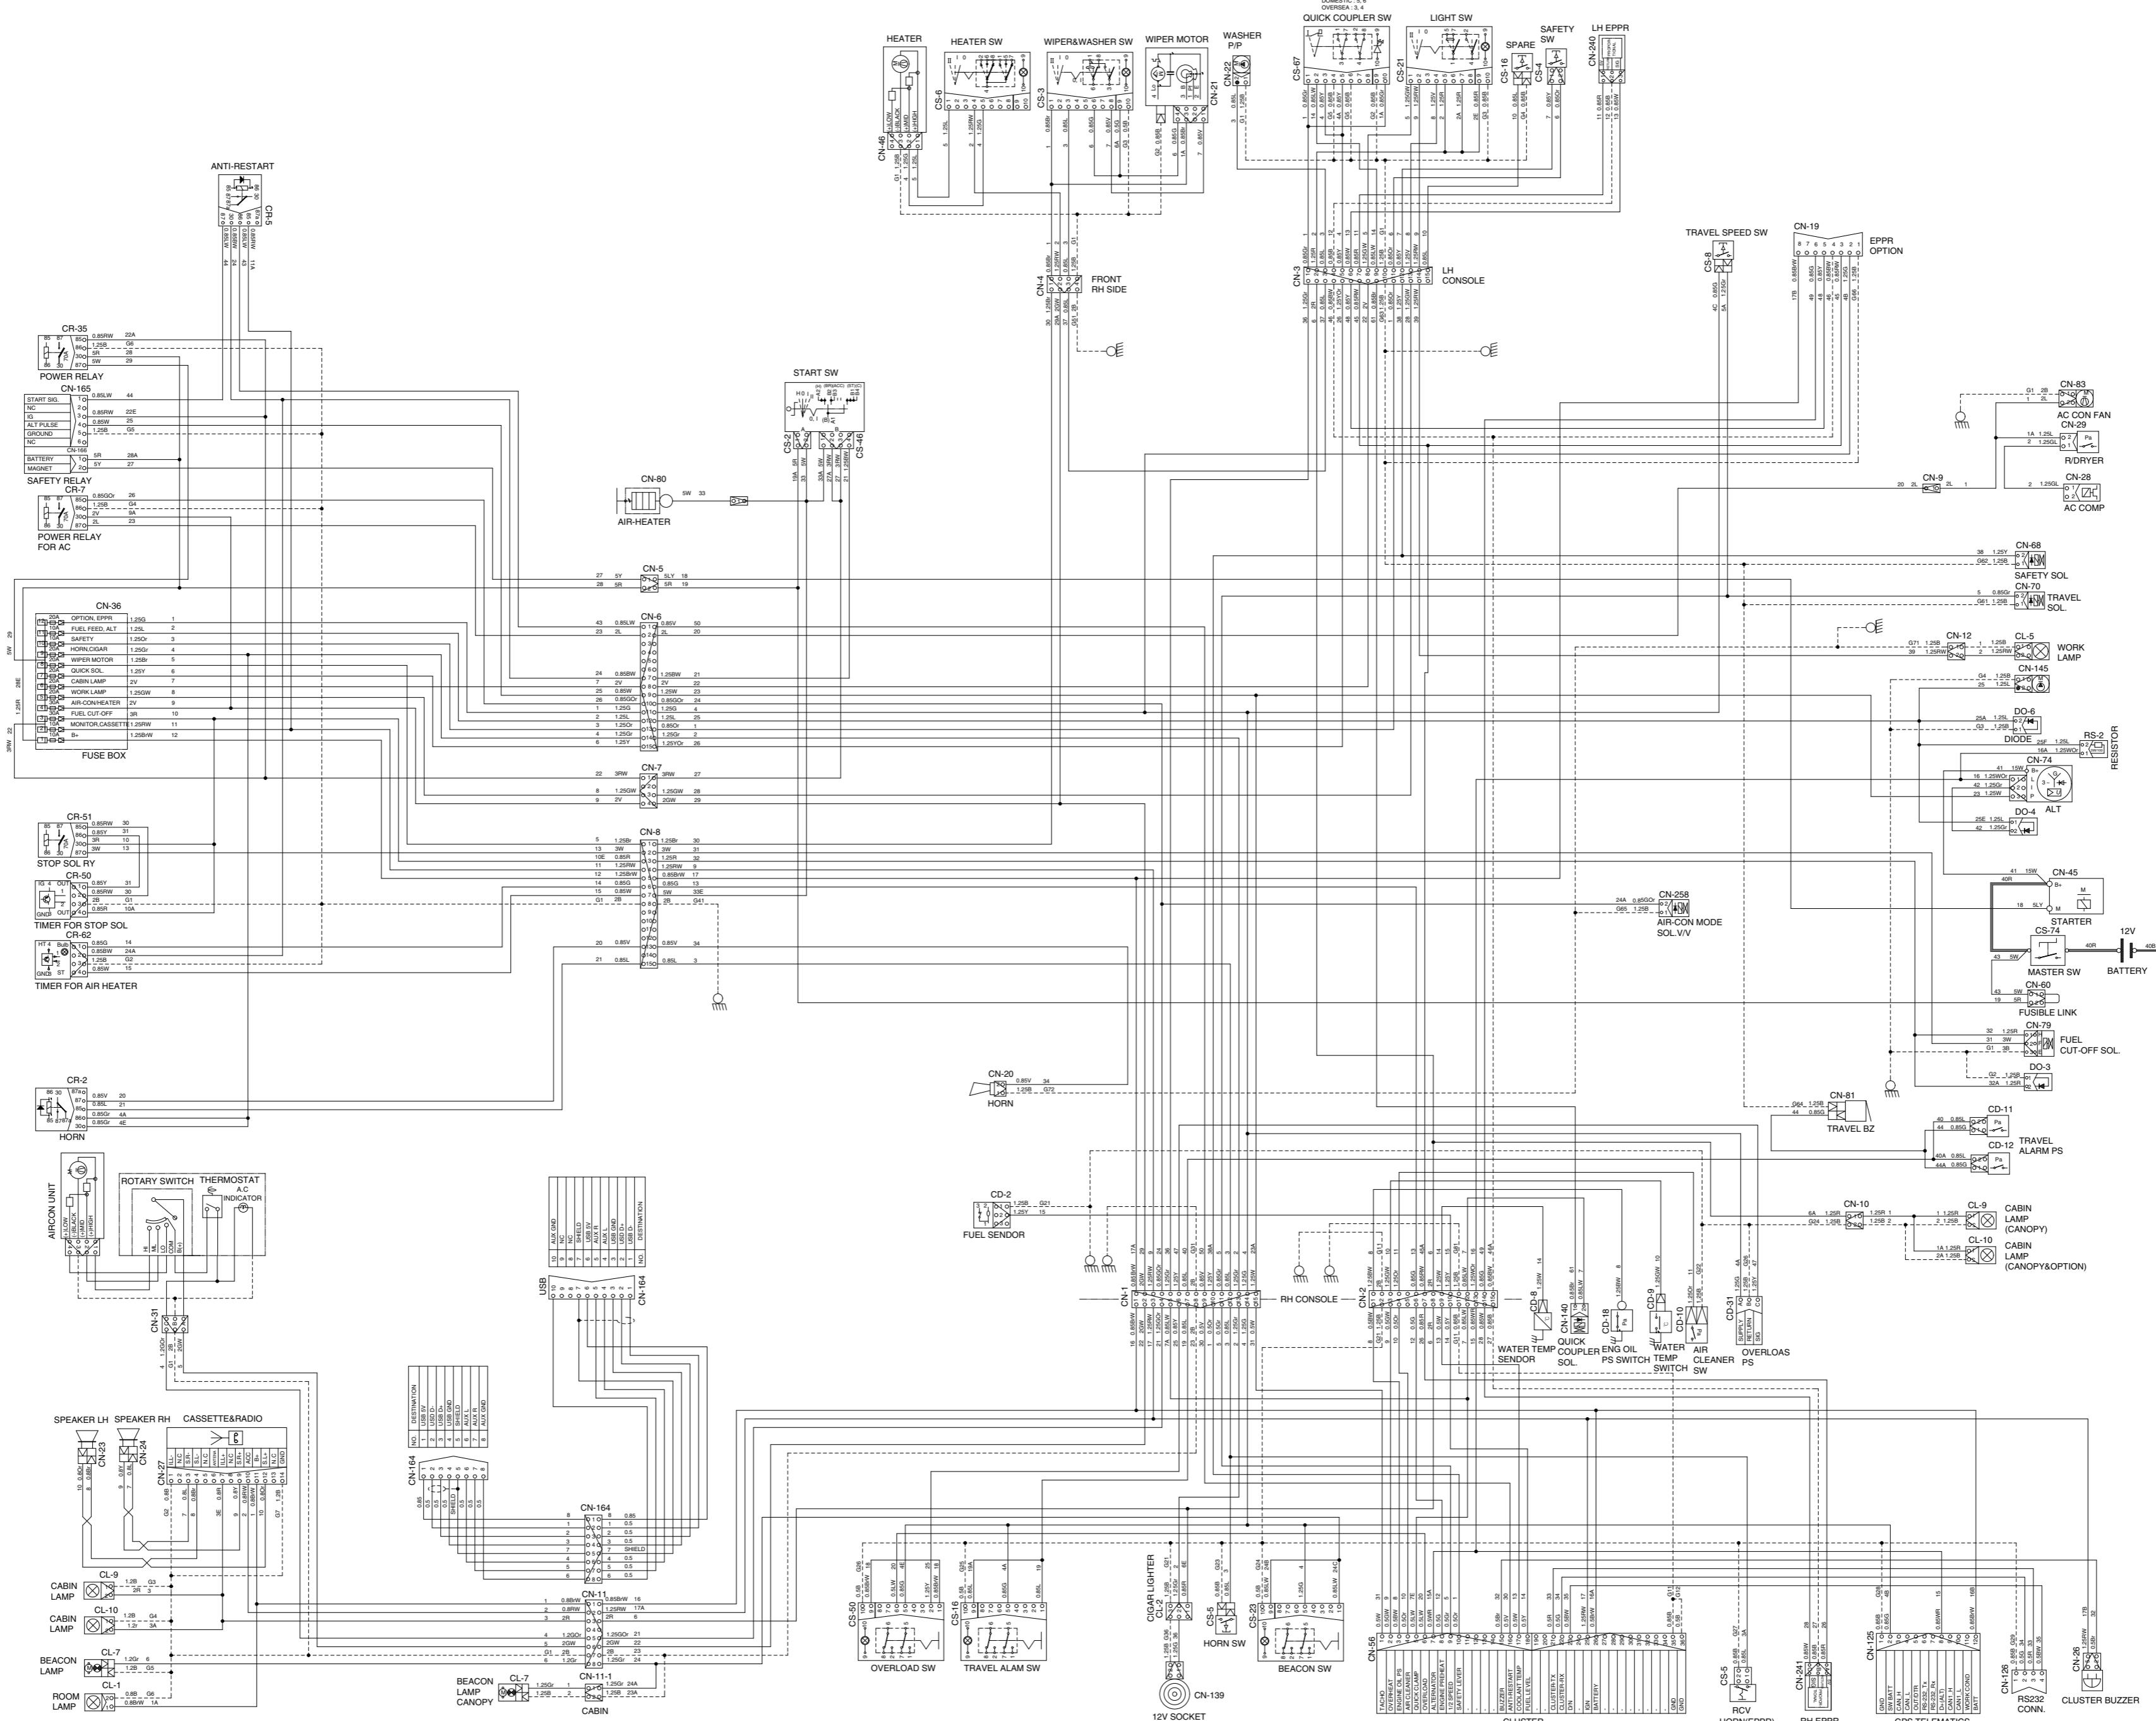ELECTRICAL CIRCUIT (machine serial No. : #2253~)



MEMORANDUM

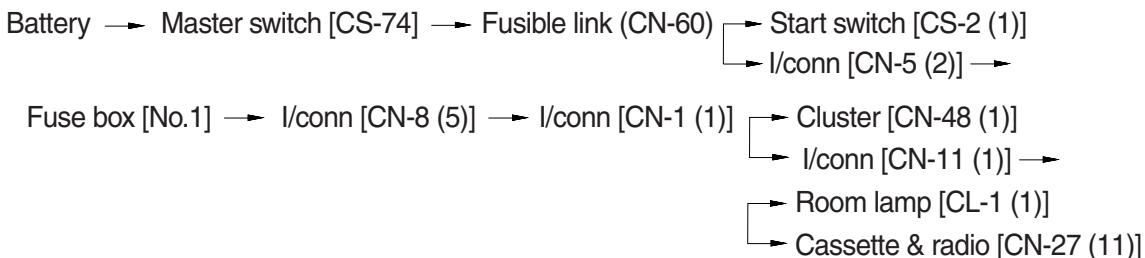


1. POWER CIRCUIT

The negative terminal of battery is grounded to the machine chassis.

When the start switch is in the OFF position, the current flows from the positive battery terminal as shown below.

1) OPERATING FLOW




※ I/conn : Intermediate connector

2) CHECK POINT

Engine	Start switch	Check point	Voltage
OFF	OFF	① - GND (Battery) ② - GND (Master switch) ③ - GND (Fusible link)	10~12.5 V

※ GND : Ground

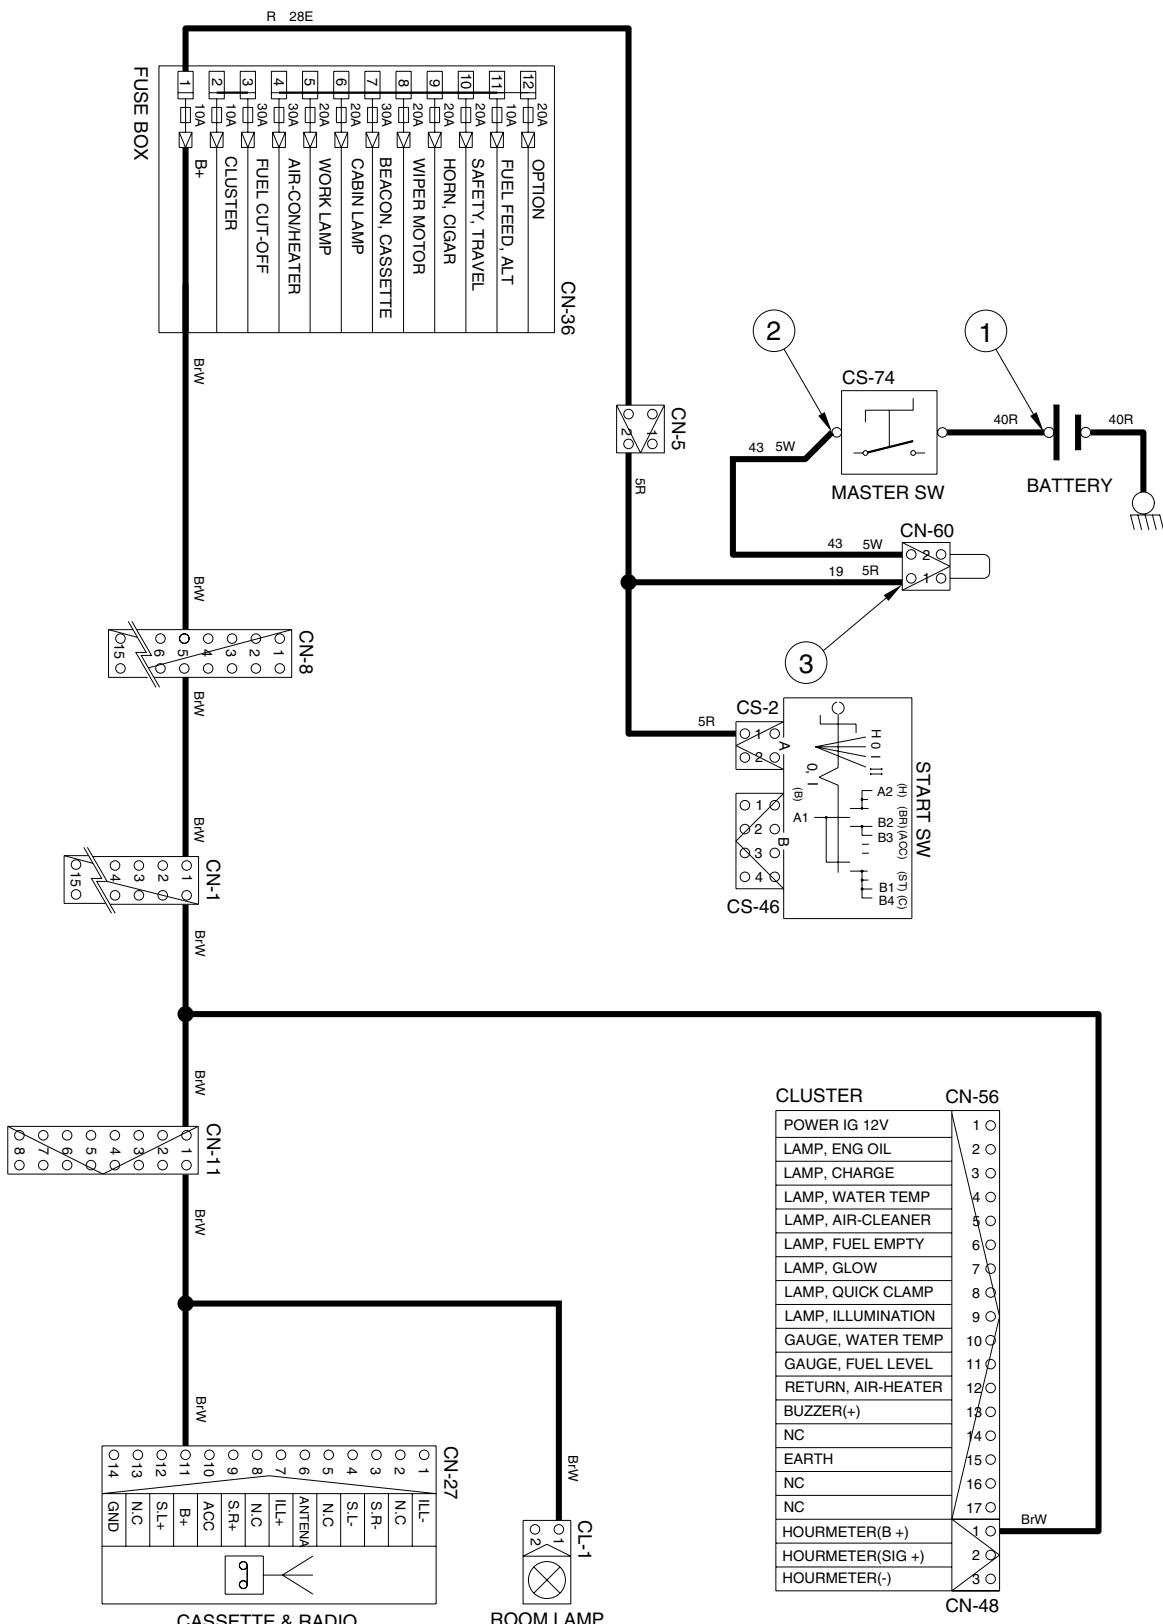POWER CIRCUIT



2. STARTING CIRCUIT

1) OPERATING FLOW

Battery(+) terminal → Master switch [CS-74] → Fusible link [CN-60]

→ Start key [CS-2 (1)]

→ I/conn [CN-5 (2)]

- Fuse box No.1
- Start relay [CN-166 (1)]
- Power relay [CR-35 (30)]

* Start switch : ON

Start switch ON → [CS-46 (2, 3)] → I/conn [CN-7 (1)]

→ Fuse box No. 2, 3 (power is supplied)

→ Safety relay [CN-165 (3)]

→ Power relay [CR-35 (85) → (87)] →

Fuse box (all power is supplied with electric component)

* Start switch : START

Start switch START [CS-46 (4)] → I/conn [CN-6 (7)]

→ Safety relay [CN-165 (1) → [CN-166 (2)] → I/conn [CN-5 (1)] → Starter [CN-45 (M)] → Start motor operating


→ Air heater timer relay [CR-(2 → 4)]

2) CHECK POINT

Engine	Start switch	Check point	Voltage
Operating	Start	<ul style="list-style-type: none">① - GND (Battery)② - GND (Start key)③ - GND (Starter B⁺)④ - GND (Starter M)	10~12.5 V

* GND : Ground

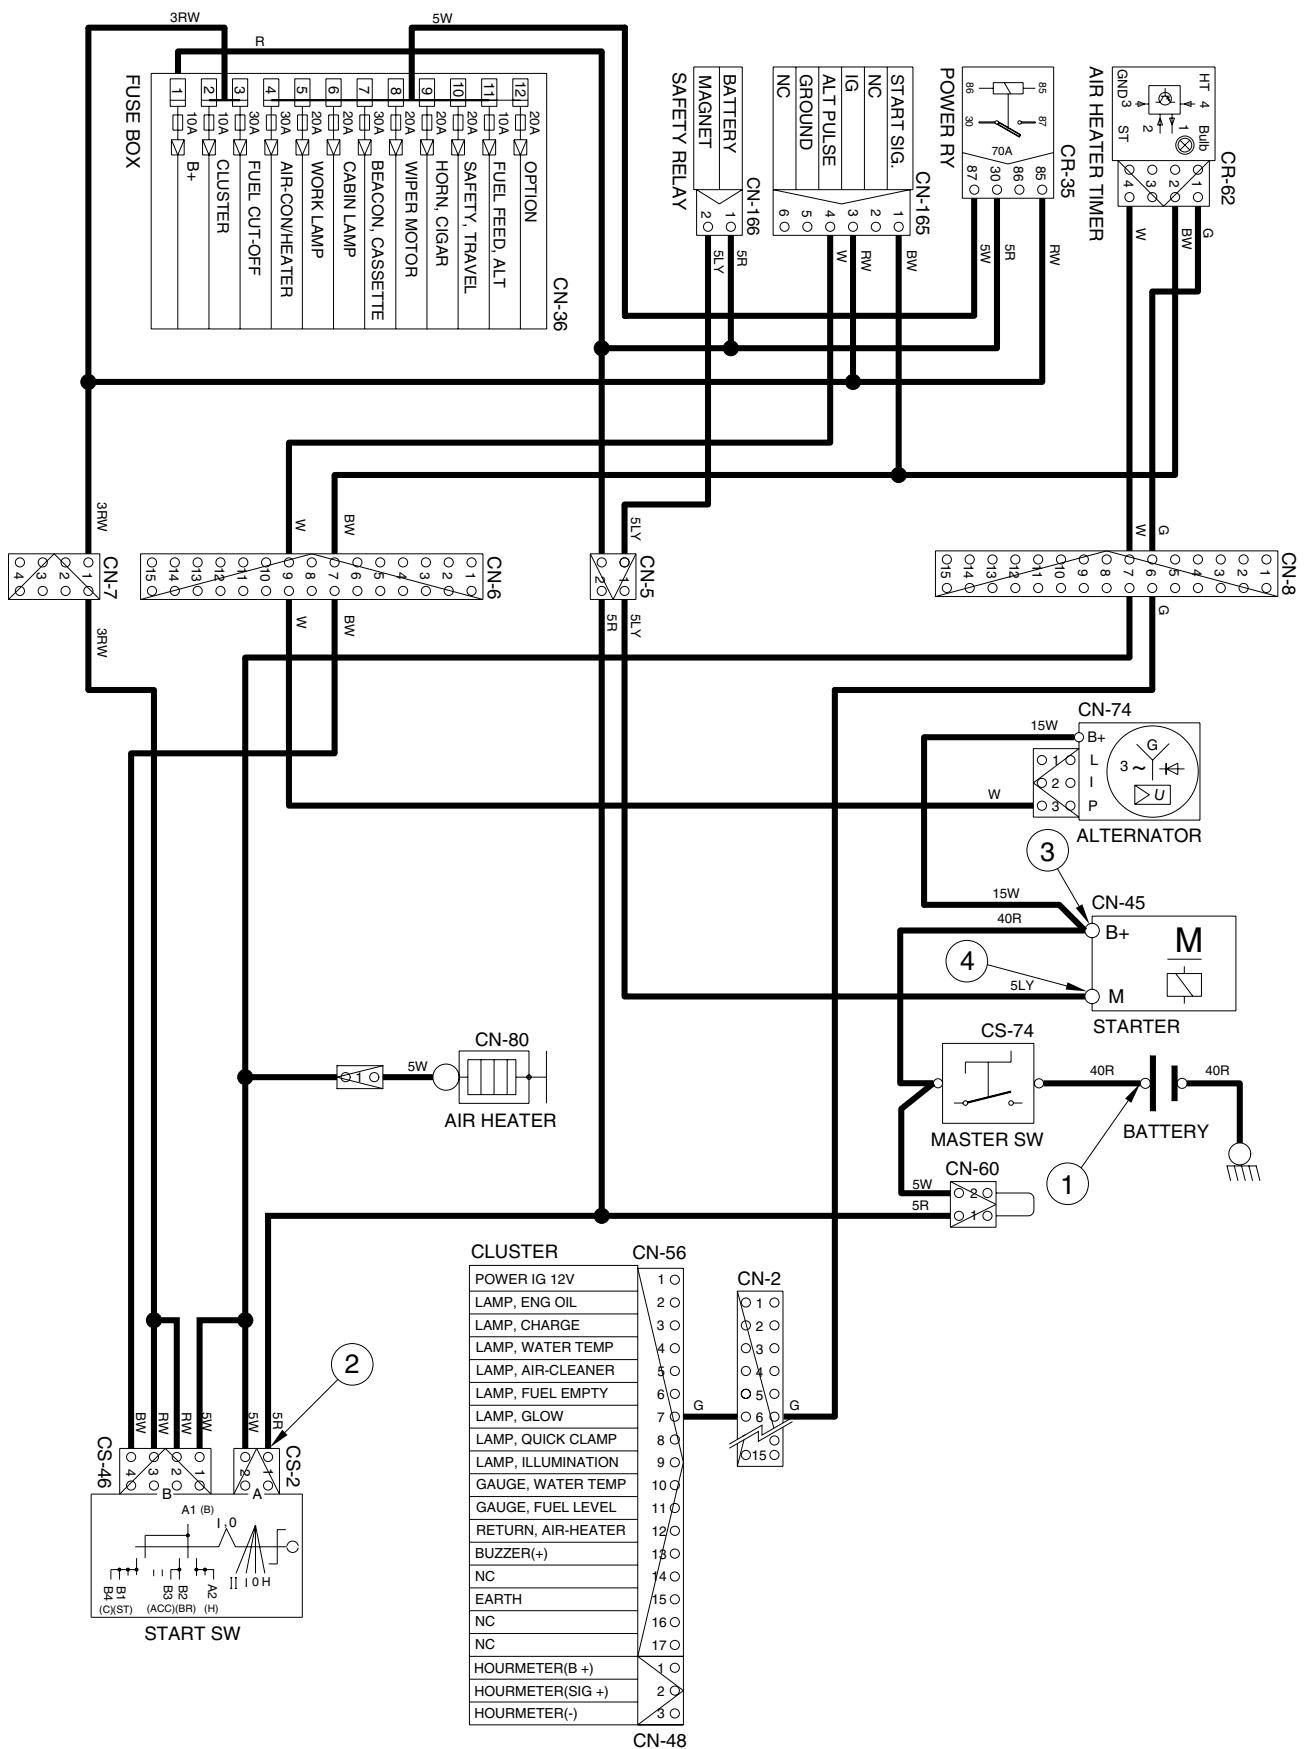STARTING CIRCUIT



3. CHARGING CIRCUIT

When the starter is activated and the engine is started, the operator releases the key switch to the ON position.

Charging current generated by operating alternator flows into the battery.

The current also flows from alternator to each electrical component and controller through the fuse box.

1) OPERATING FLOW

(1) Warning flow

Alternator "L" terminal → I/conn [CN-2 (13)] → Cluster [CN-56 (3)] → Cluster warning lamp ON

(2) Charging flow


Alternator "B⁺" terminal → Battery(+) terminal

2) CHECK POINT

Engine	Start switch	Check point	Voltage
ON	ON	① - GND (Battery voltage) ② - GND (Alternator B ⁺ terminal) ③ - GND (Cluster)	10~12.5 V

※ GND : Ground

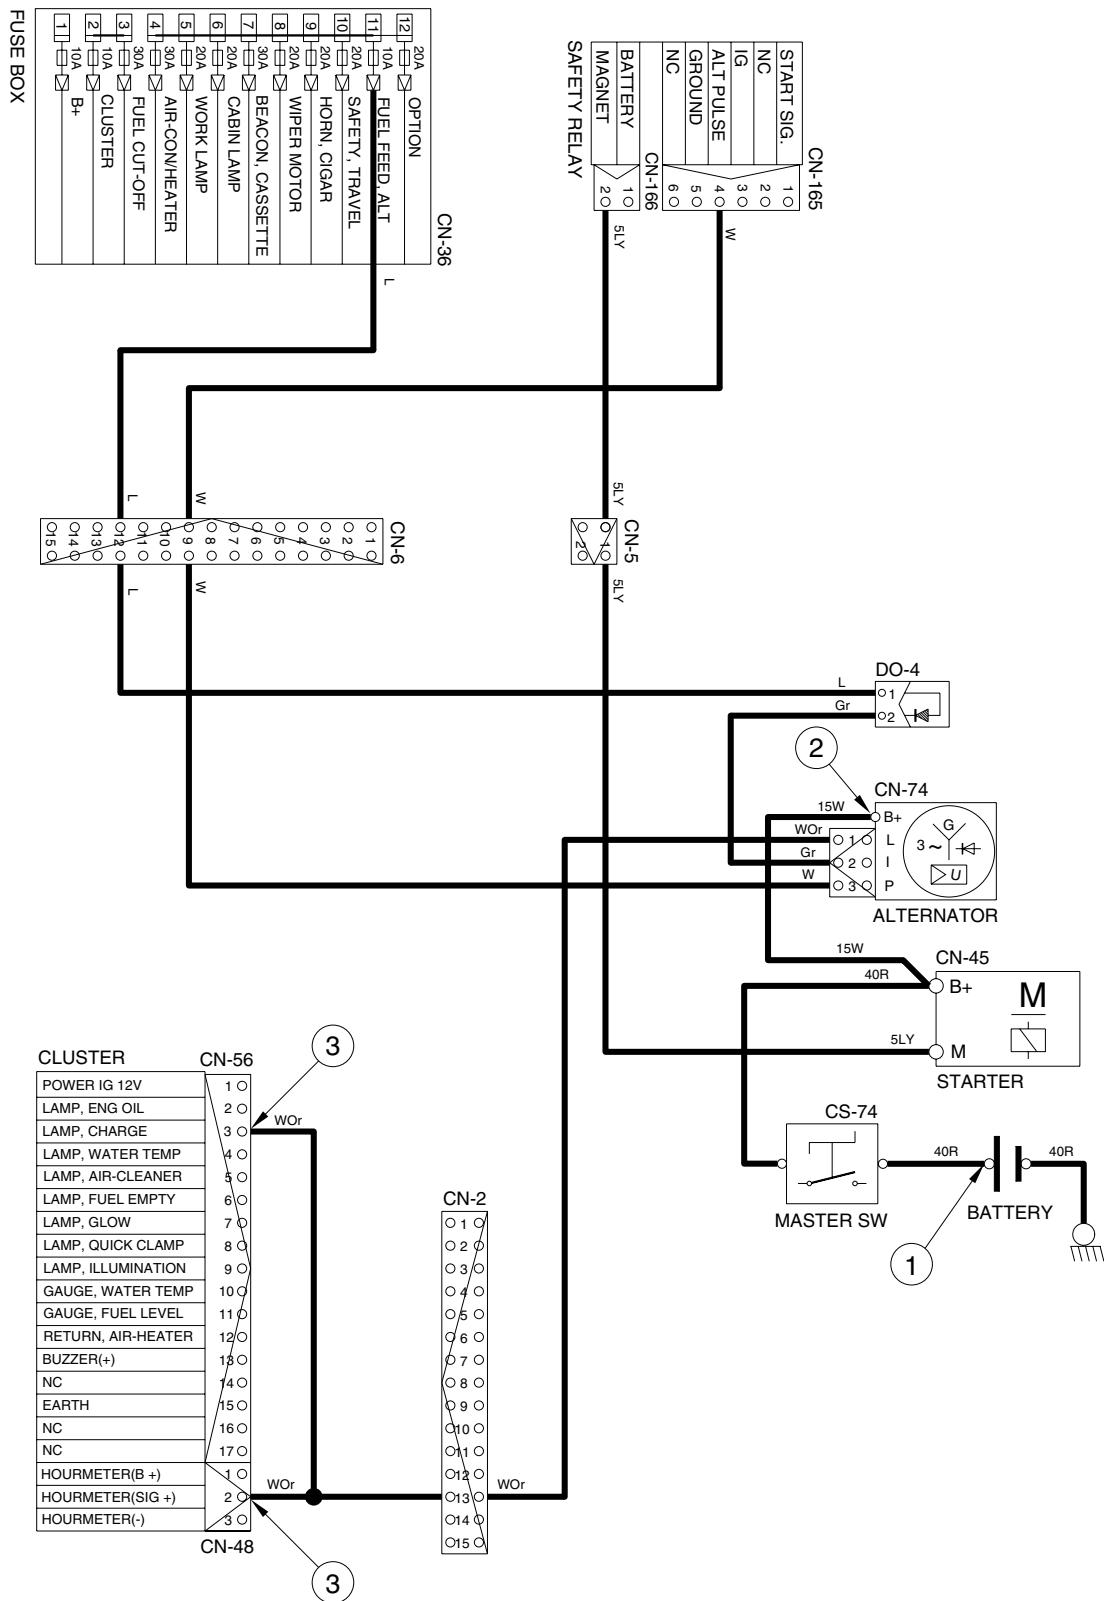CHARGING CIRCUIT




4. HEAD AND WORK LIGHT CIRCUIT

1) OPERATING FLOW

Fuse box (No.6) → Light switch [CS-21 (1)]

Fuse box (No.5) → Light switch [CS-21 (4)]

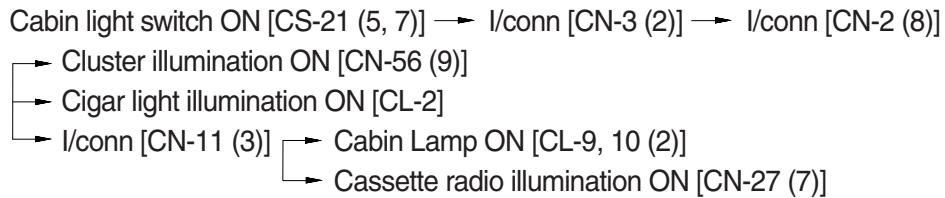(1) Main light switch ON : 1st step



(2) Main light switch ON : 2nd step


Work light switch ON [CS-21 (2)] → I/conn [CN-3 (14)] → I/conn [CN-12 (2)] → Work light ON [CL-5 (2)]

2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (Fuse box) ② - GND (Switch power input) ③ - GND (Switch power output) ④ - GND (Head light) ⑤ - GND (Fuse box) ⑥ - GND (Switch power input) ⑦ - GND (Switch power output) ⑧ - GND (Work light)	10~12.5 V

* GND : Ground

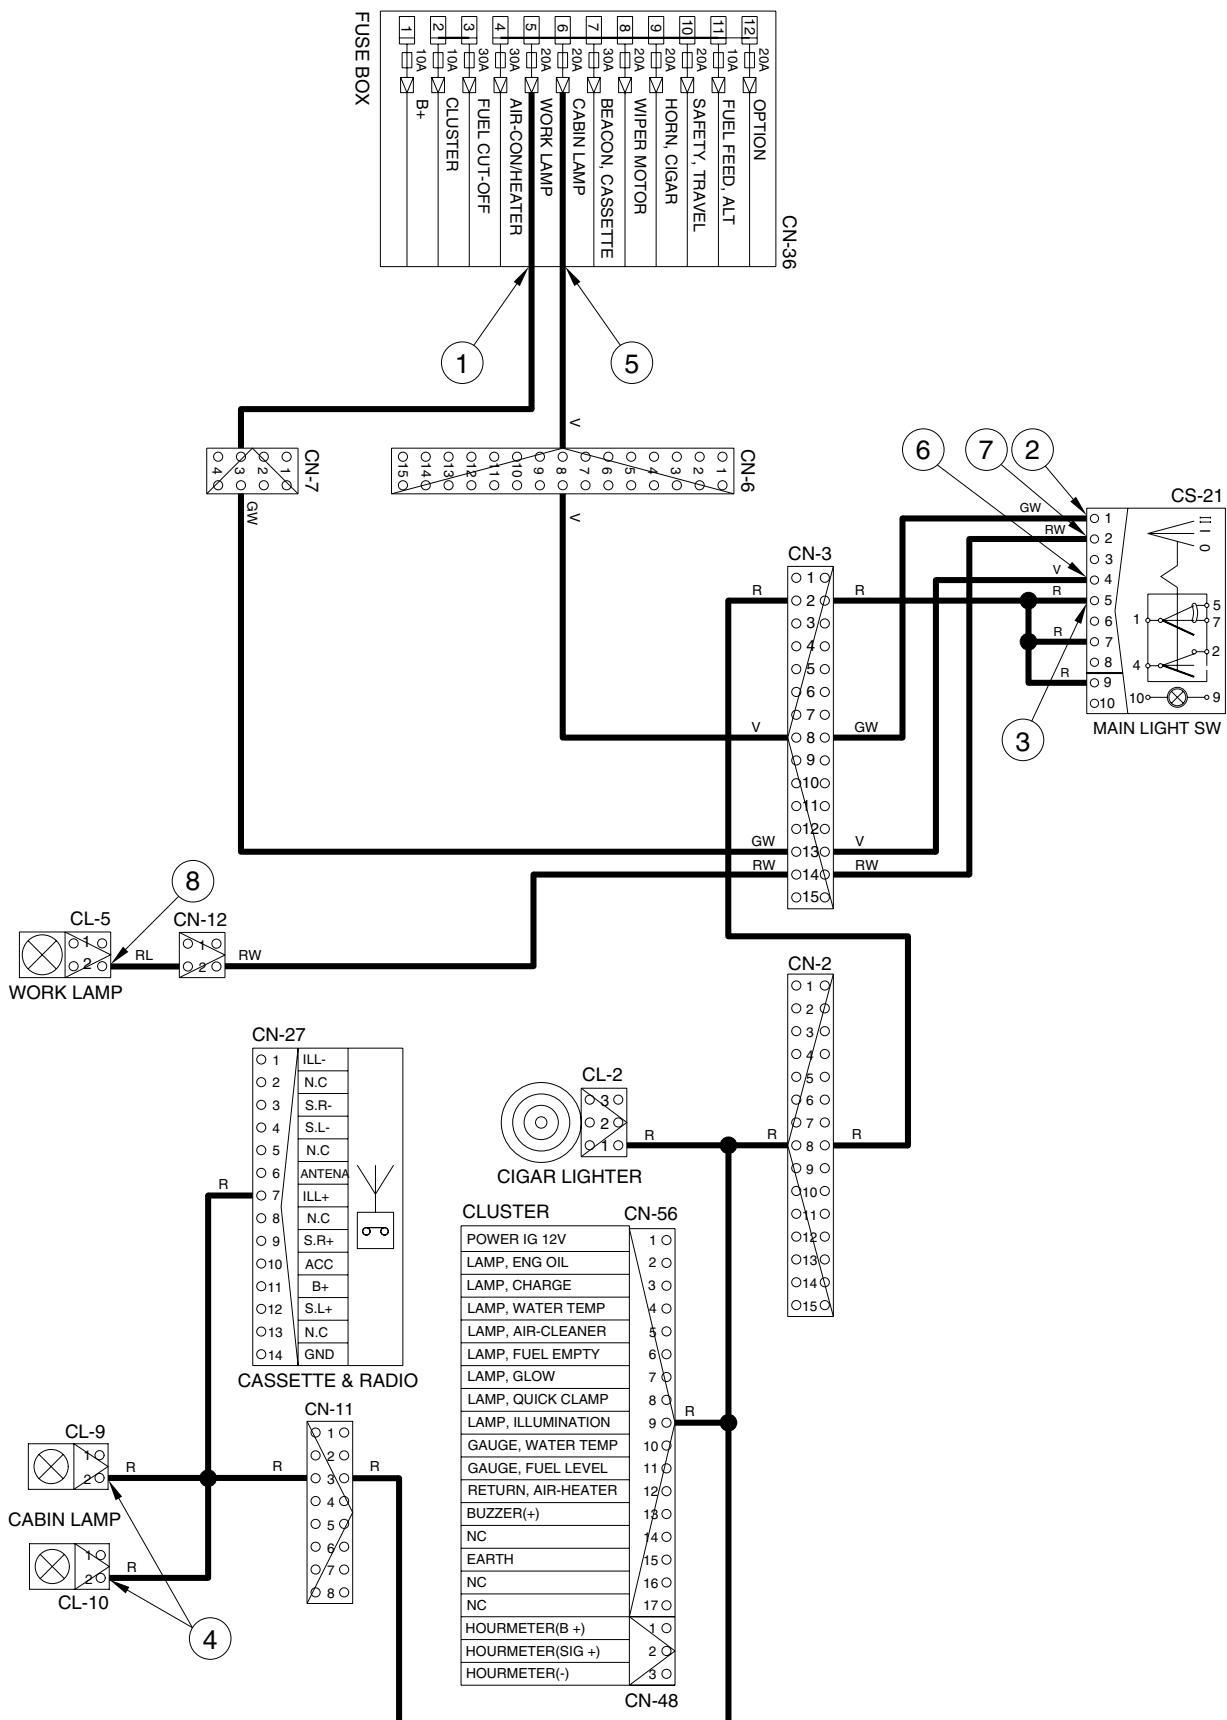HEAD AND WORK LAMP CIRCUIT



R35Z94EL07

5. BEACON LAMP CIRCUIT

1) OPERATING FLOW

Fuse box (No.7) → I/conn [CN-6 (15)] → I/conn [CN-3 (5)] → Beacon lamp switch [CS-23 (5)]

(1) Beacon lamp switch ON

Beacon lamp switch ON [CS-23 (1)]

→ Switch Indicator lamp ON [CS-23 (9)]


→ I/conn [CN-3 (1)] → I/conn [CN-1 (5)] → I/conn [CN-11 (8)] → Beacon lamp ON [CL-7]

2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (Fuse box) ② - GND (Switch power input) ③ - GND (Switch power output) ④ - GND (Beacon lamp)	10~12.5 V

* GND : Ground

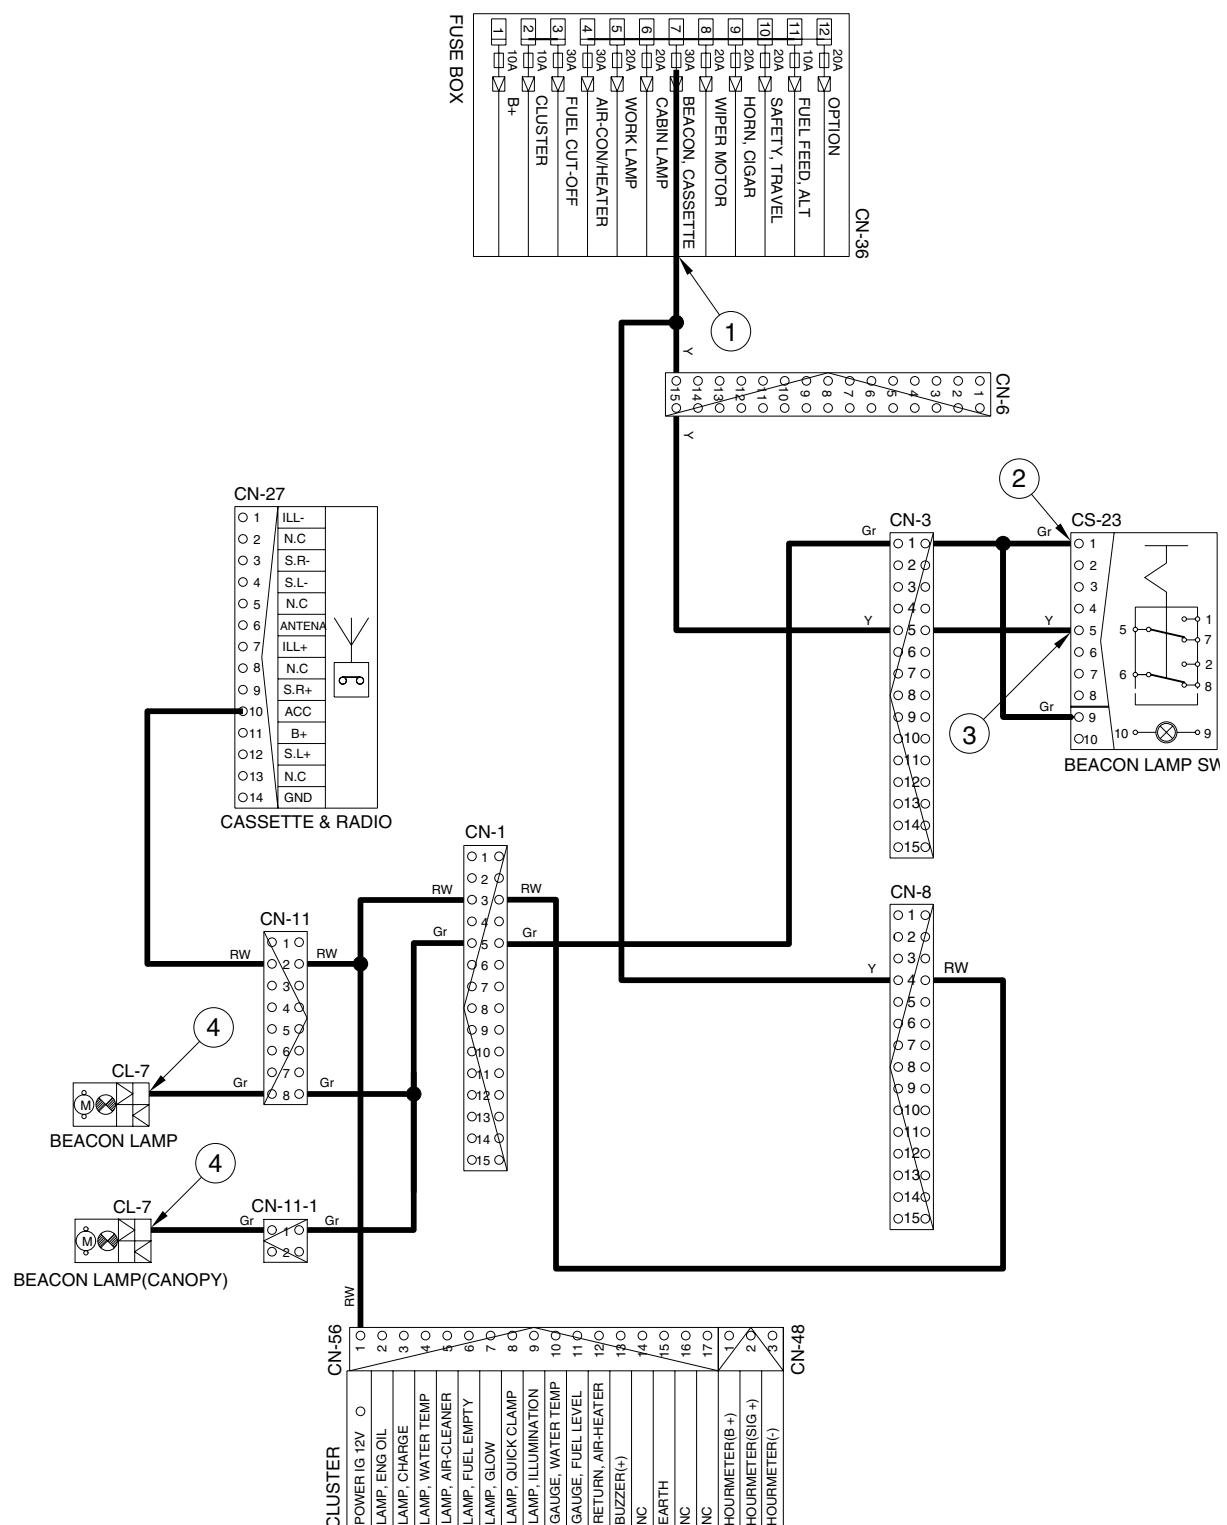BEACON LAMP CIRCUIT



R35Z94EL08

6. WIPER AND WASHER CIRCUIT

1) OPERATING FLOW

(1) Key switch ON

Fuse box (No.8) → I/conn [CN-8 (1)] → I/conn [CN-4 (1)]

└→ Wiper and washer switch [CS-3 (1)]

└→ Wiper motor [CN-21 (3)]

(2) Wipe switch ON : 1st step (low speed)

Wiper switch ON [CS-3 (6)] → Wiper motor operating [CN-21 (4)]

└→ Wiper & washer switch lamp ON [CS-3 (9)]

(3) Wiper switch ON : 2nd step (washer)

Wiper switch ON [CS-3 (6)] → Wiper motor operating [CN-21 (4)]

Wiper switch ON [CS-3 (3)] → I/conn [CN-4 (3)] → I/conn [CN-3 (3)]

→ Washer pump operating [CN-22 (2)]

(4) Auto parking (when switch OFF)

Switch OFF → Wiper motor [CN-21 (1)] → Wiper switch [CS-3 (8) → (6)]


→ Wiper motor [CN-21 (4)] → Wiper motor parking position by wiper motor controller

2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (Fuse box) ② - GND (Switch power input) ③ - GND (Switch power output) ④ - GND (Wiper motor)	10~12.5 V


* GND : Ground

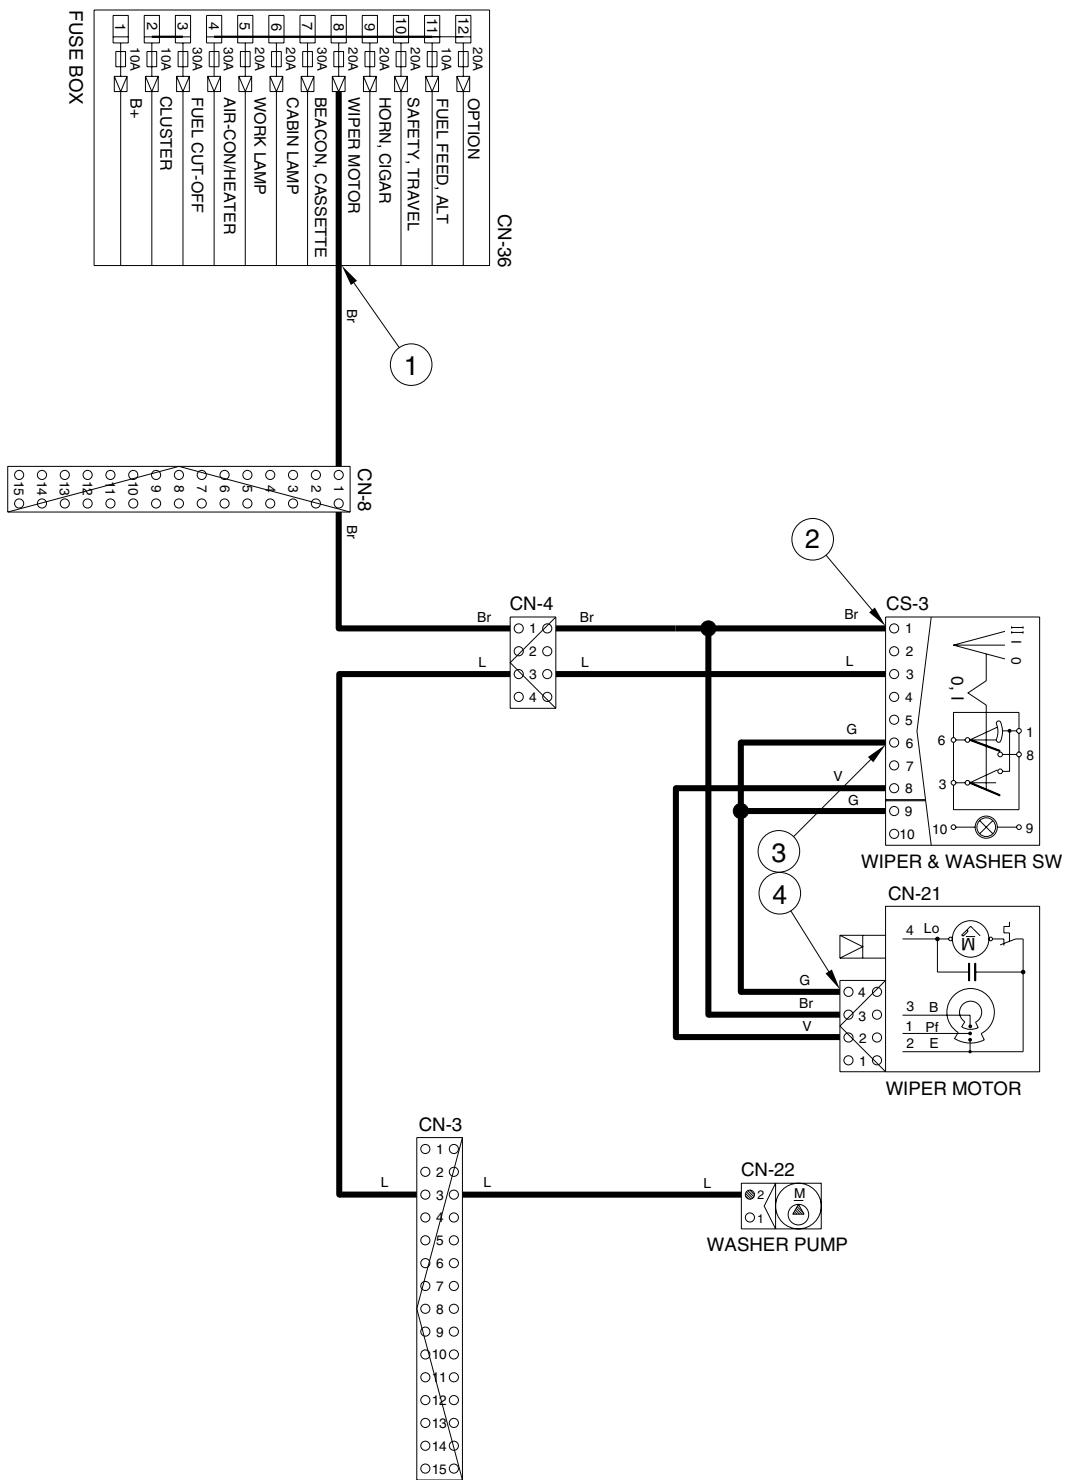WIPER AND WASHER CIRCUIT




R35Z94EL09

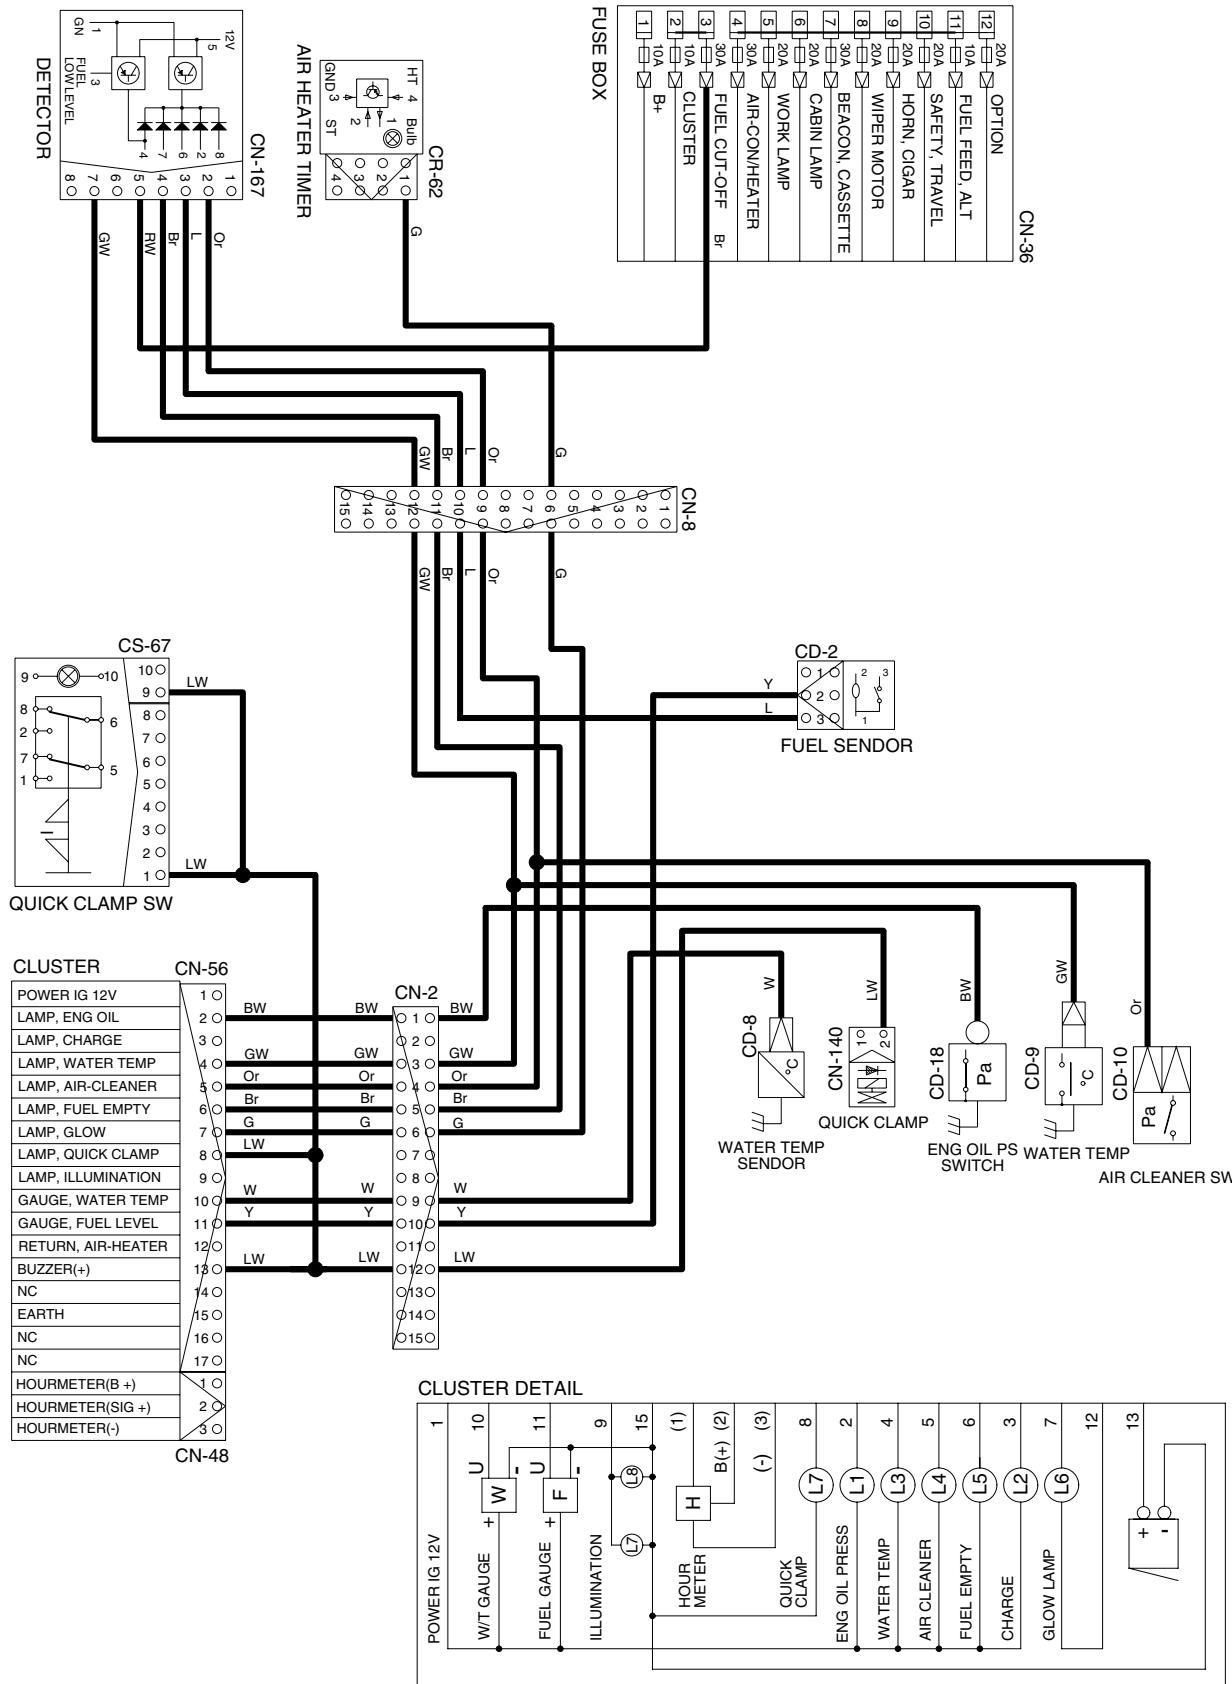MONITORING CIRCUIT








R35Z94EL10






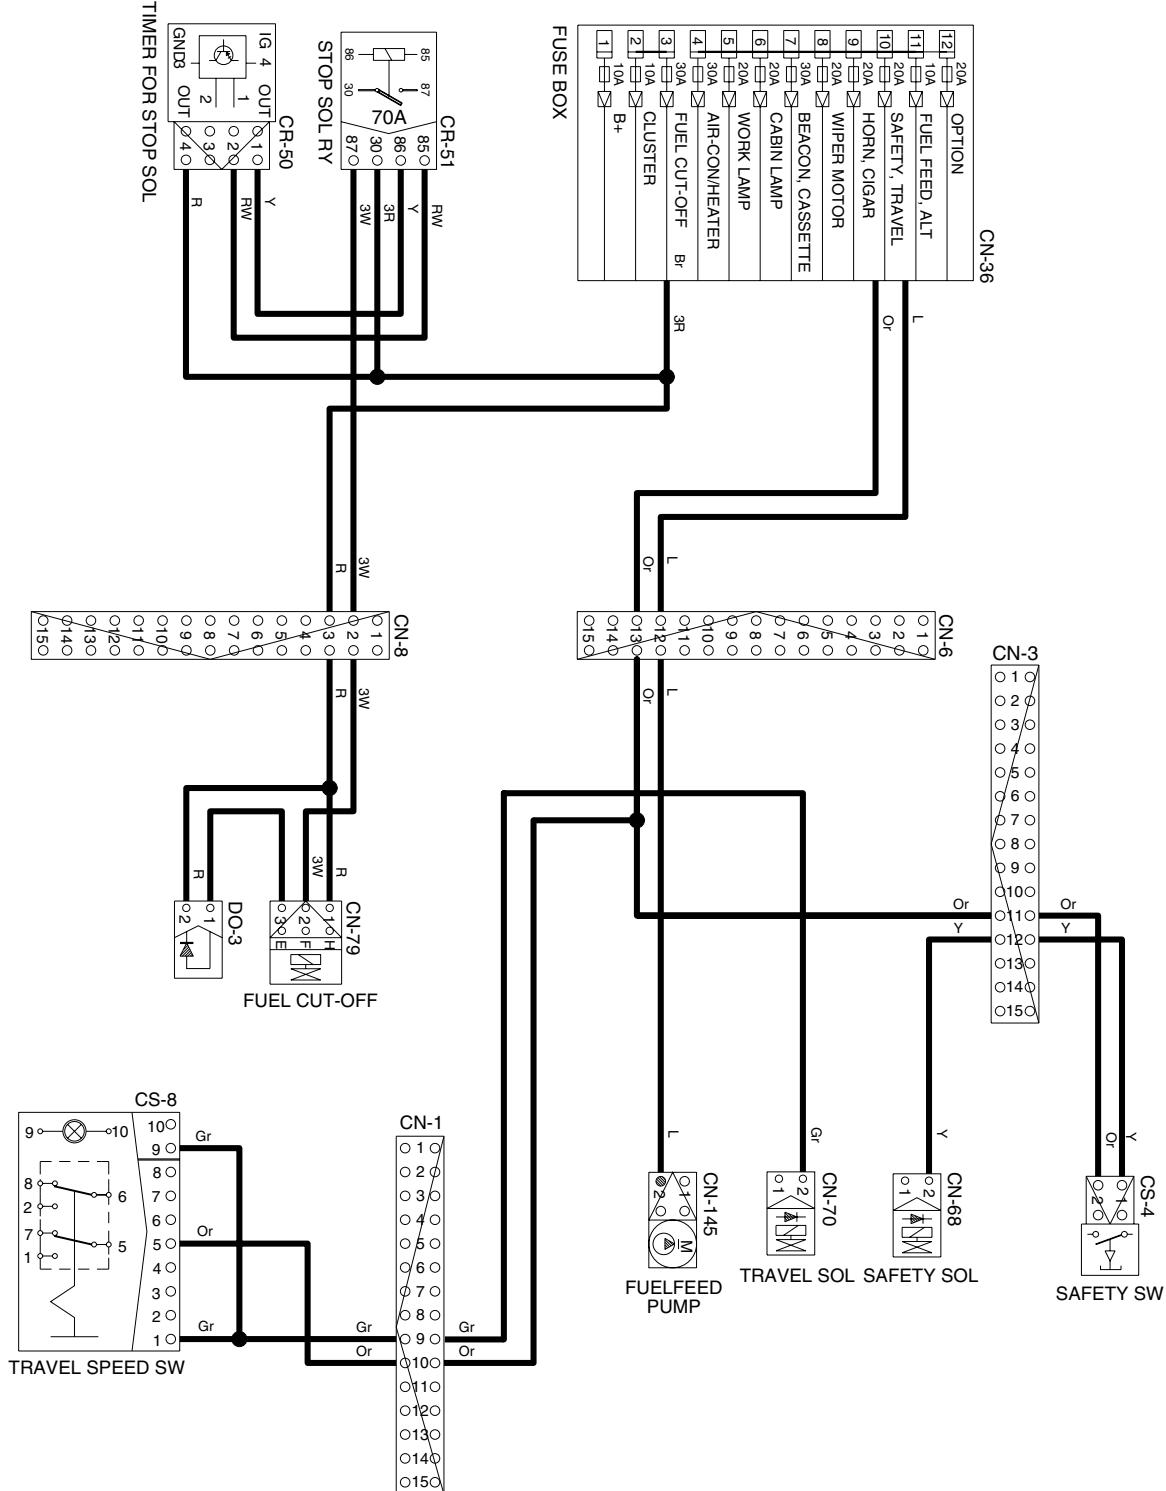
ELECTRIC CIRCUIT FOR HYDRAULIC















R35Z94EL11

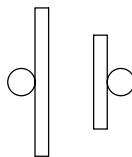
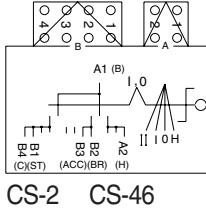
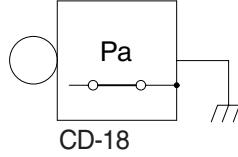
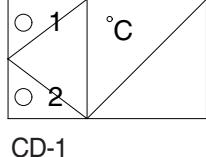
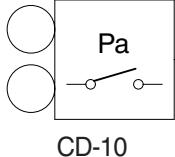
GROUP 4 ELECTRICAL COMPONENT SPECIFICATION







Part name	Symbol	Specification	Check
Battery		12V × 80Ah (5h rating)	* Check specific gravity 1.280 over : Over charged 1.280 ~ 1.250 : Normal 1.250 below : Recharging
Start key		12V	* Check contact OFF : ∞ Ω (for each terminal) ON : 0 Ω (for terminal 1-3 and 1-2) START : 0 Ω (for terminal 1-5)
Pressure switch (for engine oil)		0.5 kgf/cm² (N.C TYPE)	* Check resistance Normal : 0 Ω (CLOSE)
Temperature sensor		-	* Check resistance 50°C : 804 Ω 80°C : 310 Ω 100°C : 180 Ω
Air cleaner pressure switch		Pressure: 635 mmH₂O (N.O TYPE)	* Check contact Normal : ∞ Ω

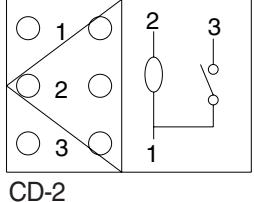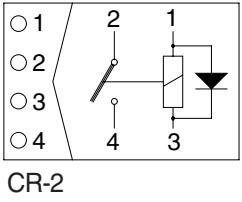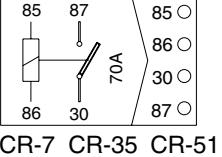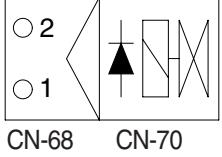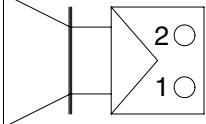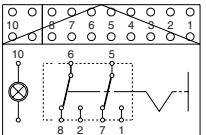Part name	Symbol	Specification	Check
Fuel sender	 CD-2	-	* Check resistance Full : 30 Ω Low : 100 Ω Empty warning : 200 Ω
Relay (horn)	 CR-2	12V 20A	* Check resistance Normal : About 200 Ω (for terminal 1-3) : 0 Ω (for terminal 2-4)
Relay (power, aircon power, stop solenoid)	 CR-7 CR-35 CR-51	12V 70A	* Rated coil current 1.2±0.3 A
Solenoid valve	 CN-68 CN-70 CN-140	12V 1A	* Check resistance Normal : 15~25 Ω (for terminal 1-2)
Speaker	 CN-23 (LH) CN-24 (RH)	4 Ω 20W	* Check resistance Normal : 4 Ω
Switch (Looking type)	 CS-8 CS-16 CS-23	12V 16A	* Check contact Normal OFF - ∞ Ω (for terminal 1-5,2-6) - 0 Ω (for terminal 5-7,6-8)

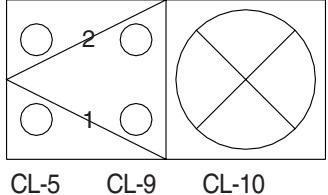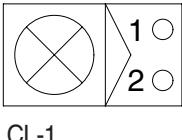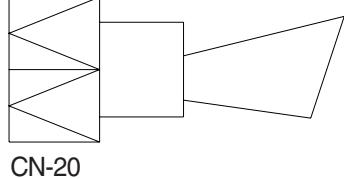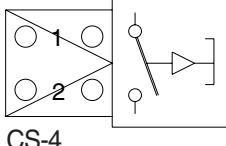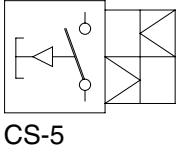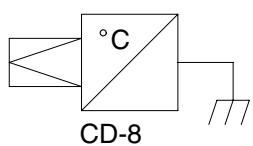Part name	Symbol	Specification	Check
Lamp		12V 55W (H3 TYPE)	※ Check disconnection Normal : 1.2 Ω
Room lamp		12V 10W	※ Check disconnection Normal : A few Ω
Horn		12V 6A	132±5 dB
Safety switch		Micro 12V 15A	※ Check contact Normal : 0 Ω Operating : ∞ Ω
Horn switch		12V 10A	※ Check contact Normal : 0 Ω
Water temp sender		-	※ Check contact 50°C : 0.748~0.904 Ω 67°C : 0.538~0.650 Ω 102°C : 0.185~0.167 Ω 110°C : 0.143~0.130 Ω 135°C : 0.076~0.100 Ω

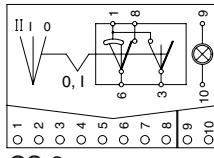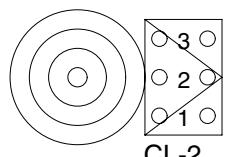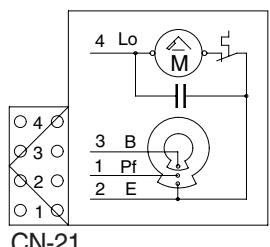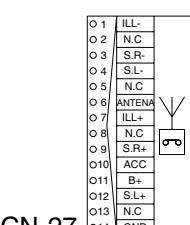Part name	Symbol	Specification	Check
Beacon lamp	 CL-7	12V (strobe type)	※ Check disconnection Normal : A few Ω
Wiper & washer switch	 CS-3	12V 16A	※ Check contact Normal : $\infty \Omega$
Washer pump	 CN-22	12V 3.8A	※ Check contact Normal : 3 Ω (for terminal 1-2)
Cigar lighter	 CL-2	12V 10A 1.4W	※ Check coil resistance Normal : About 1M Ω ※ Check contact Normal : $\infty \Omega$ Operating time : 5~15sec
Wiper motor	 CN-21	12V 3A	※ Check contact Normal : 6 Ω (for terminal 2-6)
Cassette radio	 CN-27	12V 3A	※ Check voltage 10 ~ 12.5V (for terminal 10-14,11-14)

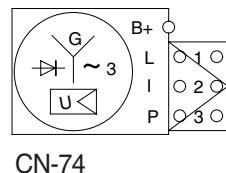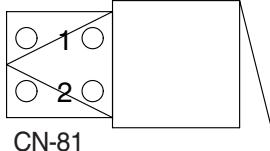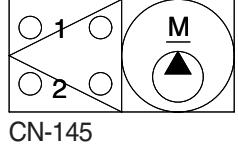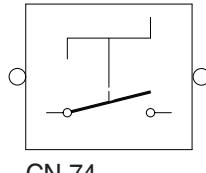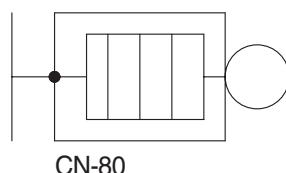Part name	Symbol	Specification	Check
Starter		12V	* Check contact Normal : 0.1 Ω
Alternator		12V 55A	* Check contact Normal : 0 Ω (For terminal B+-1) Normal : 10 ~ 12.5V
Travel alarm		12V	-
Fuel feed pump		12V	-
Master switch		12V 1000A	-
Air-heater		12V 42A 500W	-

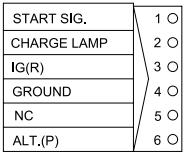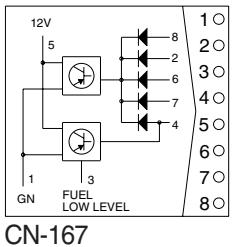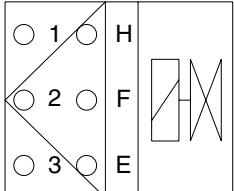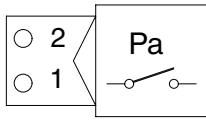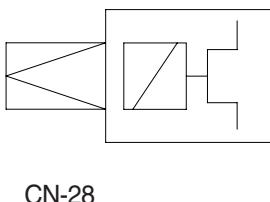Part name	Symbol	Specification	Check
Safety relay	 CN-165 CN-166	12V 1400rpm/ Alternator	* Contact capacity : Rush : 100A Steady-State : 50A (30sec)
Detector	 CN-167	12V	-
Fuel cut-off	 CN-79	12V	* Check operation Rated full current : 12V 33A Rated hold current : 12V 0.8A
Receiver dryer	 CN-29	12V	* Check contact Normal : 0 Ω
Compressor	 CN-28	12V 38W	-
Air con fan motor	 CN-83	12V 8.5A	-

GROUP 5 CONNECTORS

1. CONNECTOR DESTINATION

















Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-1	AMP	15	I/conn (RH console harness-main harness)	2-85262-1	368301-1
CN-2	AMP	15	I/conn (Main harness-RH console harness)	2-85262-1	368301-1
CN-3	AMP	15	I/conn (Main harness-LH console harness)	2-85262-1	368301-1
CN-4	AMP	4	I/conn (FR RH side harness-main harness)	S810-004202	S810-104202
CN-5	AMP	2	I/conn (Relay harness-main harness)	S813-030201	S813-130201
CN-6	AMP	15	I/conn (Relay harness-main harness)	2-85262-1	368301-1
CN-7	AMP	4	I/conn (Relay harness-main harness)	S810-004202	S810-104202
CN-8	AMP	15	I/conn (Main harness-relay harness)	2-85262-1	368301-1
CN-9	AMP	1	Air-con harness	S810-001202	S810-101202
CN-10	AMP	2	I/conn (Main harness-cab lamp harness)	S816-002002	S816-102002
CN-11	AMP	8	I/conn (RH console harness-cab harness)	S816-008202	S816-108202
CN-11-1	AMP	2	I/conn (RH console harness-canopy harness)	S816-002002	S816-102002
CN-12	AMP	2	Boom harness	S816-002002	S816-102002
CN-20	DEUTSCH	2	Horn	35825-0211	-
CN-21	AMP	4	Wiper harness	180900-0	-
CN-22	KET	2	Washer tank	MG640605	-
CN-23	KET	1	Speaker - LH	S822-014002	S822-114002
CN-24	KET	1	Speaker - RH	S822-014002	S822-114002
CN-27	-	14	Cassette radio	173852-1	-
CN-28	AMP	2	Air-con compressor	S810-001203	-
CN-29	KET	2	Receiver dryer	MG640795	-
CN-31	DEUTSCH	3	Air-con harness	DT06-3S	DT04-3P
CN-36	-	-	Fuse box body	F12890010	-
CN-45	RING TERM	1	Starter	S820-305002	-
	RING TERM	1	Starter	ST710287-2	-
CN-46	AMP	4	Heater	180900-0	
CN-48	AMP	3	Hour meter	S810-003202	
CN-56	AMP	17	Cluster	172500-1	-
CN-60	AMP	2	Fusible link	-	S813-130200
CN-68	DEUTSCH	2	Safety solenoid	DT06-2S-P012	-
CN-70	DEUTSCH	2	Travel HI-LO solenoid	DT06-2S-P012	-
CN-74	SUMITOMO	3	Alternator	6189-0443	-
CN-79	SWP	3	Fuel cut-off solenoid	S813-060300	-
CN-80	RING TERM	1	Pre heater	S810-001302	-
CN-81	SWP	1	Travel buzzer	S822-014000	S822-114000
CN-83	KET	2	Air-con condenser fan	-	MG610164













Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-140	DEUTSCH	2	Quick clamp	DT06-2S-P012	DT04-2P-E005
CN-145	KET	2	Fuel feed pump	7123-6423-30	-
CN-165	-	6	Safety relay	6195-0021	-
CN-166	-	2	Safety relay	6195-0060	-
CN-167	AMP	8	Detector	S810-008202	-
CN-258	DEUTSCH	2	Air-con mode solenoid valve	DT06-2S-P012	DT04-2P-E005
LAMP					
CL-1	KET	2	Room lamp	MG610070	-
CL-2	AMP	3	Cigar lighter	S810-003202	-
CL-5	DEUTSCH	2	Work lamp	-	DT06-2S-E006
CL-7	KET	1	Beacon lamp	S822-014002	S822-114002
CL-9	DEUTSCH	2	Cabin lamp (canopy lamp)	DT06-2S-P012	DT04-2P-E004
CL-10	DEUTSCH	2	Cabin lamp (canopy lamp)	DT06-2S-P012	DT04-2P-E004
RELAY					
CR-2	AMP	4	Horn relay	S810-004002	-
CR-7	KET	4	Air-con relay	MG612017-5	-
CR-35	KET	4	Power relay	MG612017-5	-
CR-50	AMP	4	Stop solenoid timer relay	S810-004202	-
CR-51	KET	4	Engine stop solenoid relay	MG612017-5	-
CR-62	KET	4	Air heater timer relay	MG610047-5	-
SENSOR					
CD-2	AMP	3	Fuel sender	S816-003002	S816-102002
CD-8	-	1	Water temp sender	1-150656-1	-
CD-9	AMP	1	Water temp switch	1-150656-1	-
CD-10	-	1	Air cleaner	GP890469	-
CD-11	KET	2	Travel pressure switch	MG640795	-
CD-12	KET	2	Travel pressure switch	MG640795	-
CD-18	-	1	Engine oil pressure	S184-001001	-
DO-3	-	2	Diode	S816-002002	21EA-50570
DO-4	-	2	Diode	S816-002002	21EA-50550
DO-6	-	2	Diode	S816-002002	21EA-50570
SWITCH					
CS-2	-	2	Start key switch	S813-030201	-
CS-3	SWF	10	Wiper & washer switch	593757	-
CS-4	AMP	2	Safety switch	-	S814-102001
CS-5	-	1	Horn switch	S822-014002	-
	-	1		-	S822-114002
CS-6	SWF	10	Heater switch	593757	-
CS-8	SWF	10	Travel speed switch	593757	-
CS-16	SWF	10	Travel alarm switch	593757	-

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CS-21	SWF	10	Light switch	593757	-
CS-23	SWF	10	Beacon lamp switch	593757	-
CS-46	KET	4	Start switch	MG651926	-
CS-67	SWF	10	Quick clamp switch	593757	-
CS-74	RING TERM	1	Master switch	ST710287-2	-
CS-83	SWF	10	Spare switch	593757	-

















2. CONNECTION TABLE FOR CONNECTORS

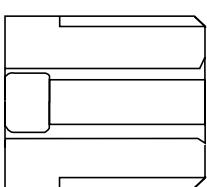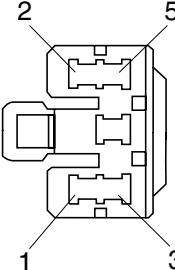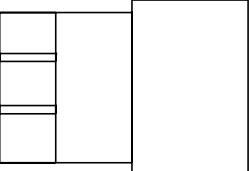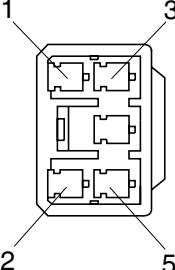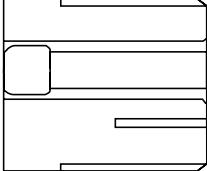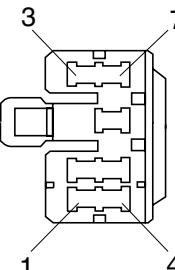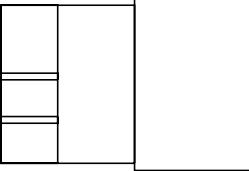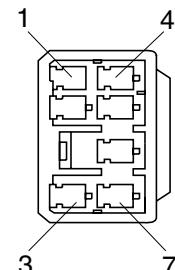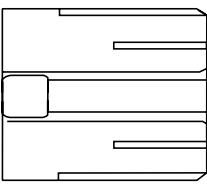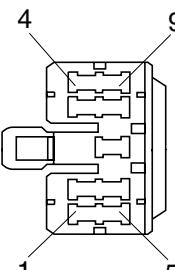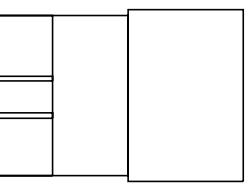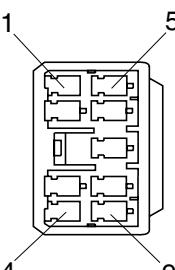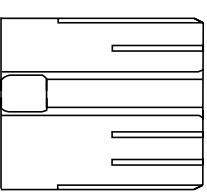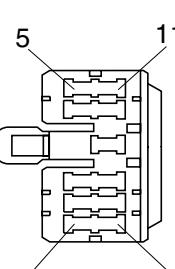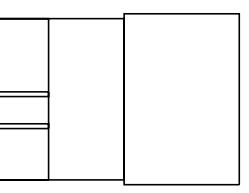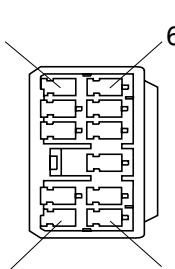1) PA TYPE CONNECTOR

















No. of pin	Receptacle connector (female)	Plug connector (male)
5	 	 
7	 	 
9	 	 
11	 	 





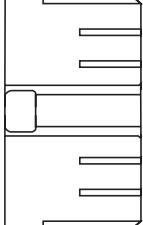
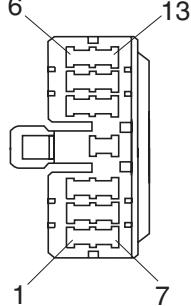
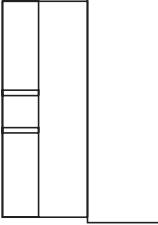
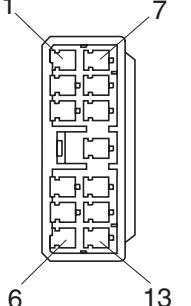
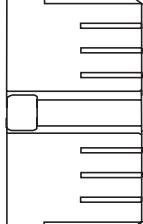
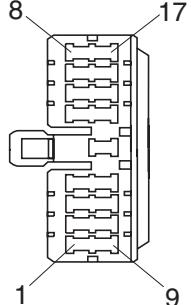
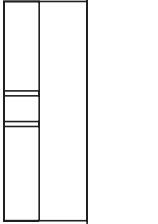
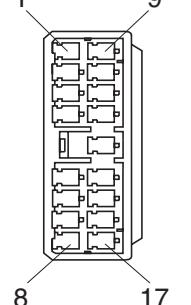
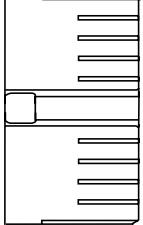
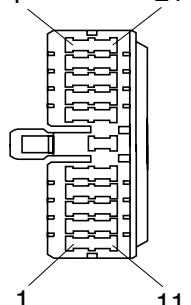
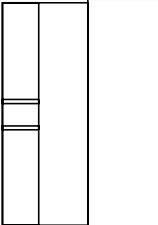
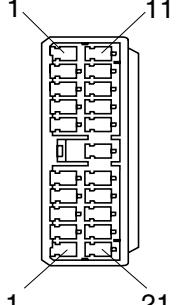
No. of pin	Receptacle connector (female)	Plug connector (male)
13	  S811-013002	  S811-113002
17	  S811-017002	  S811-117002
21	  S811-021002	  S811-121002

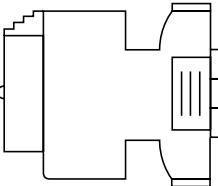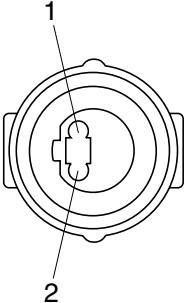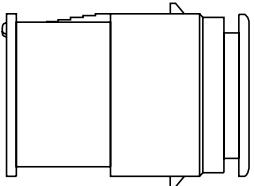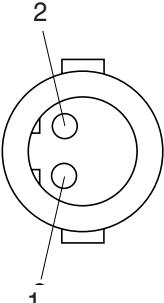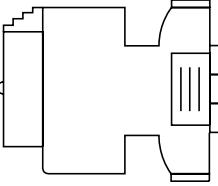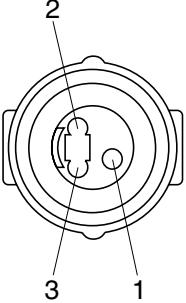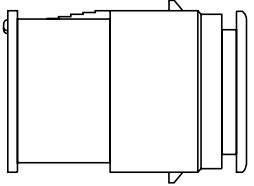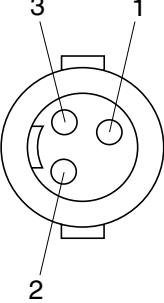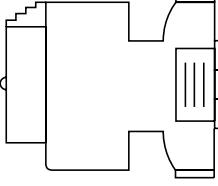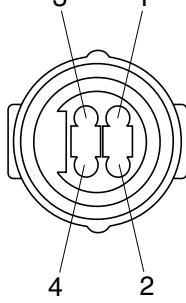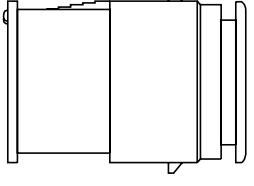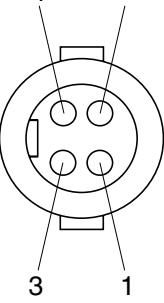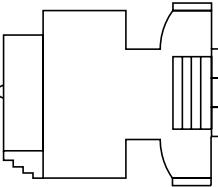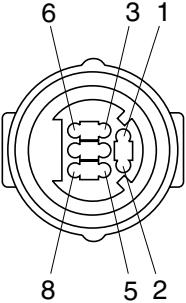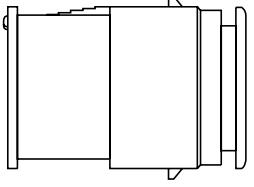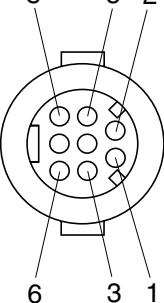2) J TYPE CONNECTOR









No. of pin	Receptacle connector (female)	Plug connector (male)
2	  S816-002001	  S816-102001
3	  S816-003001	  S816-103001
4	  S816-004001	  S816-104001
8	  S816-008001	  S816-108001

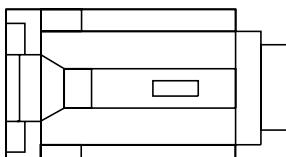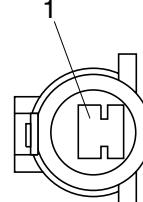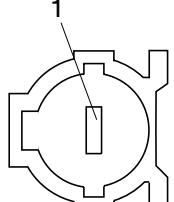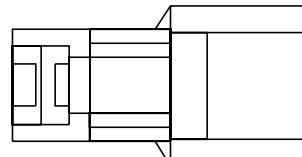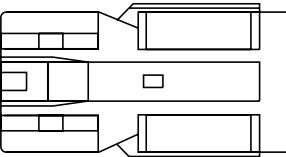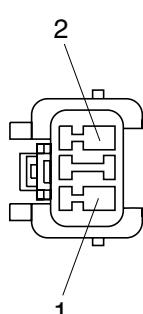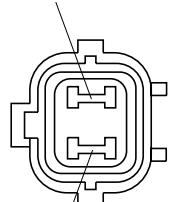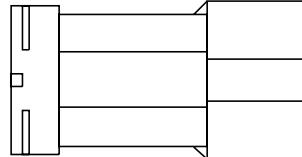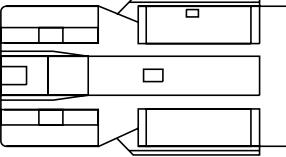
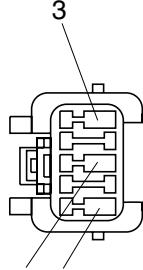
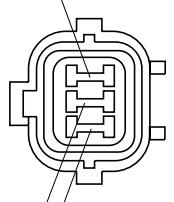
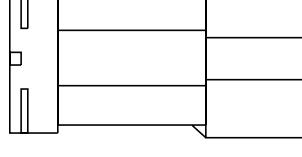
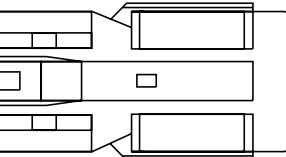
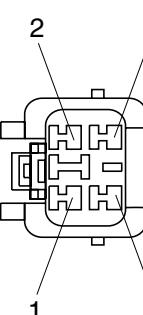
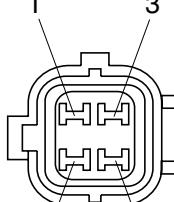
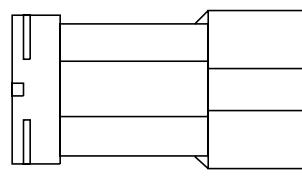
3) SWP TYPE CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
1	  S814-001000	  S814-101000
2	  S814-002000	  S814-102000
3	  S814-003000	  S814-103000
4	  S814-004000	  S814-104000

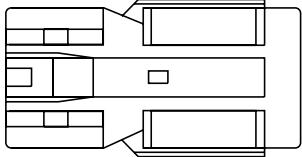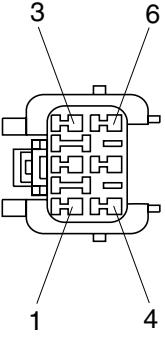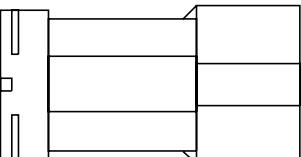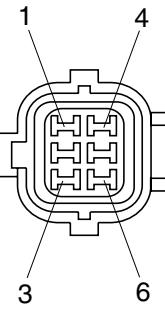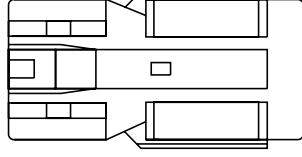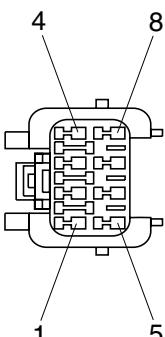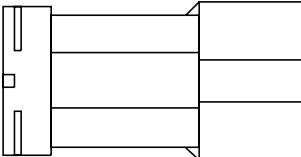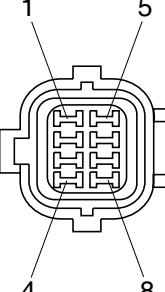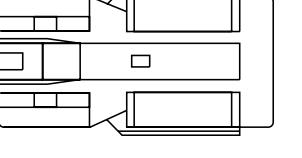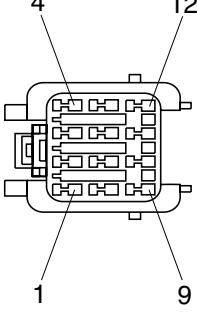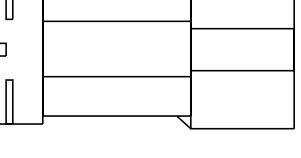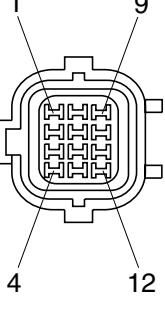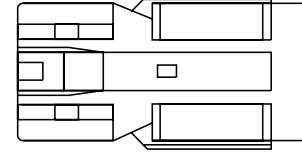
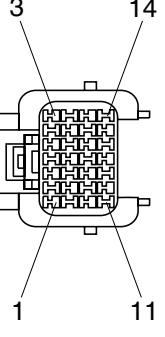
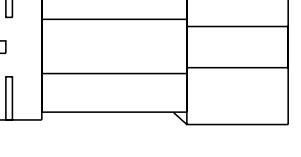
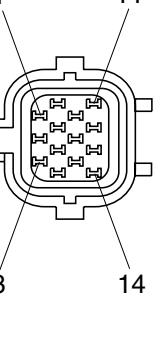
No. of pin	Receptacle connector (female)	Plug connector (male)
6	  S814-006000	  S814-106000
8	  S814-008000	  S814-108000
12	  S814-012000	  S814-112000
14	  S814-014000	  S814-114000

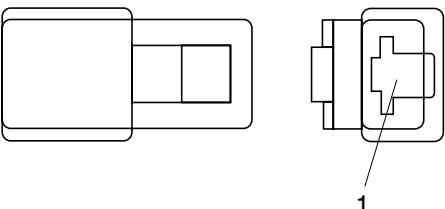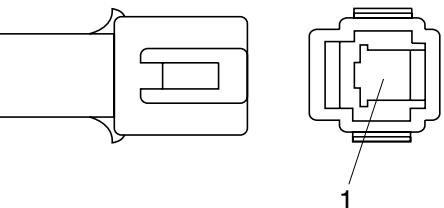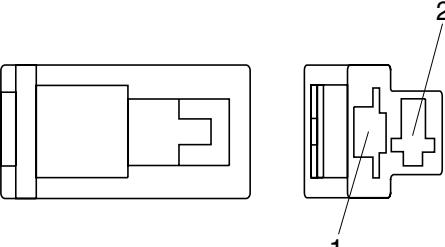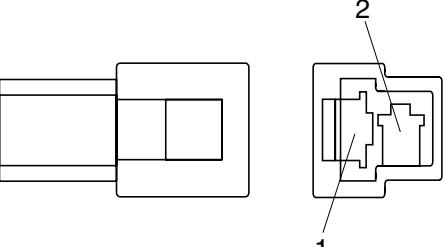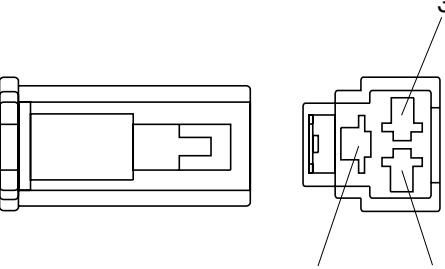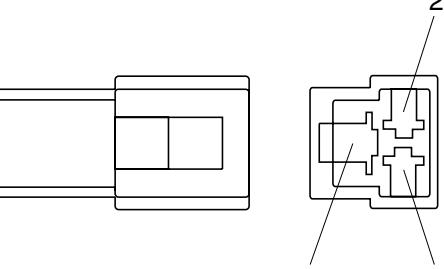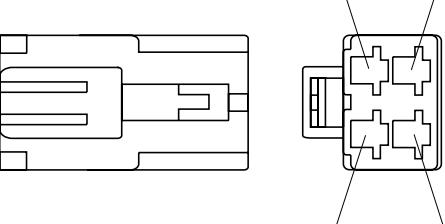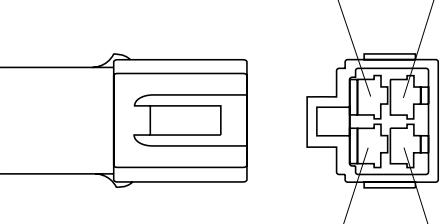4) CN TYPE CONNECTOR



No. of pin	Receptacle connector (female)	Plug connector (male)
1	 S810-001202	 S810-101202
2	 S810-002202	 S810-102202
3	 S810-003202	 S810-103202
4	 S810-004202	 S810-104202

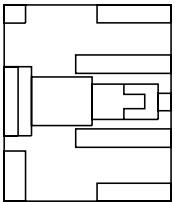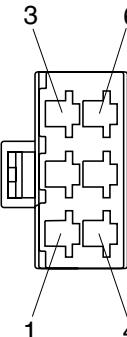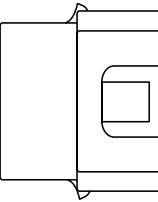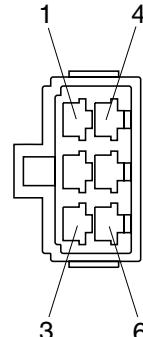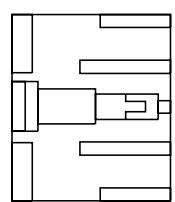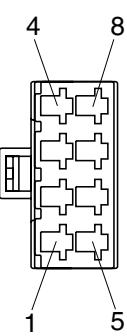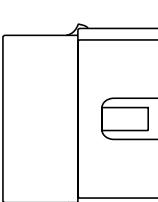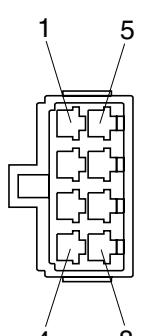No. of pin	Receptacle connector (female)	Plug connector (male)
6	  S810-006202	  S810-106202
8	  S810-008202	  S810-108202

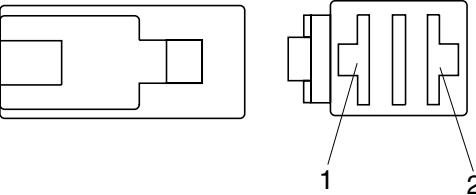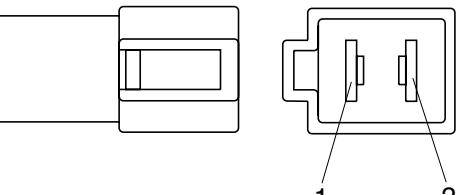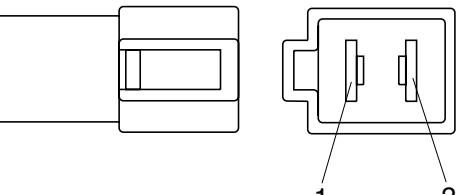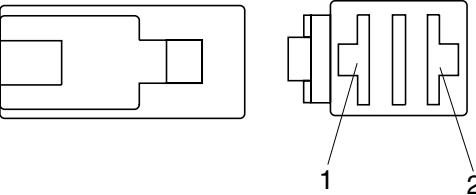
5) 375 FASTEN TYPE CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
2	  S810-002402	  S810-102402

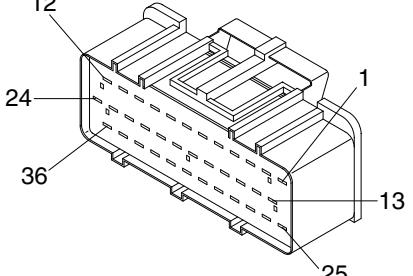
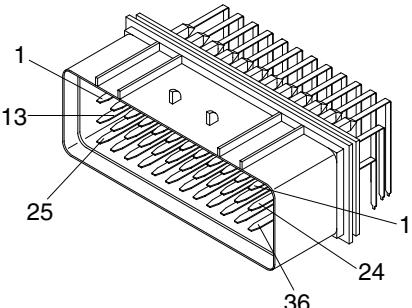
6) AMP ECONOSEAL CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
36	 344111-1	 344108-1


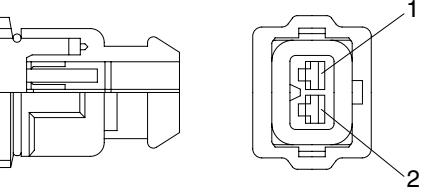
7) AMP TIMER CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
2	 85202-1	

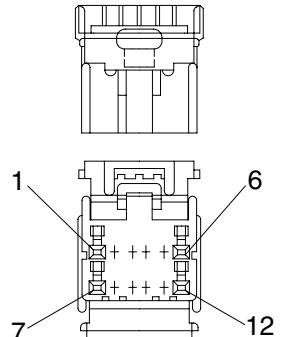
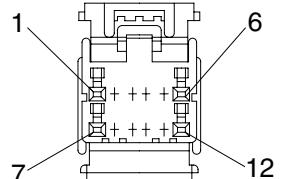
8) AMP 040 MULTILOCK CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
12	  174045-2	

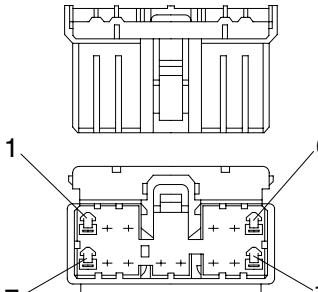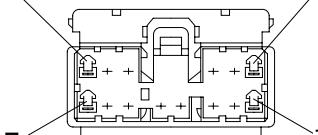
9) AMP 070 MULTILOCK CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
14	  173852	

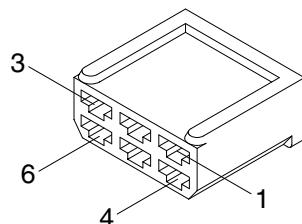
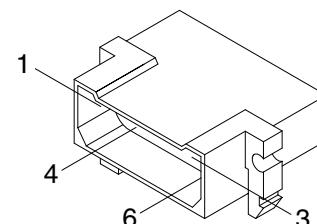
10) AMP FASTIN - FASTON CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
6	  925276-0	  480003-9

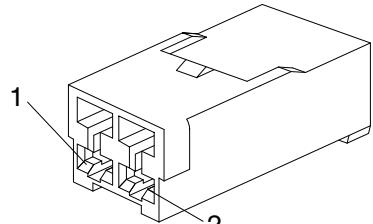
11) KET 090 CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
2	 MG610070	

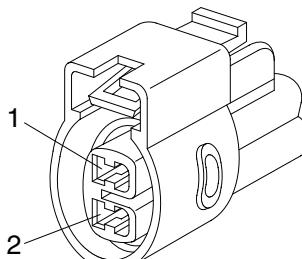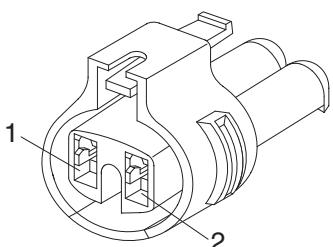12) KET 090 WP CONNECTORS

No. of pin	Receptacle connector (female)	Plug connector (male)
2	 MG640605	
2	 MG640795	

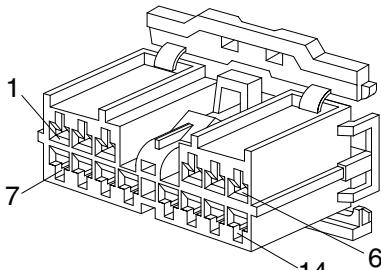13) KET SDL CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
14	 MG610406	

14) DEUTSCH DT CONNECTORS

DT_06 - 3S - ★★★★

Modifications (See below)

Number of contacts (P : Pin, S : Socket)

04 : Receptacle, 06 : Plug

Deutsch connectors

* Modification

E003 : Standard end cap - gray













E004 : Color of connector to be black













E005 : Combination - E004 & E003

EP04 : End cap


EP06 : Combination P012 & EP04

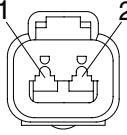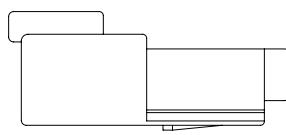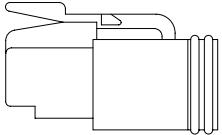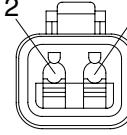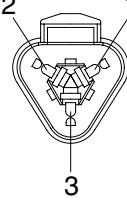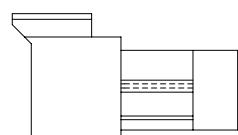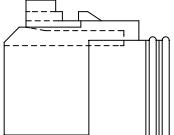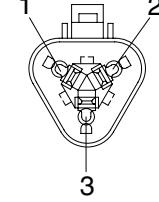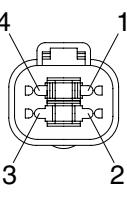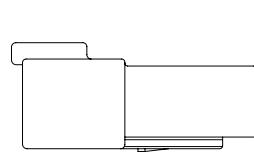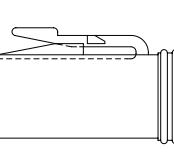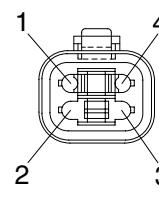P012 : Front seal enhancement - connectors color to black for 2, 3, 4 & 6pin


No. of pin	Receptacle connector (female)	Plug connector (male)
2	 	 
3	 	 
4	 	 

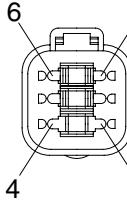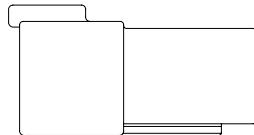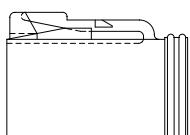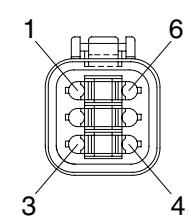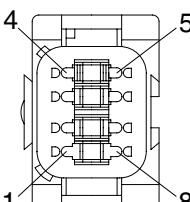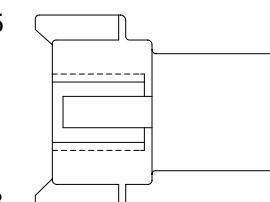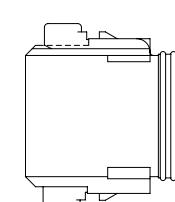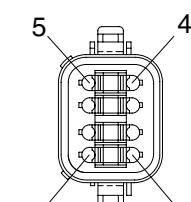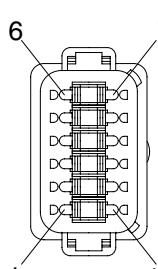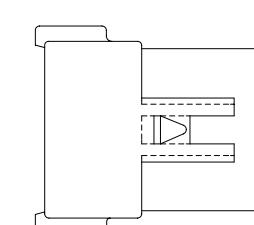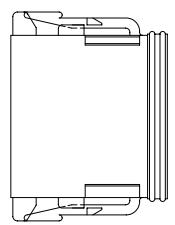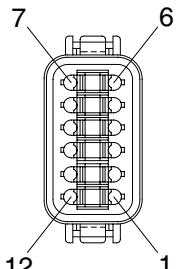No. of pin	Receptacle connector (female)	Plug connector (male)
6	 	 
8	 	 
12	 	 

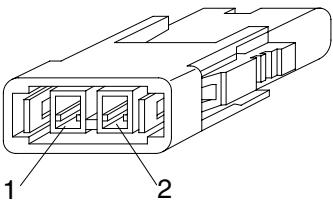
15) MOLEX 2CKTS CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
2	 35215-0200	

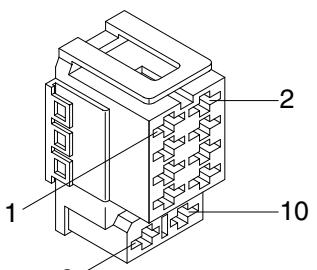16) ITT SWF CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
10	 SWF593757	

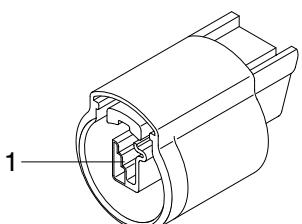17) MWP NMWP CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
1	 NMWP01F-B	