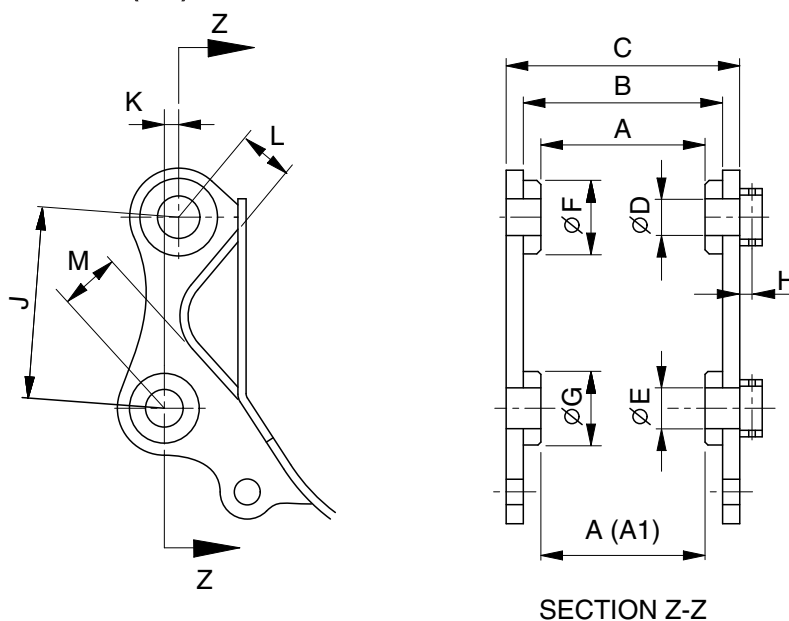
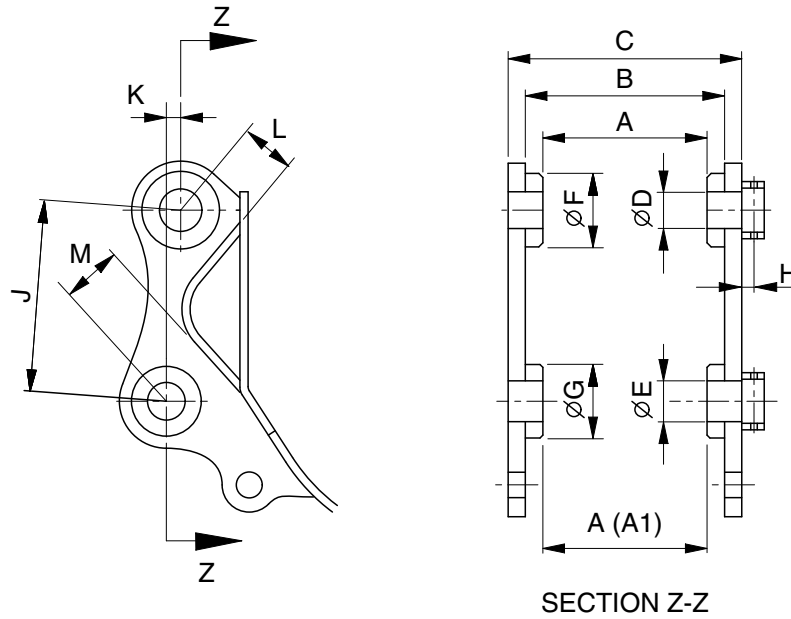


2. Mounting Lug and Bucket (1/5)

Unit : mm
inch

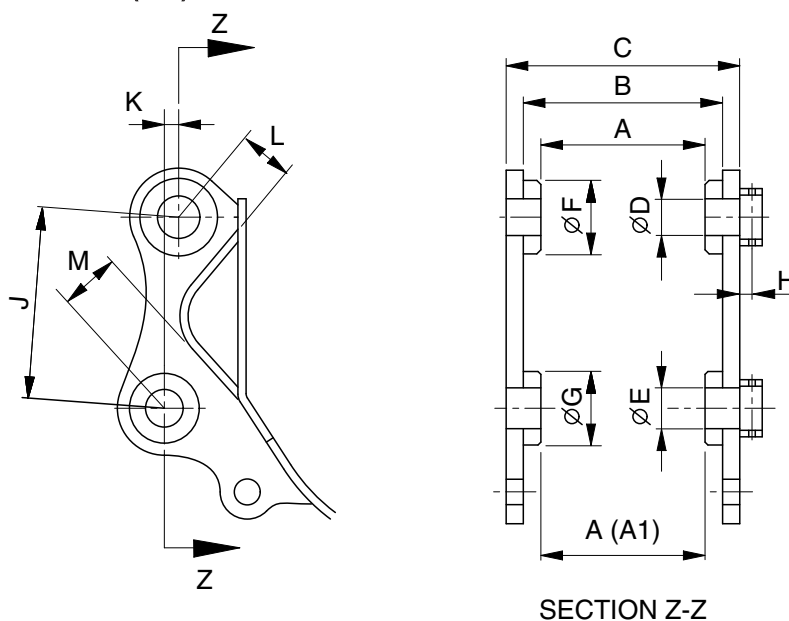
Model	A (A1)	B	C	J	K	L	M	ØD	ØE	ØF	ØG	H
R16-9 R18-9, R18-9AK	119	167	185	140	27	45	51	30	30	70	70	16
	4.69	6.57	7.28	5.51	1.06	1.77	2.01	1.18	1.18	2.76	2.76	0.63
R17Z-9A	119	167	185	140	27	44	50	30	30	70	70	16
	4.69	6.57	7.28	5.51	1.06	1.73	1.97	1.18	1.18	2.76	2.76	0.63
HX17A Z, HX19A	119	165	185	140	27	55.8	68.2	30	30	70	70	16
	4.69	6.50	7.28	5.51	1.06	2.20	2.69	1.18	1.18	2.76	2.76	0.63
R25Z-9A, R25Z-9AK	137	169	193	180	0	59	50	35	35	80	80	16
	5.39	6.65	7.60	7.09	0.00	2.32	1.97	1.38	1.38	3.15	3.15	0.63
R27Z-9, R30Z-9AK	135	169	193	180	0	59	51	35	35	80	80	16
	5.31	6.65	7.60	7.09	0.00	2.32	2.01	1.38	1.38	3.15	3.15	0.63
HX25,30AZ	135	169	193	180	0	67.33	48.6	35	35	80	80	16
	5.31	6.65	7.60	7.09	0.00	2.65	1.91	1.38	1.38	3.15	3.15	0.63
R35Z-9, R35Z-9A	135	183	207	200	20	75	58	40	40	80	80	18
	5.31	7.20	8.15	7.87	0.79	2.95	2.28	1.57	1.57	3.15	3.15	0.71
HX35A Z, HX40A	135	183	207	200	20	75	57.6	40	40	80	80	18
	5.31	7.20	8.15	7.87	0.79	2.95	2.27	1.57	1.57	3.15	3.15	0.71
R55-9, R55W-9, R60CR-9, R60-9S, R60W-9S, HX60, HW60	164	216	246	285	57	49	80	45	45	100	100	18
	6.46	8.50	9.69	11.22	2.24	1.93	3.15	1.77	1.77	3.94	3.94	0.71
HX48A Z, HX55A CR	155	216	246	230	61.1	102.23	96.6	45	45	100	100	18
	6.10	8.50	9.69	9.06	2.41	4.02	3.80	1.77	1.77	3.94	3.94	0.71
R80CR-9	194	252	290	295	52	87	85	55	55	108	108	19
	7.64	10.00	11.50	11.60	2.05	3.23	3.35	2.17	2.17	4.25	4.25	0.75
HX85A	194	252	290	295	52	92	116	55	55	108	108	19
	7.64	9.92	11.42	11.60	2.05	3.62	4.57	2.17	2.17	4.25	4.25	0.75
R125LCR-9A	259	321	365	390	29	120	130	65	65	130	130	19
	10.20	12.64	14.37	15.35	1.14	4.72	5.12	2.56	2.56	5.12	5.12	0.75

2. Mounting Lug and Bucket (2/5)

Unit : mm
inch

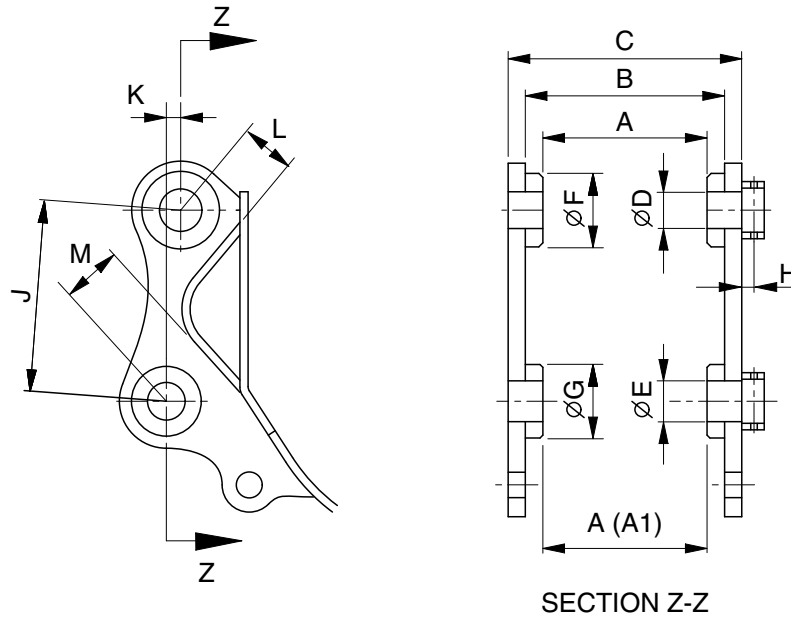
Model	A (A1)	B	C	J	K	L	M	ØD	ØE	ØF	ØG	H
HX130 LCR	259	321	365	390	29	122	132	65	65	130	130	19
	10.20	12.64	14.37	15.35	1.14	4.80	5.20	2.56	2.56	5.12	5.12	0.75
HX130A LCR	259	321	365	390	102.7	122	109	65	65	130	130	19
	10.20	12.64	14.37	15.35	4.04	4.80	4.29	2.56	2.56	5.12	5.12	0.75
R140LC-9, R140LC-9S, R140W-9, R140W-9S, R145CR-9, HX140LT3 (-#0132), HX145CRT3 (-#0246)	259	324	368	390	68	110	108	65	65	130	130	19
	10.20	12.76	14.49	15.35	2.68	4.33	4.25	2.56	2.56	5.12	5.12	0.75
HX140 L, HX140 LC, HW140, HX145 LCR, HW145	259	321	365	390	68	111	109	65	65	130	130	19
	10.20	12.64	14.37	15.35	2.68	4.37	4.29	2.56	2.56	5.12	5.12	0.75
HX140A L (-#0685), HW140A, HX145A LCR (-#0837), HW150A CR, HW155A	259	321	365	390	68	112	110	65	65	130	130	19
	10.20	12.64	14.37	15.35	2.68	4.41	4.33	2.56	2.56	5.12	5.12	0.75
HX140LT3 (#0133-), HX140A L (#0686-), HX145LCRT3 (#0247-), HX145A LCR (#0838-)	260	316	360	408	0	119	102	65	65	140	130	21
	10.24	12.44	14.17	16.06	0.00	4.69	4.02	2.56	2.56	5.51	5.12	0.83
HX140A L (4.10m Boom), HX145A LCR (4.10m Boom)	259	321	365	390	68	112	110	65	65	130	130	19
	10.20	12.64	14.37	15.35	2.68	4.41	4.33	2.56	2.56	5.12	5.12	0.75
R160LC-9, R160LC-9S, R160W- 9A, R170W-9, R170W-9S, R180LC-9, R180LC-9S, R190W-9	307	371	421	410	37	110	120	70	70	140	140	25
	12.09	14.61	16.57	16.14	1.46	4.33	4.72	2.76	2.76	5.51	5.51	0.98
HX160 L, HW160, HX180 L, HW180	307	369	419	410	37	110	120	70	70	140	140	25
	12.09	14.53	16.50	16.14	1.46	4.33	4.72	2.76	2.76	5.51	5.51	0.98
HX160A L, HW160A, HW170A CR, HX180A L	307	369	419	410	37	112	122	70	70	140	140	25
	12.09	14.53	16.50	16.14	1.46	4.41	4.80	2.76	2.76	5.51	5.51	0.98

2. Mounting Lug and Bucket (3/5)

Unit : mm
inch

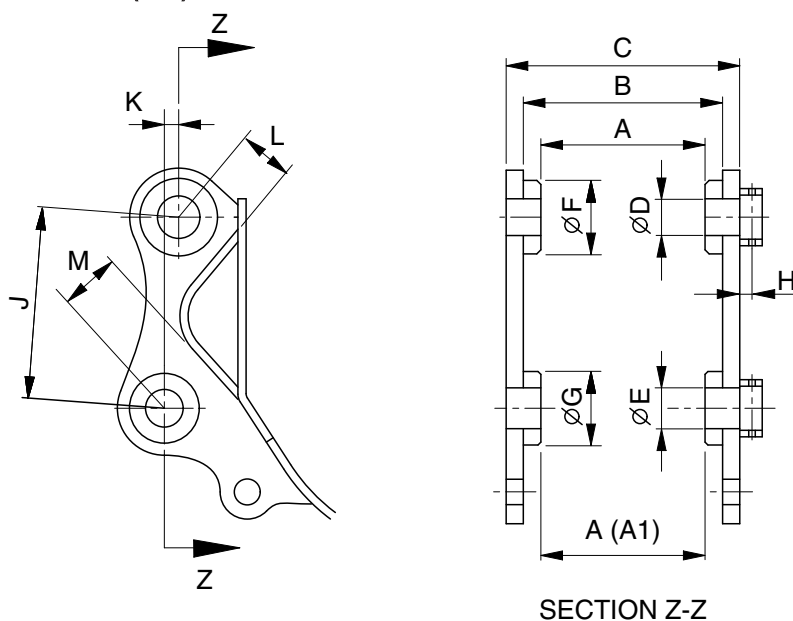
Model	A (A1)	B	C	J	K	L	M	ØD	ØE	ØF	ØG	H
R210LC-9, R210NLC-9, R210W-9, R210W-9S, R220LC-9A, R220LC-9S, R220LC-9SH, R235LCR-9, HX210A L, HX210A NL, HX210S (-#4560), HW210, HW210A, HX220 L, HX220 NL, HX220LT3 (-#0234), HX220A L (-#1079), HX225S L (-#1977), HX235 LCR, HX235LCRT3 (-#0108), HX235A LCR (-#0442)	330	392	442	460	0	120	113	80	80	150	150	25
	12.99	15.43	17.40	18.11	0.00	4.72	4.45	3.15	3.15	5.91	5.91	0.98
HX210S (#4561-), HX220LT3 (#0235-), HX220A L (#1080-), HX225S L (#1978-), HX235LCRT3 (#0109-), HX235A LCR (#0443-)	330	386	436	464	0	108	123	80	80	165	140	21
	12.99	15.20	17.17	18.27	0.00	4.25	4.84	3.15	3.15	6.50	5.51	0.83
LONG REACH R210LC-9, R220LC-9A, R220LC-9S, R220LC-9SH, R290LC-9, R300LC-9A, R300LC-9S, R300LC-9SH, HX210S (-#4560), HX220LT3 (-#0234), HX220A L (-#1079), HX225S L (-#1977), HX300L, HX300LT3, HX300A L, HX300S L	259	321	365	390	68	112	108	65	65	125	125	19
	10.20	12.64	14.37	15.35	2.68	4.41	4.25	2.56	2.56	4.92	4.92	0.75
LONG REACH HX210S (#4561-), HX220LT3 (#0235-), HX220A L (#1080-), HX225S L (#1978-)	260	316	360	408	0	119	102	65	65	140	130	21
	10.24	12.44	14.17	16.06	0.00	4.69	4.02	2.56	2.56	5.51	5.12	0.83
HX220RB	330	392	442	464	32	103	120	80	80	150	150	25
	12.99	15.43	17.40	18.27	1.26	4.07	4.73	3.15	3.15	5.91	5.91	0.98

2. Mounting Lug and Bucket (4/5)

Unit : mm
inch

Model	A (A1)	B	C	J	K	L	M	ØD	ØE	ØF	ØG	H
R250LC-9, R260LC-9A, R260LC-9S, HX260 L, HX260LT3, HX260A L	399	461	525	510	37	129	122	90	90	170	170	25
	15.71	18.15	20.67	20.08	1.46	5.08	4.80	3.54	3.54	6.69	6.69	0.98
R290LC-9, R300LC-9A, R300LC-9S, R300LC-9SH, HX300 L, HX300LT3 (-#0180), HX300A L (-#1618), HX300S L (-#1896)	399	461	525	510	37	129	122	90	90	170	170	25
	15.71	18.15	20.67	20.08	1.46	5.08	4.80	3.54	3.54	6.69	6.69	0.98
HX300LT3 (#0181-), HX300A L (#1619-), HX300S L (#1897-)	394	448	512	512	0	119	135	90	90	180	160	21
	15.51	17.64	20.16	20.16	0.00	4.69	5.31	3.54	3.54	7.09	6.30	0.83
HX300RB	394	461	525	512	37	129	122	90	90	170	170	25
	15.51	18.15	20.67	20.16	1.46	5.08	4.80	3.54	3.54	6.69	6.69	0.98
R320LC-9, R330LC-9A, R330LC-9S, R330LC-9SH, R350LC-9, HX330 L, HX330A L, HX330S L, HX340S L, HX350LT3, HX350A L	430	504	568	550	57	134	125	100	100	180	180	30
	16.93	19.84	22.36	21.65	2.24	5.28	4.92	3.94	3.94	7.09	7.09	1.18
HX355ALCR	394	456	512	512	65	115	128	90	90	183	163	21
	15.51	17.95	20.16	20.16	2.56	4.53	5.02	3.54	3.54	7.20	6.42	0.83
R380LC-9, R380LC-9SH, R380LC-9A, HX380 L, HX380A L, HX400LT3	430	492	568	550	47	163	128	100	100	180	180	30
	16.93	19.37	22.36	21.65	1.85	6.42	5.04	3.94	3.94	7.09	7.09	1.18
R430LC-9, R430LC-9SH, HX430 L	430	492	568	550	47	163	128	100	100	180	180	30
	16.93	19.37	22.36	21.65	1.85	6.42	5.04	3.94	3.94	7.09	7.09	1.18
R480LC-9, R480LC-9A, R480LC-9S (-#1075)	430	482	572	577	83	171	188	100	100	208	180	35
	16.93	18.98	22.52	22.72	3.27	6.73	7.40	3.94	3.94	8.19	7.09	1.38
R480LC-9S (#1076-), R520LC-9, R520LC-9A, R520LC-9S, HX480 L, HX480A L (-#0005), HX480S L, HX520 L, HX520A L (-#0024), HX520S L	430	496	572	577	83	171	188	120	120	208	180	35
	16.93	19.53	22.52	22.72	3.27	6.73	7.40	4.72	4.72	8.19	7.09	1.38

2. Mounting Lug and Bucket (5/5)

Unit : mm
inch

Model	A (A1)	B	C	J	K	L	M	ØD	ØE	ØF	ØG	H
HX480A L (#0006-), HX500LT3, HX520LT3, HX520A L (#0025-)	470 (430)	518	594	577	83	171	188	120	120	218	180	35
	18.50 (16.93)	20.39	23.39	22.72	3.27	6.73	7.40	4.72	4.72	8.58	7.09	1.38
R800LC-9, R850LC-9	532	594	714	722	121	173	162	130	130	244	244	0
	20.94	23.39	28.11	28.43	4.76	6.81	6.38	5.12	5.12	9.61	9.61	0.00
LONG REACH R800LC-9, R850LC-9	430	496	572	577	83	171	188	120	120	208	180	35
	16.93	19.53	22.52	22.72	3.27	6.73	7.40	4.72	4.72	8.19	7.09	1.38
HX800AL	500	580	680	633	39	255	199	140.1	140.1	242	242	20
	19.69	22.83	26.77	24.91	1.54	10.04	7.83	5.52	5.52	9.53	9.53	0.79
HX900 L	562	624	744	722	121	212	162	140	140	294	254	0
	22.13	24.57	29.29	28.43	4.76	8.35	6.38	5.51	5.51	11.57	10.00	0.00
HX1000AL	620	700	820	750	47	282	245.9	150	150	270	270	20
	24.41	27.56	32.28	29.52	1.85	11.10	9.68	5.91	5.91	10.63	10.63	0.79
R1200-9, R1250-9	650	712	852	830	139	201	188	160	140	275	248	0
	25.59	28.03	33.54	32.68	5.47	7.91	7.40	6.30	5.51	10.83	9.76	0.00