


## SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device .....	2-1
Group 2 Main Control Valve .....	2-20
Group 3 Swing Device .....	2-51
Group 4 Travel Device .....	2-62
Group 5 RCV Lever .....	2-83
Group 6 RCV Pedal .....	2-90

## GROUP 1 PUMP DEVICE

### 1. STRUCTURE


The pump device consists of main pump, regulator and gear pump.

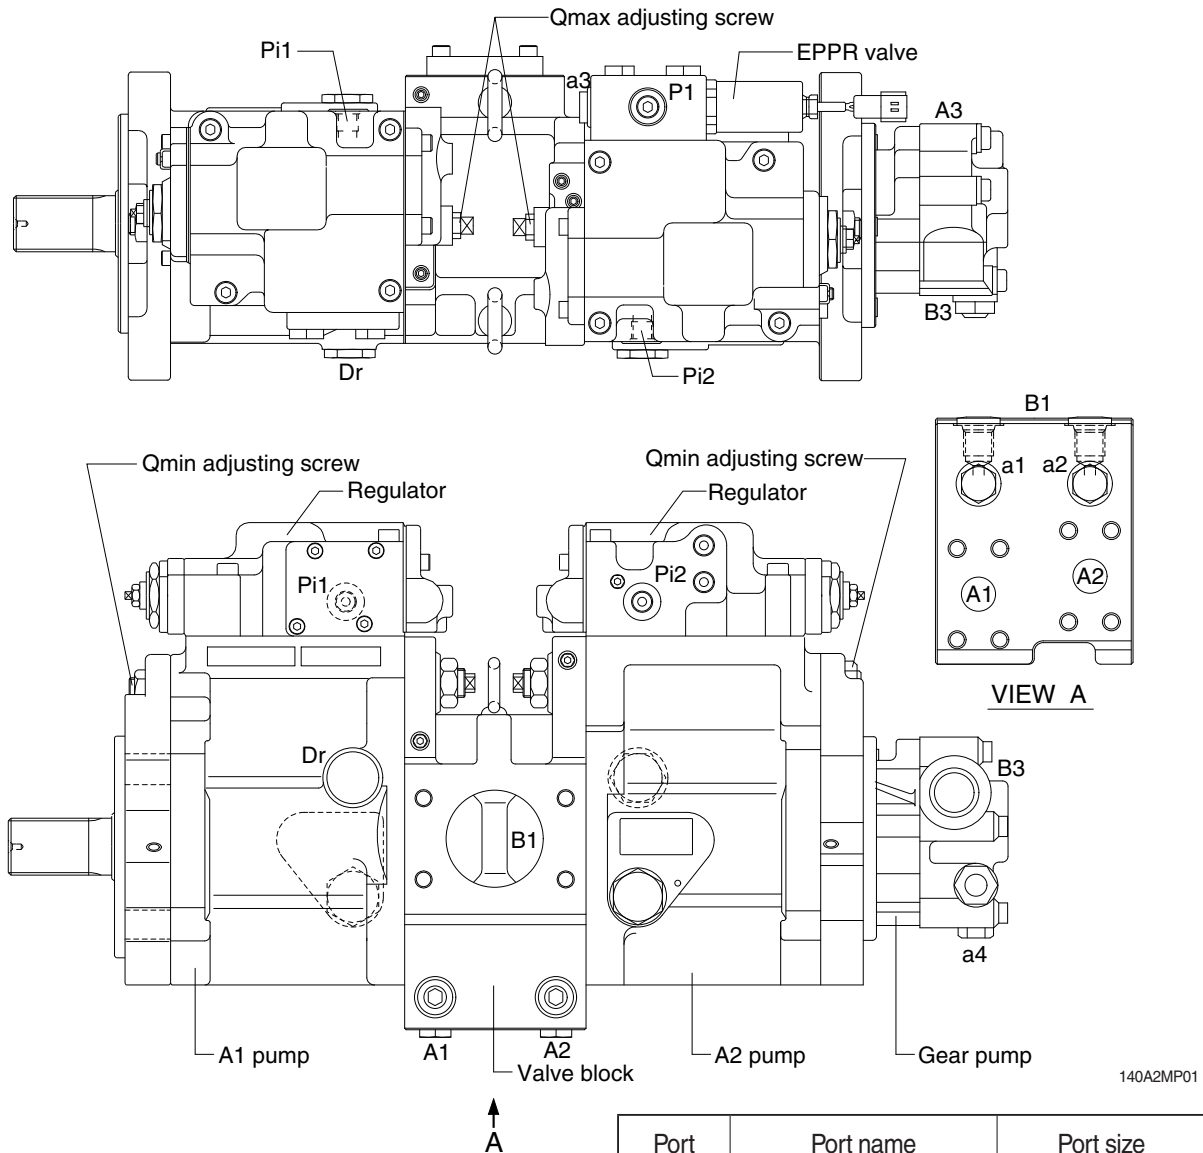

Port	Port name	Port size
A1, A2	Delivery port	SAE 6000 psi 3/4"
B1	Suction port	SAE 2500 psi 2 1/2"
Dr	Drain port	PF 1/2 - 19
Pi1, Pi2	Pilot port	PF 1/4 - 15
P1	EPPR port	PF 1/4 - 13
a1, a2	Gauge port	PF 1/4 - 15
a3	Gauge port	PF 1/4 - 13
a4	Gauge port	PF 1/4-14
A3	Gear pump delivery port	PF 1/2 - 19
B3	Gear pump suction port	PF 3/4 - 20.5

## 1) MAIN PUMP




The main pump consists of two piston pumps (A1 & A2) and valve block.

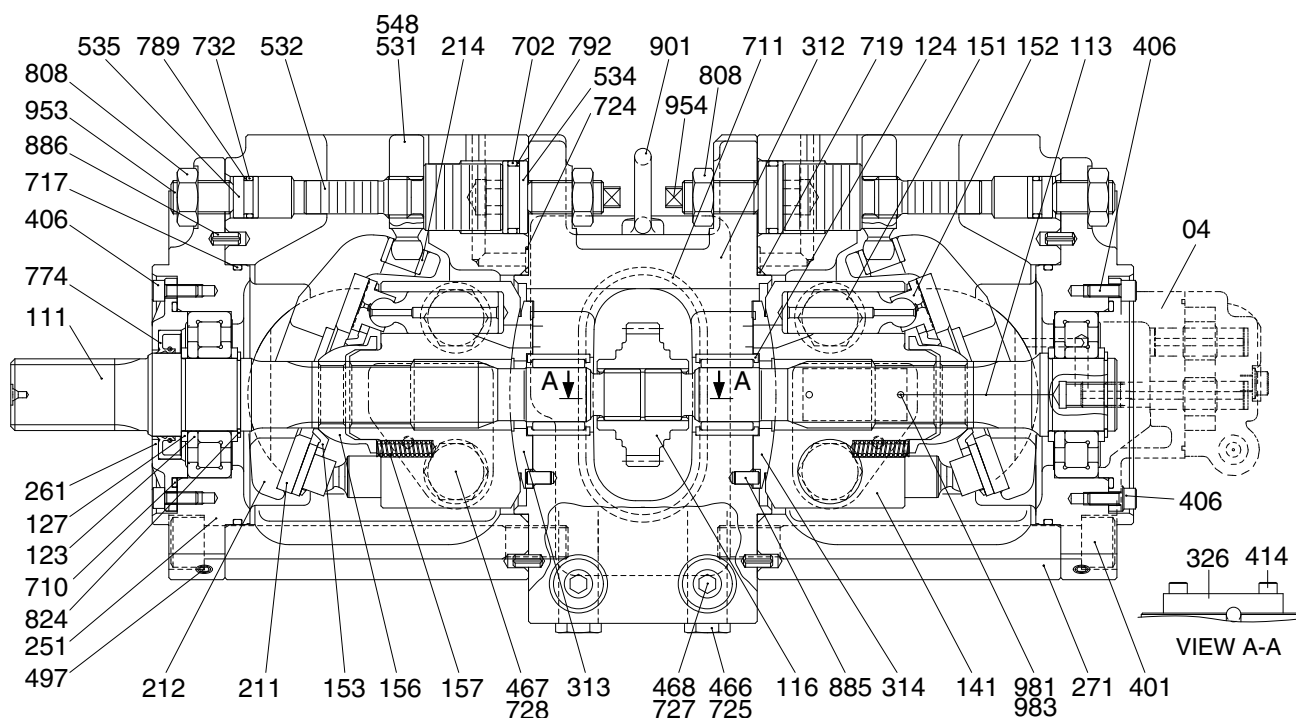


140A2MP02

04	Gear pump	312	Valve block	717	O-ring
111	Drive shaft (F)	313	Valve plate (R)	719	O-ring
113	Drive shaft (R)	314	Valve plate (L)	724	Square ring
116	1st Gear	326	Cover	725	O-ring
123	Roller bearing	401	Hexagon socket bolt	727	O-ring
124	Needle bearing	406	Hexagon socket bolt	728	O-ring
127	Bearing spacer	414	Hexagon socket bolt	732	O-ring
141	Cylinder block	466	Plug	774	Oil seal
151	Piston	467	plug	789	Back up ring
152	Shoe	468	Plug	792	Back up ring
153	Set plate	497	Plug	808	Hexagon head nut
156	Bushing	531	Tilting pin	824	Snap ring
157	Cylinder spring	532	Servo piston	885	Pin
211	Shoe plate	534	Stopper (L)	886	Spring pin
212	Swash plate	535	Stopper (S)	901	Eye bolt
214	Bushing	548	Pin	953	Set screw
251	Support	702	O-ring	954	Set screw
261	Seal cover (F)	710	O-ring	981	Name plate
271	Pump casing	711	O-ring	983	Pin

## 2) REGULATOR (1/2)

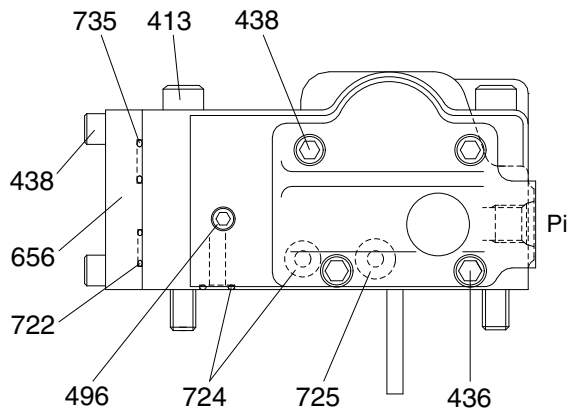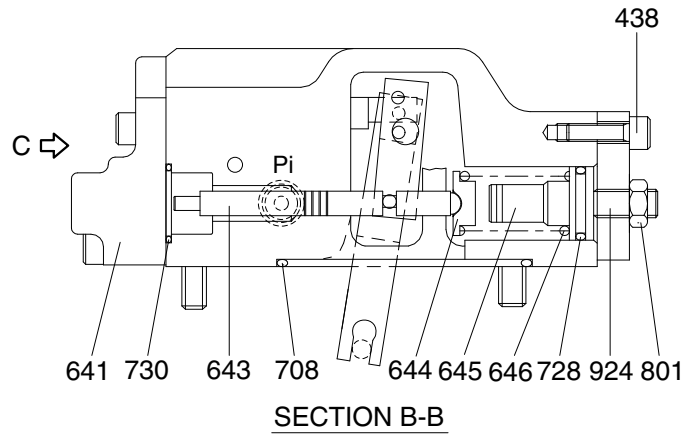
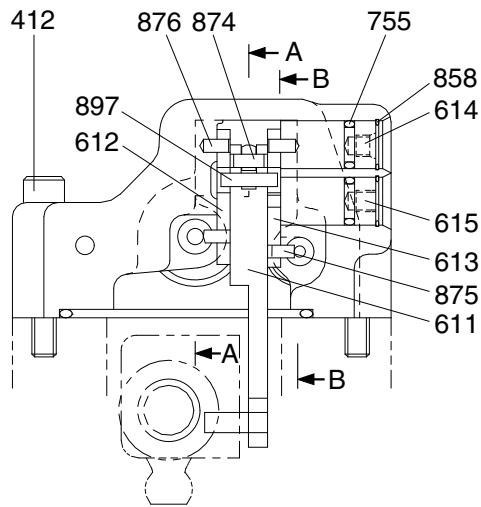


**VIEW C (FRONT)**

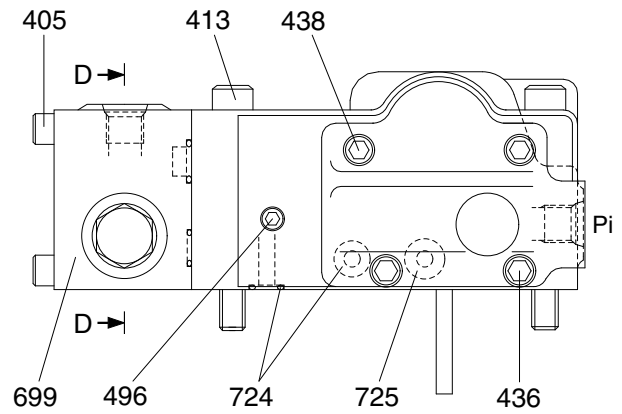


**VIEW C (REAR)**

140A2MP04

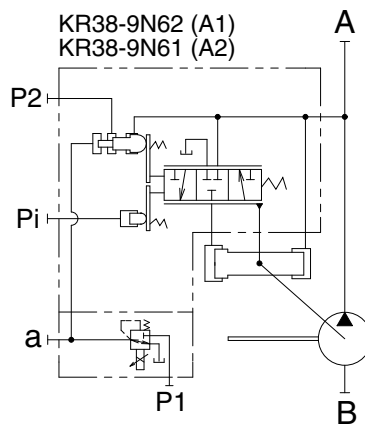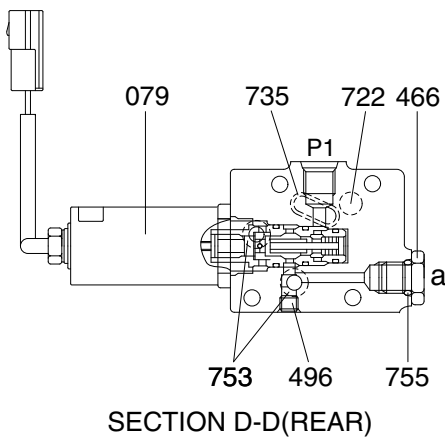

Port	Port name	Port size
A	Delivery port	SAE 6000 psi 3/4"
B	Suction port	SAE 2500 psi 2 1/2"
Pi	Pilot port	PF 1/4-15

## REGULATOR (2/2)


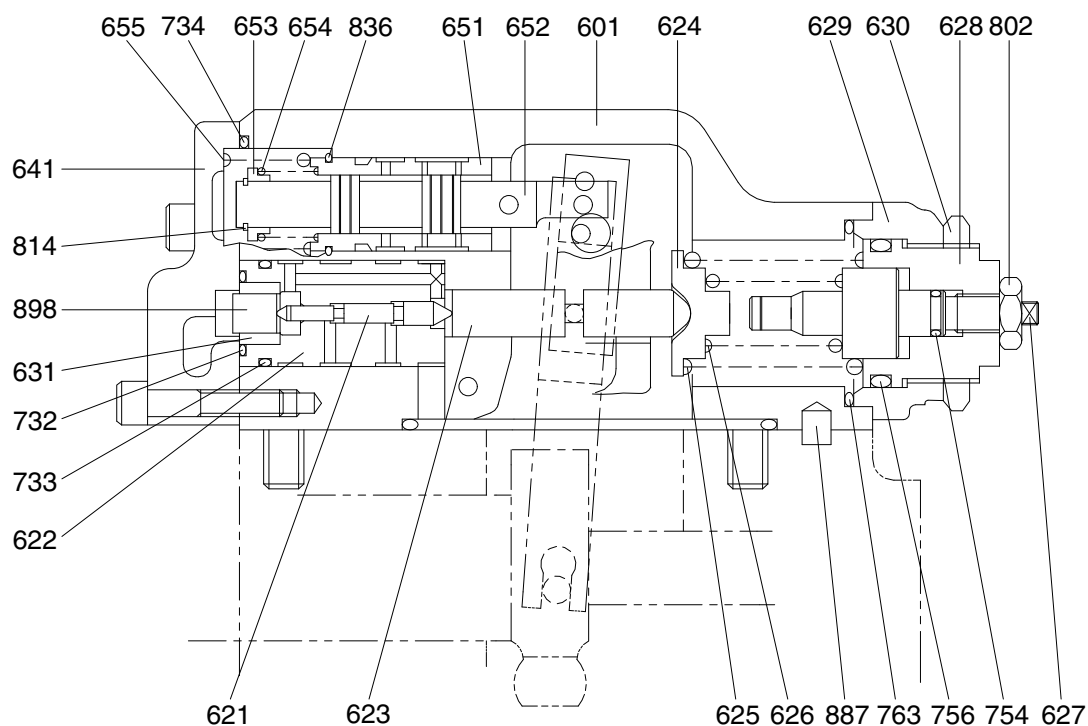


SECTION A-A

14W92MP05

079	EPPR valve assembly	629	Cover (C)	733	O-ring
405	Hexagon socket screw	630	Lock nut	734	O-ring
412	Hexagon socket screw	631	Sleeve, Pf	735	O-ring
413	Hexagon socket screw	641	Pilot cover	753	O-ring
436	Hexagon socket screw	643	Pilot piston	754	O-ring
438	Hexagon socket screw	644	Spring seat (Q)	755	O-ring
466	Plug	645	Adjust stem (Q)	756	O-ring
496	Plug	646	Pilot spring	763	O-ring
601	Casing	651	Sleeve	801	Lock nut
611	Feed back lever	652	Spool	802	Lock nut
612	Lever (1)	653	Spring seat	814	Snap ring
613	Lever (2)	654	Return spring	836	Snap ring
614	Center plug	655	Set spring	858	Snap ring
615	Adjust plug	656	Block cover	874	Pin
621	Compensator piston	699	Valve casing	875	Pin
622	Piston case	708	O-ring	876	Pin
623	Compensator rod	722	O-ring	887	Pin
624	Spring seat (C)	724	O-ring	897	Pin
625	Outer spring	725	O-ring	898	Pin
626	Inner spring	728	O-ring	924	Set screw
627	Adjust stem (C)	730	O-ring		
628	Adjust screw (C)	732	O-ring		

### 3) GEAR PUMP

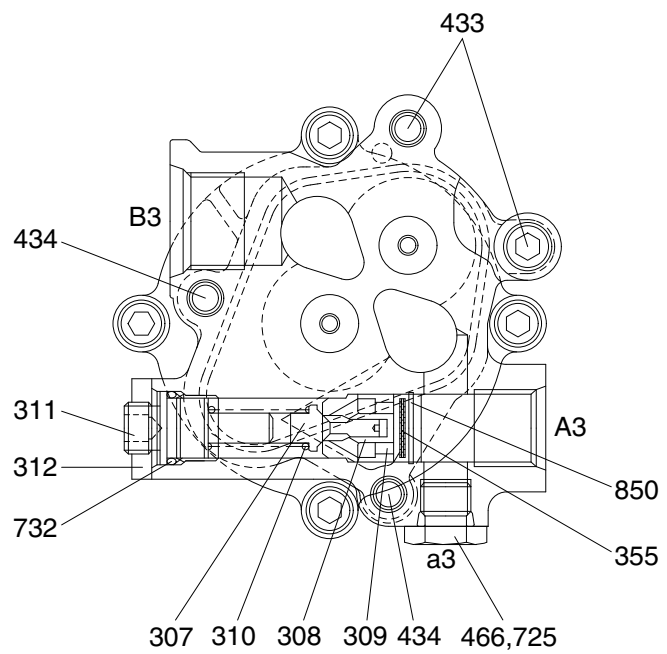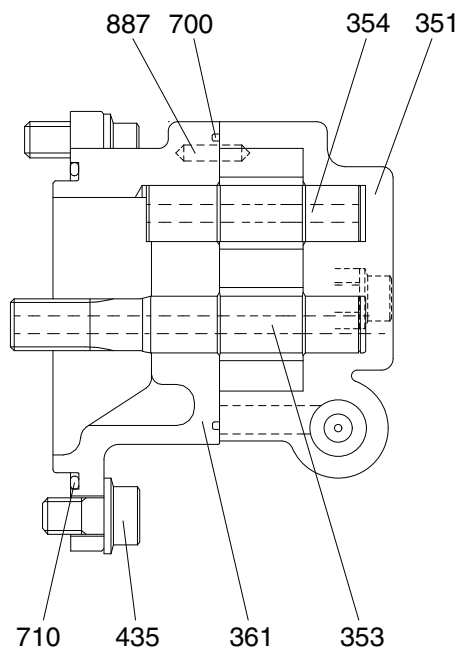


140A2MP06

307 Poppet  
308 Seat  
309 Ring  
310 Spring  
311 Adjusting screw  
312 Lock nut  
351 Gear case

353 Drive gear  
354 Driven gear  
355 Filter  
361 Front case  
433 Flange socket  
434 Flange socket  
435 Flange socket

466 Plug  
700 Ring  
710 O-ring  
725 O-ring  
732 O-ring  
850 Snap ring  
887 Pin

#### 4) EPPR VALVE ASSY

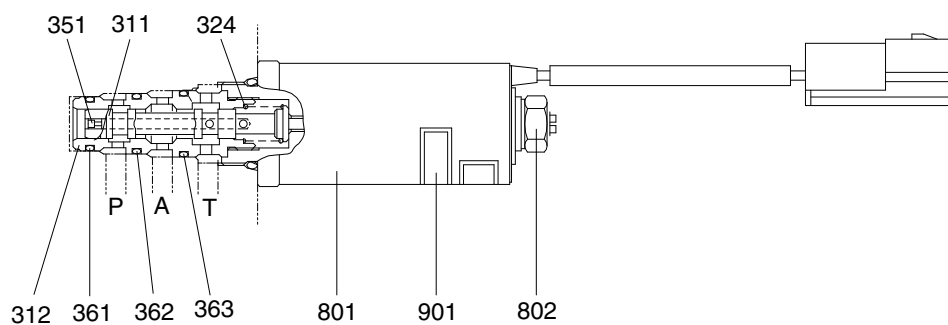

140A2MP08

311	Spool	361	O-ring	802	Hexagon nut
312	Sleeve	362	O-ring	901	Name plate
324	Spring	363	O-ring		
351	Orifice	801	Solenoid		

## 2. FUNCTION


### 1) MAIN PUMP

The pumps may be classified roughly into the rotary group performing a rotary motion and working as the major part of the whole pump function: the swash plate group that varies the delivery rates: and the valve cover group that changes over oil suction and discharge.

#### (1) Rotary group

The rotary group consists of drive shaft (F) (111), cylinder block (141), piston shoes (151,152), set plate (153), spherical bushing (156) and cylinder spring (157). The drive shaft is supported by bearing (123,124) at its both ends.

The shoe is caulked to the piston to form a spherical coupling. It has a pocket to relieve thrust force generated by loading pressure and to take hydraulic balance so that it slides lightly over the shoe plate (211). The sub group composed by a piston and a shoe is pressed against the shoe plate by the action of the cylinder spring via a retainer and a spherical bush. Similarly, the cylinder block is pressed against valve plate (313) by the action of the cylinder spring.

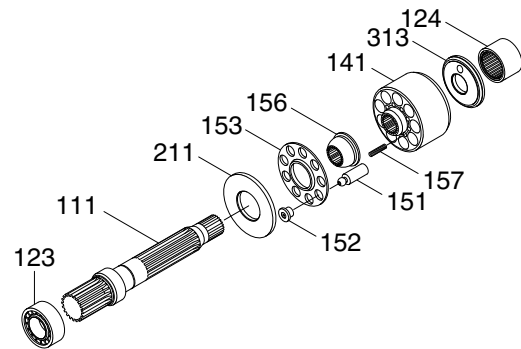


21092MP06

#### (2) Swash plate group

The swash plate group consists of swash plate (212), shoe plate (211), swash plate support (251), tilting bush (214), tilting pin (531) and servo piston (532).

The swash plate is a cylindrical part formed on the opposite side of the sliding surface of the shoe and is supported by the swash support.

If the servo piston moves to the right and left as hydraulic force controlled by the regulator is admitted to hydraulic chamber located on both sides of the servo piston, the swash plate slides over the swash plate support via the spherical part of the tilting pin to change the tilting angle ( $\alpha$ )

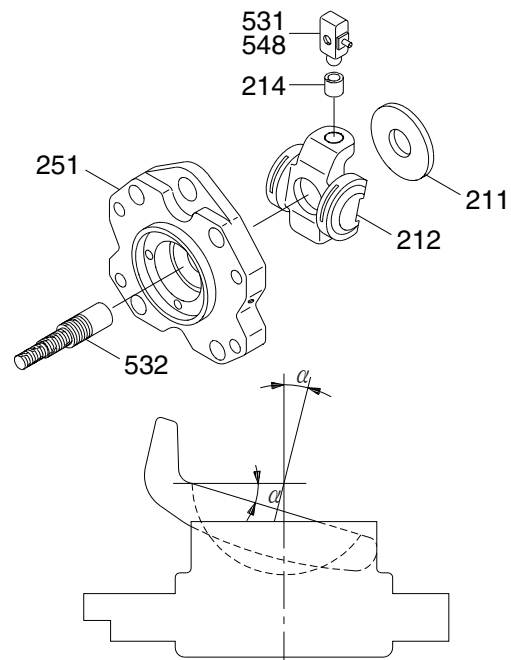

2507A2MP14



### (3) Valve block group


The valve block group consists of valve block (312), valve plate (313) and valve plate pin(885).

The valve plate having two melon-shaped ports is fixed to the valve block and feeds and collects oil to and from the cylinder block.

The oil changed over by the valve plate is connected to an external pipeline by way of the valve block.

Now, if the drive shaft is driven by a prime mover (electric motor, engine, etc), it rotates the cylinder block via a spline linkage at the same time. If the swash plate is tilted as in Fig (previous page) the pistons arranged in the cylinder block make a reciprocating motion with respect to the cylinder block, while they revolve with the cylinder block.

If you pay attention to a single piston, it performs a motion away from the valve plate (oil sucking process) within 180 degrees, and makes a motion towards the valve plate (or oil discharging process) in the rest of 180 degrees. When the swash plate has a tilting angle of zero, the piston makes no stroke and discharges no oil.

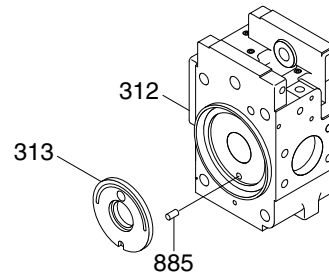

21092MP07

## 2) REGULATOR


Regulator consists of the negative flow control, total horse power control and power shift control function.

### (1) Negative flow control


By changing the pilot pressure  $P_i$ , the pump tilting angle (delivery flow) is regulated arbitrarily, as shown in the figure.

This regulator is of the negative flow control in which the delivery flow  $Q$  decreases as the pilot pressure  $P_i$  rises.

With this mechanism, when the pilot pressure corresponding to the flow required for the work is commanded, the pump discharges the required flow only, and so it does not consume the power uselessly.

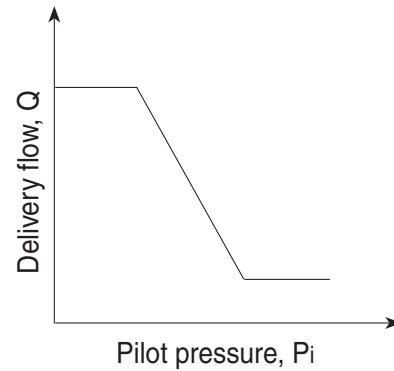

## ① Flow reducing function

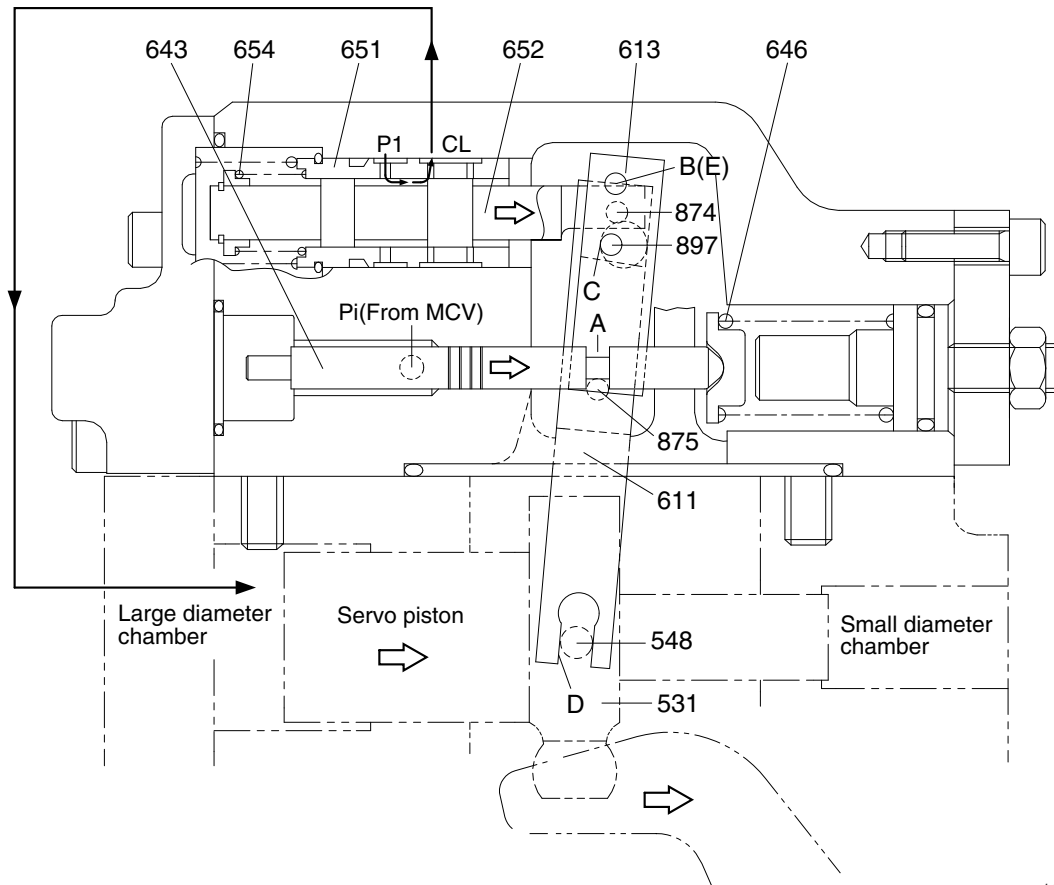

14W92MP12

As the pilot pressure  $P_i$  rises, the pilot piston (643) moves to the right to a position where the force of the pilot spring (646) balances with the hydraulic force.

The groove (A) in the pilot piston is fitted with the pin (875) that is fixed to lever 2 (613). Therefore, when the pilot piston moves, lever 2 rotates around the fulcrum of point B [fixed by the fulcrum plug (614) and pin (875)]. Since the large hole section (C) of lever 2 contains a protruding pin (897) fixed to the feedback lever (611), the pin (897) moves to the right as lever 2 rotates. Since the opposing-flat section (D) of the feedback lever is fitted with the pin (548) fixed by the tilting pin (531) that swings the swash plate, the feedback lever rotates around the fulcrum of point D, as the pin (897) moves.

Since the feedback lever is connected with the spool (652) via the pin (874), the spool moves to the right.

The movement of the spool causes the delivery pressure  $P_1$  to connect to port CL through the spool and to be admitted to the large diameter section of the servo piston. The delivery pressure  $P_1$  that is constantly admitted to the small diameter section of the servo piston moves the servo piston to the right due to the area difference, resulting in decrease of the tilting angle.

When the servo piston moves to the right, point D also moves to the right. The spool is fitted with the return spring (654) and is tensioned to the left at all times, and so the pin (897) is pressed against the large hole section (C) of lever 2.

Therefore, as point D moves, the feedback lever rotates around the fulcrum of point C, and the spool is shifted to the left. This causes the opening between the sleeve (651) and spool (652) to close slowly, and the servo piston comes to a complete stop when it closes completely.

As the pilot pressure  $P_i$  decreases, the pilot piston (643) moves to the left by the action of the pilot spring (646) and causes lever 2 (613) to rotate around the fulcrum of point B. Since the pin (897) is pressed against the large hole section (C) of lever 2 by the action of the return spring (654) via the spool (652), pin (874), and feedback lever (611), the feedback lever rotates around the fulcrum of point D as lever 2 rotates, and shifts the spool to the left. Port CL opens a way to the tank port as the spool moves. This deprives the large diameter section of the servo piston of pressure, and shifts the servo piston to the left by the discharge pressure  $P_1$  in the small diameter section, resulting in an increase in the flow rate.


2-11

### ③ Adjustment of flow control characteristic

The flow control characteristic can be adjusted with the adjusting screw.


Adjust it by loosening the hexagon nut (801) and by tightening (or loosening) the hexagonal socket head screw (924).

Tightening the screw shifts the control chart to the right as shown in the figure.

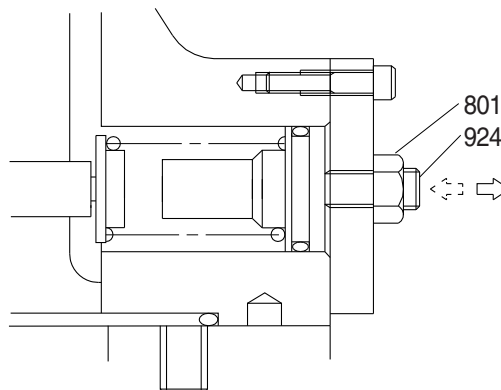

#### ※ Adjusting value

Speed	Adjustment of flow control characteristic		
	Tightening amount of adjusting screw (924)	Flow control starting pressure change amount	Flow change amount
(min <sup>-1</sup> )	(Turn)	(kgf/cm <sup>2</sup> )	(ℓ/min)
1900	+1/4	+1.6	+9

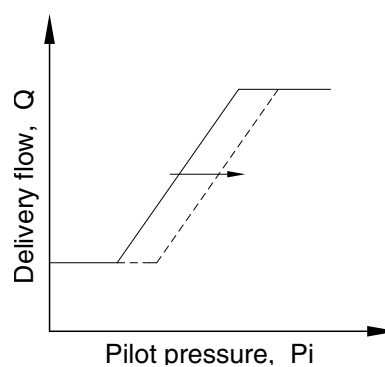

21092MP11

## (2) Total horsepower control

The regulator decreases the pump tilting angle (delivery flow) automatically to limit the input torque within a certain value with a rise in the delivery pressure  $P_1$  of the self pump and the delivery pressure  $P_2$  of the companion pump.


(The input horsepower is constant when the speed is constant.)

Since the regulator is of the simultaneous total horsepower type that operates by the sum of load pressures of the two pumps in the tandem double-pump system, the prime mover is automatically prevented from being overloaded, irrespective of the load condition of the two pumps, when horsepower control is under way.


Since this regulator is of the simultaneous total horsepower type, it controls the tilting angles (displacement volumes) of the two pumps to the same value as represented by the following equation :

$$\begin{aligned} T_{in} &= P_1 \times q/2\pi + P_2 \times q/2\pi \\ &= (P_1 + P_2) \times q/2\pi \end{aligned}$$

The horsepower control function is the same as the flow control function and is summarized in the following. (For detailed behaviors of respective parts, refer to the section of flow control).

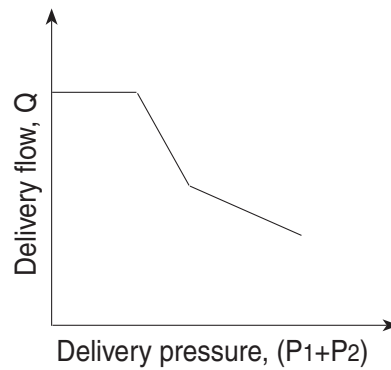

## ① Overload preventive function

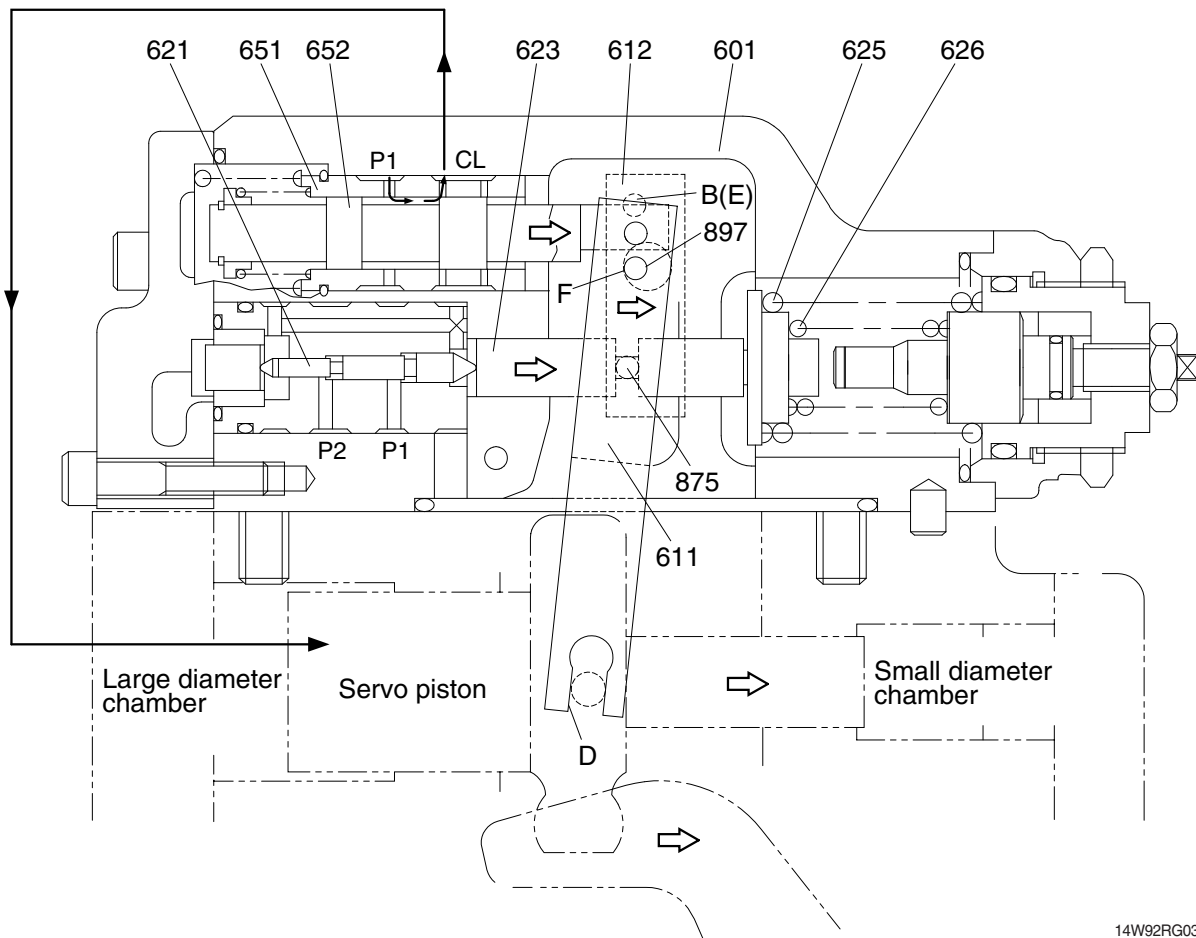


14W92RG03

When the self pump delivery pressure P1 or the companion pump delivery pressure P2 rises, it acts on the stepped part of the compensating piston (621). It presses the compensating rod (623) to the right till the force of the outer spring (625) and inner spring (626) balances with the hydraulic force. The movement of the compensating rod is transmitted to lever 1 (612) via pin (875).

Lever 1 rotates around the pin (875) (E) fixed to the casing (601).

Since the large hole section (F) of lever 1 contains a protruding pin (897) fixed to the feedback lever (611), the feedback lever rotates around the fulcrum of point D as lever 1 rotates, and then the spool (652) is shifted to the right. As the spool moves, the delivery pressure P1 is admitted to the large diameter section of the servo piston via port CL, causes the servo piston move to the right, reduces the pump delivery, flow rate, and prevents the prime mover from being overloaded. The movement of the servo piston is transmitted to the feedback lever via point D. Then the feedback lever rotates around the fulcrum of point F and the spool is shifted to the left. The spool moves till the opening between the spool (652) and sleeve (651) is closed.

## ② Flow reset function

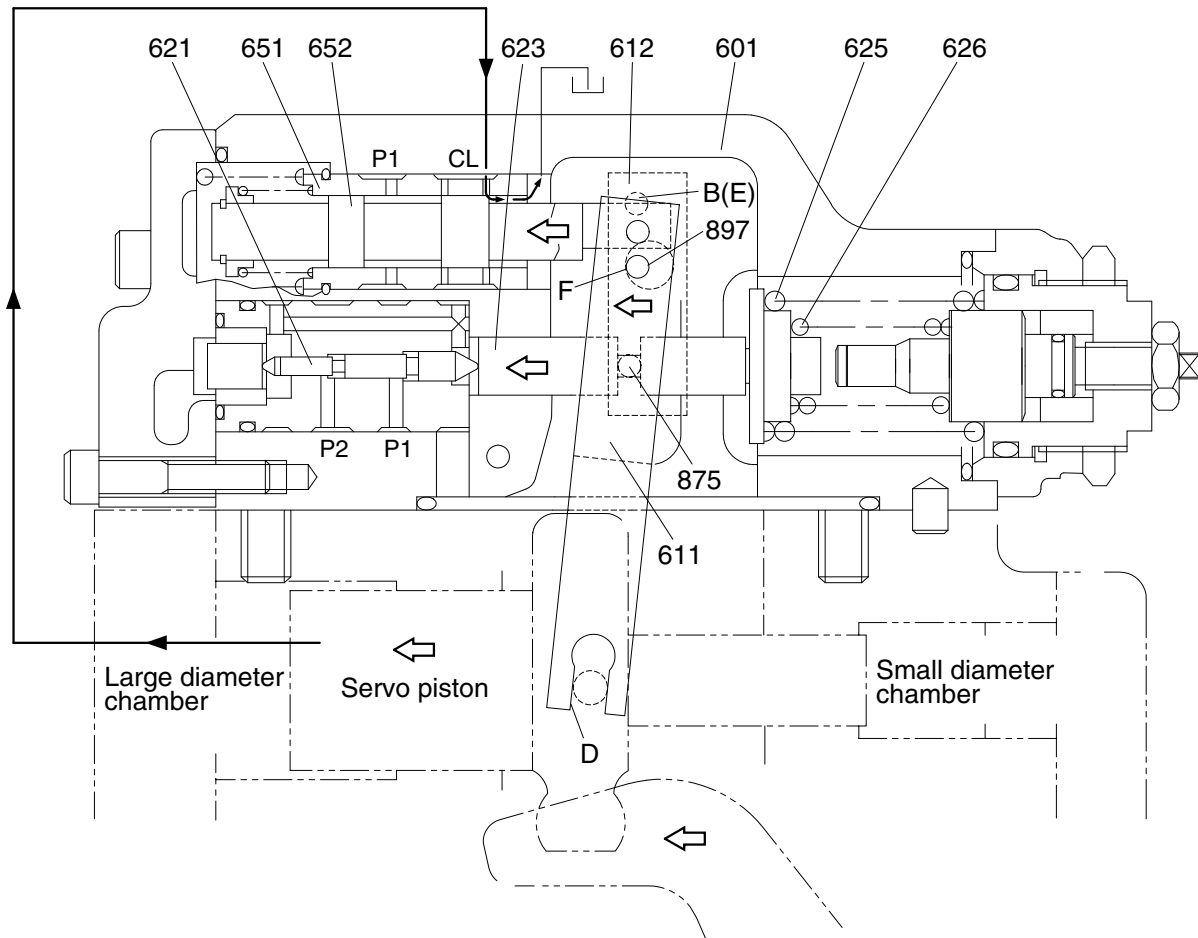

14W92RG04

As the self pump delivery pressure P1 or the companion pump delivery pressure P2 decreases, the compensating rod (623) is pushed back by the action of the springs (625 & 626) to rotate lever 1 (612) around point E. Rotating of lever 1 causes the feedback lever (611) to rotate around the fulcrum of point D and then the spool (652) to move to the left. As a result, port CL opens a way to the tank port.

This causes the servo piston to move to the left and the pump's delivery rate to increase.

The movement of the servo piston is transmitted to the spool by the action of the feedback mechanism to move it till the opening between the spool and sleeve is closed.



### ③ Low tilting angle (low flow) command preferential function

As mentioned above, flow control and horsepower control tilting angle commands are transmitted to the feedback lever and spool via the large-hole sections (C & F) of levers 1 and 2. However, since sections C and F have the pins ( $\varnothing 4$ ) protruding from the large hole ( $\varnothing 8$ ), only the lever lessening the tilting angle contacts the pin (897); the hole ( $\varnothing 8$ ) in the lever of a larger tilting angle command is freed without contacting the pin (897). Such a mechanical selection method permits preference of the lower tilting angle command of the flow control and horsepower control.


### ④ Adjustment of input horsepower

Since the regulator is of total cumulative horsepower type, adjust the adjusting screws of both the front and rear pumps, when changing the horsepower set values. The pressure change values by adjustment are based on two pumps pressurized at the same time, and the values will be doubled when only one pump is loaded.

#### a. Adjustment of outer spring

Adjust it by loosening the hexagon nut (630) and by tightening (or loosening) the adjusting screw C (628).


Tightening the screw shifts the control chart to the right and increases the input horsepower as shown in the figure. Since turning the adjusting screw C (628) by N turns changes the setting of the inner spring (626), return the adjusting stem C (627) by  $N \times A$  turns at first. ( $A=1.73$ )

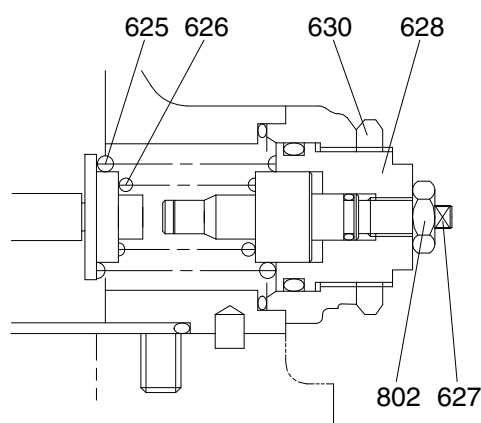

2107A2MP07A

#### ※ Adjusting value

Speed (min <sup>-1</sup> )	Adjustment of input horsepower		
	Tightening amount of adjusting screw (C) (628) (Turn)	Compensating control starting pressure change amount (kgf/cm <sup>2</sup> )	Input torque change amount (kgf · m)
1900	+1/4	+19.2	+3.4

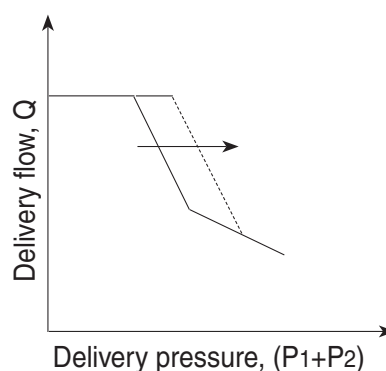



**b. Adjustment of inner spring**

Adjust it by loosening the hexagon nut (802) and by tightening (or loosening) the adjusting stem C (627).

Tightening the screw increases the flow and then the input horsepower as shown in the figure.

※ **Adjusting value**

Speed	Adjustment of input horsepower		
	Tightening amount of adjusting stem (C) (627)	Flow change amount	Input torque change amount
(min <sup>-1</sup> )	(Turn)	(ℓ /min)	(kgf · m)
1900	+1/4	+8.6	+4.3

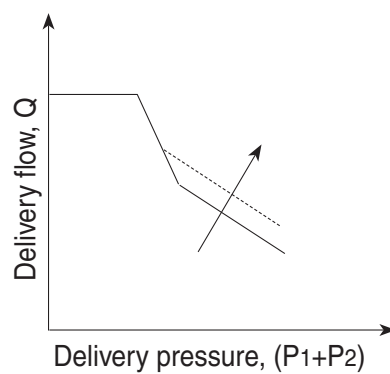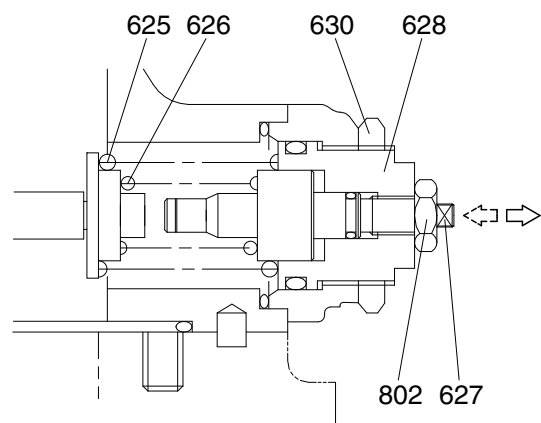

This decreases the pump tilting angle and then the set horsepower in the same way as explained in the overload preventive function of the horsepower control. On the contrary, the set horsepower rises as the power shift pressure  $P_f$  falls.




#### (4) Adjustment of maximum and minimum flows

##### ① Adjustment of maximum flow


Adjust it by loosening the hexagon nut (808) and by tightening (or loosening) the set screw (954).

The maximum flow only is adjusted without changing other control characteristics.

Speed (min <sup>-1</sup> )	Adjustment of max flow	
	Tightening amount of adjusting screw (954) (Turn)	Flow change amount (ℓ/min)
1900	+1/4	-3.0

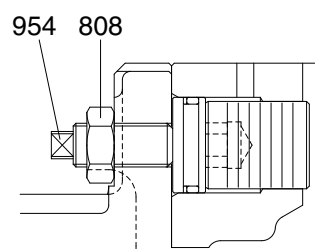

14W92MP23

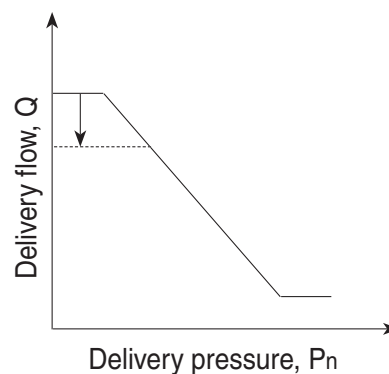


##### ② Adjustment of minimum flow


Adjust it by loosening the hexagon nut (808) and by tightening (or loosening) the hexagonal socket head set screw (953). Similarly to the adjustment of the maximum flow, other characteristics are not changed.

However, remember that, if tightened too much, the required horsepower during the maximum delivery pressure (or during relieving) may increase.

Speed (min <sup>-1</sup> )	Adjustment of min flow	
	Tightening amount of adjusting screw (953) (Turn)	Flow change amount (ℓ/min)
1900	+1/4	+3.0

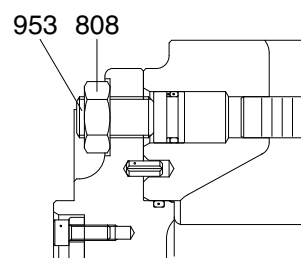


14W92MP24

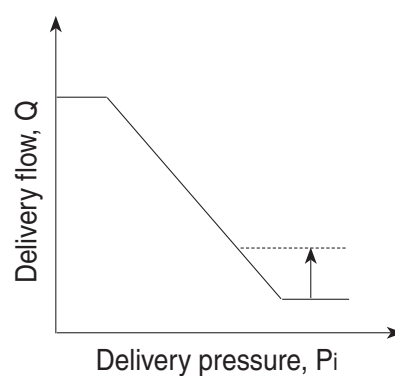

# GROUP 2 MAIN CONTROL VALVE


## 1. STRUCTURE

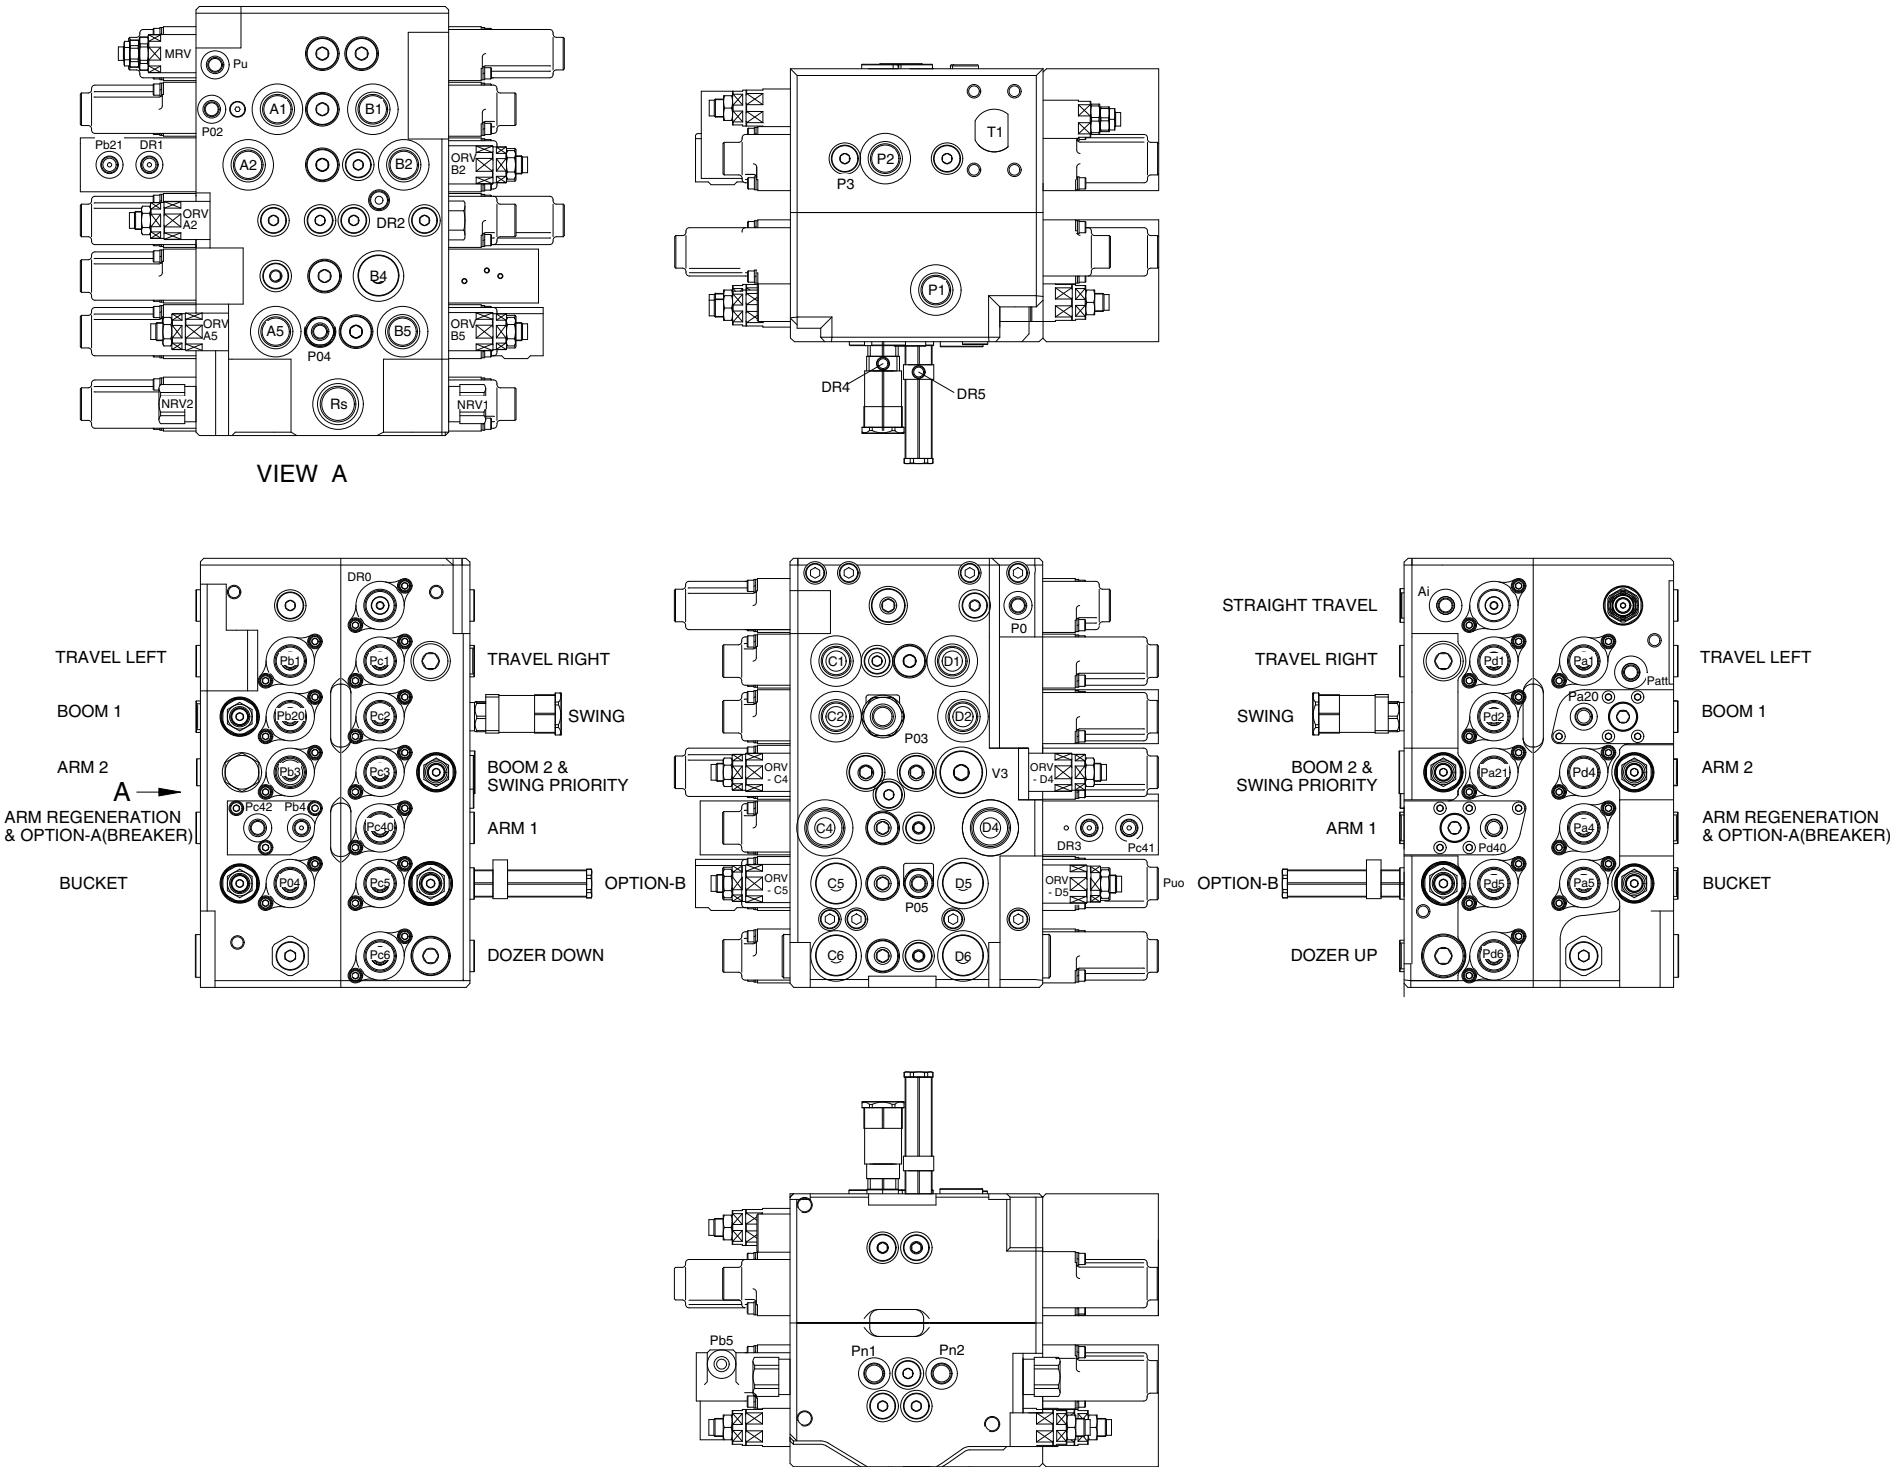

Mark	Port name	Port size	Tightening torque
(Rs)	-	UNF 1 3/16	18 kgf · m (130 lbf · ft)
Pd0	Travel straight pilot port	PF 1/4	3.5~3.9 kgf · m (25.3~28.2 lbf · ft)
Pa1	Travel left pilot port (BW)		
Pb1	Travel left pilot port (FW)		
Pc1	Travel right pilot port (FW)		
Pd1	Travel right pilot port (BW)		
Pa20	Boom up pilot port		
Pa21	Boom up confluence pilot port		
Pb20	Boom down pilot port		
Pb21	Lock valve pilot port (boom)		
Pc2	Swing pilot port (RH)		
Pd2	Swing pilot port (LH)		
Pb3	Arm in confluence pilot port		
Pc3	Swing priority pilot port		
Pa4	Option A pilot port (breaker)		
Pb4	Arm in regeneration cut port		
Pc40	Arm in pilot port		
Pc41	Lock valve pilot port (arm)		
Pc42	Arm in regen-cut signal selector port		
Pd40	Arm out pilot port		
Pd4	Arm out confluence pilot port		
Pa5	Bucket in pilot port		
Pb5	Bucket out pilot port		
Pc5	Option B pilot port		
Pd5	Option B pilot port		
Pc6	Option C pilot port (dozer blade down)		
Pd6	Option C pilot port (dozer blade up)		
(P0)	-	PF 3/8	7~8 kgf · m (50.6~57.8 lbf · ft)
Pu	Main relief pressure up pilot port		
(Ai)	-	PF 3/4	15~18 kgf · m (109~130 lbf · ft)
Patt	Auto idle signal-attachment		
P02	Pilot signal port		
P03	Boom priority pilot port		
P04	Boom parallel orifice pilot port		
P05	Breaker summation pilot port		
DR0	Drain port (travel straight)		
DR1	Drain port (boom holding valve)		
DR2	Drain port (boom 2 & swing priority)		
DR3	Drain port (arm holding valve)		
Pn1	Negative control signal port (P1 port side)		
Pn2	Negative control signal port (P2 port side)		
(P3)	-	PF 1	20~25 kgf · m (115~180 lbf · ft)
A1	Travel motor left side port (BW)		
B1	Travel motor left side port (FW)		
C1	Travel motor right side port (FW)		
D1	Travel motor right side port (BW)		
B2	Boom rod side port		
C2	Swing motor port (RH)		
D2	Swing motor port (LH)		
B4	Option A port (breaker)		
A5	Bucket head side port		
B5	Bucket rod side port		
C5	Option B port		
D5	Option B port		
C6	Option C pilot port (dozer down port)		
D6	Option C pilot port (dozer up port)		
P1	Pump port (A2 pump)	SAE 3000, 1 1/2 (M12 × 1.75)	8.5~11.5 kgf · m (61.5~83.1 lbf · ft)
P2	Pump port (A1 pump)		
A2	Boom head side port	PF 1/8	1.5~1.9 kgf · m (10.8~13.7 lbf · ft)
C4	Arm head side port		
D4	Arm rod side port	PF 1/8	1.5~1.9 kgf · m (10.8~13.7 lbf · ft)
DR4	Drain port (swing logic valve)		
DR5	Drain port (flow summation)		
T1	Return port	SAE 3000, 1 1/2 (M12 × 1.75)	8.5~11.5 kgf · m (61.5~83.1 lbf · ft)

140A2MC01


1) P1 SPOOL SECTION

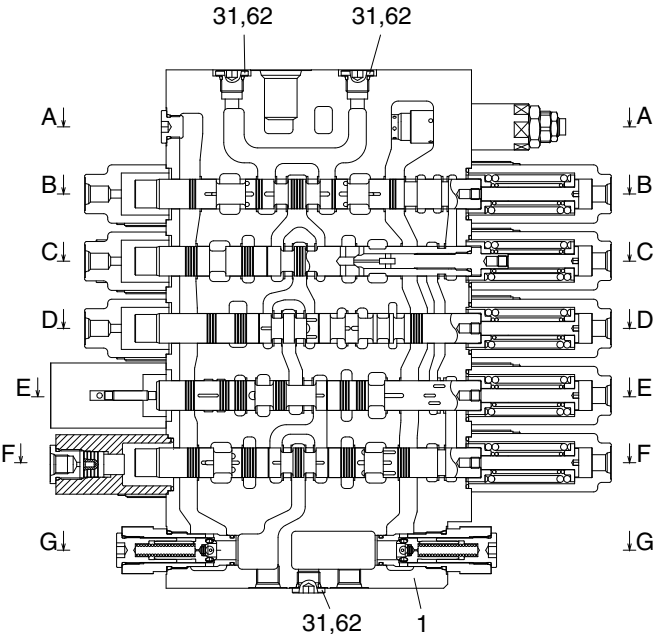

- 1 Housing P1
- 31 Plug
- 62 O-ring

140A2MC02


2) P2 SPOOL SECTION

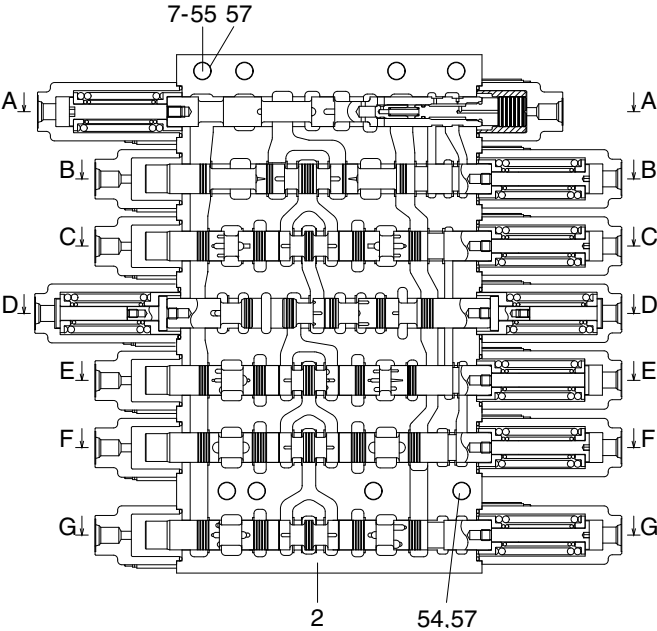

- 2 Housing P2
- 54 Socket bolt
- 55 Socket bolt
- 57 Spring washer

140A2MC03


### 3) STRAIGHT TRAVEL AND SUPPLY SECTION

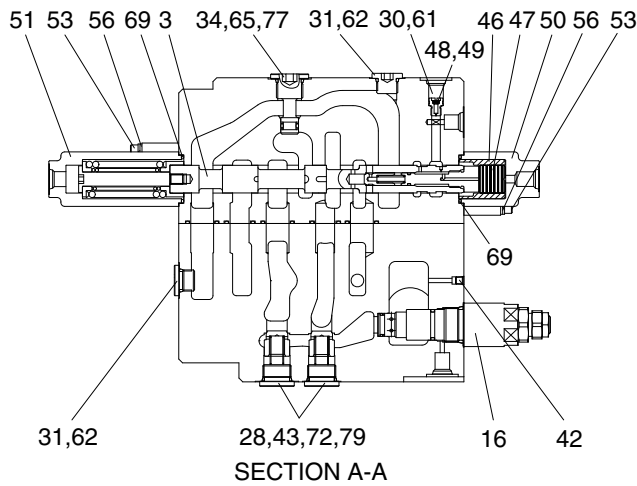

140A2MC04

- 3 Straight travel spool assy
- 16 Main relief valve
- 28 Plug
- 30 Plug
- 31 Plug
- 34 Plug
- 42 Plug
- 43 Poppet
- 46 Sleeve
- 47 Piston
- 48 Signal orifice
- 49 Coin type filter
- 50 Pilot A cap
- 51 Pilot B1 cap
- 53 Socket bolt
- 56 Washer
- 61 O-ring
- 62 O-ring
- 65 O-ring
- 69 O-ring
- 72 O-ring
- 77 Back up ring
- 79 Spring


### 4) TRAVEL RIGHT AND LEFT SECTION

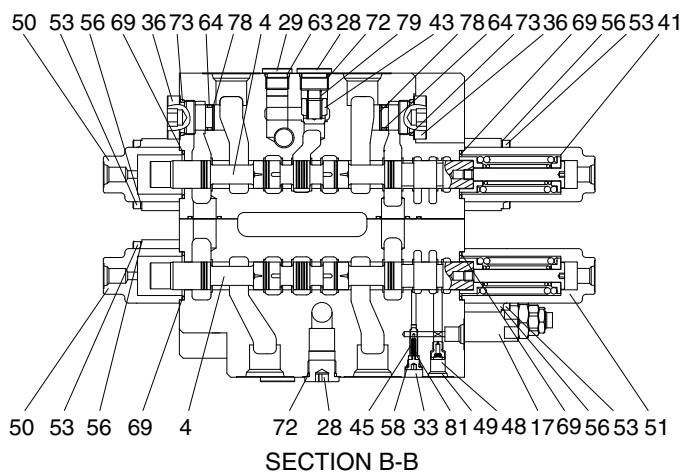

140A2MC05

- 4 Travel spool assy
- 17 Overload relief valve
- 28 Plug
- 29 Plug
- 33 Plug
- 36 Plug
- 42 Plug
- 43 Poppet
- 45 Poppet
- 48 Signal orifice
- 49 Coin type filter
- 50 Pilot A cap
- 53 Socket bolt
- 56 Washer
- 58 O-ring
- 63 O-ring
- 64 O-ring
- 69 O-ring
- 72 O-ring
- 73 O-ring
- 78 Back up ring
- 79 Spring
- 81 Spring


## 5) SWING AND BOOM 1 SECTION

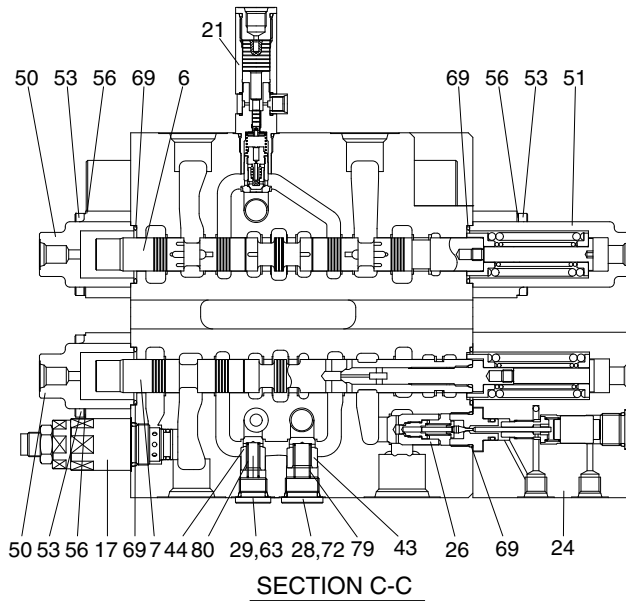

- 6 Swing spool assy
- 7 Boom 1 spool assy
- 17 Overload relief valve
- 21 Swing logic valve
- 24 Holding valve kit A1
- 26 Holding valve kit B
- 28 Plug
- 29 Plug
- 43 Poppet
- 44 Poppet
- 50 Pilot A cap
- 53 Socket bolt
- 56 Washer
- 63 O-ring
- 69 O-ring
- 72 O-ring
- 79 Spring
- 80 Spring

140A2MC06

## 6) SWING PRIORITY AND BOOM 2 AND ARM 2 SECTION

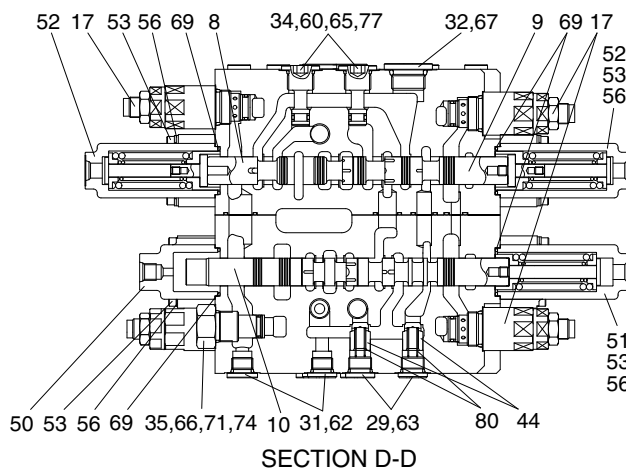


- 8 Swing priority spool assy
- 9 Boom 2 spool assy
- 10 Arm 2 spool assy
- 17 Overload relief valve
- 29 Plug
- 31 Plug
- 32 Plug
- 34 Plug
- 35 Plug
- 44 Poppet
- 50 Pilot A cap
- 51 Pilot B1 cap
- 52 Pilot B2 cap
- 53 Socket bolt
- 56 Washer
- 60 O-ring
- 61 O-ring
- 63 O-ring
- 65 O-ring
- 66 O-ring
- 69 O-ring
- 71 O-ring
- 74 Back up ring
- 77 Back up ring
- 80 Spring

140A2MC07




## 7) ARM 1 AND ARM REGEN/ BREAKER SECTION

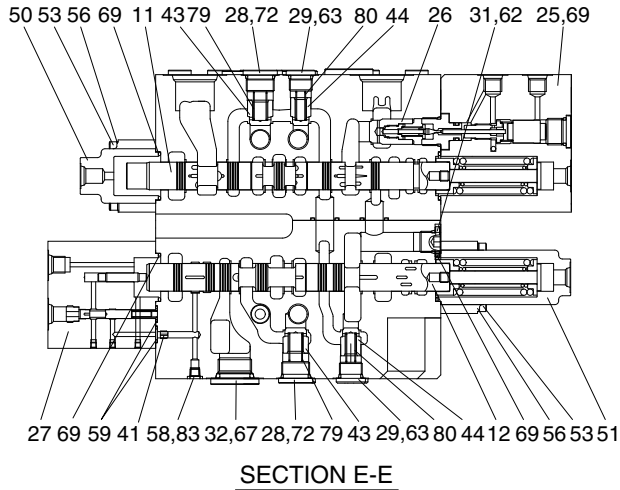

140A2MC08

- 11 Arm 1 spool assy
- 12 Arm regen spool assy
- 25 Holding valve kit A2
- 26 Holding valve kit B
- 27 Regen block assy
- 28 Plug
- 29 Plug
- 31 Plug
- 32 Plug
- 41 Plug
- 43 Poppet
- 44 Poppet
- 50 Pilot A cap
- 53 Socket bolt
- 56 Washer
- 58 O-ring
- 59 O-ring
- 62 O-ring
- 63 O-ring
- 67 O-ring
- 69 O-ring
- 72 O-ring
- 80 Spring
- 81 Spring
- 83 Plug


## 8) OPTION B AND BUCKET SECTION

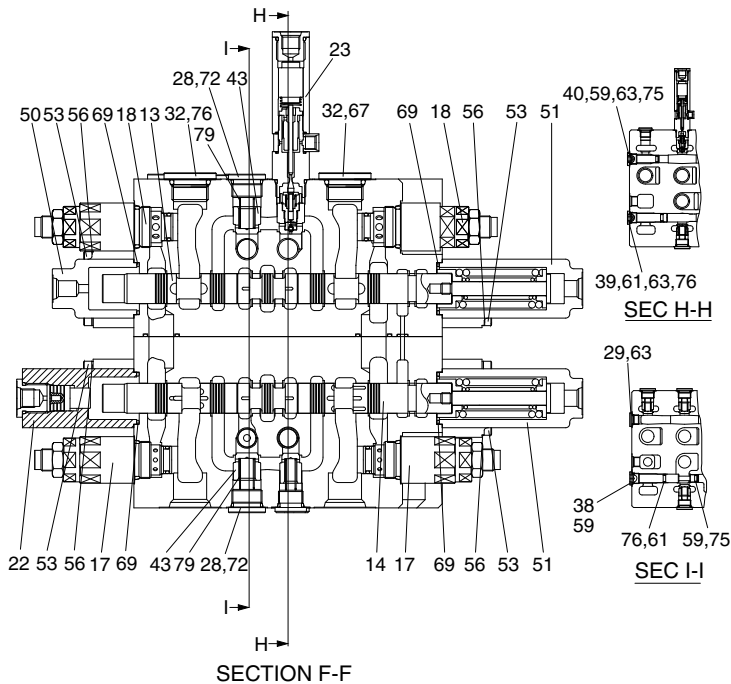

140A2MC09

- 13 Option B spool assy
- 14 Bucket spool assy
- 17 Overload relief valve
- 18 Overload relief valve
- 22 Bucket stroke limiter
- 23 Option ON/OFF valve
- 28 Plug
- 29 Plug
- 32 Plug
- 38 Plug
- 39 Plug
- 40 Plug
- 43 Poppet
- 50 Pilot A cap
- 51 Pilot B1 cap
- 53 Socket bolt
- 56 Washer
- 59 O-ring
- 61 O-ring
- 63 O-ring
- 67 O-ring
- 69 O-ring
- 72 O-ring
- 75 Back up ring
- 76 Back up ring
- 79 Spring


# 9) OPTION C AND NEGATIVE CONTROL SECTION

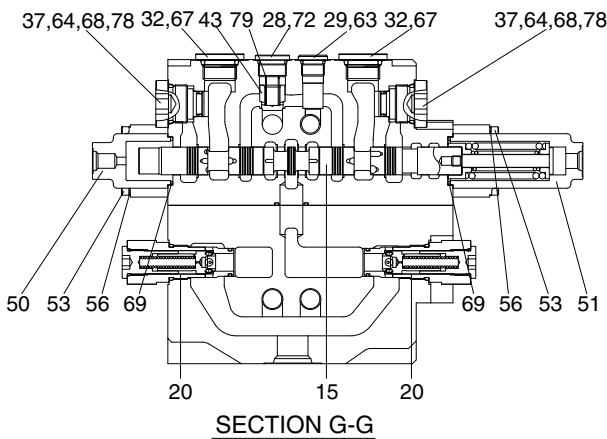

- 15 Option C1 spool assy
- 20 Negacon relief valve
- 28 Plug
- 29 Plug
- 32 Plug
- 37 Plug
- 43 Poppet
- 50 Pilot A cap
- 51 Pilot B1 cap
- 53 Socket bolt
- 56 Washer
- 63 O-ring
- 64 O-ring
- 67 O-ring
- 68 O-ring
- 69 O-ring
- 72 O-ring
- 78 Back up ring
- 79 Spring

140A2MC10

## 2. HYDRAULIC CIRCUIT

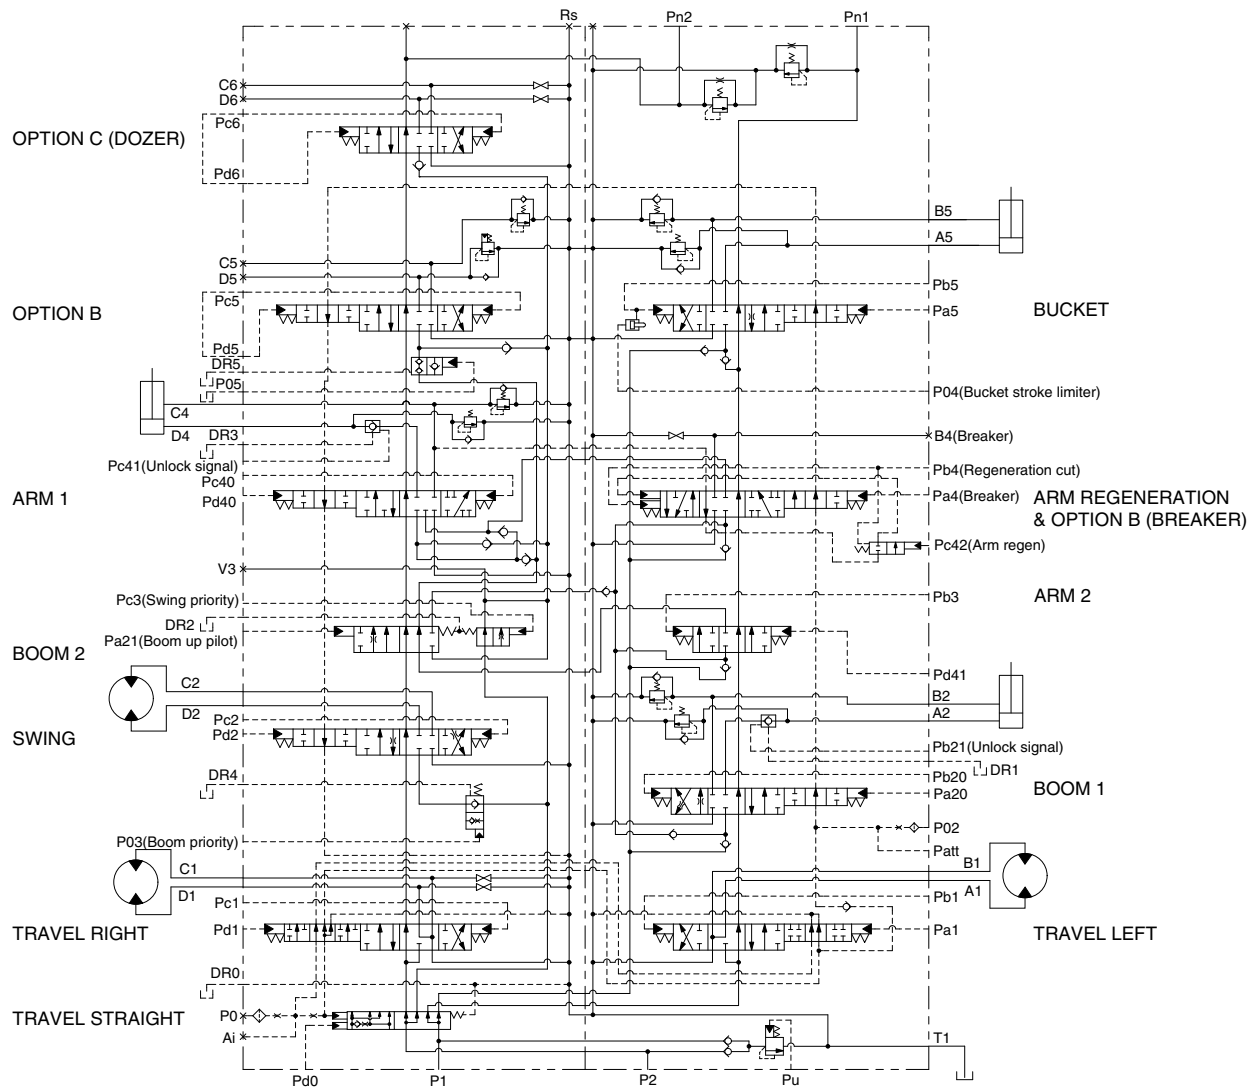

140A2MC11


### 3. FUNCTION

#### 1) CONTROL IN NEUTRAL


##### (1) P1 SIDE

The hydraulic fluid from pump A2 flows into the main control valve through the inlet port "P1", pass the straight travel spool into the P1 bypass passage and P1 parallel passage.

The hydraulic fluid from the pump A2 is directed to the tank through the bypass passage of spools : travel left, boom 1, arm 2, arm regeneration & option A and bucket, the negative relief valve of P1, tank passage, and the tank port "T1"

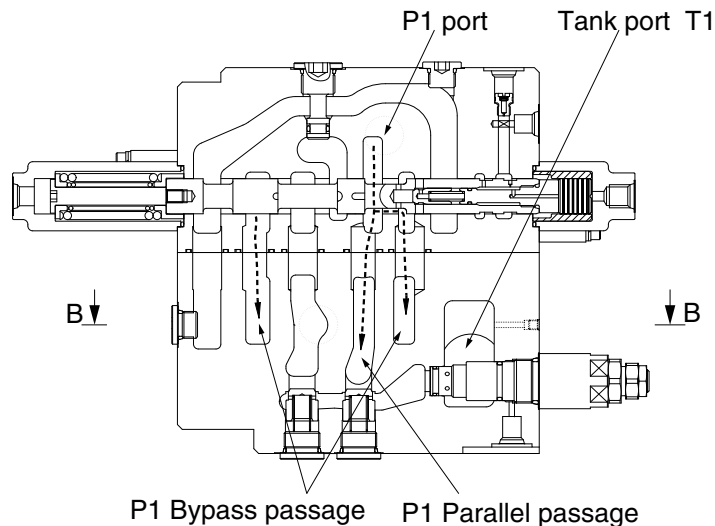

SECTION A-A

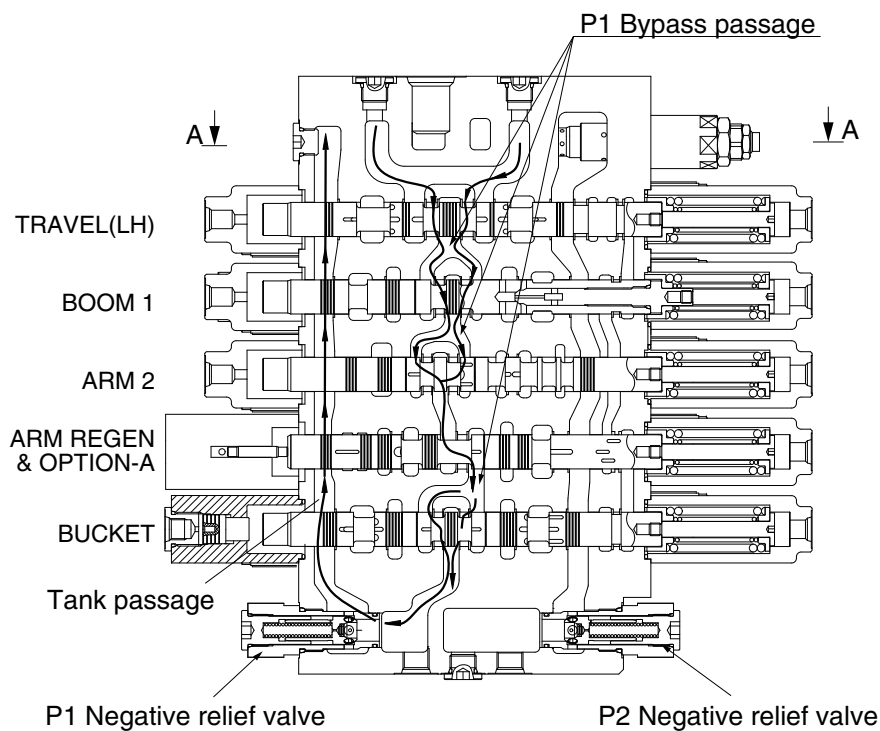


SECTION B-B

140A2MC12


## (2) P2 SIDE

The hydraulic fluid from pump A1 flows into the main control valve through the inlet port "P2", into the P2 bypass passage and P2 parallel passage.

The hydraulic fluid from the pump A1 is directed to the tank through the bypass passage of spools : travel right, swing, boom 2 & swing priority, arm 1, option "B" and option "C" (dozer), the negative relief valve of P2, tank passage and the tank port "T1".

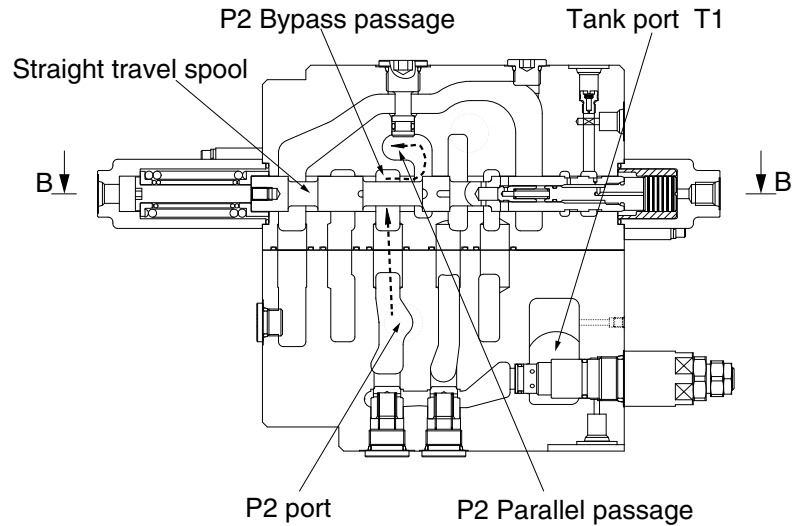

SECTION A-A

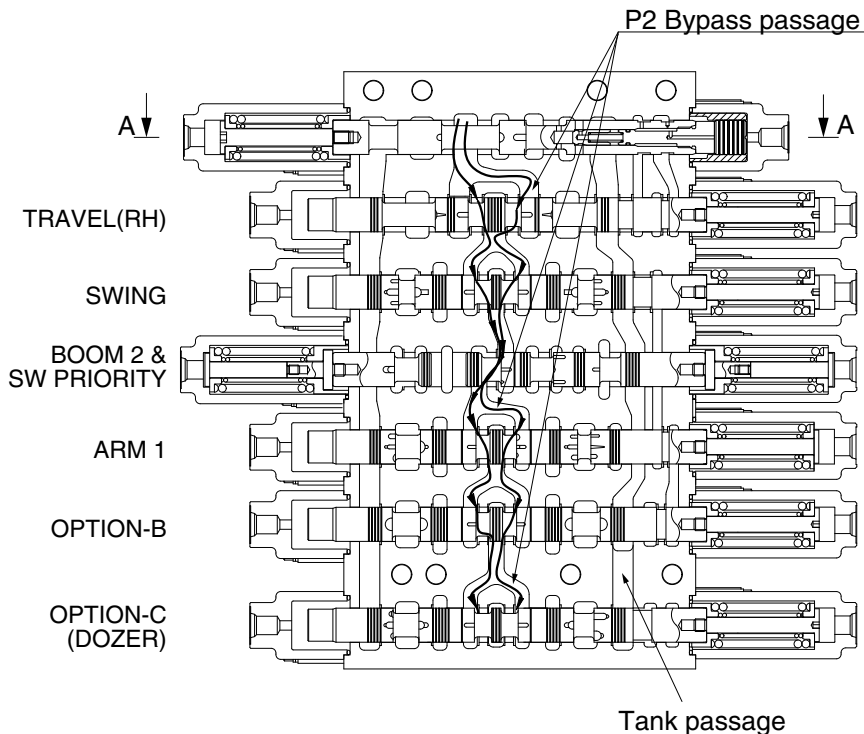


SECTION B-B

140A2MC13


## 2) TRAVEL OPERATION

### (1) TRAVEL FORWARD OPERATION

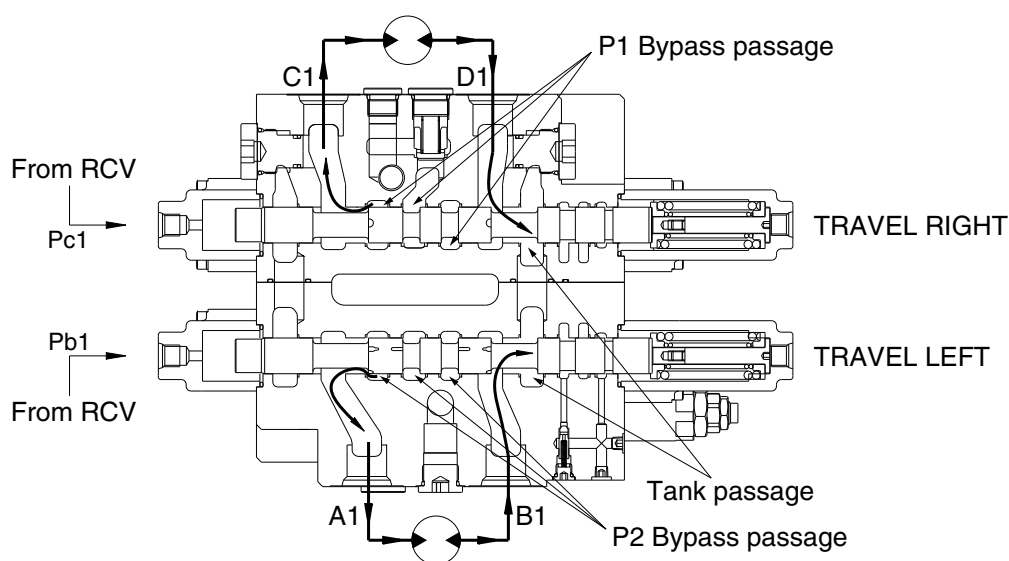

14092MC18

### (2) TRAVEL BACKWARD OPERATION

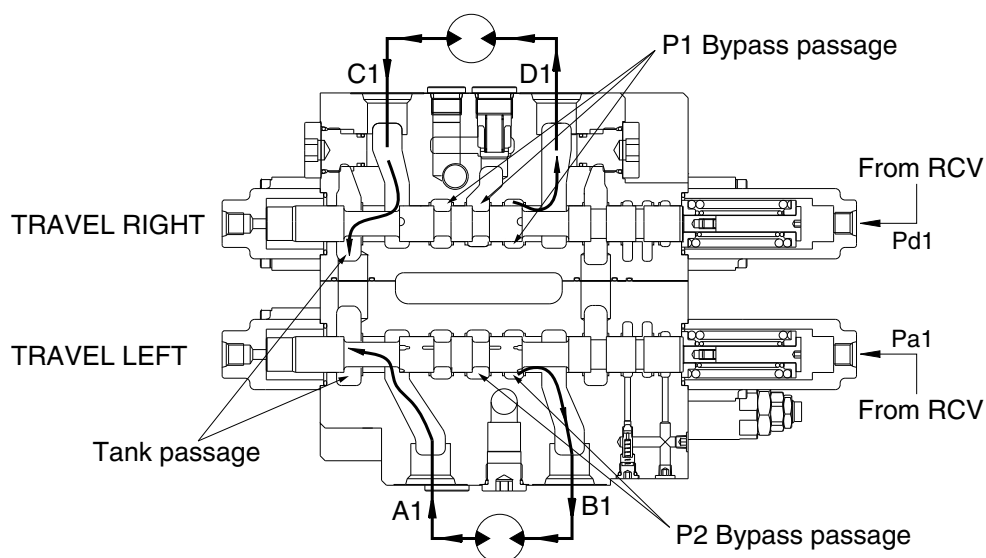

14092MC17

During the travel forward operation, the hydraulic fluid of the pump A2 is supplied to the travel left motor and the hydraulic fluid of the pump A1 is supplied to the other travel right motor.


The pilot pressure from the pilot control valve is supplied to the spring side of pilot port (pb1, pc1).

And it shifts travel right and left spools in the left direction against springs. Hydraulic fluid from the pump A1 flow into the travel right spool through the bypass passage and hydraulic fluid from the pump A2 flow into the travel left spool through the bypass passage.

Then they are directed to the each travel motor through port A1 and C1. As a result, the travel motors turn and hydraulic fluid returns to the tank passage through the travel spools.

In case of the reverse operation, the operation is similar.

### (3) TRAVEL STRAIGHT FUNCTION

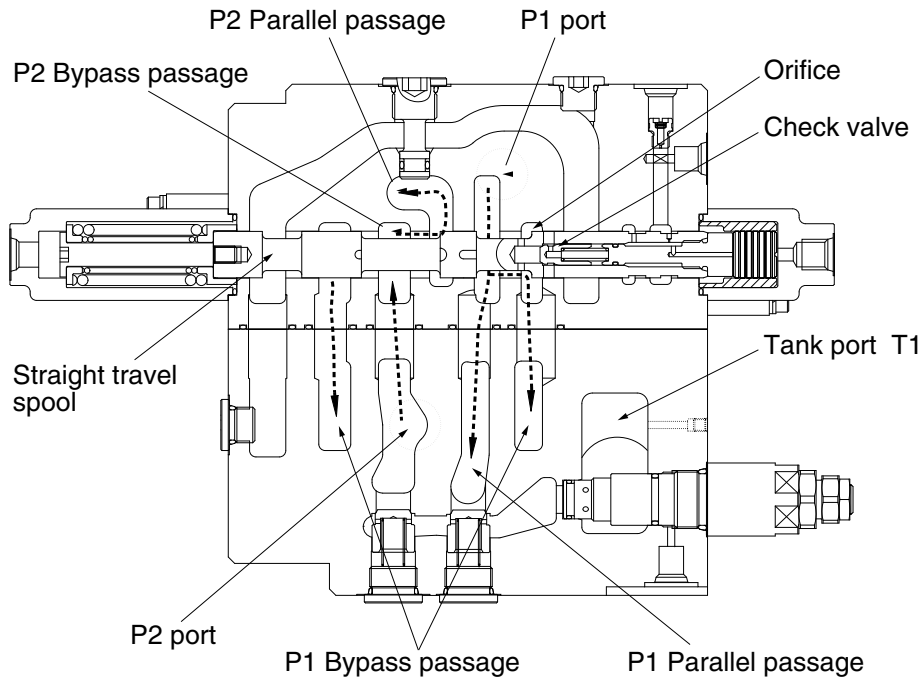

140A2MC14

This function keeps straight travel in case of simultaneous operation of other actuators (boom, arm, bucket, swing) during a straight travel.

#### ① During travel only :

The hydraulic fluid of the pump A1 is supplied to the travel right motor and the pump A2 is supplied to the travel left motor.

Thus, the machine keep travel straight.

#### ② The other actuator operation during straight travel operation :

When the other actuator spool (s) is selected under straight travel operation, the straight travel spool is moved.

The hydraulic fluid from pump A2 is supplied actuator through P2 and P1 parallel pass and travel motors through orifice at side of straight travel spool.

The hydraulic oil fluid from pump A1 is supplied to travel motors (left/right).

Therefore, the other actuator operation with straight travel operation, hydraulic oil fluid from pump A2 is mainly supplied to actuator, and the hydraulic oil fluid form pump A1 is mainly supplied to travel motors (left/right).

Then the machine keeps straight travel.


### 3) BOOM OPERATION

#### (1) BOOM UP OPERATION

During boom up operation, the pilot secondary pressure from RCV is supplied to the port Pa20 of the spring side and shifts the boom 1 spool in the left direction. The bypass passage is shut off by the movement of the boom 1 spool and the hydraulic oil fluid from pump A2 is entered P1 parallel passage and then passes through the load check, bridge passage and boom holding valve then flows into the port A2. Following this it flows into the head side of the boom cylinder. (In this case, the boom holding valve is free flow condition)

At the same time, the pilot pressure from RCV is supplied to the port Pa21 of the spring side of boom 2 and shifts the boom 2 spool. The bypass passage is shut off by the movement of the boom 2 spool and the hydraulic oil fluid from pump A1 entered boom summation passage via the P2 parallel passage, the land of the swing priority spool, notch of the boom 2 spool, arm 2 spool and the check. The flows combine in passage and are directed to port A2 and head side of boom cylinder.

At the same time, the flow from rod side of the boom cylinder return to the boom 1 spool through the port B2. Thereafter it is directed to the hydraulic oil tank through the tank passage.

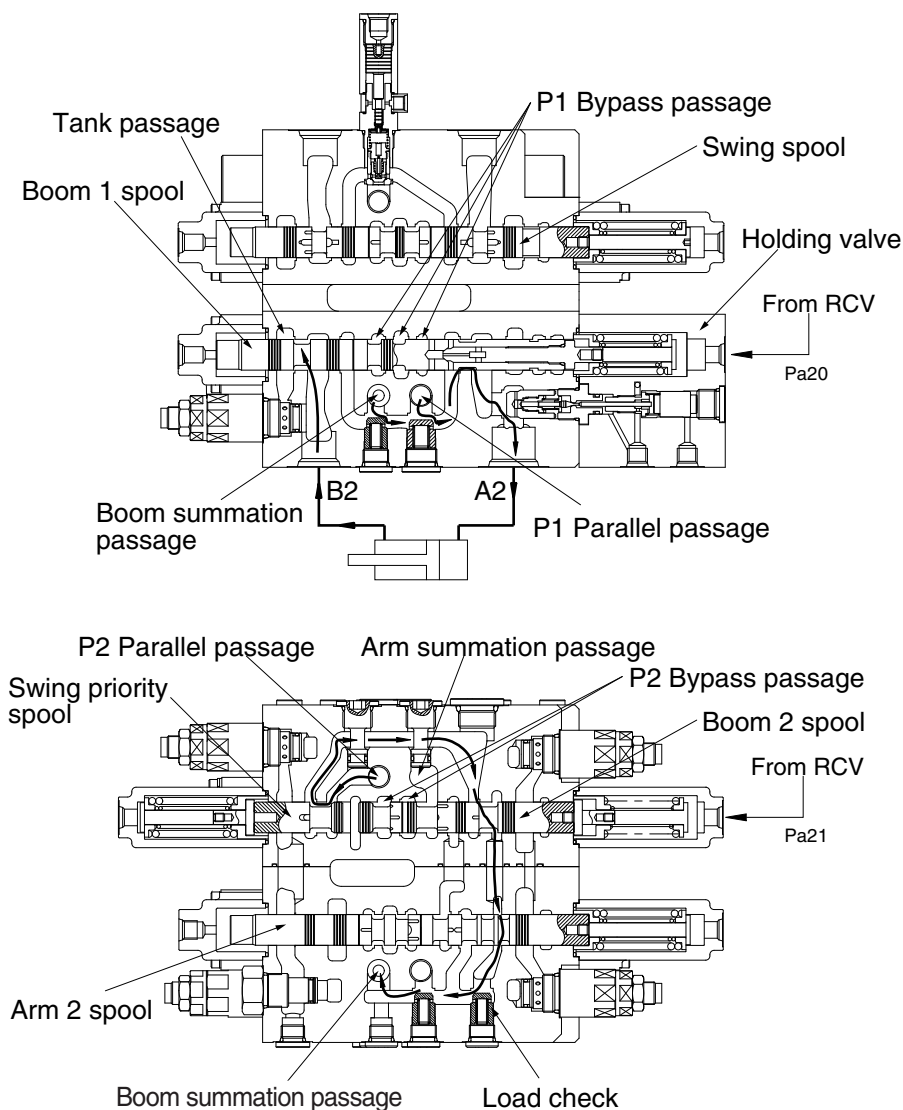

140A2MC15



## (2) BOOM DOWN OPERATION

During the boom lowering operation, the pilot pressure from RCV is supplied to the port Pb20 of the spring opposite side and shifts the boom 1 spool in the right direction.

The bypass passage is shut off by the movement of the boom 1 spool and the hydraulic fluid from the pump A2 enters the parallel passage and is directed to the port B2 through the load check.


Following this, it flows into the rod side of the boom cylinder.

At the same time, the return flow from the head side of the boom cylinder returns to the port A2 and boom holding valve. And it is directed to the hydraulic oil tank through opened tank passage by movement of the boom 1 spool.

Meanwhile some of return flow is directed to P1 parallel passage through the internal passage of the boom 1 spool. (boom regeneration)

In this case, the holding valve is open condition, for details of the boom holding valve, see page following page.

During the boom lowering operation, the fluid from A1 pump is not summation.

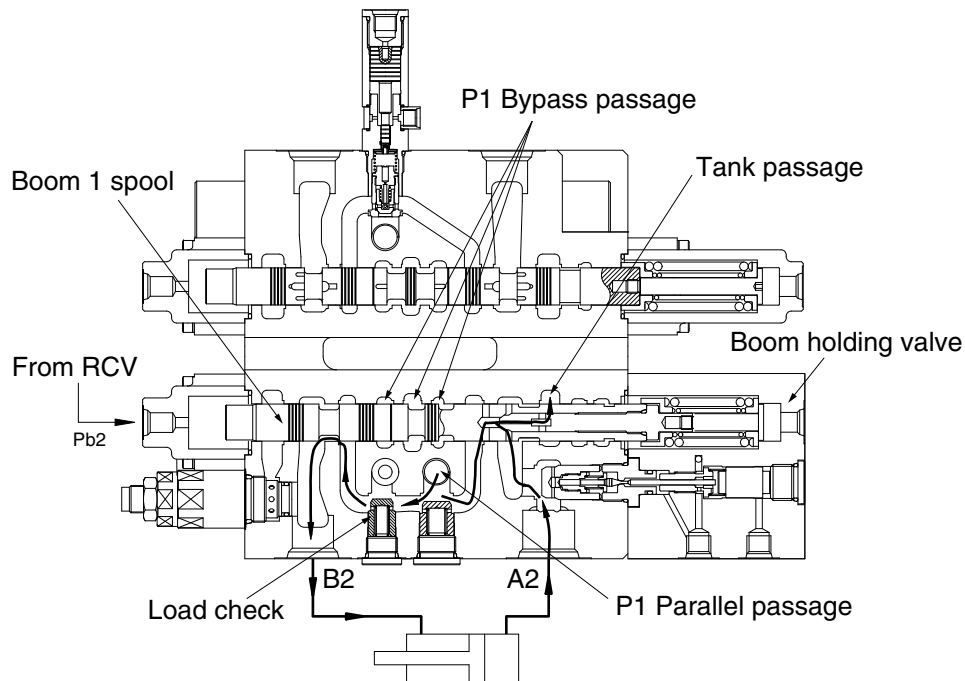

140A2MC16

#### 4) HOLDING VALVE OPERATION

##### (1) HOLDING OPERATION


At neutral condition, the pilot piston chamber is connected to drain port through the pilot port.

And the piston "B" is supported with spring "B".

Also, the pressured fluid from actuator entered to inside of the holding valve through the periphery hole of check, crevice of the check and the plug and the periphery hole of plug.

Then, this pressured oil pushed the poppet to the poppet seat and the check to the seat of body.

So the hydraulic fluid from actuator is not escaped and the actuator is not moved.

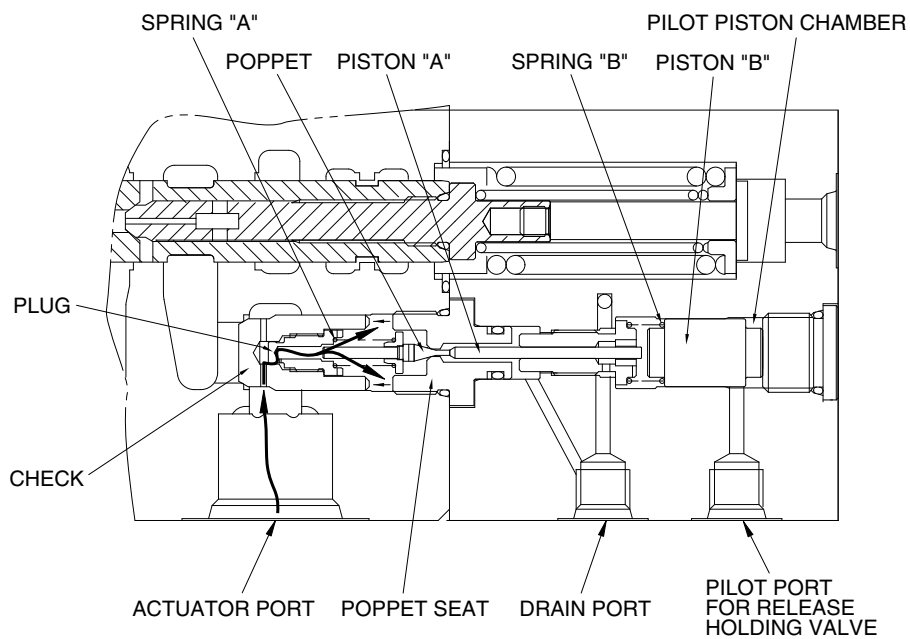


140A2MC17

## (2) RELEASE HOLDING OPERATION

The pilot pressure is supplied to the pilot port for release holding valve and shifts the piston "B" in the left direction against the spring "B", and shifts the poppet in the left direction through piston "B" and piston "A" against spring "B" and shifts the spool in the left side.

At same time, the return fluid from actuator returns to the drain port through the periphery hole of check, crevice of the check and the plug, the periphery hole of the plug, in side of holding valve, crevice of the poppet and the poppet seat, the periphery hole of the poppet seat, crevice of socket and spool and internal passage of spool.

When the poppet is opened, pressure of inside of holding valve is decreased and the return fluid from actuator returns to the tank passage through the notch of spool.

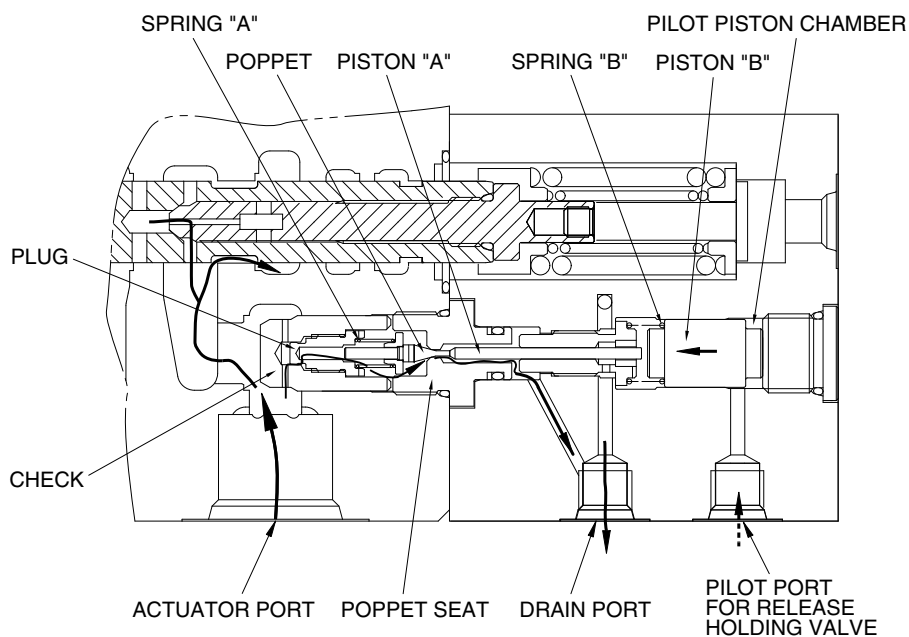

140A2MC18

## 5) BUCKET OPERATION

### (1) BUCKET IN OPERATION


During the bucket in operation, the pilot secondary pressure from RCV is supplied to port Pa5 of the spring side and shifts the bucket spool in the left direction.

The bypass passage is shut off by the movement of the bucket spool and the hydraulic fluid from pump A2 entered P1 parallel passage and is directed to the port A5 through the check 1.

At the same time, the hydraulic fluid from P1 bypass passage is directed to the port A5 through the check 2.

Following this it flows into the head side of the bucket cylinder.

The return flow from the rod side of the bucket cylinder returns to the bucket spool through the port B5. Thereafter it is directed to the hydraulic oil tank through the tank passage.

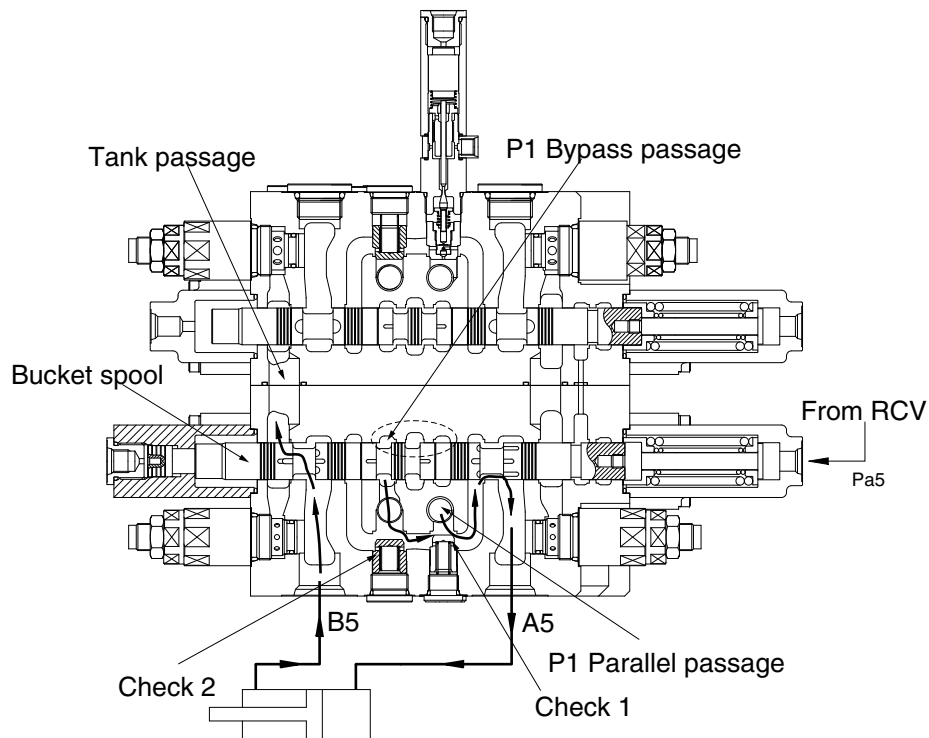

140L2MC134


## (2) BUCKET OUT OPERATION

During the bucket out operation, the pilot secondary pressure from RCV is supplied to port Pb5 of the spring opposite side and shifts the bucket spool in the right direction.

The bypass passage is shut off by the movement of the bucket spool and the hydraulic fluid from pump A2 entered P1 parallel passage and is directed to the port B5 through the check 1.

At the same time, the hydraulic fluid from P1 bypass passage is directed to the port B5 through the check 2.

The return flow from the head side of the bucket cylinder returns to the hydraulic oil tank through the port A5 and the tank passage

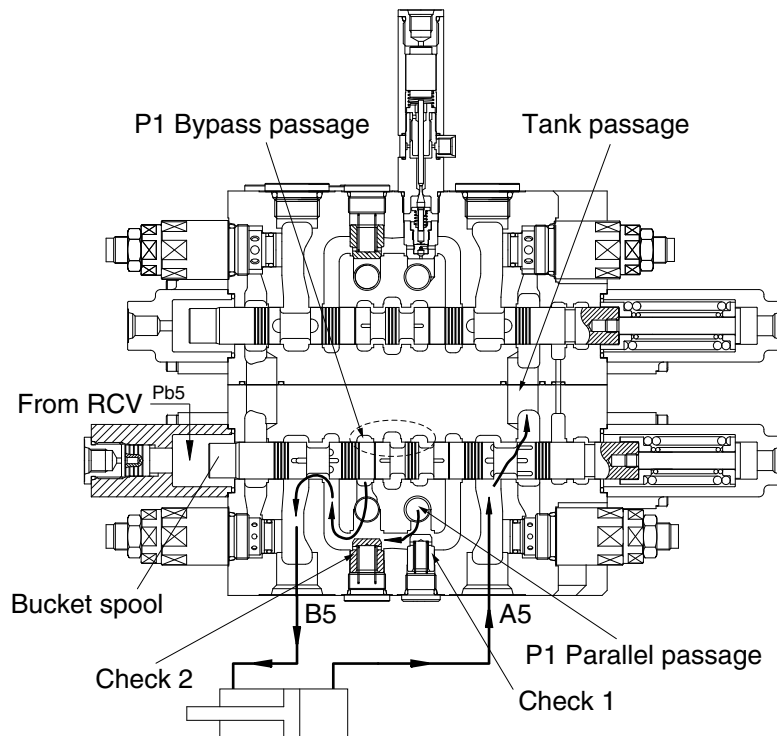


140L2MC135

### (3) BUCKET IN OPERATION WITH BOOM OPERATION

When combined operation, mostly same as previous page but the fluid from P1 bypass passage is empty.

When the boom up and bucket in combined operation, the boom up pilot pressure is supplied the pilot port (P04) of bucket spool stroke limit and the piston is shifted to the right and then the bucket in spool stroke is limited and the open of the bucket in spool is reduced.

Accordingly, the oil of the bucket in spool is reduced and the boom speed up

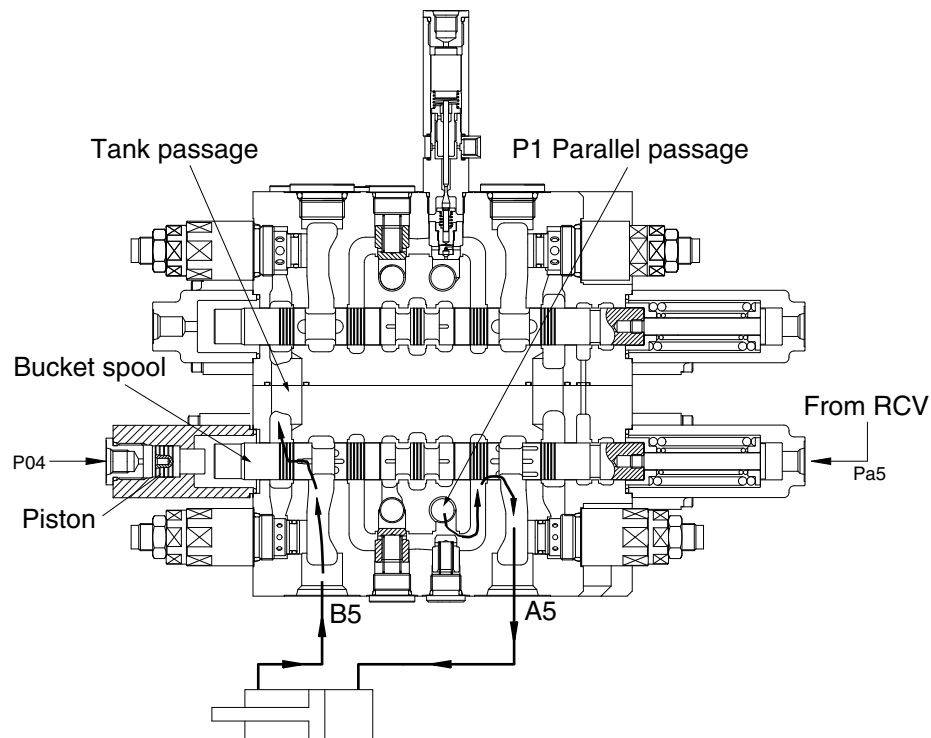

140L2MC129

## 6) SWING OPERATION


### (1) SWING LEFT & RIGHT OPERATION

During the swing left operation, the pilot secondary pressure from the RCV is supplied to the port Pd2 of the spring side and shift the swing spool in left direction. The bypass passage is shut off by the movement of the swing spool and the hydraulic fluid from pump A1 flows into swing spool through the P2 parallel passage. Then it is directed to swing motor through the port D2.

As the result, swing motor turns and flow from the swing motor returns to the hydraulic oil tank through the port C2, swing spool and the tank passage.

In case of swing right operation, the operation is similar to swing left operation but the pilot secondary pressure from the RCV is supplied to the port Pc2 of the spring opposite side.

Accordingly, the hydraulic fluid from pump A1 flows into swing motor through the port C2 and returns to the hydraulic oil tank through the port D2 and the tank passage.

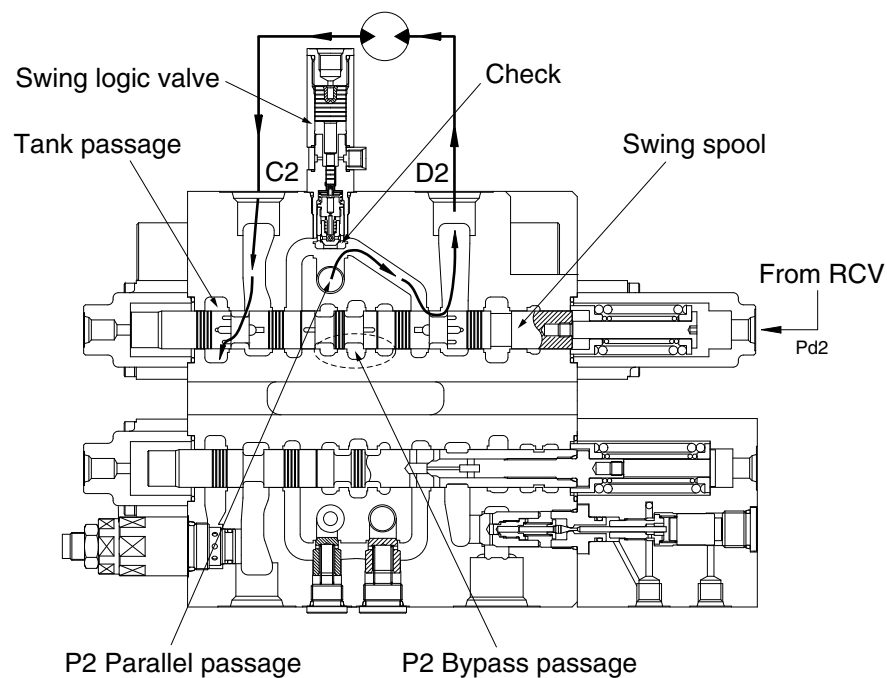


140A2MC19

## (2) SWING LEFT OPERATION WITH ARM OR BOOM OPERATION

When combined operation, mostly same as previous page but the fluid from P2 bypass passage is empty.

So only the fluid from parallel passage is supplied to the swing motor. Also, parallel passage is installed the orifice of swing logic valve for supplying the fluid from pump A1 to the boom or the arm operation prior to the swing operation. In case of the swing right operation with arm or boom operation, operation is similar.

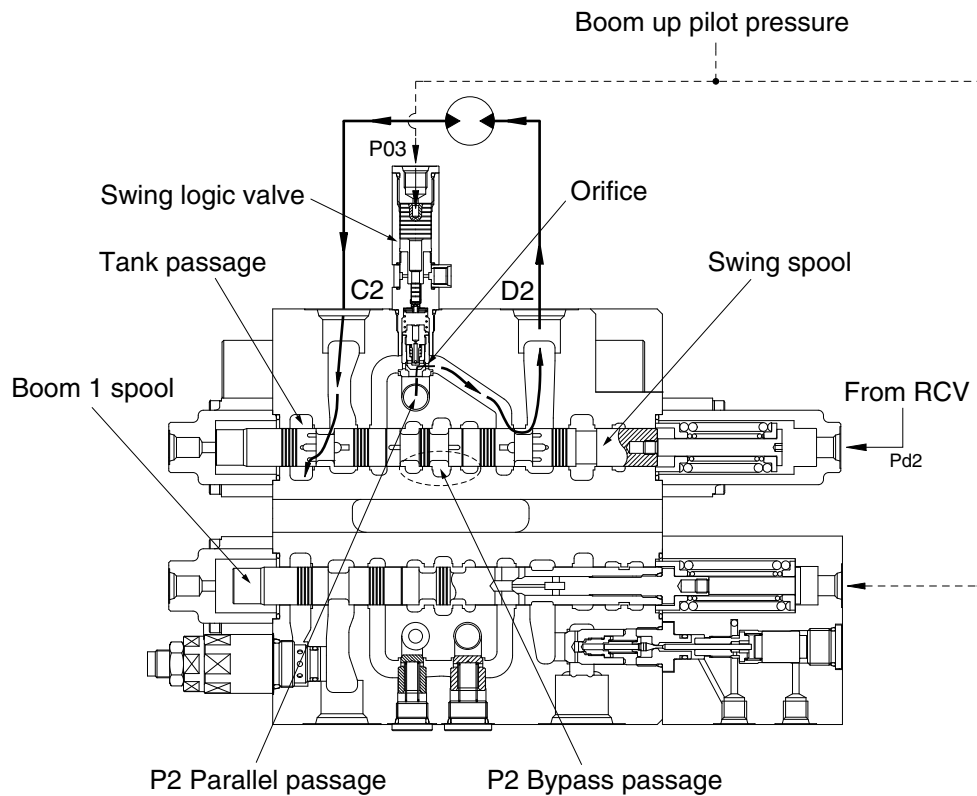

140A2MC20





## 7) ARM OPERATION

### (1) ARM IN OPERATION

During arm in operation, the pilot secondary pressure from the RCV is supplied to the port Pc40 of spring opposite side and shifts arm 1 spool in the right direction.

The bypass passage is shut off by the movement of the arm 1 spool and the hydraulic oil from the pump A1 flows into the arm cylinder head side through P2 parallel passage, the load check valve, bridge passage and the port C4.

At same time, the pilot secondary pressure from the RCV is supplied to the port Pb3 of spring opposite side and shifts arm 2 spool in the right direction. The bypass passage is shut off by the movement of the arm 2 spool and the hydraulic fluid from the pump A2 flows into the arm summation passage through P1 parallel passage, the check valve, the arm 2 spool and the boom 2 spool. Then it entered the arm cylinder head side with hydraulic fluid from arm 1 spool.

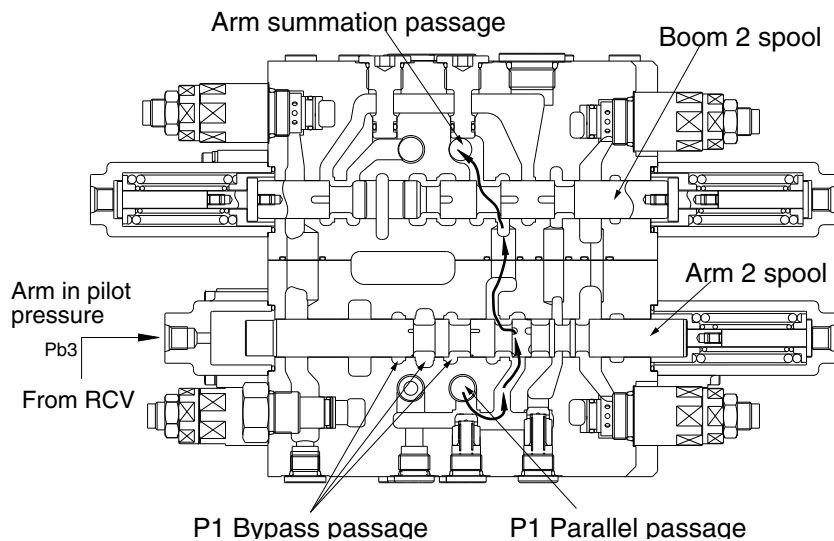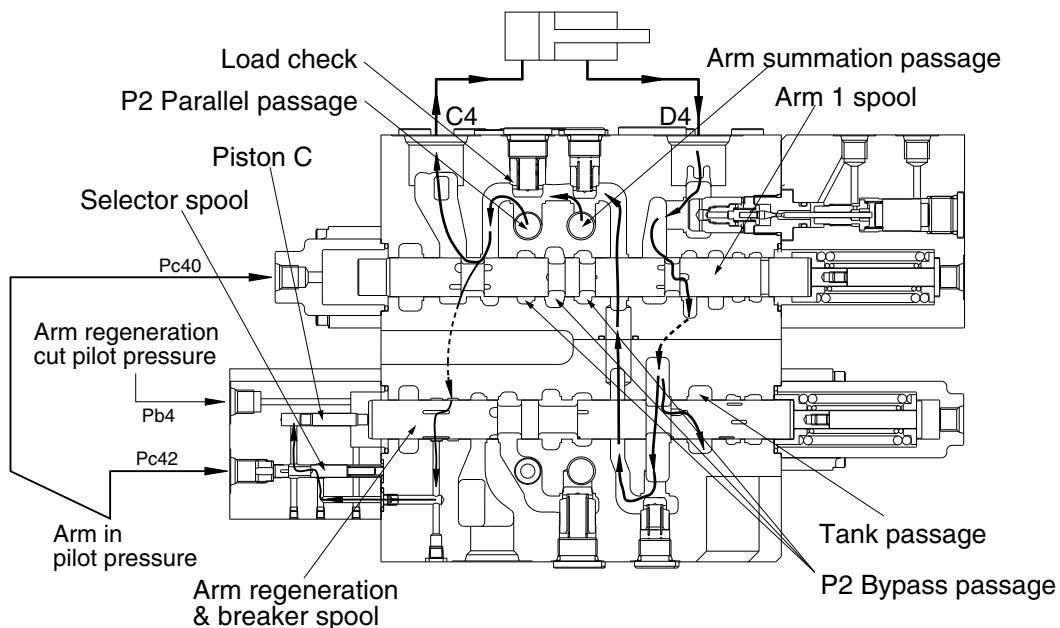

140A2MC21


## ARM REGENERATION

The return flow from the arm cylinder rod side is pressurized by self weight of arm and so, returns to port D4. The pressurized oil returning to port D4 enters the arm regeneration & breaker spool through the arm holding valve and the arm 1 spool. It is supplied the arm cylinder head through internal passage. This is called the arm regeneration function.

The amount of regeneration fluid is changed by movement of the arm regeneration spool. A few fluids after P2 parallel passage is push piston "C" through the notch of arm regeneration spool and selector spool. At this time, the selector spool is opened by pilot pressure from RCV.

Then, the arm regeneration spool shifts to right side and flow to tank pass increases and regeneration flow decreases. Therefore, pressure of arm cylinder head increases, then, arm regeneration flow decreases.

Furthermore, the arm regeneration cut pressure is supplied to the port Pb4 of spring opposite side and arm regeneration spool is move into the right direction fully. The flow from the arm cylinder rod is returned to the hydraulic oil tank and regeneration function is not activated. (The return fluid is maximum condition)

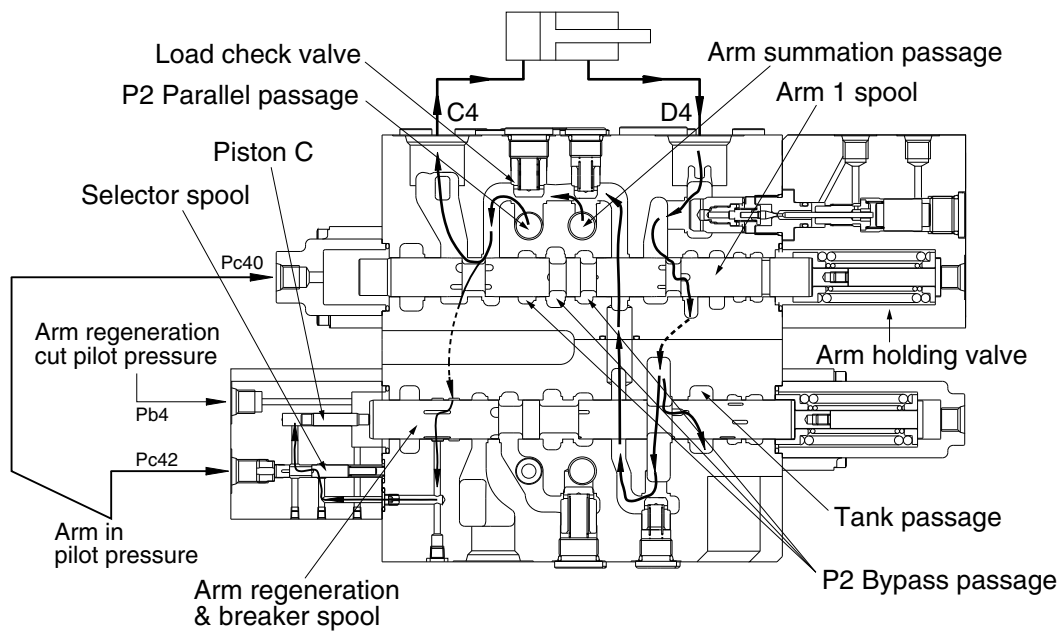

140A2MC22

## (2) ARM OUT OPERATION

During arm out operation, the pilot secondary pressure from RCV is supplied to the port Pd40 of spring side and shifts arm 1 spool in the left direction.



The bypass passage is shut off by the movement of the arm 1 spool and the hydraulic fluid from pump A1 flows into arm 1 spool through the P2 parallel passage. Then it enters into the arm cylinder rod side through the load check, bridge passage, arm holding valve and the port D4.

Also, the pilot secondary pressure from RCV is supplied to the port Pd41 of spring side and shifts arm 2 spool in the left direction.

The bypass passage is shut off by the movement of the arm 2 spool and some of the hydraulic fluid from pump A2 bypassed through bypass notch. The rest of hydraulic fluid from pump A2 flows into the arm summation passage through P1 parallel passage, the check valve, arm 2 spool and boom 2 spool.

Then it enters into the arm cylinder rod side with the fluid from the arm 1 spool.

The return flow from the arm cylinder head side returns to the hydraulic tank through the port C4, the arm 1 spool and tank passage.

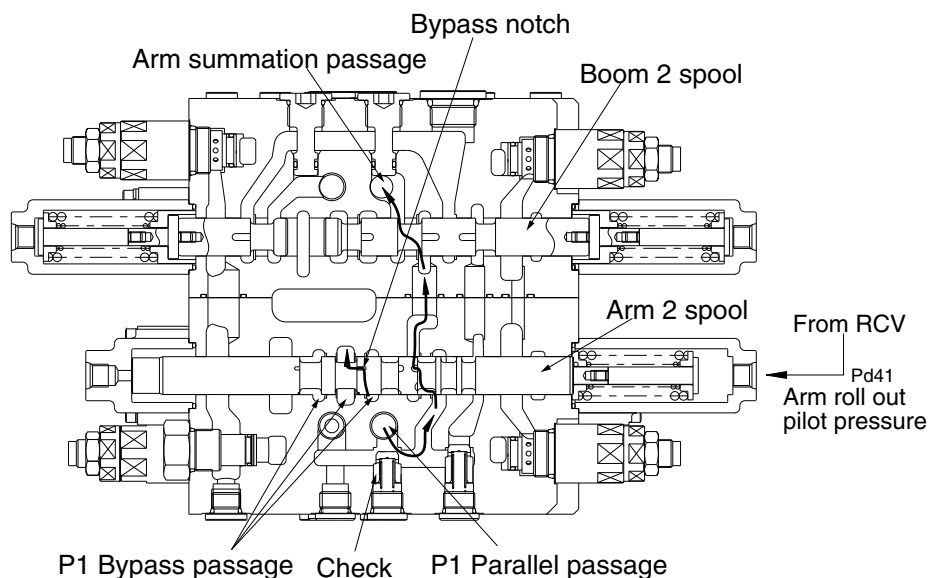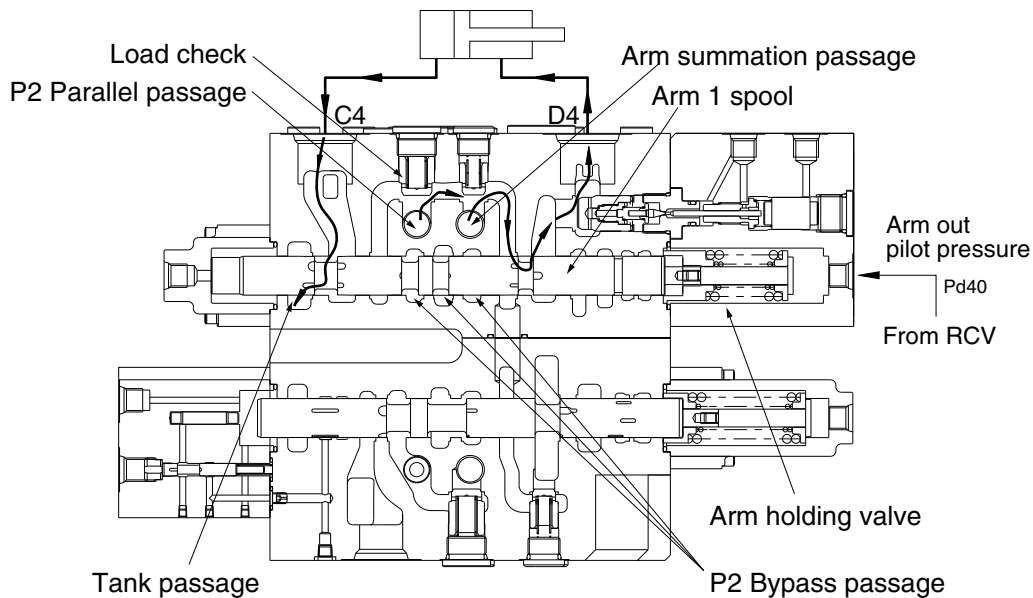


140A2MC23

## 8) SWING PRIORITY FUNCTION

During swing priority operation, the pilot secondary pressure is supplied to the port Pc3 of the spring side of the swing priority spool and shift swing priority spool in the right direction.

The hydraulic fluid from P2 parallel passage flows into the parallel passage of arm 1 side through swing priority spool and the path "A" and also flows into the boom 2 spool.


When the swing priority spool is neutral condition, the passage is same as normal condition. But due to shifting of the swing priority spool, the fluid from pump A1 flows to swing side more then the boom 2, arm 1, option B and dozer spools to make the swing operation most preferential.

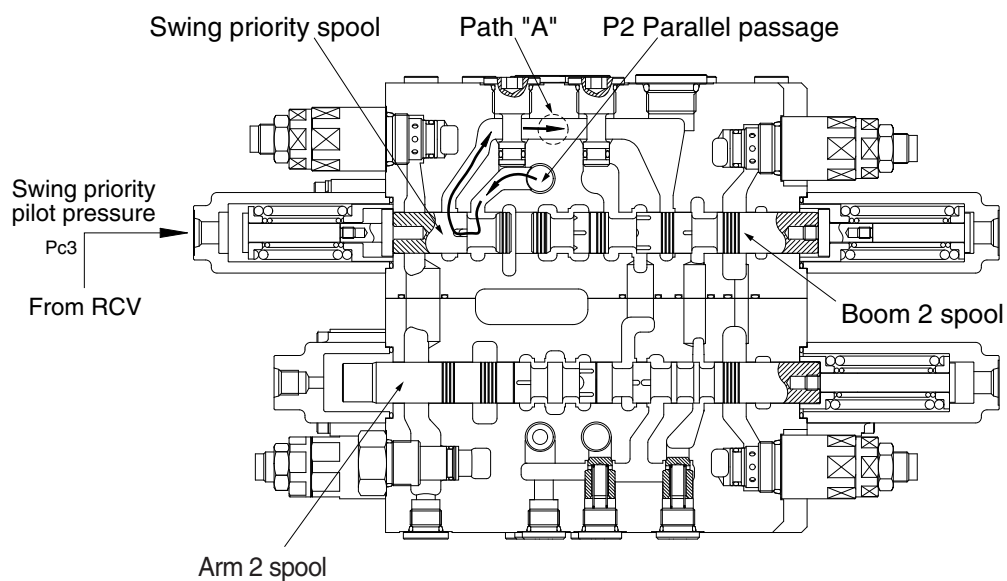

140L2MC27


## 9) DOZER OPERATION

### (1) Dozer down operation

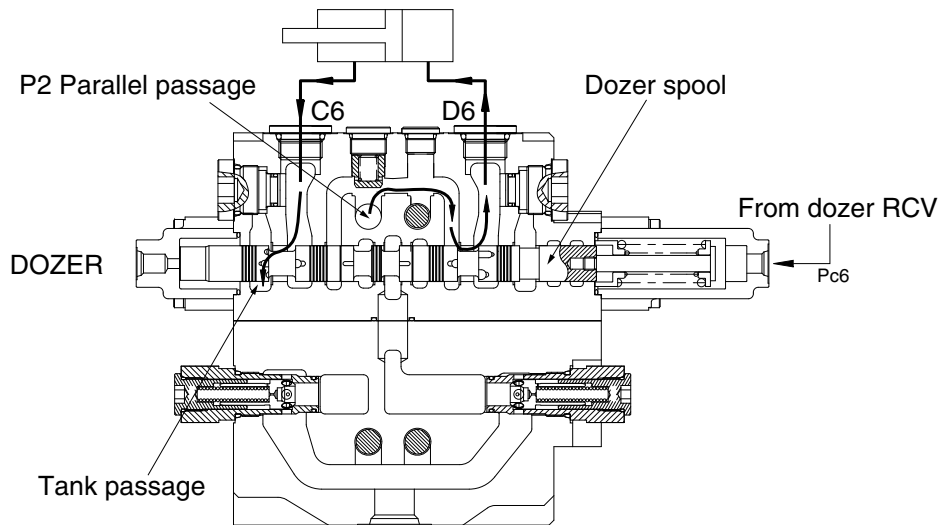

14W92MC30

### (2) Dozer up operation

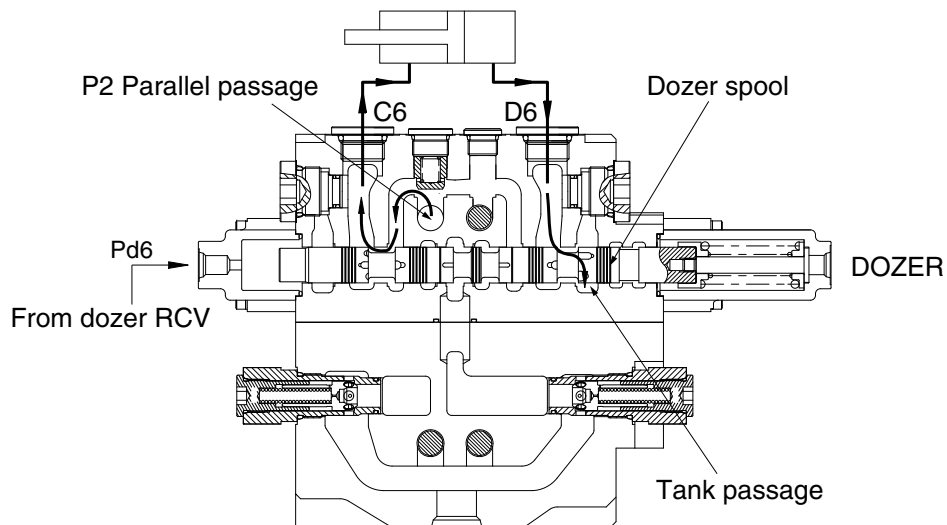

14W92MC31

During the dozer down operation, the pilot pressure from the dozer control valve is supplied into the port Pc6 of the spring side and it shifts the dozer spool in the left direction.

The hydraulic fluid from the pump A1 enters the parallel passage and is direction to the head side of the dozer cylinder through port D6.

The return flow from the rod side of the dozer cylinder returns to the dozer spool through C6 port. Thereafter it is directed to the hydraulic tank through tank passage.

In case of the dozer up operation, operation is similar.

## 10) NEGATIVE RELIEF VALVE OPERATION


When no function is being actuated on P1 side, the hydraulic fluid from the pump A2, flows into the tank passage through the P1 bypass passage and orifice. The restriction caused by this orifice thereby pressurizes. This pressure is transferred as the negative control signal pressure Pn1 to the pump A2 regulator.

It controls the pump regulator so as to minimize the discharge of the pump A2.

The bypass passage is shut off when the shifting of one or more spools and the flow through bypass passage became zero. The pressure of negative control signal becomes zero and the discharge of the pump A2 becomes maximum.

The negative control pressure reaches to the set level, the hydraulic fluid in the passage pushes open negative control valve and escapes into the return passage.


For the pump A1 the same negative control principle.

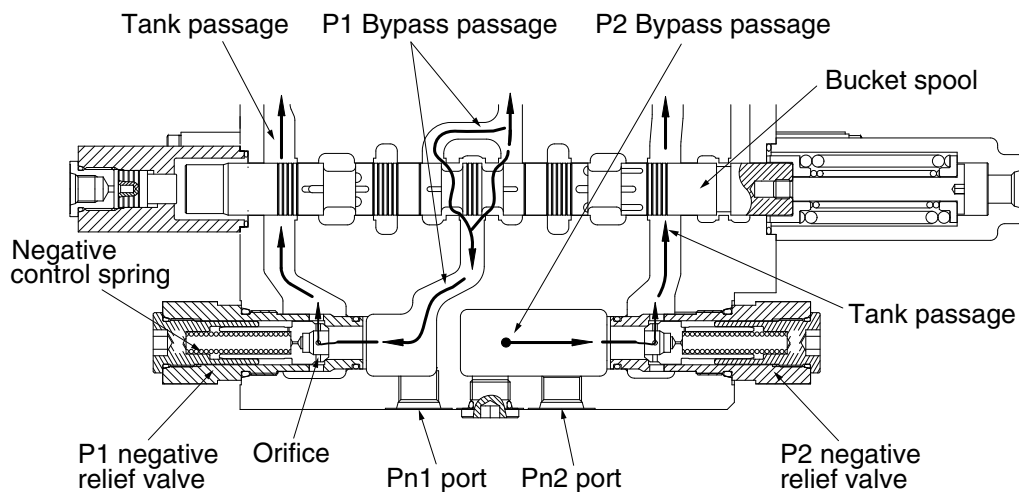

140L2MC128


## 11) OPERATION OF MAIN RELIEF VALVE

- (1) The pressurized oil passes through the orifice (A) of the plunger is filled up in chamber A of the inside space, and seats the plunger against the housing securely.

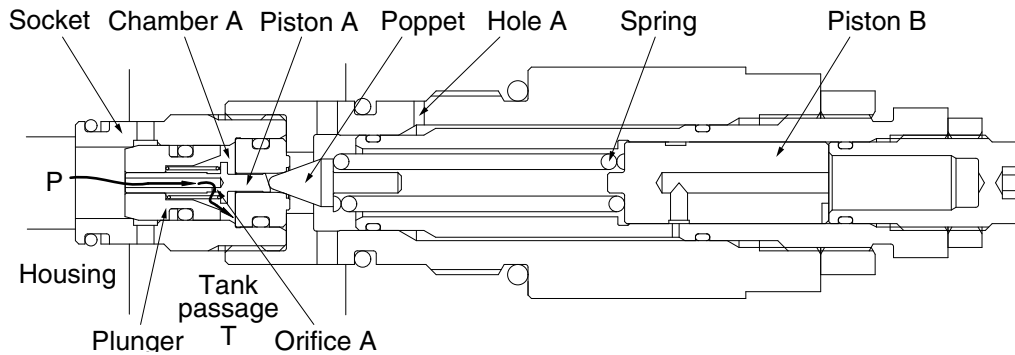


14W92MC36

- (2) When the pressure at (P) becomes equal to the set pressure of the spring the hydraulic oil passes through the piston (A) pushes open the poppet and flows to tank passage (T) through the plunger internal passage, periphery orifice A, chamber A, periphery orifice B and the hole (E).

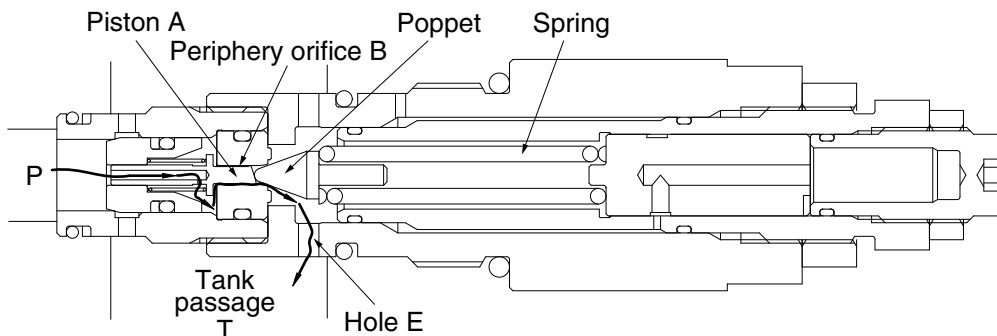


14W92MC37

- (3) Opening the poppet causes the pressure in chamber A to fall and the plunger to open. As the result the pressurized oil at port P runs into tank passage (T).

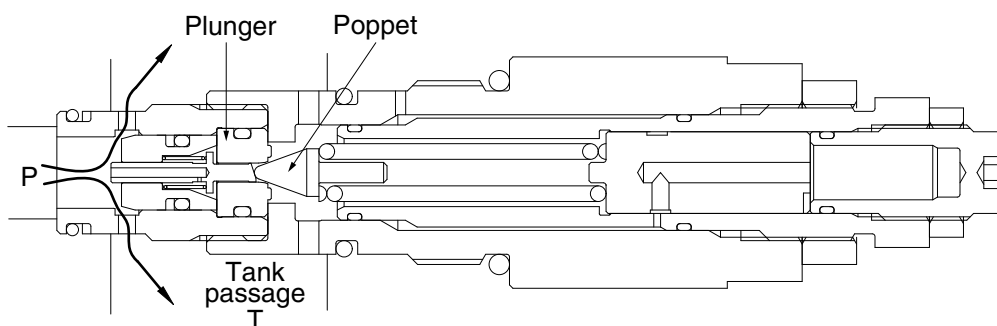


14W92MC38

- (4) The pressure at port P becomes lower than set pressure of the spring, the poppet is seated by spring force. Then the pressure at port P becomes equal to set pressure of the spring and the plunger is seated to the socket.

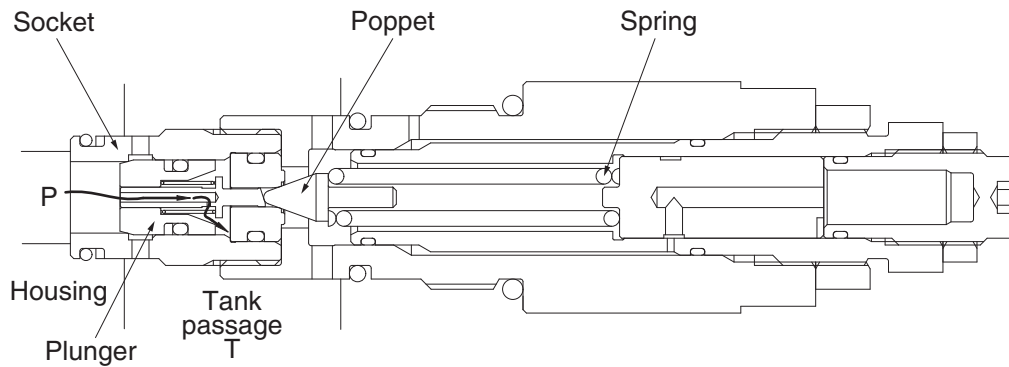

14W92MC39

- (5) When the power boost switch is ON, the pilot pressure enters through hole A. It pushes the piston (B) in the left direction to increase the force of the spring and change the relief set pressure to the high pressure.

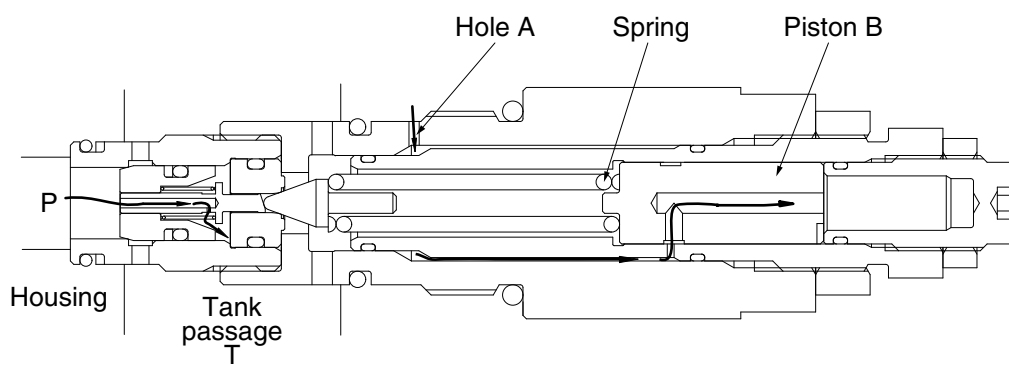


14W92MC40



## 12) OPERATION OF OVERLOAD RELIEF VALVE


### FUNCTION AS RELIEF VALVE

- (1) The pressurized oil passes through the piston A and orifice A is filled in chamber A of the inside space and seat the plunger against the socket and the socket against the housing securely.

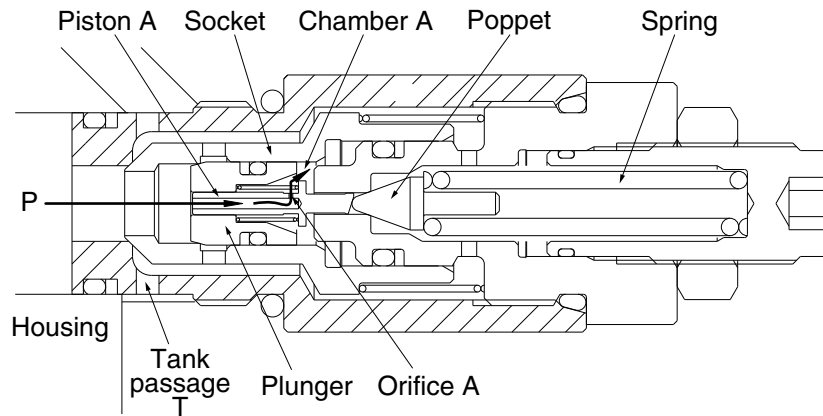


14W92MC41

- (2) When the pressure at port P becomes equal to the set pressure of the spring, the pressurized oil pushes open the poppet and flows to tank passage (T) through the plunger internal passage, orifice A, chamber A, periphery orifice B and hole E.

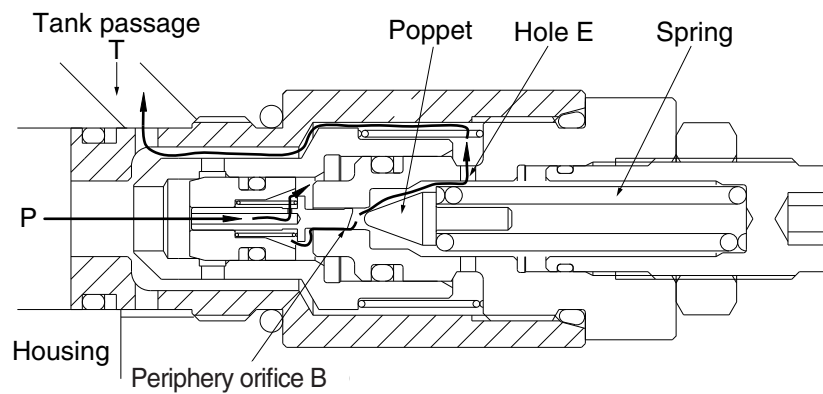


14W92MC42

- (3) Opening of the poppet causes the pressure in chamber A to fall and the plunger to open. As the result the pressurized oil at port P runs into tank passage (T).

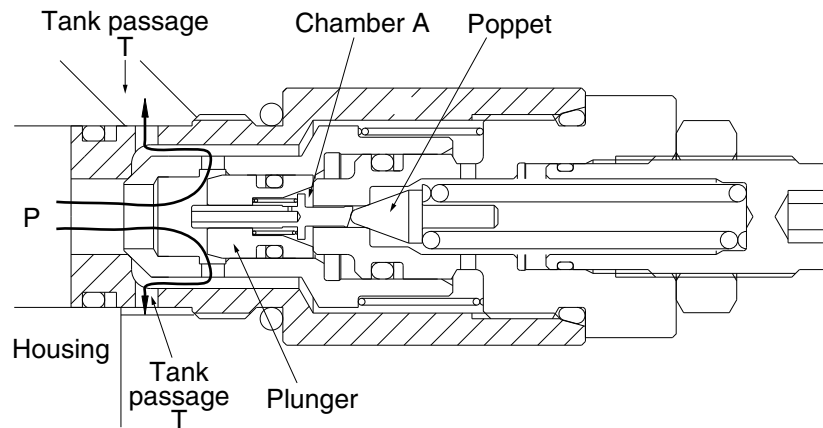

14W92MC43


- (4) The pressure at port P becomes lower than set pressure of the spring, the poppet is seated by spring force. Then the pressure at port P becomes equal to set pressure of the spring and the plunger is seated to the socket.

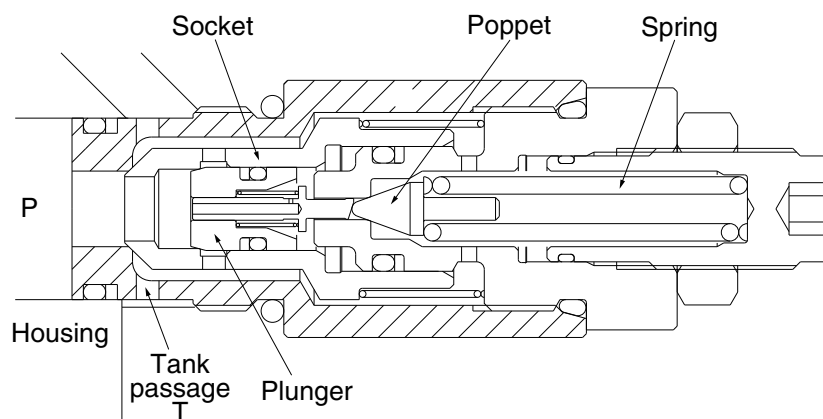

14W92MC44

## MAKE-UP FUNCTION

- (5) When negative pressure exists at port P, the oil is supplied through tank passage (T). When the pressure at tank passage (T) becomes higher than that of at port P, the socket moves in the right direction. Then, sufficient oil passes around the socket from tank passage (T) to port P and fills up the space.

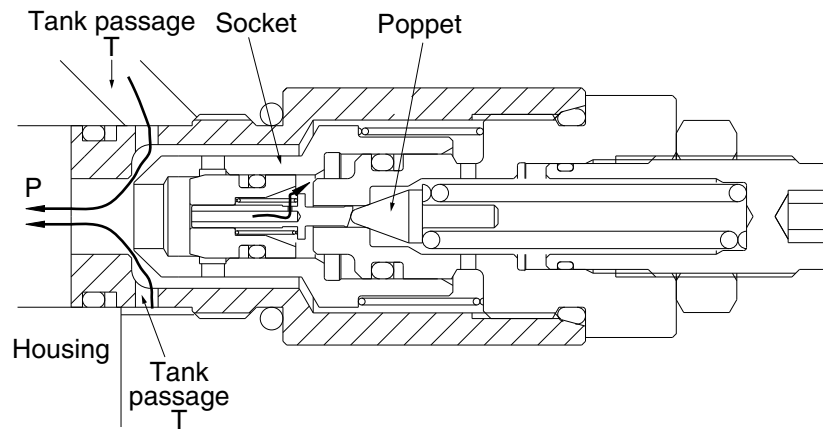



14W92MC45

## GROUP 3 SWING DEVICE

### 1. STRUCTURE

Swing device consists swing motor, and swing reduction gear.

Swing motor include mechanical parking valve, relief valve, make up valve and port block assy.

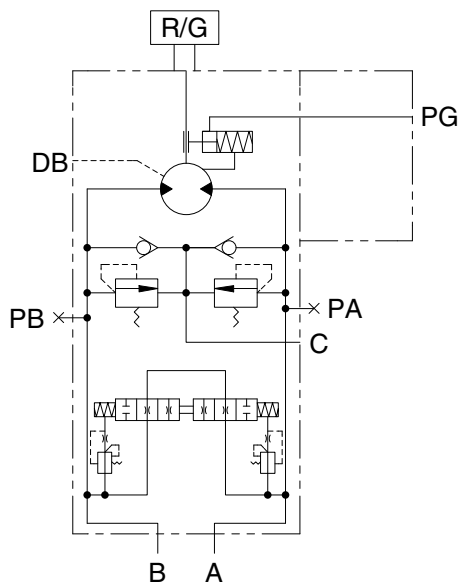
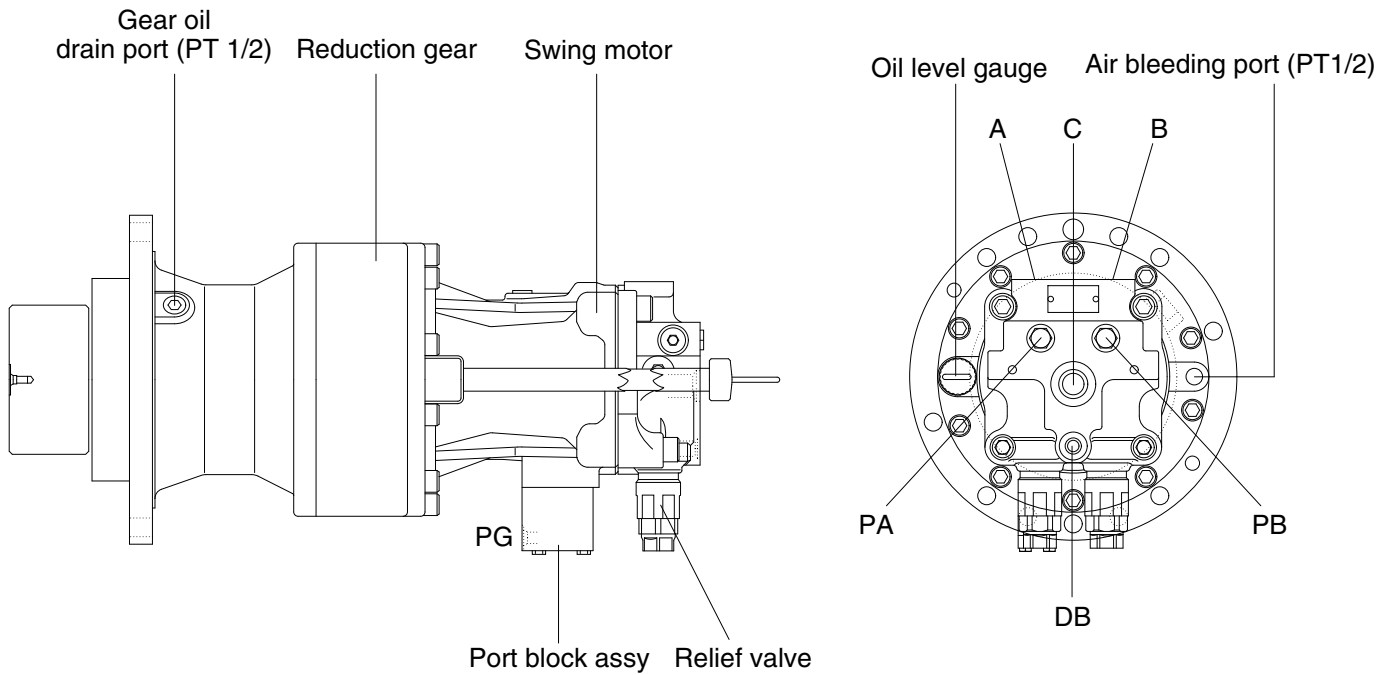


Hydraulic circuit

Port	Port name	Port size
A	Main port	Ø 13
B	Main port	Ø 13
DB	Drain port	PF 3/8
C	Make up port	PF 3/4
PG	Brake release port	PF 1/4
PA, PB	Gauge port	PF 1/4

140A2SM01


## 1) SWING MOTOR

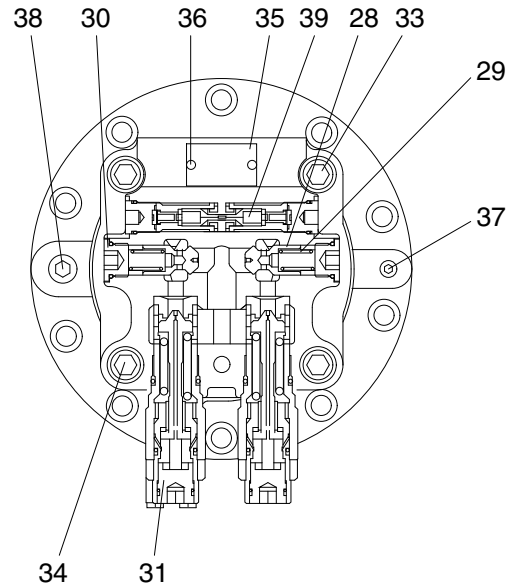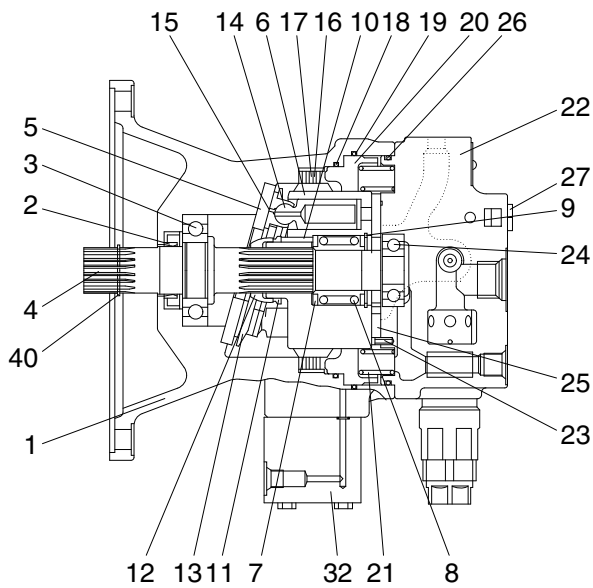

140A2SM02

1	Casing	15	Shoe	29	Spring
2	Oil seal	16	Separate plate	30	Plug assy
3	Ball bearing	17	Friction plate	31	Relief valve assy
4	Drive shaft	18	O-ring	32	Port block assy
5	Shoe plate	19	O-ring	33	Socket bolt
6	Rotary block	20	Brake piston	34	Socket bolt
7	Washer	21	Spring	35	Name plate
8	Spring	22	Valve casing	36	Screw
9	Snap ring	23	Spring pin	37	Plug
10	Roller	24	Ball bearing	38	Plug
11	Collar washer	25	Valve plate	39	Reactionless valve assy
12	Thrust ball	26	O-ring	40	Snap ring
13	Retainer plate	27	Plug assy	41	Socket bolt
14	Piston	28	Plunger		

## 2) REDUCTION GEAR

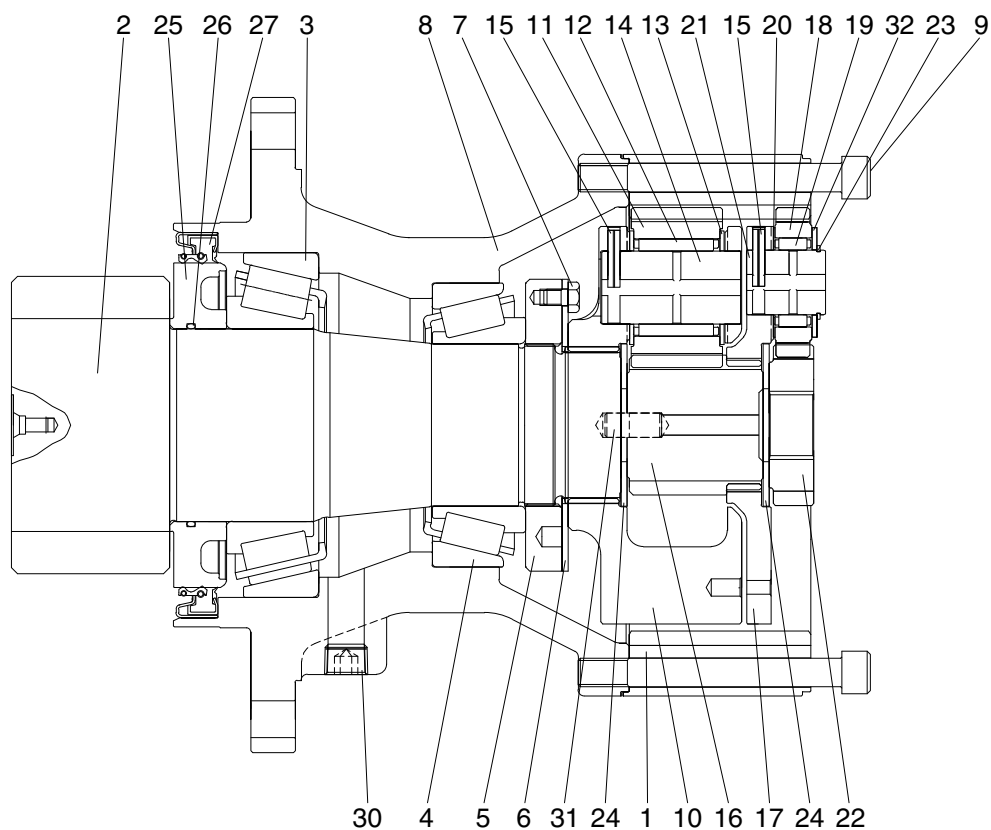

125LCR2SM23

1	Ring gear	11	Planetary gear No. 2	21	Carrier pin No. 1
2	Drive shaft	12	Needle bearing	22	Sun gear No. 1
3	Taper roller bearing	13	Thrust washer	23	Snap ring
4	Taper roller bearing	14	Carrier pin No. 2	24	Thrust plate
5	Ring nut	15	Spring pin	25	Sleeve
6	Lock plate	16	Sun gear No. 2	26	O-ring
7	Hexagon bolt	17	Carrier No. 1	27	Oil seal
8	Casing	18	Planetary gear No. 1	30	Socket plug
9	Socket bolt	19	Needle bearing	31	Parallel pin
10	Carrier No. 2	20	Thrust washer	32	Thrust washer

## 2. PRINCIPLE OF DRIVING

### 1) GENERATING THE TURNING FORCE

The high hydraulic supplied from a hydraulic pump flows into a rotary block (6) through valve casing (22) of motor, and valve plate (25).

The high hydraulic is built as flowing on one side of Y-Y line connected by the upper and lower sides of piston (14).



The high hydraulic can generate the force,  $F1 = P \times A$  ( $P$  : supplied pressure,  $A$  : water pressure area), like following pictures, working on a piston.

This force,  $F1$ , is divided as  $N1$  thrust partial pressure and  $W1$  radial partial pressure, in case of the plate of a tilt angle,  $\alpha$ .

$W1$  generates torque,  $T = W1 \times R1$ , for Y-Y line connected by the upper and lower sides of the piston as following pictures.

The sum of torque ( $\sum W1 \times R1$ ), generated from each piston (4~5 pieces) on the side of a high hydraulic, generates the turning force.

This torque transfers the turning force to a rotary (6) through a piston; because a rotary is combined with a turning axis and spline, a turning axis rotates and a turning force is sent.

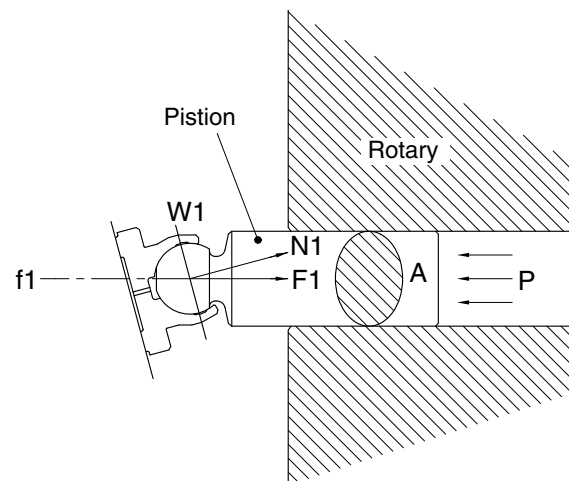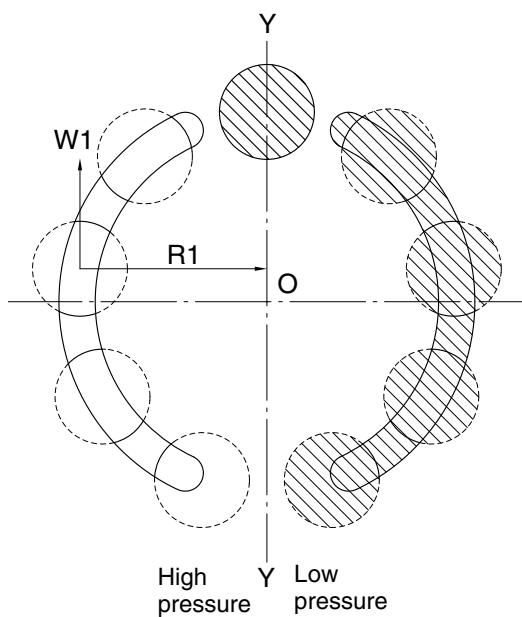

210WA8SM05


## 2) MAKE UP VALVE

In the system using this type of motor, there is no counterbalance functioning valve and there happens the case of revolution exceeding hydraulic supply of motor. To prevent the cavitation caused by insufficient oil flow there is a make up valve to fill up the oil insufficiency.

A make up valve is provided immediately before the port leading to the hydraulic oil tank to secure feed pressure required when the hydraulic motor makes a pumping action. The boost pressure acts on the hydraulic motor's feed port via the make up valve.

Pressurized oil into the port B, the motor rotate counterclockwise.


If the swing motion is stopped, the oil in the motor is drain via left relief valve, the drain oil run into motor via right make up valve, which prevent the cavitation of motor.

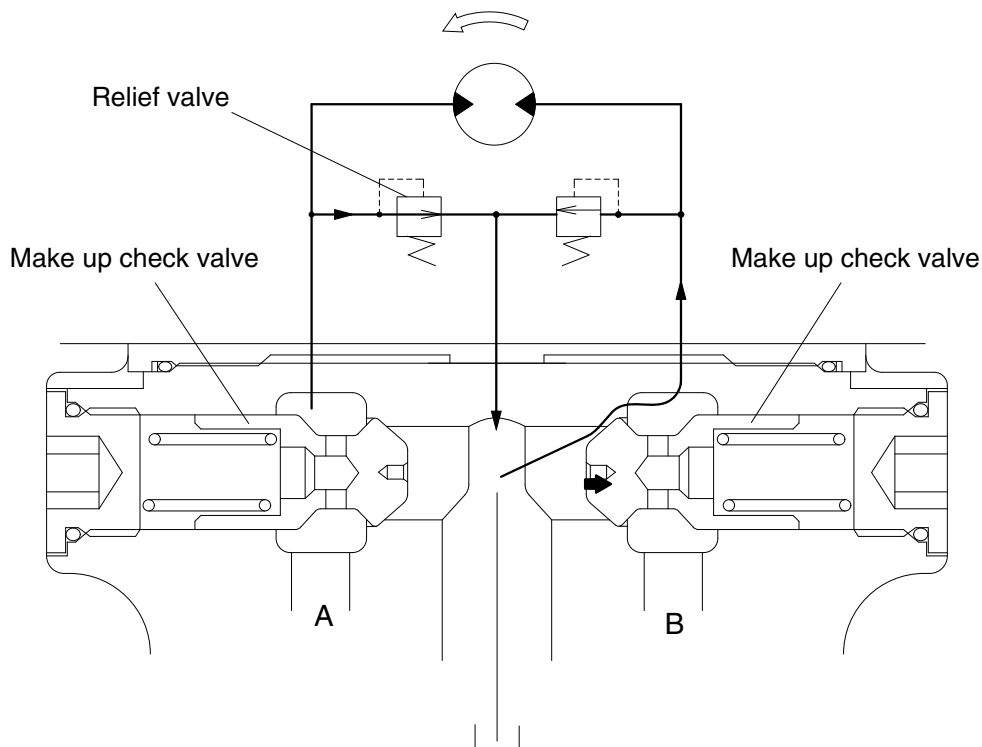

140A2SM04



### 3) RELIEF VALVE

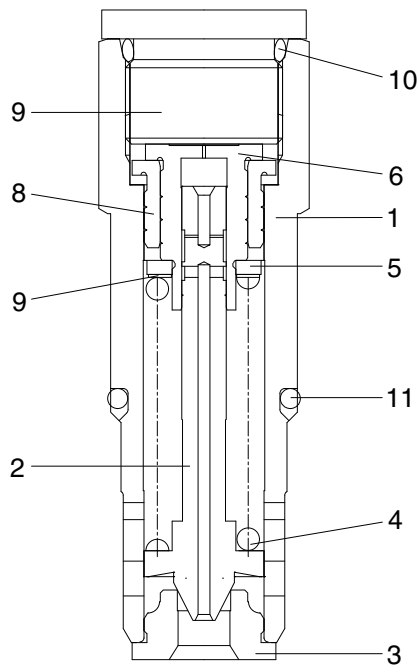

- |    |             |
|----|-------------|
| 1  | Sleeve      |
| 2  | Poppet      |
| 3  | Poppet seat |
| 4  | Spring      |
| 5  | Spring seat |
| 6  | Shim        |
| 7  | Piston      |
| 8  | Stopper     |
| 9  | Plug        |
| 10 | O-ring      |
| 11 | O-ring      |


145WF2SM25

#### (1) Construction of relief valve

The valve casing contains two cartridge type relief valves that stop the regular and reverse rotations of the hydraulic motor. The relief valves relieve high pressure at start or at stop of swing motion and can control the relief pressure in two steps, high and low, in order to insure smooth operation.


#### (2) Function of relief valve

Figure illustrates how the pressure acting on the relief valve is related to its rising process. Here is given the function, referring to the figure following page.

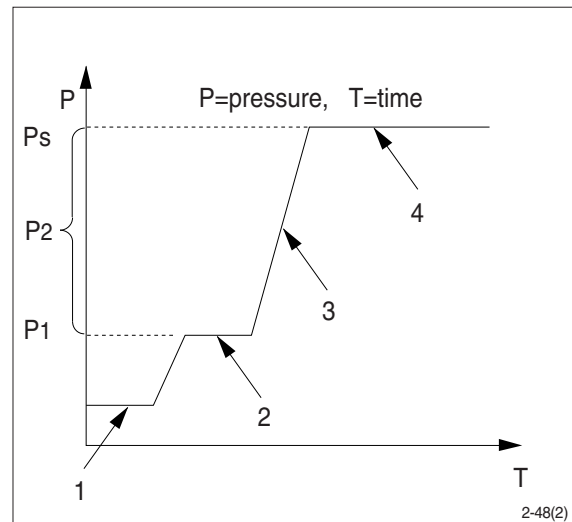

2-48(2)

- ① Ports (P,R) at tank pressure.

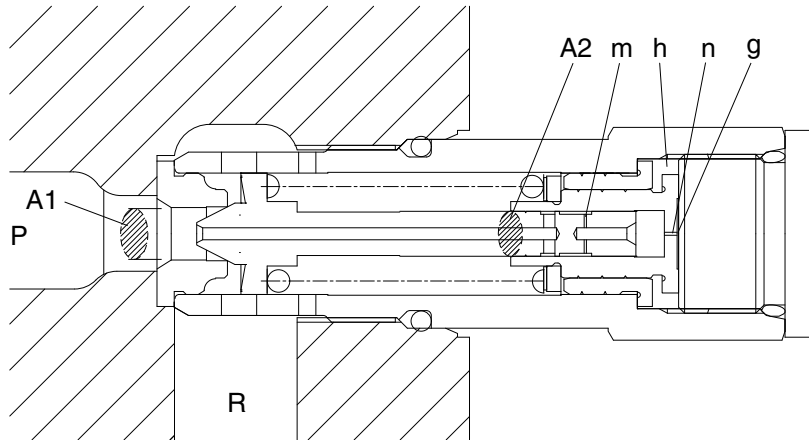


145WF2SM26

- ② When hydraulic oil pressure ( $P \times A_1$ ) reaches the preset force ( $F_{sp}$ ) of spring (4), the poppet (2) moves to the right as shown.


$$P_1 \times A_1 = F_{sp} + P_g \times A_2$$

$$P_1 = \frac{F_{sp} + P_g \times A_2}{A_1}$$

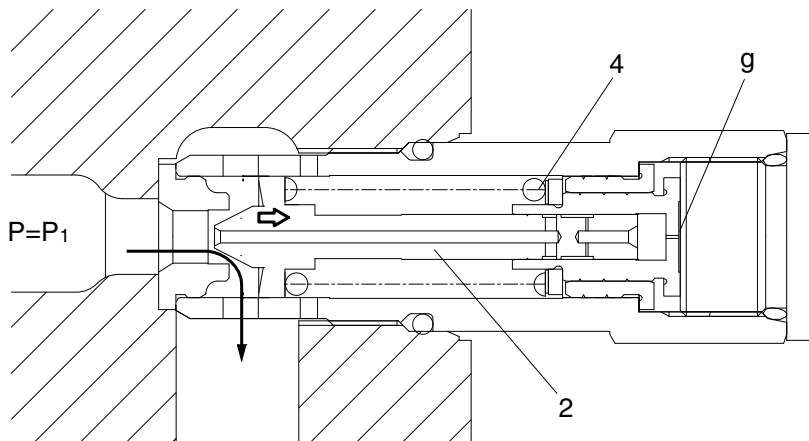

145WF2SM27

- ③ The oil flows into chamber (g) via orifice (m) and (n). When the pressure of chamber (g) reaches the preset force (FSP) of spring (4), the piston (7) moves left and stop the piston (7) hits the bottom of stopper (8).

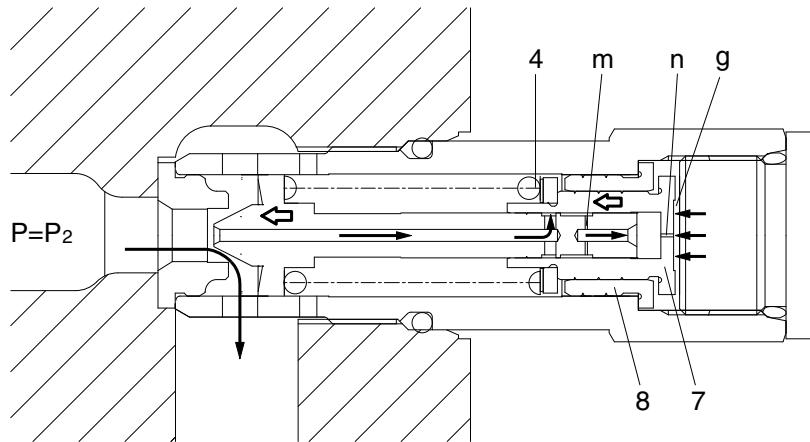


145WF2SM28

- ④ When piston (7) hits the bottom of stopper (8), it stops moving to the left any further. As the result, the pressure in chamber (g) equals (Ps).

$$P_s \times A_1 = F_{sp} + P_s \times A_2$$

$$P_s = \frac{F_{sp}}{A_1 - A_2}$$

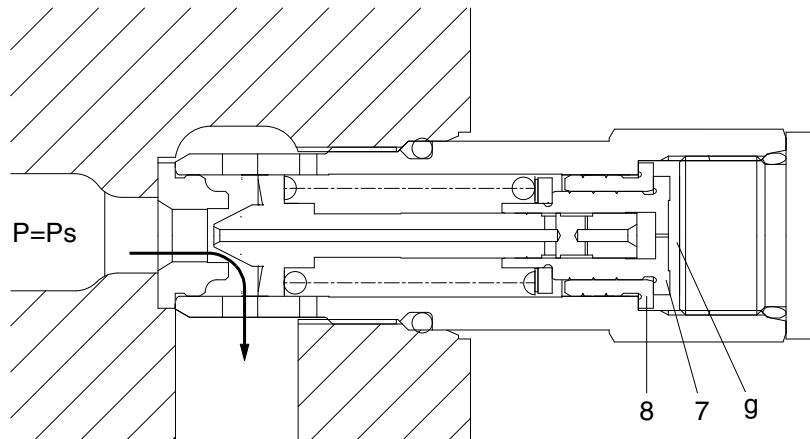


145WF2SM29

#### 4) BRAKE SYSTEM

##### (1) Control valve swing brake system

This is the brake system to stop the swing motion of the excavator during operation.

In this system, the hydraulic circuit is throttled by the swing control valve, and the resistance created by this throttling works as a brake force to slow down the swing motion.

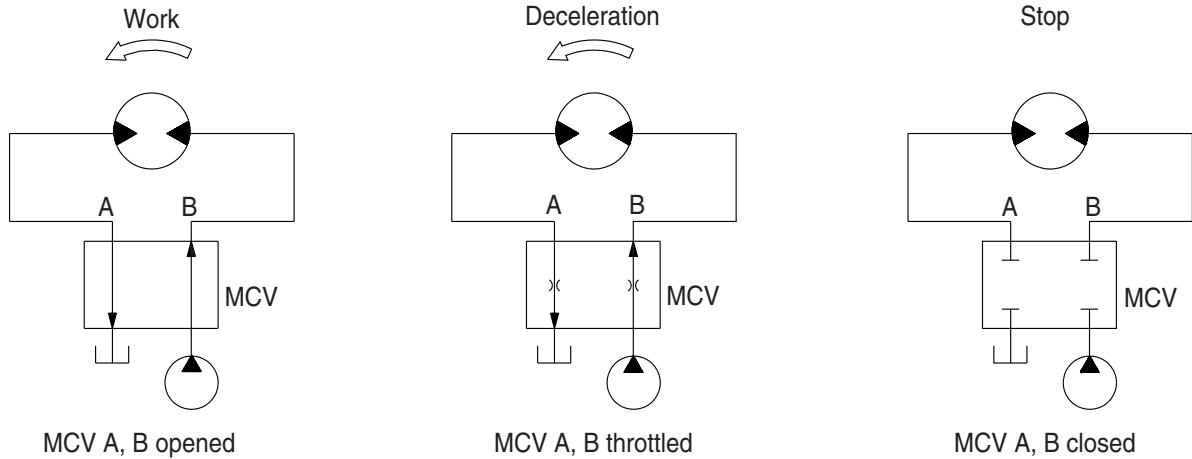

2-48(1)


##### (2) Mechanical swing parking brake system

This is function as a parking brake only when any of the swing, arm in, travel and boom up function is not operated.

##### ① Brake assembly

Circumferential rotation of separate plate (16) is constrained by the groove located at casing (1). When housing is pressed down by brake spring (21) through friction plate (17), separate plate (16) and brake piston (20), friction force occurs between friction plate and separate plate.

Friction force constrains motion of rotary block (6). When hydraulic force exceeds spring force, brake is released.

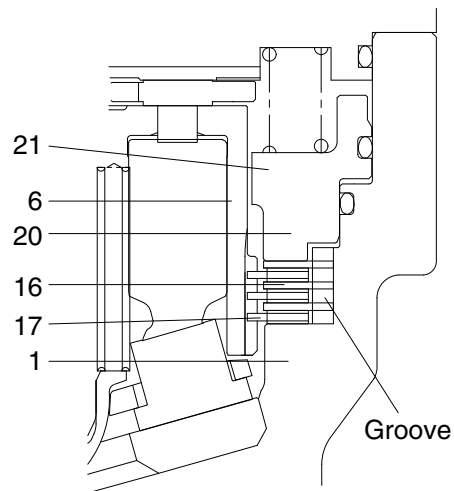

140A2SM07


1	Casing	17	Friction plate
6	Rotary block	20	Brake piston
16	Separate plate	21	Brake spring

## ② Operating principle

- a. When any of the swing, arm in, travel and boom up function is operated, the swing parking solenoid valve (5) is shifted to the swing position, so pilot pump charged oil (P3) goes to the chamber G through port PG.

This pressure is applied to move the brake piston (20) to the upward against the force of the brake spring (21). Thus, it releases the brake force.

- b. Stop operation and a few second has been elapsed, the swing parking solenoid valve (5) is shifted to the swing parking position and swing brake works.

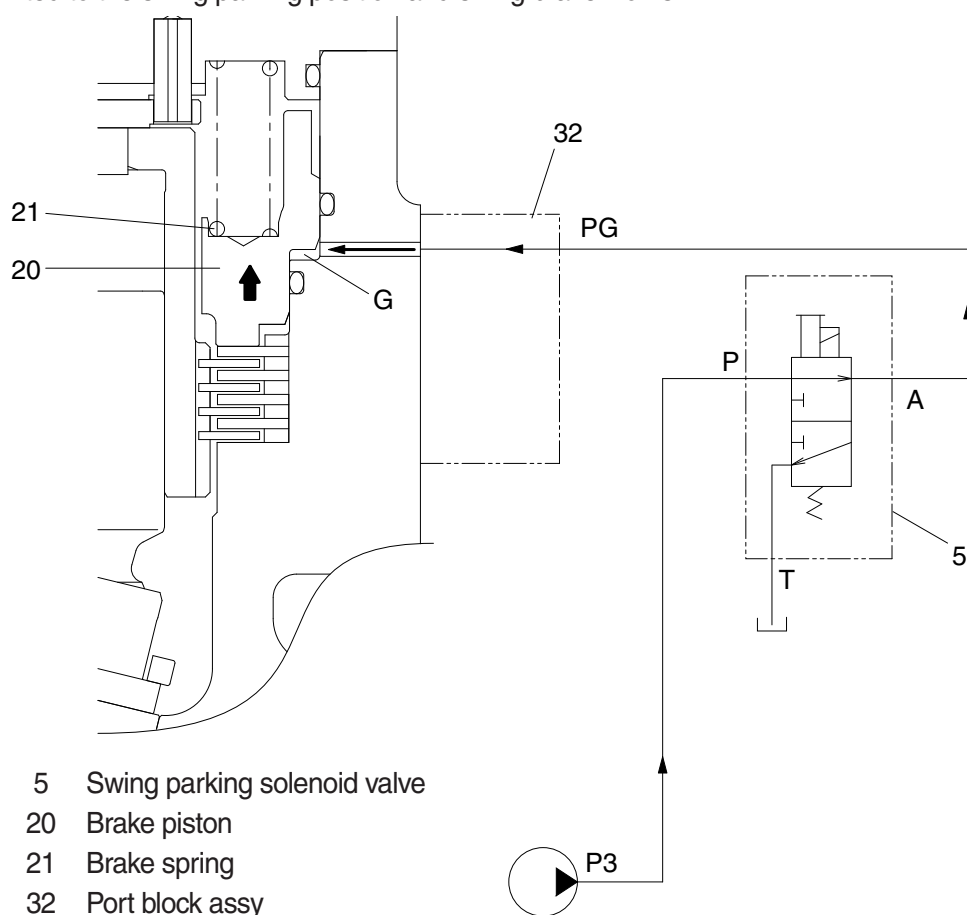

140A2SM10

## Electric control swing parking system

- ③ A safety is ensured by recognizing the swing operation and canceling the swing parking only under specific conditions by releasing parking electronically.

After receiving the RCV pressure, the MCU applies the parking release signal.

- b. Depending on each RCV operation, there is a time difference between re-entry into swing  
c. parking.

Mode	Fine swing switch	RCV operation	Parking delay time
Work mode	ON or OFF (No condition)	Swing	5 sec
		Arm in	1 sec
	ON	Boom up	2 sec
		Travel	3 sec
	OFF	Boom up / Travel	Not applied

#### ④ Manual override function

When the swing parking solenoid valve or related electric system is malfunction, the swing parking brake is not released even if the swing lever is operated.

To release the swing parking brake, the manual override function is needed.

##### ※ Manual override solenoid valve

- a. Use hand only to turn the control knob (do not use a tool).

- b. **Parking brake release**


Turn the control knob to counterclockwise fully (about 2.5 mm)

- c. **Parking brake work**

Turn the control knob to clockwise fully.

- ##### ※ Be careful not damage the control knob by using a tool or tightening forcibly.

It can cause malfunction of the solenoid valve.

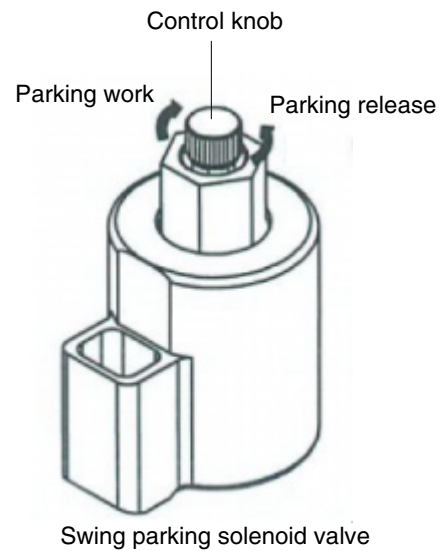


160A2SM11

## GROUP 4 TRAVEL DEVICE (TYPE 1, STD)

### 1. CONSTRUCTION

Travel device consists travel motor and gear box.



Travel motor includes brake valve, parking brake and high/low speed changeover mechanism.

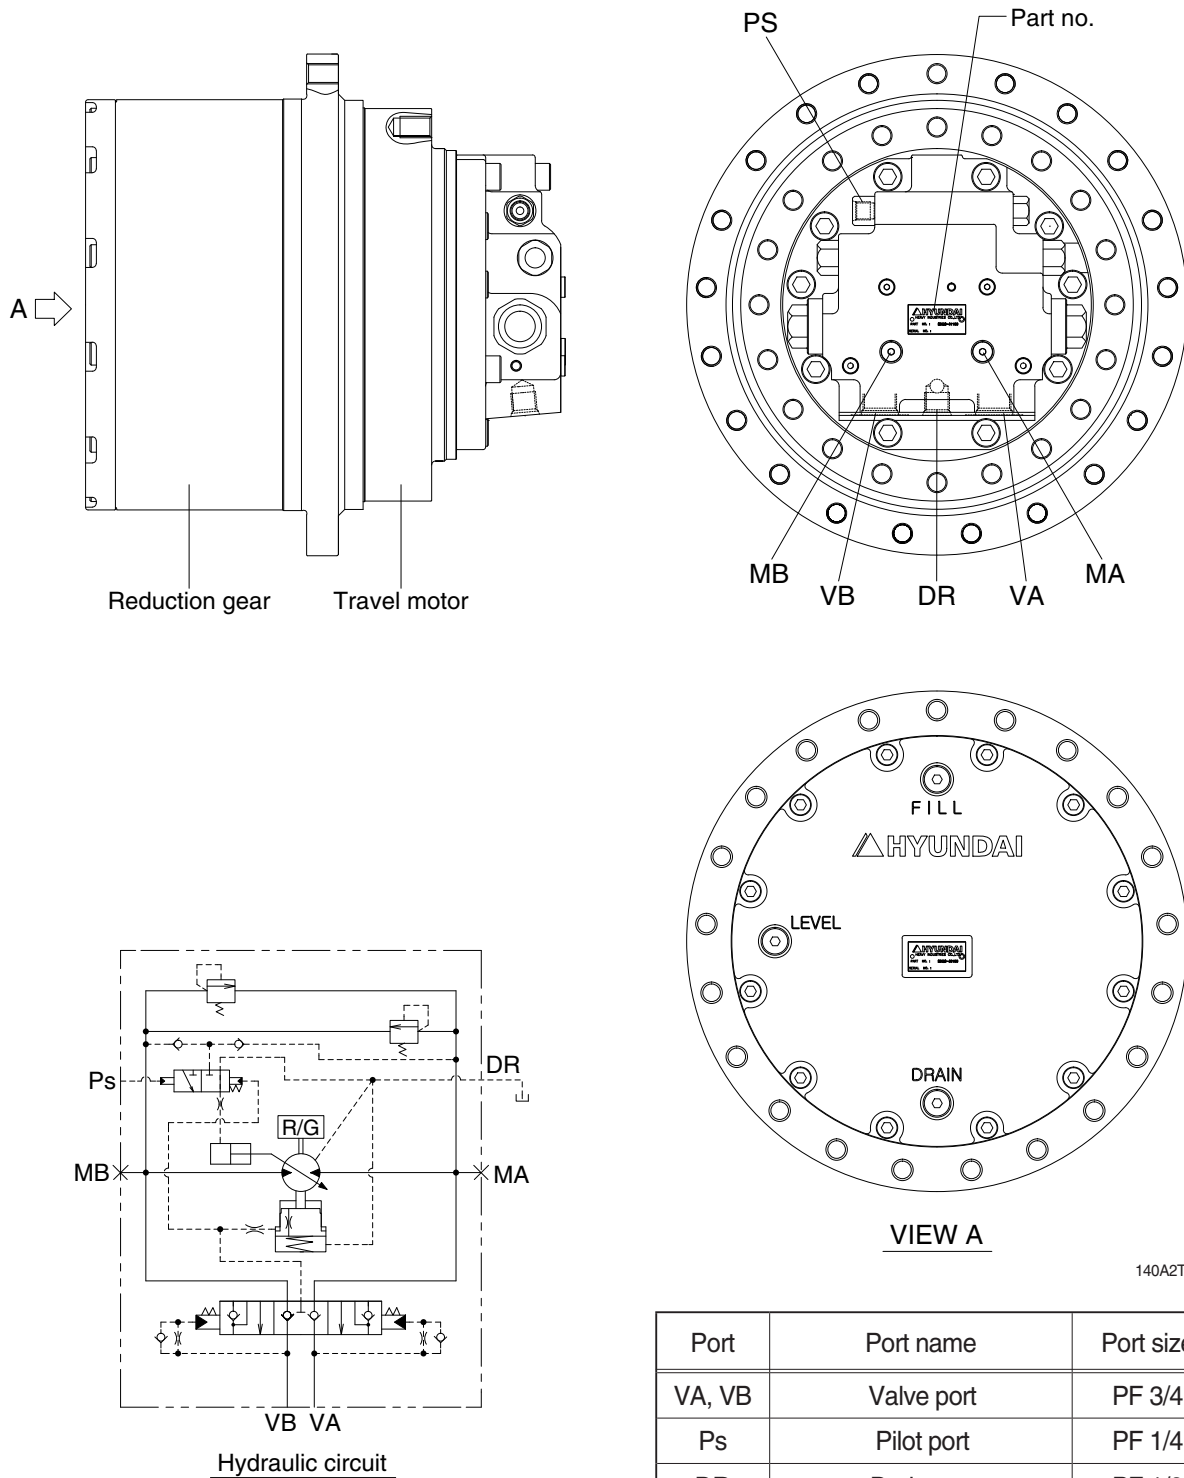

140A2TM01

Port	Port name	Port size
VA, VB	Valve port	PF 3/4
Ps	Pilot port	PF 1/4
DR	Drain port	PF 1/2
MA, MB	Gauge port	PF 1/4

2. STRUCTURE

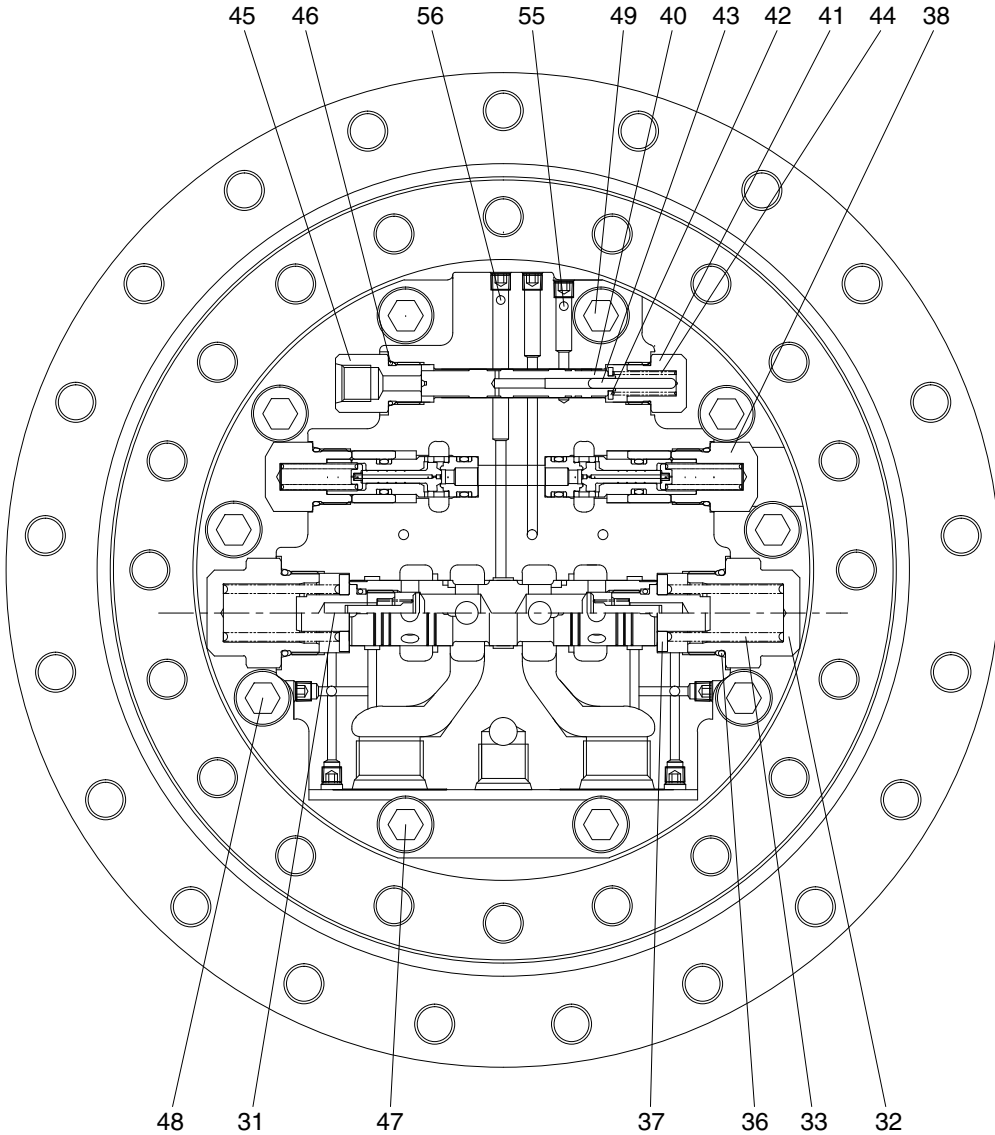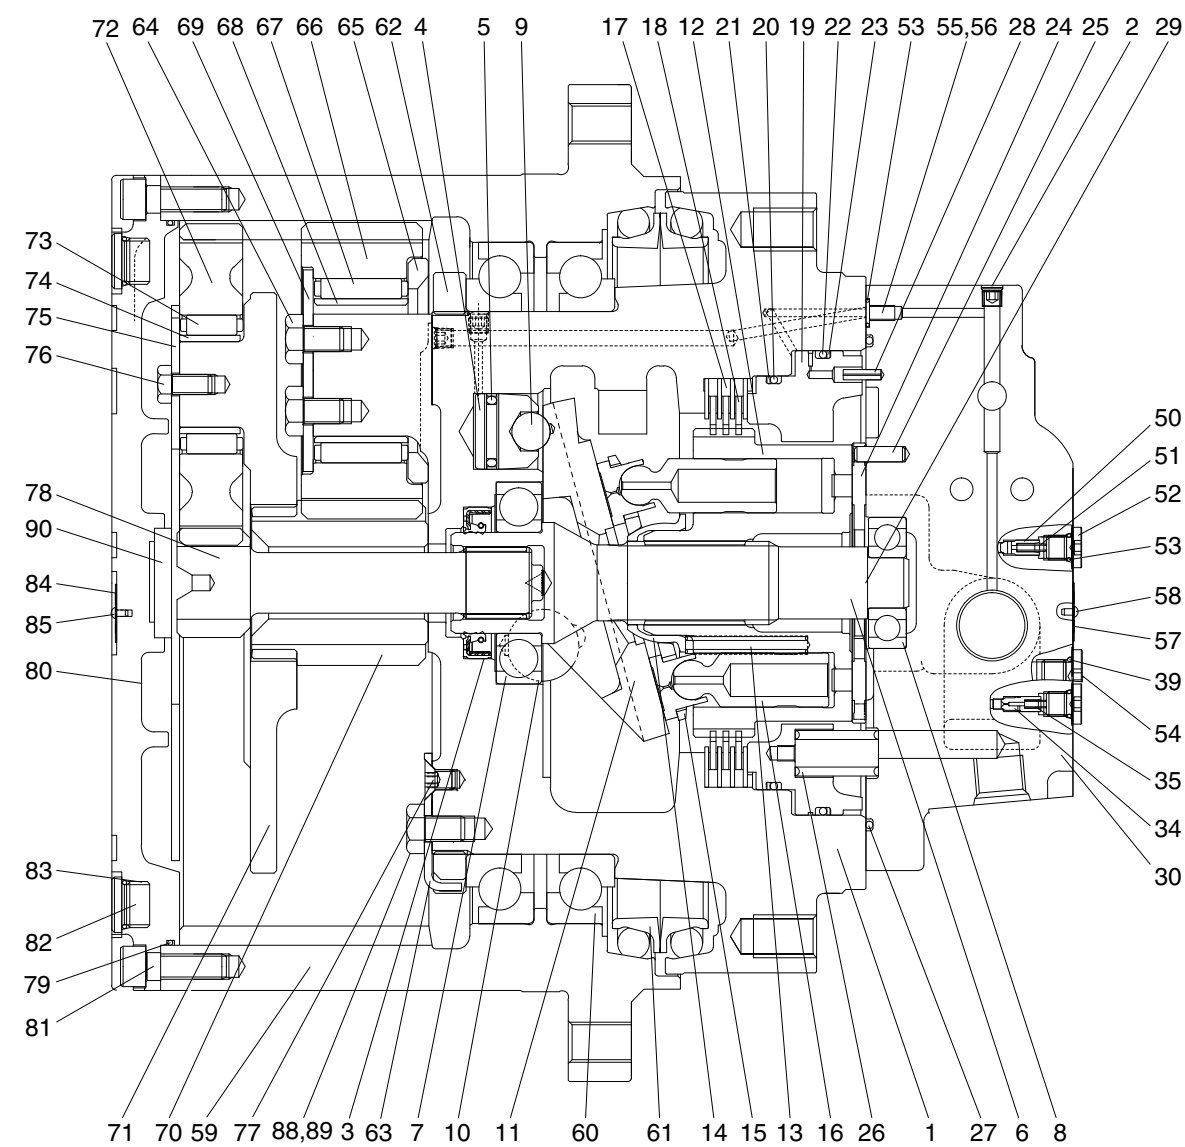

- |                      |                    |                             |                        |                           |
|----------------------|--------------------|-----------------------------|------------------------|---------------------------|
| 1 Casing             | 19 Parking piston  | 37 Spring seat              | 55 Restrictor          | 73 Needle bearing         |
| 2 Plug               | 20 O-ring          | 38 Relief valve assy        | 56 Restrictor          | 74 Inner race No. 1       |
| 3 Oil seal           | 21 Back up ring    | 39 O-ring                   | 57 Name plate          | 75 Thrust plate           |
| 4 Piston             | 22 O-ring          | 40 Spool                    | 58 Rivet               | 76 Hexagon head bolt      |
| 5 Piston seal        | 23 Back up ring    | 41 Plug                     | 59 Ring gear           | 77 Countersunk head screw |
| 6 Shaft              | 24 Valve plate     | 42 Spring seat              | 60 Ball bearing        | 78 Sun gear No.1          |
| 7 Front ball bearing | 25 Spring pin      | 43 Parallel pin             | 61 Floating seal assy  | 79 O-ring                 |
| 8 Rear ball bearing  | 26 Spring          | 44 Spring                   | 62 Nut ring            | 80 Cover                  |
| 9 Steel ball         | 27 O-ring          | 45 Connector                | 63 Lock plate          | 81 Hex socket head bolt   |
| 10 Pivot             | 28 Spring pin      | 46 O-ring                   | 64 Hexagon head bolt   | 82 Plug                   |
| 11 Swash plate       | 29 Parallel pin    | 47 Hexagon socket head bolt | 65 Thrust plate        | 83 O-ring                 |
| 12 Cylinder block    | 30 Rear cover      | 48 Hexagon socket head bolt | 66 Planetary gear No.2 | 84 Name plate             |
| 13 Spring            | 31 Main spool assy | 49 Hexagon socket head bolt | 67 Needle bearing      | 85 Rivet                  |
| 14 Ball guide        | 32 Cover           | 50 Check valve              | 68 Inner race No. 2    | 88 Plain washer           |
| 15 Retainer plate    | 33 Spring          | 51 Spring                   | 69 Thrust washer       | 89 Hexagon head bolt      |
| 16 Piston assy       | 34 Restrictor      | 52 Plug                     | 70 Sun gear No.2       | 90 Thrust plate           |
| 17 Friction plate    | 35 Spring          | 53 O-ring                   | 71 Carrier No.1        |                           |
| 18 Separated plate   | 36 O-ring          | 54 Plug                     | 72 Planetary gear No.1 |                           |

140A2TM02




### 3. OPERATION

#### 1) MOTOR

High pressure oil delivered from hydraulic pump is led to inlet port that is provided in the brake valve portion and, through the rear cover (30) and valve plate (24), led to cylinder block (12).

The oil flow and direction of shaft rotation are indicated in table.

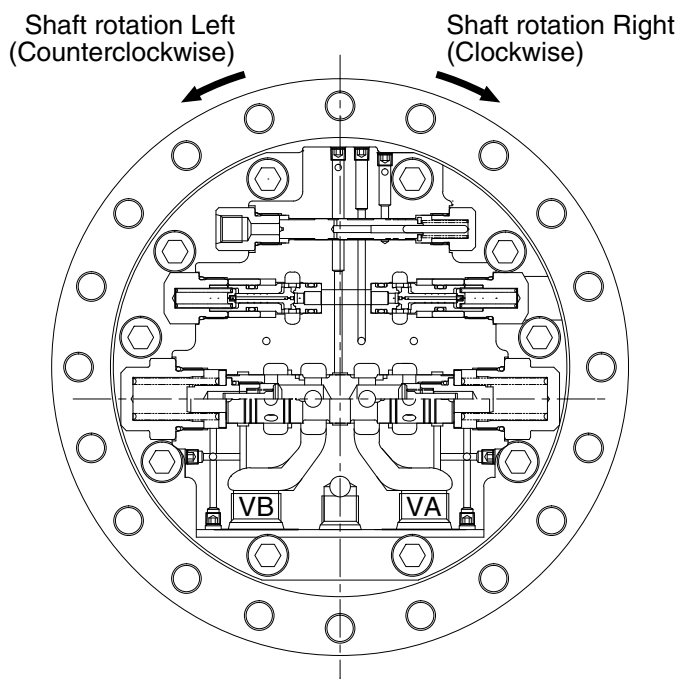

Inlet port	Outlet port	Direction of shaft rotation (viewing from rear cover)
VB	VA	Right (clockwise)
VA	VB	Left (counterclock wise)

125LCR2TM23

As shown in below figure, high pressure oil is supplied to the pistons which are on one side of the line Y-Y that connects upper and lower dead points and produces force F1.


$$F1 = P \times A \quad (P : \text{pressure}, A : \text{area of piston section})$$

The swash plate (11) with inclined angle of  $\alpha$  divides this force F1 into thrust force F2 and radial force F31-34.

This radial force is applied to axis Y-Y as turning force and generate drive torque of T.

$$T = r_1 \cdot F31 + r_2 \cdot F32 + r_3 \cdot F33 + r_4 \cdot F34$$

This drive torque is transmitted via cylinder block (12) to driving shaft (6).

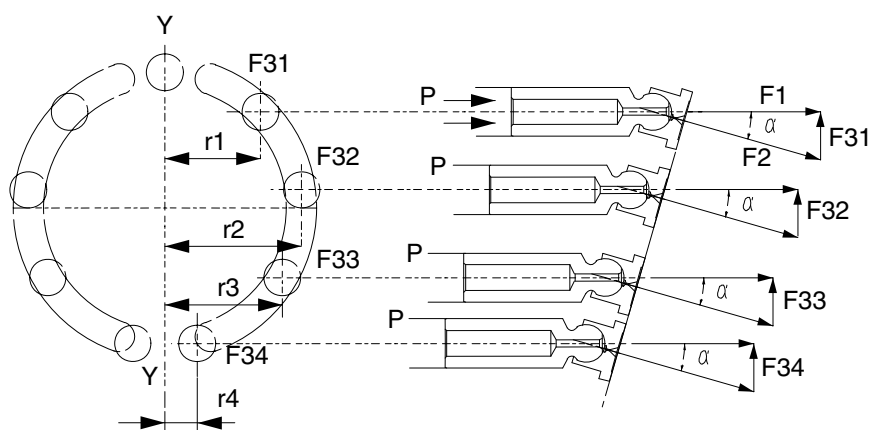

29092TM07


## 2) PARKING BRAKE

Parking brake is released when high pressure oil selected by the brake valve portion that is connected directly to the rear cover (30), is applied to the parking piston (19).

Otherwise the braking torque is always applied.

This braking torque is generated by the friction between the separated plates (18), inserted into the casing (1), and friction plates (17), coupled to cylinder block (12) by the outer splines.

When no pressure is activated on the parking piston (19), it is pushed by the brake springs (26) and it pushes friction plates (17) and separated plates (18) towards casing (1) and generates the friction force which brakes the rotation of cylinder block (12) and hence the shaft (6).

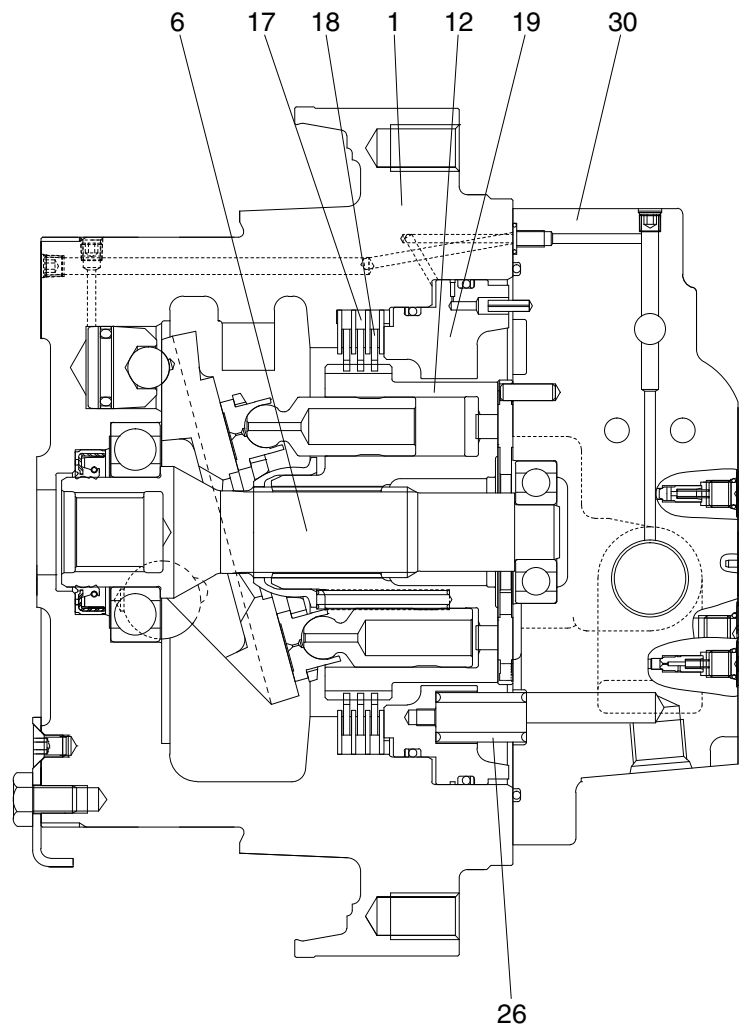

125LCR2TM24

### 3) CAPACITY CONTROL MECHANISM

Figure typically shows the capacity control mechanism.

When high speed pilot line is charged with the pressure  $P_A$  that overcome the spring (44), the spring (44) is compressed and spool (40) shifts to the right to connect the port P and port C.

Then, the highest pressure is selected by the check valve (50) from inlet and outlet pressure of the motor and high speed pilot line pressure and pushes shifter piston (4). As a result, swash plate (11) turns around the line L which connect the two steel balls (10) as shown by dotted lines. The turn stops at the stopper (1-1) of casing and swash plate (11) keeps the position.


In this case, the piston stroke become shorter and motor capacity become smaller and motor rotates faster, around 1.60 times, by the same volume of oil.

When no pressure is in the high speed pilot line  $P_A$ , spool (40) is pushed back by the spring (44) and pressure that pressed the shifter piston (4) is released to the hydraulic tank through restrictor (55).

Here, nine pistons are there and they equally spaced on the swash plate (11). The force that summed up those of pistons comes to almost the center of the swash plate (11) as shown. Since the steel balls (10) are off-set by S from the center, the rotating force of product S and the force moves swash plate (11) to the former position and the speed returns to low.

When the power demand exceeds the engine power, such as in steep slope climbing or turning at high speed mode, the system step down to the low speed automatically. The mechanism is that: pump pressure is led to the port  $P_B$  and this pressure activate on pin (43). When the pressure at  $P_B$  exceeds predetermined value, spool (40) returns to the left by the counter-pressure against pin (43) and the pressure on the shifter piston (4) through port C is released to the tank and the motor comes to low speed.

When  $P_B$  goes down, the spool (40) moves to the right and the speed become high.

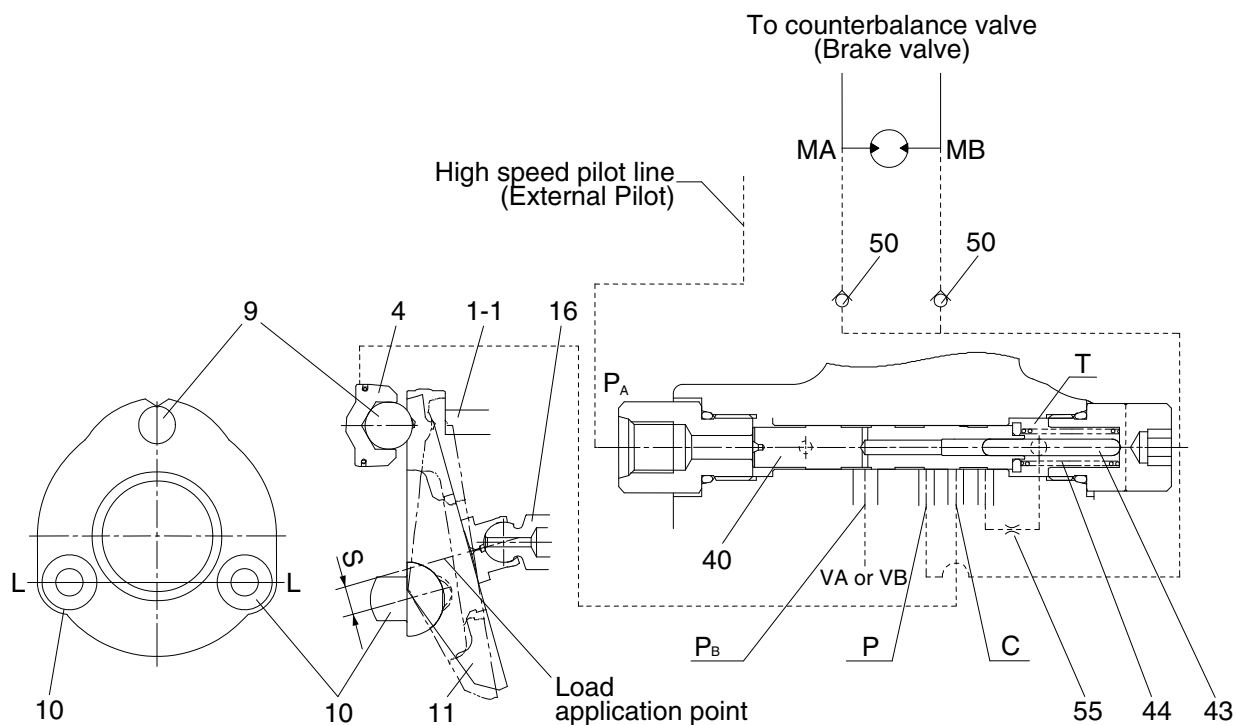


125LCR2TM19

#### 4) OVERLOAD RELIEF VALVE

##### (1) Structure

This valve is screwed in the motor rear cover (30) and consists of : plug (38-1) that is screwed and fixed in the rear cover (30), poppet (38-8) and supports the poppet seat (38-9), spring (38-2) that is operating relief valve setting pressure and supports the spring seat (38-3), that is inserted in the sleeve (38-4), piston (38-5) that reduce the shock.

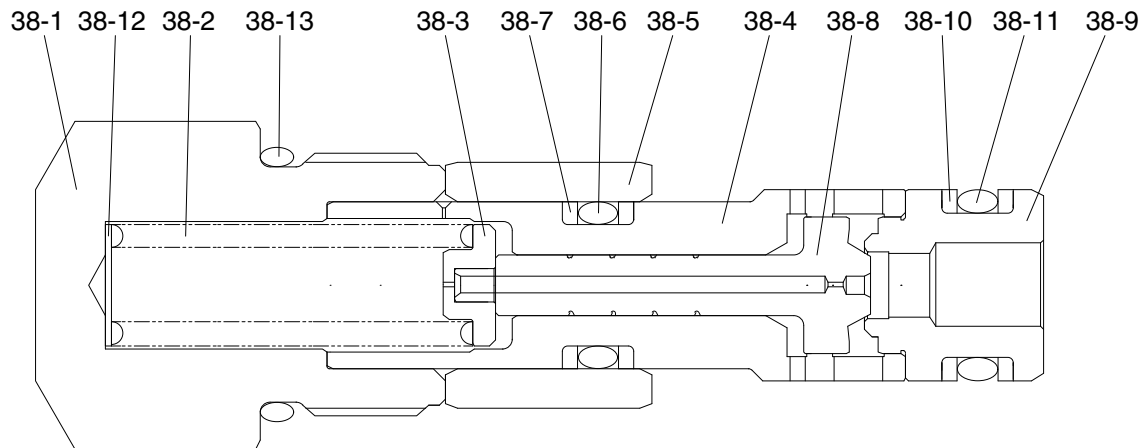

125LCR2TM25

38-1 Plug	38-6 O-ring	38-11 O-ring
38-2 Spring	38-7 Back-up ring	38-12 Ring
38-3 Spring seat	38-8 Poppet	38-13 O-ring
38-4 Sleeve	38-9 Poppet seat	
38-5 Piston	38-10 Back-up ring	


## (2) Operation

Two pieces of overload valves are located at cross-over position in the counterbalance circuit of brake valve and have the following functions :

- ① When hydraulic motor starts, keep the driving pressure below predetermined value and while accelerating, bypasses surplus oil to return line.
- ② When stopping the motor, keep the brake pressure, that develops on the outlet side of motor, under the predetermined value to stop the inertial force.
- ③ To accelerate sharply while starting, and to mitigate the braking shock while stopping. For these purposes, the developed pressure is kept comparatively low for a short period, then keep the line pressure as normal value. While the pressure is low, meshing of reduction gears, crawler and sprocket etc. can be smoothly done and the shock are absorbed.

When starting, "A" port pressure of overload valve increases, this pressure is applied to the effective diameter of poppet (38-8) which seats on the poppet seat (38-9) and, at the same time, is delivered, via small hole, to the spring seat (38-3) located inside the sleeve (38-4) and the seat bore pressure increases up to "A" port pressure. The poppet (38-8) opposes to spring (38-2) by the force of the pressure exerted on the area difference between poppet seat's effective diameter and spring seat bore and keep the predetermined pressure.

When hydraulically braking, the piston (38-5) is at the left position by the driving pressure, and when "A" port pressure increases, the pressure is applied also to the piston (38-5) through the small hole in the poppet (38-8), sleeve (38-4) and piston (38-5) moves rightward until it touches the stopper in rear cover. In this while, the poppet (38-8) maintains "A" port pressure at comparatively low against the spring (38-2) force and exhaust oil to "B" port side. After the piston reached to the plug, the valve acts the same as at starting.

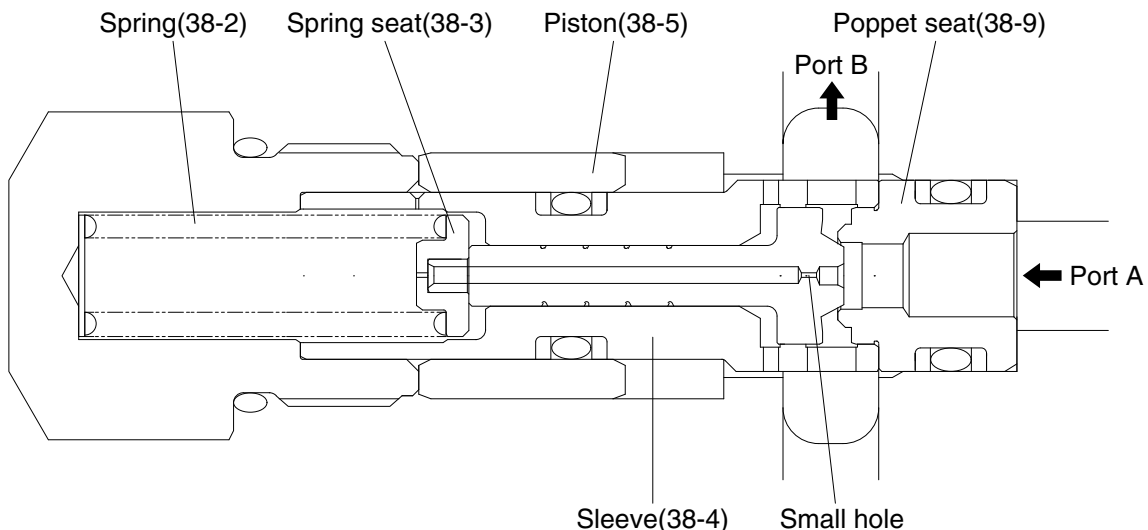

125LCR2TM27

## 5) BRAKE VALVE

### (1) Structure

The brake valve portion mainly consists of the following parts:


#### ① Spool

By shifting the spool (31), the discharged oil from hydraulic motor is automatically shut off or restricted according to the condition and give the effect of holding, accelerating, stopping and counterbalance operations.

(See page 2-70, (2) Operation)

#### ② Check valve (built in the spool)

This valve is located in the oil supplying passage to hydraulic motor, and at the same time functions to lock oil displacement. Therefore, this valve serves as not only a suction valve but also a holding valve for hydraulic motor.

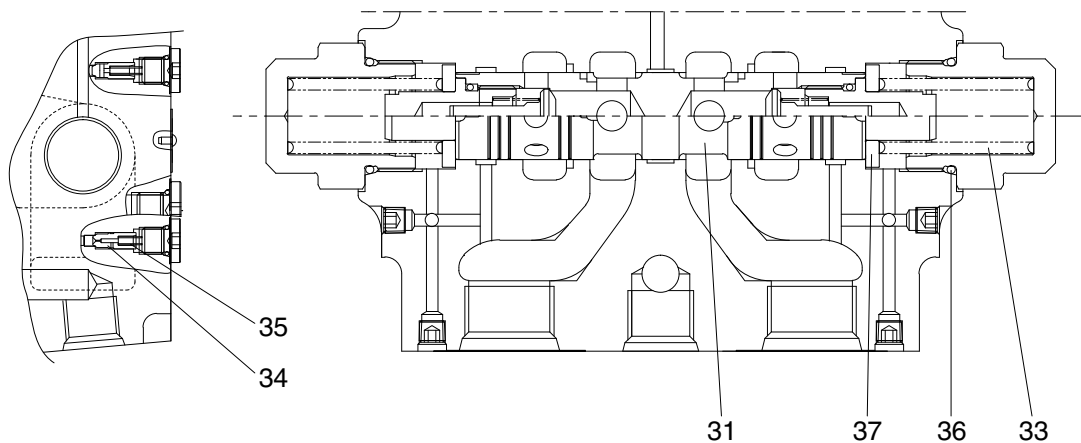

125LCR2TM28

31 Main spool  
33 Spring

34 Restrictor  
35 Restrictor spring

36 O-ring  
37 Spring seat

## (2) Operation

### ① Holding operation


When the control valve is at neutral position, VA and VB ports are connected to the tank, and the spring (33) located on both spool ends holds the spool (31) at central position.

Therefore, the passages from VA to MA and VB to MB are closed, which result in closing MA and MB ports connected to hydraulic motor.

Since the passage to parking brake is connected to the tank line, the brake cylinder pressure is equal to the tank pressure and the brake is applied by the springs. Thus, the rotation of the motor is mechanically prevented.

If external torque is exerted on the motor shaft, the motor would not rotate as usual by this negative parking brake.

In case the brake should be released for some reason, pressure is built on MA or MB port. But, due to oil leakage inside hydraulic motor or so, high-pressure oil escapes from the closed circuit and motor rotates a bit. So, the cavitation tends to occur in the lower pressure side of the closed circuit. Then, the check valve, built in the spool (31), operates to avoid the cavitation and opens the passage from VA to MA or from VB to MB. Then the oil equivalent to the leakage is sucked from the tank line to the closed circuit.

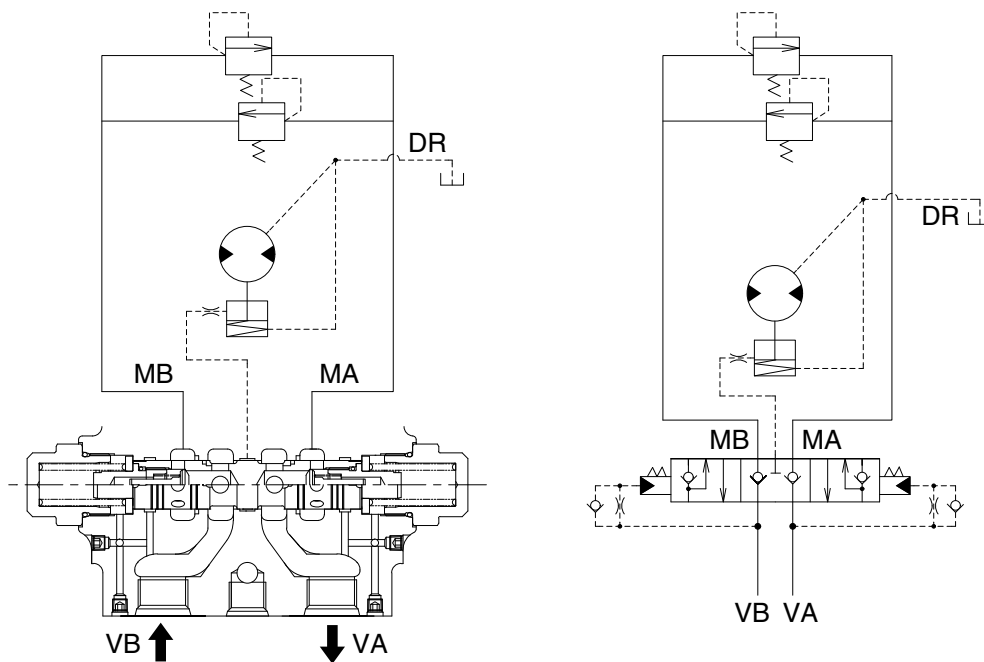

125LCR2TM29


## ② Accelerating operation

When VA and VB ports are connected respectively to pump and tank by operating the control valve, hydraulic oil from pump is forwarded through VA port to push open the check valve provided inside spool (31), and oil flows to motor via MA port to rotate the motor.

Therefore, the pressure increases and negative brake is released by the pressure supplied from pump. At the same time, the pressure of pilot chamber increases to push and move the spool (31) leftwards, overcoming the spring (33) force. Thus, the return line from MB to VB opens to rotate the motor.

In case inertia load is too big to start rotation, accelerating pressure reaches the set pressure of relief valve and high pressure oil is being relieved while the motor gains the rotational speed.

As the rotational speed goes up, the relieved volume decreases, and finally the motor rotates at a fixed speed.

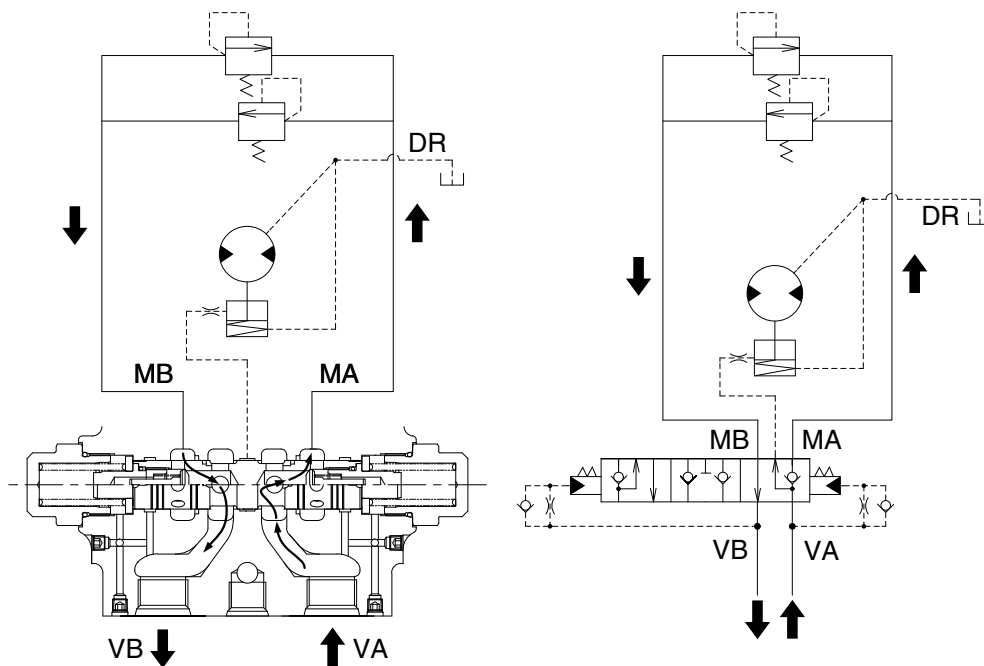

125LCR2TM30




### ③ Stopping operation

Returning the control valve to neutral position while running the motor, the oil supply is cut off and VA and VB ports are connected to the tank line. Then the pressure of the pilot chamber located on both spool ends become equal, and the spool (31) returns to the neutral position by spring (33) force. Thus, the passage from MA to VA is closed.

Owing to the inertia force of the load, the hydraulic motor tends to continue the rotation. Here, the motor functions as a pump and forwards the oil to MB port but the passage is blocked and MB port pressure increases. Then the relief valve opens to relieve the pressure and rotational speed decelerates and at last the motor stops.

Negative brake release pressure is gradually lowered due to the restrictor and finally the brake works and the motor is mechanically stopped.

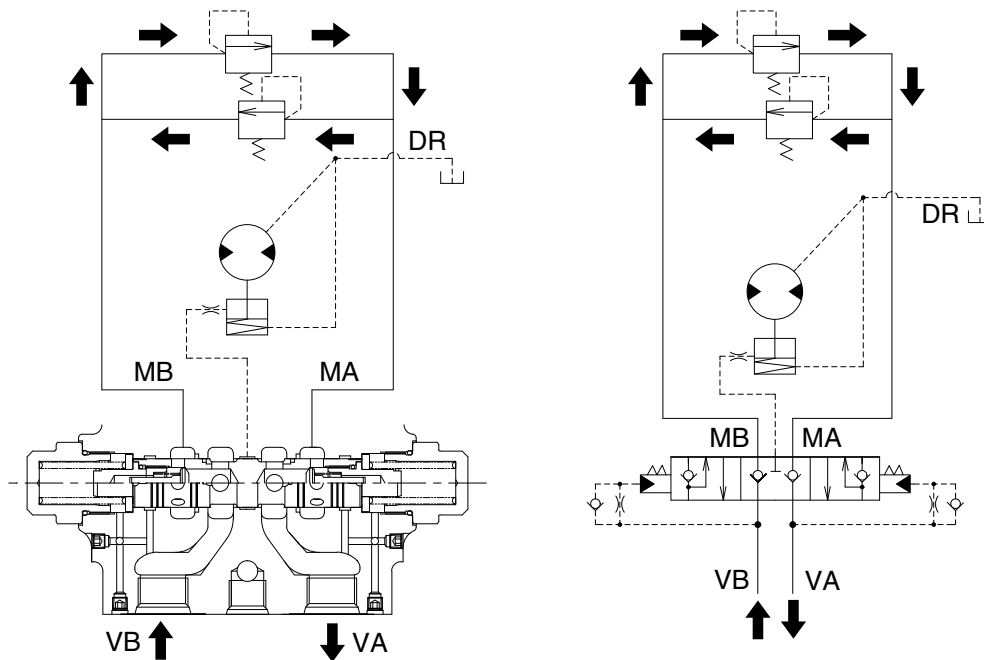

125LCR2TM31

#### ④ Counterbalance operation

Counterbalance operation is required to decelerate slowly the hydraulic motor while absorbing inertia force.

In case the hydraulic oil is gradually decreased from pump to VB port, the drive shaft of hydraulic motor tends to rotate faster than that matched to the volume of oil supply.


Consequently, the pilot chamber pressure on MB to VB side decreases and the spring (33) force moves the spool (31) leftwards towards neutral position.

Therefore, the area of passage from MA to VA becomes smaller and the pressure on MA side rises due to increased resistance in the passage and the motor receives hydraulic braking effect.

If the motor rotates slower than that matched to the volume of supplied oil, the pilot chamber pressure on VB port increases, and spool (31) moves rightwards to enlarge the area of passage from MA to VA. Therefore the braking effect becomes smaller and the rotational speed of motor is controlled to correspond to the volume of supplied oil.

In order to give stable counterbalance operation, the restrictors (34) are set in the pilot chamber to damp the spool (31) movement.

The parking brake is released during pressure adjusting action of the spool (31).

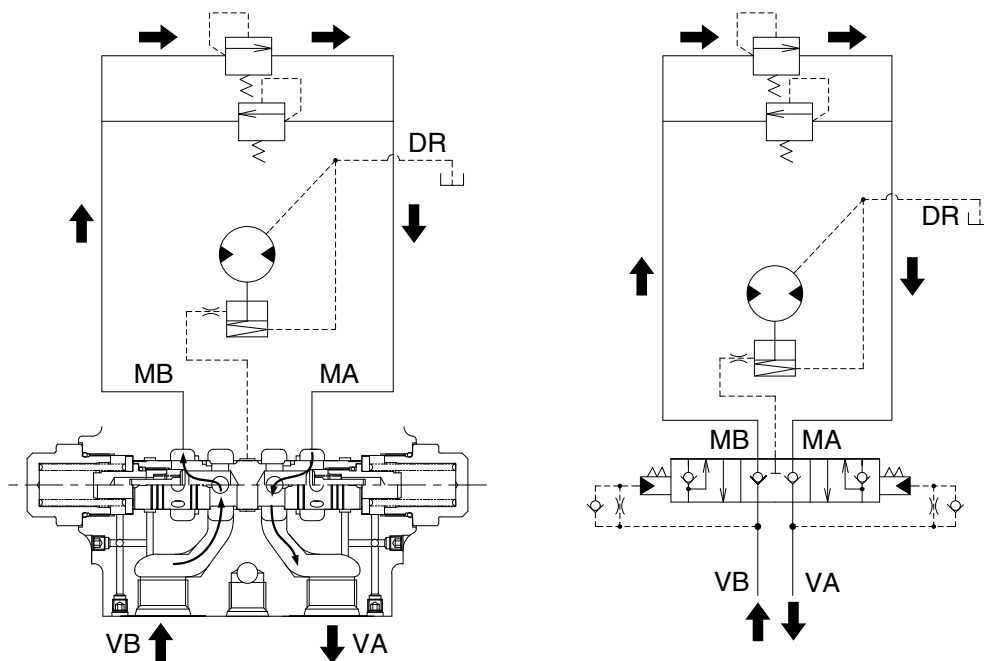

125LCR2TM32

## 6) REDUCTION GEAR

Reduction unit slows down the rotating speed of motor and converts motor torque to strong rotating force.


This reduction unit utilizes two stages, planetary reduction system.

Planetary reduction system consists of sun gear, planetary gears, (planetary) carriers, and ring gear.

When the sun gear (s) is driven through input shaft, planetary pinions (b), rotating on their center, also move, meshing with fixed ring gear (a), around sun gear (s).

This movement is transferred to carrier (k) and deliver the torque.

This mechanism is called planetary gear mechanism.

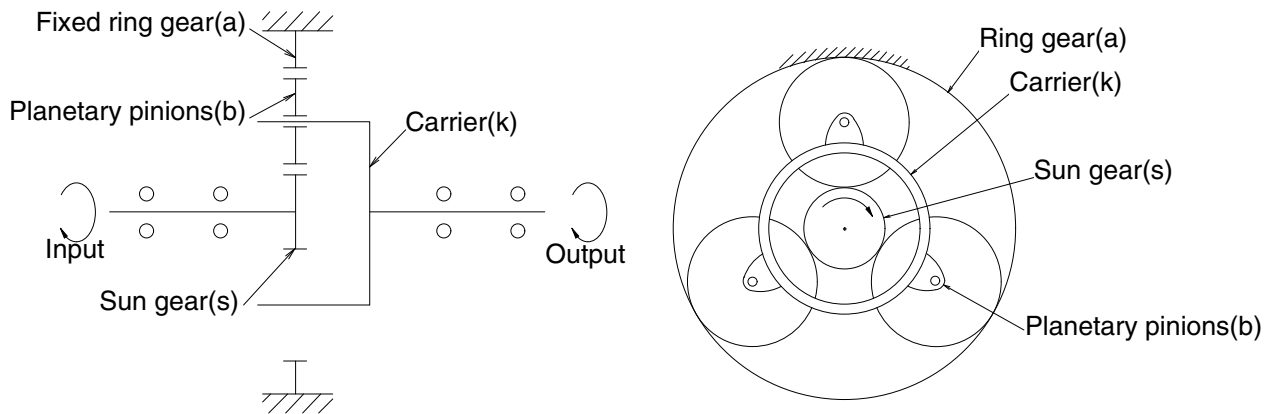


29072TM10

29072TM11

When the sun gear **S1** is driven by input shaft, planetary action occurs among gears **S1**, **a** and **b** and revolution of gear **b** transfers the rotation of carrier **K1** to second sun gear **S2**, and also evokes planetary action between gear **S2**, **a** and **d**.

This time, because carrier **K2** is fixed to frame, gear **d** drives ring gear **a** and then ring gear **a** rotates to drive sprocket.

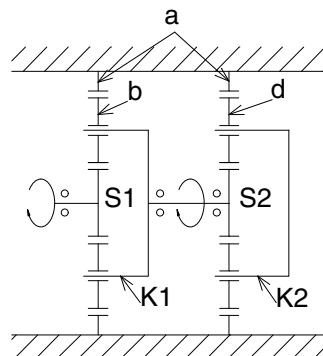





29072TM12

## TRAVEL DEVICE (TYPE 2, HIGH WALKER)

### 1. CONSTRUCTION

A Hydraulic motor includes followings.

- Part of rotary generating turning force
- Part of a valve of relief
- Part of Brake
- Part of a valve of counterbalance
- Part of flowing changeover
- Part of auto changeover

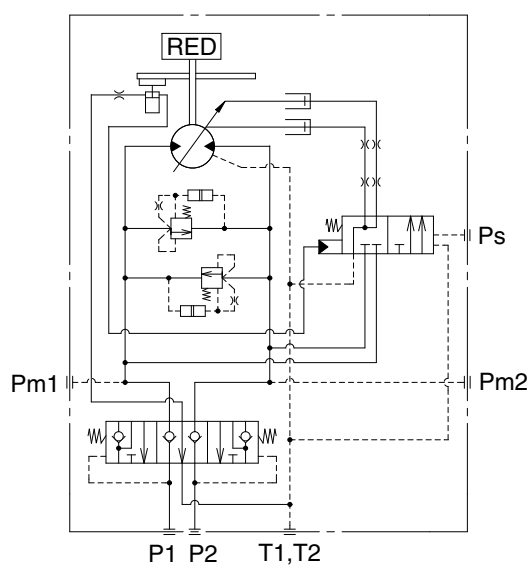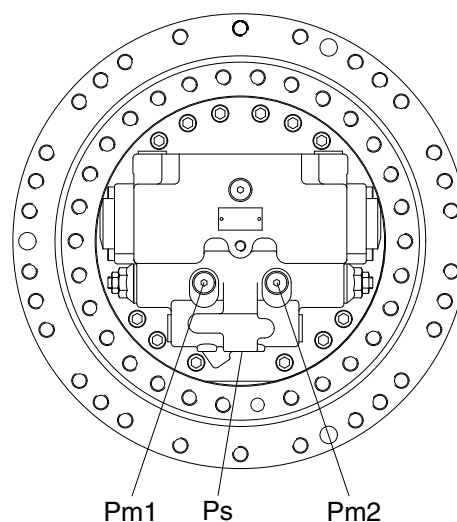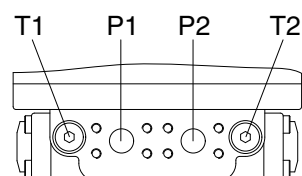
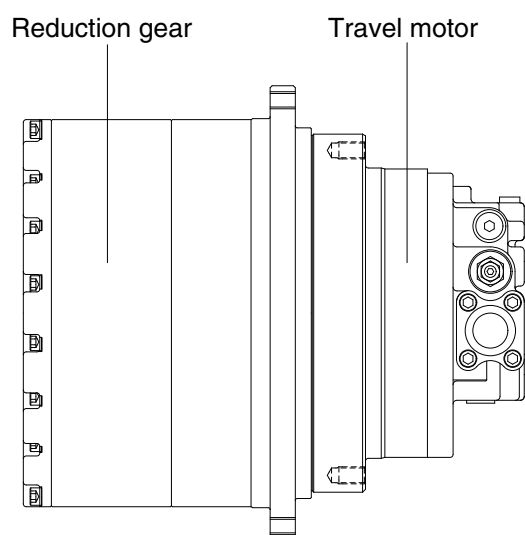


Hydraulic circuit

Port	Port name	Port size
P1, P2	Main port	SAE 4694psi 1"
Pm1, Pm2	Gauge port	PF 1/4
T1, T2	Drain port	PF 1/2
Ps	2 speed control port	PF 1/4

16092TM01

## 2. STRUCTURE

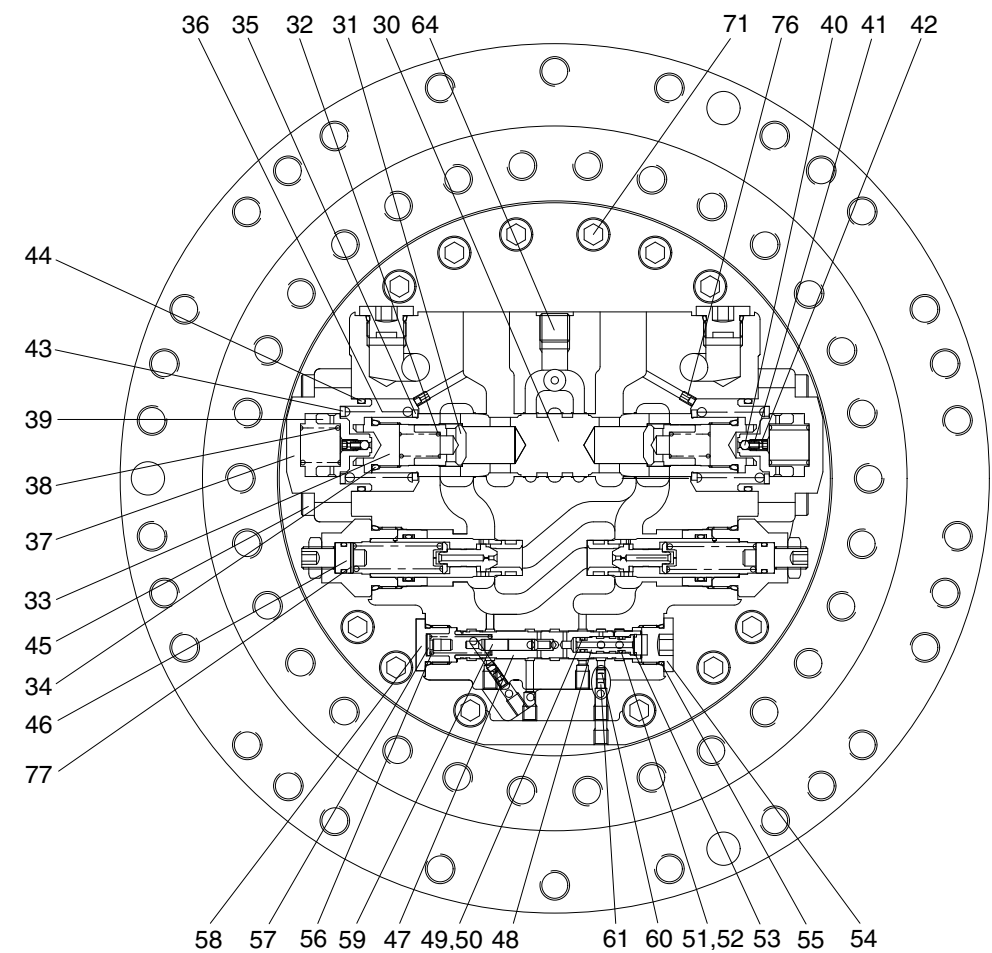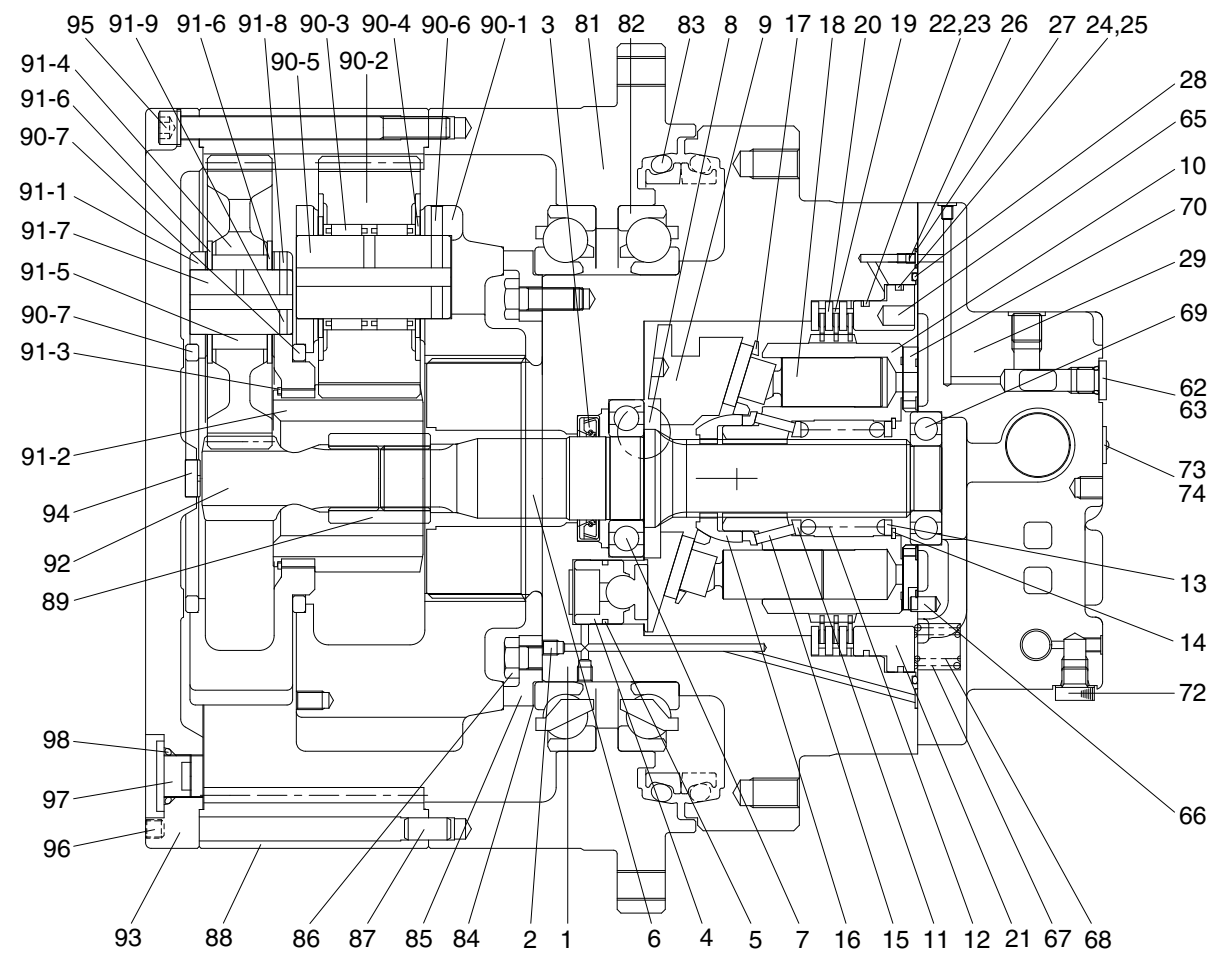

16092TM02

1	Shaft casing	20	Separate plate	39	Spool	58	Plug	77	Shim	91-1	Carrier No.1
2	Plug	21	Parking piston	40	Steel ball	59	Spool	81	Housing	91-2	Sun-gear No.2
3	Oil seal	22	O-ring	41	Spring	60	Orifice	82	Main bearing	91-3	Retaining ring
4	Swash piston	23	Back up ring	42	Plug	61	Orifice	83	Floating seal	91-4	Planetary gear No.1
5	Piston ring	24	O-ring	43	Spring seat	62	Plug	84	Shim	91-5	Needle bearing No.1
6	Shaft	25	Back up ring	44	O-ring	63	O-ring	85	Retainer	91-6	Thrust washer
7	Bearing	26	Orifice	45	Wrench bolt	64	Plug	86	Hex head bolt	91-7	Pin No.1
8	Steel ball	27	O-ring	46	Relief valve assy	65	Pin	87	Parallel pin	91-8	Spring pin
9	Swash plate	28	O-ring	47	Spool	66	Pin	88	Ring gear	91-9	Spring pin
10	Cylinder block	29	Rear cover	48	Guide	67	Spring	89	Coupling	92	Sun gear No.1
11	Spring seat	30	Spool	49	O-ring	68	Spring	90	Carrier assy No.2	93	Cover
12	Spring	31	Check	50	Back up ring	69	Bearing	90-1	Carrier No.2	94	Pad
13	End plate	32	Spring	51	O-ring	70	Valve plate	90-2	Planetary gear No.2	95	Hex socket head bolt
14	Snap ring	33	Plug	52	Back up ring	71	Wrench bolt	90-3	Needle bearing No.2	96	Hex socket Screw
15	Pin	34	O-ring	53	Snap ring	72	Plug	90-4	Thrust washer	97	Hydraulic plug
16	Ball guide	35	Spring seat	54	plug	73	Name plate	90-5	Pin No.2	98	O-ring
17	Set plate	36	Spring	55	O-ring	74	Rivet	90-6	Spring pin	99	Name plate
18	Piston assy	37	Cover	56	Spring	75	Seal kit	90-7	Thrust ring		
19	Friction plate	38	Spring	57	Spring seat	76	Orifice	91	Carrier assy No.1		

### 3. OPERATION

#### 1) Generating the turning force

The high hydraulic supplied from a hydraulic pump flows into a cylinder block (10) through rear cover (29) of motor, and valve plate (70).

The high hydraulic is built as flowing on one side of Y-Y line connected by the upper and lower sides of piston assy (18).



The high hydraulic can generate the force,  $F1 = P \times A$  ( $P$  : supplied pressure,  $A$  : water pressure area), like following pictures, working on a piston.

This force,  $F1$ , is divided as  $N1$  thrust partial pressure and  $W1$  radial partial pressure, in case of the plate (09) of a tilt angle,  $\alpha$ .

$W1$  generates torque,  $T = W1 \times R1$ , for Y-Y line connected by the upper and lower sides of piston as following pictures.

The sum of torque ( $\sum W1 \times R1$ ), generated from each piston (4~5 pieces) on the side of a high hydraulic, generates the turning force.

This torque transfers the turning force to a cylinder block (10) through a piston; because a cylinder block is combined with a turning axis and spline, a turning axis rotates and a turning force is sent.

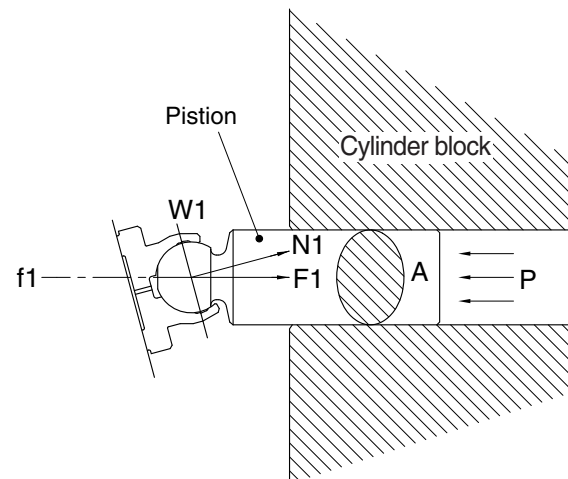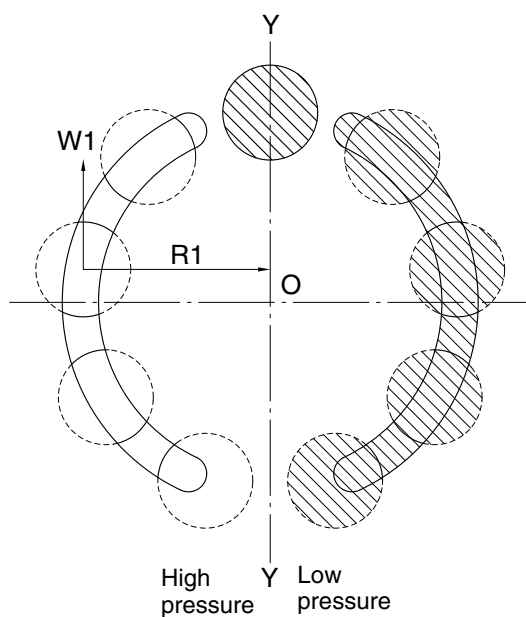


21078TM05

## 2) Working of relief valve

Relief valve carries on two functions of followings.

- (1) It standardizes a pressure in case of driving a hydraulic motor ; bypasses and extra oil in a motor inlet related to acceleration of an inertia to an outlet.
- (2) In case of an inertia stopped, it forces an equipment stopped, according to generating the pressure of a brake on the projected side.

Room A is always connected with port A of a motor. If the pressure of port is increased, press poppet A. And if it is higher than the setting pressure of a spring, the oil of an hydraulic flows from room A to port B, because poppet A is detached from the contact surface of seat A.

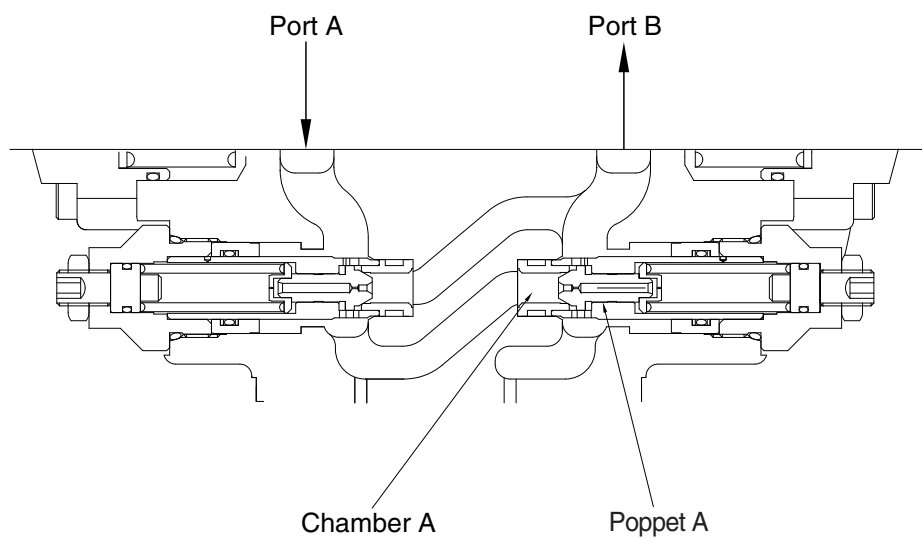

21078TM06A

### 3) Working of negative brake


When the operating pressure is supplied to the brake piston (21) through the spool (simultaneous peripheral operation online) built in the shaft casing (1), the negative brake is released.

When the pressure does not work, the brake always runs.

The force of a brake is generated by the frictional force among a separate plate (20) fixed by shaft casing, parking piston (21) and a frictional plate (19) connected through spline outside a cylinder block (10).

When a pressure does not work on the part of piston, brake spring presses brake piston; oil in a brake room flows into the drain of a motor through an orifice; in that time, brake piston compresses a frictional plate and a detached plate in the middle of shaft casing (1) and brake piston (21) according to the force that presses 10 pieces of brake springs (67, 68); finally, it makes a frictional force.

This frictional force helps the brake fixing a turning shaft (6) connected by a cylinder and spline operated.

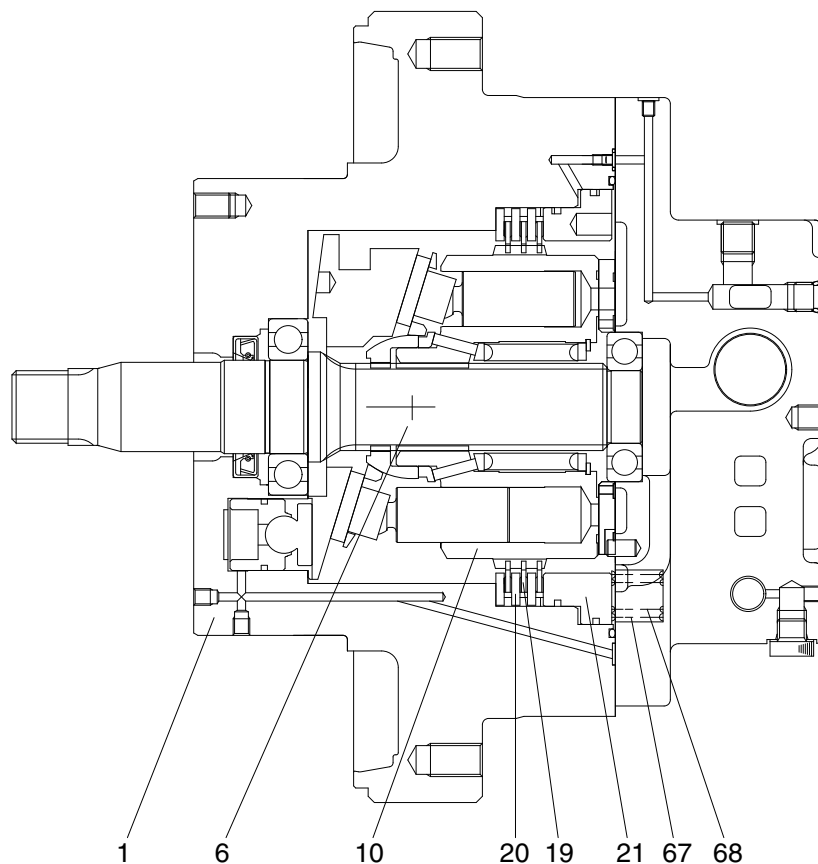

21092TM07




#### 4) Counterbalance valve

Av port is connected to a hydraulic pump; Bv port is connected to a tank.

An oil supplied from a hydraulic pump presses check valve and flows into L port. It makes a hydraulic motor circulated. The oil pressure out of a pump is increased and transferred to spring room M through the path G because negative brake is working on. When the pressure of room M exceeds the force of spring that keeps spool at its neutral position, the spool begins to move the right side.

An oil in room N is sent to room M by orifice I and discharged from G line to a tank.


Then the spool moves to the right and the oil flows from K to Bv.

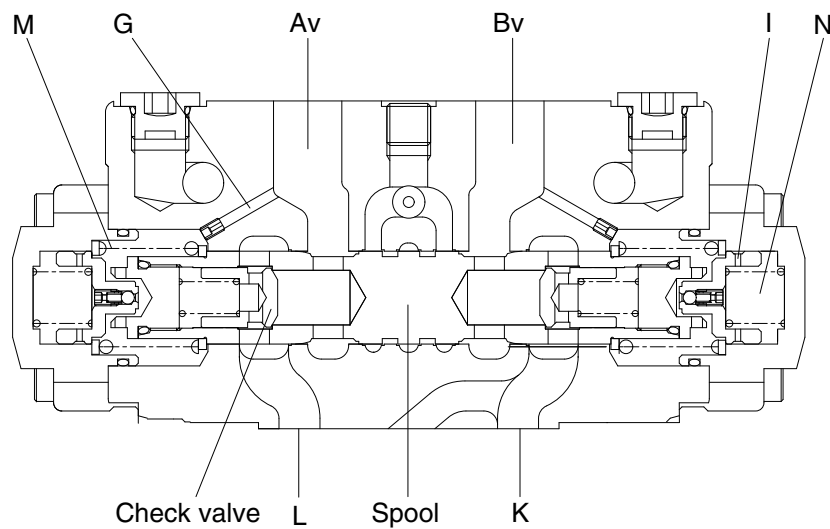

21078TM08

##### 5) Working description of automatic switch (at normal speed)

Due to no pressure on pilot now, spool (47) is not working.

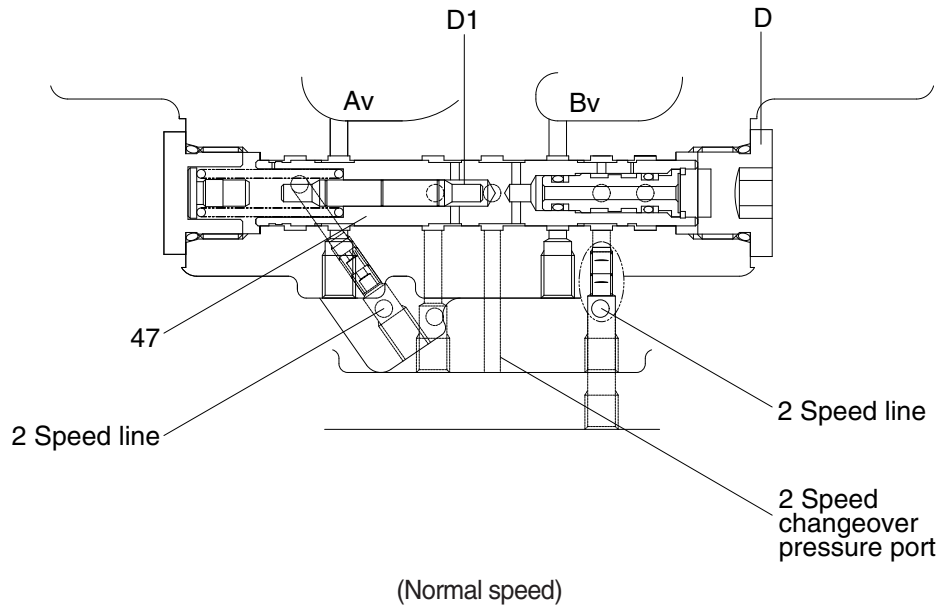


21078TM09

## 6) Working description of automatic switch (at high speed)

At normal speed, once the hydraulic oil which is through the inner path of spool (47) flows into high speed switching pressure port (the pressure of external pilot :  $P_i = 35 \text{ kgf/cm}^2$ ) spool (47) moves from right to left.

At high speed, turning pressure of motor (D1) is over  $250 \text{ kgf/cm}^2$ , when the power forcing to spool (59) (pressure,  $P_1$ ) is stronger than spool (47) and spool (59) is pushed out, after then spool (47) moves from left to right. So it is switched.

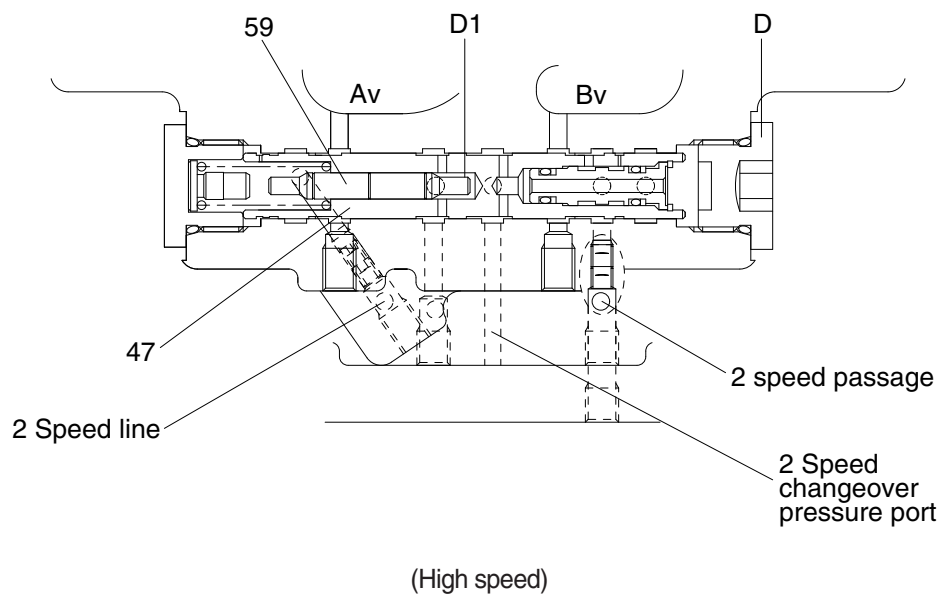

21078TM10


## GROUP 5 RCV LEVER

### 1. STRUCTURE

The casing has the oil inlet port P (primary pressure) and the oil outlet port T (tank). In addition the secondary pressure is taken out through ports 1, 2, 3 and 4 provided at the bottom face.


※ Refer to the parts manual for the types of the RCV lever.

#### 1) TYPE M1, M10

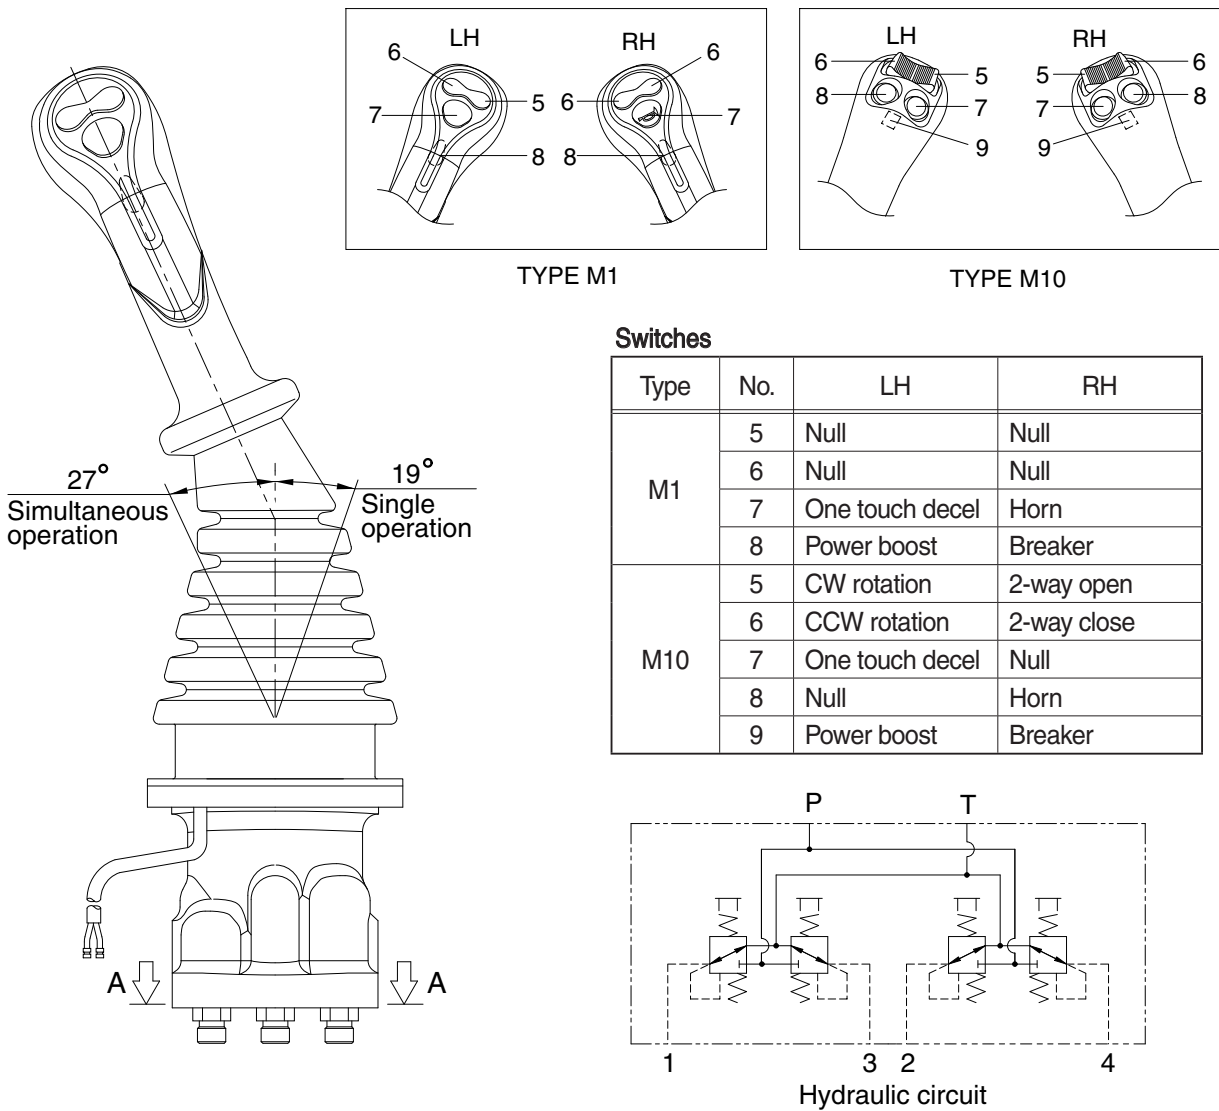

#### Switches

Type	No.	LH	RH
M1	5	Null	Null
	6	Null	Null
	7	One touch decel	Horn
	8	Power boost	Breaker
M10	5	CW rotation	2-way open
	6	CCW rotation	2-way close
	7	One touch decel	Null
	8	Null	Horn
	9	Power boost	Breaker


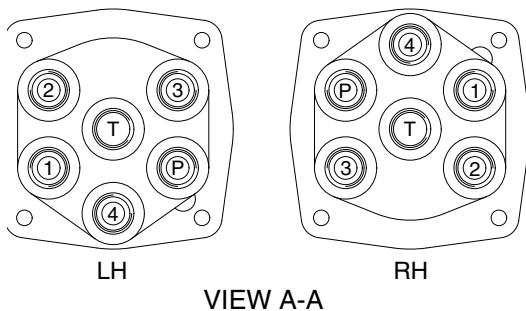


#### Pilot ports


Port	LH	RH	Port size
P	Pilot oil inlet port	Pilot oil inlet port	PF 3/8
T	Pilot oil return port	Pilot oil return port	
1	Left swing port	Bucket out port	
2	Arm out port	Boom up port	
3	Right swing port	Bucket in port	
4	Arm in port	Boom down port	

160A2RL01

2) TYPE M11, M12

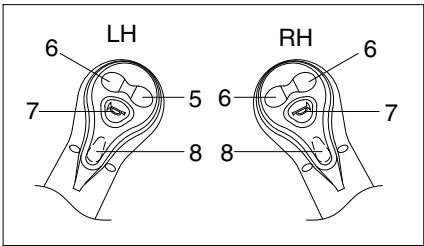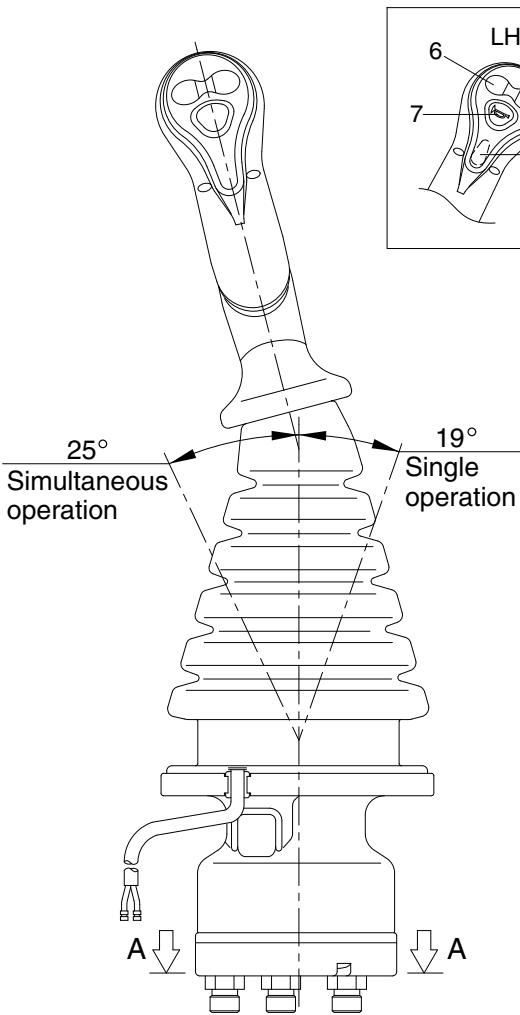


TYPE M12

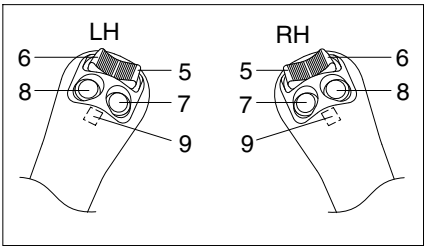


TYPE M11

Switches

Type	No.	LH	RH
M12	5	Null	Null
	6	Null	Null
	7	One touch decel	Horn
	8	Power boost	Breaker
M11	5	CW rotation	2-way open
	6	CCW rotation	2-way close
	7	One touch decel	Null
	8	Null	Horn
	9	Power boost	Breaker

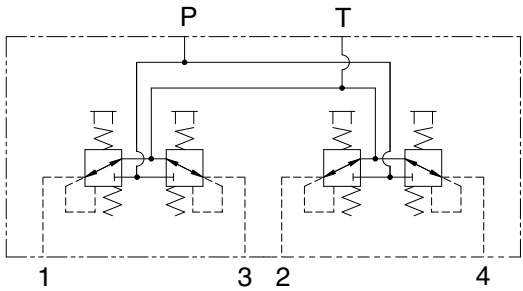

Hydraulic circuit

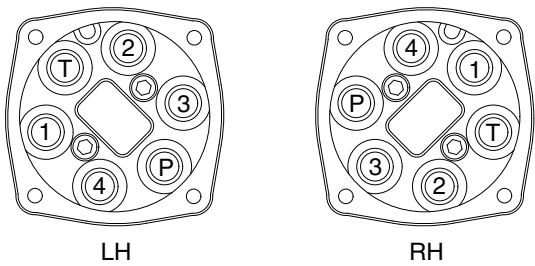

LH

RH


VIEW A-A

Pilot ports

Port	LH	RH	Port size
P	Pilot oil inlet port	Pilot oil inlet port	PF 3/8
T	Pilot oil return port	Pilot oil return port	
1	Left swing port	Bucket out port	
2	Arm out port	Boom up port	
3	Right swing port	Bucket in port	
4	Arm in port	Boom down port	

160A2RL05

### 3) CROSS SECTION

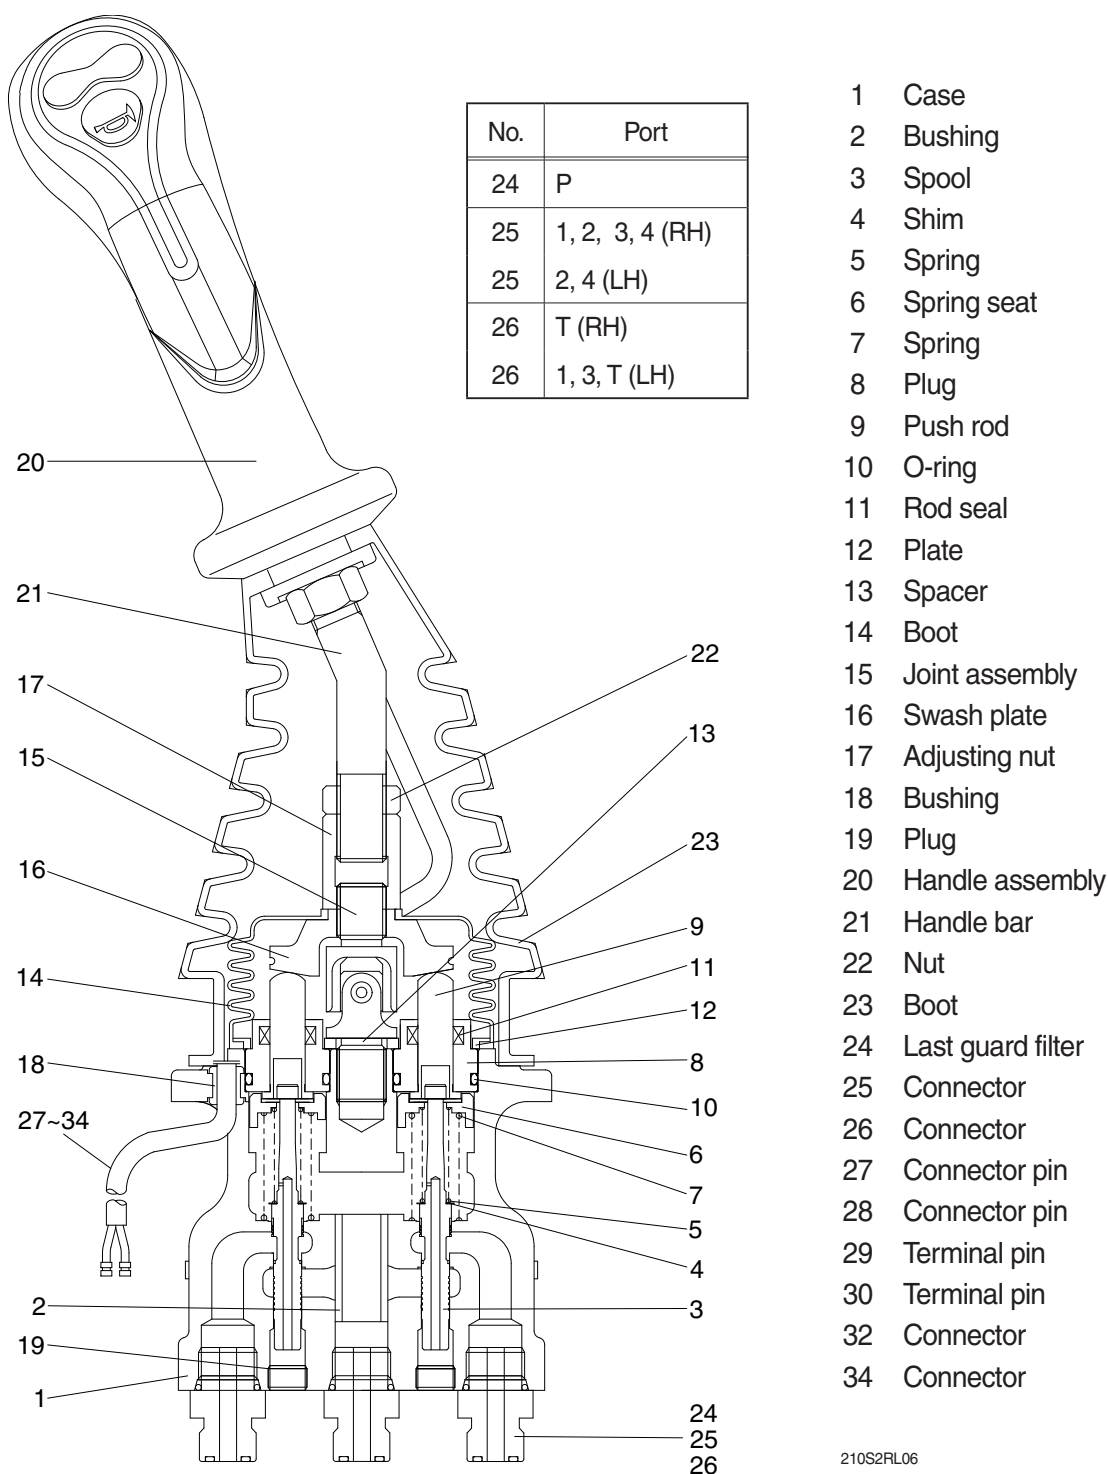

210S2RL06

**Item numbers are based on the type M1.**

The construction of the pilot valve is shown in the attached cross section drawing. The casing has vertical holes in which reducing valves are assembled.

The pressure reducing section is composed of the spool (3), spring (5) for setting secondary pressure, return spring (7), spring seat (6) and shim (4). The spring for setting the secondary pressure has been generally so preset that the secondary pressure is 5 to 20.5 kgf/cm<sup>2</sup> (depending on the type). The spool is pushed against the push rod (9) by the return spring.

When the push rod is pushed down by tilting the handle, the spring seat comes down simultaneously and changes setting of the secondary pressure spring.

## 2. FUNCTIONS

### 1) FUNDAMENTAL FUNCTIONS

The pilot valve is a valve that controls the spool stroke, direction, etc of a main control valve. This function is carried out by providing the spring at one end of the main control valve spool and applying the output pressure (secondary pressure) of the pilot valve to the other end.

For this function to be carried out satisfactorily, the pilot valve is composed of the following elements.

- (1) Inlet port (P) where oil is supplied from hydraulic pump.
- (2) Output ports (1, 2, 3 & 4) to apply pressure supplied from inlet port to ends of control valve spools.
- (3) Tank port (T) necessary to control the above output pressure.
- (4) Spool to connect output port to inlet port or tank port.
- (5) Mechanical means to control output pressure, including springs that work on the above spools.

### 2) FUNCTIONS OF MAJOR SECTIONS

**Item numbers are based on the type M1.**

The functions of the spool (3) are to receive the supply oil pressure from the hydraulic pump at its port P, and to change over oil paths to determine whether the pressure oil of port P is led to output ports 1, 2, 3 & 4 or the output port pressure oil to tank port T.

The spring (5) works on this spool to determine the output pressure.

The change the deflection of this spring, the push rod (9) is inserted and can slide in the plug (8).

For the purpose of changing the displacement of the push rod through the swash plate (16) and adjusting nut (17) are provided the handle assy (20) that can be tilted in any direction around the fulcrum of the universal joint (15) center.


The spring (7) works on the case (1) and spring seat (6) and tries to return the push rod (9) to the zero-displacement position irrespective of the output pressure, securing its resetting to the center position.

This also has the effect of a reaction spring to give appropriate control feeling to the operator.

### 3) OPERATION

The operation of the pilot valve will be described on the basis of the hydraulic circuit diagram shown below and the attached operation explanation drawing.

The diagram shown below is the typical application example of the pilot valve.

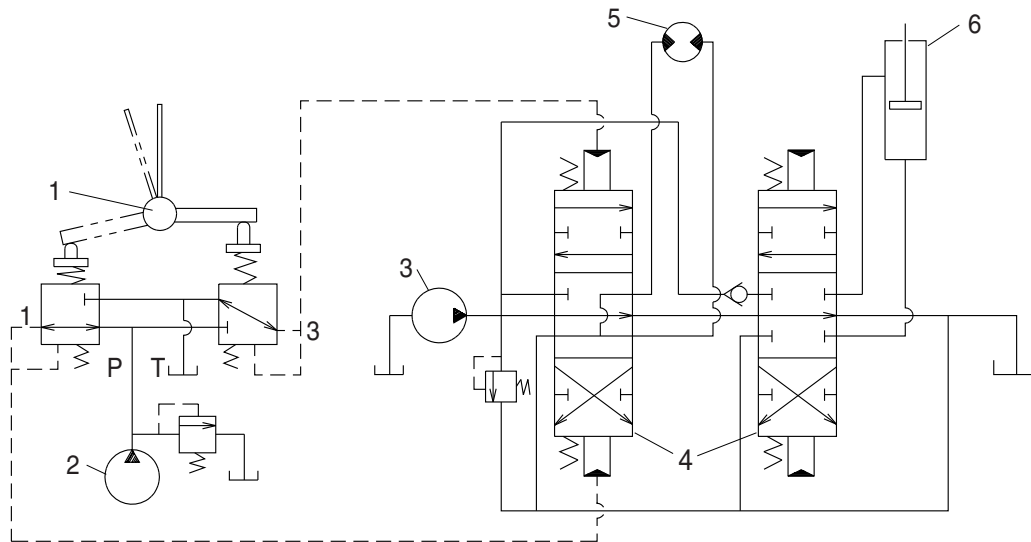


2-70

- |   |             |   |                    |   |                    |
|---|-------------|---|--------------------|---|--------------------|
| 1 | Pilot valve | 3 | Main pump          | 5 | Hydraulic motor    |
| 2 | Pilot pump  | 4 | Main control valve | 6 | Hydraulic cylinder |




(1) Case where handle is in neutral position

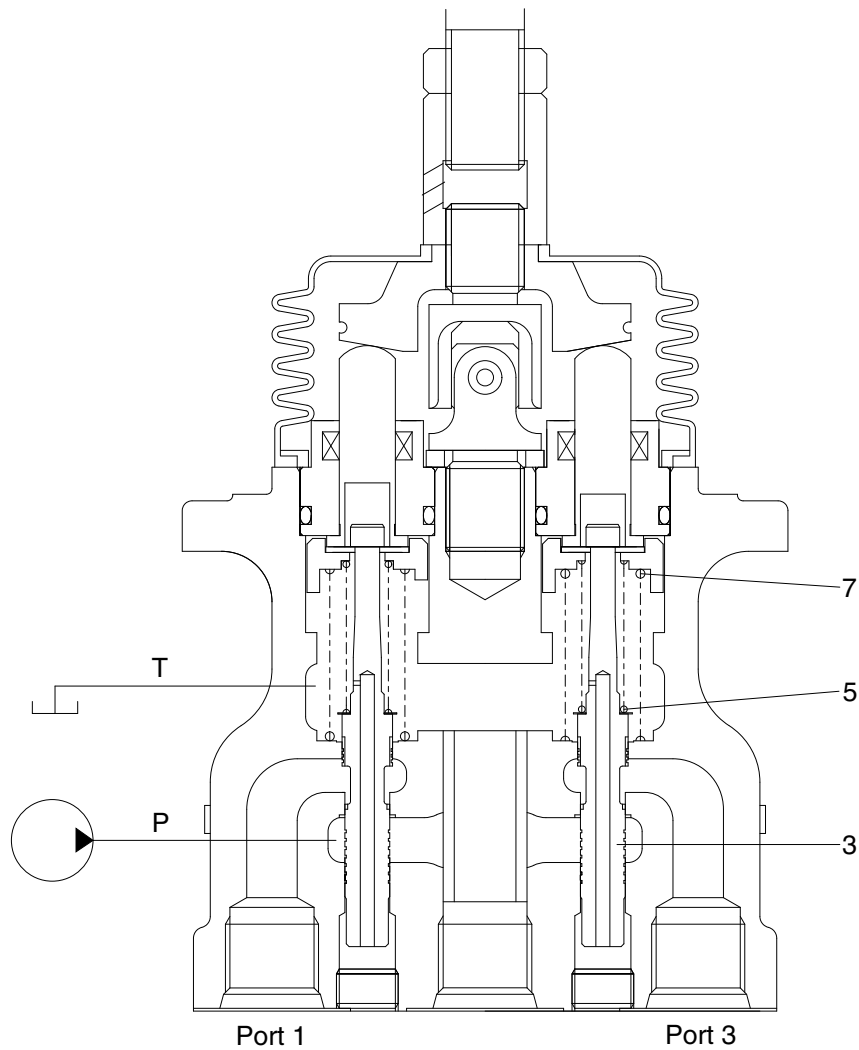

300L2RL03

The force of the spring (5) that determines the output pressure of the pilot valve is not applied to the spool (3). Therefore, the spool is pushed up by the spring (7) to the position of port (1, 3) in the operation explanation drawing. Then, since the output port is connected to tank port T only, the output port pressure becomes equal to tank pressure.

**(2) Case where handle is tilted**

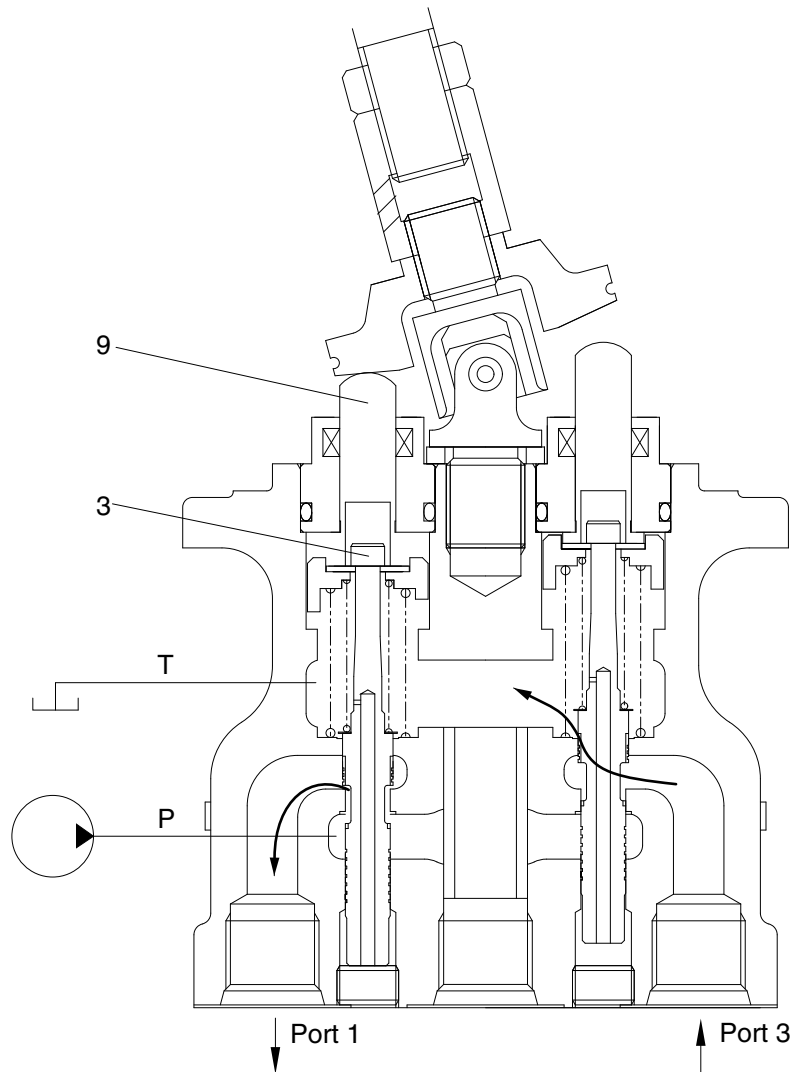

300L2RL04

When the push rod (9) is stroked, the spool (3) moves downwards.

Then port P is connected with port (1) and the oil supplied from the pilot pump flows through port (1) to generate the pressure.

When the pressure at port (1) increases to the value corresponding to the spring force set by tilting the handle, the hydraulic pressure force balances with the spring force. If the pressure at port (1) increases higher than the set pressure, port P is disconnected from port (1) and port T is connected with port (1). If it decreases lower than the set pressure, port P is connected with port (1) and port T is disconnected from port 1.


In this manner the secondary pressure is kept at the constant value.

Besides, in some type, when the handle is tilted more than a certain angle, the upper end of the spool contacts with the inside bottom of the push rod and the output pressure is left to be connected with port P.

## GROUP 6 RCV PEDAL

### 1. STRUCTURE

The casing (spacer) has the oil inlet port P (primary pressure), and the oil outlet port T (tank). In addition the secondary pressure is taken out through ports 1, 2, 3 and 4 provided at the bottom face.

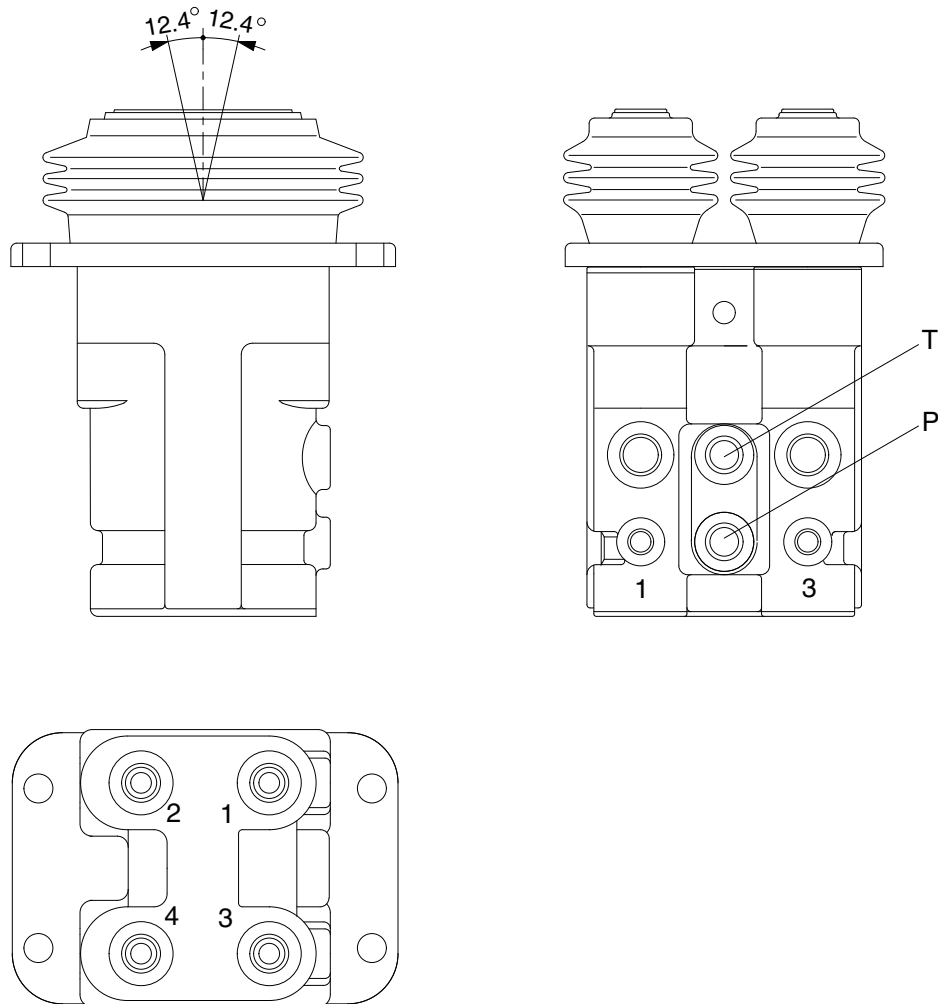

Hydraulic circuit

Port	Port	Port size
P	Pilot oil inlet port	PF 1/4
T	Pilot oil return port	
1	Travel (LH, Forward)	
2	Travel (LH, Backward)	
3	Travel (RH, Forward)	
4	Travel (RH, Backward)	


480A2RP01

## CROSS SECTION

The construction of the RCV pedal is shown in the below drawing. The casing has vertical holes in which reducing valves are assembled.

The pressure reducing section is composed of the spool kit (7), spring (5) for setting secondary pressure, return spring (9), stopper (8), and spring seat (6). The spring for setting the secondary pressure has been generally so preset that the secondary pressure is  $6.3 \pm 1$  to  $24.9 \pm 1.5$  kgf/cm<sup>2</sup> (depending on the type). The spool is pushed against the push rod (13) by the return spring.

When the push rod is pushed down by tilting pedal, the spring seat comes down simultaneously and changes setting of the secondary pressure spring.

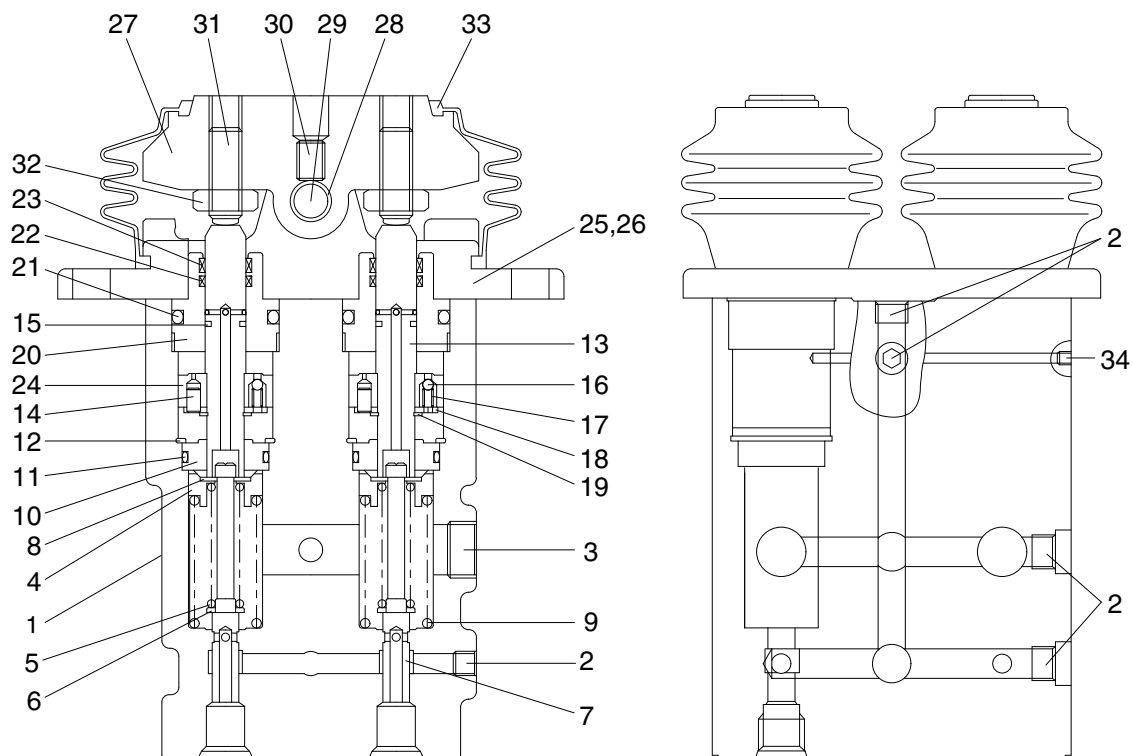

480A2RP02

1 Body	13 Push rod	25 Cover
2 Plug	14 Spring pin	26 Socket bolt
3 Plug	15 Seal	27 Cam
4 Spring seat	16 Steel ball	28 Bushing
5 Spring	17 Spring	29 Cam shaft
6 Spring seat	18 Plate	30 Set screw
7 Spool kit	19 Snap ring	31 Set screw
8 Stopper	20 Plug	32 Hex nut
9 Spring	21 O-ring	33 Bellows
10 Rod guide	22 Oil seal	34 Expand
11 O-ring	23 Dust seal	36 Cap
12 Snap ring	24 Piston	

## **2. FUNCTION**

### **1) FUNDAMENTAL FUNCTIONS**

The pilot valve is a valve controls the spool stroke, direction, etc of a main control valve. This function is carried out by providing the spring at one end of the main control valve spool and applying the output pressure (secondary pressure) of the pilot valve to the other end.

For this function to be carried out satisfactorily, the pilot valve is composed of the following elements.

- (1) Inlet port (P) where oil is supplied from hydraulic pump.
- (2) Output port (1, 2, 3 & 4) to apply pressure supplied from inlet port to ends of control valve spools.
- (3) Tank port (T) necessary to control the above output pressure.
- (4) Spool to connect output port to inlet port tank port.
- (5) Mechanical means to control output pressure, including springs that work on the above spools.

### **2) FUNCTIONS OF MAJOR SECTIONS**

The functions of the spool (7) are to receive the supply oil pressure from the hydraulic pump at its port P, and to change over oil paths to determine whether the pressure oil of port P is led to output ports 1, 2, 3 & 4 or the output spool to determine the output pressure.

The spring (5) works on this spool to determine the output pressure.

The change the deflection of this spring, the push rod (13) is inserted and can slide in the plug (20). For the purpose of changing th displacement of the push rod through the cam (27) and adjusting nut (32) are provided the pedal that can be tilted in any direction around the fulcrum of the cam (27) center.


The spring (9) works on the body (1) and spring seat (6) and tries to return the push rod (13) to the zero-displacement position irrespective of the output pressure, securing its resetting to the center position.

This also has the effect of a reaction spring to give appropriate control feeling to the operator.

### 3) OPERATION

The operation of the pilot valve will be described on the basis of the hydraulic circuit diagram shown below and the attached operation explanation drawing.


The diagram shown below is the typical application example of the pilot valve.

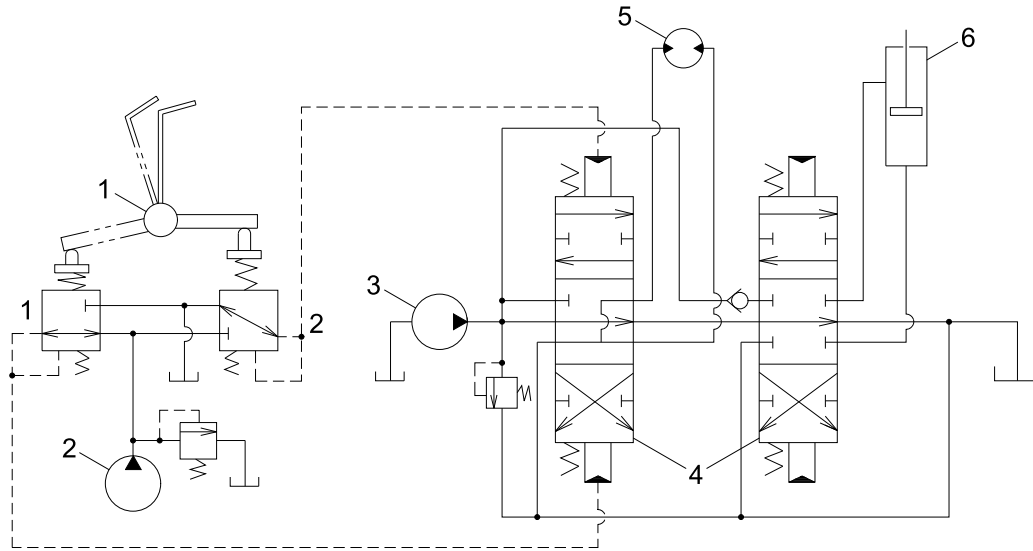

36072SF01

- |   |             |   |                    |   |                    |
|---|-------------|---|--------------------|---|--------------------|
| 1 | Pilot valve | 3 | Main pump          | 5 | Hydraulic motor    |
| 2 | Pilot pump  | 4 | Main control valve | 6 | Hydraulic cylinder |


(1) Case where pedal is in neutral position

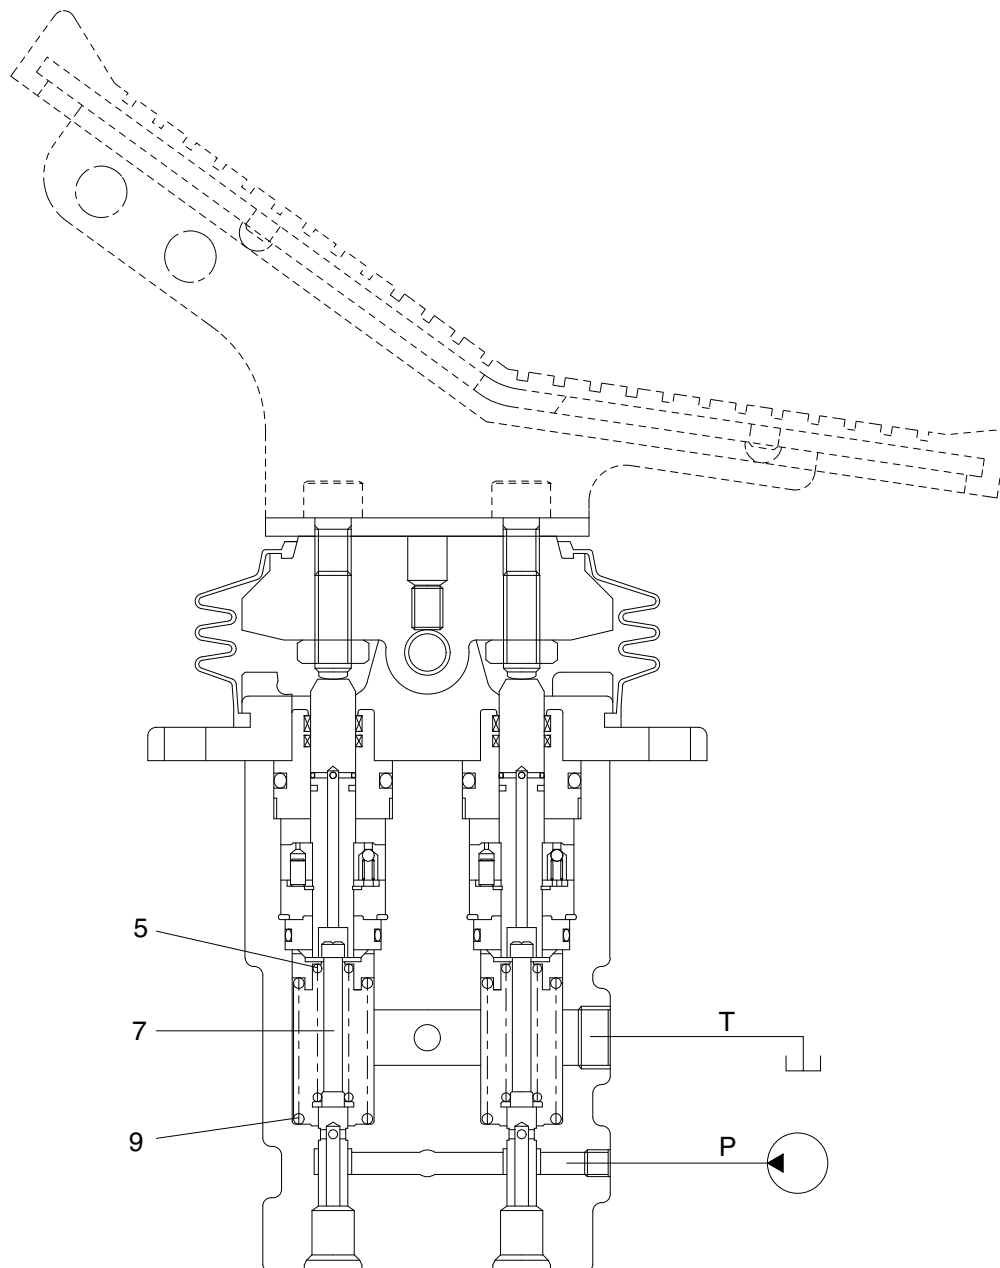

130ZF2RP03

The force of the spring (5) that determines the output pressure of the pilot valve is not applied to the spool kit (7). Therefore, the spool is pushed up by the spring (9) to the position of 1 and port 2. Then, since the output port is connected to tank port T only, the output port pressure becomes equal to tank pressure.

## (2) Case where pedal is tilted

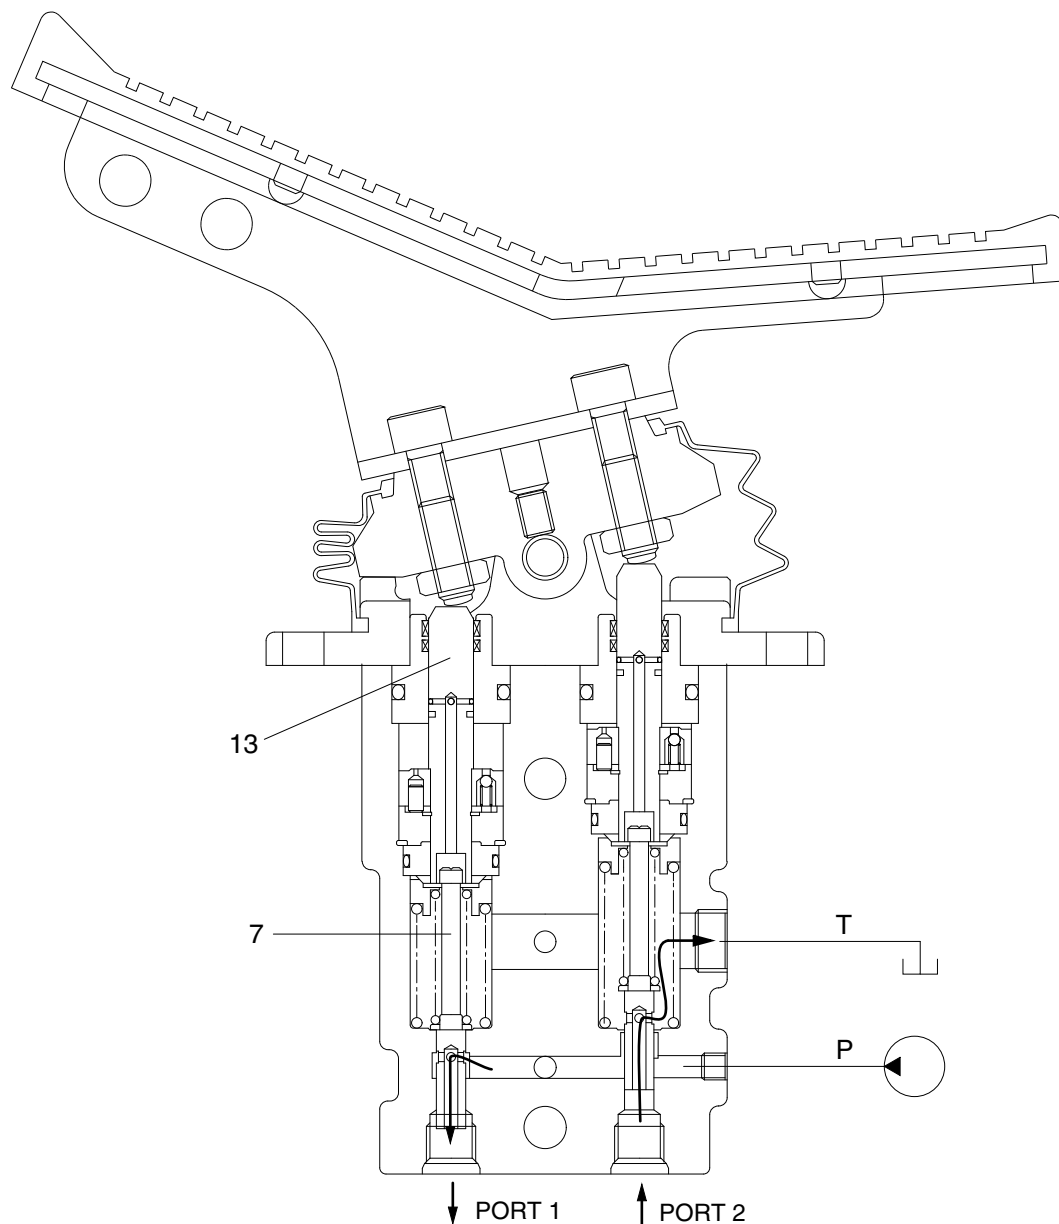

220F2RP04

When the push rod (13) is stroked, the spool kit (7) moves downwards.

Then port P is connected with port 1, and the oil supplied from the pilot pump flows through port 1 to generate the pressure.

When the pressure at port 1 increases to the value corresponding to the spring force set by tilting the handle, the hydraulic pressure force balances with the spring force. If the pressure at port 1 increases higher than the set pressure, port P is disconnected from port 1 and port T is connected with port 1. If it decreases lower than the set pressure, port P is connected with port 1 and port T is disconnected from port 1.

In this manner the secondary pressure is kept at the constant value.

Besides, in some type, when the handle is tilted more than a certain angle, the upper end of the spool contacts with inside bottom of the push rod and the output pressure is left to be connected with port P.