

| | | | |
|--|------|--|------|
| Foreword | 0-1 | 6. Traveling of the machine | 4-15 |
| Before servicing this machine | 0-2 | 7. Efficient working method | 4-18 |
| Table to enter S/No and distribution | 0-3 | 8. Operation in the special work sites | 4-22 |
| Safety labels | 0-4 | 9. Normal operation of excavator | 4-24 |
| Guide(Direction, S/No, Symbol) | 0-16 | 10. Attachment lowering | 4-25 |

SAFETY HINTS

| | |
|---------------------------------------|------|
| 1. Before operating the machine | 1-1 |
| 2. During operating the machine | 1-6 |
| 3. During maintenance | 1-13 |
| 4. Parking | 1-16 |

SPECIFICATIONS

| | |
|---|------|
| 1. Major components | 2-1 |
| 2. Specifications | 2-2 |
| 3. Working range | 2-3 |
| 4. Weight | 2-4 |
| 5. Lifting capacities | 2-5 |
| 6. Bucket selection guide | 2-7 |
| 7. Undercarriage | 2-8 |
| 8. Specification for major components | 2-10 |
| 9. Recommended oils | 2-13 |

CONTROL DEVICES

| | |
|----------------------------|------|
| 1. Cab devices | 3-1 |
| 2. Cluster | 3-2 |
| 3. Switches | 3-9 |
| 4. Levers and pedals | 3-14 |
| 5. Air conditioner | 3-16 |
| 6. Others | 3-18 |

OPERATION

| | |
|---|------|
| 1. Suggestion for new machine | 4-1 |
| 2. Check before starting the engine | 4-2 |
| 3. Starting and stop the engine | 4-3 |
| 4. Mode selection system | 4-7 |
| 5. Operation of the working device | 4-14 |

| | |
|--|------|
| 11. Storage | 4-26 |
| 12. RCV lever operating pattern | 4-28 |
| 13. Switching hydraulic attachment circuit | 4-29 |

TRANSPORTATION

| | |
|---|-----|
| 1. Preparation for transportation | 5-1 |
| 2. Dimension and weight | 5-2 |
| 3. Loading the machine | 5-4 |
| 4. Fixing the machine | 5-6 |
| 5. Loading and unloading by crane | 5-7 |

MAINTENANCE

| | |
|---------------------------------------|------|
| 1. Instruction | 6-1 |
| 2. Tightening torque | 6-6 |
| 3. Fuel, coolant and lubricants | 6-9 |
| 4. Maintenance check list | 6-11 |
| 5. Maintenance chart | 6-16 |
| 6. Service instruction | 6-18 |
| 7. Electrical system | 6-38 |
| 8. Air conditioner | 6-41 |

TROUBLESHOOTING GUIDE

| | |
|----------------------------|-----|
| 1. Engine | 7-1 |
| 2. Electrical system | 7-2 |
| 3. Others | 7-3 |

HYDRAULIC BREAKER

| | |
|--|-----|
| 1. Selecting hydraulic breaker | 8-1 |
| 2. Circuit configuration | 8-2 |
| 3. Maintenance | 8-3 |
| 4. Precautions while operating the breaker | 8-4 |
| 5. Quick clamp | 8-6 |

| | |
|-------------|-----|
| INDEX | 9-1 |
|-------------|-----|

FOREWORD

This manual contains a number of instructions and safety recommendations regarding driving, handling, lubrication, maintenance, inspection and adjustment of the excavator.

The manual is to promote safety maintenance and enhance machine performance.

Keep this manual handy and have all personnel read it periodically.

If you sell the machine, be sure to give this manual to the new owners.

This machine complies with EC directive "98/37/EEC".

1. **Read** and **understand** this manual before operating the machine.

This operator's manual may contain attachments and optional equipment that are not available in your area. Please consult your local Hyundai distributor for those items you require.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine.

If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses of actions as described in this manual.

2. **Inspect** the jobsite and **follow** the safety recommendations in the **safety hints** section before operating the machine.

3. Use **genuine Hyundai spare parts** for the replacement of parts.

We expressly point out that Hyundai will not accept any responsibility for defects resulting from non-genuine parts or non workmanlike repair.

In such cases Hyundai cannot assume liability for any damage.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Hyundai or your Hyundai distributor for the latest available information for your machine or for questions regarding information in this manual.

BEFORE SERVICING THIS MACHINE

It is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury by keeping this machine properly maintained.

It also is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury while servicing the machine.

No one should service or attempt to repair this machine without proper training and supervision.

All service and maintenance personnel should be thoroughly familiar with the procedures and precautions contained in this manual.

All personnel also must be aware of any federal, state, provincial or local laws or regulations covering the use and service of construction equipment.

The procedures in this manual do not supersede any requirements imposed by federal, state, provincial or local laws.

Hyundai can not anticipate every possible circumstance or environment in which this machine may be used and serviced.

All personnel must remain alert to potential hazards.

Work within your level of training and skill.

Ask your supervisor if you are uncertain about a particular task. Do not try to do too much too fast.

Use your common sense.


| |
|--|
| TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR |
|--|

| | |
|-------------------------|--|
| Machine Serial No. | |
| Engine Serial No. | |
| Manufacturing year | |
| Manufacturer Address | Hyundai Construction Equipment India Pvt., Ltd. Plot No. A-2, Chakan industrial area, Vill. Khalumbre, Talut-Khed., Dist. Pune 410 510, India |

SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

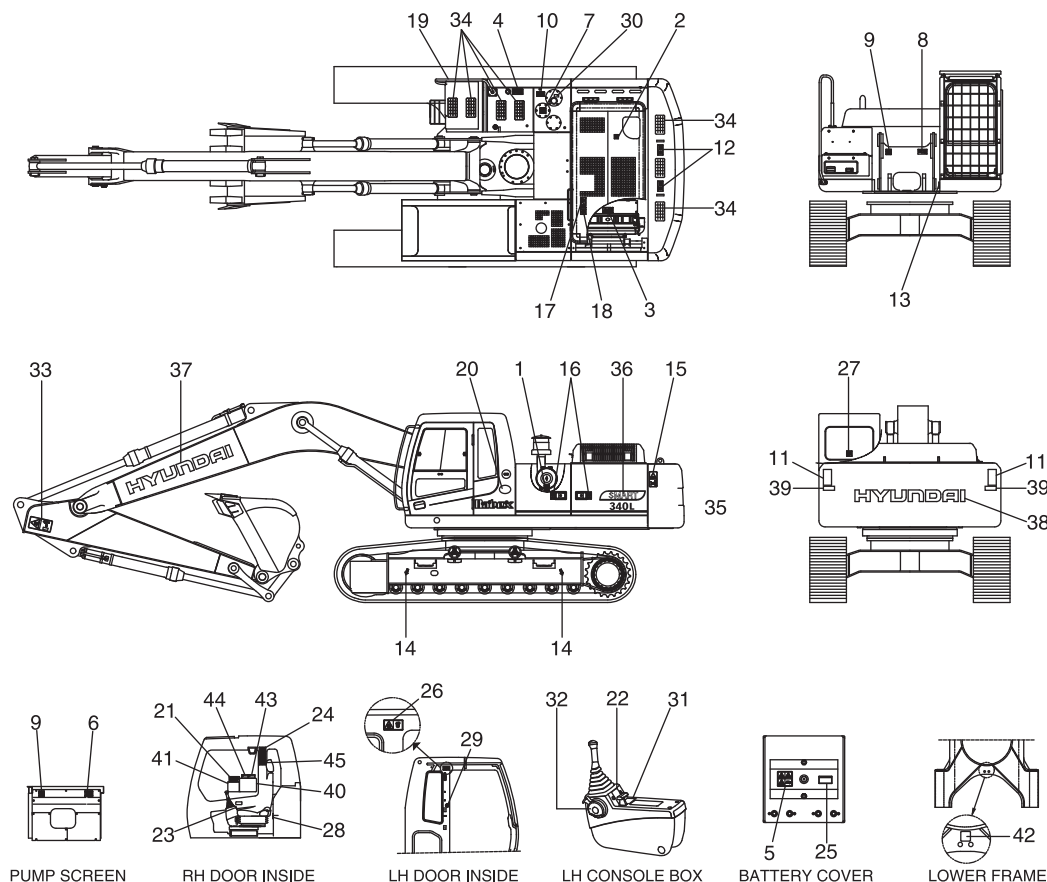

- | | | |
|-------------------------|---------------------------------------|------------------------|
| 1 Air cleaner filter | 16 Stay fix | 31 Console box tilting |
| 2 Turbo charger cover | 17 Shearing engine hood | 32 Safety lever |
| 3 Radiator cap | 18 No step engine hood | 33 Keep clear-boom/arm |
| 4 Fueling | 19 Transporting | 34 Step tread |
| 5 Battery accident | 20 Low emission engine | 35 Model name |
| 6 Hydraulic oil level | 21 Control ideogram | 36 Logo(SMART) |
| 7 Hydraulic oil lub | 22 Control ideogram(LH) | 37 Trade mark(Boom) |
| 8 Reduction gear grease | 23 Control ideogram(RH) | 38 Trade mark(CWT) |
| 9 Hose pressure | 24 Ref operator manual-Cab, RH pillar | 39 Reflecting |
| 10 Falling | 25 Connector | 40 Service instruction |
| 11 Keep clear-rear | 26 Safety front window | 41 Lifting chart |
| 12 Lifting eye | 27 Alternate exit | 42 Tie |
| 13 Name plate | 28 Air conditioner filter | 43 Water separator |
| 14 Sliding ideogram | 29 Hammer | 44 Turbocharger |
| 15 Keep clear-side | 30 Fuel shut off | 45 Locking clamp |

34070FW01

2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

1) AIR CLEANER FILTER(Item 1)

This warning label is positioned on the air cleaner cover.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

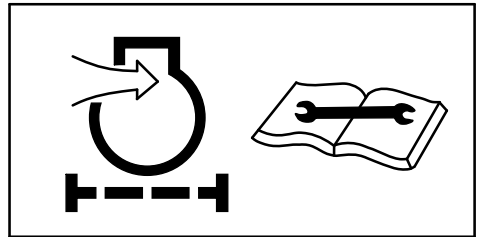

21070FW01

2) TURBO CHARGER COVER(Item 2)

This warning label is positioned on the turbo charger cover.

- ⚠ **Do not touch turbo charger or it may cause severe burn.**



21070FW02

3) RADIATOR CAP(Item 3)

This warning label is positioned on the radiator.

- ⚠ **Never open the filler cap while engine running or at high coolant temperature.**




14070FW03

4) FUELING(Item 4)

This warning label is positioned on the right side of fuel filler neck.

- ⚠ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

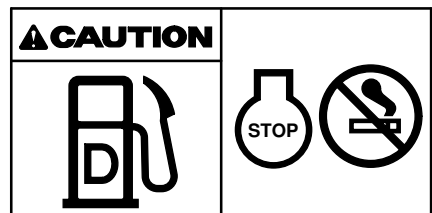

21070FW04

5) BATTERY ACCIDENT (Item 5)

This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**
- ※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminals with a wet hand.**




36070FW05

6) HYDRAULIC OIL LEVEL (Item 6)

This warning label is positioned on the left side of hydraulic oil level.

- ⚠ **Place the bucket on the ground whenever servicing the hydraulic system.**
- ※ **Check oil level on the level gauge.**
- ※ **Refill the recommended hydraulic oil up to specified level if necessary.**

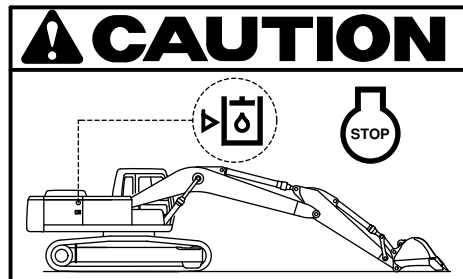


21070FW07

7) HYDRAULIC OIL LUBRICATION (Item 7)

This warning label is positioned on the right side of air breather.

- ※ Do not mix with different brand oils.
- ⚠ Never open the filler cap while engine running or at high coolant temperature.
- ⚠ Loosen the cap slowly and release internal pressure completely.

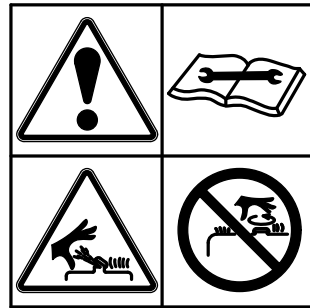


14070FW08

8) REDUCTION GEAR GREASE (Item 8)

This warning label is positioned in the front of upper frame.

- ⚠ Grease is under high pressure.
Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.

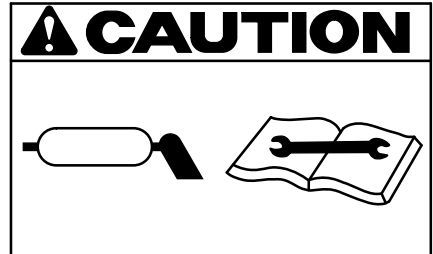

21070FW35

9) KEEP CLEAR-REAR (Item 11)

This warning label is positioned on the counterweight.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.




21070FW09

10) LIFTING EYE (Item 12)

This warning label is positioned on the counterweight.

- ⚠ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.
- ※ See page 5-7 for proper lifting method of the machine.

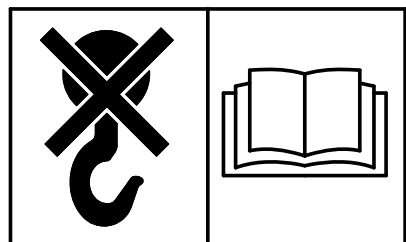

21070FW10

11) KEEP CLEAR-SIDE (Item 15)

This warning label is positioned on the side of counterweight.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**




21070FW13

12) STAY FIX (Item 16)

This warning label is positioned on the side cover.

- ⚠ **Be sure to support the stay when the door needs to be opened.**
- ⚠ **Be careful that the opened door may be closed by the external or natural force like strong wind.**

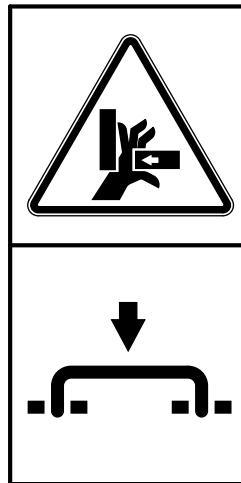


21070FW14

13) SHEARING-ENGINE HOOD (Item 17)

This warning label is positioned on the engine hood.

- ⚠ **Do not open the engine hood during the engine's running.**
- ⚠ **Do not touch exhaust pipe or it may cause severe burn.**

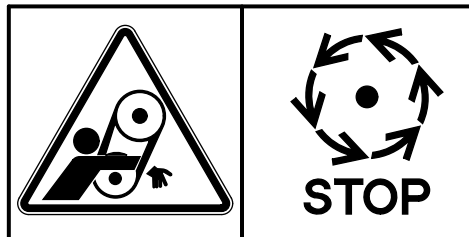


21070FW15

14) NO STEP-ENGINE HOOD(Item 18)

This warning label is positioned on the engine hood.

- △ Do not step on the engine hood.

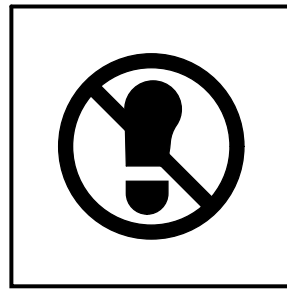


21070FW16

15) TRANSPORTING(Item 19)

This warning label is positioned right side of upper frame.

- ▲ Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.
- ※ See page 5-6 for details.

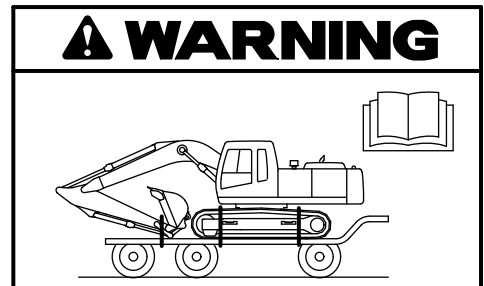


14070FW17

16) CONTROL IDEOGRAM(Item 21)

This warning label is positioned in right window of the cab.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ▲ Failure to do so could result in injury or death.
- ※ See page 4-14 for details.

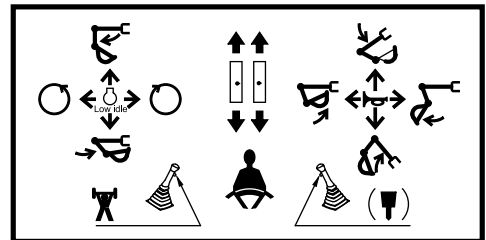


36070FW19

17) CONTROL IDEOGRAM-LH(Item 22)

This warning label is positioned on the LH console box.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ▲ Failure to do so could result in injury or death.
- ※ See page 4-14 for details.

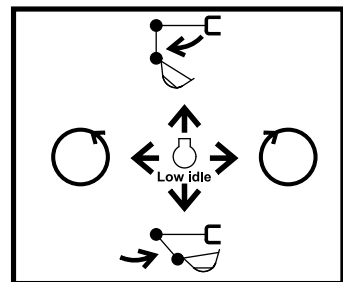

36070FW20


18) CONTROL IDEOGRAM-RH(Item 23)

This warning label is positioned on the RH console box.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.

- ▲ Failure to do so could result in injury or death.

※ See page 4-12 for details.

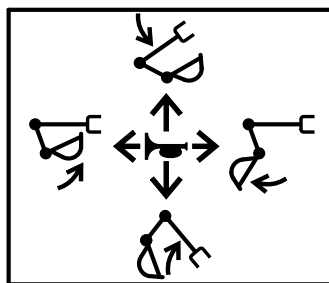


21070FW21

19) REF OPERATOR MANUAL(Item 24)

This warning label is positioned on the right side frame of the cab.

- ▲ Study the operator's manual before starting and operating machine.

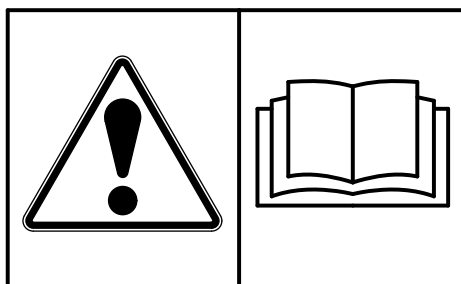


21070FW22

20) MAX HEIGHT(Item 24)

This warning label is positioned on the right side frame of the cab.

- ▲ Serious injury or death can result from contact with electric lines.

An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

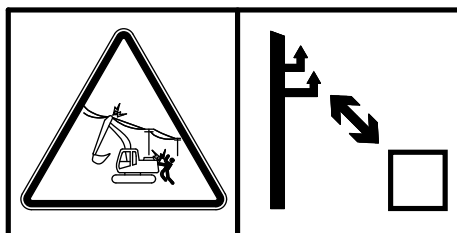


36070FW23

21) INTERFERENCE(Item 24)

This warning label is positioned on the right side frame of cab.

- ▲ Be careful to operate machine equipped with quick clamp or extensions.
- ▲ Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.

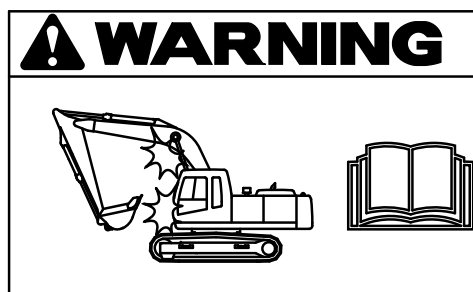

14070FW62

22) CONNECTOR (Item 25)


This warning label is positioned on the battery cover.

⚠ Before carrying out any electric welding on this machine.

Pull the connector out of all electric control units.

⚠ Connector the ground lead of the welding equipment as close to the welding point as possible.

※ See page 6-40 for detail.

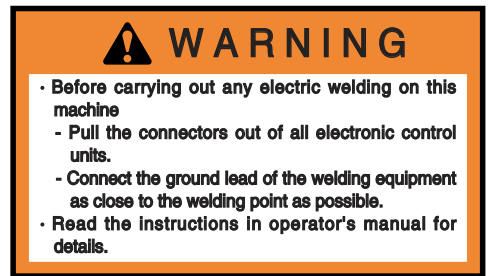


7807AFW20

23) SAFETY FRONT WINDOW (Item 26)

This warning label is positioned on the both side frame of the cab.

⚠ Be careful that the front window may be promptly closed.

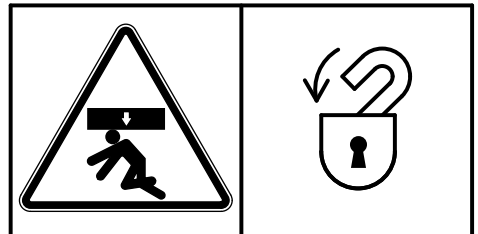


21070FW24

24) ALTERNATE EXIT (Item 27)

This warning label is positioned on the inside of rear window.

※ **The rear window serves us an alternate exit.**

※ **To remove rear window, pull the ring and push out the glass.**

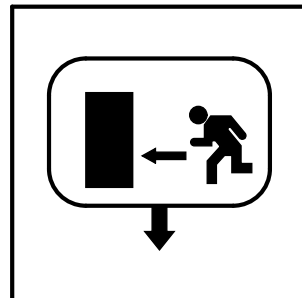


21070FW25

25) AIR CONDITIONER FILTER (Item 28)

This warning label is positioned on the air conditioner cover.

※ **Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.**

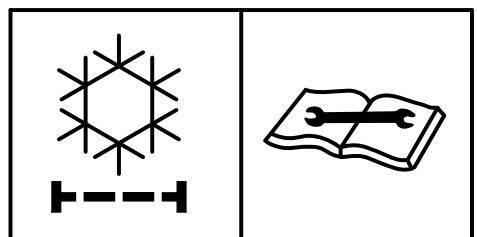


21070FW26

26) SAFETY LEVER (Item 32)

This warning label is positioned on the cover safety.

- ⚠ **Before you get off the machine be sure to place the safety lever LOCKED position.**

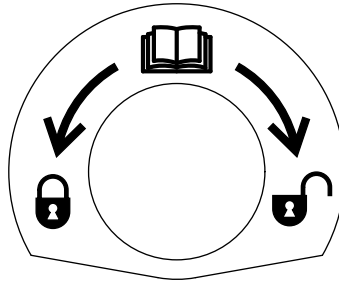

21070FW28

27) REFLECTING (Item 39)

This warning label is positioned on the counterweight.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**




2507A0FW03

28) TIE (Item 42)

This warning label is positioned on the lower frame.

- ⚠ **Make sure no personal are standing close to the tow rope.**
- ⚠ **See page 4-17 for detail.**

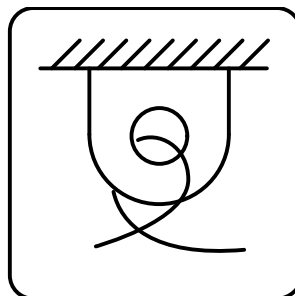


4507A0FW02

29) TURBOCHARGER (Item 44)

This warning label is positioned in right window of the cab.

- ⚠ In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.

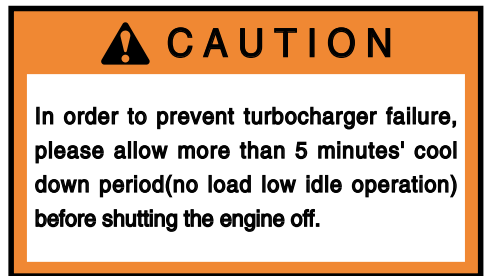


7807AFW20

30) LOCKING CLAMP (Item 45)

This warning label is positioned on the right side window of the cab.

- ⚠ Serious injury or death can result from dropping bucket.
- ⚠ Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.

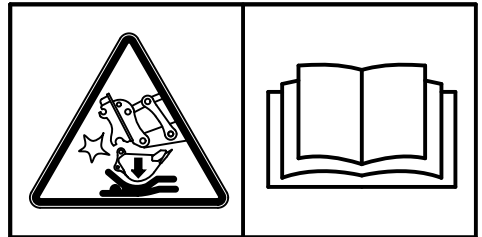

14070FW60

31) HIGH PRESSURE HOSE (Item 9)

This warning label is positioned on the screen plate.

- ⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ※ Study the service manual before service job.



14070FW29

32) WATER SEPARATOR (Item 43)

This warning label is positioned on the right side window of the cab.

- ⚠ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.




210N90FW50

33) FALLING (Item 10)

This warning label is positioned on the top of the hydraulic tank.

- ⚠ **Falling is one of the major cause of personal injury.**
- ⚠ **Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.**

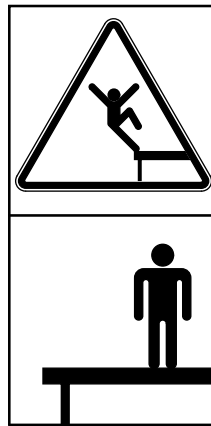


14070FW30

34) FUEL SHUT OFF (Item 30)

This warning label is positioned on the hydraulic tank cover.

- ※ **Fill only the hydraulic oil.**
- ※ **Do not fill the diesel fuel.**

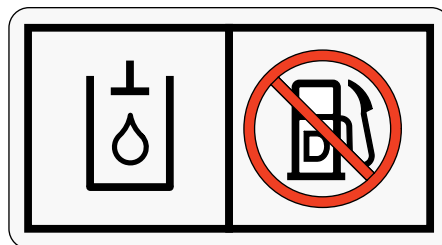

140WH90FW51

35) KEEP CLEAR-BOOM/ARM (Item 33)

This warning label is positioned on both side of the boom.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**



14070FW31

36) ACCUMULATOR (Item 46)


This warning label is positioned on the accumulator of the solenoid valve.

- ※ **The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.**

⚠ **Never make any hole in the accumulator expose it to flame or fire.**

⚠ **Do not weld anything to the accumulator.**


- ※ **When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.**



1107A0FW46

1. DIRECTION

The direction of this manual indicate forward, backward, right and left on the standard of operator when the travel motor is in the rear and machine is on the traveling direction.

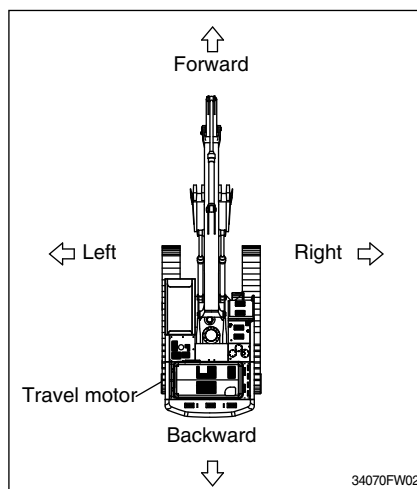


2. SERIAL NUMBER

Inform following when you order parts or the machine is out of order.


1) MACHINE SERIAL NUMBER

The numbers are located below the right window of the operator's cab.

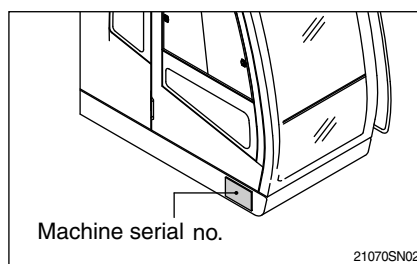

2) ENGINE SERIAL NUMBER

The numbers are located on the engine name plate.

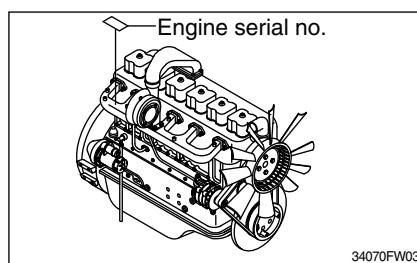

3. INTENDED USE

This machine is designed to be used mainly for the following work.

- Digging work
- Loading work
- Smoothing work
- Ditching work

※ Please refer to the section 4 (efficient working method) further details.

4. SYMBOLS

▲ Important safety hint.

△ It indicates matters which can cause the great loss on the machine or the surroundings.


※ It indicates the useful information for operator.

1. BEFORE OPERATING THE MACHINE

Think-safety first.


In special situation, wear protective clothing including a safety helmet, safety shoes, gloves, safety glasses and ear protection as required by the job condition.

Almost every accident is caused by disregarding the simple and fundamental safety hints.

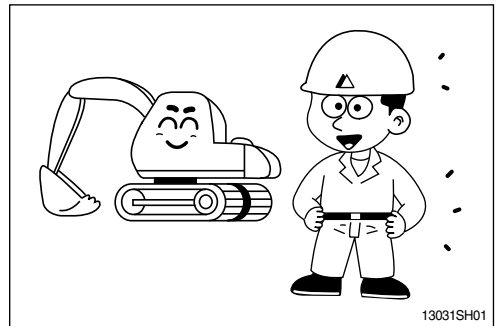


Be sure to understand thoroughly all about the operator's manual before operating the machine.

Proper care is your responsibility.

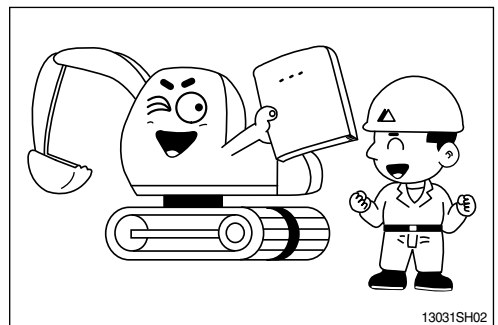


Fully understand the details and process of the construction before starting the work.


If you find anything dangerous on the job, consult with the job supervisor for the preventive measures before operating the machine.

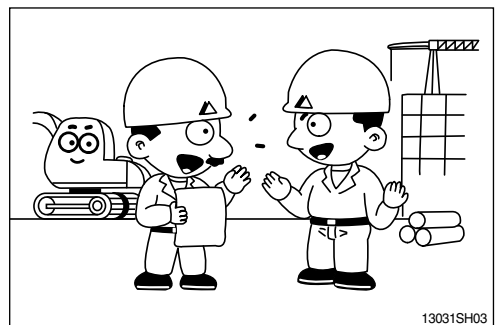


Do not operate when tired, or after drinking alcoholic beverages or any type of drugs.

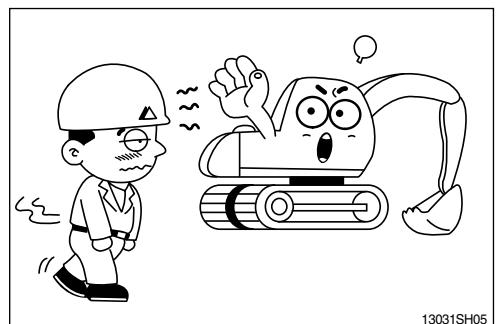


Check daily according to the operation manual.
Repair the damaged parts and tighten the loosened bolts.

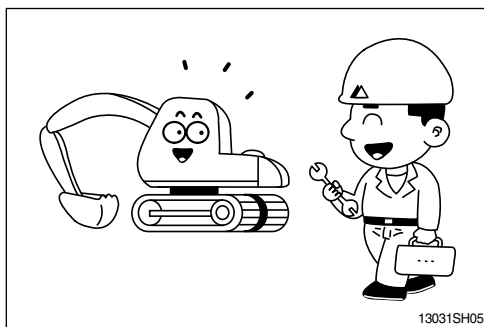


Check for leakage of engine oil, hydraulic oil,
fuel and coolant.
Keep machine clean, clean machine regularly.

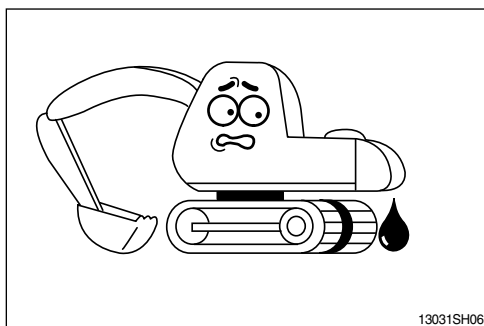

Do not operate the machine if it requires repairs.
Operate after complete repair.

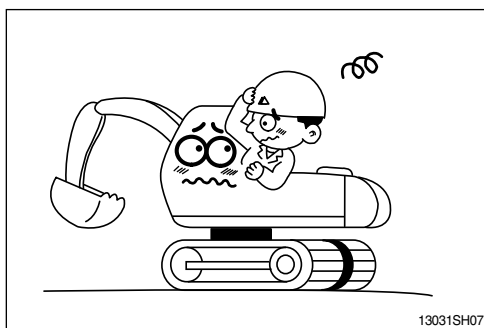

Be prepared if a fire starts.
Keep a fire extinguisher handy and emergency
numbers for a fire department near your
telephone.

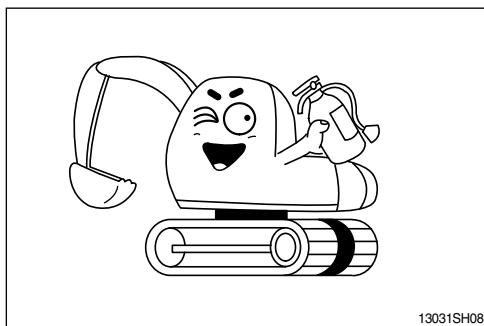


PROTECTION AGAINST FALLING OR FLYING OBJECTS

If there is any danger of falling or flying objects hitting the operator, install protective guards in place to protect the operator as required for each particular situation.

Be sure to close the front window before commencing work.

Make sure to keep all persons other than operator outside the range of falling or flying objects.


In case you need top guard, front guard and FOPS(Falling object protective structure), please contact Hyundai distributor.

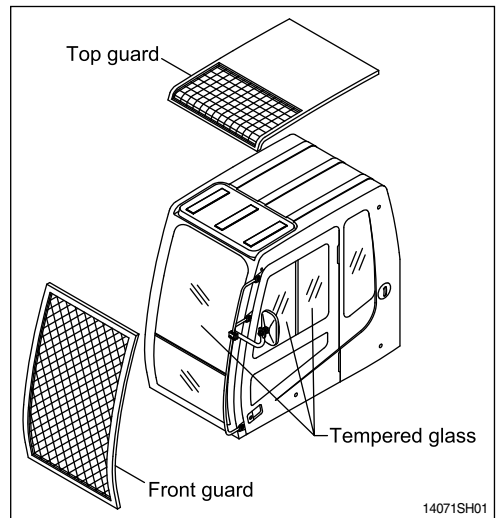

UNAUTHORIZED MODIFICATION

Any modification made without authorization from Hyundai can create hazards.

Before making a modification, consult your Hyundai distributor. Hyundai will not be responsible for any injury or damage caused by any unauthorized modification.



PREPARE FOR EMERGENCY


Only in case of emergency, use the installed hammer for breaking the windshield of the cab, and then exit carefully.

Have a fire extinguisher and first aid kit ready for emergencies such as fires or accidents.

Learn how to use the fire extinguisher.

Be sure you know the phone numbers of persons you should contact in case of an emergency.

* Optional

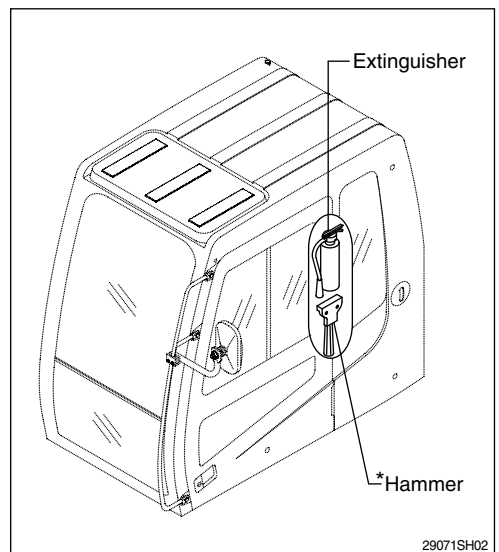


ROTATING BEACON

When you operate a machine on a road or beside a road, a rotating beacon is required to avoid any traffic accident.

Please contact your Hyundai distributor to install it.

Note : Its an option any will be req. for future safety requirement

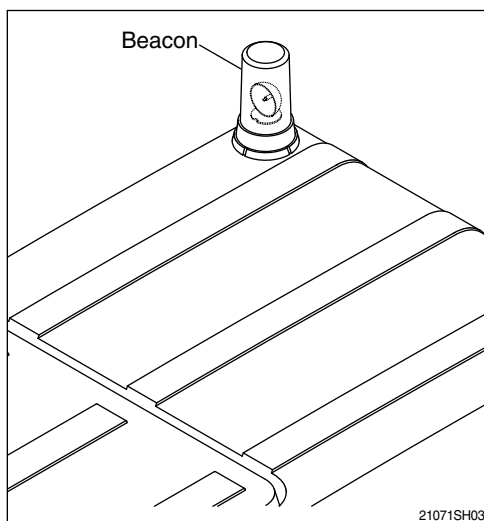


PRECAUTIONS FOR ATTACHMENTS

When installing and using an optional attachment, read the instruction manual for the attachment and the information related to attachments in this manual.

Do not use attachments that are not authorized by Hyundai or your Hyundai distributor. Use of unauthorized attachments could create a safety problem and adversely affect the proper operation and useful life of the machine.

Any injuries, accidents, product failures resulting from the use of unauthorized attachments are not the responsibility of Hyundai.




SAFETY RULES

Only trained and authorized personnel can operate and maintain the machine.

Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.

When working with another operator or a person on worksite traffic duty, be sure all personnel understand all hand signals that are to be used.




SAFETY FEATURES

Be sure all guards and covers are in their proper position. Have guards and covers repaired if damaged.

Use safety features such as safety lock and seat belts properly.

Never remove any safety features. **Always** keep them in good operating condition.

Improper use of safety features could result in serious bodily injury or death.



MACHINE CONTROL PATTERN

Check machine control pattern for conformance to pattern on label in cab.

If not, change label to match pattern before operating machine.

Failure to do so could result in injury.




CALIFORNIA PROPOSITION 65

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

This product contains or emits chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds.

WASH HANDS AFTER HANDLING

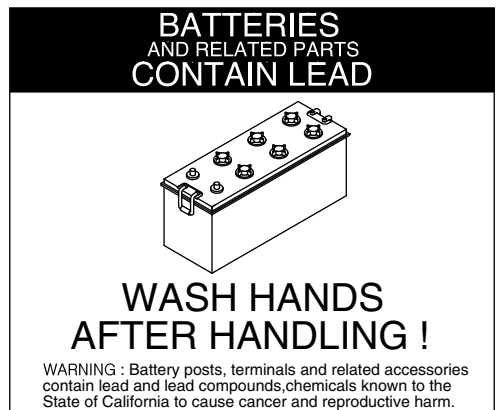

13031SH55

Do not load the machine with the lifting eyes on the counterweight.


⚠ The wrong loading method can result in serious bodily injury or death.



2. DURING OPERATING THE MACHINE


Use the handle and footstep when getting on or off the machine.

Do not jump on or off the machine.

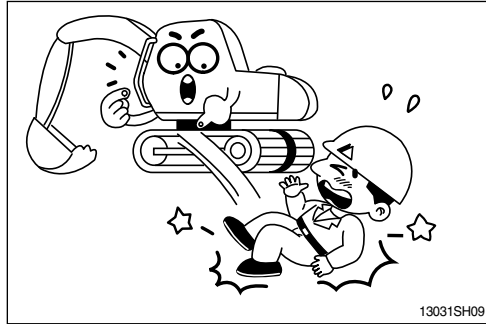


Sound the horn to warn nearby personnel before operating the machine.

Remove all the obstacles like frost on the window before operating the machine for the good visibility.

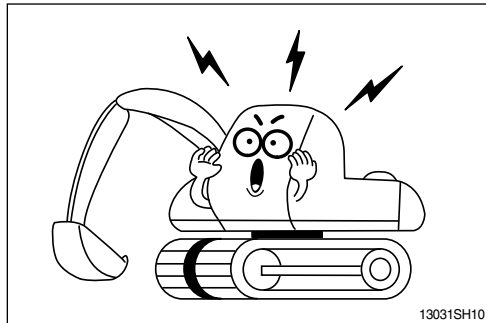


Operate carefully to make sure all personnel or obstacles are clear within the working range of the machine.


Place safety guards if necessary.

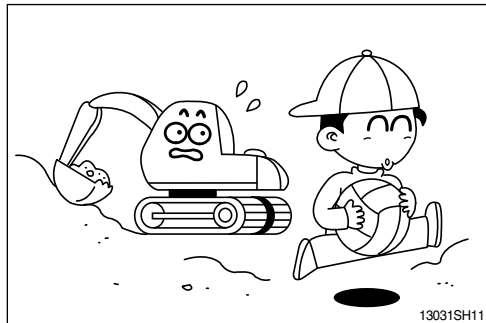


When using the work equipment, pay attention to job site.

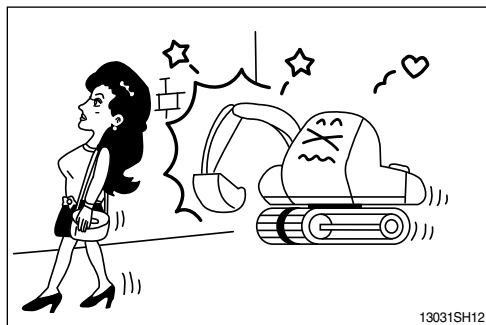

Provide proper ventilation when operating engine in a closed area to avoid the danger of exhaust gases.

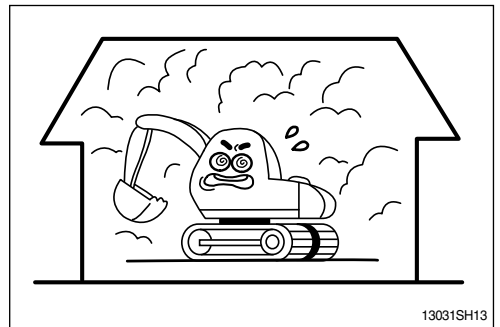


Check the locations of underground gas pipes or water line and secure the safety before operation.

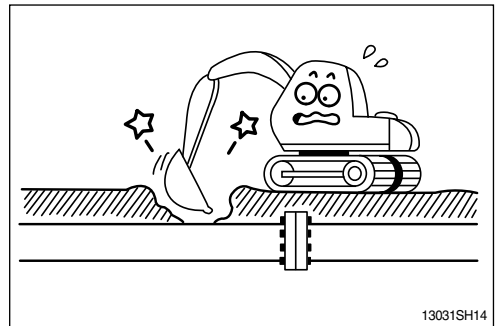


The operating near the electrical lines is very dangerous.
Operate within safe working range permitted as below.

| Supply voltage | Min safe separation |
|----------------|---------------------|
| 6.6kV | 3m(10ft) |
| 33.0kV | 4m(13ft) |
| 66.0kV | 5m(16ft) |
| 154.0kV | 8m(26ft) |
| 275.0kV | 10m(33ft) |

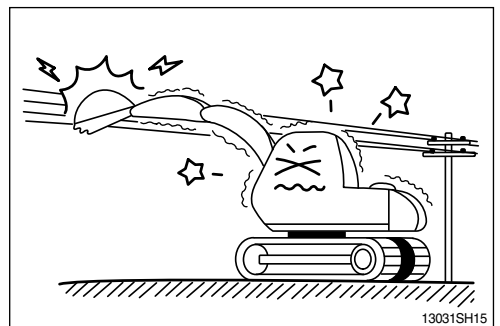


If the machine touches the electric power lines, keep sitting on the operator's seat and make sure the personnel on the ground not to touch the machine until turning off the electric current. Jump off the machine without contacting the machine when you need to get off.

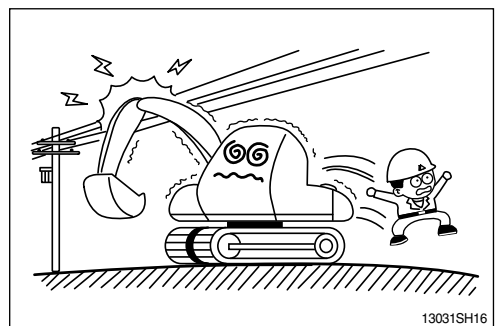


Watch out for obstacles.

Be particularly careful to check the machine clearance during the swing.

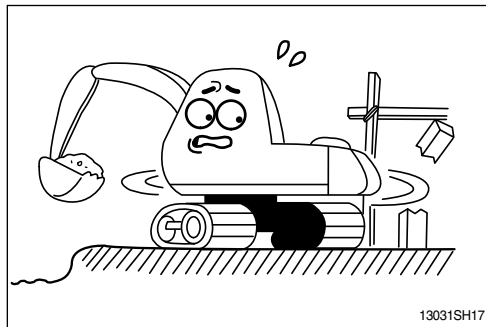


When using the machine as breaker or working in a place where stones may fall down, cab roof guard and head guard should be provided for proper protection.

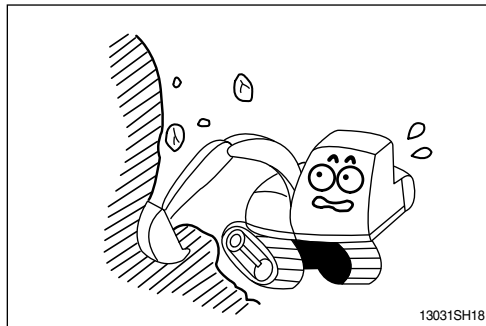


Avoid operating on a cliff or soft ground as there is danger of rolling over.

Make sure to get off easily as keeping the track at a right angle and putting the travel motor into the backward position when working on a cliff or soft ground inevitably.

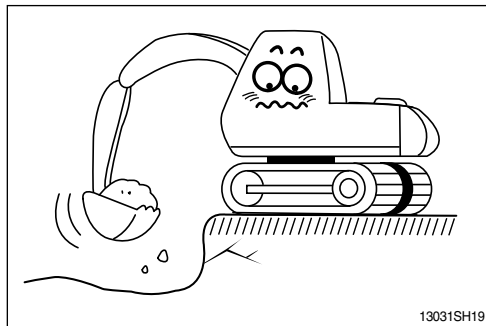


Operate for the lifting work considering the capacity of machine, weight and width of the load.


Be careful not to lift exceeding the machine capacity as it can be the cause of machine damage and safety accident.

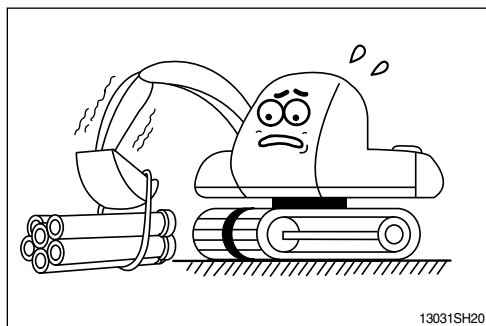


The operation on a slope is dangerous.
Avoid operating the machine on a slope of over 10 degree.

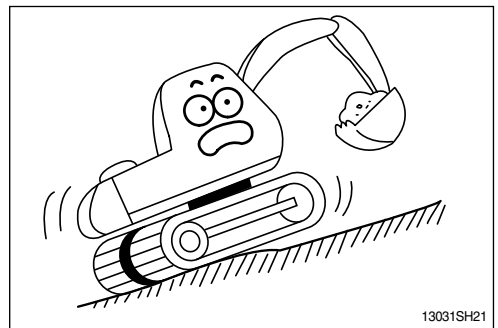


Operate the machine after making ground flat when operation is required on a slope.

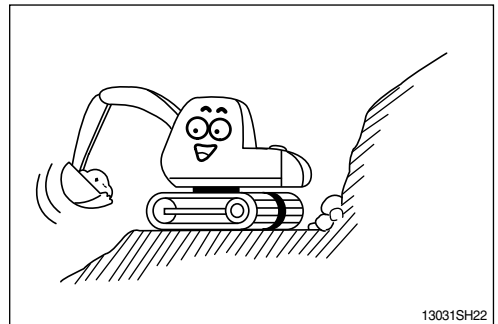


The swing on the slope can be danger of rolling over.
Do not operate to swing the machine with the bucket loaded on a slope since the machine may lose its balance under such an instance.

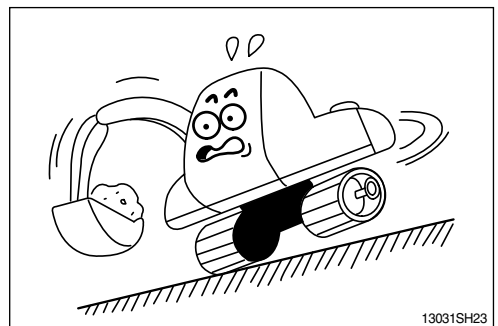


Avoid parking and stopping on a slope.
Lower the bucket to the ground and block the track when parking.

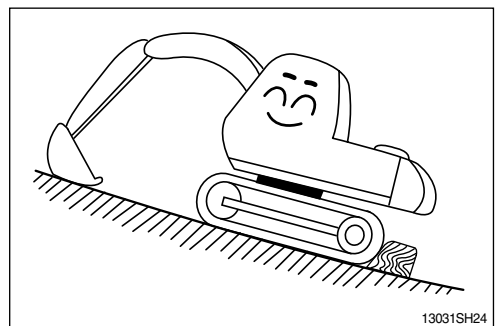


Avoid traveling in a cross direction on a slope as it can cause the danger of rolling over and sliding.

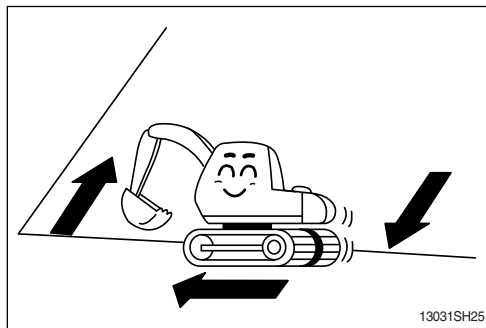


Traveling on a slope is dangerous. Be sure to operate slowly when traveling down a slope and maintain the bucket at a height of 20~30cm(1ft) above the ground so that it can be used as brake in an emergency.

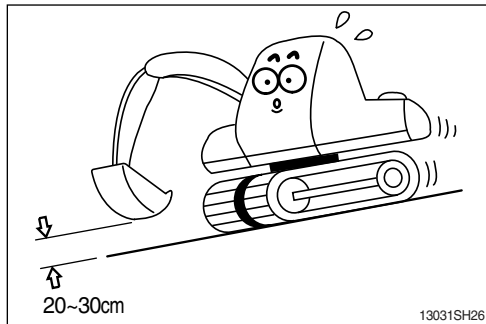


Steering of the machine while traveling on a slope is dangerous. When an inevitable turning of direction is required, turn on the flat and solid ground.

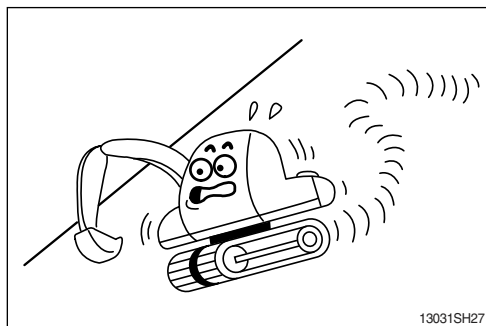


The engine angularity limits are 35 degree. Do not operate by more than the engine limits in any case.

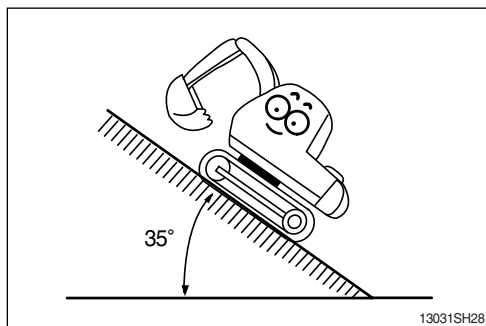


Before traveling the machine, sound the horn to warn nearby personnel.
Operate forward and backward correctly with confirming the location of the travel motor.

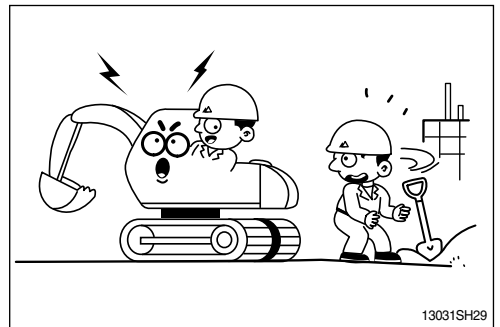


Slow down when traveling through obstacles or uneven ground.

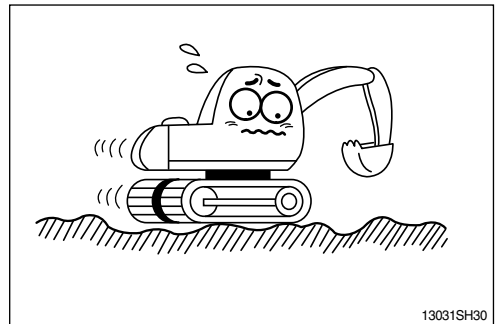

When working on soft ground, place mats or wood boards on the ground to prevent the machine sinking.

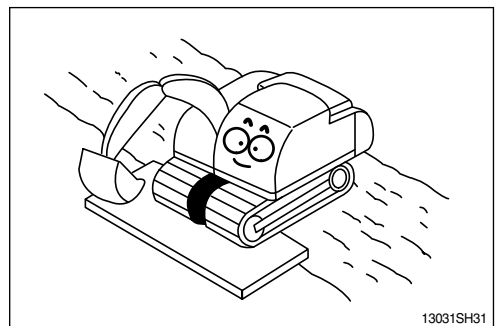

When operating in water or when crossing shallow, check the bed soil condition and depth and flow speed of water, then proceed taking care that water is not above carrier roller.

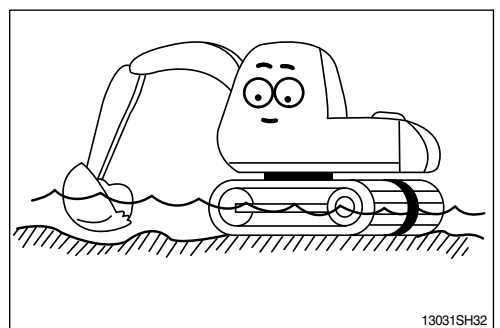

MOUNTING AND DISMOUNTING

Never jump on or off the machine. **Never** get on or off a moving machine.


When mounting or dismounting, always face the machine and use the handrails, machine or track frame steps, and track shoes. Additional track frame step can be fitted for wider optional shoe. In this case please contact your Hyundai distributor.

Do not hold any control levers when getting on or off the machine.

Ensure safety by always maintaining at least three-point contact of hands and feet with the handrails, steps or track shoes.

Always remove any oil or mud from the handrails, steps and track shoes. If they are damaged, repair them and tighten any loose bolts.


If grasping the door handrail when mounting or dismounting or moving on the track, open and lock the door securely in the open position. Otherwise, the door may move suddenly, causing you to lose balance and fall.

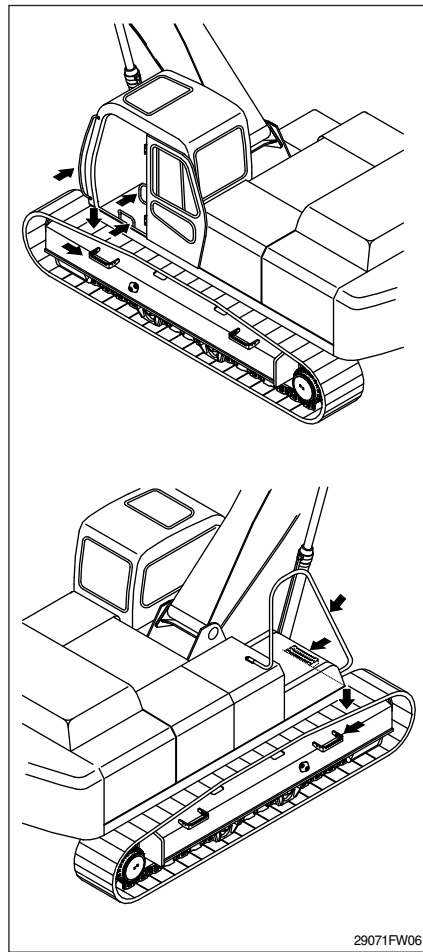


3. DURING MAINTENANCE

Stop the engine immediately when the trouble of the machine is found.


Inspect immediately the cause of trouble such as vibration, overheating and trouble in the cluster then repair.

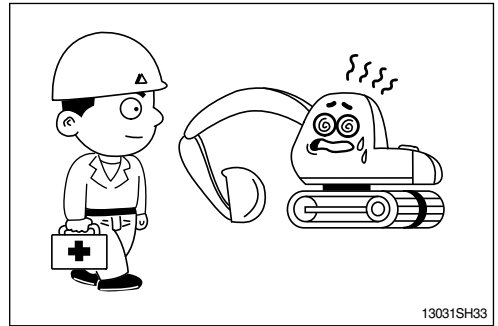


Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (Remove start key)
Extreme care shall be taken during maintenance work. Parts may require additional safe guard.

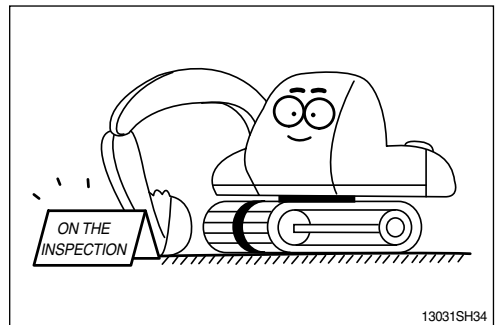


Do not remove the radiator cap from hot engine.
Open the cap after the engine cools, below 50° C(112°F) to prevent personal injury from heated coolant spray or steam.

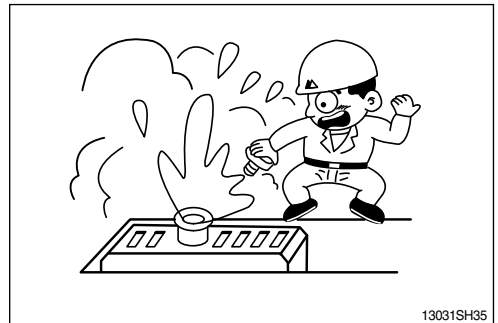


Do not work below the machine.
Be sure to work with proper safety supports.
Do not depend on the hydraulic cylinders to hold up the equipment and attachment.

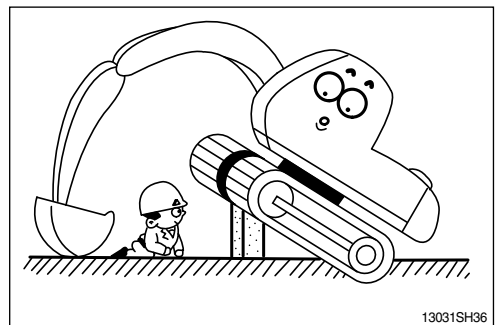

There is the danger of fire in fuel and oil.
Store in cool and dry area, away from any open flames.

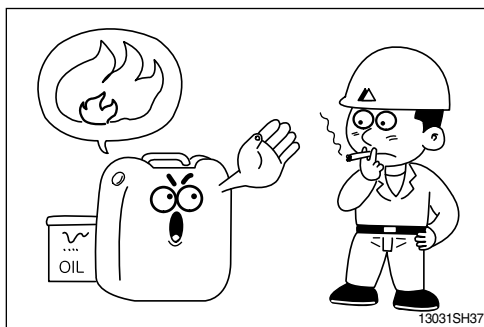


Do not touch exhaust pipe, or may cause severe burn.

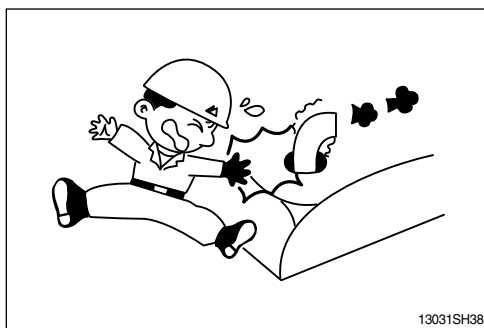


Do not open the engine hood and covers while the engine is running.




Be careful of not hitting the edges when you service engine.

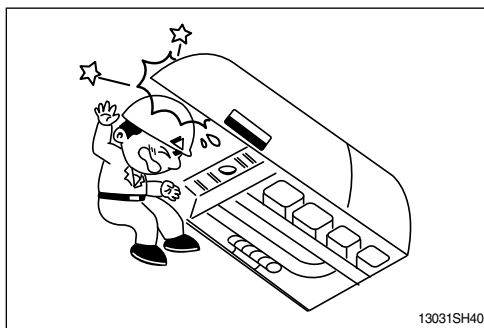


Be careful that the front window may be promptly closed.
 Be sure to support stay, when the side door needs to be opened.
 Be careful that the open side door may closed by the external or natural force like strong wind.

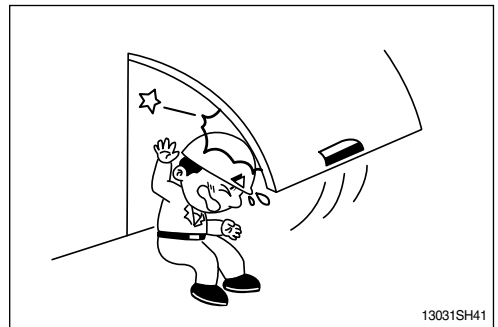

The antislip protection should be replaced if they have become worn or have been printed over.

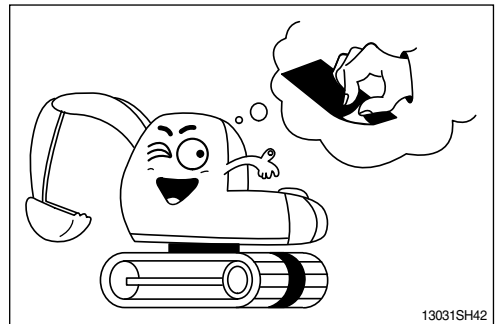


Be careful of not touching slip, fall down etc., when you work at the upper frame to service engine and/or other component.

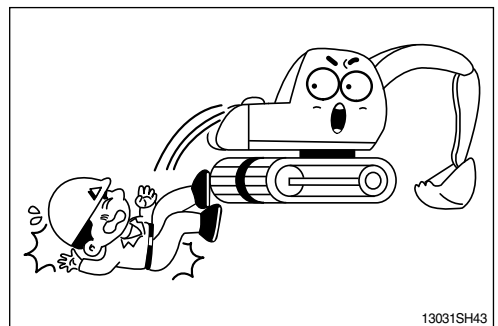


HIGH PRESSURE GAS

Contain high pressure gas.
 To avoid explosion and personal injury, do not expose to fire, do not weld, do not drill.
 Relieve pressure before discharging.

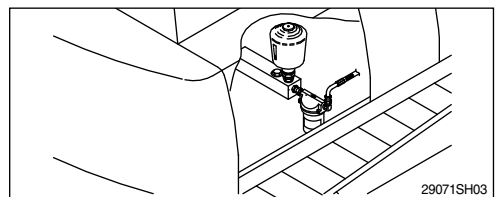

LIFT EYES CAN FAIL


Lift eyes or tank can fail when lifting tank containing fluids resulting in possible personal injury.
 Drain tank of all fluids before lifting.




4. PARKING

When leaving the machine after parking, lower the bucket to the ground completely and put the safety lever at parking position then remove the key.

Lock the cab door.

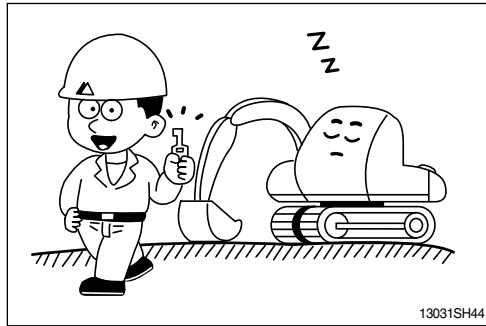


Park the machine in the flat and safe place.


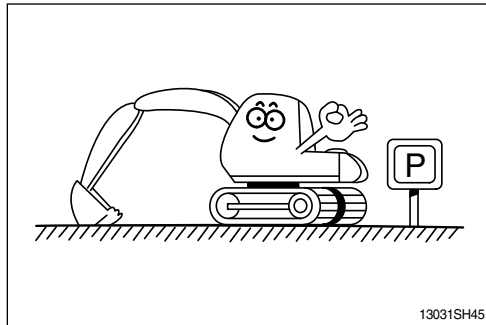


Hope you can work easily and safely observing safety rules.

For safe operation, observe all safety rules.

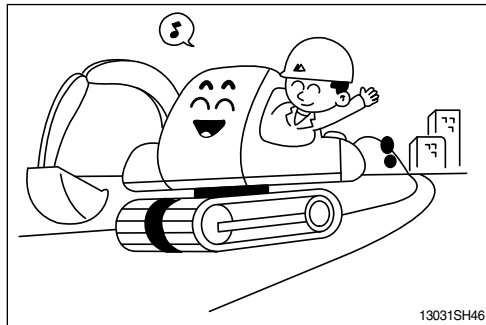


1. MAJOR COMPONENT

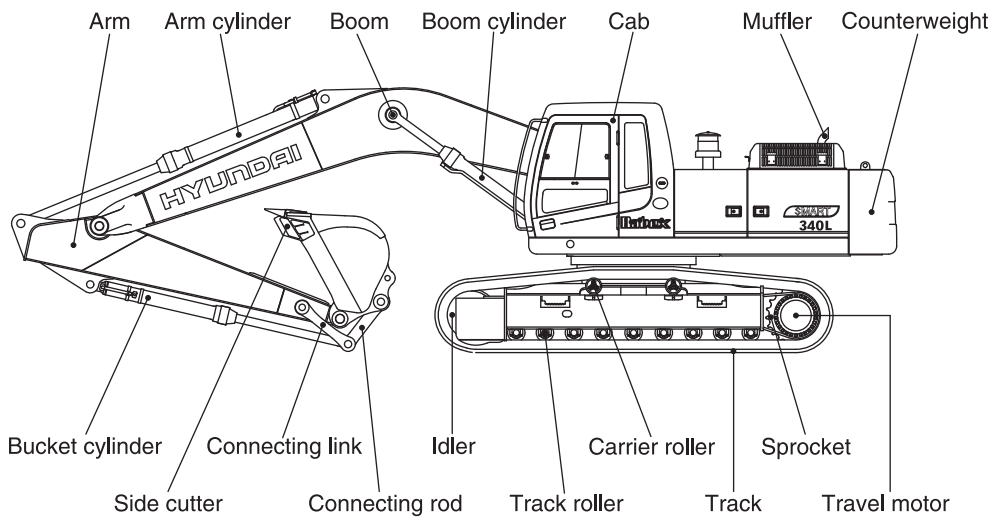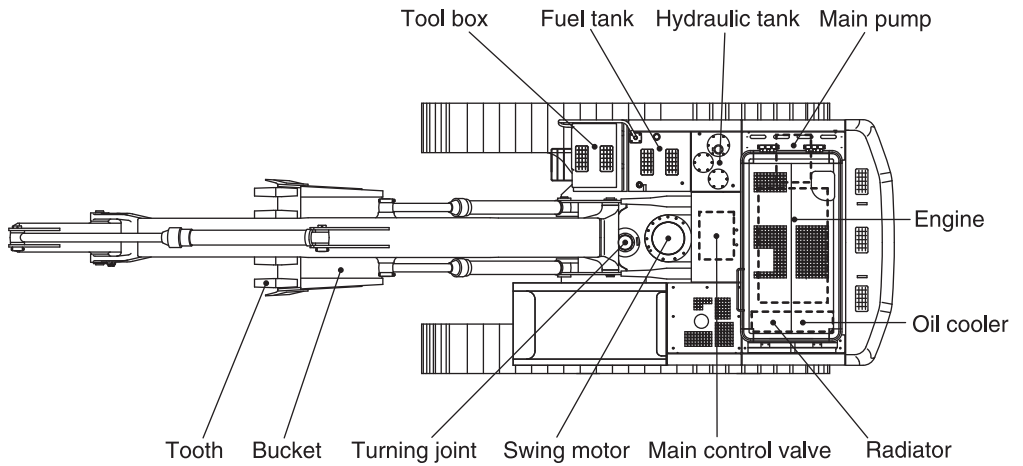

2. SPECIFICATIONS

- 6.45m(21' 2") BOOM, 2.2m(7' 3") ARM

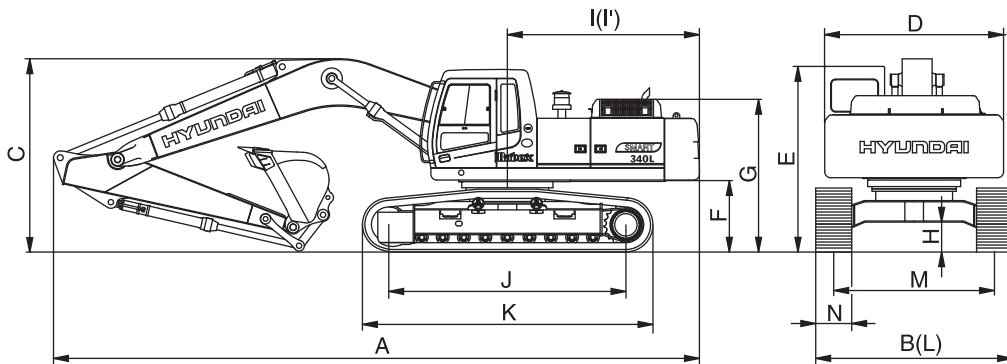


34072SP02

| Description | | Unit | Specification |
|-----------------------------------|----|--------------|------------------|
| Operating weight | | kg(lb) | 33800(74520) |
| Bucket capacity(SAE heaped) | | m³(yd³) | 2.10(2.75) |
| Overall length | A | mm(ft-in) | 11430(37' 6") |
| Overall width, with 600mm shoe | B | | 3280(10' 9") |
| Overall height | C | | 3630(11' 11") |
| Superstructure width | D | | 2980(9' 9") |
| Overall height of cab | E | | 3090(10' 2") |
| Ground clearance of counterweight | F | | 1200(3' 11") |
| Engine cover height | G | | 2600(8' 6") |
| Minimum ground clearance | H | | 500(1' 8") |
| Rear-end distance | I | | 3400(11' 2") |
| Rear-end swing radius | I' | | 3460(11' 4") |
| Distance between tumblers | J | | 4030(13' 3") |
| Undercarriage length | K | | 4940(16' 2") |
| Undercarriage width | L | | 3280(10' 9") |
| Track gauge | M | | 2680(8' 10") |
| Track shoe width, standard | N | | 600(24") |
| Travel speed(Low/high) | | km/hr(mph) | 3.3/5.5(2.1/3.4) |
| Swing speed | | rpm | 9.5 |
| Gradeability | | Degree(%) | 35(70) |
| Ground pressure(600mm shoe) | | kgf/cm²(psi) | 0.65(9.24) |

3. WORKING RANGE

Â 6.45m(21' 2") BOOM

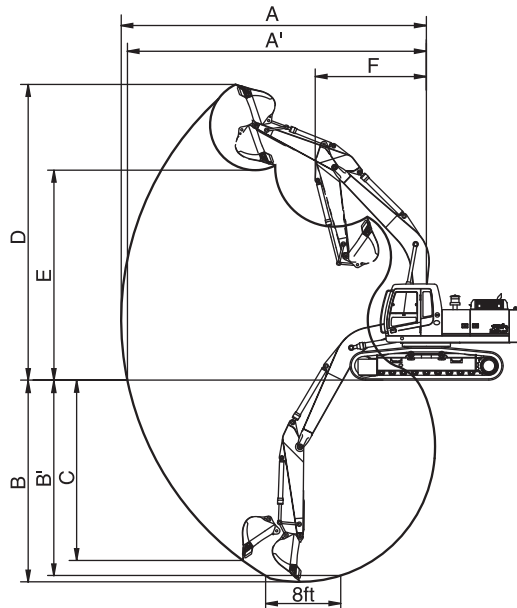

34072SP03

| Description | | 6.45m(21' 2") Boom | | |
|---------------------------------|-----|--------------------|---------------------|-------------------|
| | | 2.2m(7' 3") Arm | 2.65m(8' 8") Arm | 3.2m(10' 6") Arm |
| Max digging reach | A | 10230mm (33' 7") | 10730mm (35' 2") | 11140mm (36' 7") |
| Max digging reach on ground | A' | 10010mm (32' 10") | 10520mm (34' 6") | 10940mm (35' 11") |
| Max digging depth | B | 6310mm (20' 8") | 6830mm (22' 5") | 7370mm (24' 2") |
| Max digging depth (8ft level) | B' | 6110mm (20' 1") | 6660mm (21' 10") | 7210mm (23' 8") |
| Max vertical wall digging depth | C | 4320mm (14' 2") | 5050mm (16' 7") | 6360mm (20' 10") |
| Max digging height | D | 9830mm (32' 3") | 10120mm (33' 2") | 10310mm (33' 10") |
| Max dumping height | E | 6890mm (22' 7") | 7040mm (23' 1") | 7240mm (23' 9") |
| Min. swing radius | F | 4840mm (15' 11") | 4740mm (15' 7") | 4470mm (14' 8") |
| Bucket digging force | SAE | 199.1[217.2] kN | ← | ← |
| | | 20300[22150] kgf | ← | ← |
| | | 44750[48820] lbf | ← | ← |
| | ISO | 225.6[246.1] kN | ← | ← |
| | | 23000[25050] kgf | ← | ← |
| | | 50710[55320] lbf | ← | ← |
| Arm crowd force | SAE | 204.0[222.5] kN | 156.9[171.2] kN | 132.4[144.4] kN |
| | | 20800[22660] kgf | 16000[17480] kgf | 13500[14730] kgf |
| | | 45860[50030] lbf | 35270[38480] lbf kN | 29760[32470] lbf |
| | ISO | 211.8[231.1] kN | 162.8[177.6] kgf | 136.3[148.7] kN |
| | | 21600[23530] kgf | 16600[18080] lbf | 13900[15160] kgf |
| | | 47620[51950] lbf | 36600[39930] kN | 30640[33430] lbf |

[] : Power boost











4. WEIGHT

| Item | R340L | |
|--|-------|-------|
| | kg | lb |
| Upperstructure assembly | 15300 | 33730 |
| Main frame weld assembly | 2680 | 5900 |
| Engine assembly | 920 | 2030 |
| Main pump assembly | 250 | 550 |
| Main control valve assembly | 200 | 440 |
| Swing motor assembly | 310 | 680 |
| Hydraulic oil tank assembly | 230 | 510 |
| Fuel tank assembly | 230 | 510 |
| Counterweight | 6600 | 14550 |
| Cab assembly | 310 | 680 |
| Radiator total assy | 280 | 620 |
| Lower chassis assembly | 11950 | 26350 |
| Track frame weld assembly | 3970 | 8750 |
| Swing bearing | 435 | 960 |
| Travel motor assembly | 360 | 790 |
| Turning joint | 50 | 110 |
| Tension cylinder | 205 | 450 |
| Idler | 250 | 550 |
| Sprocket | 83 | 180 |
| Carrier roller | 35 | 80 |
| Track roller | 56 | 120 |
| Track-chain assembly(600mm standard triple grouser shoe) | 1880 | 4150 |
| Front attachment assembly(6.45m boom, 3.2m arm, 2.1m³ SAE heaped bucket) | 6550 | 14440 |
| 6.45m boom assembly | 2710 | 5970 |
| 3.2m arm assembly | 1320 | 2910 |
| 1.44m³ SAE heaped bucket | 1450 | 3196 |
| Boom cylinder assembly | 280 | 620 |
| Arm cylinder assembly | 380 | 840 |
| Bucket cylinder assembly | 270 | 570 |
| Bucket control linkage assembly | 370 | 820 |

5. LIFTING CAPACITIES

- 1) 6.45m(21' 2") boom, 2.2m(7' 3") arm equipped with 2.10m³(SAE heaped) bucket and 600mm (24") triple grouser shoe.

•  : Rating over-front •  : Rating over-side or 360 degree

| Load point height | | Load radius | | | | | | | | At max. reach | | |
|-------------------|----------|---|---|---|---|---|---|---|---|---|---|----------------|
| | | 3.0m(10ft) | | 4.5m(15ft) | | 6.0m(20ft) | | 7.5m(25ft) | | Capacity | | Reach |
| | |  |  |  |  |  |  |  |  |  |  | m(ft) |
| 7.5m (25ft) | kg lb | | | | | | | | | *6140 *13540 | 4950 10910 | 7.99 (26.2) |
| 6.0m (20ft) | kg lb | | | | | *7290 *16070 | *7290 *16070 | *6760 *14900 | 5430 11970 | *6200 *13670 | 3890 8580 | 8.87 (29.1) |
| 4.5m (15ft) | kg lb | | | *11110 *24490 | *11110 *24490 | *8480 *18700 | 7790 17170 | *7260 *16010 | 5230 11530 | 5520 12170 | 3340 7360 | 9.39 (30.8) |
| 3.0m (10ft) | kg lb | | | | | *9930 *21890 | 7200 15870 | *7980 *17590 | 4960 10930 | 5180 11420 | 3080 6790 | 9.61 (31.5) |
| 1.5m (5ft) | kg lb | | | | | *11150 *24580 | 6730 14840 | 7770 17130 | 4700 10360 | 5140 11330 | 3040 6700 | 9.56 (31.4) |
| Ground Line | kg lb | | | *16550 *36490 | 10200 22490 | 10940 24120 | 6460 14240 | 7590 16730 | 4530 9990 | 5420 11950 | 3210 7080 | 9.23 (30.3) |
| -1.5m (-5ft) | kg lb | | | *16000 *35270 | 10250 22600 | 10870 23960 | 6400 14110 | 7540 16620 | 4490 9900 | 6150 13560 | 3680 8110 | 8.59 (28.2) |
| -3.0m (-10ft) | kg lb | *19750 *43540 | *19750 *43540 | *14600 *32190 | 10480 23100 | *10920 *24070 | 6510 14350 | | | *7140 *15740 | 4750 10470 | 7.54 (24.7) |
| -4.5m (-15ft) | kg lb | *15770 *34770 | *15770 *34770 | *11820 *26060 | 10940 24120 | | | | | | | |

Note 1. Lifting capacity are based on SAE J1097 and ISO 10567.













2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The load point is a hook located on the back of the bucket.

4. *indicates load limited by hydraulic capacity.

- 2) 6.45m(21' 2") boom, 2.65m(8' 8") arm equipped with 2.10m³(SAE heaped) bucket and 600mm (24") triple grouser shoe.

•  : Rating over-front •  : Rating over-side or 360 degree

| Load point height | | Load radius | | | | | | | | | | At max. reach | |
|-------------------|----------|---|---|---|---|---|---|---|---|---|---|---|---|
| | | 3.0m(10.0ft) | | 4.5m(15.0ft) | | 6.0m(20.0ft) | | 7.5m(25.0ft) | | 9.0m(30.0ft) | | Capacity | |
| | |  |  |  |  |  |  |  |  |  |  |  |  |
| 7.5m (25.0ft) | kg lb | | | | | | | | | | | *5660 *12480 | 4350 9590 |
| 6.0m (20.0ft) | kg lb | | | | | | | *6280 *13850 | 5490 12100 | | | 5690 12540 | 3480 7670 |
| 4.5m (15.0ft) | kg lb | | | *10130 *22330 | *10130 *22330 | *7920 *17460 | 7860 17330 | *6830 *15060 | 5250 11570 | | | 5050 11130 | 3010 6640 |
| 3.0m (10.0ft) | kg lb | | | *13280 *29280 | 11390 25110 | *9400 *20720 | 7230 15940 | *7600 *16760 | 4950 10910 | 5800 12790 | 2480 7670 | 4740 10450 | 2780 6130 |
| 1.5m (5.0ft) | kg lb | | | *15570 *34330 | 10410 22950 | *10730 *23660 | 6700 14770 | 7730 17040 | 4660 10270 | 5650 12460 | 3340 7360 | 4700 10360 | 2730 6020 |
| Ground Line | kg lb | | | *16360 *36070 | 10050 22160 | 10850 23920 | 6370 14040 | 7510 16560 | 4450 9810 | | | 4930 10870 | 2870 6330 |
| -1.5m (-5.0ft) | kg lb | *15210 *33530 | *15210 *33530 | *16110 *35520 | 10030 22110 | 10720 23630 | 6260 13800 | 7420 16360 | 4370 9630 | | | 5520 12170 | 3250 7170 |
| -3.0m (-10.0ft) | kg lb | *21030 *46360 | *21030 *46360 | *14990 *33050 | 10210 22510 | 10810 23830 | 6330 13960 | 7510 16560 | 4460 9830 | | | *6780 *14950 | 4080 8990 |
| -4.5m (-15.0ft) | kg lb | *17350 *38250 | *17350 *38250 | *12640 *27870 | 10620 23410 | *9240 *20370 | 6630 14620 | | | | | *6280 *13850 | 6120 13490 |

Note 1. Lifting capacity are based on SAE J1097 and ISO 10567.

2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The load point is a hook located on the back of the bucket.

4. *indicates load limited by hydraulic capacity.

LIFTING CAPACITY

Boom : 6.45m (21' 2")
 Arm : 3.2 m (10' 8")
 Bucket : 2.1 m³ SAE heaped
 Shoe 600mm Triple Grouser with 6.6 ton CWT
















Robex340L / LH



Rating over-front



Rating over-side or 360 degree

| Load point height (m/ft) | | Load radius | | | | | | | | | | | | At max. reach | | |
|-----------------------------|----|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | 1.5m(5.0ft) | | 3.0m(15.0ft) | | 4.5m(15.0ft) | | 6.0m(20.0ft) | | 7.5m(25.0ft) | | 9.0m(30.0ft) | | Capacity | | Reach |
| | |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| 7.5 m | kg | | | | | | | | | *4880 | *4880 | | | *5500 | 1360 | 9.06 |
| 25.0 ft | lb | | | | | | | | | *10760 | *10760 | | | *12130 | 9610 | (29.7) |
| 6.0 m | kg | | | | | | | | | *6000 | *6110 | | | 5730 | 3630 | 9.84 |
| 20.0 ft | lb | | | | | | | | | *13230 | *13470 | | | 12630 | 8000 | (32.3) |
| 4.5 m | kg | | | | | | | *7490 | *7490 | *6640 | 5860 | *5070 | 4150 | 5180 | 3220 | 10.31 |
| 15.0 ft | lb | | | | | | | *16510 | *16510 | *14640 | 12920 | *11180 | 9140 | 11410 | 7100 | (33.8) |
| 3.0 m | kg | | | | | *12430 | 12610 | *9090 | 7980 | *7490 | 5540 | 6350 | 4000 | 4910 | 3010 | 10.52 |
| 10.0 ft | lb | | | | | *27400 | 27800 | *20040 | 17600 | *16510 | 12210 | 14000 | 8810 | 10820 | 6630 | (34.5) |
| 1.5 m | kg | | | | | *15210 | 11540 | *10610 | 7440 | 8360 | 5230 | 6180 | 3840 | 4860 | 2960 | 10.48 |
| 5.0 ft | lb | | | | | *33530 | 25440 | 23390 | 16400 | 18440 | 11530 | 13620 | 8470 | 10710 | 6520 | (34.4) |
| Ground Line | kg | | | *9720 | *9720 | *16620 | 11010 | 11630 | 7070 | 8100 | 5010 | 6050 | 3710 | 5030 | 3060 | 10.19 |
| | lb | | | *21430 | *21430 | *36640 | 24270 | 25630 | 15590 | 17860 | 11040 | 13340 | 8170 | 11080 | 6740 | (33.4) |
| -1.5 m | kg | *10800 | *10800 | *13710 | *13710 | *16830 | 10870 | 11430 | 6890 | 7970 | 4880 | | | 5500 | 3380 | 9.63 |
| -5.0 ft | lb | *23810 | *23810 | *30230 | *30230 | *37100 | 23970 | 25190 | 15190 | 17570 | 10760 | | | 12120 | 7450 | (31.6) |
| -3.0 m | kg | *14530 | *14530 | *18410 | *18410 | *16100 | 10940 | 11420 | 6890 | 7970 | 4890 | | | 6480 | 4040 | 8.74 |
| -10.0 ft | lb | *32030 | *32030 | *40590 | *40590 | *35490 | 24120 | 25170 | 15190 | 17570 | 10780 | | | 14290 | 8910 | (28.7) |
| -4.5 m | kg | | | *20220 | *20220 | *14270 | 11220 | 10560 | 7070 | | | | | *6880 | 5490 | 7.37 |
| -15.0 ft | lb | | | *44580 | *44580 | *31460 | 24730 | 23280 | 15590 | | | | | *15170 | 12100 | (24.2) |
| -6.0 m | kg | | | | | *10450 | 10450 | | | | | | | | | 6.58 |
| -20.0 ft | lb | | | | | *23040 | 23040 | | | | | | | | | (21.6) |

- NOTES :
- Lifting Capacity are based on SAE J1097, ISO 10567.
 - Lifting Capacity of the Robex Series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
 - The load point is a hook (standard equipment) located on the back of the bucket.
 - (*) Indicates load limited by hydraulic capacity.



9UN9-80120

9UN9-80120 LIFTING CHART 2.1

LIFTING CAPACITY

Boom : 6.45m (21' 2")
 Arm : 3.2 m (10' 8")
 Bucket : 1.44 m³ SAE heaped
 Shoe 600mm Triple Grouser with 6.6 ton CWT
















Robex340L / LH



Rating over-front



Rating over-side or 360 degree

| Load point height (m/ft) | | Load radius | | | | | | | | | | | | At max. reach | | |
|-----------------------------|----|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | 1.5m(5.0ft) | | 3.0m(15.0ft) | | 4.5m(15.0ft) | | 6.0m(20.0ft) | | 7.5m(25.0ft) | | 9.0m(30.0ft) | | Capacity | | Reach |
| | |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| 7.5 m | kg | | | | | | | | | *4880 | *4880 | | | *5500 | 1360 | 9.06 |
| 25.0 ft | lb | | | | | | | | | *10760 | *10760 | | | *12130 | 9610 | (29.7) |
| 6.0 m | kg | | | | | | | | | *6000 | *6110 | | | 5730 | 3630 | 9.84 |
| 20.0 ft | lb | | | | | | | | | *13230 | *13470 | | | 12630 | 8000 | (32.3) |
| 4.5 m | kg | | | | | | | *7490 | *7490 | *6640 | 5860 | *5070 | 4150 | 5180 | 3220 | 10.31 |
| 15.0 ft | lb | | | | | | | *16510 | *16510 | *14640 | 12920 | *11180 | 9140 | 11410 | 7100 | (33.8) |
| 3.0 m | kg | | | | | *12430 | 12610 | *9090 | 7980 | *7490 | 5540 | 6350 | 4000 | 4910 | 3010 | 10.52 |
| 10.0 ft | lb | | | | | *27400 | 27800 | *20040 | 17600 | *16510 | 12210 | 14000 | 8810 | 10820 | 6630 | (34.5) |
| 1.5 m | kg | | | | | *15210 | 11540 | *10610 | 7440 | 8360 | 5230 | 6180 | 3840 | 4860 | 2960 | 10.48 |
| 5.0 ft | lb | | | | | *33530 | 25440 | 23390 | 16400 | 18440 | 11530 | 13620 | 8470 | 10710 | 6520 | (34.4) |
| Ground Line | kg | | | *9720 | *9720 | *16620 | 11010 | 11630 | 7070 | 8100 | 5010 | 6050 | 3710 | 5030 | 3060 | 10.19 |
| | lb | | | *21430 | *21430 | *36640 | 24270 | 25630 | 15590 | 17860 | 11040 | 13340 | 8170 | 11080 | 6740 | (33.4) |
| -1.5 m | kg | *10800 | *10800 | *13710 | *13710 | *16830 | 10870 | 11430 | 6890 | 7970 | 4880 | | | 5500 | 3380 | 9.63 |
| -5.0 ft | lb | *23810 | *23810 | *30230 | *30230 | *37100 | 23970 | 25190 | 15190 | 17570 | 10760 | | | 12120 | 7450 | (31.6) |
| -3.0 m | kg | *14530 | *14530 | *18410 | *18410 | *16100 | 10940 | 11420 | 6890 | 7970 | 4890 | | | 6480 | 4040 | 8.74 |
| -10.0 ft | lb | *32030 | *32030 | *40590 | *40590 | *35490 | 24120 | 25170 | 15190 | 17570 | 10780 | | | 14290 | 8910 | (28.7) |
| -4.5 m | kg | | | *20220 | *20220 | *14270 | 11220 | 10560 | 7070 | | | | | *6880 | 5490 | 7.37 |
| -15.0 ft | lb | | | *44580 | *44580 | *31460 | 24730 | 23280 | 15590 | | | | | *15170 | 12100 | (24.2) |
| -6.0 m | kg | | | | | *10450 | 10450 | | | | | | | | | 6.58 |
| -20.0 ft | lb | | | | | *23040 | 23040 | | | | | | | | | (21.6) |

- NOTES :
- Lifting Capacity are based on SAE J1097, ISO 10567.
 - Lifting Capacity of the Robex Series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
 - The load point is a hook (standard equipment) located on the back of the bucket.
 - (*) Indicates load limited by hydraulic capacity.





9UN9-80110

9UN9-80110 LIFTING CHART 1.44

6. BUCKET SELECTION GUIDE

6. BUCKET SELECTION GUIDE

1) GENERAL BUCKET
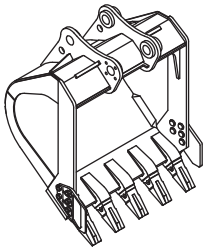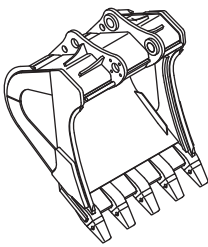
| | |
|--|---|
| Â General bucket  | Â Rock-heavy duty bucket  |
| 2.10m³ SAE heaped bucket | L' 1.44m³ SAE L' 1.62m³ SAE heaped bucket |

| Capacity | | Width | | Weight | 6.45m (21' 2") boom | | |
|------------------------|---------------------|------------------------|---------------------|--------------------|---------------------|----------------------|----------------------|
| SAE heaped | CECE heaped | Without side cutter | With side cutter | | 2.2m (7' 3") arm | 2.65m (8' 8") arm | 3.2m (10' 6") arm |
| 2.10m³ (2.75yd³) | 1.90m³ (2.49yd³) | 1710mm (67.3") | 1830mm (72.0") | 1505kg (3320lb) | | | |
| L' 1.44m³ (1.88yd³) | 1.25m³ (1.64yd³) | 1290mm (50.8") | - | 1510kg (3330lb) | | | |
| L' 1.62m³ (2.12yd³) | 1.43m³ (1.87yd³) | 1590mm (62.6") | - | 1540kg (3400lb) | | | |

L' : Rock - Heavy duty bucket

 Applicable for materials with density of 2000kgf/m³ (3370lbf/yd³) or less

 Applicable for materials with density of 1600kgf/m³ (2700lbf/yd³) or less


 Applicable for materials with density of 1100kgf/m³ (1850lbf/yd³) or less

7. UNDERCARRIAGE

1) TRACKS

X-leg type center frame is integrally welded with reinforced box-section track frames. The design includes dry tracks, lubricated rollers, idlers, sprockets, hydraulic track adjusters with shock absorbing springs and assembled track-type tractor shoes with triple grousers.

2) TYPES OF SHOES

| Model | Shapes | | Triple grouser | |
|-------|------------------|--------------|---|--------------|
| | | |  | |
| R340L | Shoe width | mm(in) | 600(24) | 600 HD |
| | Operating weight | kg(lb) | 33800(74520) | 34200(75400) |
| | Ground pressure | kgf/cm (psi) | 0.65(9.24) | 0.66(9.39) |
| | Overall width | mm(ft-in) | 3280(10' 9") | 3280(10' 9") |

3) NUMBER OF ROLLERS AND SHOES ON EACH SIDE

| Item | Quantity |
|-----------------|----------|
| Carrier rollers | 2EA |
| Track rollers | 9EA |
| Track shoes | 48EA |

4) SELECTION OF TRACK SHOE

Suitable track shoes should be selected according to operating conditions.

Method of selecting shoes

Confirm the category from the list of applications in **table 2**, then use **table 1** to select the shoe. Wide shoes(Categories B and C) have limitations on applications. Before using wide shoes, check the precautions, then investigate and study the operating conditions to confirm if these shoes are suitable.

Select the narrowest shoe possible to meet the required flotation and ground pressure. Application of wider shoes than recommendations will cause unexpected problem such as bending of shoes, crack of link, breakage of pin, loosening of shoe bolts and the other various problems.

※ **Table 1**

| Track shoe | Specification | Category |
|-------------------------|---------------|----------|
| 600mm triple grouser | Standard | A |
| 600mm HD triple grouser | Option | B |

※ **Table 2**

| Category | Applications | Precautions |
|----------|---|--|
| A | Rocky ground, river beds, normal soil | <ul style="list-style-type: none"> • Travel at low speed on rough ground with large obstacles such as boulders or fallen trees |
| B | Normal soil, soft ground | <ul style="list-style-type: none"> • These shoes cannot be used on rough ground with large obstacles such as boulders or fallen trees • Travel at high speed only on flat ground • Travel slowly at low speed if it is impossible to avoid going over obstacles |

8. SPECIFICATIONS FOR MAJOR COMPONENTS

1) ENGINE

| Item | Specification |
|-------------------------------------|---|
| Model | HYUNDAI D6AC-C |
| Type | 4-cycle turbocharged charger air cooled diesel engine |
| Cooling method | Water cooling |
| Number of cylinders and arrangement | 6 cylinders, in-line |
| Firing order | 1-5-3-6-2-4 |
| Combustion chamber type | Direct injection type |
| Cylinder bore × stroke | 130 × 140mm(5.12" × 5.51") |
| Piston displacement | 11149cc(680cu in) |
| Compression ratio | 17 : 1 |
| Rated gross horse power(SAE J1995) | 276Hp at 1900rpm(206kW at 1900rpm) |
| Maximum torque | 120kgf · m(868lbf · ft) at 1400rpm |
| Engine oil quantity | 27.3 l (7.2U.S. gal) |
| Dry weight | 920kg(2030lb) |
| Low idling speed | 800 ± 50rpm |
| High idling speed | 2050 + 50rpm |
| Rated fuel consumption | 152.9g/Hp · hr at 1900rpm |
| Starting motor | 24V-5.5kW |
| Alternator | 24V-70A |
| Battery | 2 × 12V × 160Ah |

2) MAIN PUMP

| Item | Specification |
|------------------|--|
| Type | Variable displacement tandem axis piston pumps |
| Capacity | 2 × 149.5cc/rev |
| Maximum pressure | 330kgf/cm ² (4690psi)[360kgf/cm ² (5120psi)] |
| Rated oil flow | 2 × 254.2 l /min (67.2U.S. gpm/ 55.9U.K. gpm) |
| Rated speed | 1700rpm |

[]: Power boost

3) GEAR PUMP

| Item | Specification |
|------------------|---|
| Type | Fixed displacement gear pump single stage |
| Capacity | 15cc/rev |
| Maximum pressure | 35kgf/cm ² (500psi) |
| Rated oil flow | 25.5 l /min(6.7U.S. gpm/5.6U.K. gpm) |

4) MAIN CONTROL VALVE

| Item | Specification |
|--------------------------------|---|
| Type | 9 spools |
| Operating method | Hydraulic pilot system |
| Main relief valve pressure | 330kgf/cm ² (4690psi) [360kgf/cm ² (5120psi)] |
| Overload relief valve pressure | 390kgf/cm ² (5550psi) |

[]: Power boost

5) SWING MOTOR

| Item | Specification |
|------------------------|--|
| Type | Axial piston motor |
| Capacity | 169.4cc/rev |
| Relief pressure | 290kgf/cm ² (4120psi) |
| Braking system | Automatic, spring applied hydraulic released |
| Braking torque | 70kgf · m(505lbf · ft) |
| Brake release pressure | 30~50kgf/cm ² (430~710psi) |
| Reduction gear type | 2 - stage planetary |
| Swing speed | 9.5rpm |

6) TRAVEL MOTOR

| Item | | Specification | |
|------------------------|------------|--|--------|
| Type | | Variable displacement axial piston motor | |
| Relief pressure | | 330kgf/cm²(4700psi) | |
| Capacity(max / min) | Gear ratio | 154.8/88.5cc/rev | 72.978 |
| Reduction gear type | | 3-stage planetary | |
| Braking system | | Automatic, spring applied hydraulic released | |
| Brake release pressure | | 9kgf/cm²(128psi) | |
| Braking torque | | 40kgf · m(290lbf · ft) | |

7) REMOTE CONTROL VALVE

| Item | | Specification |
|-------------------------|---------|--------------------------------|
| Type | | Pressure reducing type |
| Operating pressure | Minimum | 6.5kgf/cm ² (92psi) |
| | Maximum | 26kgf/cm ² (370psi) |
| Single operation stroke | Lever | 61mm(2.4in) |
| | Pedal | 123mm(4.84in) |

8) CYLINDER

| Item | | Specification |
|-----------------|-----------------------------|------------------------|
| Boom cylinder | Bore dia × Rod dia × Stroke | ø 150 × ø 105 × 1480mm |
| | Cushion | Extend only |
| Arm cylinder | Bore dia × Rod dia × Stroke | ø 160 × ø 110 × 1685mm |
| | Cushion | Extend and retract |
| Bucket cylinder | Bore dia × Rod dia × Stroke | ø 140 × ø 100 × 1285mm |
| | Cushion | Extend only |

※ Discoloration of cylinder rod can occur when the friction reduction additive of lubrication oil spreads on the rod surface.

※ Discoloration does not cause any harmful effect on the cylinder performance.

9) SHOE

| Item | | Width | Ground pressure | Link quantity | Overall width |
|-------|----------|------------|-----------------------------------|---------------|----------------|
| R340L | Standard | 600mm(24") | 0.65kgf/cm ² (9.24psi) | 48 | 3280mm(10' 9") |
| | Option | 700mm(28") | 0.57kgf/cm ² (8.11psi) | 48 | 3380mm(11' 1") |
| | | 800mm(32") | 0.50kgf/cm ² (7.11psi) | 48 | 3480mm(11' 5") |
| | | 900mm(36") | 0.45kgf/cm ² (6.40psi) | 48 | 3580mm(11' 9") |

10) BUCKET

| Item | | Capacity | | Tooth quantity | Width | |
|-------|----------|--|---|----------------|---------------------|------------------|
| | | SAE heaped | CECE heaped | | Without side cutter | With side cutter |
| R340L | Standard | 2.10m ³ (2.75yd ³) | 1.90m ³ (2.49yd ³) | 5 | 1710mm(67.3") | 1830mm(72.0") |
| | Option | ⊙1.44m ³ (1.88yd ³) | 1.25m ³ (1.63yd ³) | 5 | 1290mm(50.8") | - |
| | | ⊙1.62m ³ (2.12yd ³) | 1.43m ³ (1.87yd ³) | 5 | 1590mm(62.6") | - |

⊙ : Rock - Heavy duty bucket

9. RECOMMENDED OILS

Use only oils listed below or equivalent.

Do not mix different brand oil.

| Service point | Kind of fluid | Capacity l (U.S. gal) | Ambient temperature °C (°F) | | | | | | |
|------------------------------|--|--|-----------------------------|-------------|-----------|------------|------------|------------|-------------|
| | | | -20 (-4) | -10 (14) | 0 (32) | 10 (50) | 20 (68) | 30 (86) | 40 (104) |
| Engine oil pan | Engine oil | 27.3(7.2) | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| Swing drive | Gear oil | 11(2.9) | | | | | | | |
| Final drive | | 5.5 × 2 (1.5 × 2) | | | | | | | |
| Hydraulic tank | Hydraulic oil | Tank; 210(55.5) System; 320(84.5) | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| Fuel tank | Diesel fuel | 600(158) | | | | | | | |
| | | | | | | | | | |
| Fitting (Grease nipple) | Grease | As required | | | | | | | |
| | | | | | | | | | |
| Radiator (Reservoir tank) | Mixture of antifreeze and water 50 : 50 | 45(12) | | | | | | | |
| | | | | | | | | | |

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute


ASTM : American Society of Testing and Material

1. CAB DEVICES

- 1) The ergonomically designed console box and suspension type seat provide the operator with comfort.

2) ELECTRONIC MONITOR SYSTEM

- (1) The centralized electronic monitor system allows the status and conditions of the machine to be monitored at a glance.
- (2) It is equipped with a safety warning system for early detection of machine malfunction.

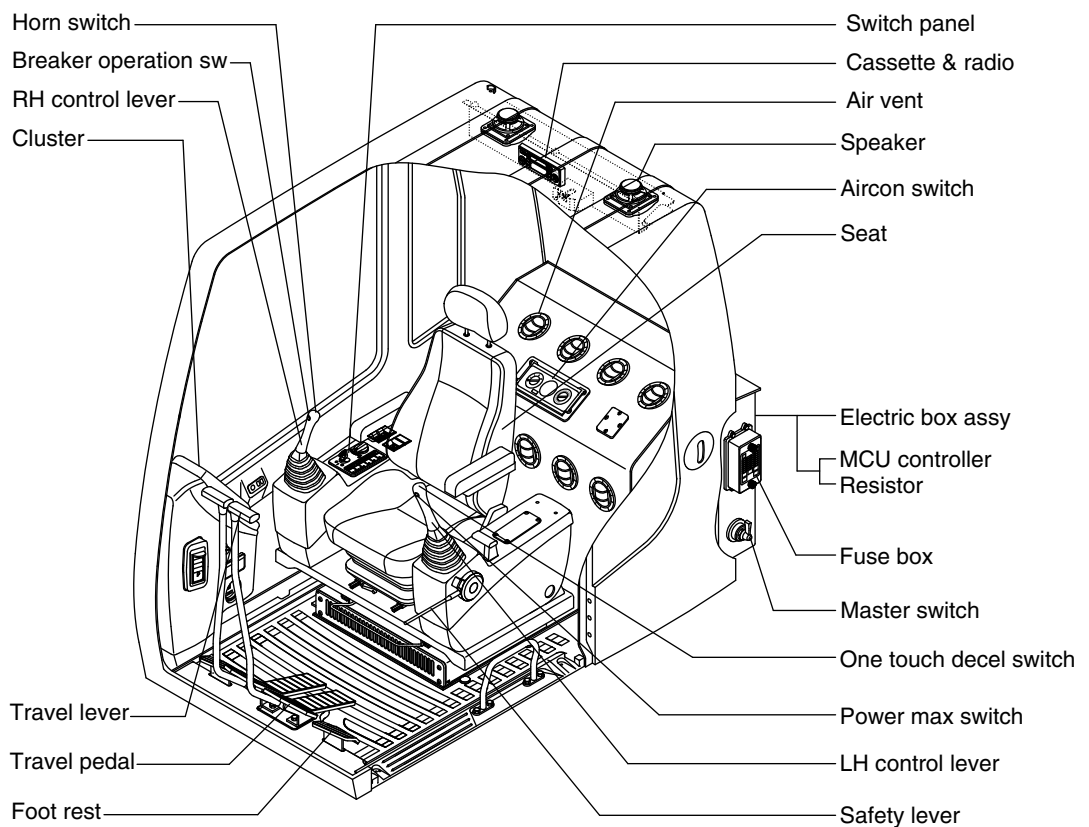

34073CD01

2. CLUSTER (up to #0007)


1) MONITOR PANEL

The monitor panel consists of gauges and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.

- Gauges : Indicate operating status of the machine.
- Warning lamp : Indicate abnormality of the machine(Red).
- Pilot lamp : Indicate operating status of the machine(Amber).

※ **The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.**


※ **When the monitor provides a warning immediately check the problem, and perform the required action.**

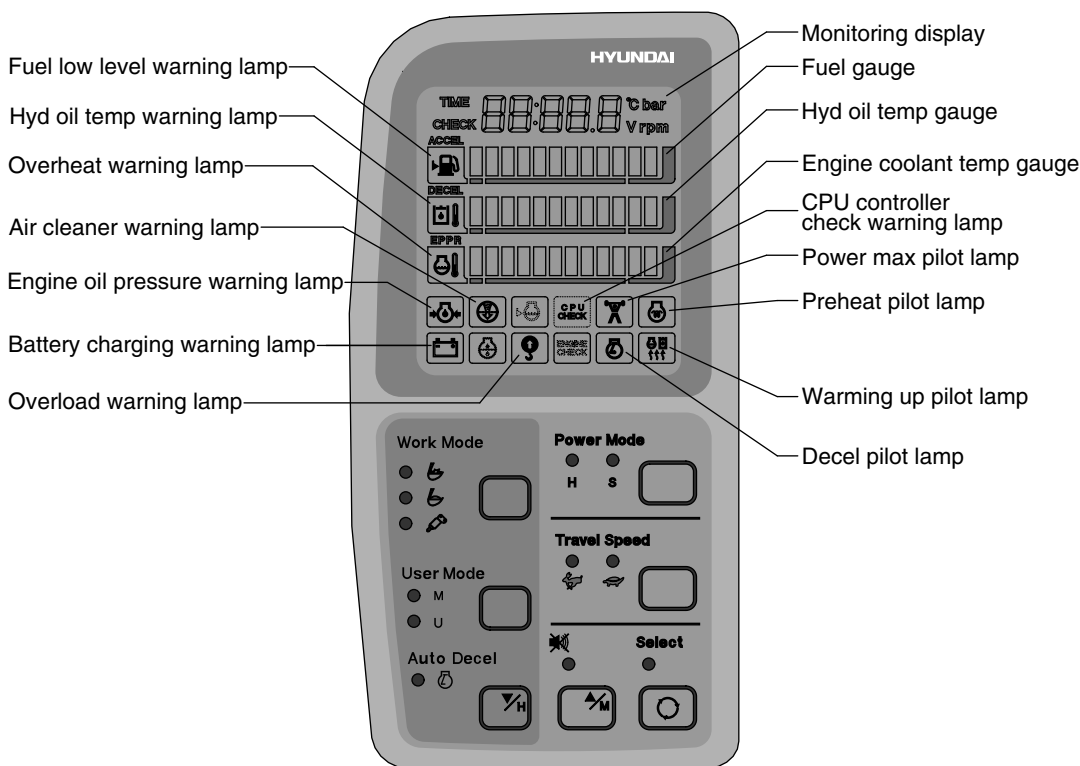

RD22073CD02

※ **The warning lamp lights ON and the buzzer sounds when the machine has a problem. In this case, press the buzzer stop switch and buzzer stop, but the warning lamp lights until the problem is cleared.**

(1) Monitoring display

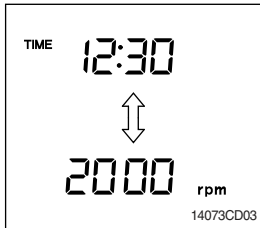



- ① This displays the current time and machine information such as engine rpm, coolant/hydraulic oil temperature, hydraulic oil pressure and also error codes.


※ Refer to the page 4-12 for details.

(2) Fuel gauge




- ① This gauge indicates the amount of fuel in the fuel tank.
 - ② Fill the fuel when the white range or warning lamp  blinks.
- ※ If the gauge illuminates the white range or warning lamp  blinks even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

(3) Hydraulic oil temperature gauge

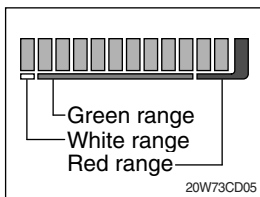


- ① This indicates the temperature of coolant.
 - White range : Below 30°C(86°F)
 - Green range : 30-105 °C(86-221°F)
 - Red range : Above 105°C(221°F)
- ② The green range illuminates when operating.
- ③ Keep idling engine at low speed until the green range illuminates before operation of machine.
- ④ When the red range illuminates, reduce the load on the system. If the gauge stays in the red range, stop the machine and check the cause of the problem.

(4) Engine coolant temperature gauge

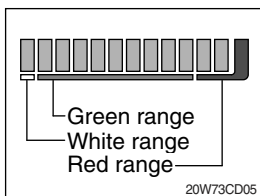

- ① This indicates the temperature of coolant.
 - White range : Below 30°C(86°F)
 - Green range : 30-105 °C(86-221°F)
 - Red range : Above 105°C(221°F)
- ② The green range illuminates when operating.
- ③ Keep idling engine at low speed until the green range illuminates before operation of machine.
- ④ When the red range illuminates, turn OFF the engine, check the radiator and engine.


(5) Fuel low level warning lamp

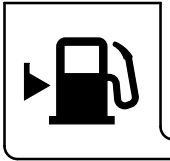

21073CD04A

- ① This lamp blinks and the buzzer sounds when the level of fuel is below 67 l (17.7U.S. gal).
- ② Fill the fuel immediately when the lamp blinks.


(6) Hydraulic oil temperature warning lamp

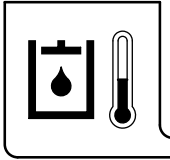

21073CD05A

- ① This warning lamp operates and the buzzer sounds when the temperature of hydraulic oil is over 105 °C (221 °F) .
- ② Check the hydraulic oil level when the lamp blinks.
- ③ Check for debris between oil cooler and radiator.


(7) Overheat warning lamp

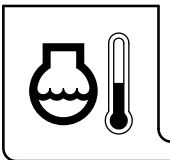

21073CD06A

- ① This lamp blinks and the buzzer sounds when the temperature of coolant is over the normal temperature 110°C(230°F) .
- ② Check the cooling system when the lamp blinks.


(8) Engine oil pressure warning lamp

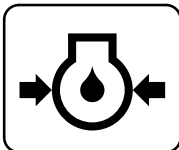

21073CD07

- ① This lamp blinks and the buzzer sounds after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.


(9) Air cleaner warning lamp

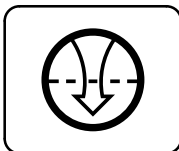

21073CD08

- ① This lamp blinks and the buzzer sounds when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.


(10) CPU controller check warning lamp

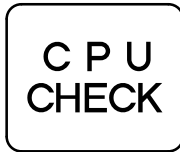

21073CD10

- ① Communication problem between MCU and cluster makes the lamp blinks and the buzzer sounds.
- ② Check if any fuse for MCU burnt off.
- ③ If not check the communication line between them.


(11) Battery charging warning lamp

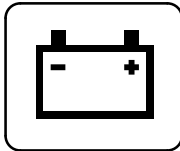

21073CD13

- ① This lamp blinks and the buzzer sounds when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.

(12) Overload warning lamp

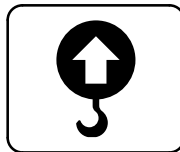

21073CD15

- ① When the machine is overload, the overload warning lamp blinks during the overload switch is ON.

(13) Power max pilot lamp



21073CD11

- ① The lamp will be ON when pushing power max switch on the LH RCV lever.


(14) Decel pilot lamp



21073CD17

- ① Operating auto decel or one touch decel makes the lamp ON.
- ② The lamp will be ON when pushing one touch decel switch on the LH RCV lever.


(15) Warming up pilot lamp

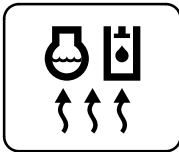

21073CD18

- ① This lamp is turned ON when the coolant temperature is below 30°C (86 °F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30 °C, or when 10 minutes have passed since starting.


(16) Preheat pilot lamp

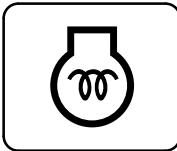

21073CD12


- ① Turning the start key switch ON position starts preheating in cold weather.
- ② Start the engine as this lamp is OFF.

2) SWITCH PANEL

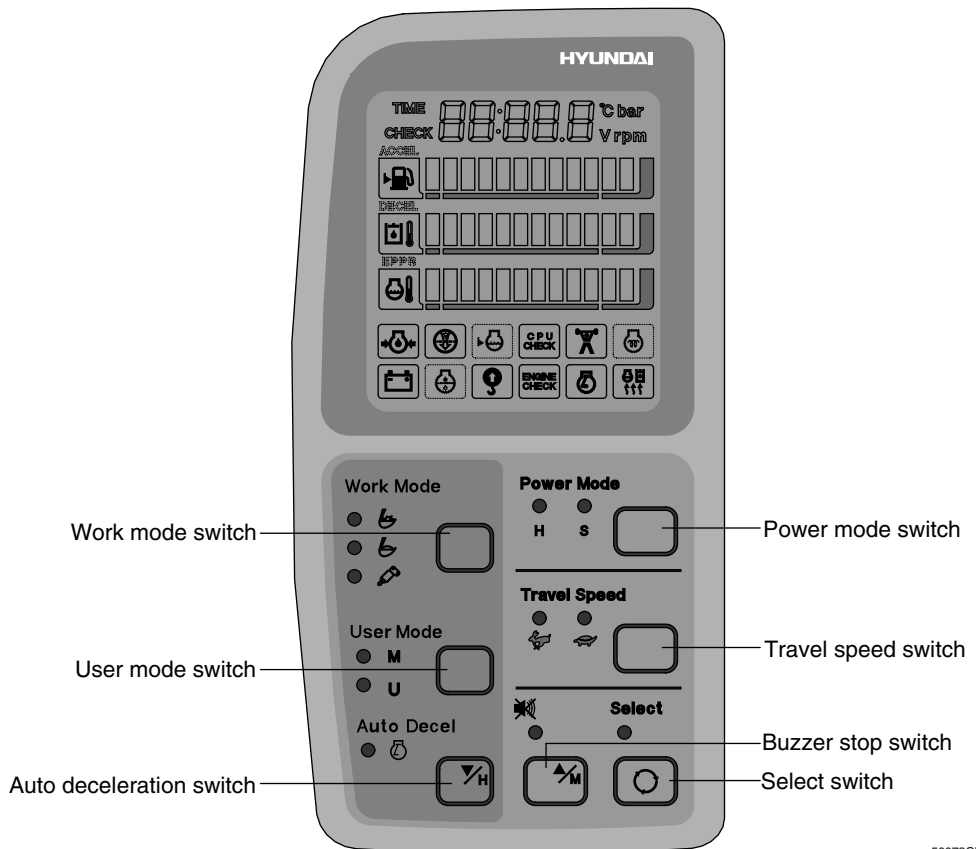

50073CD19

(1) Work mode switch

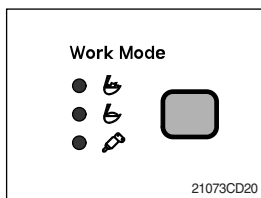


- ① This switch is to select the machine operation mode, which shifts from general operation mode to heavy operation mode and breaker mode in a row by pressing the switch.

- Heavy duty work mode
- General work mode
- Breaker operation mode

※ Refer to the page 4-7 for details.

(2) User mode switch

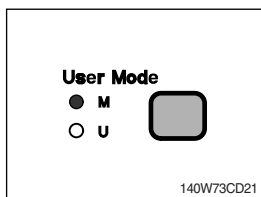


- ① This switch is to select the maximum power or user mode.

- M : Maximum power
- U : Memorizing operators preferable power setting


※ Refer to the page 4-7 for details.

(3) Auto deceleration switch

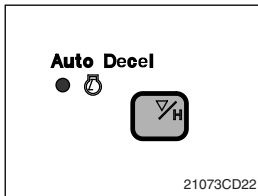


- ① This switch is used to actuate or cancel the auto deceleration function.
- ② When the switch actuated and all control levers and pedals are at neutral position, engine speed will be lowered automatically to save fuel consumption.
 - Light ON : Auto deceleration function is selected.
 - Light OFF : Auto deceleration function is cancelled so that the engine speed increased to previous setting value.
- ③ Operating the auto deceleration function makes the decel indicating lamp on the LCD panel ON.

(4) Power mode switch

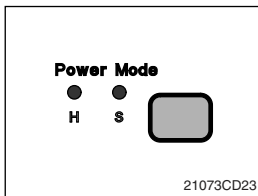


- ① The lamp of selected mode is turned ON by pressing the switch().
 - H : High power work.
 - S : Standard power work.

(5) Travel speed control switch

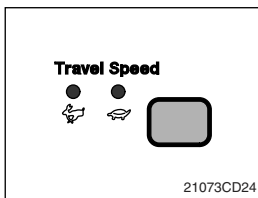


- ① This switch is to control the travel speed which is changed to high speed(Rabbit mark) by pressing the switch and low speed(Turtle mark) by pressing it again.

(6) Buzzer stop switch

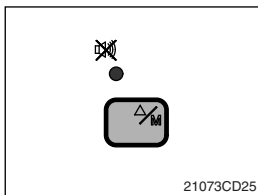

- ① When the starting switch is turned ON first, normally the alarm buzzer sounds for 2 seconds during lamp check operation.
- ② The red lamp lights ON and the buzzer sounds when the machine has a problem.
In this case, press this switch and buzzer stops, but the red lamp lights until the problem is cleared.

(7) Select switch

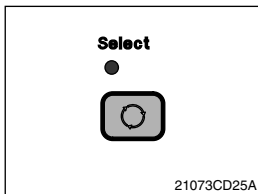

- ① This switch is used to select the monitor display function.
※ **Refer to the page 4-12 for details.**
- ② If the switch is pressed for 3 seconds in time display mode, it moves to time adjusting function, and you can adjust the time as below.
 - Hour by auto decel()switch
 - Minute by buzzer stop() switch.
- ③ After time set, the switch is pressed, it returns to clock display.


2. CLUSTER (#0008 and up)

1) MONITOR PANEL

The monitor panel consists of LCD and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.

- LCD : Indicate operating status of the machine.
- Warning lamp : Indicate abnormality of the machine(Red).
- Pilot lamp : Indicate operating status of the machine(Amber).


- ※ **The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.**
- ※ **When the monitor provides a warning immediately check the problem, and perform the required action.**

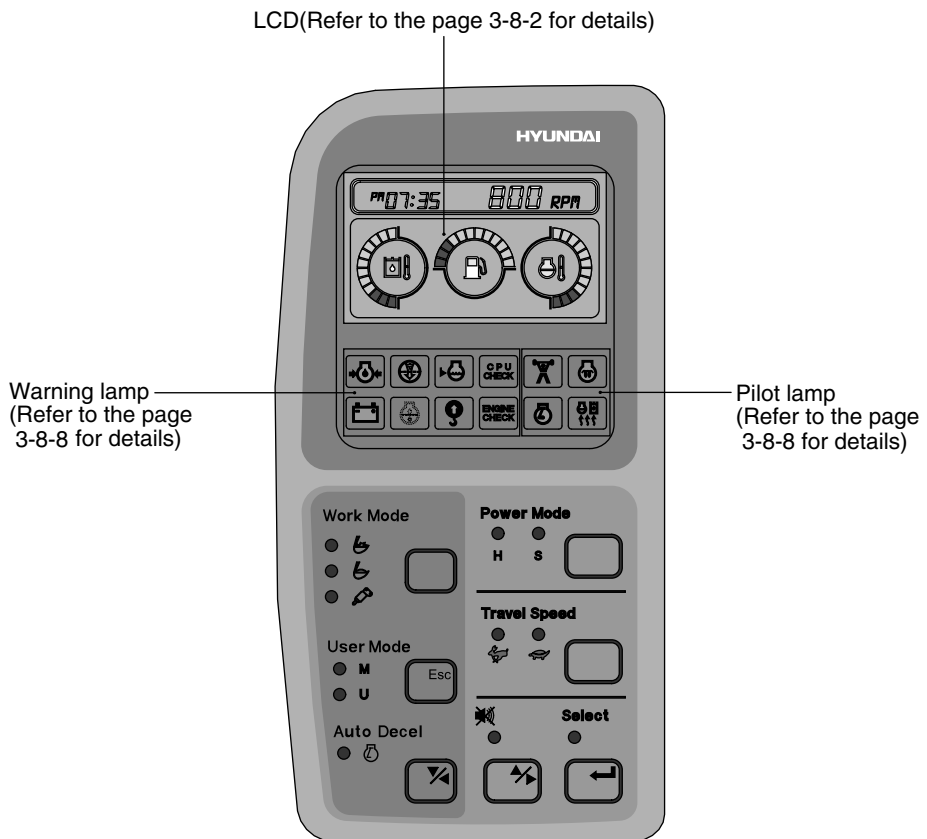

3607A3CD02

- ※ **The warning lamp lights ON and the buzzer sounds when the machine has a problem. In this case, press the buzzer stop switch and buzzer stop, but the warning lamp lights until the problem is cleared.**

2) LCD main operation display

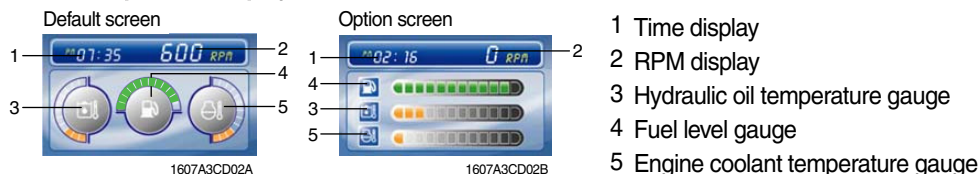

(1) Time display



① This displays the current time.

※ **Refer to the page 3-8-6 to set time for details.**

(2) RPM display



① This displays the engine rpm.

(3) Hydraulic oil temperature gauge



① This gauge indicates the temperature of hydraulic oil in 12 step gauge.


- 1st step : Below 30°C(86°F)
- 2nd~10th step : 30-105 °C(86-221°F)
- 11th~12th step : Above 105°C(221°F)

② The gauge between 2nd and 10th steps illuminates when operating.

③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.

④ When the gauge of 11th and 12th steps illuminates, reduce the load on the system. If the gauge stays in the 11th~12th steps, stop the machine and check the cause of the problem.

(4) Fuel level gauge

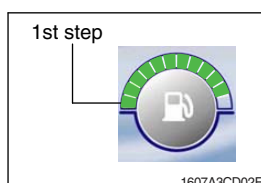


① This gauge indicates the amount of fuel in the fuel tank.

② Fill the fuel when the 1st step or fuel icon blinks in red.

※ **If the gauge illuminates the 1st step or fuel icon blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.**

(5) Engine coolant temperature gauge

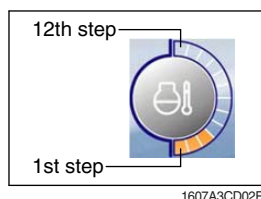

① This gauge indicates the temperature of coolant in 12 step gauge.

- 1st step : Below 30°C(86°F)
- 2nd~10th step : 30-105 °C(86-221°F)
- 11th~12th step : Above 105°C(221°F)

② The gauge between 2nd and 10th steps illuminates when operating.

③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.

④ When the gauge of 11th and 12th steps illuminates, turn OFF the engine, check the radiator and engine.

3) Warning of main operation screen

(1) Warning display

① Engine coolant temperature



- This lamp blinks and the buzzer sounds when the temperature of coolant is over the normal temperature 105°C (221°F) .
- Check the cooling system when the lamp blinks.

② Fuel level



- This lamp blinks and the buzzer sounds when the level of fuel is below 67 l (17.7U.S. gal).
- Fill the fuel immediately when the lamp blinks.

③ Hydraulic oil temperature



- This warning lamp operates and the buzzer sounds when the temperature of hydraulic oil is over 105 °C (221 °F) .
- Check the hydraulic oil level when the lamp blinks.
- Check for debris between oil cooler and radiator.

④ All gauge



- This lamp blinks and the buzzer sounds when the all gauge is abnormal.
- Check the each system when the lamp blinks.

⑤ Communication error




- Communication problem between MCU controller and cluster makes the lamp blinks and the buzzer sounds.
- Check if any fuse for MCU burnt off.
If not check the communication line between them.






(2) Pop-up icon display

| No | Switch | Selected mode | Display |
|----|-------------------|--------------------------|---------|
| 1 | Work mode switch | General work mode | |
| | | Heavy duty work mode | |
| | | Breaker operation mode | |
| 2 | Power mode switch | High power work mode | |
| | | Standard power work mode | |

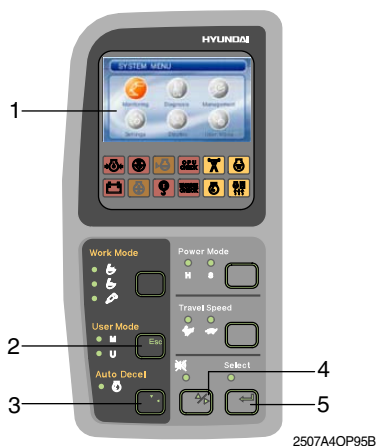
| No | Switch | Selected mode | Display |
|----|-----------------------------|---------------|---------|
| 3 | Auto deceleration switch | Light ON | |
| | | Light OFF | |
| 4 | Travel speed control switch | Low speed | |
| | | High speed | |








4) LCD

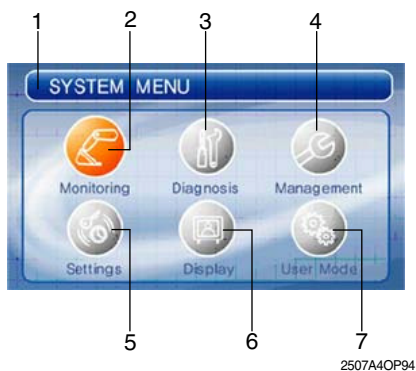

- 1  : LCD
- 2  : Escape,
Return to the previous menu
- 3  : Down/Left Direction
- 4  : Up/Right Direction
- 5  : Select(Enter)
Activate the currently chosen item


(1) Main menu



- 1  : Menu information
- 2  : Monitoring
- Equipment, Switch, Output
- 3  : Diagnosis
- Current error, Recorded error
- 4  : Maintenance
- 5  : Settings
- Time set, Dual mode
- System lock(Reserved)
- 6  : Display
- Operation skin, Brightness, Language
- 7  : User mode


(2) Display map

① Monitoring

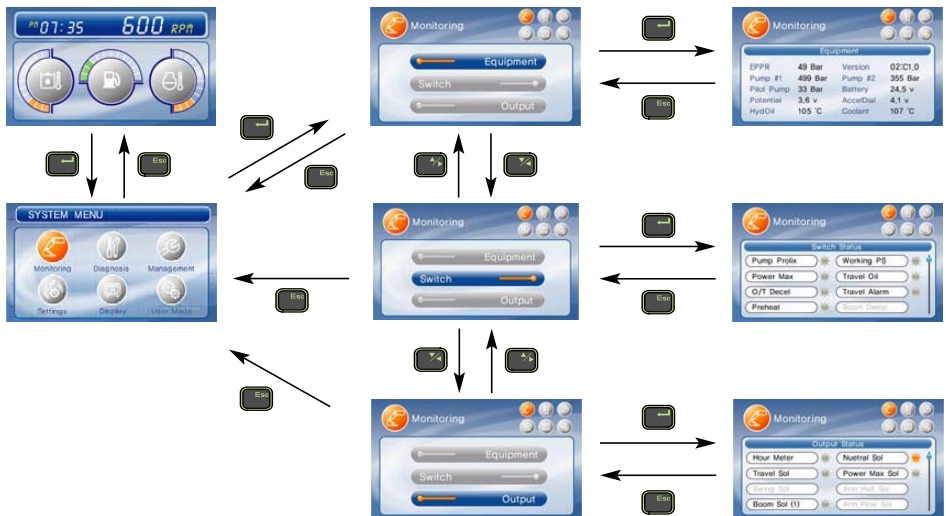


② Diagnosis

a. New protocol

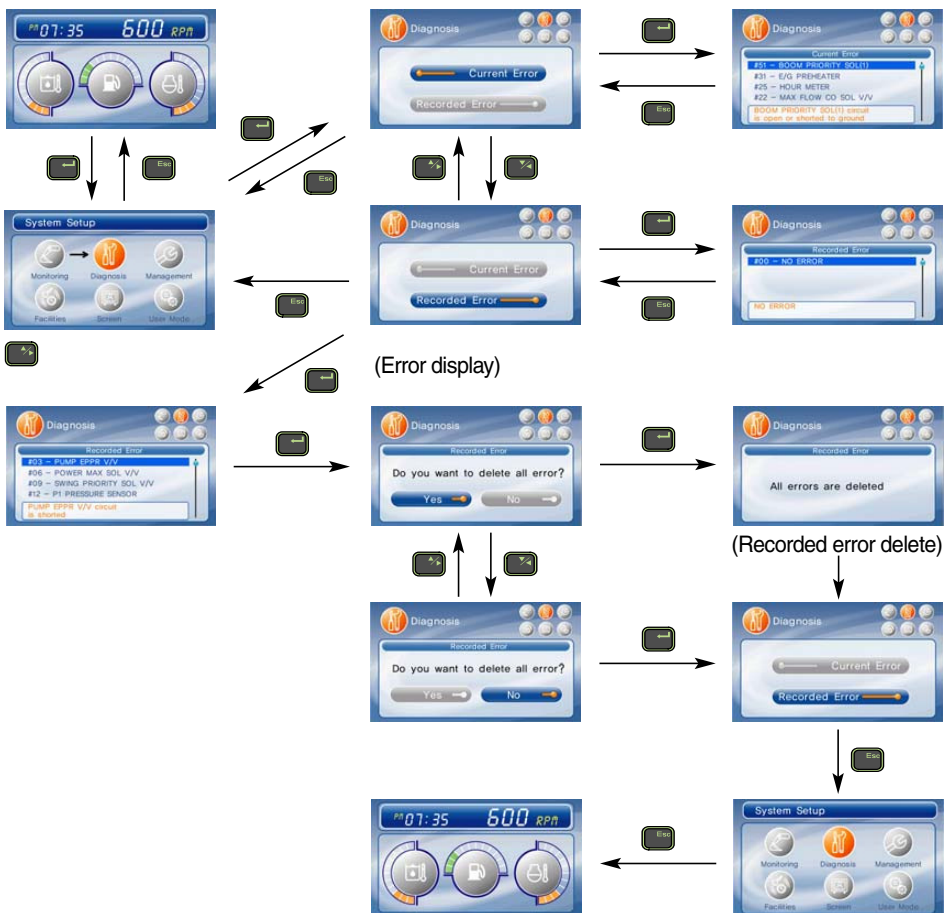


b. Old protocol : Old MCU controller

- If there are more than 2 error codes, each one can be displayed by pressing or switch respectively.
- 3 error codes (①SPN200200, ②FMI06, ③SPN6789, ④FMI04, ⑤345) display.

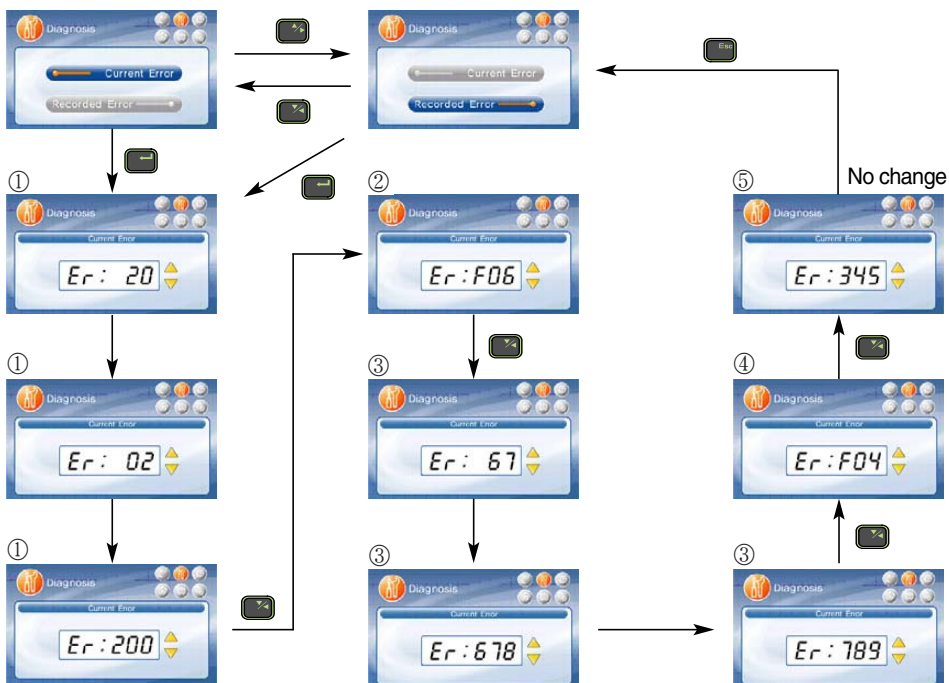

③ Maintenance

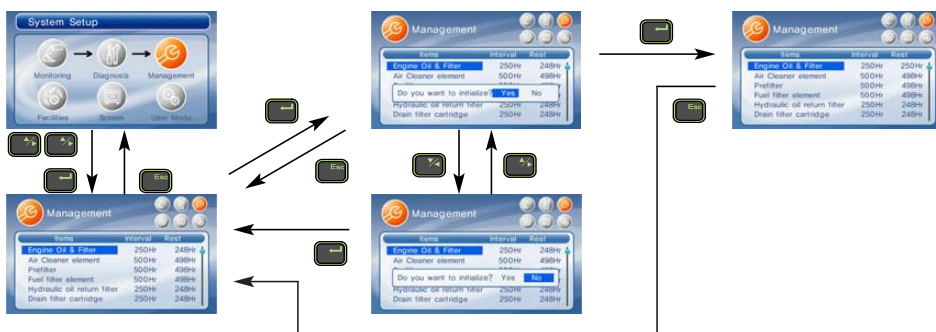

④ Setting

a. Time set



b. System lock - Reserved

- c. Dual mode
 - Changing the MCU mode




⑤ Display


a. Operation skin




b. Brightness

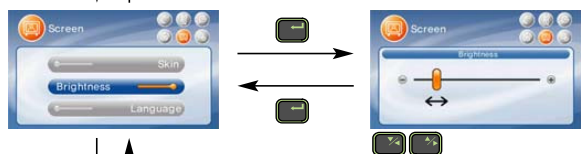

c. Language

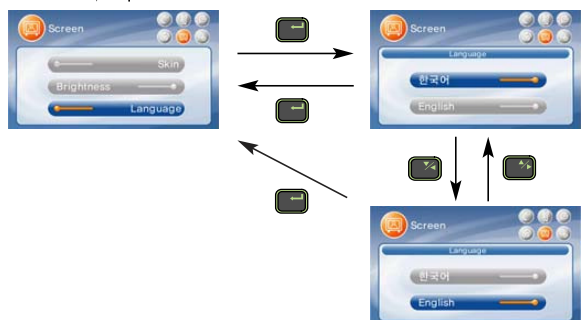


⑥ User mode

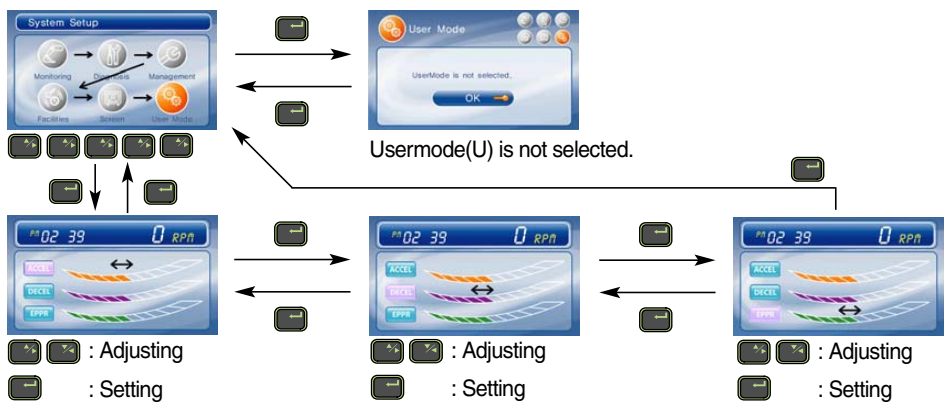

5) Warning and pilot lamp


(1) Engine oil pressure warning lamp

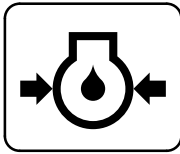

21073CD07

- ① This lamp blinks and the buzzer sounds after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.


(2) Air cleaner warning lamp

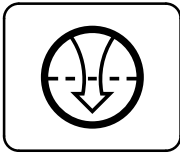

21073CD08

- ① This lamp blinks and the buzzer sounds when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.


(3) MCU controller check warning lamp

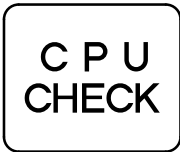

21073CD10

- ① If any fault code is received from MCU controller, this lamp blinks and the buzzer sounds.
- ② Check the communication line between MCU controller and cluster.


(4) Battery charging warning lamp

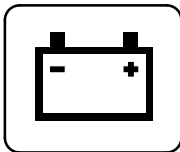

21073CD13

- ① This lamp blinks and the buzzer sounds when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.


(5) Overload warning lamp

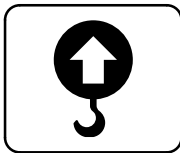

21073CD15

- ① When the machine is overload, the overload warning lamp blinks during the overload switch is ON.

(6) Engine check warning lamp

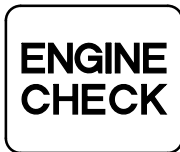

29073CD10

- ① This lamp blinks and the buzzer sounds when the communication between MCU controller and ECU on the engine is abnormal, or if any fault code received from ECU.
- ② Check the communication line between them.
If the communication line is OK, then check the fault code on the cluster

(7) Power max pilot lamp



21073CD11

- ① The lamp will be ON when pushing power max switch on the LH RCV lever.


(8) Decel pilot lamp



21073CD17

- ① Operating auto decel or one touch decel makes the lamp ON.
- ② The lamp will be ON when pushing one touch decel switch on the LH RCV lever.


(9) Warming up pilot lamp

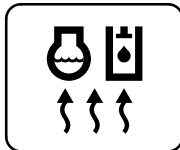

21073CD18

- ① This lamp is turned ON when the coolant temperature is below 30°C (86 °F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30 °C, or when 10 minutes have passed since starting.


(10) Preheat pilot lamp

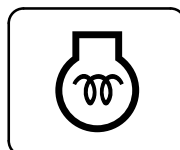

21073CD12

- ① Turning the start key switch ON position starts preheating in cold weather.
- ② Start the engine as this lamp is OFF.


6) SWITCH PANEL

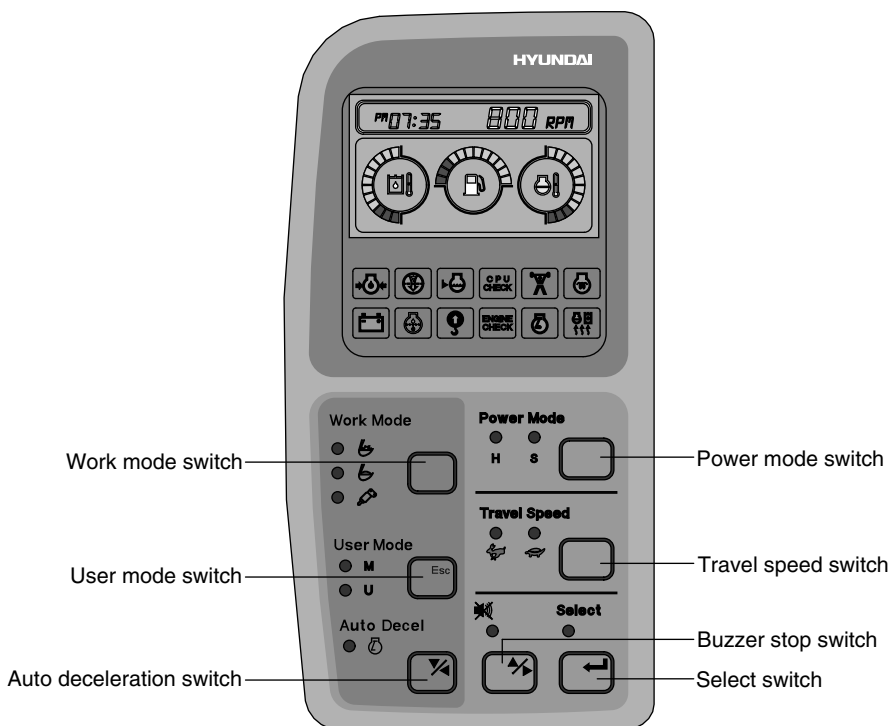

1607A3CD19

※ When the switches (Work mode, Power mode, Auto decel, Travel speed control) are selected, the pop-up icon is displayed on the LCD.
Refer to the page 3-4 for details.

(1) Work mode switch

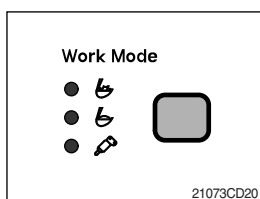


① This switch is to select the machine operation mode, which shifts from general operation mode to heavy operation mode and breaker mode in a row by pressing the switch.

- : Heavy duty work mode
- : General work mode
- : Breaker operation mode

※ Refer to the page 4-6, 4-12-1 for details.

(2) User mode switch

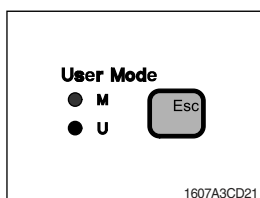


① This switch is to select the maximum power or user mode.

- M : Maximum power
- U : Memorizing operators preferable power setting.


※ Refer to the page 4-6, 4-12-1 for details.


(3) Auto deceleration switch

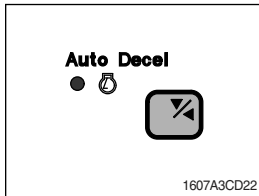


- ① This switch is used to actuate or cancel the auto deceleration function.
- ② When the switch actuated and all control levers and pedals are at neutral position, engine speed will be lowered automatically to save fuel consumption.
 - Light ON : Auto deceleration function is selected.
 - Light OFF : a. Auto deceleration function is cancelled so that the engine speed increased to previous setting value.
b. One touch decel function is available.

(4) Power mode switch

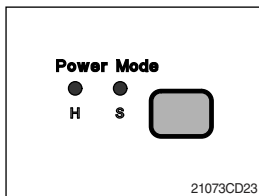


- ① The lamp of selected mode is turned ON by pressing the switch().
- H : High power work.
- S : Standard power work.

(5) Travel speed control switch

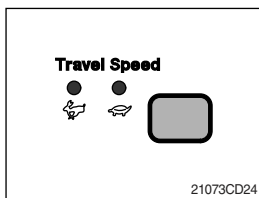


- ① This switch is to control the travel speed which is changed to high speed(Rabbit mark) by pressing the switch and low speed(Turtle mark) by pressing it again.

(6) Buzzer stop switch

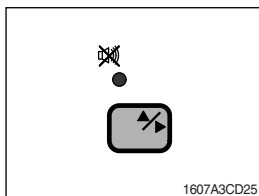


- ① When the starting switch is turned ON first, normally the alarm buzzer sounds for 2 seconds during lamp check operation.
- ② The red lamp lights ON and the buzzer sounds when the machine has a problem.
In this case, press this switch and buzzer stops, but the red lamp lights until the problem is cleared.

(7) Select switch

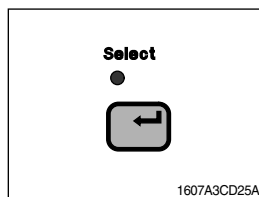


- ① This switch is used to enter main menu and sub menu of LCD.
i **Refer to the page 3-8-4 for details.**

3. SWITCHES

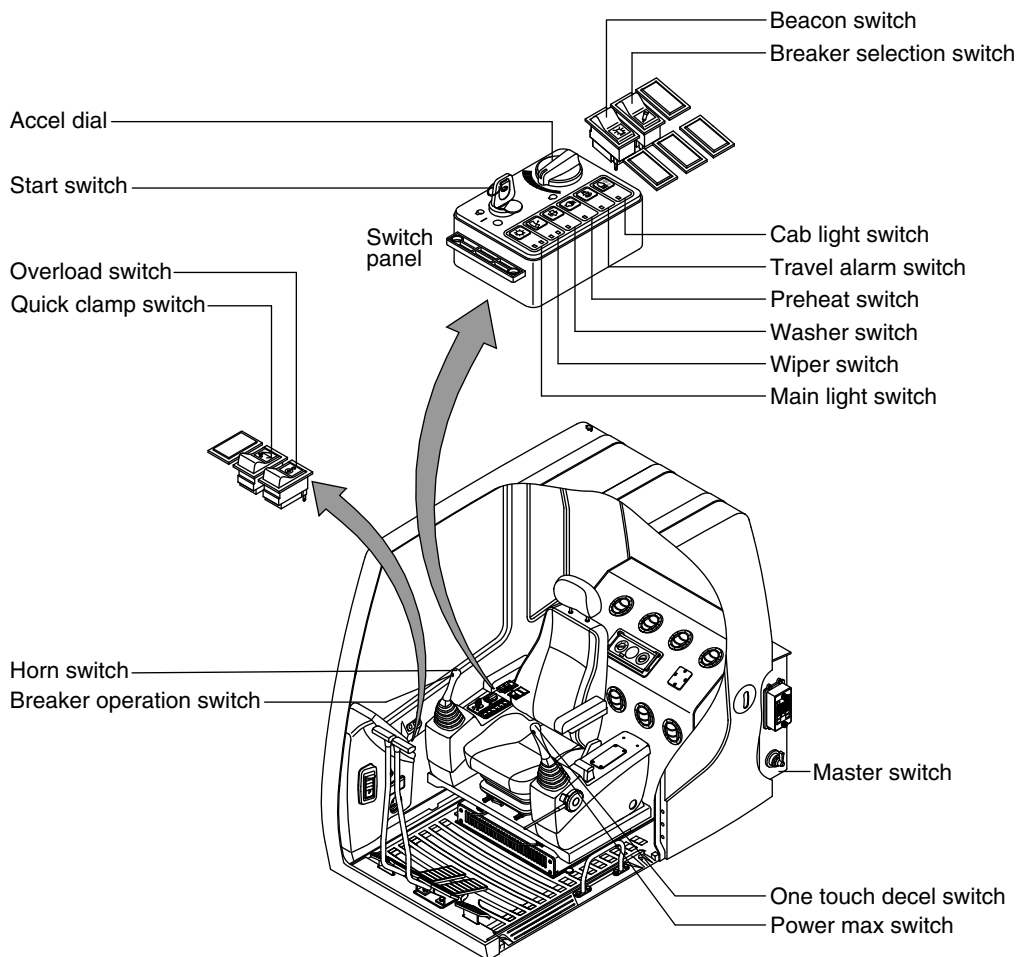

34073CD02

1) STARTING SWITCH

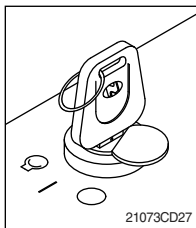


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ○ (START) : Use when starting the engine. Release key immediately after starting.

※ **Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.**

2) MASTER SWITCH

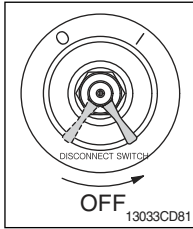


(1) This switch is used to shut off the entire electrical system.

(2) **I** : The battery remains connected to the electrical system.

O : The battery is disconnected to the electrical system.

※ **Never turn the master switch to O(OFF) with the engine running. Engine and electrical system damage could result.**

3) ACCEL DIAL SWITCH

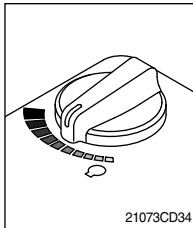


(1) There are 10 dial setting.

(2) Setting 1 is low idle and setting 10 is high idle.

- By rotating the accel dial to right : Engine speed increases
- By rotating the accel dial to left : Engine speed decreases


4) MAIN LIGHT SWITCH

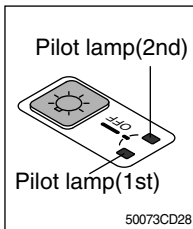

(1) This switch used to operate the head light and work light.

- Press the switch once to head light comes ON.
- Press the switch once more to work light comes ON.
- Press the switch again, return to a first step position.
- Press the switch more than one second to turn off lights.


5) WIPER SWITCH

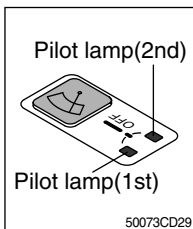

(1) This switch used to operate wiper.

- Press the switch once to intermittently operate wiper.
- Press the switch once more to operate wiper low speed.
- Press the switch again return to first step position.
- Press the switch more than one second to turn off wiper.


6) WASHER SWITCH

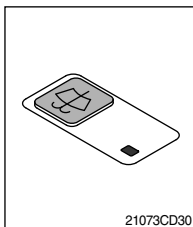

(1) The washer liquid is sprayed and the wiper is operated only while pressing this switch.


(2) The indicator lamp is turned ON when operating this switch.

7) PREHEAT SWITCH

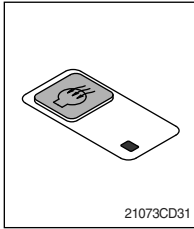


- (1) This switch is used for starting the engine in cold weather. If pressed, starting aid fluid injected to get easier engine starting.
※ **Never hold the push button switch for more than 30 seconds, as this can damage the electric valve solenoid.**
- (2) The indicator lamp is turned ON when operating this switch.

8) TRAVEL ALARM SWITCH

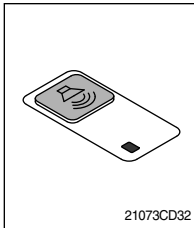


- (1) This switch is to activate travel alarm function surrounding when the machine travels to forward and backward.
- (2) On pressing this switch, the alarm operates only when the machine is traveling.

9) CAB LIGHT SWITCH(Optional)

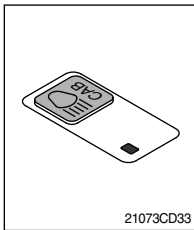


- (1) This switch turns ON the cab light on the cab.

10) OVERLOAD SWITCH(Optional)

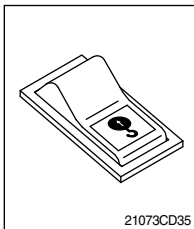


- (1) When this switch turned ON, buzzer makes sound and overload warning lamp comes ON in case that the machine is overload.
- (2) When turn OFF buzzer stops and warning lamp goes out.

11) QUICK CLAMP SWITCH(Optional)

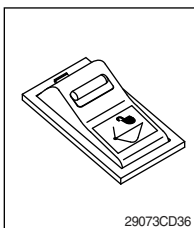

- (1) This switch is used to engage or disengage the moving hook on quick clamp.
※ **Refer to the page 8-6 for details.**


12) BREAKER SELECTION SWITCH(Optional)

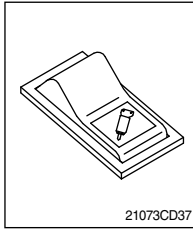

(1) This switch is used to select breaker.

※ **The breaker operates only when this switch is selected.**


13) BEACON SWITCH(Optional)

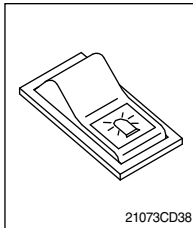

(1) This switch turns ON the rotary light on the cab.

(2) The below indicator lamp is turned ON when operating this switch.


14) HORN SWITCH

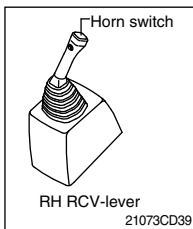

(1) This switch is at the top of right side control lever.


On pressing, the horn sounds.

15) BREAKER OPERATION SWITCH

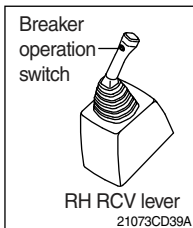

(1) On pressing this switch, the breaker operates only when the breaker selection switch on the switch panel is selected.


16) ONE TOUCH DECEL SWITCH

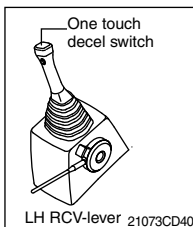

(1) This switch is used to actuate the deceleration function quickly.

(2) The engine speed is increased to previous setting value by pressing the switch again.

17) POWER MAX SWITCH

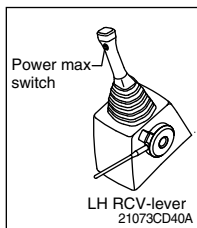


(1) This switch activate power max function.

When this switch is kept pressed, hydraulic power of work equipment will increased approx 110 percent during 8 seconds.

(2) After 8 seconds, function is cancelled automatically even switch is keep pressed.


※ **Do not use for craning purposes.**

4. LEVERS AND PEDALS

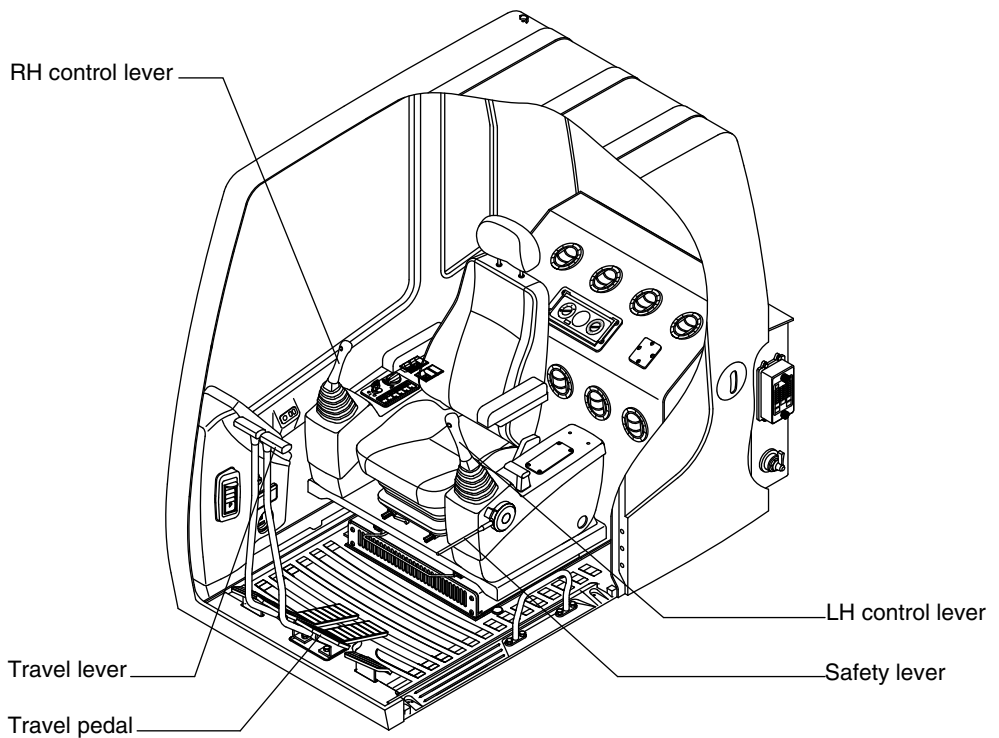


34073CD03

1) LH CONTROL LEVER

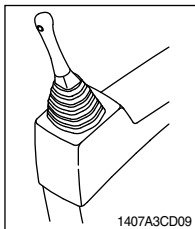


- (1) This joystick is used to control the swing and the arm.
- (2) Refer to **operation of working device** in chapter 4 for details.

2) RH CONTROL LEVER

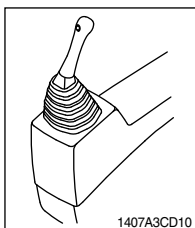


- (1) This joystick is used to control the boom and the bucket.
- (2) Refer to **operation of working device** in chapter 4 for details.

3) SAFETY LEVER

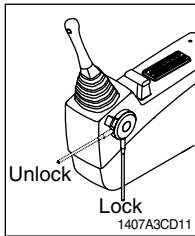


- (1) All control levers and pedals are disabled from operation by locating the lever to lock position as shown.
 - ※ **Be sure to lower the lever to LOCK position when leaving from operator's seat.**
- (2) By pulling lever to UNLOCK position, machine is operational.
 - ※ **Do not use the safety lever for handle when getting on or off the machine.**

4) TRAVEL LEVER

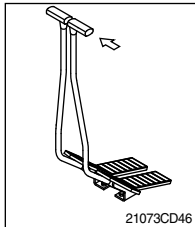


- (1) This lever is mounted on travel pedal and used for traveling by hand.
The operation principle is same as the travel pedal.
- (2) Refer to **traveling of the machine** in chapter 4 for details.

5) TRAVEL PEDAL

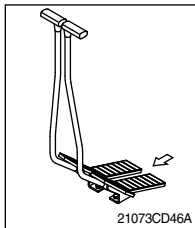

- (1) This pedal is used to move the machine forward or backward.
- (2) If left side pedal is pressed, left track will move.
If right side pedal is pressed, right track will move.
- (3) Refer to **traveling of machine** in chapter 4 for details.

6) SEAT AND CONSOLE BOX ADJUST LEVER

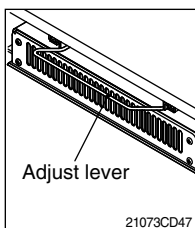


- (1) This lever is used to move the seat and console box to fit the contours of the operator's body.
- (2) Pull the lever to adjust forward or backward over 170mm(6.7").

5. AIR CONDITIONER


Air conditioner is equipped for pleasant operation against outside temperature and defrost on window glass.

• Location of air flow ducts

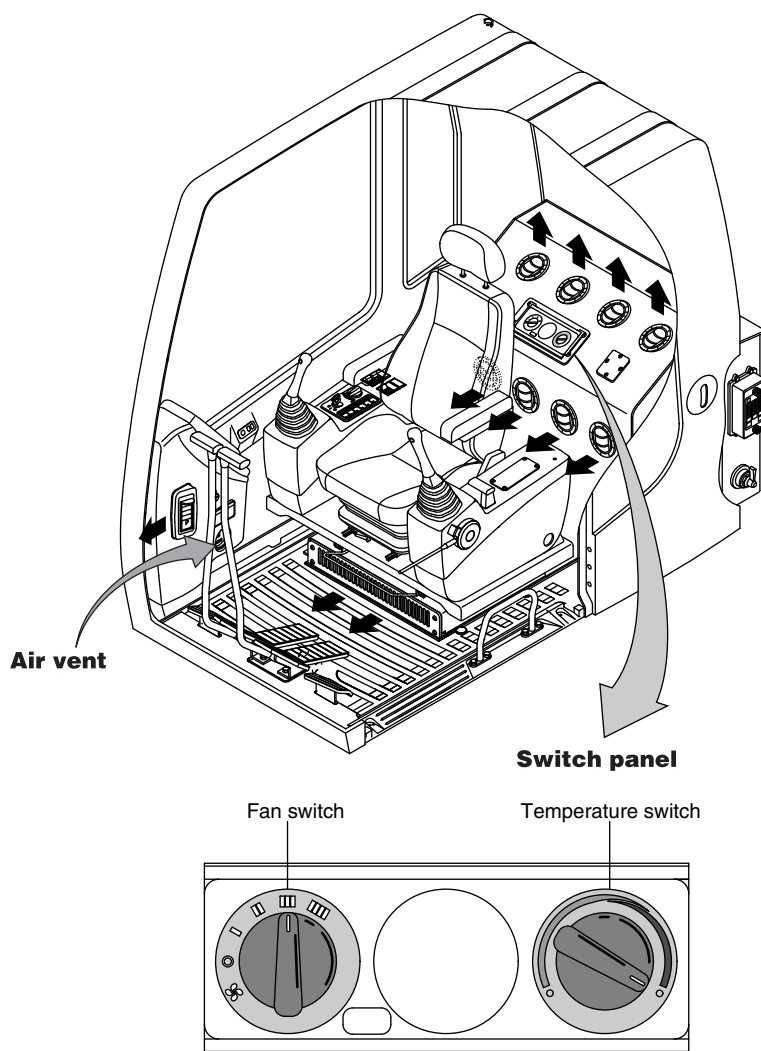

34073CD05


1) FAN SWITCH

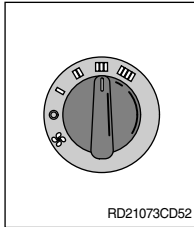

(1) It is possible to control the fan speed as four steps.

- Turn to right : Fan speed increases
- Turn to left : Fan speed decreases


2) TEMPERATURE SWITCH

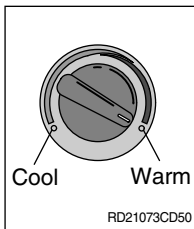

(1) It is possible to control the temperature inside of cab.


- Turn to right : Temperature increases
- Turn to left : Temperature decreases

6. OTHERS

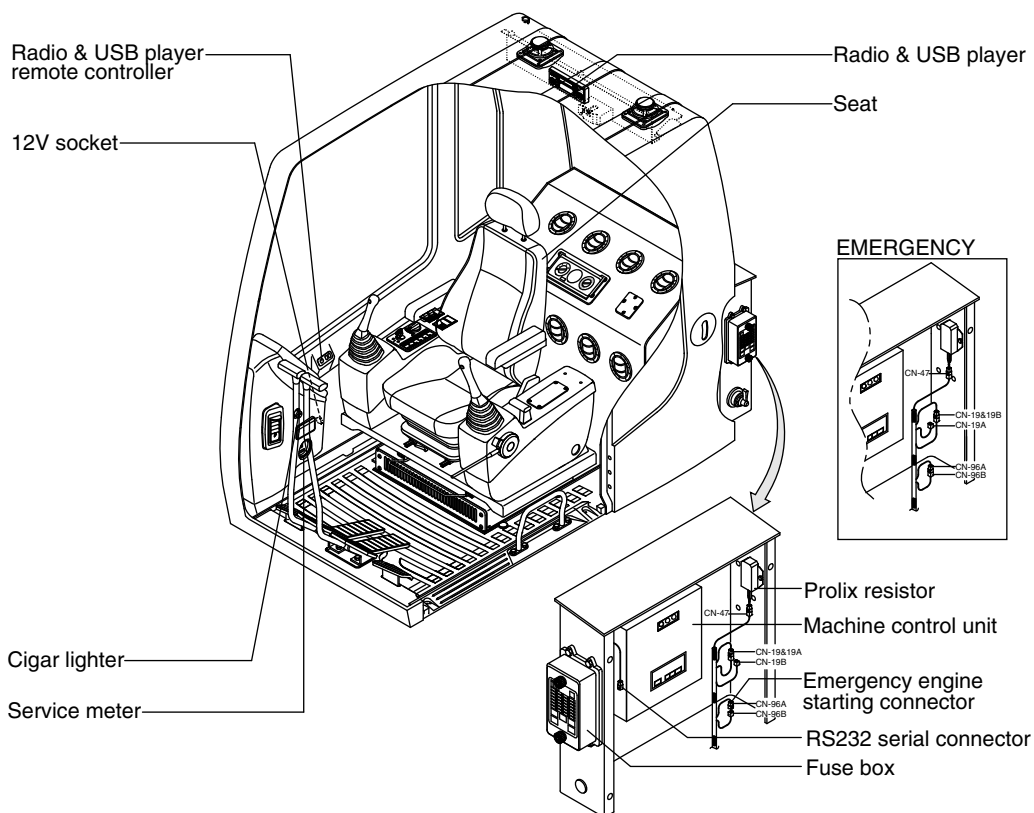

34073CD04

1) CIGAR LIGHTER

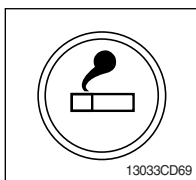

- (1) This can be used when the engine starting switch is ON.
- (2) The lighter can be used when it springs out in a short while after being pressed down.


※ Service socket

Use cigar lighter socket when you need emergency power.

Do not use the lighter exceeding 24V, 100W.

2) SEAT

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

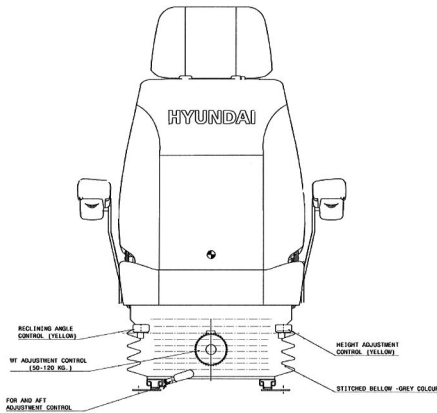

(1) Forward/Backward adjustment

- ① Pull lever A to adjust seat forward or backward.
- ② The seat can be moved forward and backward over 140mm(5.5") in 7 steps.

(2) Reclining adjustment

Pull lever B to adjust seat back rest.


(3) Height adjustment

Height adjustment travels for 60mm distance.

(4) Weight adjustment


Weight adjusts between 50kg - 120kg range.

3) 12V SOCKET(Option)

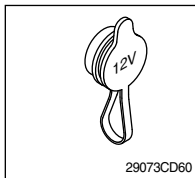

- (1) Utilize the power of 12V as your need and do not exceed power of 12V, 30W.

4) FUSE BOX

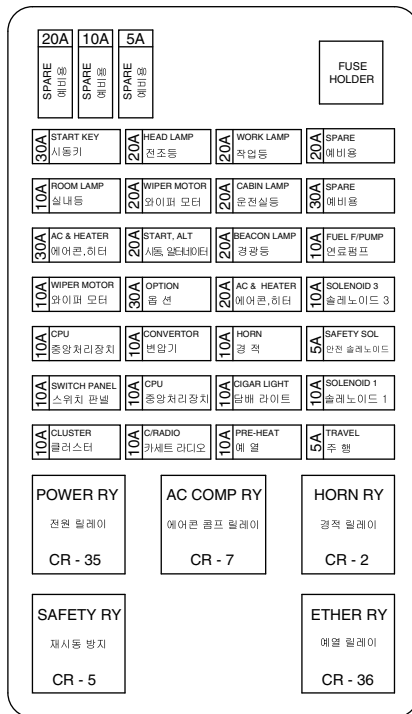

34073CD09


(1) The fuses protect the electrical parts and wiring from burning out.

(2) The fuse box cover indicates the capacity of each fuse and circuit it protects.

※ **Replace a fuse with another of the same capacity.**

▲ **Before replacing a fuse, be sure to turn OFF the starting switch.**

5) MACHINE CONTROL UNIT(MCU)

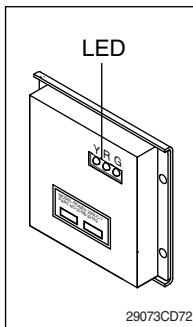


(1) To match the engine torque with the pump absorption torque, MCU varies EPPR valve output pressure, which control pump discharge amount whenever feedbacked engine speed drops under the reference rpm of each mode set.

(2) Three LED lamps on the MCU display as below.

| LED lamp | Trouble | Service |
|--------------------------|--------------------------------------|--|
| G is turned ON | Normal | - |
| G and R are turned ON | Trouble on MCU or ROM | · Change the MCU |
| G and Y are turned ON | Trouble on serial communication line | · Check if serial communication lines between controller and cluster are disconnected |
| Three LED are turned OFF | Trouble on MCU power | · Check if the input power wire (24V, GND) of controller is disconnected · Check the fuse |

G : green, R : red, Y : yellow

6) EMERGENCY ENGINE STARTING CONNECTOR

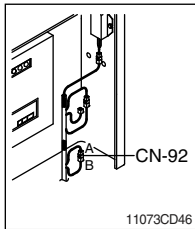


(1) If the MCU is removed, the engine does not start.

(2) Before starting the engine, connect the connector CN-92 A with B.

※ **Do not connect these connectors when the MCU is not removed.**

7) PROLIX RESISTOR

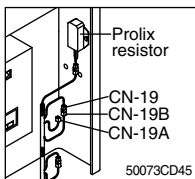


(1) This resistor is used to continuous working in case of malfunction of the MCU.

- **Normal** : CN-19 connect with connector CN-19A

- **Emergency** : CN-19 connect with connector CN-19B

※ **Never connect connector CN-19 with connector CN-19B when MCU is in normal operation.**


8) SERVICE METER

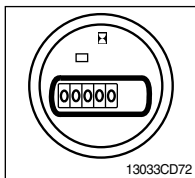

(1) This meter shows the total operation hours of the machine.


(2) Always ensure the operating condition of the meter during the machine operation. Inspect and service the machine based on hours as indicated in chapter 6, **maintenance**.

9) RS232 SERIAL CONNECTOR

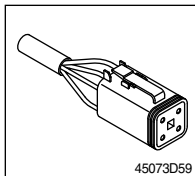


(1) MCU communicates the machine data with Lap top computer through RS232 connector.

10) UPPER WINDSHIELD

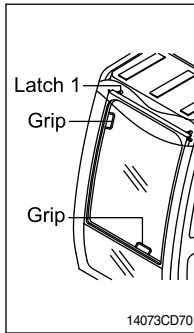


- (1) Perform the following procedure in order to open the upper windshield.
- ① Release both latches(1) in order to release the upper windshield.
 - ② Hold both grips that are located at the bottom of the windshield frame and at the top of the windshield frame push the windshield upward.
 - ③ Hold both grips that are provided on the windshield frame and back into the storage position until auto lock latch(2) is engaged, move the levers of both latches(1) into the locked position. Push the levers toward the rear of the cab in order to hold the windshield in storage position.

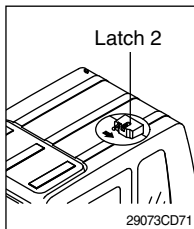

- (2) Perform the following procedure in order to close the upper windshield.
- ① Move the lever of the auto lock latch(2) in the direction of the arrow in order to release the auto lock latch.
 - ② Reverse step ① through step ③ in order to close the upper windshield.

11) RADIO AND USB PLAYER

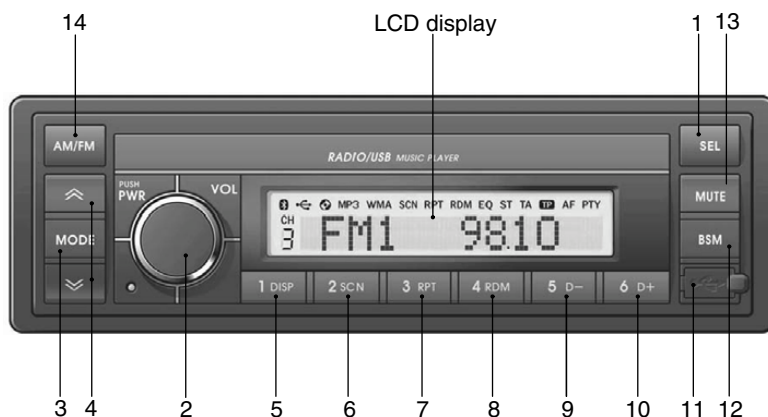


75793CD62

■ FRONT PANEL PRESENTATION

- | | | | | | |
|---|--|--|----|--|---|
| 1 | | Sound function selection button (audio selection) | 10 | | Preset memory button 6 D+ Directory up |
| 2 | | Power and volume button | 11 | | Aux function |
| 3 | | Mode button (select RADIO / USB / AUX) | 12 | | Preset scan (PS) Best station memory (BSM) |
| 4 | | UP / DOWN tuning button | 13 | | Audio mute button |
| 5 | | Preset memory button 1 DISP ID3 v2 display | 14 | | AM / FM button (radio) |
| 6 | | Preset memory button 2 SCN File scan | | | |
| 7 | | Preset memory button 3 RPT Repeat play selector | | | |
| 8 | | Preset memory button 4 RDM Random play selector | | | |
| 9 | | Preset memory button 5 D- Directory down | | | |

■ GENERAL

(1) Power and volume button

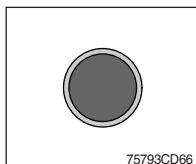

① Power ON / OFF button


Press power button to turn the unit ON or OFF shortly.

When the power is ON, the previous mode (last memory) will appear.

② Volume up / down control

Turn volume up / down button right to increase the volume level. The level will be shown in VOLUME xx on the LCD display. Turn it left to decrease the volume level. After 5 seconds of volume indication, display will return to the previous mode.

(2) Sound function selection button (audio selection)

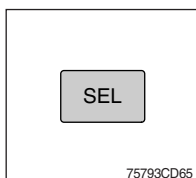


① This button is to adjust the sound. Each time you press power button shortly, LCD displays each mode as follows :

BASS → TREBLE → BAL → BEEP → LOUD → VOLUME
↑

※ When this button is pressed, LCD display shows selected function for 5 seconds and then returns back to the previous mode. On selected function, level can be controlled by turning this button. The display will automatically return to normal indication in 5 seconds after the last adjustment is made or when another function is activated.


② Bass control

To adjust the bass level, first select the bass mode by pressing the select button  until BASS indication appears on the LCD display. Within 5 seconds of choosing the bass mode, turn power button right / left to adjust the bass level as desired.

The bass level will be shown on the LCD display from a minimum of BASS -10 to a maximum of BASS +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.


③ Treble control

To adjust the treble level, first select the treble mode by pressing the select button  until TREBLE indication appears on the LCD display. Within 5 seconds of choosing the treble mode, turn power button right / left to adjust the treble level as desired.

The treble level will be shown on the LCD display from a minimum of TREBLE -10 to a maximum of TREBLE +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing the select button  until the BAL indication appears on the LCD display.


Within 5 seconds of choosing the balance mode, turn power button right / left to adjust the balance as desired.

The balance position will be shown on the LCD display from BAL 10L (full left) to BAL 10R (full right).

When the volume level between the left and right speakers is equal, BAL L=R will be shown on the LCD display panel.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

⑤ Beep control

To adjust the beep mode, first select the beep mode by pressing the select button  until BEEP indication appears on the LCD display.

The beep mode will be shown on the LCD display from BEEP 2ND, BEEP OFF and BEEP ON by turning power button right / left.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.


Select BEEP ON when you wish to hear the BEEP sound whenever any function button is pressed.

Select BEEP 2ND when you wish to hear the BEEP sound whenever any tuner pre-set button and/or tune seek buttons are pressed for more than 3 seconds.


⑥ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response.

This action will compensate for the reduction in bass and treble performance experienced at low volume.


To select the loudness feature, press select button  until LOUD ON or LOUD OFF is displayed, then turn power button left or right to activate or deactivate loudness.

(3) Mode button

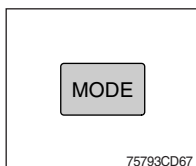

- ① Press mode button to select RADIO / USB / AUX.


(4) Audio mute button

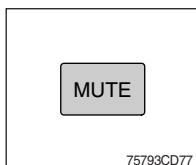

- ① Press mute button momentarily to mute volume and MUTE mark will blink on the LCD display. Press the button again to return to the mode in use before the mute mode was activated.

■ RADIO

(1) AM / FM / LW band selector

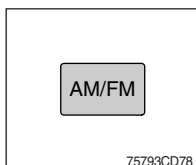


- ① Each time this button is pressed, the radio band is changed. Each time this button is pressed, LCD displays each band as follows :

FM1 → FM2 → FM3 → AM → LW


※ LW band is only available for Europe.

(2) Up / down tuning

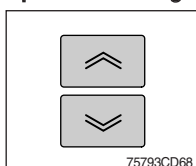


- ① To automatically select a radio station, momentarily press the up tune seek button ⤴ or down tune seek button ⤵ for less than 3 seconds to search for the closest radio station.
To manually select a radio station, press the up tuning & down tuning button for longer than 3 seconds.
The radio frequency will move up or down step by step each time you press button.

(3) Station pre-set button

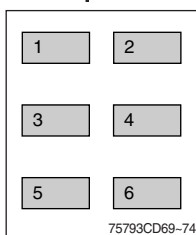

- ① Pressing these buttons shortly will recall your favorite pre-set radio stations.
To store your favorite stations into any of the 6 pre-set memories in each band (AM/FM/LW), use the following procedure :
- Turn the radio ON and select the desired band.
 - Select the first station to be pre-set using the manual up/down or automatic seek tuning control button.
 - Press the chosen pre-set button to store your selected station into and continue to hold it in. The beep sound will be momentarily heard and the pre-set number will appear on the LCD display indicating that the station is now set into that pre-set memory position and can be recalled at any time, by pressing that pre-set button.

(4) Pre-set scan (PS) / Best station memory (BSM) button

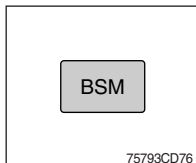

① Pre-set scan (PS)

Press BSM button shortly to scan the 6 pre-set station stored the memories on each band (AM/FM/LW).

The unit will stop at each pre-set station (the pre-set number on the LCD display will flash during pre-set scan operation) and remain on the selected frequency. Press the button momentarily again to remain on the station currently being heard.

② Best station memory (BSM)

Pressing BSM button for longer than 2 seconds will activate the BSM tuning feature which will automatically scan and enter each station into memory.

If you have already set the pre-set memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter the new ones.

This BSM feature is most useful when traveling in a new area where you are not familiar with the local stations.

■ USB PLAYER

(1) USB function

There are two ways to play mp3 files in a USB device : using USB socket in the cab and the USB / AUX cable connected to the front side of the player.

· Use of USB socket

- ① Connect a USB device, which saves mp3 files, to USB socket in the cabin.
- ② If a USB device has not been connected, MP3 files are automatically played when you insert it into the USB port.
- ③ If a USB device has connected, MP3 files are played when you press mode for USB.


· Use of USB/AUX cable (option)



75793CD81

- ① Connect the USB/AUX cable to the player in order to play MP3 files in a USB device.
- ② If a USB device has not been connected, MP3 files are automatically played when you insert it into the cable.
- ③ If a USB device has connected, MP3 files are played when you press mode for USB.

(2) File selection & cue / review button

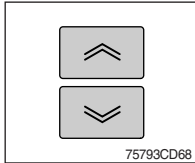

① File selection function

This button is used to select file up / down. Each time the forward file select \rightrightarrows is pressed, file number is increased.

Each time the backward file select \leftrightsquigarrow is pressed, file number is decreased.

② Cue / review functions

High-speed audible search of file on a USB can be made by this button (the cue and review functions).

Press and hold the cue button \rightrightarrows to advance rapidly in the forward direction or the review button \leftrightsquigarrow to advance rapidly in the backward direction.

(3) MP3 directory / file searching

① The power button is used to select a particular directory and file.


Press and hold for more than 3 seconds while playing MP3 file.

Turn right / left the power button to search the directory. Press the button when you find the wanted directory.


For example, the directory search generally changes in two methods depending on the order of writing as follows.

- Method 1 : ROOT → Dir01 → Dir02 → Dir03 → Dir04 → Dir05 → Dir06 → Dir07
- Method 2 : ROOT → Dir01 → Dir02 → Dir05 → Dir03 → Dir06 → Dir04 → Dir07


If you want to search the file in the located directory, turn right / left the power button consecutively. Press the button when you find the wanted file. The unit will then play the selected file. For instance, the file search changes in Dir01 as follows.




※ MP3 direction / file configuration

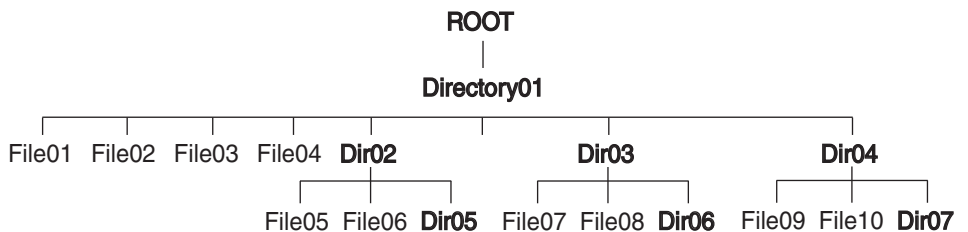


(4) ID3 v2 display

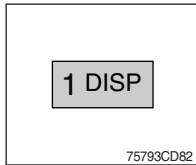

- ① Disp button is used to change the display information.
While playing an MP3 file, you can change the file information shown on the LCD display.
Each time you press DISP (display), the display changes to show the following.
- ※ If the MP3 disc does not have any ID3 information, the display will show NO ID3 on LCD display.

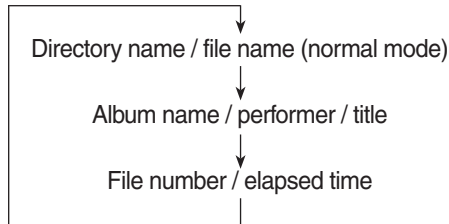


(5) File scan (SCN)

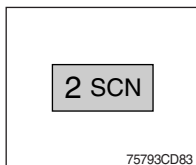


- ① During USB play, press SCN button to play the first 10 seconds of each file on the whole file on the USB (SCN mark will appear on the LCD display).
When a desired file is reached, press the SCN button again to cancel the function.
The unit will then play the selected file.
- ※ In case of playing MP3 file, when the SCN (scan) button is pressed and held for longer than 2 seconds, the SCN mark will blink on the LCD display and all files in the selected directory will be introduced until the file scan mode is cancelled by pressing the SCN button again or by activating the random or repeat functions.

(6) Repeat play selector (RPT)

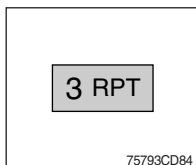

- ① During USB play, press RPT button to play the selected file repeatedly (RPT will appear on the LCD display).
Play of the file will continue to repeat until this button is pressed again and the RPT disappears from the LCD display.
- ※ In case of playing MP3 file, when the RPT button is pressed and held longer than 2 seconds, the RPT mark will blink on the LCD display and play all files in the selected directory and will be repeated until the directory repeat mode is cancelled by pressing the repeat button again or by activating the scan or random functions (RPT mark will disappear from LCD display).

(7) Random play selector (RDM)

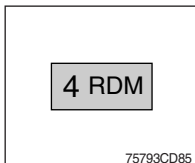


- ① During USB play, press RDM button to play the files on the USB in a random shuffled order (RDM will appear on the LCD display). The file select function will also select file in the random order instead of the normal process.

The random play mode can be cancelled by this button again.


- ※ In case of MP3 file, when the random button is pressed and held longer than 2 seconds, the RDM mark will blink on the LCD display and play all files in directory randomly until the directory random mode is cancelled by pressing the random button again or by activating the scan or repeat functions (RDM mark will disappear from LCD display).

(8) Directory down

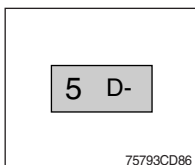

- ① Press D- button briefly while playing MP3. The previous directory is located each time you press this button.

(9) Directory up

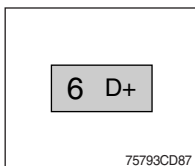


- ① Press D+ button briefly while playing MP3. The next directory is located each time you press this button.
- ※ If the MP3 file does not have a directory, the unit play MP3 at 10-file intervals.
- ※ If any MP3 file does not exist in USB, this button can not operate.

■ AUX PLAYER


(1) Aux function

· Use of USB socket

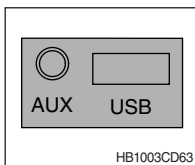


- ① If you want to listen to music of a external audio device, connect a external audio device into the USB port.
- ② Press mode button to change a current mode for AUX. If audio file of audio device is playing, you can listen to music through speaker.

· Use of USB/AUX cable (option)

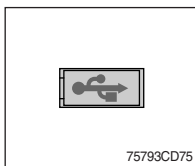


- ① If you want to listen to music of a external audio device, connect a external audio device through USB/ AUX cable.
- ② Press mode button to change a current mode for AUX. If audio file of audio device is playing, you can listen to music through speaker.

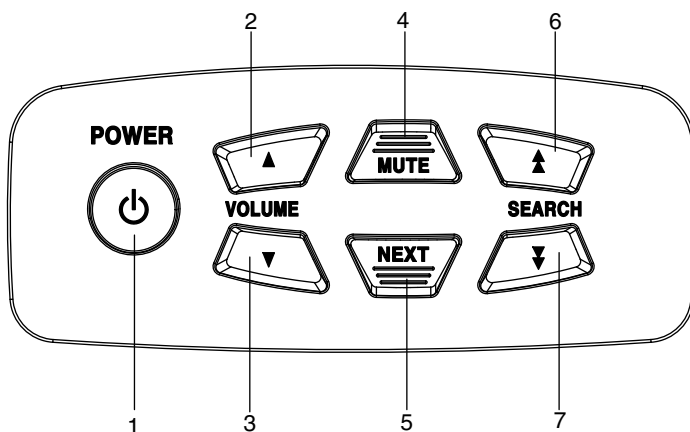

12) REMOTE CONTROLLER




4507A3CD90

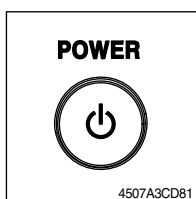(1) Power ON/OFF button




- ① Press  to switch ON the set. Press  for more than 2seconds to switch OFF the set.

(2) Volume button(up)

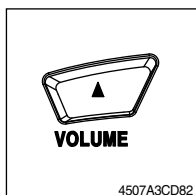

- Short press : Volume up one step
- Long press : Volume up continuous

(3) Volume button(down)

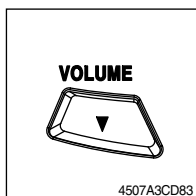


- Short press : Volume down one step
- Long press : Volume down continuous.

(4) Source & mute button



- Short press : Change source(Radio/CD)
- Long press : To mute or cancel mute.

(5) Next button

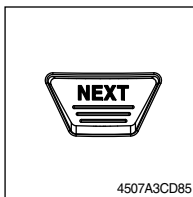

- ① Tuner mode
 - Short press : Preset up
 - Long press : Band up
- ② Cassette mode
 - Short press : Reverse(before the end of the tape)
 - Long press : No function
- ③ CD mode
 - Short press : Track 1
 - Long press : Scan track

(6) Search button(up)



- ① Tuner mode
 - Short press : Search up one step
 - Long press : Search up continuous
- ② Cassette & CD mode
 - Short press : Next track
 - Long press : Fast forward

(7) Search button(down)



- ① Tuner mode
 - Short press : Search down one step
 - Long press : Search down continuous
- ② Cassette & CD mode
 - Short press : Previous track
 - Long press : Fast rewind

1. SUGGESTION FOR NEW MACHINE

- 1) It takes about 100 operation hours to enhance its designed performance.
- 2) Operate according to below three steps and avoid excessive operation for the initial 100 hours.

| Service meter | Load |
|-----------------|-----------|
| Until 10 hours | About 60% |
| Until 100 hours | About 80% |
| After 100 hours | 100% |


※ **Excessive operation may deteriorate the potential performance of machine and shorten lifetime of the machine.**

3) Be careful during the initial 100 hours operation

- (1) Check daily for the level and leakage of coolant, engine oil, hydraulic oil and fuel.
- (2) Check regularly the lubrication and fill grease daily all lubrication points.
- (3) Tighten bolts.
- (4) Warm up the machine fully before operation.
- (5) Check the gauges occasionally during the operation.
- (6) Check if the machine is operating normally during operation.

4) Replace followings after initial 50 or 250 hours of operation

| Checking items | Service |
|---|---------|
| Engine oil | 50 |
| Engine oil filter element | |
| Fuel filter | |
| Prefilter | |
| Hydraulic oil return filter element | 250 |
| Hydraulic oil tank drain filter cartridge | |
| Line filter element | |

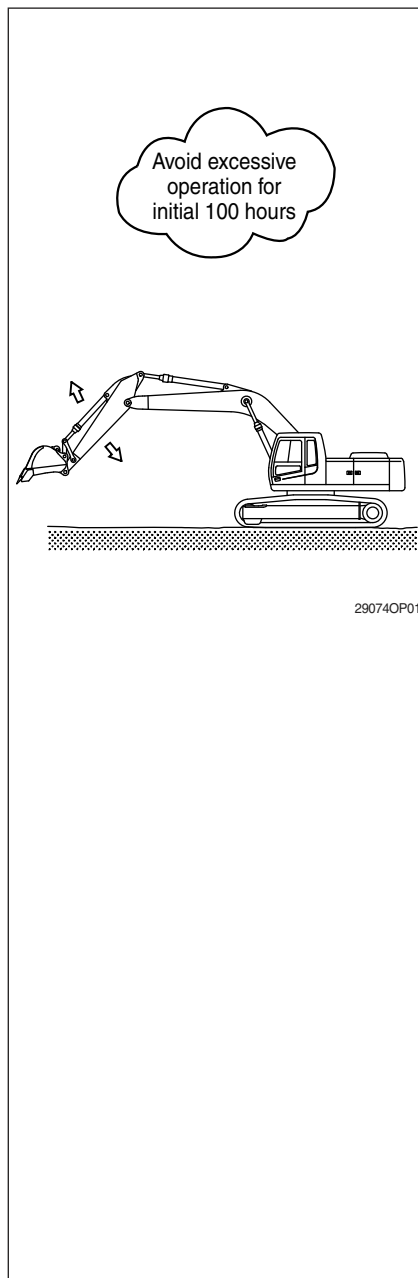


2. CHECK BEFORE STARTING THE ENGINE

1) Look around the machine and under the machine to check for loosen nut or bolts, collection of dirt, or leakage of oil, fuel or coolant and check the condition of the work equipment and hydraulic system. Check also loosen wiring, and collection of dust at places which reach high temperature.

※ **Refer to the daily check on the chapter 6, maintenance.**

2) Adjust seat to fit the contours of the operator's body for the pleasant operation.


3) Adjust the rear view mirror.

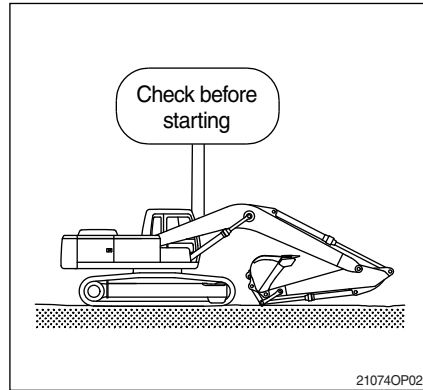

3. STARTING AND STOP THE ENGINE

1) CHECK INDICATOR LIGHTS


- (1) Check if all the operating lever is on the neutral position.
- (2) Turn the starting switch to the ON position, and check following.
 - ① If all the lamps light ON and buzzer sounding for 2 seconds.
 - ② After lamp check **CL : 2.0**, the version of cluster program, is displayed on **Monitoring display(3)** for 5 seconds and the cluster returns to default.
 - ③ Only below lamps will light ON and all the other lights will turn OFF after 2 seconds.
 - Battery charging warning lamp(2)
 - Engine oil pressure warning lamp(1)

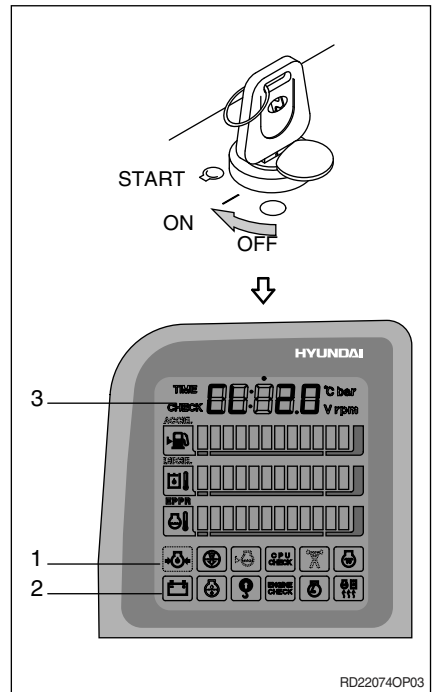

2) STARTING ENGINE IN NORMAL TEMPERATURE

- ※ **Sound the horn to warn the surroundings after checking if personnel or obstacles are in the area.**


- (1) Turn the starting switch to START position to start the engine.
 - ※ **If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.**
- (2) Release the starting switch instantly after the engine starts to avoid possible damage to the starting motor.

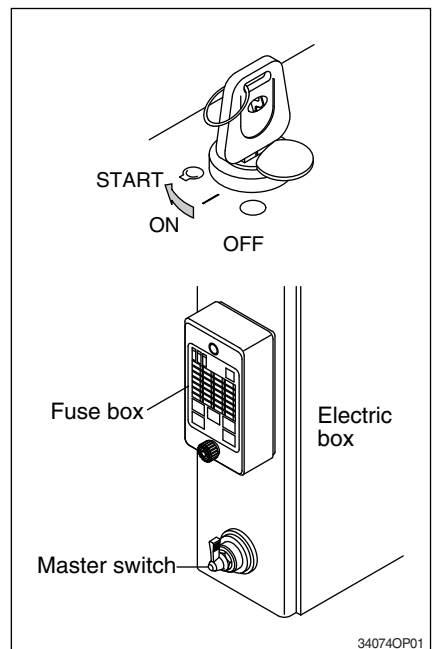

3) STARTING ENGINE IN COLD WEATHER

- ※ **Sound horn to warn surroundings after checking if there are obstacles in the area.**
- ※ **Replace the engine oil and fuel referring to recommended oils at page 2-12.**
- ※ **Fill the anti-freeze solution to the coolant as required.**

- (1) Check if all the levers are on the neutral position.
 - (2) Turn the starting switch to ON position, and wait the preheat pilot lamp OFF.
 - (3) Start the engine by turning the starting switch to the START position after the preheat pilot lamp OFF.
- ※ **If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.**
- (4) Release the starting switch immediately after starting engine.
 - (5) The operation for the warming up machine is automatic.

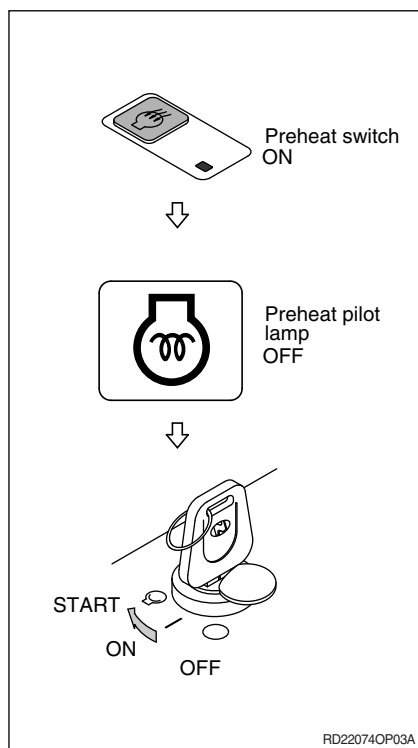


4) INSPECTION AFTER ENGINE START

Inspect and confirm the following after engine starts.

- (1) Is the level gauge of hydraulic oil tank in the normal level?
- (2) Are there leakages of oil or water?
- (3) Are all the warning lamps OFF(1-6)?
- (4) Is the indicator of engine coolant temperature gauge(7) and hydraulic oil temperature gauge(8) in the green zone?
- (5) Is the engine sound and the color of exhaust gas normal?
- (6) Are the sound and vibration normal?


- ※ **Do not increase engine speed quickly after starting, it can damage engine or turbocharger.**
- ※ **If there are problems in the control panel, stop the engine immediately and correct problem as required.**

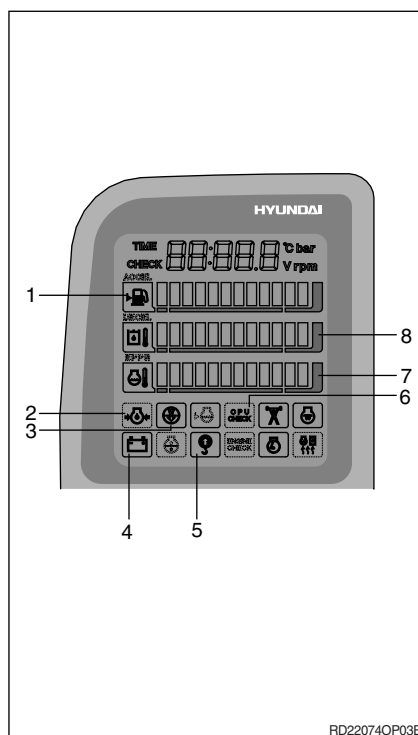

5) WARMING-UP OPERATION

- ※ The most suitable temperature for the hydraulic oil is about 50°C (122°F). It can cause serious trouble in the hydraulic system by sudden operation when the hydraulic oil temperature is below 25°C (77°F). Then temperature must be raised to at least 25°C (77°F) before starting work.


- (1) Run the engine at low idling for 5 minutes.
- (2) Speed up the idling and run the engine at mid-range speed.
- (3) Operate bucket lever for 5 minutes.
 - ※ **Do not operate anything except bucket lever.**
- (4) Run the engine at the high speed and operate the bucket lever and arm lever for 5-10 minutes.
 - ※ **Operate only the bucket lever and arm lever.**
- (5) This warming-up operation will be completed by operation of all cylinders several times, and operation of swing and traveling.
 - ※ **Increase the warming-up operation during winter.**

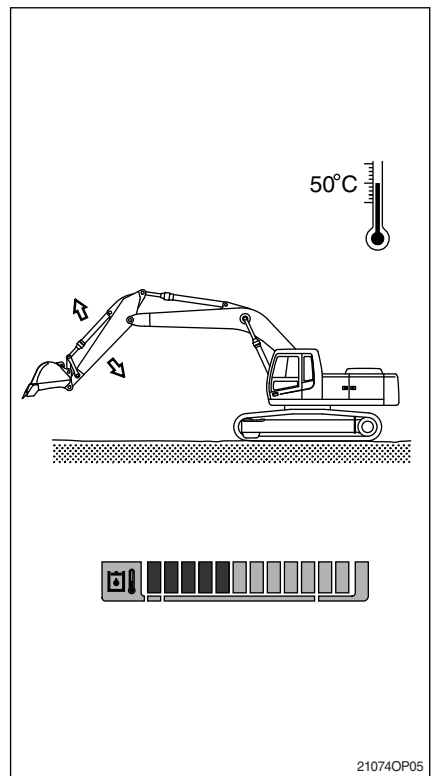

6) TO STOP THE ENGINE

- ※ If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.
- ※ In particular if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.

- (1) Down the bucket on the ground then put all the levers in the neutral position.
- (2) Run the engine at low idling speed for about 5 minutes.
- (3) Return the key of starting switch to the OFF position.
- (4) Remove the key to prevent other people using the machine and LOCK safety lever.
- (5) Lock the cab door.

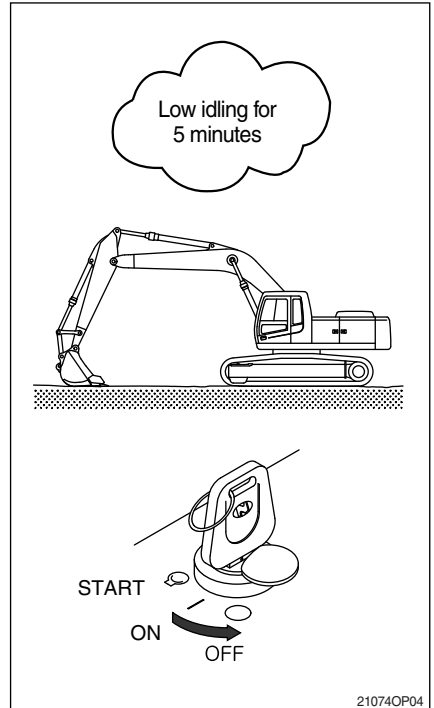


7) OPERATION IN CASE OF MALFUNCTION OF THE MCU

- ※ The following explains the way to start and to control engine speed in case of malfunction of the MCU.

(1) Emergency starting engine


- ① If the MCU is removed, the engine does not start.
- ② Before starting the engine, connect the connector CN-92 A with B.

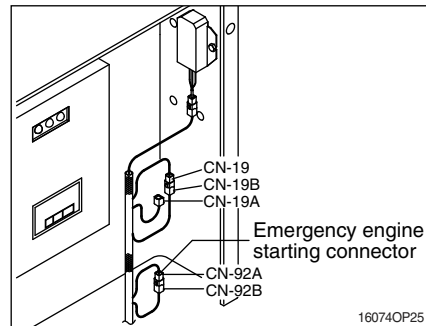

(2) Engine speed control

Engine speed can be controlled by rotating accel dial switch.

- ① Disconnect the CN-19A from CN-19 connector.
- ② Connect the CN-19 connector to CN-19B.
- ③ The engine speed can be controlled by rotating accel dial switch.
 - Turn to right : Engine speed increases.
 - Turn to left : Engine speed decreases.

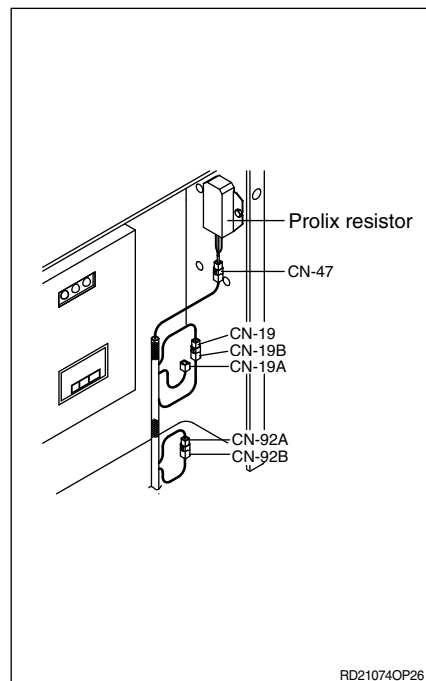

4. MODE SELECTION SYSTEM

1) STRUCTURE OF CAPO SYSTEM

CAPO, Computer Aided Power Optimization system, is the name of mode selection system developed by Hyundai.

(1) Work mode

3 work modes can be selected for the optimal work speed of the machine operation.

① Heavy duty work mode

The boom priority solenoid is activated to make the boom operation speed faster.

② General work mode

When key switch is turned ON, this mode is selected automatically and swing operation speed is faster than heavy duty work mode.

③ Breaker operation mode

It sets the pump flow to the optimal operation of breaker by activating the max flow cut-off solenoid.


(2) Power mode

Power mode designed for various work loads maintains high performance and reduces fuel consumption.

- H mode : High power
- S mode : Standard power


(3) User mode

- M : Maximum power
- U : You can change the engine and pump power and memorize it for your preference.

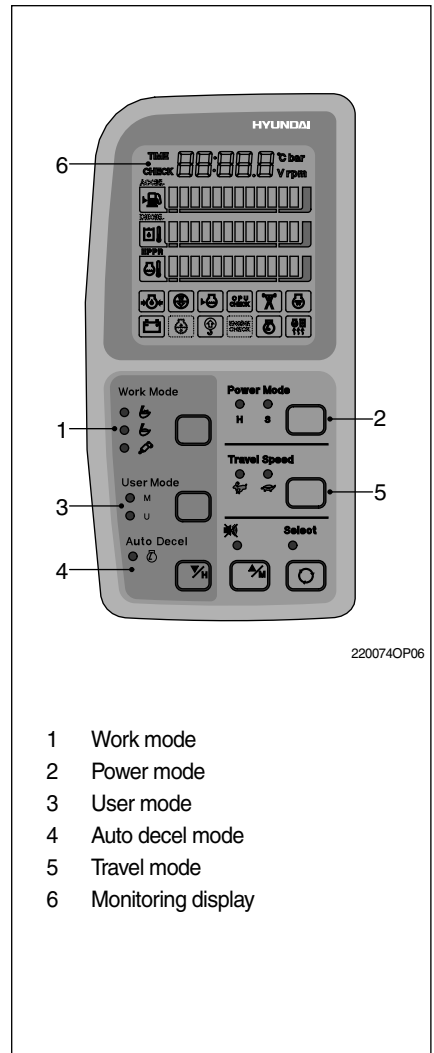

How to modulate the memory set

- ① Each memory mode has a initial set which are mid-range of max engine speed, auto decel rpm, and EPPR valve input current. When you select U, cluster LCD displays.

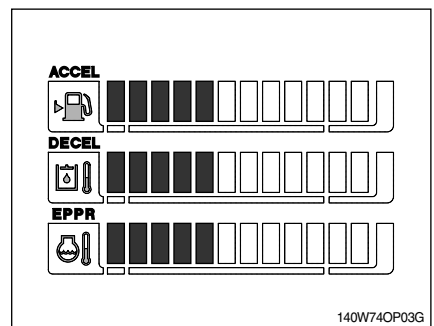

- ② To change the engine high idle speed, press the USER mode switch and SELECT switch at the same time and then ACCEL blinks at 0.5 seconds interval.
 - By pressing ▲ or ▼ switch, █ will increase or decrease.
- ③ To change DECEL rpm, press the USER mode switch and SELECT switch once more and then DECEL blinks at 0.5 seconds interval.
 - By pressing ▲ or ▼ switch, █ will increase or decrease.
- ④ To change EPPR current, press the USER mode switch and SELECT switch one more and then EPPR blinks at 0.5 seconds interval.
 - By pressing ▲ or ▼ switch, █ will increase or decrease.

• LCD segment vs parameter setting



| Segment (█) | ACCEL (rpm) | DECEL (rpm) | EPPR (mA) |
|------------------|----------------|-----------------|--------------|
| 1 | 1500 | Low idle(800) | 150 |
| 2 | 1550 | 850 | 200 |
| 3 | 1600 | 900 | 250 |
| 4 | 1650 | 950 | 300 |
| 5 | 1700 | Decel rpm(1000) | 350 |
| 6 | 1750 | 1050 | 400 |
| 7 | 1800 | 1100 | 450 |
| 8 | 1850 | 1150 | 500 |
| 9 | 1900 | 1200 | 550 |
| 10 | 1950 | 1250 | 600 |

- ⑤ To memorize the final setting, press the USER mode switch and SELECT switch one more time.

(4) Auto decel mode

Engine quick deceleration.


(5) Travel mode

-  : Low speed traveling.
-  : High speed traveling.

(6) Monitoring system

Information of machine performance as monitored by the CPU controller can be displayed on the **monitoring display**.

※ Refer to 4-12 page for details.

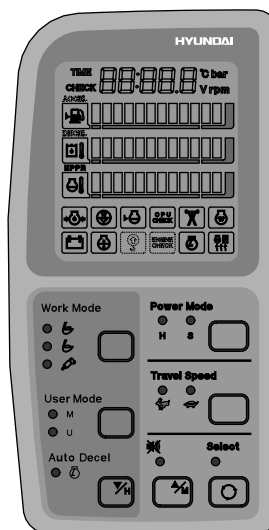


140W740P03H

(7) Self diagnostic system

The MCU diagnoses problems in the CAPO system caused by electric parts' malfunction and by open or short circuit, which are displayed on the **monitoring display** as error codes.

(8) Anti-restart system

The system protects the starter from inadvertent restarting after the engine is already operational.

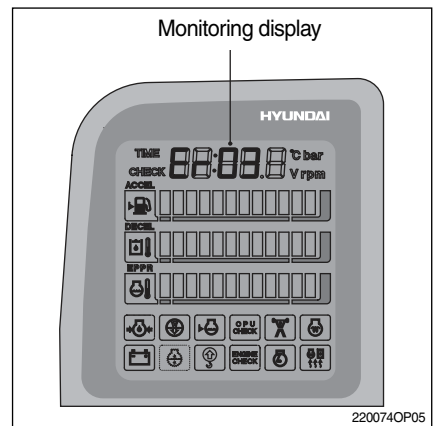


2) HOW TO OPERATE MODE SELECTION SYSTEM

(1) When start key is turned ON

- ① When start key is turned ON, all illumination lamps are ON and all lamps are OFF automatically after 5 seconds. But a battery charging warning lamp and an engine oil pressure warning lamp keep turned ON until engine starting.
- ② After lamp check **CL : 2.0**, the version of cluster program, is displayed on **Monitoring display** for 2 seconds.
- ③ After the version of program is displayed, the cluster returns to default. Exactly engine rpm, battery charging warning lamp and engine oil pressure warning lamp are turned ON and S mode, auto decel, low travel speed(Turtle mark) are displayed.
- ④ In default condition self-diagnostic function including trouble detecting of electric system can be carried out.

※ **Refer to 4-12 page for details.**

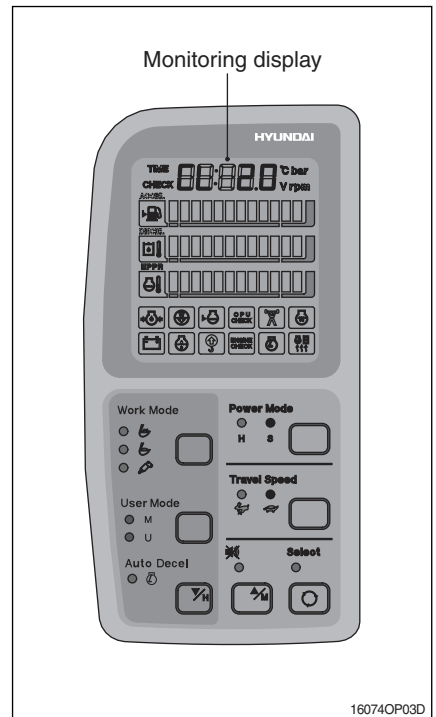

(2) After engine start


- ① When the engine is started, three lamps are ON as below.

| Mode | | Status |
|-----------------|-------|--------|
| Work mode | | ON |
| Power mode | S | ON |
| Travel mode | Low() | ON |
| Auto decel mode | | ON |

- In this condition, tachometer indicates low idle, 800 ± 100 rpm.
- If coolant temperature is below 30°C , after 10 seconds the engine speed increases to 1000 ± 100 rpm automatically to warm up the machine.
- After 2-3 minutes, you can select any mode depending on job requirement.

- ② Self-diagnostic function can be carried out the same as start key is ON.

※ Refer to 4-12 page for details.

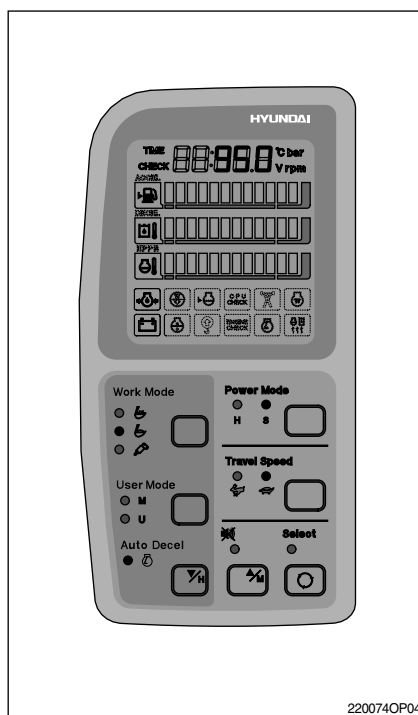

220074OP04


3) SELECTION OF POWER MODE

(1) S mode

When the accel dial is at setting 10 and auto decel mode is cancelled and S mode is selected.

| Effect |
|---|
| Same power as non mode type machine. |

- ※ When the accel dial is located below 9 the engine speed decreases about 50~100rpm per dial set.

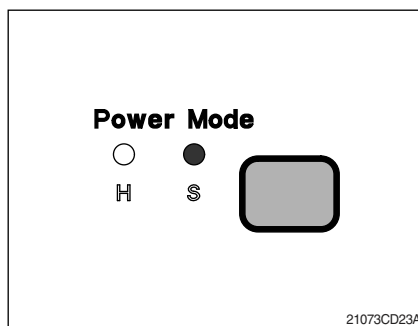


21073CD23A

(2) H mode

When the accel dial is at setting 10 and auto decel mode is cancelled and H mode is selected.

| Effect |
|---|
| Approximately 110% of power and speed available than non mode type machine or S mode. |

- ※ When the accel dial is located below 9 the engine speed decreases about 50~100rpm per dial set.

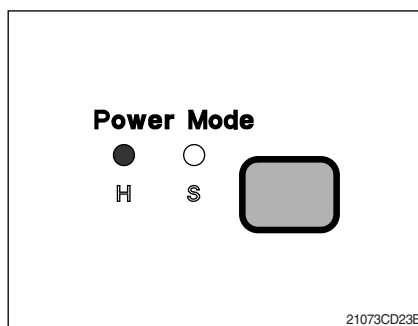


21073CD23B

(3) M mode

When the accel dial is at setting 10 and auto decel mode is cancelled and M mode is selected.

| Effect |
|---|
| Approximately 130% of power and speed available than non mode type machine or S mode. |

※ **When the accel dial is located below 9 the engine speed decreases about 50~100rpm per dial set.**

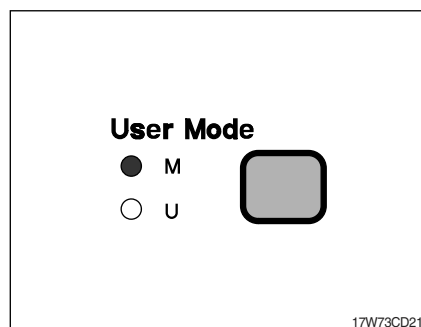

4) MONITORING DISPLAY

Information of machine performance as monitored by the MCU can be displayed on the cluster when the operator selects a display mode by touching **SELECT** switch alone or with **BUZZER STOP** switch on the cluster as below.

| Display group | How to select display mode | | Name | Display on the cluster |
|---|---|--|--|------------------------|
| | Group selection | Display mode selection | | |
| Group 0 (Default) | Way 1 Key switch ON or START Way 2 Touch AUTO DECEL switch while pressing BUZZER STOP at group 1~4. | Initial | Engine rpm | 800 rpm |
| | | Touch SELECT 1 time | Time | TIME 12:30 |
| | | Touch SELECT 2 times | Power shift pressure (EPPR valve) | EP: 10 bar |
| | | Touch SELECT 3 times | MCU model & version | 21C5.1 |
| | | Touch SELECT 4 times | Option (Only when a pressure sensor is installed) | P1: 100 bar |
| | | Touch SELECT 5 times | | P2: 200 bar |
| | | Touch SELECT 6 times | | P3: 30 bar |
| Group 1 (Volt, temp, EPPR press, version) | Touch SELECT switch once while pressing BUZZER STOP . In this group SELECT LED ON | Default | Battery voltage(V) | b: 24.8 v |
| | | Touch SELECT 1 time | Potentiometer voltage(V) | Pa: 2.5 v |
| | | Touch SELECT 2 times | Accel dial voltage(V) | dL: 3.8 v |
| | | Touch SELECT 3 times | Hydraulic oil temperature(°C) | Hd: 50 °C |
| | | Touch SELECT 4 times | Coolant temperature(°C) | Ct: 85 °C |
| Group 2 (Error code) | Touch SELECT switch twice while pressing BUZZER STOP . In this group BUZZER STOP LED blinks | Default | Current error | CHECK Er: 03 |
| | | Touch SELECT 1 time | Recorded error (Only key switch ON) | TIME Er: 03 |
| | | Press down(▼) & SELECT at the same time | Recorded error deletion (Only key switch ON) | TIME Er: 00 |
| Group 3 (Switch input) | Touch SELECT switch 3 times while pressing BUZZER STOP . In this group SELECT LED blinks at 0.5sec interval | Default | Pump prolix switch | PP: on or off |
| | | Touch SELECT 1 time | Auto decel pressure switch | dP: on or off |
| | | Touch SELECT 2 times | Power boost switch | Pb: on or off |
| | | Touch SELECT 3 times | Travel oil pressure switch | oP: on or off |
| | | Touch SELECT 4 times | One touch decel switch | od: on or off |
| | | Touch SELECT 5 times | Preheat switch | PH: on or off |

| Display group | How to select display mode | | Name | Display on the cluster |
|----------------------------|--|-----------------------------|---|------------------------|
| | Group selection | Display mode selection | | |
| Group 4 (Output) | Touch SELECT switch 4 times while pressing BUZZER STOP . In this group SELECT LED blinks at 1sec interval | Default | Hourmeter | Ho: on or off |
| | | Touch SELECT 1 time | Neutral relay (Anti-restart relay) | nr: on or off |
| | | Touch SELECT 2 times | Travel speed solenoid | ts: on or off |
| | | Touch SELECT 3 times | Power boost solenoid (2-stage relief solenoid) | PS: on or off |
| | | Touch SELECT 4 times | Boom priority solenoid | bs: on or off |
| | | Touch SELECT 5 times | Max flow cut off solenoid | FS: on or off |
| | | Touch SELECT 6 times | Preheat relay | PR: on or off |

※ By touching **SELECT** switch once while pressing **BUZZER STOP**, display group shifts.
Example : Group 0 → 1 → 2 → 3 → 4 → 0

5. OPERATION OF WORKING DEVICE

※ **Confirm the operation of control lever and working device.**


- 1) Left control lever controls arm and swing.
- 2) Right control lever controls boom and bucket.
- 3) When you release the control lever, control lever returns to neutral position automatically.

※ **When operating swing, consider the swing distance by inertia.**




※ **Left control lever**

- 1 Arm roll-out
- 2 Arm roll-in
- 3 Swing right
- 4 Swing left

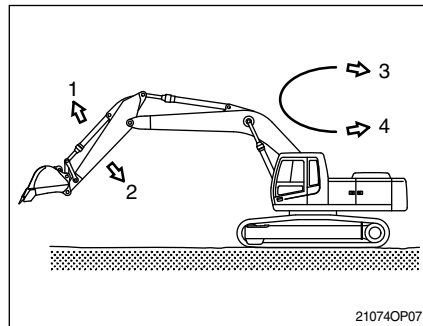

※ **Right control lever**

- 5 Boom lower
- 6 Boom raise
- 7 Bucket roll-out
- 8 Bucket roll-in

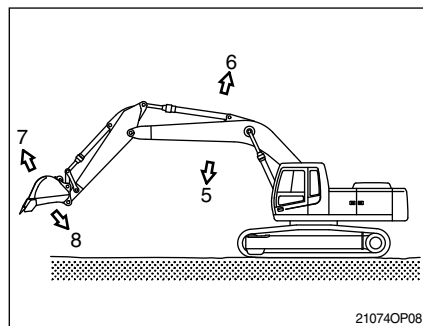

6. TRAVELING OF THE MACHINE

1) BASIC OPERATION

(1) Traveling position


It is the position which the traveling motor is in the rear and the working device is forward.

⚠ Be careful as the traveling direction will be reversed when the whole machine is swung 180 degree.

(2) Traveling operation

It is possible to travel by either travel lever or pedal.


- ※ **Do not travel continuously for a long time.**
- ※ **Reduce the engine speed and travel at a low speed when traveling on uneven ground.**

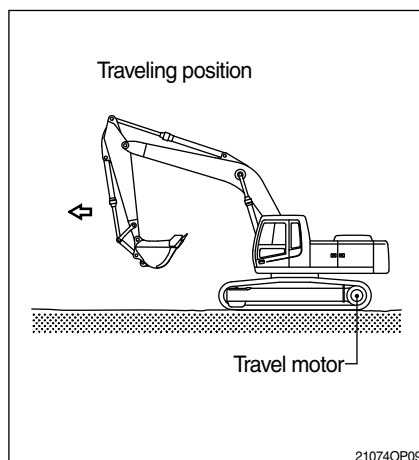

(3) Forward and backward traveling


When the left and right travel lever or pedal are pushed at the same time, the machine will travel forward or backward.

- ※ **The speed can be controlled by the operation stroke of lever or pedal and change of direction will be controlled by difference of the left and right stroke.**

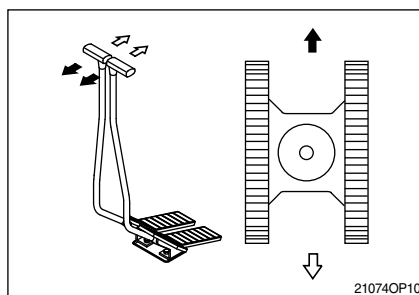


(4) Pivot turning

Operating only one side of lever or pedal make the change of direction possible by moving only one track.

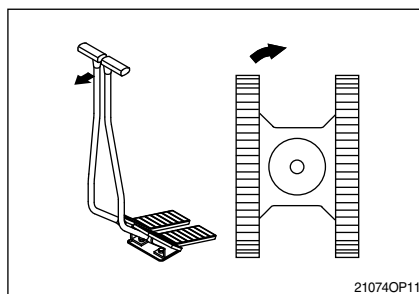


(5) Counter rotation

It is to change the direction at the original place by moving the right and left track. Both side of lever or pedal are operated to the other way at the same time.

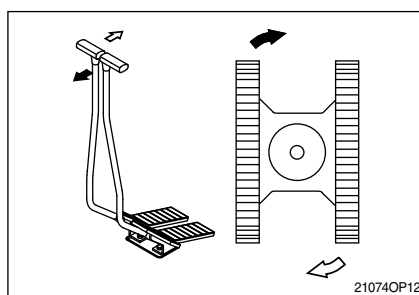


2) TRAVELING ON A SLOPE

- (1) Make sure that the travel lever is properly maneuvered by confirming the travel motor is in the right location.
 - (2) Lower the bucket 20 to 30cm(1ft) to the ground so that it can be used as a brake in an emergency.
 - (3) If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
 - (4) When parking on a slope, use the bucket as a brake and place blocks behind the tracks to prevent sliding.
- ※ **Machine cannot travel effectively on a slope when the oil temperature is low. Do the warming-up operation when it is going to travel on a slope.**
- ▲ **Be careful when working on slopes. It may cause the machine to lose its balance and turn over.**
- ▲ **Be sure to keep the travel speed switch on the LOW(Turtle mark) while traveling on a slope.**

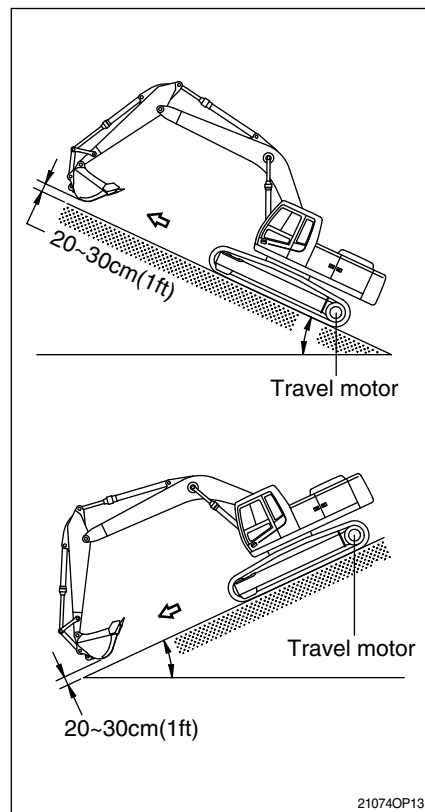

3) TRAVELING ON SOFT GROUND

- ※ **If possible, avoid to operate on soft ground.**
- (1) Move forward as far as machine can move.
 - (2) Take care not to go beyond the depth where towing is impossible on soft ground.
 - (3) When driving becomes impossible, lower bucket and use boom and arm to pull the machine. Operate boom, arm, and travel lever at the same time to avoid the machine sinking.

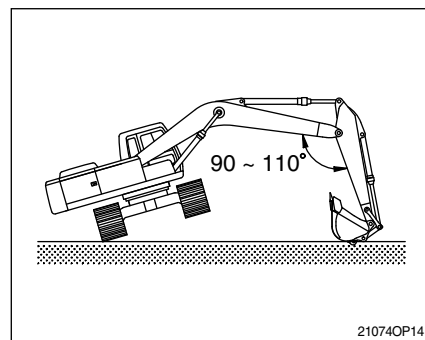

4) TOWING THE MACHINE


Tow the machine as follows when it can not move on it's own.

- (1) Tow the machine by other machine after hook the wire rope to the frame as shown in figure at right.
- (2) Hook the wire rope to the frame and put a support under each part of wire rope to prevent damage.


※ **Never tow the machine using only the tie hole, because this may break.**

▲ **Make sure no personnel are standing close to the tow rope.**

Correct

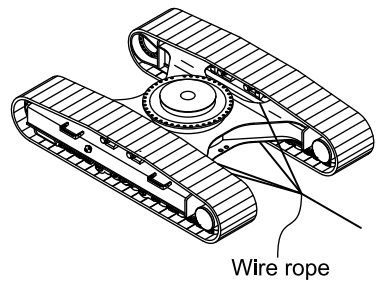

Incorrect

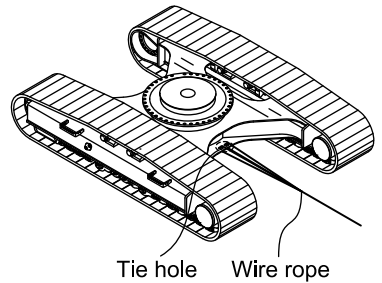


21074OP14A

7. EFFICIENT WORKING METHOD


1) Do the digging work by arm.

Use the pulling force of arm for digging and use together with the digging force of the bucket if necessary.

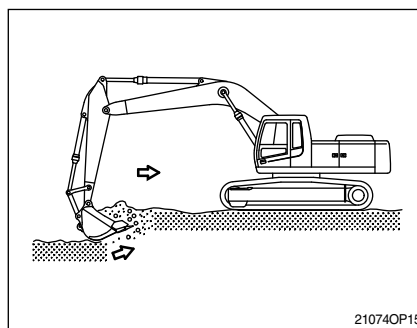


2) When lowering and raising the boom operate softly for the beginning and the end.


In particularly, sudden stops while lowering the boom may cause damage to the machine.

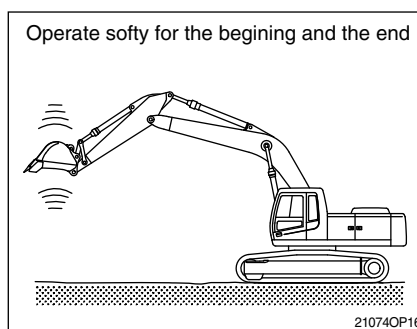


3) The digging resistance and wearing of tooth can be reduced by putting the end of bucket tooth to the digging direction.

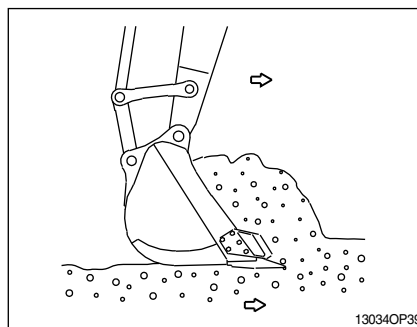


4) Set the tracks parallel to the line of the ditch to be excavated when digging ditch. Do not swing while digging.

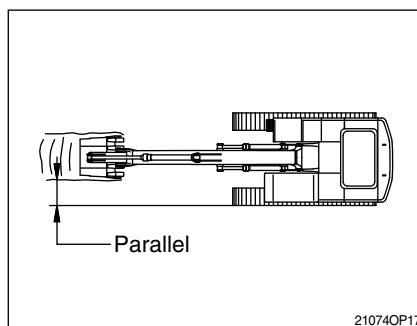

- 5) Dig slowly with keeping the angle of boom and arm, 90-110 degree when maximum digging force is required.

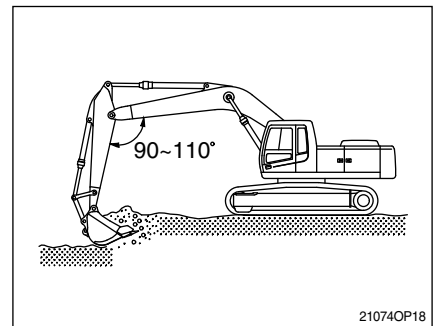


- 6) Operate leaving a small safety margin of cylinder stroke to prevent damage of cylinder when working with the machine.

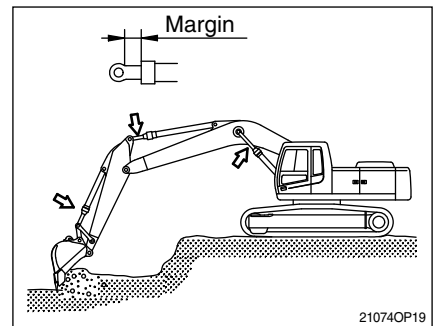


- 7) Keep the bucket to the dumping position and the arm horizontal when dumping the soil from the bucket.
Operate bucket lever 2 or 3 times when hard to dump.

※ **Do not use the impact of bucket tooth when dumping.**

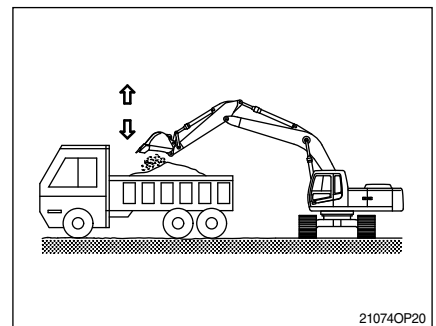


- 8) Operate stop of swing considering the swing slip distance is created by inertia after neutralizing the swing lever.

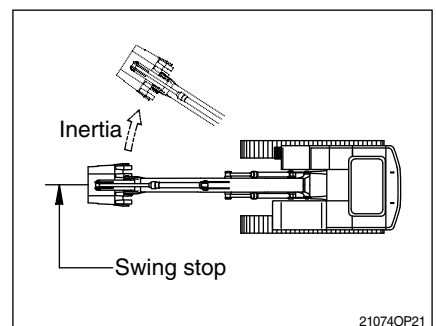

- 9) Do not use the dropping force of the work equipment for digging.

The machine can be damaged by the impact.

Incorrect

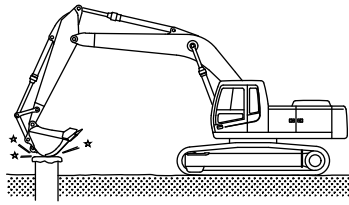


210740P22

- 10) Do not use the bucket to crack hard objects like concrete or rocks.

This may break a tooth or pin, or bend boom.

Incorrect

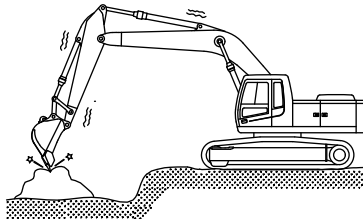

210740P23

11) NEVER CARRY OUT EXCESSIVE OPERATIONS

Operation exceeding machine performance may result in accident or failure.


Carry out lifting operation within specified load limit.

Never carry out operations which may damage the machine such as overload or over-impact-load.


Never travel while carrying a load.

In case you need installing over load warning device for object handling procedure, please contact Hyundai distributor.

Incorrect

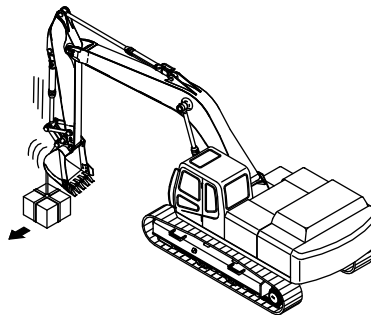

Incorrect

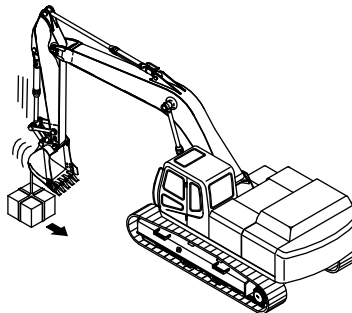

290740P35

12) BUCKET WITH HOOK

When carrying out lifting work, the special lifting hook is necessary.

The following operations are prohibited.

- Lifting loads with a wire rope fitted around the bucket teeth.
- Lifting loads with the wire rope wrapped directly around the boom or arm.

When performing lifting operation, securely hook the wire rope onto the special lifting hook.

When performing lifting operation, never raise or lower a person.


Due to the possible danger of the load falling or of collision with the load, no persons shall be allowed in the working area.

Before performing lifting operation, designate an operation supervisor.

Always execute operation according to his instructions.

- Execute operating methods and procedures under his direction.
- Select a person responsible for signaling.
Operate only on signals given by such person.


Never leave the operator's seat while lifting a load.

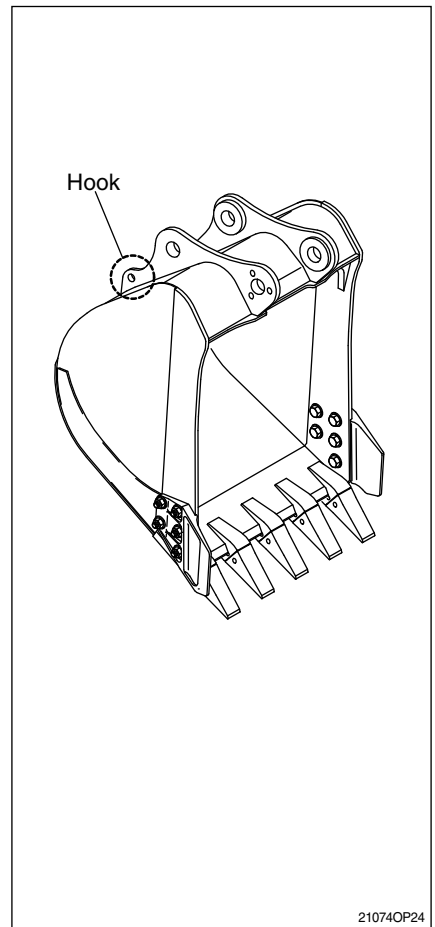

8. OPERATION IN THE SPECIAL WORK SITES


1) OPERATION THE MACHINE IN A COLD WEATHER

- (1) Use proper engine oil and fuel for the weather.
- (2) Fill the required amount of antifreeze in the coolant.
- (3) Refer to the starting engine in cold weather.
Start the engine and extend the warming up operation.
- (4) Be sure to open the heater cock when using the heater.
- (5) Always keep the battery completely charged.
※ **Discharged battery will freeze more easily than fully charged.**
- (6) Clean the machine and park on the wood plates.

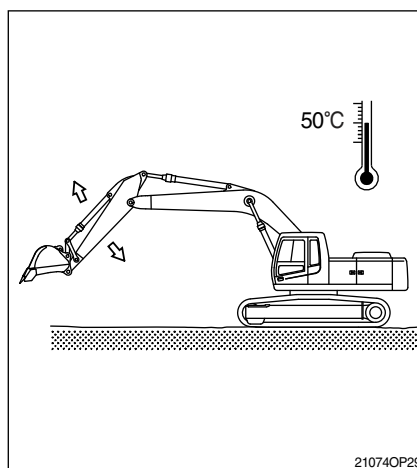


2) OPERATION IN SANDY OR DUSTY WORK SITES

- (1) Inspect air cleaner element frequently. Clean or replace element more frequently, if warning lamp comes ON and buzzer sounds simultaneously, regardless of inspection period.
※ **Replace the inner and outer element after 6 times of cleaning.**
- (2) Inspect radiator frequently, and keep cooling fins clean.
- (3) Prevent sand or dust from getting into fuel tank and hydraulic tank during refilling.
- (4) Prevent sand or dust from penetrating into hydraulic circuit by tightly closing breather cap of hydraulic oil tank. Replace hydraulic oil filter frequently.
- (5) Keep all lubricated part, such as pins and bushings, clean at all times.
- (6) If the air conditioner and heater filters clogged, the heating or cooling capacity will drop. Clean or replace the filter element more frequently.



3) SEA SHORE OPERATION


- (1) Prevent ingress of salt by securely tightening plugs, cocks and bolts of each part.
- (2) Wash machine after operation to remove salt residue.
Pay special attention to electrical parts and hydraulic cylinders to prevent corrosion.
- (3) Inspection and lubrication must be carried out more frequently.
Supply sufficient grease to replace all old grease in bearings which have been submerged in water for a long time.



9. NORMAL OPERATION OF EXCAVATOR

Followings may occur during operation due to the nature of a hydraulic excavator.

- 1) When rolling in the arm, the roll-in movement stop momentary at point **X** in the picture shown, then recovers speed again after passing point **X**.
The reason for this phenomenon is that movement by the arm weight is faster than the speed of oil flow into the cylinder.
- 2) When lowering the boom, one may hear continuous sound.
This is caused by oil flow in the valve.
- 3) Overloaded movement will produce sound caused by the relief valves, which are for the protection of the hydraulic systems.
- 4) When the machine is started swing or stopped, a noise near the swing motor may be heard. The noise is generated when the brake valve relieves.

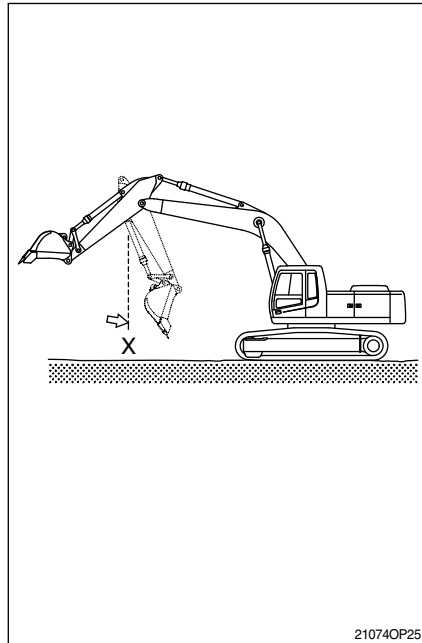

10. ATTACHMENT LOWERING(When engine is stopped)

- 1) On machines equipped with an accumulator, for a short time(within 2 minutes) after the engine is stopped, the attachment will lower under its own weight when the attachment control lever is shifted to LOWER. That is happen only starting switch ON position and safety lever UNLOCK position. After the engine is stopped, set the safety lever to the LOCK position.


⚠ Be sure no one is under or near the attachment before lowering the boom.

- 2) The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

⚠ Never make any hole in the accumulator expose it to flame or fire.

⚠ Do not weld anything to the accumulator.

※ **When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.**

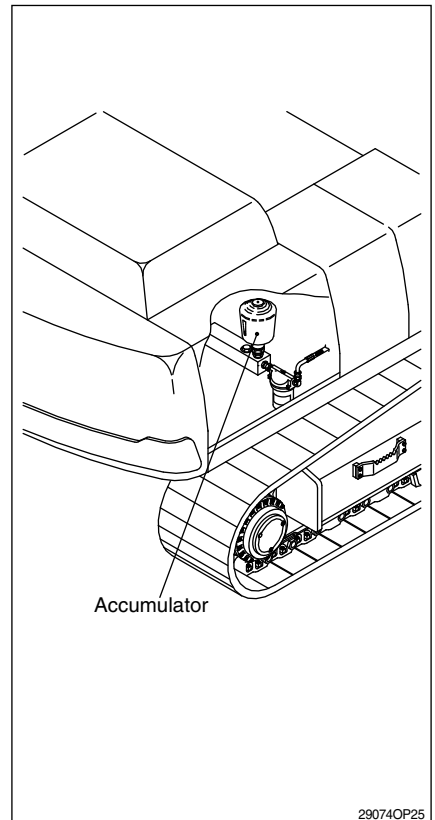

29074OP25

11. STORAGE

Maintain the machine taking care of following to prevent the deterioration of machine when storing the machine for a long time, over 1 month.

1) CLEANING THE MACHINE

Clean the machine. Check and adjust tracks.
Grease each lubrication part.


2) LUBRICATION POSITION OF EACH PART

Change all oil.

※ **Be particularly careful when you reuse the machine.**

As oil can be diluted during storage.

Apply an anticorrosive lubricant on the exposed part of piston rod of cylinder and in places where the machine rusts easily.

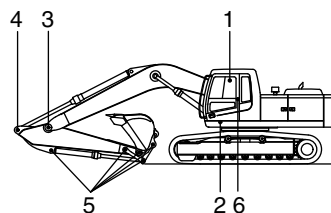


- 1 Boom and upper frame connection pin(1EA)
- 2 Lubricating manifold(5EA)
- 3 Boom cylinder pin(2EA)
- 4 Boom and arm connection pin(1EA)
- 5 Arm cylinder pin(rod side, 1EA)
- 6 Arm and bucket(7EA)

21074OP26

3) MASTER SWITCH

Turn OFF the master switch mounted electric box and store the machine.

4) Be sure to mix anticorrosive antifreezing solution in the radiator.

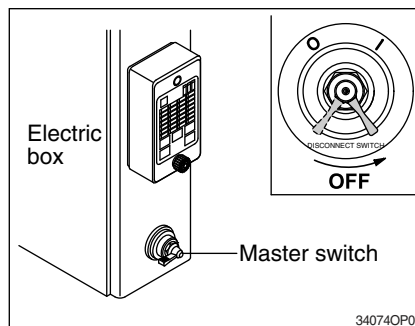


34074OP02

5) PREVENTION OF DUST AND MOISTURE

Keep machine dry. Store the machine setting wood on the ground.

- ※ **Cover exposed part of piston rod of cylinder.**
- ※ **Lower the bucket to the ground and set a support under track.**

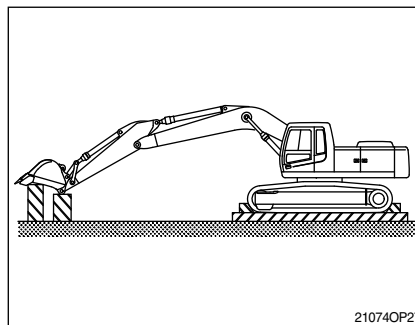


21074OP27


6) DURING STORAGE

Start engine and move the machine and work equipment once a month and apply lubrication to each part.

- ※ **Check the level of engine oil and coolant and fill if required when starting engine.**
- ※ **Clean the anticorrosive on the piston rod of cylinder.**
- ※ **Operate the machine such as traveling, swing and work equipment operation to make sure enough lubrication of all functional components.**

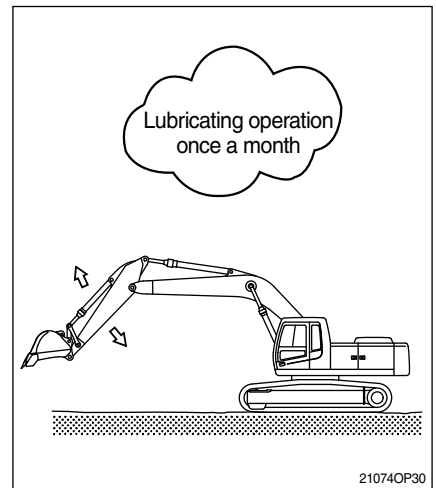

12. RCV LEVER OPERATING PATTERN

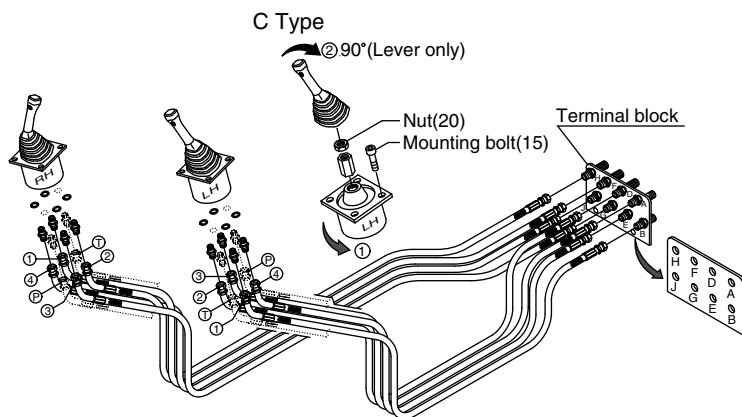


※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

34074OP03

| Pattern | Operation | | Control function | Hose connection(Port) | | | |
|----------|-----------|-------|------------------|--|--------------------|----|---|
| | Left | Right | | RCV lever | Change of MCV port | | |
| | | | | | From | To | |
| ISO Type | | | Left | £A Arm out | ② | D | - |
| | | | | £B Arm in | ④ | E | - |
| | | | | £C Swing right | ③ | A | - |
| | | | | £D Swing left | ① | B | - |
| | | | Right | £E Boom lower | ④ | J | - |
| | | | | £F Boom raise | ② | H | - |
| | | | | £G Bucket out | ① | F | - |
| | | | | £H Bucket in | ③ | G | - |
| Hyundai | | | | | | | |
| A Type | | | Left | £A Boom lower | ② | D | J |
| | | | | £B Boom raise | ④ | E | H |
| | | | | £C Swing right | ③ | A | - |
| | | | | £D Swing left | ① | B | - |
| | | | Right | £E Arm out | ④ | J | D |
| | | | | £F Arm in | ② | H | E |
| | | | | £G Bucket out | ① | F | - |
| | | | | £H Bucket in | ③ | G | - |
| B Type | | | Left | £A Boom lower | ② | D | J |
| | | | | £B Boom raise | ④ | E | H |
| | | | | £C Bucket in | ③ | A | G |
| | | | | £D Bucket out | ① | B | F |
| | | | Right | £E Arm out | ④ | J | D |
| | | | | £F Arm in | ② | H | E |
| | | | | £G Swing right | ① | F | A |
| | | | | £H Swing left | ③ | G | B |
| C Type | | | Left | ① Loosen the RCV lever mounting bolt(15) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut(20) and rotates only lever 90° clockwise. | | | |
| | | | Right | Same as ISO type | | | |

13. SWITCHING HYDRAULIC ATTACHMENT CIRCUIT

- 1) The combined hydraulic attachment circuit is capable of providing single action or double action.
- 2) The position of 3 way valve selects the single action hydraulic attachment circuit or the double action hydraulic attachment circuit.
- 3) Before you change the flow mode of hydraulic attachment circuit, place the machine in the servicing position as shown. Stop the engine.

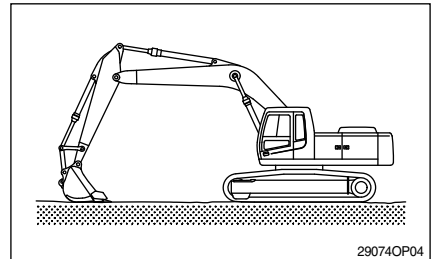


- 4) Use the manual lever to turn the 3 way valve. Make sure that you fully turn the valve until the valve stops.

(1) One way flow(Hydraulic breaker)

Position the manual lever parallel to the piping (B).


(2) Two way flow(Clamshell or shear)

Position the manual lever perpendicular to the piping (C).

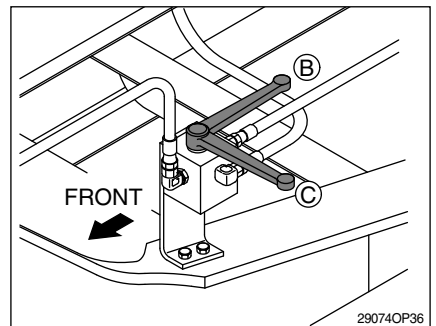


1. PREPARATION FOR TRANSPORTATION

- 1) When transporting the machine, observe the various road rules, road transportation vehicle laws and vehicle limit ordinances, etc.
- 2) Select proper trailer after confirming the weight and dimension from the chapter 2, specification.
- 3) Check the whole route such as the road width, the height of bridge and limit of weight and etc., which will be passed.
- 4) Get the permission from the related authority if necessary.
- 5) Prepare suitable capacity of trailer to support the machine.

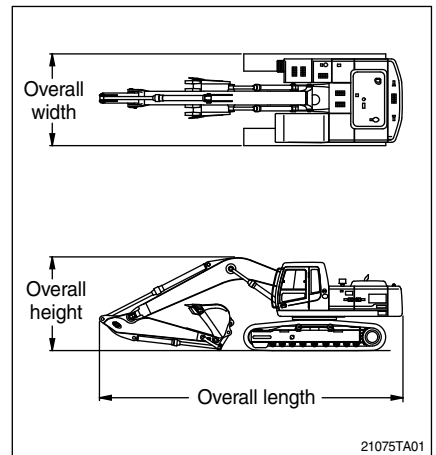

- 6) Prepare gangplank for safe loading referring to the below table and illustration.

| A | B |
|-----|-------------|
| 1.0 | 3.65 ~ 3.85 |
| 1.1 | 4.00 ~ 4.25 |
| 1.2 | 4.35 ~ 4.60 |
| 1.3 | 4.75 ~ 5.00 |
| 1.4 | 5.10 ~ 5.40 |
| 1.5 | 5.50 ~ 5.75 |

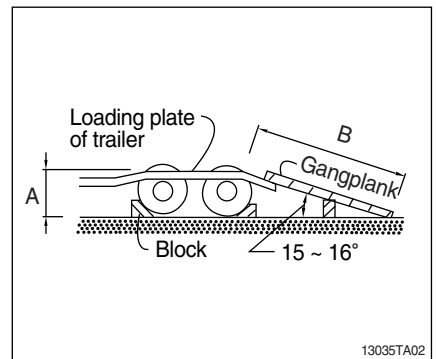


2. DIMENSION AND WEIGHT

1) BASE MACHINE

| Mark | Description | Unit | Specification |
|------|-------------|-----------|---------------|
| L | Length | mm(ft-in) | 5985(19' 8") |
| H | Height | mm(ft-in) | 3175(10' 5") |
| W | Width | mm(ft-in) | 3280(10' 9") |
| Wt | Weight | kg(lb) | 23400(51590) |


※ With 600mm(24") triple grouser shoes and 6200kg (13670lb) counterweight.

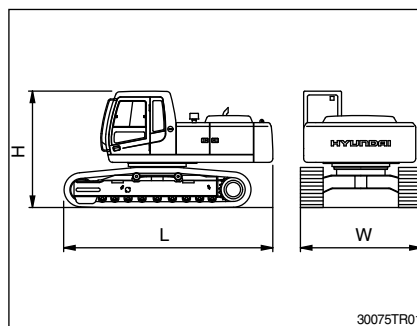

2) BOOM ASSEMBLY

| Mark | Description | Unit | Specification |
|------|-------------|-----------|---------------|
| L | Length | mm(ft-in) | 6670(21' 11") |
| H | Height | mm(ft-in) | 1640(5' 5") |
| W | Width | mm(ft-in) | 790(2' 7") |
| Wt | Weight | kg(lb) | 2980(6570) |


※ 6.45m(21' 2") boom with arm cylinder(Included piping and pins).

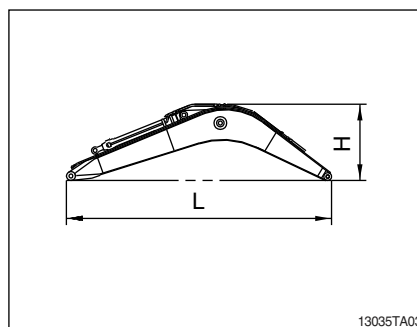

3) ARM ASSEMBLY

| Mark | Description | Unit | Specification |
|------|-------------|-----------|---------------|
| L | Length | mm(ft-in) | 3480(11' 5") |
| H | Height | mm(ft-in) | 1260(4' 2") |
| W | Width | mm(ft-in) | 440(1' 5") |
| Wt | Weight | kg(lb) | 1460(3220) |


※ 2.2m(7' 3") arm with bucket cylinder(Included linkage and pins).

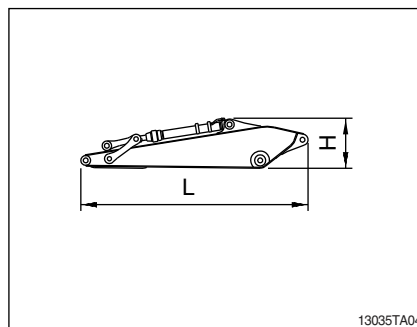

4) BUCKET ASSEMBLY

| Mark | Description | Unit | Specification |
|------|-------------|-----------|---------------|
| L | Length | mm(ft-in) | 1900(6' 3") |
| H | Height | mm(ft-in) | 1350(4' 5") |
| W | Width | mm(ft-in) | 1670(5' 6") |
| Wt | Weight | kg(lb) | 1530(3370) |


※ 2.10m³(2.75yd³) SAE heaped bucket(Included tooth and side cutters).

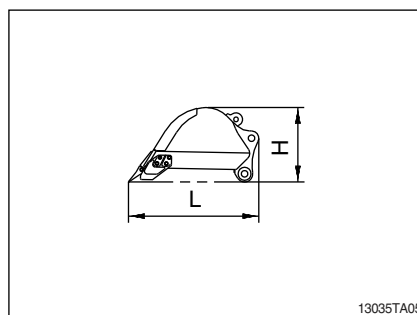

5) BOOM CYLINDER

| Mark | Description | Unit | Specification |
|------|-------------|-----------|---------------|
| L | Length | mm(ft-in) | 2300(7' 7") |
| H | Height | mm(ft-in) | 350(1' 2") |
| W | Width | mm(ft-in) | 425(1' 5") |
| Wt | Weight(2EA) | kg(lb) | 680(1500) |


※ Included piping.

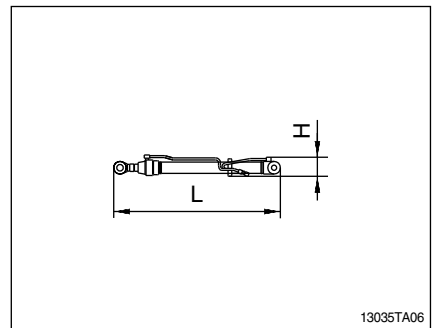

13035TA06

6) CAB ASSEMBLY


| Mark | Description | Unit | Specification |
|------|-------------|-----------|---------------|
| L | Length | mm(ft-in) | 1962(6' 4") |
| H | Height | mm(ft-in) | 1676(5' 5") |
| W | Width | mm(ft-in) | 1288(4' 2") |
| Wt | Weight | kg(lb) | 310(680) |

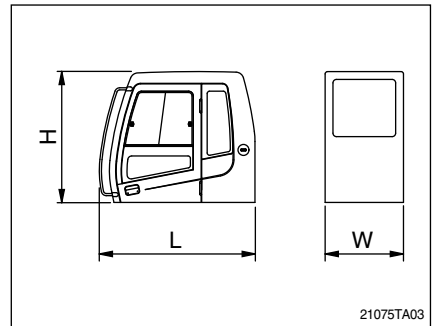

21075TA03

7) COUNTERWEIGHT


| Mark | Description | Unit | Specification |
|------|-------------|-----------|---------------|
| L | Length | mm(ft-in) | 2980(9' 9") |
| H | Height | mm(ft-in) | 1165(3' 10") |
| W | Width | mm(ft-in) | 630(2' 1") |
| Wt | Weight | kg(lb) | 6600(14550) |

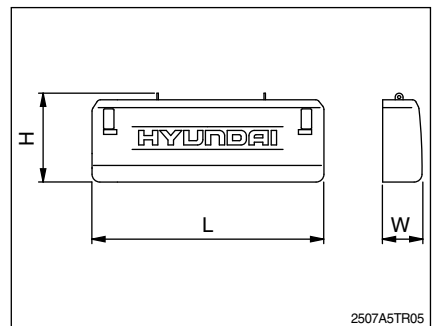


2507A5TR05

3. LOADING THE MACHINE


- 1) Load and unload the machine on a flat ground.
- 2) Use the gangplank with sufficient length, width, thickness and gradient.
- 3) Place the swing lock lever to the LOCK position before fixing the machine at the bed of trailer and confirm if the machine parallels the bed of trailer. Keep the travel motor in the rear when loading and in the front when unloading.

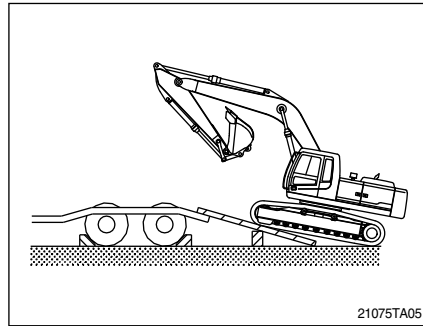

- 4) Do the following after loading the machine to the trailer.
 - (1) Stop loading when the machine is located horizontally with the rear wheel of trailer.

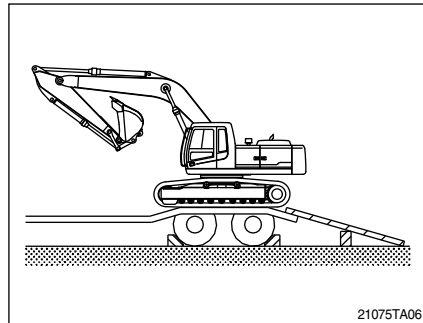

- (2) Place the swing lock lever to the LOCK position after the swing the machine 180 degree.

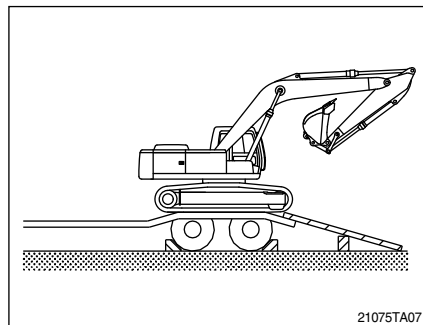

(3) Lower the working equipment gently after the location is determined.


※ **Place rectangular timber under the bucket cylinder to prevent the damage of it during transportation.**

⚠ **Be sure to keep the travel speed switch on the LOW(Turtle mark) while loading and unloading the machine.**

⚠ **Avoid using the working equipment for loading and unloading since it will be very dangerous.**


⚠ **Do not operate any other device when loading.**

⚠ **Be careful on the boundary place of loading plate or trailer as the balance of machine will abruptly be changed on the point.**

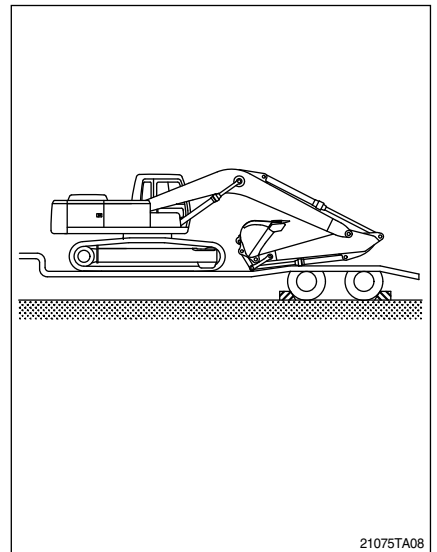


4. FIXING THE MACHINE


- 1) Lower down the working device on the loading plate of trailer.
- 2) Keep the safety lever on the LOCK position.
- 3) Turn OFF all the switches and remove the key.

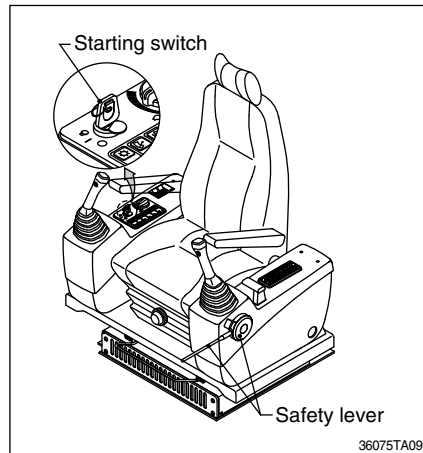

- 4) Secure all locks.

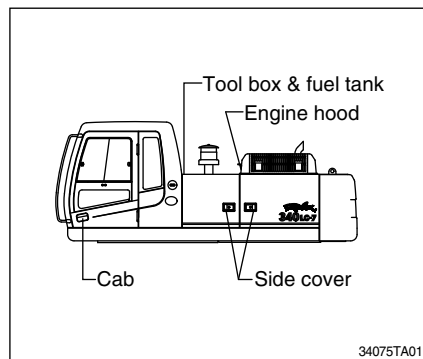


- 5) Place timber underneath of the track and fix firmly with wire rope to prevent the machine from moving forward, backward, right or left.

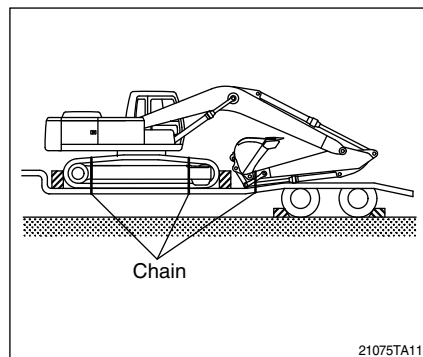

5. LOADING AND UNLOADING BY CRANE

- 1) Check the weight, length, width and height of the machine referring to the chapter 2, specification when you are going to hoist the machine.
- 2) Use long wire rope and stay to keep the distance with the machine as it should avoid touching with the machine.
- 3) Put a rubber plate contact with wire rope and machine to prevent damage.
- 4) Place crane on the proper place.
- 5) Install the wire rope and stay like the illustration.


- ⚠ **Make sure wire rope is proper size.**
- ⚠ **Place the swing lock lever and safety lever to LOCK position to prevent the machine moving when hoisting the machine.**
- ⚠ **The wrong hoisting method or installation of wire rope can cause damage to the machine.**
- ⚠ **Do not load abruptly.**
- ⚠ **Keep area clear of personnel.**

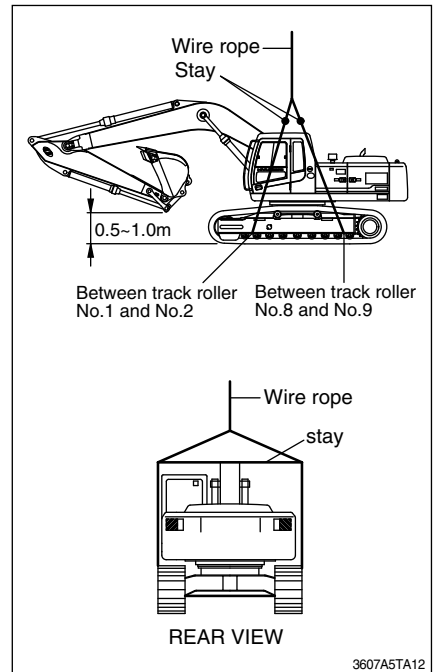

1. INSTRUCTION


1) INTERVAL OF MAINTENANCE

- (1) You may inspect and service the machine by the period as described at page 6-11 based on service meter at cluster support.
- (2) Shorten the interval of inspect and service depending on site condition.(Such as dusty area, quarry, sea shore and etc.)
- (3) Practice the entire related details at the same time when the service interval is doubled.
For example, in case of 100hours, carry out all the maintenance 「Each 100hours, each 50 hours and daily service」 at the same time.

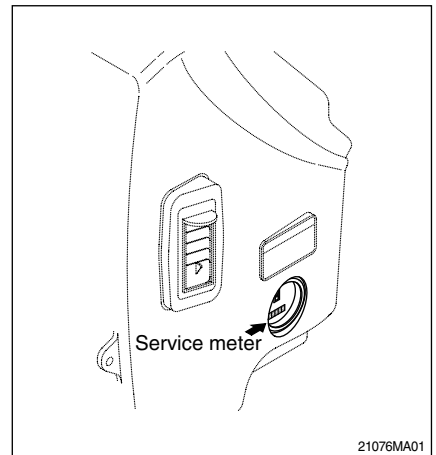

2) PRECAUTION

- (1) Start to maintenance after you have the full knowledge of machine.
- (2) The monitor installed on this machine does not entirely guarantee the condition of the machine.
Daily inspection should be performed according to clause 4, maintenance check list.
- (3) Engine and hydraulic components have been preset in the factory.
Do not allow unauthorized personnel to reset them.
- (4) Ask to your local dealer or Hyundai for the maintenance advice if unknown.
- (5) Drain the used oil and coolant in a container and handle according to the method of handling for industrial waste to meet with regulations of each province or country.



3) PROPER MAINTENANCE

(1) Replace and repair of parts

It is required to replace the wearable and consumable parts such as bucket tooth, side cutter, filter and etc., regularly.

Replace damaged or worn parts at proper time to keep the performance of machine.

(2) Use genuine parts.

(3) Use the recommended oil.

(4) Remove the dust or water around the inlet of oil tank before supplying oil.

(5) Drain oil when the temperature of oil is warm.

(6) Do not repair anything while operating the engine.


Stop the engine when you fill the oil.

(7) Relieve hydraulic system of the pressure before repairing the hydraulic system.

(8) Confirm if the cluster is in the normal condition after completion of service.

(9) For more detail information of maintenance, please contact local Hyundai dealer.


※ **Be sure to start the maintenance after fully understand the chapter 1, safety hints.**



4) RELIEVING THE PRESSURE IN THE HYDRAULIC SYSTEM


- ※ Spouting of oil can cause the accident when loosening the cap or hose right after the operating of machine as the machine or oil is on the high pressure on the condition.
Be sure to relieve the pressure in the system before repairing hydraulic system.

- (1) Place machine in parking position, and stop the engine.

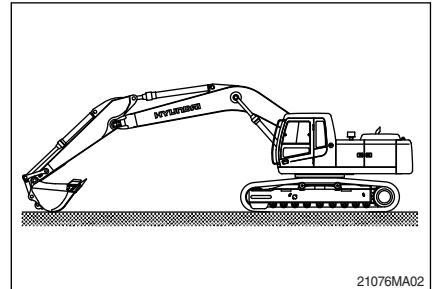


- (2) Set the safety lever completely in the release position, operate the control levers and pedals fully to the front, rear, left and right, to release the pressure in the hydraulic circuit.

- ※ **This does not completely release the pressure, so when serving hydraulic component, loosen the connections slowly and do not stand in the direction where the oil spurt out.**

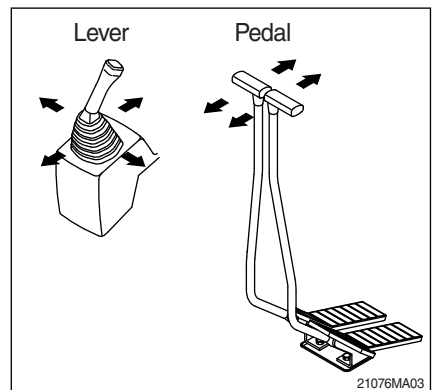


- (3) Relieve the pressure in the tank by loosening the air breather.

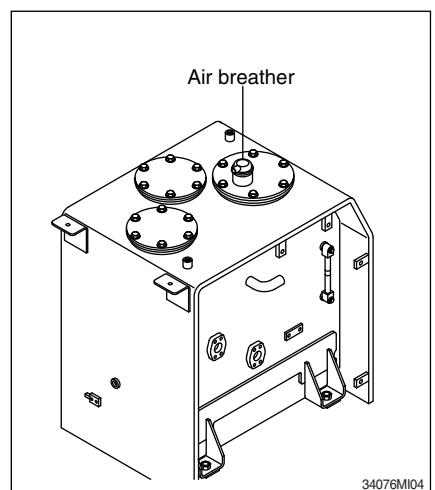

5) PRECAUTION WHEN INSTALLING HYDRAULIC HOSES OR PIPES

- (1) Be particularly careful that the joint of hose, pipe and functioning item are not damaged.
Avoid contamination.
- (2) Assemble after cleaning the hose, pipe and joint of functioning item.
- (3) Use genuine parts.
- (4) Do not assemble the hose in the condition of twisted or sharp radius.
- (5) Keep the specified tighten torque.



6) PERIODICAL REPLACEMENT OF SAFETY PARTS

- (1) It is desirable to do periodic maintenance the machine for using the machine safely for a long time.

However, recommend to replace regularly the parts related safety not only safety but maintain satisfied performance.

- (2) These parts can cause the disaster of life and material as the quality changes by passing time and it is worn, diluted, and gets fatigued by using repeatedly.

These are the parts which the operator can not judge the remained lifetime of them by visual inspection.

- (3) Repair or replace if an abnormality of these parts is found even before the recommended replacement interval.

| Periodical replacement of safety parts | | | Interval |
|--|----------------|-----------------------------|---------------|
| Engine | | Fuel hose(tank-engine) | Every 2 years |
| | | Heater hose (heater-engine) | |
| Hydraulic system | Main circuit | Pump suction hose | Every 2 years |
| | | Pump delivery hose | |
| | | Swing hose | |
| | Working device | Boom cylinder line hose | Every 2 years |
| | | Arm cylinder line hose | |
| | | Bucket cylinder line hose | |

※ 1. Replace O-ring and gasket at the same time when replacing the hose.

2. Replace clamp at the same time if the hose clamp is cracked when checking and replacing the hose.

2. TIGHTENING TORQUE

Use following table for unspecified torque.

1) BOLT AND NUT

(1) Coarse thread

| Bolt size | 8T | | 10T | |
|------------|-------------|-------------|-------------|-------------|
| | kgf · m | lbf · ft | kgf · m | lbf · ft |
| M 6 × 1.0 | 0.85 ~ 1.25 | 6.15 ~ 9.04 | 1.14 ~ 1.74 | 8.2 ~ 12.6 |
| M 8 × 1.25 | 2.0 ~ 3.0 | 14.5 ~ 21.7 | 2.7 ~ 4.1 | 19.5 ~ 29.7 |
| M10 × 1.5 | 4.0 ~ 6.0 | 28.9 ~ 43.4 | 5.5 ~ 8.3 | 39.8 ~ 60.0 |
| M12 × 1.75 | 7.4 ~ 11.2 | 53.5 ~ 81.0 | 9.8 ~ 15.8 | 70.9 ~ 114 |
| M14 × 2.0 | 12.2 ~ 16.6 | 88.2 ~ 120 | 16.7 ~ 22.5 | 121 ~ 163 |
| M16 × 2.0 | 18.6 ~ 25.2 | 135 ~ 182 | 25.2 ~ 34.2 | 182 ~ 247 |
| M18 × 2.0 | 25.8 ~ 35.0 | 187 ~ 253 | 35.1 ~ 47.5 | 254 ~ 344 |
| M20 × 2.5 | 36.2 ~ 49.0 | 262 ~ 354 | 49.2 ~ 66.6 | 356 ~ 482 |
| M22 × 2.5 | 48.3 ~ 63.3 | 349 ~ 458 | 65.8 ~ 98.0 | 476 ~ 709 |
| M24 × 3.0 | 62.5 ~ 84.5 | 452 ~ 611 | 85.0 ~ 115 | 615 ~ 832 |
| M30 × 3.0 | 124 ~ 168 | 898 ~ 1214 | 169 ~ 229 | 1223 ~ 1656 |
| M36 × 4.0 | 174 ~ 236 | 1261 ~ 1704 | 250 ~ 310 | 1808 ~ 2242 |

(2) Fine thread

| Bolt size | 8T | | 10T | |
|------------|-------------|-------------|-------------|-------------|
| | kgf · m | lbf · ft | kgf · m | lbf · ft |
| M 8 × 1.0 | 2.2 ~ 3.4 | 15.9 ~ 24.6 | 3.0 ~ 4.4 | 21.7 ~ 31.8 |
| M10 × 1.2 | 4.5 ~ 6.7 | 32.5 ~ 48.5 | 5.9 ~ 8.9 | 42.7 ~ 64.4 |
| M12 × 1.25 | 7.8 ~ 11.6 | 56.4 ~ 83.9 | 10.6 ~ 16.0 | 76.7 ~ 116 |
| M14 × 1.5 | 13.3 ~ 18.1 | 96.2 ~ 131 | 17.9 ~ 24.1 | 130 ~ 174 |
| M16 × 1.5 | 19.9 ~ 26.9 | 144 ~ 195 | 26.6 ~ 36.0 | 192 ~ 260 |
| M18 × 1.5 | 28.6 ~ 43.6 | 207 ~ 315 | 38.4 ~ 52.0 | 278 ~ 376 |
| M20 × 1.5 | 40.0 ~ 54.0 | 289 ~ 391 | 53.4 ~ 72.2 | 386 ~ 522 |
| M22 × 1.5 | 52.7 ~ 71.3 | 381 ~ 516 | 70.7 ~ 95.7 | 511 ~ 692 |
| M24 × 2.0 | 67.9 ~ 91.9 | 491 ~ 665 | 90.9 ~ 123 | 658 ~ 890 |
| M30 × 2.0 | 137 ~ 185 | 990 ~ 1339 | 182 ~ 248 | 1314 ~ 1796 |
| M36 × 3.0 | 192 ~ 260 | 1390 ~ 1880 | 262 ~ 354 | 1894 ~ 2562 |

2) PIPE AND HOSE(FLARE TYPE)

| Thread size(PF) | Width across flat(mm) | kgf · m | lbf · ft |
|-----------------|-----------------------|---------|----------|
| 1/4" | 19 | 4 | 28.9 |
| 3/8" | 22 | 5 | 36.2 |
| 1/2" | 27 | 9.5 | 68.7 |
| 3/4" | 36 | 18 | 130.2 |
| 1" | 41 | 21 | 151.9 |
| 1-1/4" | 50 | 35 | 253.2 |

3) PIPE AND HOSE(ORFS TYPE)

| Thread size(UNF) | Width across flat(mm) | kgf · m | lbf · ft |
|------------------|-----------------------|---------|----------|
| 9/16-18 | 19 | 4 | 28.9 |
| 11/16-16 | 22 | 5 | 36.2 |
| 13/16-16 | 27 | 9.5 | 68.7 |
| 1-3/16-12 | 36 | 18 | 130.2 |
| 1-7/16-12 | 41 | 21 | 151.9 |
| 1-11/16-12 | 50 | 35 | 253.2 |

4) FITTING

| Thread size | Width across flat(mm) | kgf · m | lbf · ft |
|-------------|-----------------------|---------|----------|
| 1/4" | 19 | 4 | 28.9 |
| 3/8" | 22 | 5 | 36.2 |
| 1/2" | 27 | 9.5 | 68.7 |
| 3/4" | 36 | 18 | 130.2 |
| 1" | 41 | 21 | 151.9 |
| 1-1/4" | 50 | 35 | 253.2 |

4) TIGHTENING TORQUE OF MAJOR COMPONENT

| No. | Descriptions | | Bolt size | Torque | |
|-----|--------------------|--|-----------|----------|-----------|
| | | | | kgf · m | lbf · ft |
| | Engine | Engine mounting bolt(engine-bracket) | M14×2.0 | 14.5±2.5 | 105±18 |
| 1 | | Engine mounting bolt(bracket-frame) | M22×2.5 | 48±2.0 | 347±14.5 |
| 2 | | Radiator mounting bolt | M16×2.0 | 22±1.0 | 159±7.2 |
| 3 | | Coupling mounting socket bolt | M20×2.5 | 46.5±2.5 | 336±18.1 |
| 4 | | Main pump housing mounting bolt | M10×1.5 | 4.8±0.3 | 35±2.2 |
| 5 | Hydraulic system | Main pump mounting socket bolt | M20×2.5 | 42±4.5 | 304±32.5 |
| 6 | | Main control valve mounting bolt | M16×2.0 | 19.5±1.3 | 141±9.4 |
| 7 | | Fuel tank mounting bolt | M20×2.5 | 46±5.0 | 333±36 |
| 8 | | Hydraulic oil tank mounting bolt | M20×2.5 | 46±5.0 | 333±36 |
| 9 | | Turning joint mounting bolt, nut | M12×1.75 | 12.3±1.3 | 88.9±9.4 |
| 10 | Power train system | Swing motor mounting bolt | M20×2.5 | 58.4±6.4 | 422±46.3 |
| 11 | | Swing bearing upper part mounting bolt | M24×3.0 | 100±10 | 723±72.3 |
| 12 | | Swing bearing lower part mounting bolt | M24×3.0 | 100±10 | 723±72.3 |
| 13 | | Travel motor mounting bolt | M24×3.0 | 84±8.0 | 608±57.9 |
| 14 | | Sprocket mounting bolt | M20×2.5 | 57.9±6.0 | 419±43.4 |
| 15 | Under carriage | Carrier roller mounting bolt, nut | M16×2.0 | 29.7±3.0 | 215±21.7 |
| 16 | | Track roller mounting bolt | M20×2.5 | 57.9±6.0 | 419±43.4 |
| 17 | | Track tension cylinder mounting bolt | M16×2.0 | 29.6±3.2 | 214±23.1 |
| 18 | | Track shoe mounting bolt, nut | M22×1.5 | 123±5.0 | 890±36.2 |
| 19 | | Track guard mounting bolt | M20×2.5 | 57.9±6.0 | 419±43.4 |
| 20 | Others | Counterweight mounting bolt | M36×3.0 | 308±46 | 2228±333 |
| 21 | | Cab mounting bolt | M12×1.75 | 12.8±3.0 | 92.6±21.7 |
| 22 | | Operator's seat mounting bolt | M 8×1.25 | 4.05±0.8 | 29.3±5.8 |

※ For tightening torque of engine and hydraulic components, see each component disassembly and assembly.

3. FUEL, COOLANT AND LUBRICANTS

1) NEW MACHINE

New machine used and filled with following lubricants.

| Description | Specification |
|---------------------------------|--------------------------------|
| Engine oil | SAE 15W-40(API CI-4) |
| Hydraulic oil | ISO VG 68 LF |
| Swing and travel reduction gear | SAE 85W-140(API GL-5) |
| Grease | Lithium base grease NLGI No. 2 |
| Fuel | ASTM D975-No. 2 |
| Coolant | Hyundai pre mixed coolant |

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Material

2) RECOMMENDED OILS

Use only oils listed below or equivalent.

Do not mix different brand oil.

| Service point | Kind of fluid | Capacity l (U.S. gal) | Ambient temperature °C (°F) | | | | | | |
|------------------------------|--|--|-----------------------------|-------------|-----------|------------|------------|------------|-------------|
| | | | -20 (-4) | -10 (14) | 0 (32) | 10 (50) | 20 (68) | 30 (86) | 40 (104) |
| Engine oil pan | Engine oil | 27.3(7.2) | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| Swing drive | Gear oil | 11(2.9) | | | | | | | |
| Final drive | | 5.5 × 2 (1.5 × 2) | | | | | | | |
| Hydraulic tank | Hydraulic oil | Tank; 210(55.5) System; 320(84.5) | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| Fuel tank | Diesel fuel | 600(158) | | | | | | | |
| | | | | | | | | | |
| Fitting (Grease nipple) | Grease | As required | | | | | | | |
| | | | | | | | | | |
| Radiator (Reservoir tank) | Mixture of antifreeze and water 50 : 50 | 45(12) | | | | | | | |
| | | | | | | | | | |

* Indian model use oil in given temperature range.

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Material

4. MAINTENANCE CHECK LIST

1) DAILY SERVICE BEFORE STARTING

| Check items | Service | Page |
|----------------------------|---------------|------|
| Visual check | | |
| Fuel tank | Check, Refill | 6-24 |
| Hydraulic oil level | Check, Add | 6-27 |
| Engine oil level | Check, Add | 6-18 |
| Coolant level | Check, Add | 6-19 |
| Control panel & pilot lamp | Check, Clean | 6-38 |
| Prefilter | Check, Clean | 6-25 |
| Fan belt tension | Check, Adjust | 6-23 |

2) EVERY 50 HOURS SERVICE

| Check items | Service | Page |
|------------------------------|---------------|------|
| Fuel tank(water, sediment) | Drain | 6-24 |
| Track tension | Check, Adjust | 6-33 |
| Swing bearing | Lubricate | 6-31 |
| Swing reduction gear oil | Check, Add | 6-31 |
| Lubricate pin and bushing | Lubricate | 6-34 |
| · Boom cylinder tube end | | |
| · Boom foot | | |
| · Boom cylinder rod end | | |
| · Arm cylinder tube end | | |
| · Arm cylinder rod end | | |
| · Boom + Arm connecting | | |
| · Bucket cylinder tube end | | |
| · Bucket cylinder rod end | | |
| · Arm + Bucket connecting | | |
| · Arm + Link, Bucket control | | |
| · Bucket control rod | | |

3) INITIAL 50 HOURS SERVICE

| Check items | Service | Page |
|--------------------------------------|--------------|----------|
| Engine oil | Change | 6-18, 19 |
| Engine oil filter | Replace | 6-18, 19 |
| Prefilter(water, element) | Replace | 6-25 |
| Fuel filter | Replace | 6-26 |
| Bolts & Nuts | Check, Tight | 6-8 |
| ┆ Sprocket mounting bolts | | |
| ┆ Travel motor mounting bolts | | |
| ┆ Swing motor mounting bolts | | |
| ┆ Swing bearing mounting bolts | | |
| ┆ Engine mounting bolts | | |
| ┆ Counterweight mounting bolts | | |
| ┆ Turning joint locating bolts | | |
| ┆ Track shoe mounting bolts and nuts | | |
| ┆ Hydraulic pump mounting bolts | | |

Service the above items only for the new machine, and thereafter keep the normal service interval.

4) EVERY 200 HOURS SERVICE

| Check items | Service | Page |
|--------------------------------------|---------|------|
| ★ Return filter | Replace | 6-29 |
| ★ Pilot line filter | Replace | 6-30 |
| ★ Element in hydraulic tank breather | Replace | 6-30 |
| ★ Drain filter cartridge | Replace | 6-30 |

★ Replace 4 filters for continuous hydraulic breaker operation only.

5) EVERY 250 HOURS SERVICE

| Check items | Service | Page |
|--------------------------------------|--------------|----------|
| ★Engine oil | Change | 6-18, 19 |
| ★Engine oil filter | Replace | 6-18, 19 |
| Battery electrolyte | Check, Add | 6-38 |
| ☆ Swing reduction gear oil | Change | 6-31 |
| ☆ Swing reduction grease | Check, Add | 6-31 |
| Element in hydraulic tank breather | Replace | 6-30 |
| Aircon & heater recirculation filter | Clean | 6-41 |
| Bolts & Nuts | Check, Tight | 6-8 |
| · Sprocket mounting bolts | | |
| · Travel motor mounting bolts | | |
| · Swing motor mounting bolts | | |
| · Swing bearing mounting bolts | | |
| · Engine mounting bolts | | |
| · Counterweight mounting bolts | | |
| · Turning joint locating bolts | | |
| · Track shoe mounting bolts and nuts | | |
| · Hydraulic pump mounting bolts | | |

★ If you use high sulfur containing fuel above than 0.5% or use low grade of engine oil reduce change interval.

☆ Change oil and add grease after initial 250 hours of operation.

6) EVERY 500 HOURS SERVICE

| Check items | Service | Page |
|---|----------------|------|
| Radiator, cooler fin and charger air cooler | Inspect, Clean | 6-22 |
| ◆ Air cleaner element | Check, Clean | 6-23 |
| Fuel filter | Replace | 6-26 |
| Prefilter | Replace | 6-25 |
| Travel reduction gear oil | Check, Add | 6-32 |
| ☆ Travel reduction gear oil | Change | 6-32 |

◆ Clean the primary element only after 500 hours operation or when the air cleaner warning lamp blinks.
Replace primary element and safety element after 4 times cleanings of primary element.

☆ Change oil after initial 500 hours of operation.

7) EVERY 1000 HOURS SERVICE

| Check items | Service | Page |
|---------------------------------|---------|------|
| Hydraulic oil return filter | Replace | 6-29 |
| Drain filter cartridge | Replace | 6-30 |
| Pilot line filter | Replace | 6-30 |
| Travel motor reduction gear oil | Change | 6-32 |
| Swing reduction grease | Refill | 6-31 |
| Grease in swing gear and pinion | Change | 6-31 |

8) EVERY 5000 HOURS SERVICE

| Check items | Service | Page |
|--------------------|--------------|------------------|
| Hydraulic tank | | |
| ★ · Oil | Change | 6-28 |
| · Suction strainer | Check, Clean | 6-29 |
| Coolant | Change | 6-19, 20, 21, 22 |


★Change oil every 1000 hours of continuous hydraulic breaker operation.

9) WHEN REQUIRED

Whenever you have trouble in the machine, you must perform the service of related items, system by system.

| Check items | Service | Page |
|----------------------------|------------------|------------------|
| Fuel system | | |
| · Fuel tank | Drain or Clean | 6-24 |
| · Fuel filter | Replace | 6-26 |
| · Prefilter | Clean or Replace | 6-25 |
| Engine lubrication system | | |
| · Engine oil | Change | 6-18, 19 |
| · Engine oil filter | Replace | 6-18, 19 |
| Engine cooling system | | |
| · Coolant | Add or Change | 6-19, 20, 21, 22 |
| · Radiator | Clean or Flush | 6-19, 20, 21, 22 |
| Engine air system | | |
| · Air cleaner element | Replace | 6-23 |
| Hydraulic system | | |
| · Hydraulic oil | Add or Change | 6-28 |
| · Return filter | Replace | 6-29 |
| · Drain line filter | Replace | 6-30 |
| · Pilot line filter | Replace | 6-30 |
| · Element of breather | Replace | 6-30 |
| · Suction strainer | Clean | 6-29 |
| Undercarriage | | |
| · Track tension | Check, Adjust | 6-33 |
| Bucket | | |
| · Tooth | Replace | 6-35 |
| · Side cutter | Replace | 6-35 |
| · Linkage | Adjust | 6-36 |
| · Bucket assy | Replace | 6-34 |
| Air conditioner and heater | | |
| · Fresh filter | Clean, Replace | 6-41 |
| · Recirculation filter | Clean | 6-42 |

5. MAINTENANCE CHART

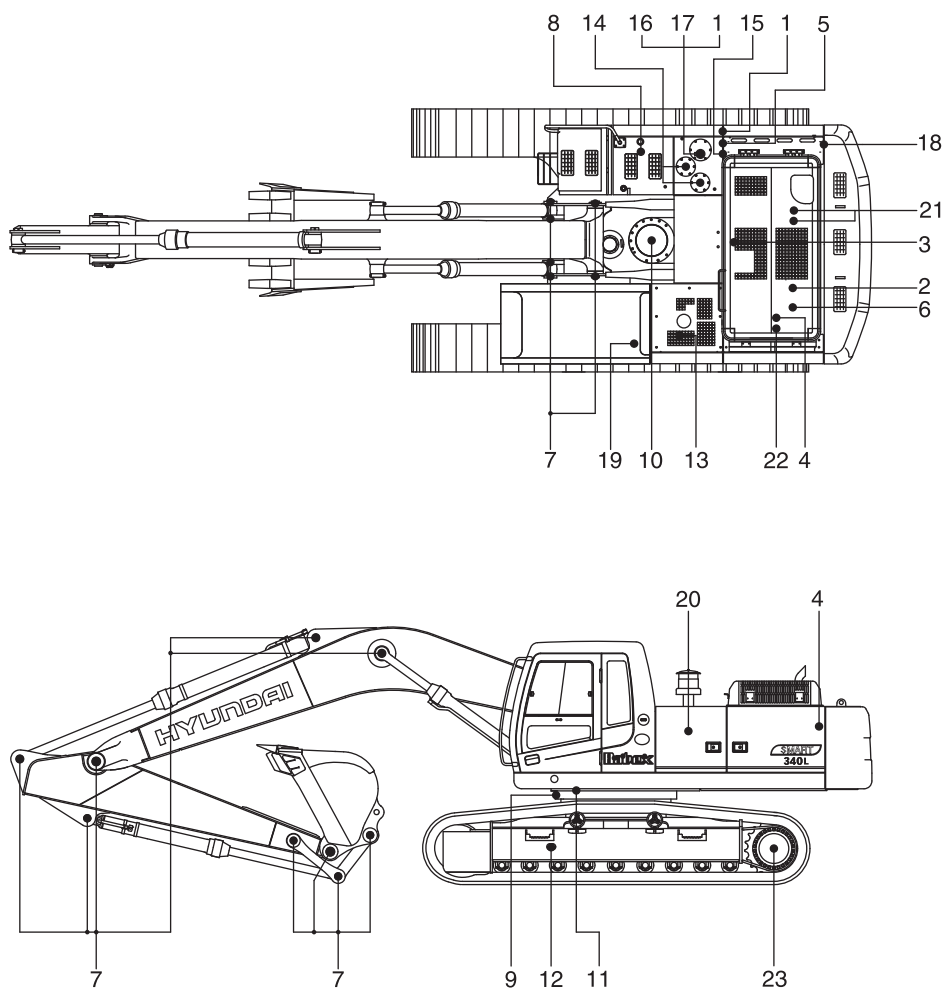

34076MA01

Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.
4. For other details, refer to the service manual.

| Service interval | No. | Description | Service action | Oil symbol | Capacity l (U.S.gal) | Service points No. |
|--------------------|-----|--|----------------|------------|----------------------|--------------------|
| 10 Hours or daily | 1 | Hydraulic oil level | Check, Add | HO | 210(55.5) | 1 |
| | 2 | Engine oil level | Check, Add | EO | 27.3(7.2) | 1 |
| | 4 | Radiator coolant | Check, Add | C | 45(11.9) | 1 |
| | 5 | Prefilter(Water, element) | Check, Clean | - | - | 1 |
| | 6 | Fan belt tension & damage | Check, Clean | - | - | 1 |
| | 25 | Fuel tank | Check, Refill | DF | 570(150.7) | 1 |
| 50 Hours or weekly | 7 | Attachment pins & chamber | Check, Add | PGL | - | 17 |
| | 8 | Fuel tank(Water, element) | Check, Clean | - | 570(150.7) | 1 |
| | 9 | Swing bearing grease | Check, Add | PGL | - | 3 |
| | 10 | Swing reduction gear case | Check, Add | GO | 11(2.9) | 1 |
| | 11 | Swing reduction gear grease | Check, Add | PGL | - | 1 |
| | 13 | Track tension | Check, Adjust | PGL | - | 2 |
| 250 Hours | 2 | Engine oil | Change | EO | 27.3(7.2) | 1 |
| | 3 | Engine oil filter | Replace | - | - | 1 |
| | 13 | Battery(Voltage) | Check, Add | - | - | 1 |
| | 16 | Air breather element | Replace | - | - | 1 |
| | 19 | Aircon & heater recirculation filter | Check, Clean | - | - | 1 |
| 500 Hours | 5 | Prefilter(Water, element) | Replace | - | - | 1 |
| | 20 | Air cleaner element(Primary) | Clean | - | - | 1 |
| | 22 | Fuel filter element | Replace | - | - | 2 |
| | 23 | Radiator, oil cooler, charger air cooler | Clean | - | - | 3 |
| 1000 Hours | 10 | Swing reduction gear case | Change | GO | 11(2.9) | 1 |
| | 11 | Swing gear and pinion | Change | PGL | 16.6kg(36.6lb) | 1 |
| | 14 | Hydraulic oil return filter | Replace | - | - | 2 |
| | 15 | Drain filter cartridge | Replace | - | - | 1 |
| | 19 | Line filter element | Replace | - | - | 1 |
| | 23 | Travel reduction gear case | Change | GO | 5.5(1.45) | 2 |
| 2000 Hours | 1 | Hydraulic oil | Change | HO | 210(55.5) | 1 |
| | 4 | Radiator coolant | Change | C | 45(11.9) | 1 |
| | 17 | Hydraulic oil suction strainer | Check, Clean | - | - | 1 |
| As required | 19 | Aircon & heater recirculation filter | Clean, Replace | - | - | 1 |
| | 19 | Aircon & heater fresh filter | Clean, Replace | - | - | 1 |
| | 20 | Air cleaner element(Safety) | Replace | - | - | 1 |
| | 20 | Air cleaner element(Primary) | Replace | - | - | 1 |

※ **Oil symbol**

Please refer to the recommended lubricants for specification.


DF : Diesel fuel GO : Gear oil HO : Hydraulic oil C : Coolant PGL : Grease EO : Engine oil

6. SERVICE INSTRUCTION

1) CHECK ENGINE OIL LEVEL

Check the oil level with the machine on a flat ground before starting engine.


- (1) Pull out the dipstick and wipe with a clean cloth.
 - (2) Check the oil level by inserting the dipstick completely into the hole and pulling out again.
 - (3) If oil level is LOW, add oil and then check again.
 - ※ **If the oil is contaminated or diluted, change the oil regardless of the regular change interval.**
 - ※ **Check oil level after engine has been stopped for 15 minutes.**
- ▲ **Do not operate unless the oil level is in the normal range.**

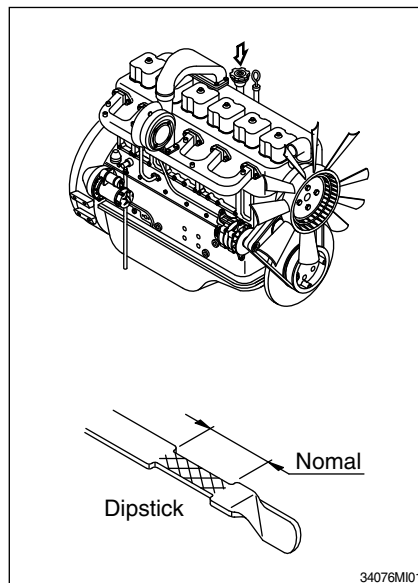


2) REPLACEMENT OF ENGINE OIL AND OIL FILTER

- (1) Warm up the engine.
- (2) Remove the plug allow the oil to drain.
 - ※ **A drain pan with a capacity of 30 liters (7.9U.S. gallons) will be adequate.**
- (3) Fill the engine with clean oil to the proper level.
 - Quantity : 27.3 l (7.2 U.S. gallons)
- (4) Operate the engine at low idle and inspect for leaks at the filters and the drain plug.

Shut the engine off and check the oil level with the dipstick. Allow 15 minutes for oil to drain down before checking.

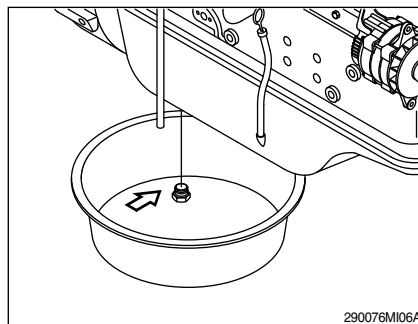



- (5) Clean around the filter head, remove the filter and clean the gasket surface.
- (6) Apply a light film of lubricating oil to the gasket sealing surface before installing the filters.
- ※ **Fill the filters with clean lubricating oil.**
- (7) Install the filter to the filter head.
- ※ **Mechanical over-tightening may distort the threads or damage the filter element seal.**
 - Install the filter as specified by the filter manufacturer.

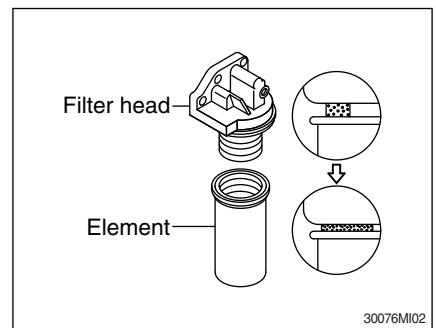

3) CHECK COOLANT

- (1) Check if the level of coolant in reservoir tank is between FULL and LOW.
- (2) Add the mixture of antifreeze and water after removing the cap of the reservoir tank if coolant is not sufficient.
- (3) Be sure to add the coolant by opening the cap of radiator when coolant level is below LOW.
- (4) Replace gasket of radiator cap when it is damaged.

▲ Hot coolant can spray out if radiator cap is removed while engine is hot. Remove the cap after the engine has cooled down.

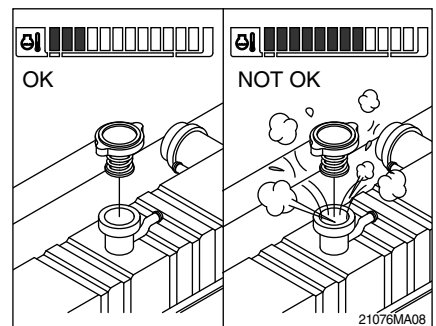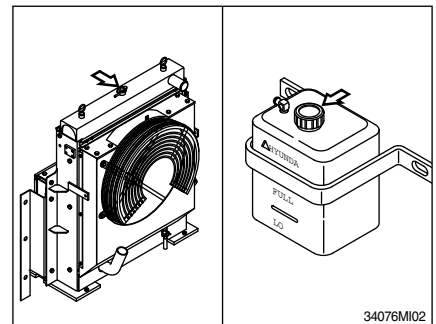

4) FLUSHING AND REFILLING OF RADIATOR

(1) Change coolant

▲ Avoid prolonged and repeated skin contact with used antifreeze. Such prolonged repeated contact can cause skin disorders or other bodily injury.


Avoid excessive contact-wash thoroughly after contact.

Keep out of reach of children.

※ Protect the environment : Handling and disposal of used antifreeze can be subject to federal, state, and local law regulation.

Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for the receipt of used antifreeze.

If in doubt, contact your local authorities for guidance as to proper handling of used antifreeze.

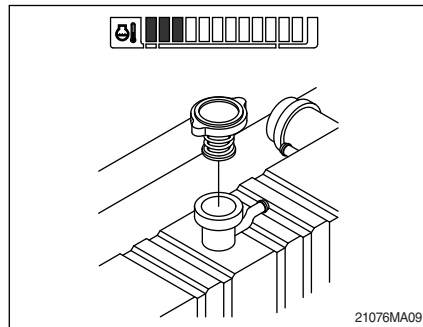


(2) Flushing of cooling system

① Fill the system with a mixture of sodium carbonate and water(or a commercially available equivalent).


※ Use 0.5kg(1.0pound) of sodium carbonate for every 23 liters(6.0U.S. gallons) of water.

※ Do not install the radiator cap. The engine is to be operated without the cap for this process.

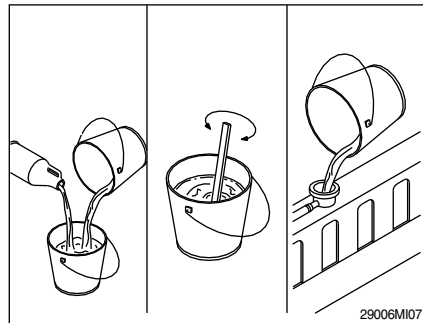


② Operate the engine for 5 minutes with the coolant temperature above 80°C (176°F) .


Shut the engine off, and drain the cooling system.

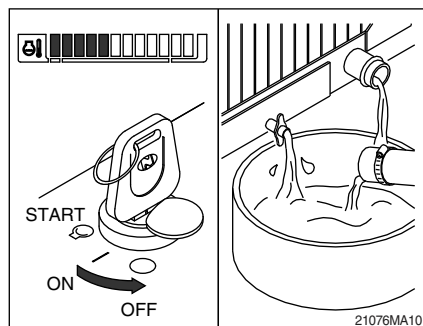

- ③ Fill the cooling system with clean water.
- ※ **Be sure to vent the engine and aftercooler for complete filling.**
 - ※ **Do not install the radiator cap or the new coolant filter.**

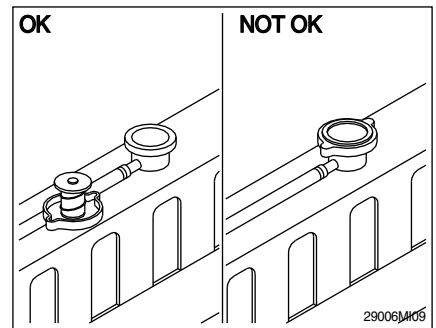


- ④ Operate the engine for 5 minutes with the coolant temperature above 80°C(176°F) . Shut the engine off, and drain the cooling system.
- ※ **If the water being drained is still dirty, the system must be flushed again until the water is clean.**

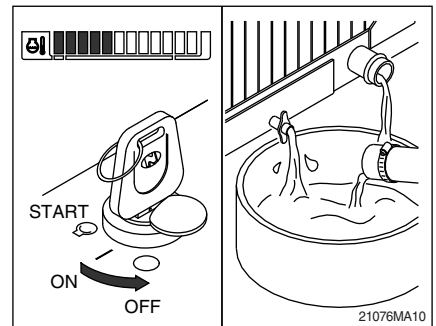


(3) Cooling system filling

- ① Use a mixture of 50 percent water and 50 percent ethylene glycol antifreeze to fill the cooling system.
- ※ **Use the correct amount of DCA4 corrosion inhibitor to protect the cooling system.**

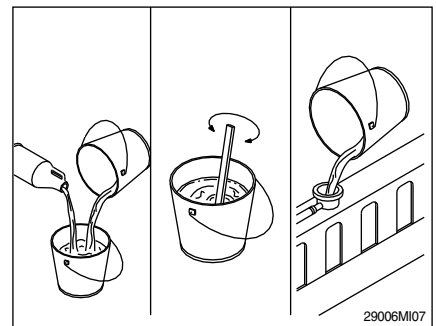



- ② Install the pressure cap. Operate the engine until it reaches a temperature 80°C(176°F), and check for coolant leaks. Check the coolant level again to make sure the system is full of coolant.

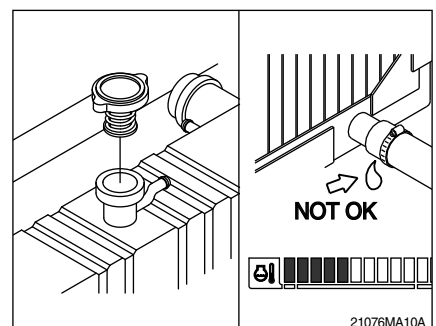

5) CLEAN RADIATOR AND OIL COOLER


Check, and if necessary, clean and dry outside of radiator and oil cooler. After working in a dusty place, clean radiator more frequently.

- (1) Visually inspect the radiator for clogged radiator fins.
- (2) Use 550kPa(80psi) air pressure to blow the dirt and debris from the fins.
Blow the air in the opposite direction of the fan air flow.
- (3) Visually inspect the radiator for bent or broken fins.
※ **If the radiator must be replaced due to bent or broken fins which can cause the engine to overheat, refer to the manufacturer's replacement procedures.**
- (4) Visually inspect the radiator for core and gasket leaks.

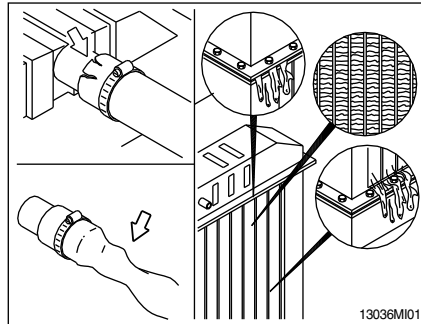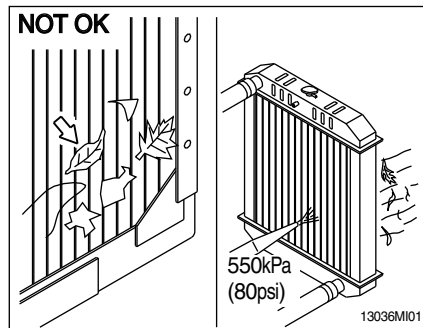

6) CHECK CHARGE AIR COOLER

- (1) Inspect the charge air cooler for dirt and debris blocking the fins. Check for cracks, holes, or other damage. If damage is found, please contact Hyundai distributor.

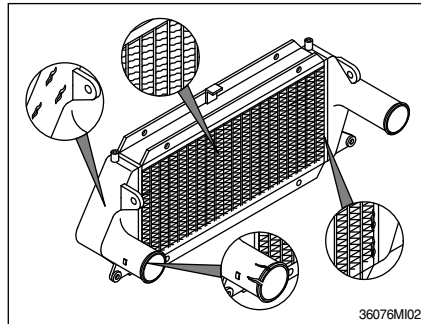


7) CLEANING OF AIR CLEANER

(1) Primary element

- ① Loosen the wing nut and remove the element.
 - ② Clean the inside of the body.
 - ③ Clean the element with pressurized air.
 - Remove the dust inside of the element by the pressurized air (Below 3kgf/cm^2 , 40psi) forward and backward equally.
 - ④ Inspect for cracks or damage of element by putting a light bulb inside of the element.
 - ⑤ Insert element and tighten wing nut.
- ※ **Replace the primary element after 4 times cleanings.**


(2) Safety element

- ※ **Replace the safety element only when the primary element is cleaned for the 4 times.**
- ※ **Always replace the safety element. Never attempt to reuse the safety element by cleaning the element.**

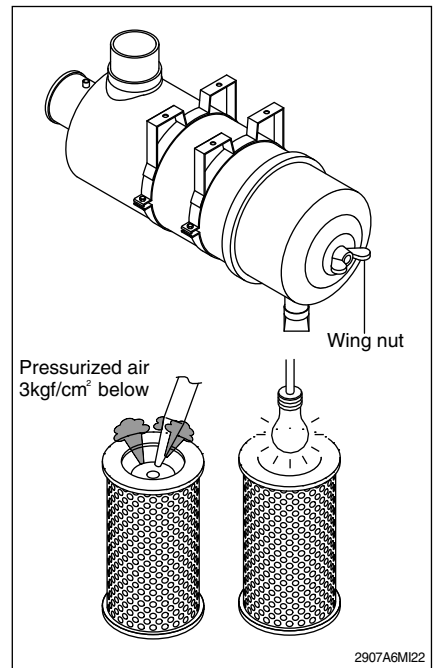


8) FAN BELT TENSION

- (1) Measure the belt deflection at the longest span of the belt.
 - Maximum deflection : 10- 15mm (3/8 to 1/2inch)
- ※ **Adjust the belt tension so that the middle of the belt is pressed strongly, the belt deflection will be up to specification.**
- ※ **Slightly loosen the alternator mounting bolt and adjusting plate mounting bolt and move the alternator to right and left to adjust the tension.**

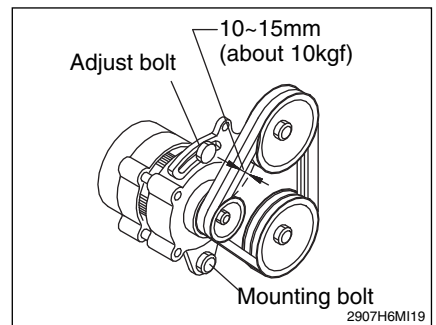

- (2) Inspect the drive belt, tension bearing and fan hub.

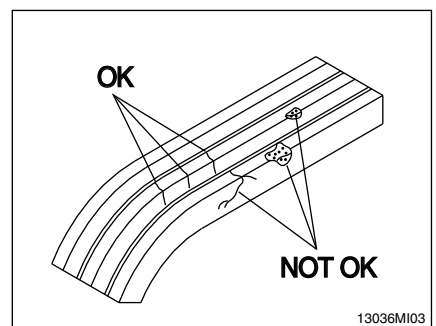

9) INSPECTION OF COOLING FAN


⚠ Personal injury can result from a fan blade failure. Never pull or pry on the fan. This can damage the fan blade and cause fan failure.

※ Rotate the crankshaft by using the engine barring gear.

※ A visual inspection of the cooling fan is required daily.

Check for cracks, loose rivets, and bent or loose blades.

Check the fan to make sure it is securely mounted. Tighten the capscrews if necessary. Replace any fan that is damaged.

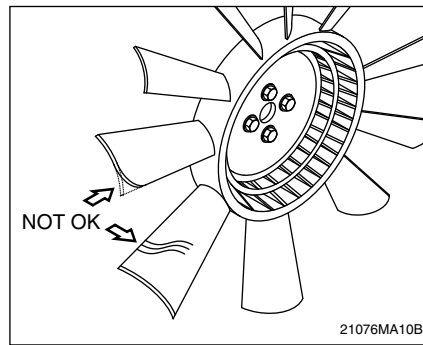

10) FUEL TANK

(1) Fill fuel fully when system the operation to minimize water condensation, and check it with fuel gauge before starting the machine.


(2) Drain the water and sediment in the fuel tank by opening the drain cock.

※ **Be sure to LOCK the cap of fuel tank.**

※ **Remove the strainer of the fuel tank and clean it if contaminated.**

⚠ **Stop the engine when refueling.**

All lights and flames shall be kept at a safe distance while refueling.

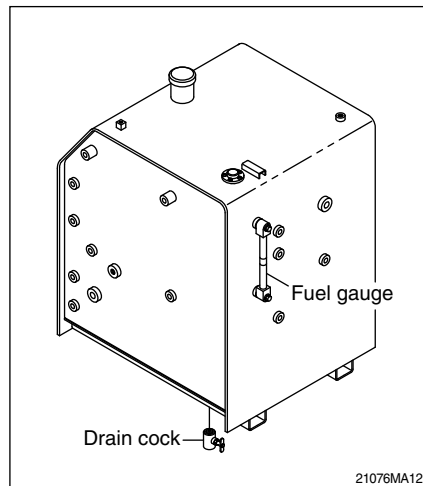


11) PREFILTER

- ※ Inspect or drain the collection bowl of water daily and replace the element every 500 hours.


(1) Drain water

- ① Open bowl drain valve to evacuate water.
- ② Close drain valve.

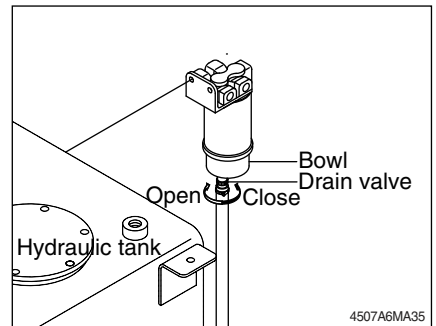


(2) Replace element

- ① Drain the unit of fuel. Follow "Drain water" instructions above.
- ② Remove element / bowl from filter head.
 - ※ The bowl is reusable, do not damage or discard.
- ③ Separate element from bowl. Clean bowl and seal gland.

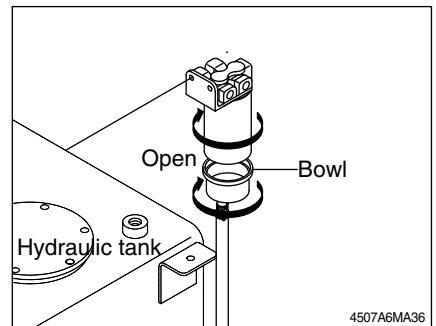


- ④ Lubricate new bowl seal with clean fuel or motor oil and place in bowl gland.
- ⑤ Attach bowl to new element firmly by hand.
- ⑥ Lubricate new element seal and place in element top gland.
- ⑦ Attach the element and bowl to the head.

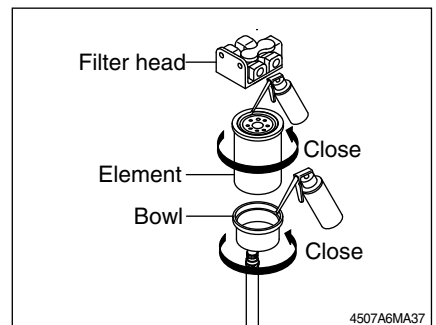


12) REPLACEMENT OF FUEL FILTER

- (1) Clean around the filter head, remove the filter and clean the gasket surface.
- (2) Replace the O-ring.
- (3) Fully fill fuel in the new filter.
- (4) Apply engine oil on the gasket of filter when mounting, and tighten 3/4 to 1 turn more after the gasket touches the filter head.
- (5) Relieve the air after mounting.
 - ※ **Check for fuel leakage after the engine starts.**
 - ※ **If air is in the fuel system, the engine will not start. Start engine after bleeding the air according to the method of bleeding air.**

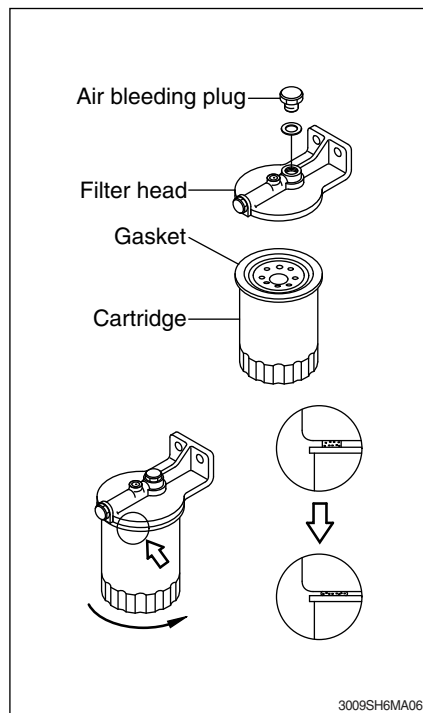


13) BLEEDING THE FUEL SYSTEM

- (1) Loosen the air bleeding plug of fuel filter.
- (2) Turn the priming pump to the counterclockwise and operate up and down until the fuel flowing from the plug is free of air.
- (3) Tighten the air bleeding plug.
- (4) Loosen the air bleeding plug of fuel injector pump.
- (5) Operate the priming pump up and down until the fuel flowing from the plug is free of air and then tight the air bleeding plug quickly.
- (6) Tighten the priming pump with pressing.
- (7) Start the starting motor to allow entrapped air to bleed from the lines.
 - ※ **Clean fuel as leaked or drained on the fuel system.**

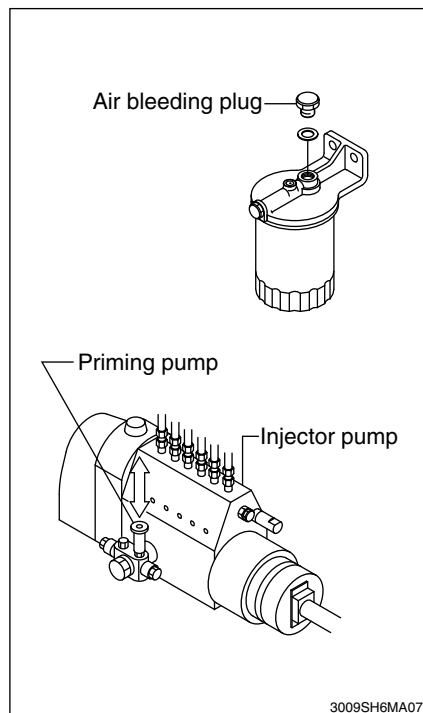


14) LEAKAGE OF FUEL

⚠ Be careful and clean the fuel hose, injection pump, fuel filter and other connections as the leakage from these part can cause fire.

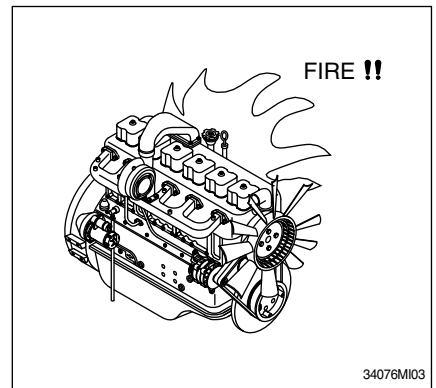


15) HYDRAULIC OIL CHECK

- (1) Stop the engine after retract the arm and bucket cylinders, then lower the boom and set the bucket on the ground at a flat location as in the illustration.
- (2) Check the oil level at the level gauge of hydraulic oil tank.
- (3) The oil level is normal if between the red lines.

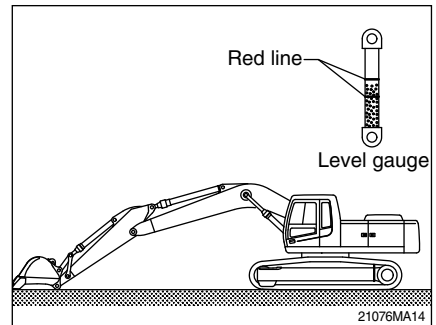


16) FILLING HYDRAULIC OIL

- (1) Stop the engine to the position of level check.
- (2) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- (3) Remove the breather on the top of oil tank and fill the oil to the specified level.
- (4) Start engine after filling and operate the work equipment several times.
- (5) Check the oil level at the level check position after engine stops.

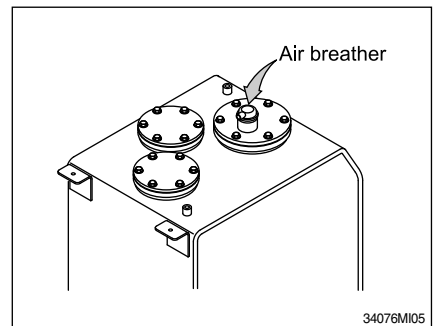

17) CHANGE HYDRAULIC OIL


- (1) Lower the bucket on the ground pulling the arm and bucket cylinder to the maximum.
- (2) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- (3) Remove the cover.
 - Tightening torque : $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$
($50 \pm 10 \text{ lbf} \cdot \text{ft}$)
- (4) Prepare a suitable container.
- (5) To drain the oil loosen the drain plug at the bottom of the oil tank.
- (6) Fill proper amount of recommended oil.
- (7) Put the breather in the right position.
- (8) Bleed air hydraulic pump loosen the air breather at top of hydraulic pump assembly.**
- (9) Start engine and run continually. Release the air by full stroke of each control lever.

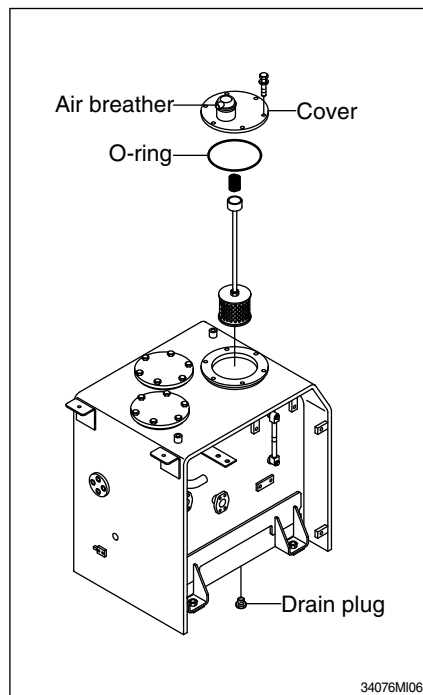

18) CLEAN SUCTION STRAINER

Clean suction strainer as follows paying attention to the cause to be kept during oil filling.


- (1) Remove the cover.
 - Tightening torque : $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$
($50 \pm 10 \text{ lbf} \cdot \text{ft}$)
 - (2) Pull out the strainer in the tank.
 - (3) Wash the foreign material on the suction strainer with gasoline or cleaning oil.
 - (4) Replace the suction strainer if it is damaged.
 - (5) Assemble with reverse order of disassembly.
Be sure to install a new O-ring and reinsert in the oil tank.
- ※ **Loosen the bolt slowly at the cover can be spring out by the spring when removing it.**

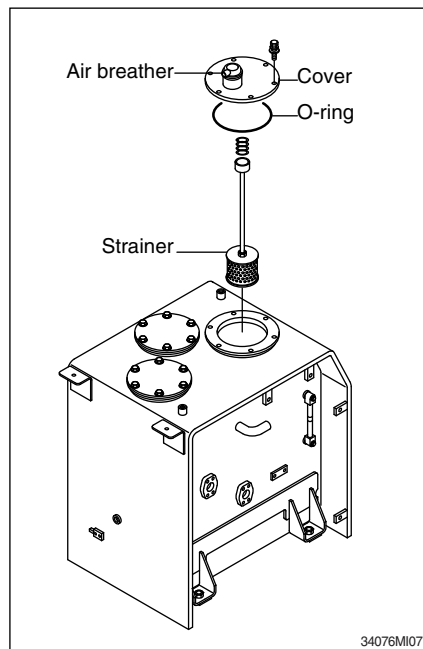

19) REPLACEMENT OF RETURN FILTER


Replace as follows paying attention to the cause to be kept during the replacement.

- (1) Remove the cover.
 - Tightening torque : $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$
($50 \pm 10 \text{ lbf} \cdot \text{ft}$)
- (2) Remove the spring, by-pass valve, and return filter in the tank.
- (3) Replace the element with new one.

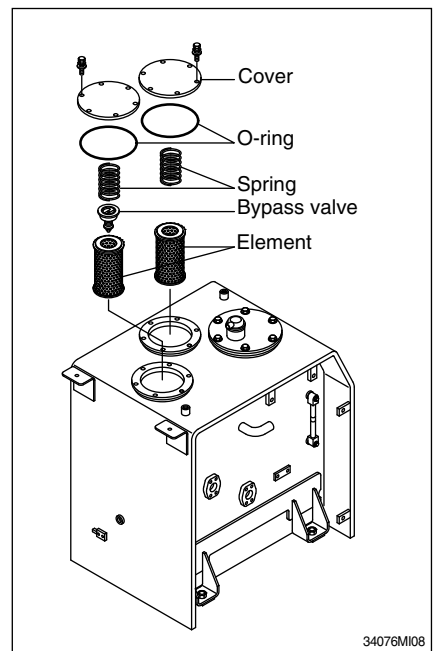

20) REPLACEMENT OF ELEMENT IN HYDRAULIC TANK BREATHER


- (1) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- (2) Loosen the lock nut and remove the cover.
- (3) Pull out the filter element.
- (4) Replace the filter element new one.
- (5) Reassemble by reverse order of disassembly.
 - Tightening torque : $0.2 \sim 0.3 \text{ kgf} \cdot \text{m}$
($1.4 \sim 2.1 \text{ lbf} \cdot \text{ft}$)

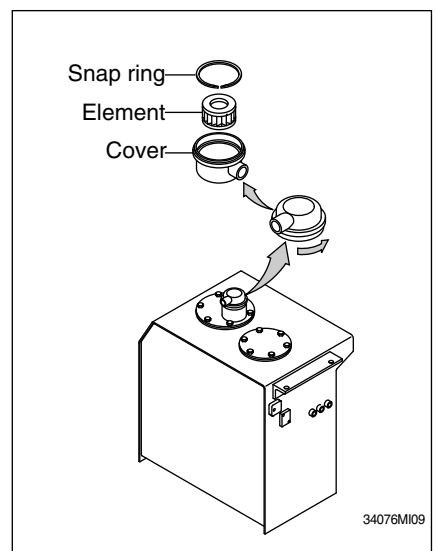

21) REPLACE OF DRAIN FILTER CARTRIDGE


Clean the dust around filter and replace with new one after removing the cartridge.

- ※ **Tighten about 2/3 turn more after the gasket of cartridge contacts seal side of filter body for mounting.**
- ※ **Change cartridge after initial 50 hours of operation. Thereafter, change cartridge every 250 hours.**

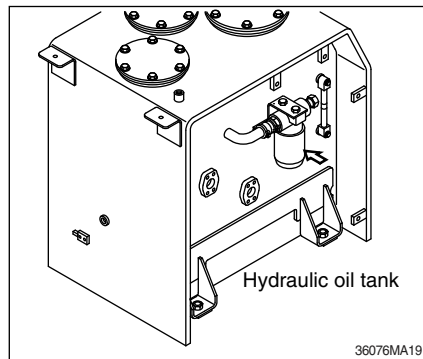


22) REPLACE OF PILOT LINE FILTER

- (1) Loosen the nut positioned on the filter body.
 - (2) Pull out the filter element and clean filter housing.
 - (3) Install the new element and tighten using specified torque.
- ※ **Change cartridge after initial 50 hours of operation. Thereafter, change cartridge every 1000 hours.**

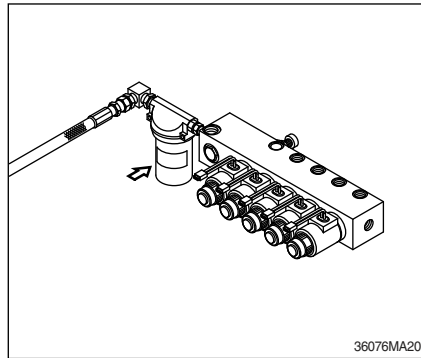


23) CHECK THE SWING REDUCTION GEAR OIL

- (1) Pull out the dipstick and clean it.
- (2) Insert it again.
- (3) Pull out one more time to check the oil level and fill the oil if the level is not sufficient.

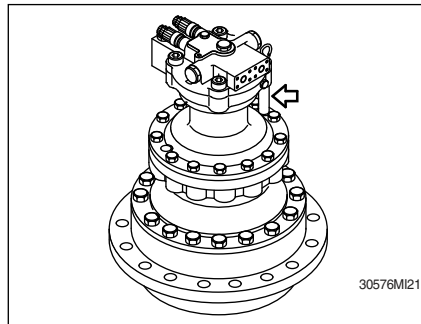


24) CHANGE SWING REDUCTION GEAR OIL

- (1) Raise the temperature of oil by swinging the machine before replace the oil and park the machine on the flat ground.
 - (2) Loosen the plug of the drain port.
 - (3) Drain into a proper container.
 - (4) Wash the drain plug and reinstall it with sealing tape.
- Fill proper amount of recommended oil.
- Amount of oil : 11.0 l (2.9U.S.gal)

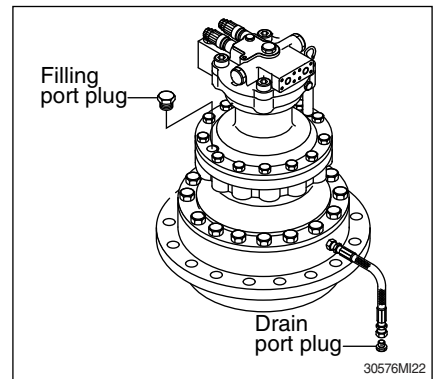


25) LUBRICATE BEARING OF OUTPUT SHAFT IN REDUCTION GEAR

- (1) Remove air vent plug.
 - (2) Lubricate NLGI No.2 with grease gun until comes out new grease from air vent port.
- ※ **Lubricate every 1000 hours.**

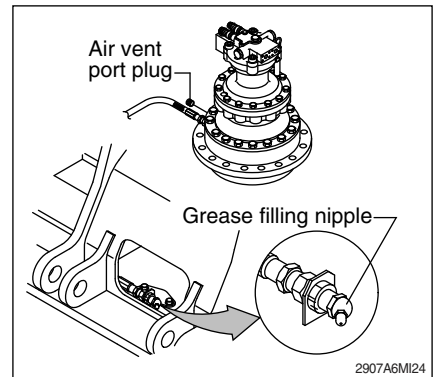

26) LUBRICATE SWING BEARING


- (1) Grease at 3 fitting.
- ※ **Lubricate every 50 hours.**

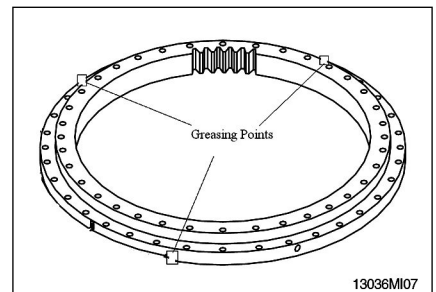

27) SWING GEAR AND PINION


(1) Drain old grease

- ① Remove under cover of lower frame.
- ② Remove drain cover of lower frame.
- ③ Remove filler cover of upper frame.
- ④ Operate full turn(360°) of swing several times.

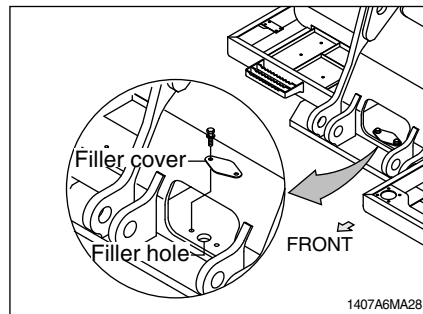


(2) Refill new grease

- ① Install drain cover.
- ② Fill with new grease.
- ③ Install filler cover.
 - Capacity : 11.5kg(25.4lb)

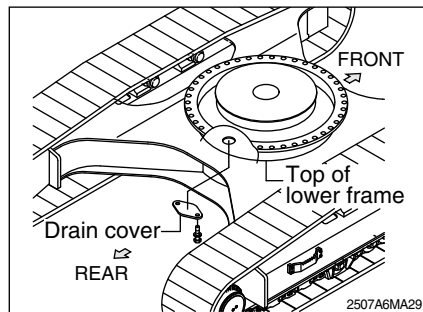


28) CHECK THE TRAVEL REDUCTION GEAR OIL

- (1) Operate the machine to the position of drain plug down to the flat ground.
- (2) Loosen the level plug and check the oil level.
If the level is at the hole of the plug, it is normal.
Fill the oil if it is not sufficient.

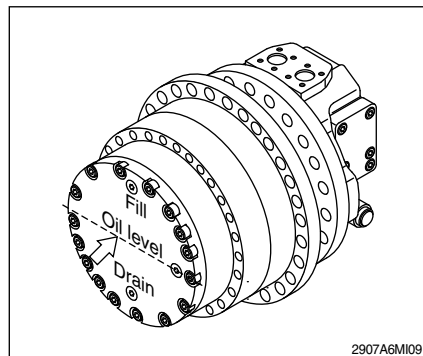


29) CHANGE OF THE TRAVEL REDUCTION GEAR OIL

- (1) Raise the temperature of the oil by traveling machine first.
- (2) Stop when the position of the drain plug is down.
- (3) Loosen the level plug and then the drain plug.
- (4) Drain the oil to adequate container.
- (5) Tighten the drain plug and fill specified amount of oil at filling port.
- (6) Tighten the level plug and travel slowly to check if there is any leakage of oil.

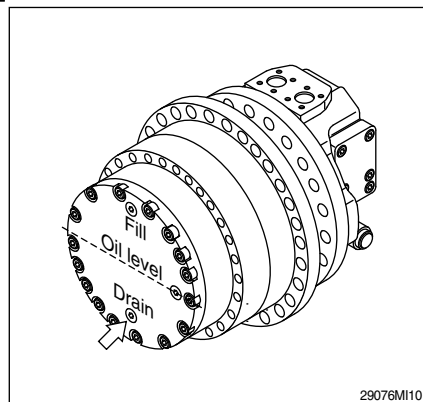

30) LUBRICATE RCV LEVER


Remove the bellows and with a grease gun grease the joint part(A) and sliding parts(B).

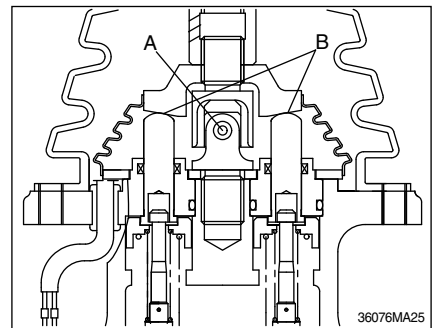

31) ADJUSTMENT OF TRACK TENSION

- ※ It is important to adjust the tension of track properly to extend the lifetime of track and traveling device.
- ※ The wear of pins and bushings on the undercarriage will vary with the working conditions and soil properties.
It is thus necessary to continually inspect the track tension so as to maintain the standard tension on it.

- (1) Raise the chassis with the boom and arm.
- (2) Measure the distance between bottom of track frame on track center and track of shoe.
- ※ Remove mud with rotating the track before measuring.

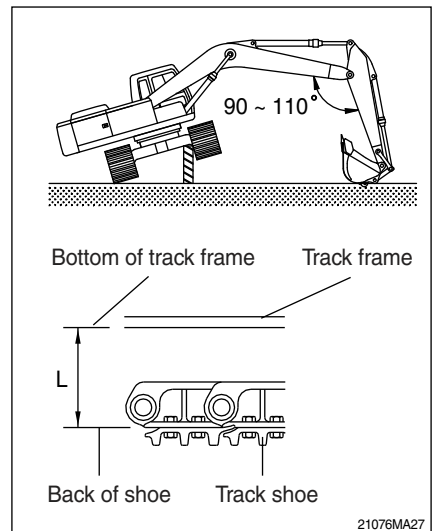

- (3) If the tension is tight, drain the grease in the grease nipple and if the tension is loose, charge the grease.

⚠ Personal injury or death can result from grease under pressure.

⚠ When loosening the grease nipple, do not loosen more than one turn as there is a danger of a spring coming out of the nipple because of the high pressure inside.

- ※ When the grease is drained, move the track to the forward and backward slightly.
If the track tension is loose even after the grease is charged to the maximum, change the pins and bushings as there are worn seriously.

| Working condition | Length(L) | |
|--------------------|-------------|-------------|
| General | 360~390mm | 14.2~15.4" |
| Swamp | 390~430mm | 15.4~16.9" |
| Sand, Mud, pebbles | About 430mm | About 16.9" |

32) REPLACEMENT OF BUCKET

⚠ When knocking the pin in with a hammer, metal particles may fly and cause serious injury, particularly if they get into your eyes. When carrying out this operation, always wear goggles, helmet, gloves, and other protective equipment.

- ※ When the bucket is removed, place it in a stable condition.
- ※ When performing joint work, make sure signals to each other and work carefully for safety's sake.

(1) Lower the bucket on the ground as the picture shown in the right.

(2) Lock the safety lever to the LOCK position and stop the engine.

(3) Remove the stopper bolts(1) and nuts(2), then remove pins(3, 4) and remove the bucket.

※ When removing the pins, place the bucket so that it is in light contact with the ground.

※ If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.





※ After remove the pins, make sure that they do not become contaminated with sand or mud and that the seals of bushing on both sides do not become damaged.

(4) Align the arm with holes(A) and the link with holes(B), then coat with grease and install pins(3, 4)

※ When installing the bucket, the O-rings are easily damaged, so fit the O-rings on the boss of the bucket as shown in the picture.

After knocking the pin, move the O-ring down to the regular groove.


(5) Install the stopper bolt(1) and nuts(2) for each pin, then grease the pin.

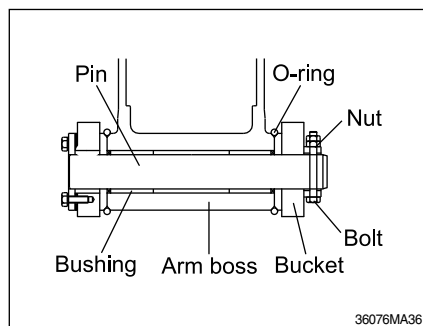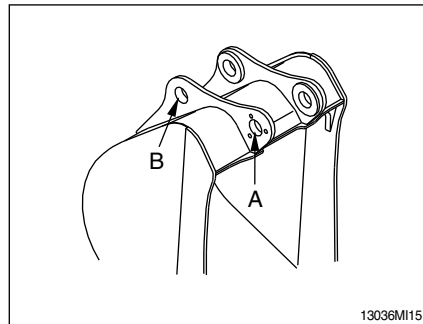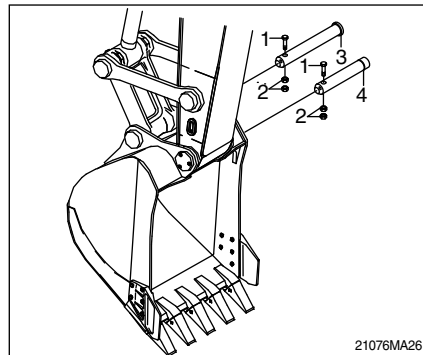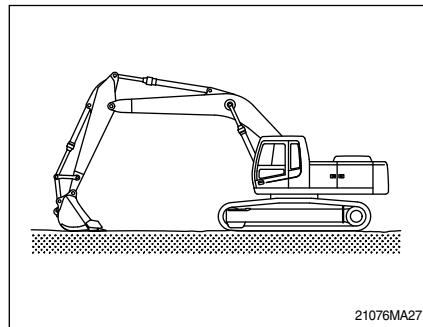

33) REPLACEMENT OF BUCKET TOOTH

(1) Timing of replacement

- ① Check wearing condition as shown in the illustration and replace tooth tip before adapter starts to wear.
- ② If excessive use, tooth adapter has worn out, replacement may become impossible.

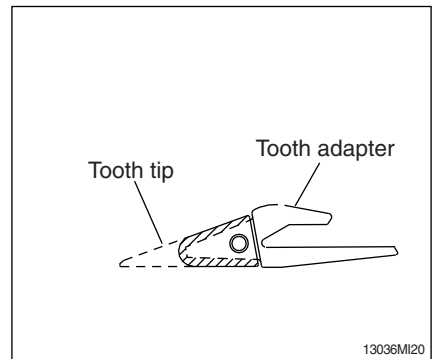


(2) Instructions for replacement

- ① Pull out pin by striking pin with punch or hammer, avoiding damage to locking washer.
- ② Remove dust and mud from surface of tooth adapter by using knife.
- ③ Place locking washer in its proper place, and fit tooth tip to adapter.
- ④ Insert pin until locking washer is positioned at tooth pin groove.

⚠ **Personal injury can result from bucket falling.**

⚠ **Block the bucket before changing tooth tips or side cutters.**

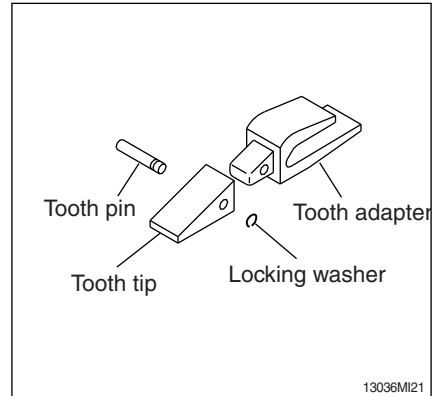


34) ADJUSTMENT OF BUCKET CLEARANCE

- (1) Lower the bucket on the ground as the picture shown in the right.
- (2) Swing to the right and keep the arm boss to be contact to the bucket right.
- (3) Lock the safety lever to the LOCK position and stop the engine.
- (4) Measure the clearance(A) between bucket and arm boss. This is the total clearance.

(5) Adjusting

- ① Loosen bolt(2), and remove washer(3), plate(1) and shim(4).
- ② Remove the shim equivalent value with measuring value.
- ③ Assemble the parts in the reverse order of removal.
 - Tightening torque : $29.6 \pm 3.2 \text{ kgf} \cdot \text{m}$
($214.0 \pm 23.1 \text{ lbf} \cdot \text{ft}$)
 - Normal clearance : $0.5 \sim 1.0 \text{ mm}$
($0.02 \sim 0.04 \text{ in}$)

※ If the bucket is not adjusted correctly, noise and vibration created during operation, and damaged O-ring, pin and bushing quickly.

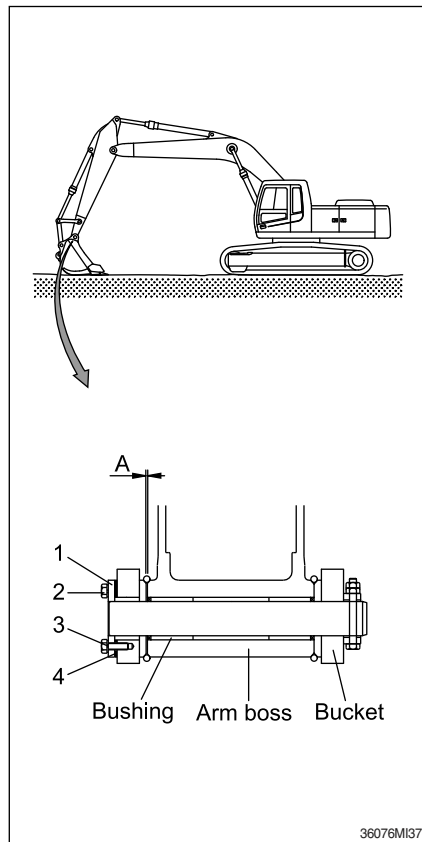


35) LUBRICATE PIN AND BUSHING

(1) Lubricate to each pin of working device

Lubricate the grease to the grease nipple according to the lubricating interval.


| No. | Description | Qty |
|-----|-------------------------------------|-----|
| 1 | Boom and upper frame connection pin | 1 |
| 2 | Lubrication manifold at boom | 5 |
| 3 | Boom cylinder pin | 2 |
| 4 | Boom and arm connection pin | 1 |
| 5 | Arm cylinder pin(Rod side) | 1 |
| 6 | Bucket cylinder pin(Head, rod) | 2 |
| | Bucket link(Control rod) | 3 |
| | Arm and bucket connection pin | 1 |
| | Arm and control link connection pin | 1 |

※ **Shorten lubricating interval when working in the water or dusty place.**

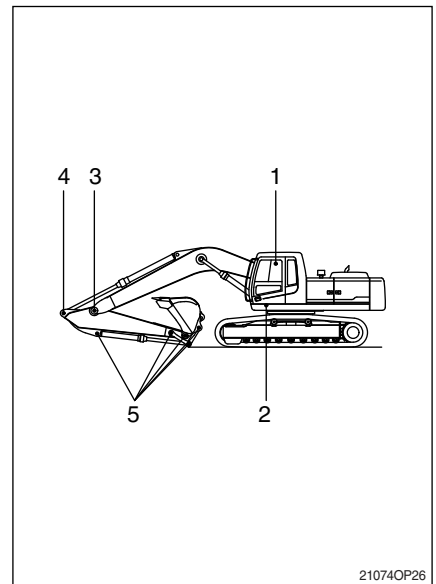


(2) Dust seals are mounted on the rotating part of working device to extend the lubricating interval.

※ **Mount the lip to be faced outside when replace the dust seal.**

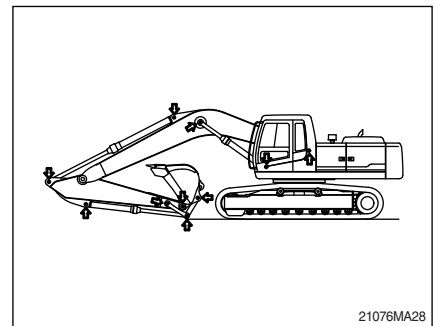

※ **If it is assembled in wrong direction, it will cause fast wear of pin and bushing, and create noise and vibration during operation.**


※ **Assemble the seal same direction with picture and use with plastic hammer when replace.**

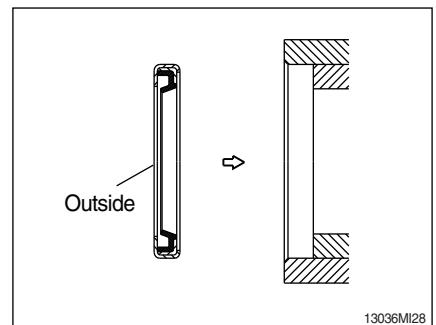

7. ELECTRICAL SYSTEM

1) WIRING, GAUGES

Check regularly and repair loose or malfunctioning gauges when found.

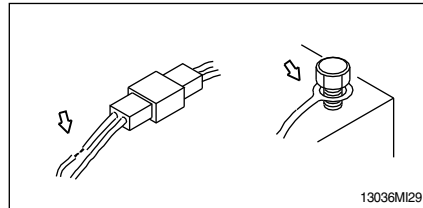

2) BATTERY

(1) Clean

- ① Wash the terminal with hot water if it is contaminated, and apply grease to the terminals after washing.


⚠ Battery gas can explode. Keep sparks and flames away from batteries.

⚠ Always wear protective glasses when working with batteries.

⚠ Do not stain clothes or skin with electrolyte as it is acid.

Be careful not to get the electrolyte in eyes.

Wash with clean water and go to the doctor if it enters the eyes.

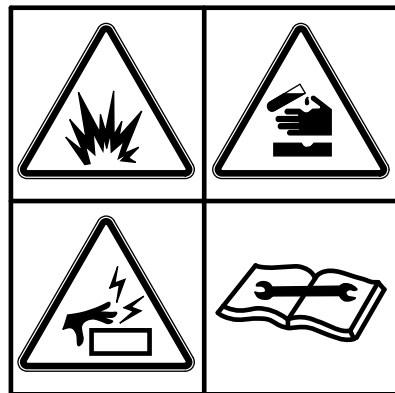

(2) Recycle


Never discard a battery.

Always return used batteries to one of the following locations.

- A battery supplier
- An authorized battery collection facility
- Recycling facility

(3) Method of removing the battery cable

Remove the cable from the ground connection first (⊖ terminal side) and reconnect it last when reassembling.

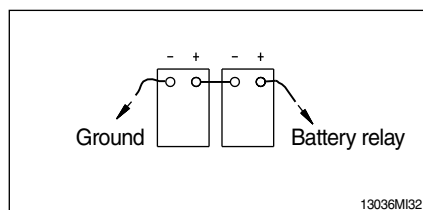


3) STARTING THE ENGINE WITH A BOOSTER CABLE

Keep following order when you are going to start engine using booster cable.


(1) Connection of booster cable

- ※ **Use the same capacity of battery for starting.**
- ① Make sure that the starting switches of the normal machine and trouble machine are both at the OFF position.
- ② Connect the red terminal of booster cable to the battery (+) terminal between exhausted and new battery.
- ③ Connect the black terminal of the booster cable between new battery (-) terminal and chassis of trouble machine.
- ※ **Keep firmly all connection, the spark will be caused when connecting finally.**

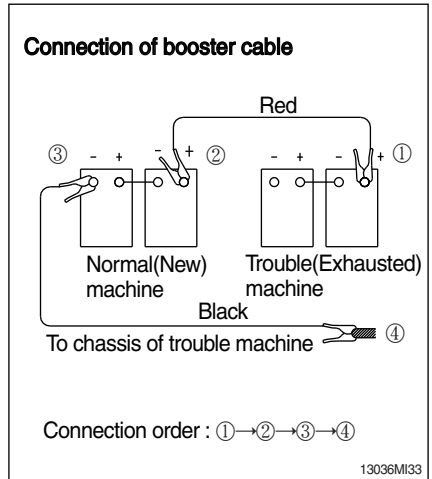


(2) Starting the engine

- ① Starting the engine of the normal machine and keep it to run at high idle.
- ② Start engine of the trouble machine with starting switch.
- ③ If you can not start it by one time, restart the engine after 2 minutes.

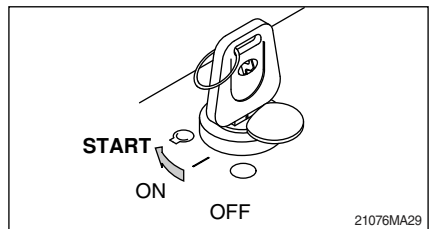

(3) Taking off the booster cable

- ① Take off the booster cable(black).
- ② Take off the booster cable(red) connected to the (+) terminal.
- ③ Run engine with high idle until charging the exhausted battery by alternator, fully.
- ▲ **Explosive gas is generated while using the battery or charging it. Keep away flame and be careful not to cause the spark.**
- ※ **Charge the battery in the well ventilated place.**
- ※ **Place the machine on the earth or concrete. Avoid charging the machine on the steel plate.**
- ※ **Do not connect (+) terminal and (-) terminal when connecting booster cable because it will be shorted.**

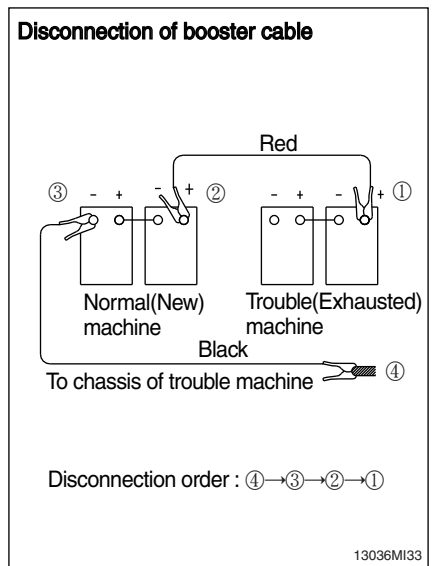

(4) Welding repair


Before start to welding, follow the below procedure.

- ① Shut off the engine and remove the starting switch.
- ② Disconnect ground cable from battery by master switch.
- ③ Before carrying out any electric welding on the machine, the battery cables should be disconnected and the connectors pulled out of the electronic control units(MCU, cluster etc).
- ④ Connect the earth(ground) lead of the welding equipment as close to the welding point as possible.

※ **Do not weld or flame cut on pipes or tubes that contain flammable fluids. Clean them thoroughly with nonflammable solvent before welding or flame cutting on them.**

⚠ **Do not attempt to welding work before carry out the above.**

If not, it will caused serious damage at electric CAPO system.

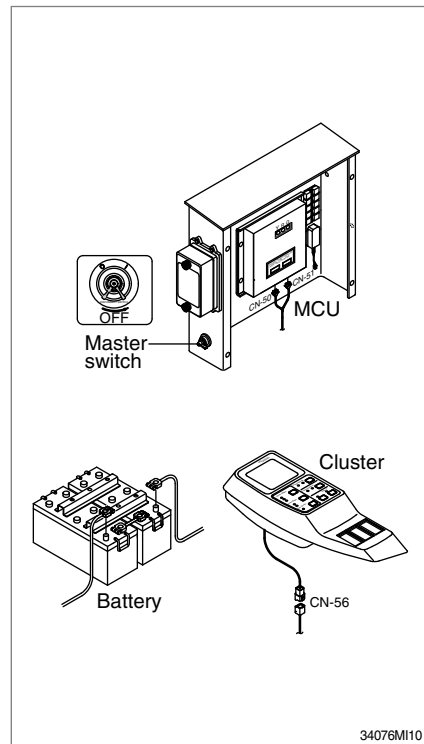


8. AIR CONDITIONER

1) CLEAN AND REPLACE OF OUTER FILTER


※ **Always stop the engine before servicing.**

- (1) Move seat and console box to arrow direction using the adjust lever.

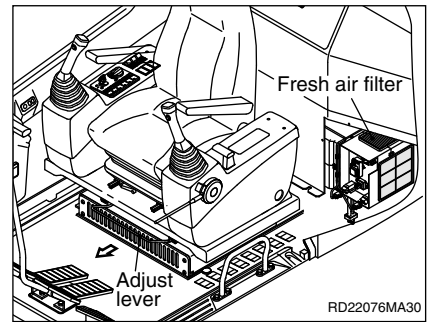

- (1) Remove the outer filter.


※ **When installing a filter, be careful not to change the filter direction.**

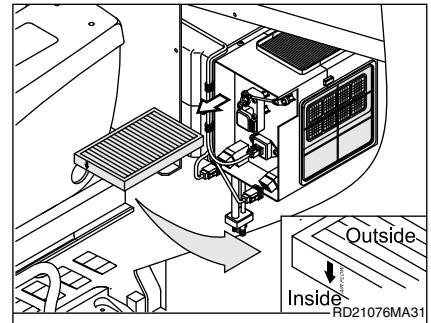

- (3) Clean the filter using a pressurized air (Below 2kgf/cm^2 , 28psi).

△ **When using pressurized air, be sure to wear safety glasses.**


- (4) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

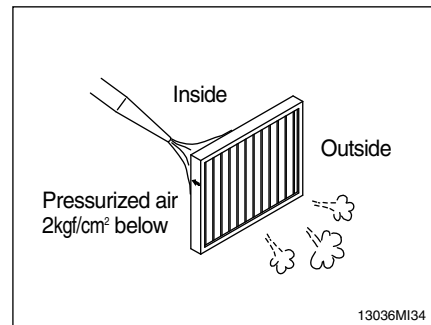


2) CLEAN AND REPLACE OF INNER FILTER

※ **Always stop the engine before servicing.**

- (1) Move seat and console box to arrow direction using the adjust lever.

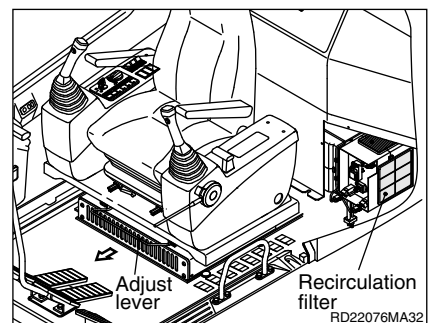

- (2) Remove recirculation filter.

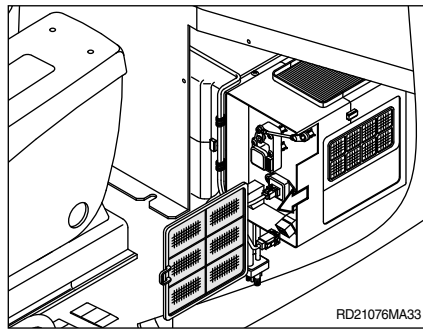


- (3) Clean the recirculation filter using a pressurized air (Below 2kgf/cm^2 , 28psi) or washing with water.

△ **When using pressurized air, be sure to wear safety glasses.**

※ **Dry off after washing with water.**

- (4) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

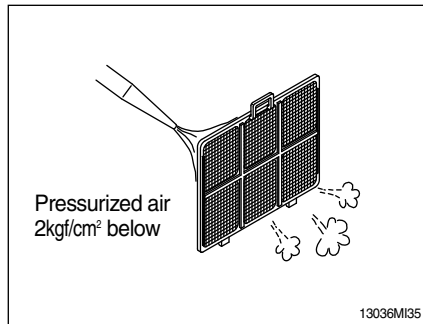

3) PRECAUTIONS FOR USING AIR CONDITIONER


- (1) When using the air conditioner for a long time, open the window once every one hour.
- (2) Be careful not to overcool the cab.
- (3) The cab is properly cooled if the operator feels cool when entering there from outside (About 5°C lower than the outside temperature).
- (4) When cooling, change air occasionally.

4) CHECK DURING SEASON

Ask the service center for replenishment of refrigerant or other maintenance service so that the cooling performance is not damaged.

5) CHECK DURING OFF-SEASON

Operate the air conditioner 2 or 3 times a month (Each for a few minutes) to avoid loss of oil film in the compressor.



TROUBLESHOOTING GUIDE

1. ENGINE

- ※ This guide is not intended to cover every conditions, however many of the more common possibilities are listed.
- ※ When fault codes(3digit) are displayed on the monitoring display, consult cummins for details.

| Trouble | Service | Remark |
|--|--|--------|
| The engine oil pressure lamp lights ON when engine speed is raised after completion of warm up. | <ul style="list-style-type: none"> • Add the oil to the specified level. • Replace the oil filter cartridge. • Check oil leakage from the pipe or the joint. • Replace the monitor. | |
| Steam is emitted from the top part of the radiator(The pressure valve). Coolant level warning lamp lights ON. | <ul style="list-style-type: none"> • Supply the coolant and check leakage. • Adjust fan belt tension. • Wash out inside of cooling system. • Clean or repair the radiator fin. • Check the thermostat. • Tighten the radiator cap firmly or replace the packing of it. • Replace the monitor. | |
| The engine does not start when the starting motor is turned over. | <ul style="list-style-type: none"> • Add fuel. • Repair where air is leaking into fuel system. • Check the injection pump or the nozzle. • Check the valve clearance. • Check engine compression pressure. | |
| Exhaust gas is white or blue. | <ul style="list-style-type: none"> • Adjust to specified oil quantity. • Replace with specified fuel. | |
| Exhaust gas occasionally turns black. | <ul style="list-style-type: none"> • Clean or replace the air cleaner element. • Check the nozzle. • Check engine compression pressure. • Clean or replace the turbocharger. | |
| Combustion noise occasionally changes to breathing sound. | <ul style="list-style-type: none"> • Check the nozzle. | |
| Unusual combustion noise or mechanical noise. | <ul style="list-style-type: none"> • Check with specified fuel. • Check over-heating • Replace the muffler. • Adjust valve clearance. | |

2. ELECTRICAL SYSTEM


| Trouble | Service | Remark |
|---|---|--------|
| Lamp does not glow brightly even when engine runs at high speed. Lamp flickers while engine runs. | <ul style="list-style-type: none"> • Check for loose terminals and open-circuit wiring. • Adjust belt tension. | |
| Battery charging lamp does not go out even when engine runs at high speed. | <ul style="list-style-type: none"> • Check the alternator. • Check and repair wiring. | |
| Unusual noise is emitted from the alternator. | <ul style="list-style-type: none"> • Check the alternator. | |
| Starting motor does not turn when starting switch is turned ON. | <ul style="list-style-type: none"> • Check and repair the wiring. • Charge the battery. • Check the starting motor. • Check the safety relay. | |
| The pinion of the starting motor keeps going in and out. | <ul style="list-style-type: none"> • Charge the battery. • Check the safety relay. | |
| Starting motor turns the engine sluggishly. | <ul style="list-style-type: none"> • Charge the battery. • Check the starting motor. | |
| The starting motor disengages before the engine starts up. | <ul style="list-style-type: none"> • Check and repair the wiring. • Charge the battery. | |
| The engine warming up lamp does not go ON. | <ul style="list-style-type: none"> • Check and repair wiring. • Check the monitor. | |
| The engine oil pressure lamp does not light up when engine is stationary(When the starting switch is in ON position.) | <ul style="list-style-type: none"> • Check the monitor. • Check the caution lamp switch. | |
| Battery charging lamp does not light up when the engine is stationary. (When the starting switch is in ON position.) | <ul style="list-style-type: none"> • Check the monitor. • Check and repair the wiring. | |

3. OTHERS

| Trouble | Service | Remark |
|---|--|--------|
| Track slip out of place. Excessive wear of the sprocket. | <ul style="list-style-type: none">Adjust tension of track. | |
| Bucket either rises slowly or not at all. | <ul style="list-style-type: none">Add oil to specified level. | |
| Slow speed of travel, swing, boom, arm and bucket. | <ul style="list-style-type: none">Add oil to specified level. | |
| Unusual noise emitted from pump. | <ul style="list-style-type: none">Clean the hydraulic tank strainer. | |
| Excessive oil temperature rise of hydraulic oil. | <ul style="list-style-type: none">Clean the oil cooler.Adjust fan belt tension.Add oil to specified level. | |

1. SELECTING HYDRAULIC BREAKER

- 1) Become familiar with the manual and select breakers suitable to machine specifications.
- 2) Make careful selection in consideration of oil quantity, pressure and striking force, to enable satisfied performance.
- 3) When apply a breaker to the machine, consult your local dealer of Hyundai for further explanation.



2. CIRCUIT CONFIGURATION

- 1) As for breaker oil pressure line, use extra spool of main control valve.
- 2) Set proper breaker pressure on load relief valve.
- 3) The pressure of the R340L system is 330kgf/cm²(4700psi).



4) Adjusting oil quantity

- (1) Use the breaker mode from work mode. Default oil flow quantity is 221lpm at 1750rpm. Use accel dial switch to control the oil flow quantity.
- (2) If the quantity of hydraulic oil is not controlled properly, it causes short lifecycle of the breaker and the machine by increased breaking force and count.

Oil quantity according to engine rpm

| Engine rpm | Oil flow l /min | Oil flow U.S.gpm |
|------------|-----------------|------------------|
| 1750 | 221 | 65.2 |
| 1650 | 208 | 61.8 |
| 1550 | 196 | 58.4 |
| 1450 | 183 | 55.0 |

※ Relief pressure : 200kgf/cm²

- 5) The accumulator should be used to the breaker charging and return line.
If the accumulator is not used, it will be damage as the input wave is delivered.
- 6) Do not connect the breaker return line to the main control, but connect to the return line front of the cooler.
- 7) Do not connect the breaker return line to drain lines, such as of swing motor, travel motor or pump, otherwise they should be damaged.
- 8) One of spool of the main control valve should be connected to the tank.
- 9) Select the size of pipe laying considering the back pressure.
- 10) Seamless tube should be used for the piping. The hose and seal should be used Hyundai genuine parts.
- 11) Weld the bracket for pipe clamp to prevent damage caused by vibration.

3. MAINTENANCE

1) MAINTENANCE OF HYDRAULIC OIL AND FILTER

- (1) As machine with an hydraulic breaker provides the hydraulic oil becomes severely contaminated.
- (2) So, unless frequently maintained, the machine may easily go out of order.
- (3) Inspect and maintain hydraulic oil and 4 kinds of filter elements in particular, in order to prolong machine life.
- (4) Replace when the breaker work is used for short time according to the standard of right graph.

2) RELEASE THE PRESSURE IN BREAKER CIRCUIT

When breaker operating is finished, stop engine and push pedal or switch for breaker to release pressure in breaker circuit.

If pressure still remains, the lifetime of the diaphragm in the accumulator will be shortened.

- 3) Be careful to prevent contamination by dust, sand and etc.
If such pollution become mixed into the oil, the pump moving parts will wear abnormally, shorten lifetime and become damaged.
- 4) When operating breaker, bolts and nuts of main equipment may be loosened by vibration. So, it must be inspected periodically.

Service interval


unit : hours

| Attachment | Operating rate | Hydraulic oil | Filter element |
|------------|----------------|---------------|----------------|
| Breaker | 100% | 600 | 100 |

● Replace following filter same time

- Hydraulic return filter : 2EA
- Pilot line filter : 1EA
- Element in hydraulic tank breather : 1EA
- Drain filter cartridge : 1EA

Oil change guide for hydraulic breaker

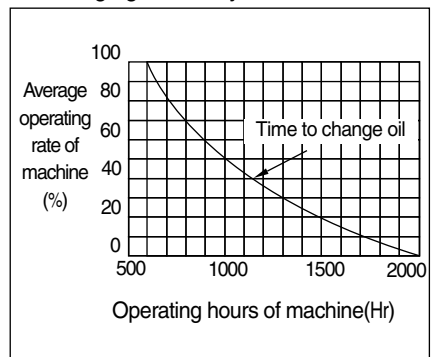


4. PRECAUTIONS WHILE OPERATING THE BREAKER

1) DO NOT BREAK ROCK WHILE LOWERING

As the breaker is heavy in comparison with bucket, it must be operated slowly.

If breaker is rapidly pushed down, working device may be damaged.

Incorrect

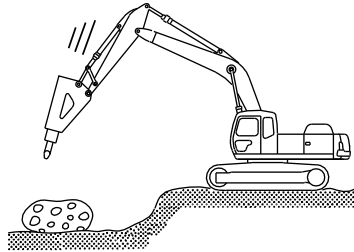


13038OA03

2) DO NOT USE BREAKER TO CARRY BROKEN STONE OR ROCK BY SWING OPERATING

This may damage the operation device and swing system.

Incorrect

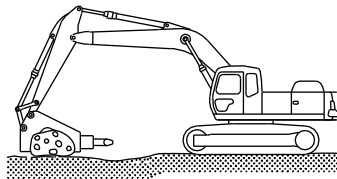


13038OA04

3) OPERATE BREAKER WITH A GAP IN EXCESS OF 100mm(4 inches) FROM THE END OF THE STROKE TIP

If breaker is operated with the end tip, the cylinder may be damaged.

Incorrect

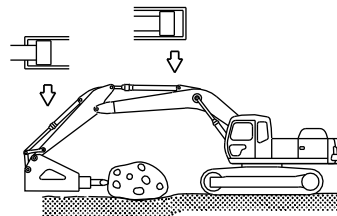


13038OA05

4) IF THE HYDRAULIC HOSES VIBRATE EXCESSIVELY

If the machine used in this condition continuously this will effect badly on the machine such as loosening bolt, oil leakage, damage of pump pipe and etc.


Incorrect

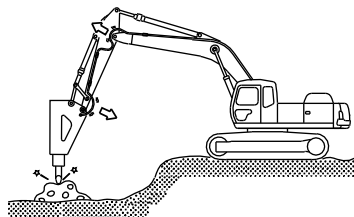

13038OA06

5) DO NOT CONTINUE TO WORKING OVER ONE MINUTE AT SAME POSITION OF BOOM AND ARM


This will increase the temperature of the oil, and cause problem in the accumulator and seals.

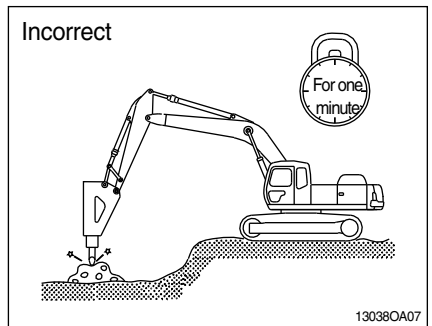

6) DO NOT MOVE MACHINE OR BREAKER WHILE STRIKING

Do not move hammer while striking.


This will cause damage to the working device and the swing system.

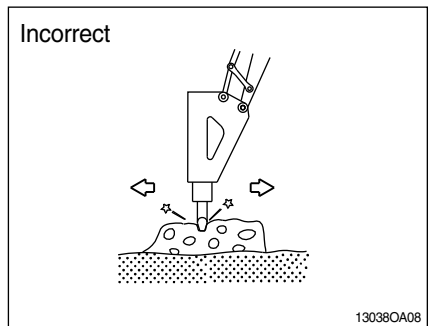

7) DO NOT WORK WHILE SWING STATE


Do not work while swing position of superstructure.

It cause the band of track shoe, oil leakage of roller.

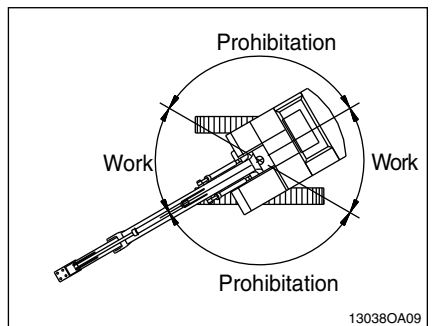

8) TAKE CARE OF CHISEL AND BOOM INTERFACE


Make sure of the arm and bucket control lever operation.

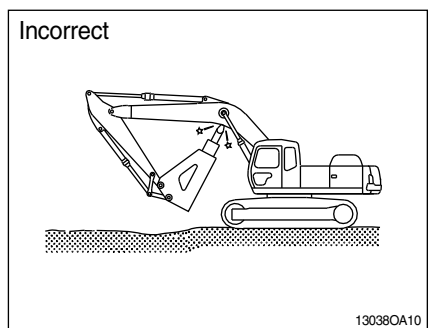


5. QUICK CLAMP

1) FIXING BUCKET WITH QUICK CLAMP


- (1) Before fixing bucket, remove safety pin of the moving hook.
- (2) Pulling safety button, press the quick clamp switch to unlock position. Then, the moving hook is placed on release position.

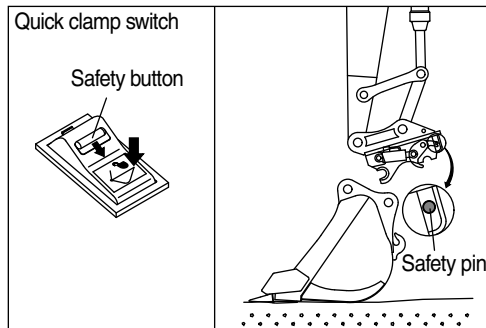


- (3) Aligning the arm and bucket, insert static hook of quick clamp to the bucket pin.

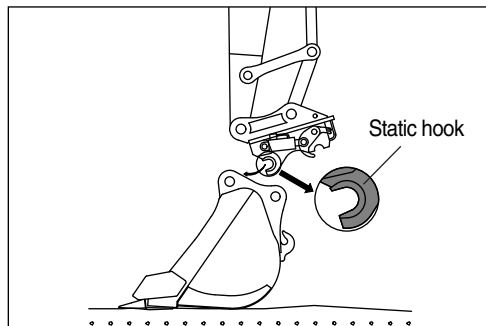


- (4) Operate RCV lever to bucket-in position. Then, the moving hook is coupled with the bucket link pin. Make sure that the moving hook is completely contacted with bucket link pin.

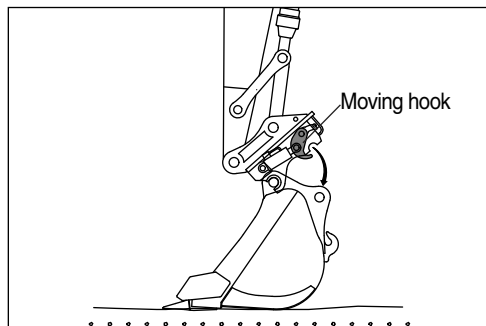

- (5) Press quick clamp switch to lock position. Operate RCV lever to bucket-in position.
- ※ **Be sure to check connection status between bucket pins and hooks of quick clamp**

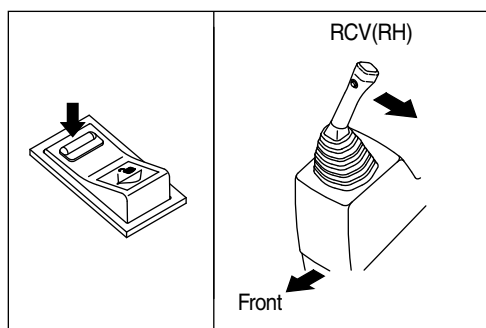

- (6) After checking the connection status between bucket pins and hooks of quick clamp, **insert safety pin of moving hook to lock position.**

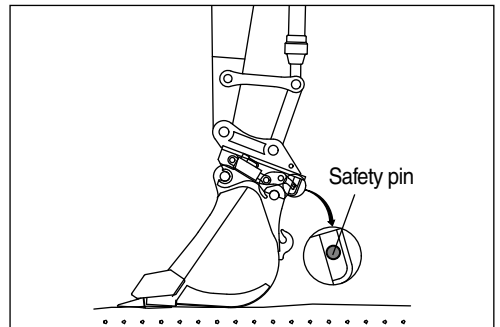

2) REMOVE BUCKET FROM QUICK CLAMP

Removing procedure is reverse of fixing.

3) PRE-CAUTION OF USING QUICK CLAMP



- ⚠ When operating the machine with quick clamp, confirm that the quick clamp switch is lock position and safety pin of moving hook is inserted.

Operating the machine with quick clamp switch unlocked and without safety pin of moving hook can cause the bucket to drop off and bring about the accident.

- ⚠ Serious injury or death can result from this accident.

- ⚠ Be careful to operate the machine equipped with quick clamp. The bucket may hit cab, boom and boom cylinders when it reaches vicinity of them.

- ※ HYUNDAI will not be responsible for any injury or damage in case that safety pin is not installed properly.

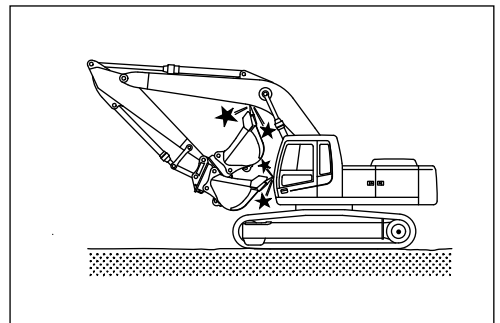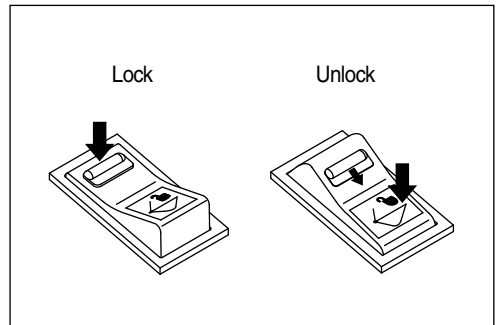

A

| | |
|------------------------------|------|
| Accel dial switch | 3-10 |
| After engine start | 4-4 |
| Air breather element | 6-29 |
| Air cleaner filter | 6-23 |
| Air conditioner | 3-16 |
| Air conditioner filter | 6-41 |
| Alternate exit | 0-11 |
| Attachment lowering | 4-25 |

B

| | |
|-----------------------------------|------|
| Battery | 6-38 |
| Before starting engine | 4-2 |
| Boom lowering | 4-25 |
| Bucket clearance adjustment | 6-36 |
| Bucket replacement | 6-34 |
| Bucket selection guide | 2-7 |
| Bucket tooth replacement | 6-35 |

C

| | |
|--|------|
| Cab air filter | 6-41 |
| Cab device | 3-1 |
| Cassette & radio | 3-23 |
| Changing machine control pattern | 4-28 |
| Cigar lighter | 3-18 |
| Coolant | 6-19 |
| Cooling fan | 6-24 |
| MCU controller | 3-20 |

D

| | |
|--------------------|------|
| Drain filter | 6-30 |
|--------------------|------|

E

| | |
|----------------------------------|------|
| Engine oil filter | 6-18 |
| Engine oil level | 6-18 |
| Engine starting & stop | 4-3 |
| Engine starting by booster | 6-39 |
| Engine stop | 4-5 |

F

| | |
|--------------------|------|
| Fan belt | 6-23 |
| Fuel filter | 6-26 |
| Fuel leakage | 6-27 |

| | |
|----------------------------|------|
| Fuel system bleeding | 6-26 |
| Fuel tank | 6-24 |
| Fuse box | 3-20 |

H

| | |
|------------------------------|------|
| Hydraulic breaker | 8-1 |
| Hydraulic oil changing | 6-28 |
| Hydraulic oil filling | 6-27 |
| Hydraulic oil level | 6-27 |

L

| | |
|-------------------------------|------|
| Levers & pedals | 3-14 |
| Lifting capacities | 2-5 |
| Lubricant specification | 2-13 |

M

| | |
|--------------------------------|------|
| Maintenance check list | 6-11 |
| Major component | 2-1 |
| Mode selection system | 4-7 |
| Monitor panel | 3-2 |
| Mounting and dismounting | 1-12 |

N

| | |
|-----------------------------|-----|
| New machine operation | 4-1 |
|-----------------------------|-----|

O

| | |
|-------------------------|------|
| Oil cooler | 6-22 |
| Operating pattern | 4-28 |

P

| | |
|------------------------------------|------|
| Pedals | 3-15 |
| Periodical replacement parts | 6-5 |
| Pilot filter | 6-30 |
| Pin & bushing adjustment | 6-34 |
| Prefilter | 6-25 |

R

| | |
|----------------------------|------------|
| Radiator flushing | 6-20 |
| Radio and USB player | 3-23 |
| RCV lever lubricate | 6-33 |
| Recommended oils | 2-13, 6-10 |
| Relieving pressure | 6-3 |
| Resistor | 3-21 |
| Return filter | 6-29 |

S

| | |
|--------------------------------------|------|
| Safety hints | 1-1 |
| Safety labels | 0-4 |
| Safety parts | 6-5 |
| Seat | 3-19 |
| Seat belt | 3-19 |
| Service meter | 3-21 |
| Speciation for major component | 2-10 |
| Specification | 2-2 |
| Start switch | 3-9 |
| Storage | 4-26 |
| Suction strainer | 6-28 |
| Swing bearing grease | 6-31 |
| Swing gear & pinion grease | 6-32 |
| Swing reduction gear oil | 6-31 |
| Switch panel | 3-7 |
| Switches | 3-9 |

T

| | |
|---------------------------------|------|
| Torques-major component | 6-8 |
| Torques-fastener | 6-6 |
| Towing machine | 4-17 |
| Track adjustment | 6-33 |
| Track shoe selection | 2-8 |
| Transportation | 5-1 |
| Travel reduction gear oil | 6-32 |
| Travelling machine | 4-15 |
| Troubleshooting guide | 7-1 |

U

| | |
|---------------------|-----|
| Undercarriage | 2-8 |
|---------------------|-----|

W

| | |
|--------------------------------|------|
| Warming up operation | 4-5 |
| Warning lamps | 3-2 |
| Weight | 2-4 |
| Working device operation | 4-14 |
| Working method | 4-18 |
| Working range | 2-3 |