

# CONTENTS

Foreword .....	0-1	6. Traveling of the machine .....	4-14
Before servicing this machine .....	0-2	7. Efficient working method .....	4-17
EC regulation approved .....	0-3	8. Operation in the special work sites .....	4-21
Table to enter S/No and distribution .....	0-4	9. Normal operation of excavator .....	4-23
Safety labels .....	0-5	10. Attachment lowering .....	4-24
Machine data plate .....	0-18	11. Storage .....	4-25
Guide (direction, S/No, symbol) .....	0-19	12. RCV lever operating pattern .....	4-27
		13. Switching hydraulic attachment circuit .....	4-28

## SAFETY HINTS

1. Before operating the machine .....	1-1
2. During operating the machine .....	1-15
3. During maintenance .....	1-22
4. Parking .....	1-25

## SPECIFICATIONS

1. Major components .....	2-1
2. Specifications .....	2-2
3. Working range .....	2-4
4. Weight .....	2-5
5. Lifting capacities .....	2-6
6. Bucket selection guide .....	2-9
7. Undercarriage .....	2-11
8. Specification for major components .....	2-13
9. Recommended oils .....	2-16

## CONTROL DEVICES

1. Cab devices .....	3-1
2. Cluster .....	3-2
3. Switches .....	3-13
4. Levers and pedals .....	3-17
5. Air conditioner and heater .....	3-19
6. Others .....	3-22

## OPERATION

1. Suggestion for new machine .....	4-1
2. Check before starting the engine .....	4-2
3. Starting and stop the engine .....	4-3
4. Mode selection system .....	4-8
5. Operation of the working device .....	4-13

## TRANSPORTATION

1. Preparation for transportation .....	5-1
2. Dimension and weight .....	5-2
3. Loading the machine .....	5-4
4. Fixing the machine .....	5-6
5. Loading and unloading by crane .....	5-7

## MAINTENANCE

1. Instruction .....	6-1
2. Tightening torque .....	6-6
3. Fuel, coolant and lubricants .....	6-9
4. Maintenance check list .....	6-11
5. Maintenance chart .....	6-16
6. Service instruction .....	6-18
7. Electrical system .....	6-41
8. Air conditioner and heater .....	6-44

## TROUBLESHOOTING GUIDE

1. Engine .....	7-1
2. Electrical system .....	7-2
3. Others .....	7-3

## HYDRAULIC BREAKER AND QUICK CLAMP

1. Selecting hydraulic breaker .....	8-1
2. Circuit configuration .....	8-2
3. Maintenance .....	8-3
4. Precaution while operating the breaker .....	8-4
5. Quick clamp .....	8-6

INDEX .....	9-1
-------------	-----

## FOREWORD

This manual contains a number of instructions and safety recommendations regarding driving, handling, lubrication, maintenance, inspection and adjustment of the excavator.

The manual is to promote safety maintenance and enhance machine performance.

Keep this manual handy and have all personnel read it periodically.

If you sell the machine, be sure to give this manual to the new owners.

This machine complies with EC directive "2006/42/EC".

1. **Read** and **understand** this manual before operating the machine.

This operator's manual may contain attachments and optional equipment that are not available in your area. Please consult your local HD Hyundai Construction Equipment distributor for those items you require.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine. If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses of actions as described in this manual.

Some illustrations in this manual show details or attachments that can be different from your machine. Covers and guards might have been removed for illustrative purposes.

2. **Inspect** the jobsite and **follow** the safety recommendations in the **safety hints** section before operating the machine.

3. Use **genuine HD Hyundai Construction Equipment spare parts** for the replacement of parts.

We expressly point out that HD Hyundai Construction Equipment will not accept any responsibility for defects resulting from non-genuine parts or non workmanlike repair.

In such cases HD Hyundai Construction Equipment cannot assume liability for any damage.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult HD Hyundai Construction Equipment or your HD Hyundai Construction Equipment distributor for the latest available information for your machine or for questions regarding information in this manual.

## **BEFORE SERVICING THIS MACHINE**

It is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury by keeping this machine properly maintained.

It also is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury while servicing the machine.

No one should service or attempt to repair this machine without proper training and supervision.

All service and maintenance personnel should be thoroughly familiar with the procedures and precautions contained in this manual.

All personnel also must be aware of any federal, state, provincial or local laws or regulations covering the use and service of construction equipment.

The procedures in this manual do not supersede any requirements imposed by federal, state, provincial or local laws.

HD Hyundai Construction Equipment can not anticipate every possible circumstance or environment in which this machine may be used and serviced.

All personnel must remain alert to potential hazards.

Work within your level of training and skill.

Ask your supervisor if you are uncertain about a particular task. Do not try to do too much too fast.

Use your common sense.

## EC REGULATION APPROVED

- Noise level (EN474-1 : 2006 and 2000/14/EC) are as followings.  
LWA : 102 dB (EU only)  
LPA : 72 dB
- The value of vibrations transmitted by the operator's seat are lower than standard value of (EN474-1 : 2006 and 2002/44/EC)




<b>TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR</b>
--

Machine Serial No.	
Engine Serial No.	
Manufacturing year	
Manufacturer Address	HD Hyundai Construction Equipment Co., Ltd. 477 Bundangsuseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea
Distributor for U.S.A Address	HD Hyundai Construction Equipment Americas Inc 6100 Atlantic Boulevard Norcross GA 30071 U.S.A
Distributor for Europe Address	HD Hyundai Construction Equipment Europe N. V. Hyundailaan 4 3980 Tessenderlo Belgium
Dealer Address	

## SAFETY LABELS

### 1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

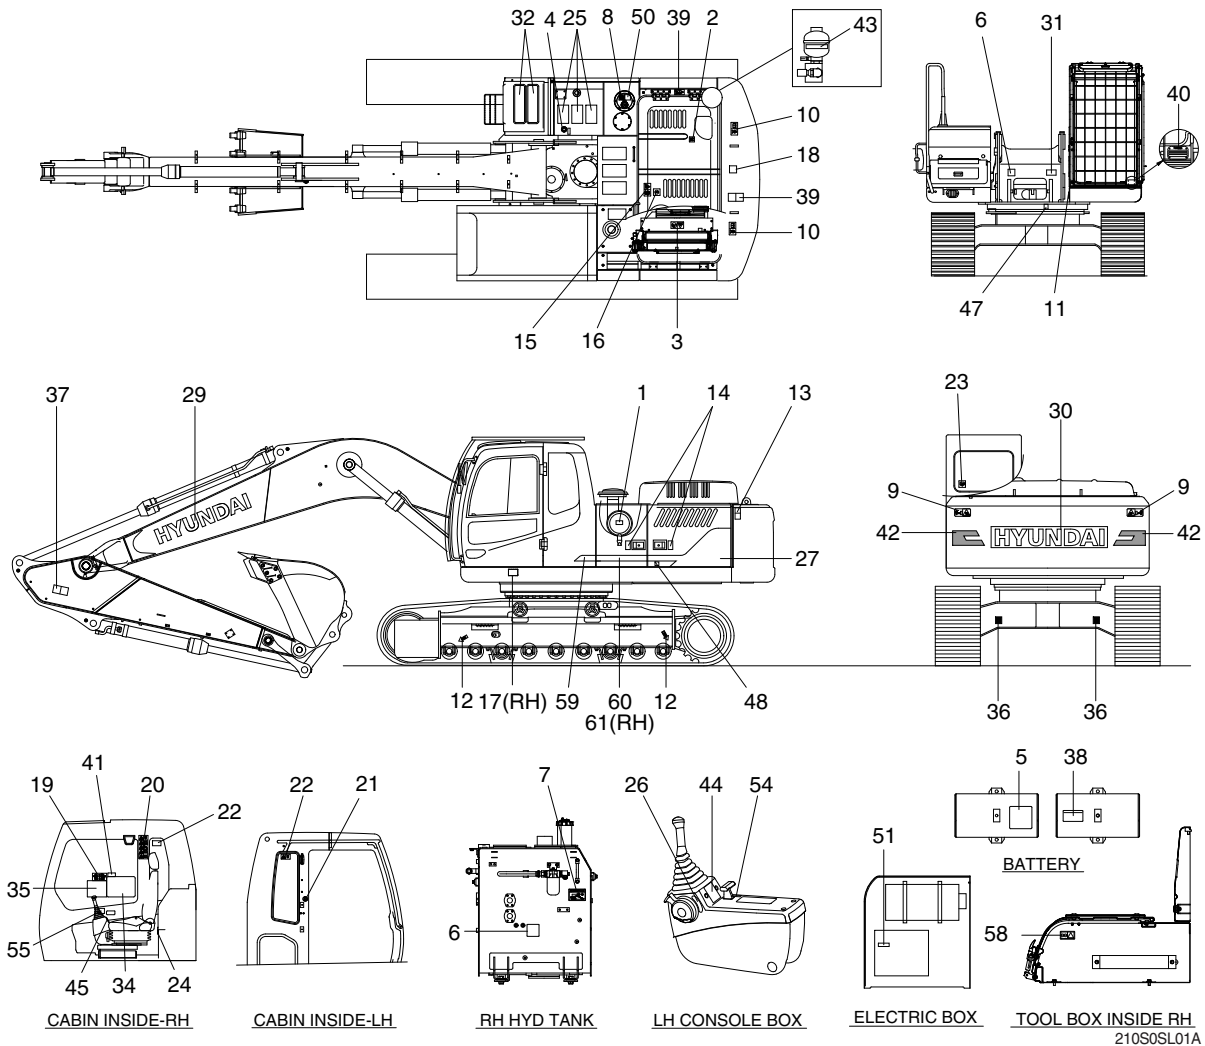

- |                         |                           |  |
|-------------------------|---------------------------|--|
| 1 Air cleaner filter    | 20 Ref operator's manual  | 40 FOPS FOG plate                          |
| 2 Turbocharger cover    | 21 Hammer                 | 41 Caution (water separator, turbocharger) |
| 3 Radiator cap          | 22 Safety front window    | 42 Reflecting                              |
| 4 Fueling               | 23 Emergency exit         | 43 Accumulator                             |
| 5 Battery accident      | 24 Air conditioner filter | 44 Control ideogram (LH)                   |
| 6 High pressure hose    | 25 Step tread             | 45 Control ideogram (RH)                   |
| 7 Hydraulic oil level   | 26 Safety knob            | 47 Swing bearing grease                    |
| 8 Hydraulic oil lub     | 27 Model name             | 48 Battery position                        |
| 9 Keep clear-rear       | 29 Trade mark (boom)      | 50 Fuel shut off                           |
| 10 Lifting eye          | 30 Trade mark (CWT)       | 51 MCU/ECM connector                       |
| 11 Name plate           | 31 Reduction gear grease  | 54 Console box tilting                     |
| 12 Sliding ideogram     | 32 Safety work            | 55 Key off caution                         |
| 13 Keep clear-side      | 34 Service instruction    | 58 Leftover fuel                           |
| 14 Stay fix             | 35 Lifting chart          | 59 Band - cab rear                         |
| 15 Engine hood shearing | 36 Tie                    | 60 Band - LH front                         |
| 16 No step              | 37 Keep clear-attach      | 61 Band - tank                             |
| 17 Transporting         | 38 Electric welding       |  |
| 19 Control ideogram     | 39 Falling                |  |

## 2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing. If a safety label is attached to a part that is replaced, install a safety label on the replacement part.

### 1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the air cleaner cover.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

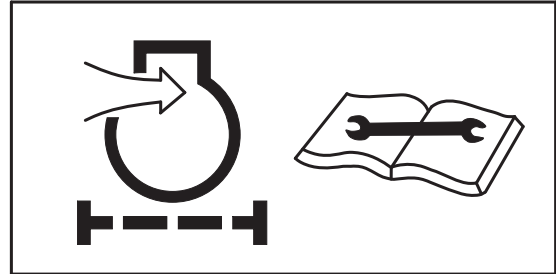

21070FW01

### 2) TURBOCHARGER COVER (item 2)

This warning label is positioned on the engine hood.

- ⚠ **Do not touch turbocharger or it may cause severe burn. When the engine is running or immediately after engine shut down.**



21070FW02

### 3) RADIATOR CAP (item 3)

This warning label is positioned on the radiator.

- ⚠ **Never open the filler cap while engine running or at high coolant temperature. Hot coolant can cause serious burns, injury or death.**




14070FW03

### 4) FUELING (item 4)

This warning label is positioned on the right side of fuel filler neck.

- ⚠ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

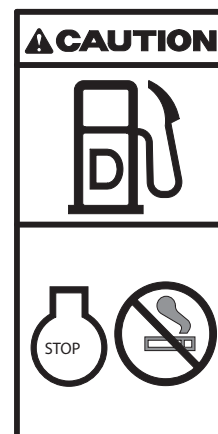


290F0FW02

#### 5) BATTERY ACCIDENT (item 5)

This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**
- ✳ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**  
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminal with a wet hand.**

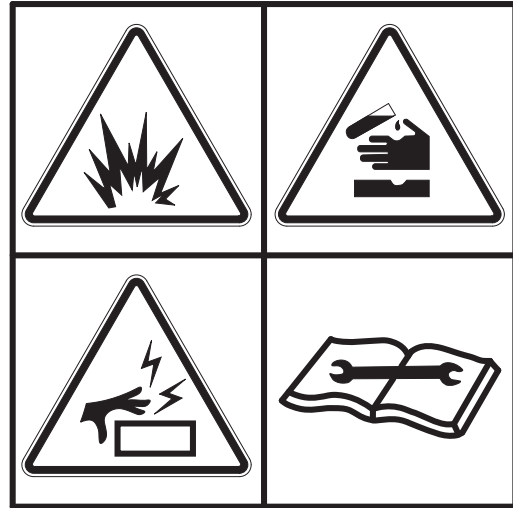

36070FW05

#### 6) HIGH PRESSURE HOSE (item 6)

This warning label is positioned on the front of the upper frame and the rear side of the hydraulic tank.

- ⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**
- ⚠ **Avoid the hazard by relieving pressure before disconnecting hydraulic lines or other lines.**
- ✳ **See the maintenance section for details.**




14070FW29

#### 7) HYDRAULIC OIL LEVEL (item 7)

This warning label is positioned on the rear side of the hydraulic tank.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

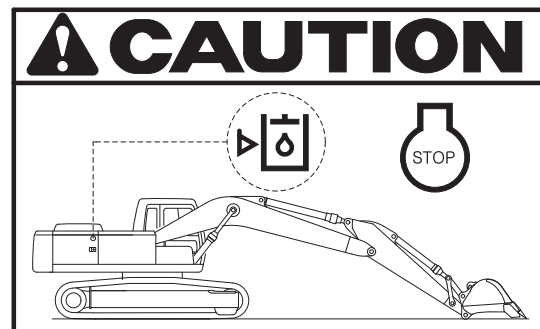

21070FW07

#### 8) HYDRAULIC OIL LUBRICATION (item 8)

This warning label is positioned on the top of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while high temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.




14070FW08

#### 9) KEEP CLEAR-REAR (item 9)

This warning label is positioned on the rear of counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

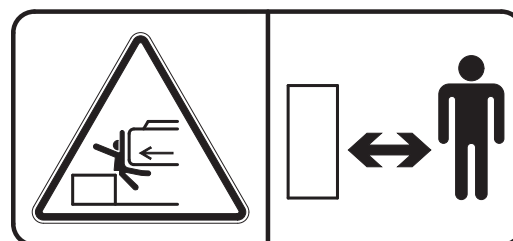


21090FW09

#### 10) LIFTING EYE (item 10)

This warning label is positioned on the counterweight.

- ▲ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.
- ※ See page 5-7 for proper lifting method of the machine.

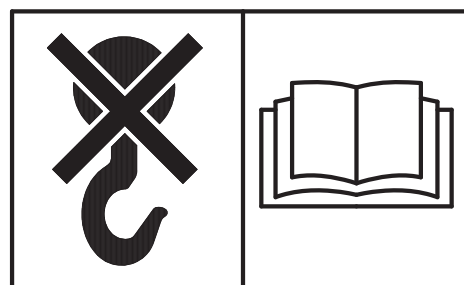

21070FW10

### 11) KEEP CLEAR-SIDE (item 13)

This warning label is positioned on the both side of counterweight.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.



21070FW13

### 12) STAY FIX (item 14)

This warning label is positioned on the both side of the side cover.

- ⚠ Be sure to support the stay when the door needs to be opened.
- ⚠ Be careful that the opened door may be closed by the external or natural force like strong wind.




21070FW14

### 13) ENGINE HOOD SHEARING (item 15)

This warning label is positioned on the engine hood.

- ⚠ Don't open the engine hood during the engine's running. Stay clear of rotating parts.
- ⚠ Don't touch exhaust pipe or it may cause severe burn.

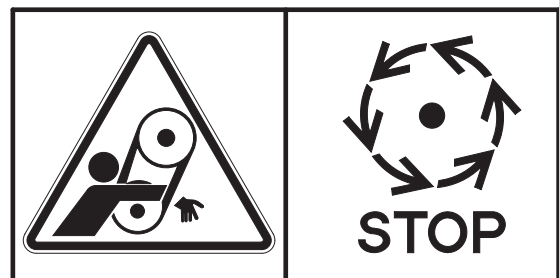


21070FW15

**14) NO STEP (item 16)**

This warning label is positioned on the engine hood.

- △ **Don't step on the engine hood and counterweight.**

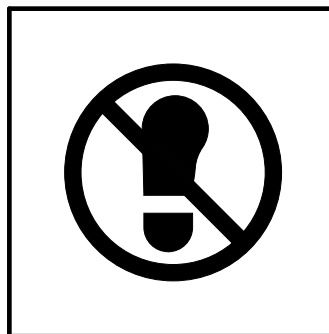


21070FW16

**15) TRANSPORTING (item 17)**

This warning label is positioned on the front right side of upper frame.

- ▲ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**

See page 5-6 for details.

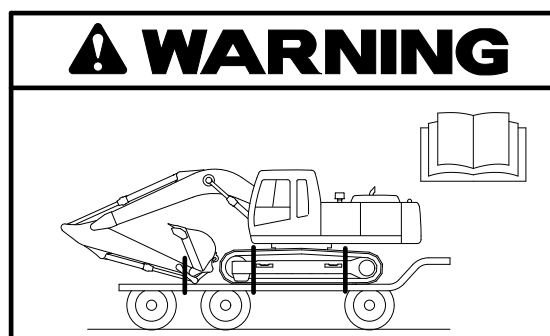

14070FW17


**16) CONTROL IDEOGRAM (item 19)**

This warning label is positioned in right window of the cab.

- ▲ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**

- ▲ **Failure to do so could result in injury or death.**

See page 4-13 for details.

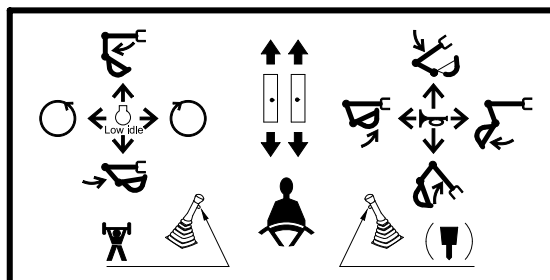

36070FW19

### 17) REF OPERATOR'S MANUAL (item 20)

This warning label is positioned on the right side window of the cab.

#### (1) Ref operator manual


- ▲ Study the operator's manual before starting and operating machine.
- ▲ Do not operate this machine unless you have read and understand the instructions and warnings in this manual. Failure to follow the instructions or warnings could result in injury or death.

#### (2) Max height

- ▲ Serious injury or death can result from contact with electric lines. An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-16.

#### (3) Interference

- ▲ Be careful to operate machine equipped with quick clamp or extensions. Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.

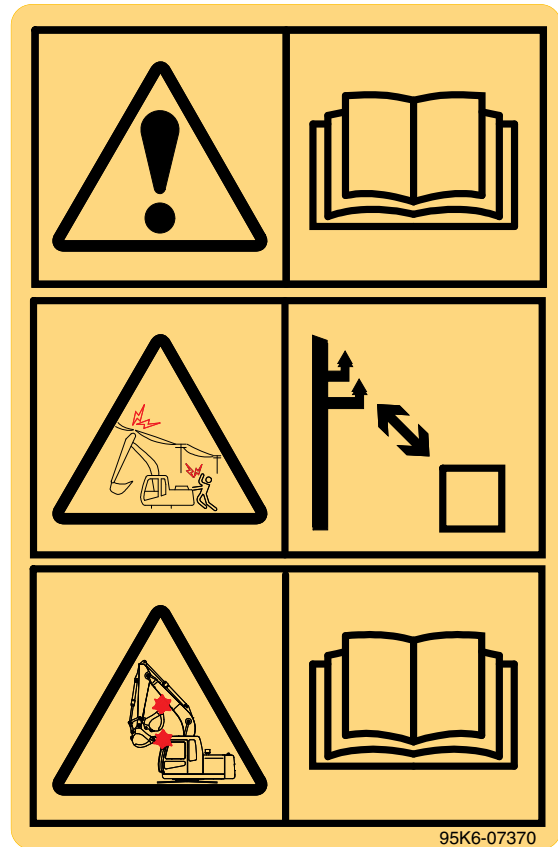


95K6-07370

### 18) SAFETY FRONT WINDOW (item 22)

This warning label is positioned on the both side window of the cab.

- ▲ Be careful that the front window may be promptly closed.
- ※ See page 3-34 for details.

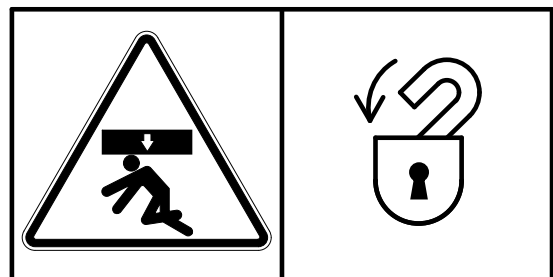

21070FW24

**19) EMERGENCY EXIT (item 23)**

This warning label is positioned on the rear window of the cab.


- ※ The rear window serves as an alternate exit.
- ※ To remove rear window, pull the ring and push out the glass.



**20) AIR CONDITIONER FILTER (item 24)**

This warning label is positioned on the air conditioner cover.

- ※ Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.

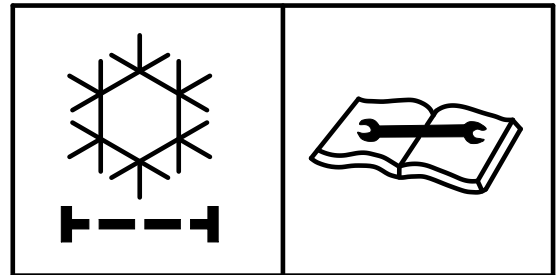


21070FW26

**21) SAFETY KNOB (item 26)**

This warning label is positioned on the cover of the safety knob.

- ⚠ Before you get off the machine be sure to place the safety knob LOCKED position.

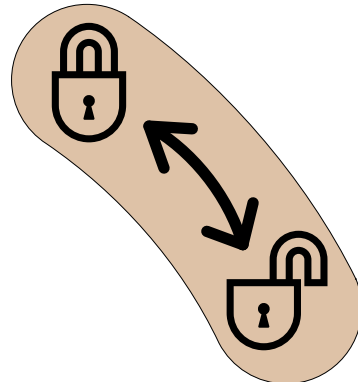


30007A1FW07A

**22) REDUCTION GEAR GREASE (item 31)**

This warning label is positioned on the front of upper frame.

- ⚠ Grease is under high pressure. Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.

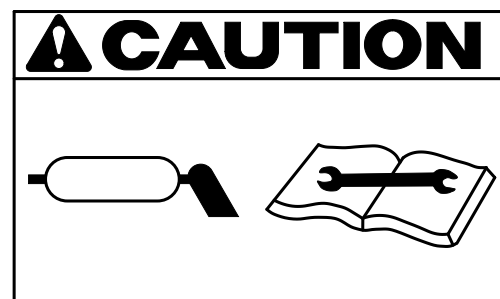


21070FW35

**23) TIE (item 36)**

This warning label is positioned on the front and rear side of the lower frame.

- ⚠ **Never tow the machine using tie hole, because this may break.**
- ⚠ **See page 4-16 for detail.**

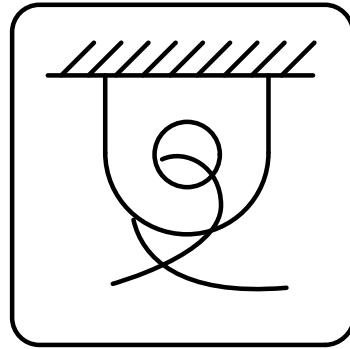


4507A0FW02

**24) KEEP CLEAR-ATTACH (item 37)**

This warning label is positioned on both side of the arm.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**

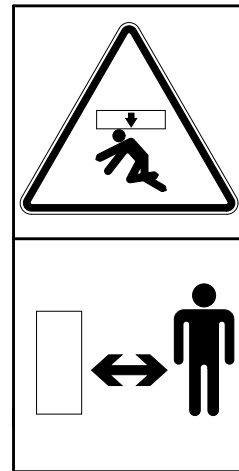


14070FW31

**25) ELECTRIC WELDING (item 38)**

This warning label is positioned on the battery cover.

- ⚠ **Before carrying out any electric welding on this machine, follow the below procedure.**
  - Pull the connector out of all electric control units.
  - Connector the ground lead of the welding equipment as close to the welding point as possible.
- ※ **See page 6-43 for detail.**

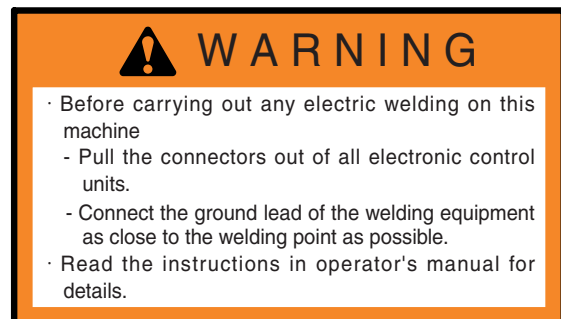

7807AFW20

## 26) FALLING (item 39)

This warning label is positioned on the top of the pump hood and counterweight.

- ⚠ **Falling is one of the major cause of personal injury.**
- ⚠ **Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.**




14070FW30

## 27) CAUTION (W/SEPARATOR, TURBOCHARGER) (item 41)

This warning label is positioned on the right window of the cab.

- ⚠ **In order to protect high pressure fuel system, please drain water in water separator before starting the engine.**
- ⚠ **In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.**

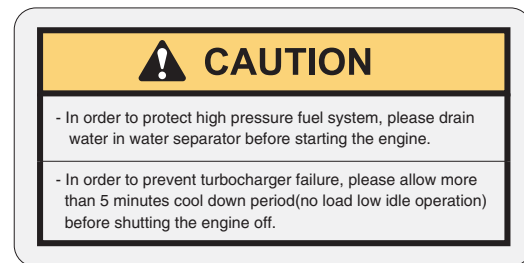

120090SL02

## 28) REFLECTING (item 42)

This warning label is positioned on the rear of counterweight.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**




290F0FW01

### 29) ACCUMULATOR (item 43)

This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

- ▲ Never make any hole in the accumulator expose it to flame or fire.
- ▲ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your HD Hyundai Construction Equipment distributor.




1107A0FW46

### 30) CONTROL IDEOGRAM-LH (item 44)

This warning label is positioned on top of LH console box.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ▲ Failure to do so could result in injury or death.
- ※ See page 4-27 for detail.

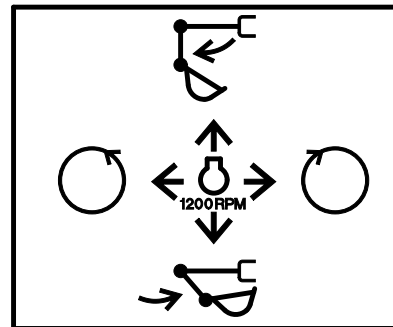


21070FW20

### 31) CONTROL IDEOGRAM-RH (item 45)

This warning label is positioned on the top of RH console box.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- △ Failure to do so could result in injury or death.
- ※ See page 4-27 for detail.

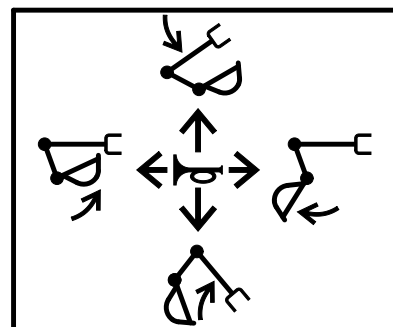


21070FW21

### 32) SWING BEARING GREASE (item 47)

This warning label is positioned in the front of swing ring gear.


※ See page 6-34 for details.

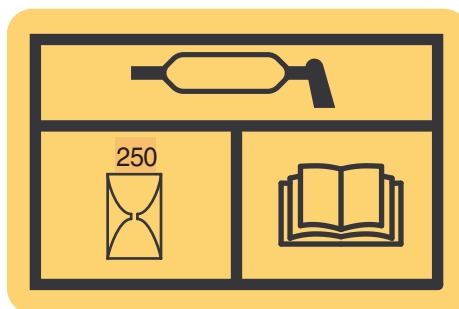

38090FW02

### 33) BATTERY POSITION (item 48)

This warning label is positioned on the left side cover.

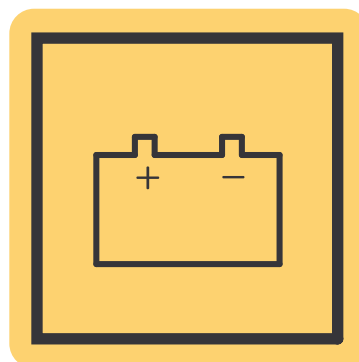

38090FW03


### 34) FUEL SHUT OFF (item 50)

This warning label is positioned on the top side of the hydraulic tank.

※ Fill only the hydraulic oil.

※ Do not fill the diesel fuel.

⚠ Relieve tank pressure with the engine off by removing the cap slowly to prevent burns from hot oil.

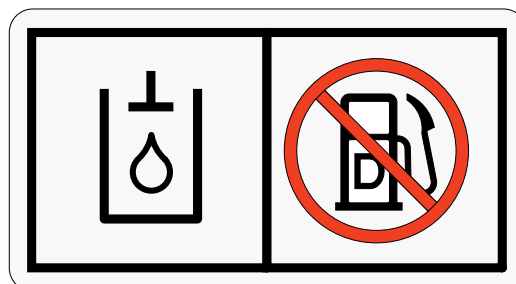

140WH90FW51


### 35) MCU/ECM CONNECTOR (item 51)

This warning label is positioned on the electric box.

※ MCU communicates the machine data with Laptop computer through RS232 service socket.

※ ECM communicates the engine data with cummins INSITE tool adapter through J1939 service socket.

※ See page 3-34 for details.

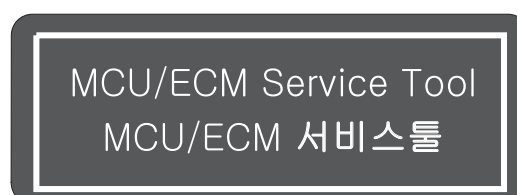


235Z90FW52

### 36) CONSOLE BOX TILTING (item 54)

This warning label is positioned on the top of the LH console box.

- ※ **Before you get off the machine be sure to tilt the LH console box.**

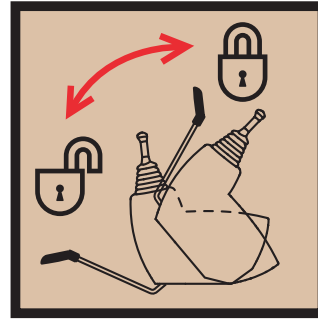


30007A1FW06

### 37) KEY OFF CAUTION (item 55)

This warning label is positioned on the right side window of the cab.

- ※ **Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)**

**Extreme care shall be taken during maintenance work.**

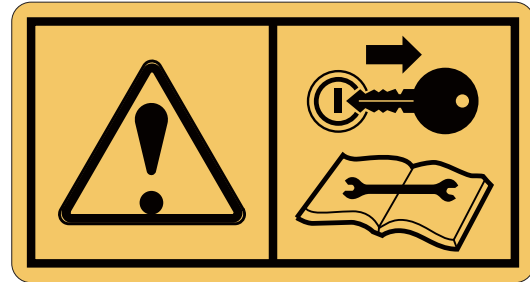

290F0FW05

### 38) LEFTOVER FUEL (item 58)

This warning label is positioned on the inner right side of tool box.


- ⚠ **Do not fuel a machine near open flames or sparks.**
- ⚠ **Properly clean areas of spillage.**




91K4-02700

91K4-02700


## MACHINE DATA PLATE

DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE / MODEL	
PRODUCT IDENTIFICATION NUMBER	
ENGINE POWER	
OPERATING MASS	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91LM-14112	


For general

DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE	
MODEL	
MAX. CERTIFIED WEIGHT	
STANDARDS ROPS : ISO 12117-2	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91Q6-91295	


For ROPS

CE UK DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE / MODEL	
PRODUCT IDENTIFICATION NUMBER / VEHICLE IDENTIFICATION NUMBER	
ENGINE POWER	MAX. AXLE LOAD (FRONT / REAR)
OPERATING MASS / GROSS VEHICLE WEIGHT	MFG. YEAR YEAR INTO SERVICE
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91LM-14142	

For EU only

DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE	
MODEL	
STANDARDS FOG : ISO 10262 (LEVEL 2)	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91N6-01283	

For FOPS/FOG

EAC DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE / MODEL	
PRODUCT IDENTIFICATION NUMBER	
ENGINE POWER	
OPERATING MASS	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91LM-14122	

For EAC only


EX0MD01

- ※ The machine serial number assigned to this particular machine should be used when requesting information or ordering service parts for this machine from your authorized HD Hyundai Construction Equipment dealer. The machine serial number is also stamped on the frame.

## GUIDE

### 1. DIRECTION

The direction of this manual indicate forward, backward, right and left on the standard of operator when the travel motor is in the rear and machine is on the traveling direction.

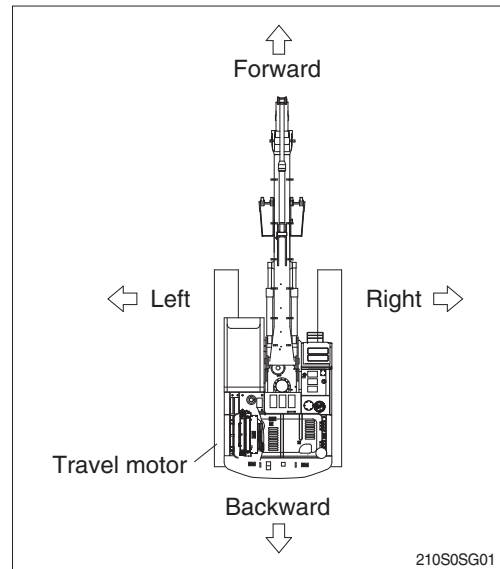


### 2. SERIAL NUMBER

Inform following when you order parts or the machine is out of order.


#### 1) MACHINE SERIAL NUMBER

The numbers are located below the right window of the operator's cab.

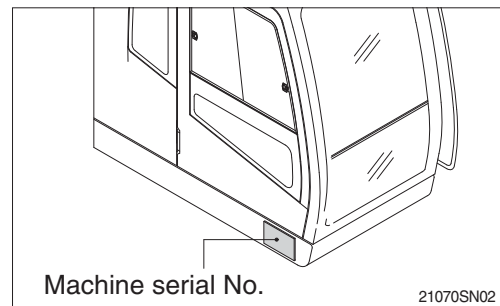

#### 2) ENGINE SERIAL NUMBER

The numbers are located on the engine name plate.

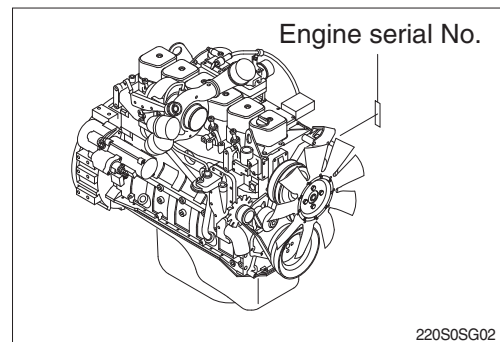

### 3. INTENDED USE

This machine is designed to be used mainly for the following work.

- Digging work
- Loading work
- Smoothing work
- Ditching work

※ Please refer to the section 4 (efficient working method) further details.

### 4. SYMBOLS

▲ Important safety hint.

△ It indicates matters which can cause the great loss on the machine or the surroundings.

※ It indicates the useful information for operator.


## SAFETY HINTS

## 1. BEFORE OPERATING THE MACHINE

Think-safety first.


In special situation, wear protective clothing including a safety helmet, safety shoes, gloves, safety glasses and ear protection as required by the job condition.

Almost every accident is caused by disregarding the simple and fundamental safety hints.

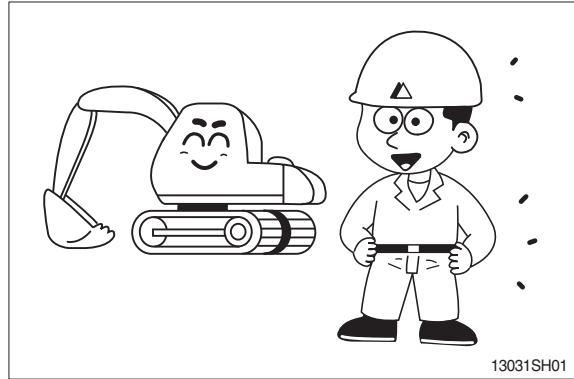


Be sure to understand thoroughly all about the operator's manual before operating the machine.

Proper care is your responsibility.

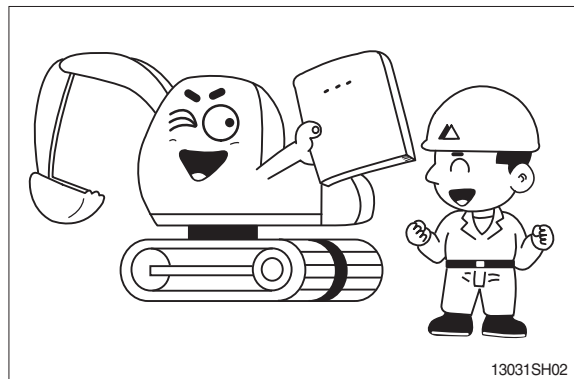


Fully understand the details and process of the construction before starting the work.


If you find anything dangerous on the job, consult with the job supervisor for the preventive measures before operating the machine.

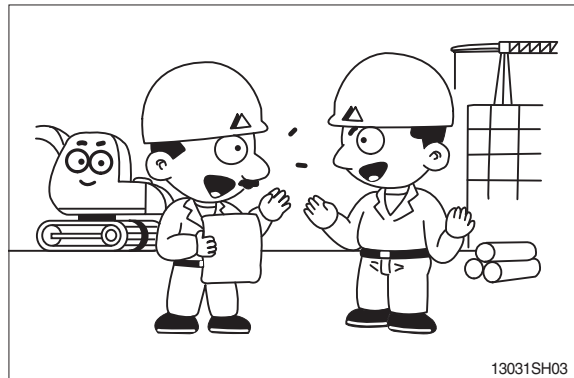


Do not operate when tired, or after drinking alcoholic beverages or any type of drugs.

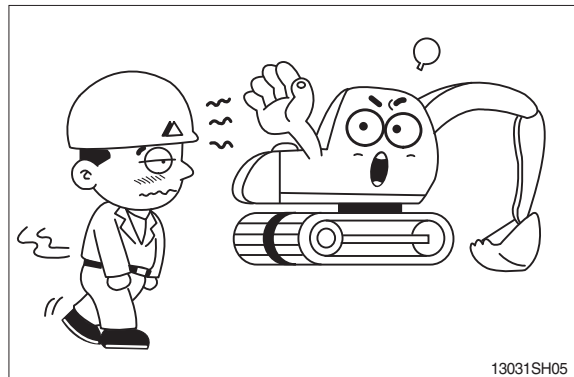


Check daily according to the operation manual.  
Repair the damaged parts and tighten the loosened bolts.

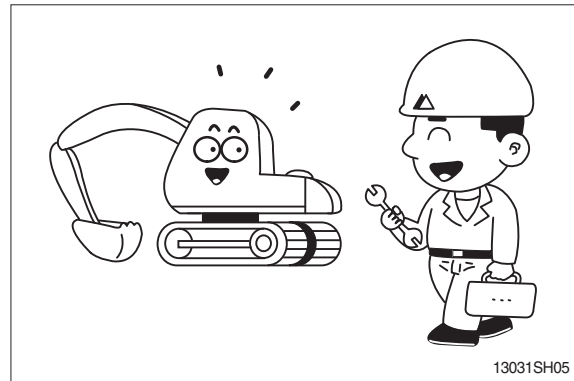


Check for leakage of engine oil, hydraulic oil, fuel and coolant.  
Keep machine clean, clean machine regularly.

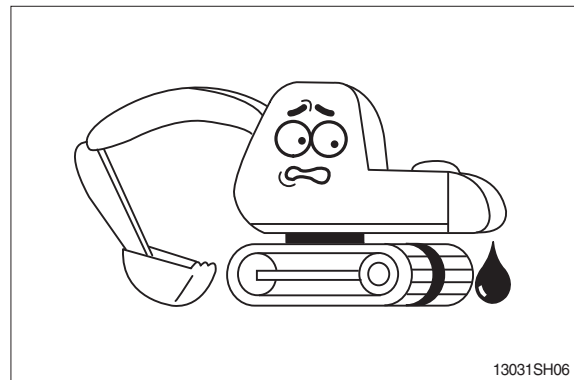

Do not operate the machine if it requires repairs.  
Operate after complete repair.

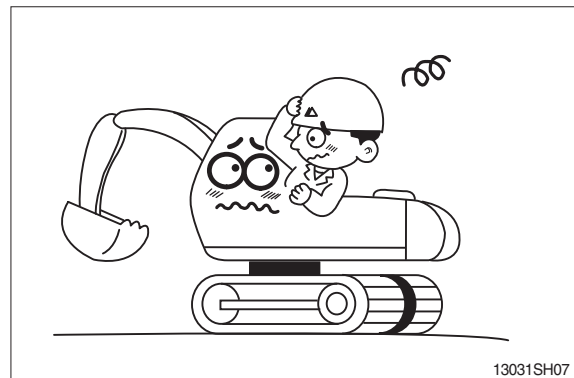

Be prepared if a fire starts.  
Keep a fire extinguisher handy and emergency numbers for a fire department near your telephone.

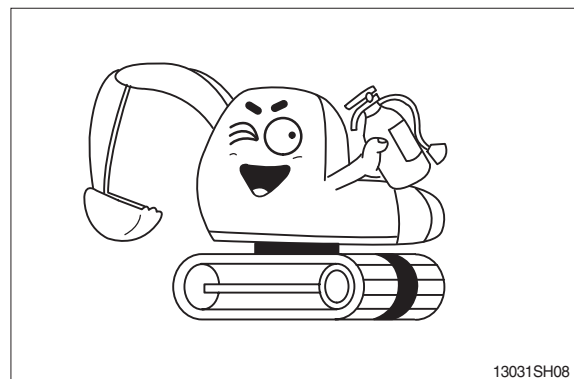


## PROTECTION AGAINST FALLING OR FLYING OBJECTS

If there is any danger of falling or flying objects hitting the operator, install protective guards in place to protect the operator as required for each particular situation.

Be sure to close the front window before commencing work.

Make sure to keep all persons other than operator outside the range of falling or flying objects.

In case you need top guard, front guard and FOPS (falling object protective structure), please contact HD Hyundai Construction Equipment distributor.

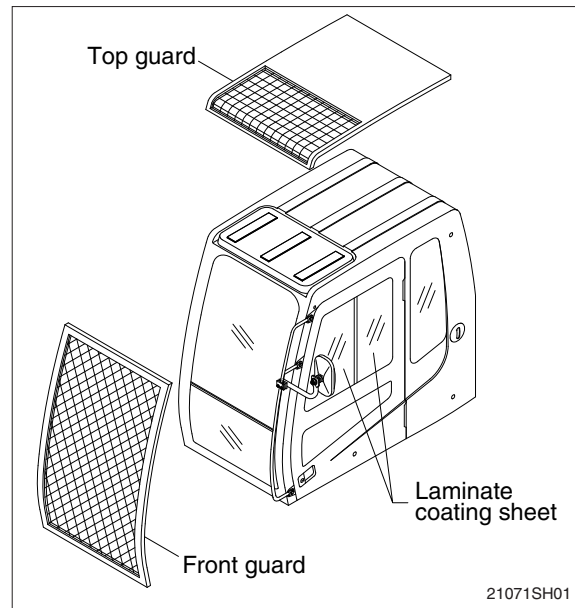

## UNAUTHORIZED MODIFICATION

Any modification made without authorization from HD Hyundai Construction Equipment can create hazards.


Before making a modification, consult your HD Hyundai Construction Equipment distributor.

HD Hyundai Construction Equipment will not be responsible for any injury or damage caused by any unauthorized modification.

## PREPARE FOR EMERGENCY

Only in case of emergency, use the installed hammer for breaking the windshield of the cab, and then exit carefully.

Be sure you know the phone numbers of persons you should contact in case of an emergency.

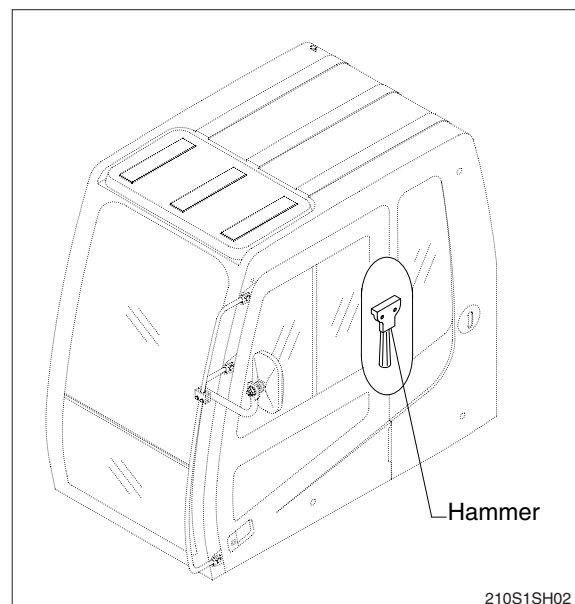

## ROTATING BEACON

When you operate a machine on a road or beside a road, a rotating beacon is required to avoid any traffic accident.

Please contact your HD Hyundai Construction Equipment distributor to install it.

## PRECAUTIONS FOR ATTACHMENTS

When installing and using an optional attachment, read the instruction manual for the attachment and the information related to attachments in this manual.

Do not use attachments that are not authorized by HD Hyundai Construction Equipment or your HD Hyundai Construction Equipment distributor. Use of unauthorized attachments could create a safety problem and adversely affect the proper operation and useful life of the machine.

Any injuries, accidents, product failures resulting from the use of unauthorized attachments are not the responsibility of HD Hyundai Construction Equipment.


The stability of this machine is enough to be used for general work. When you operate this machine, allow for the lifting capacity tables. If you want to use other special applications (not covered in this manual), you have to attach additional counterweight or be cautious while running the machine.

## SAFETY RULES

**Only** trained and authorized personnel can operate and maintain the machine.

Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.

When working with another operator or a person on worksite traffic duty, be sure all personnel understand all hand signals that are to be used.

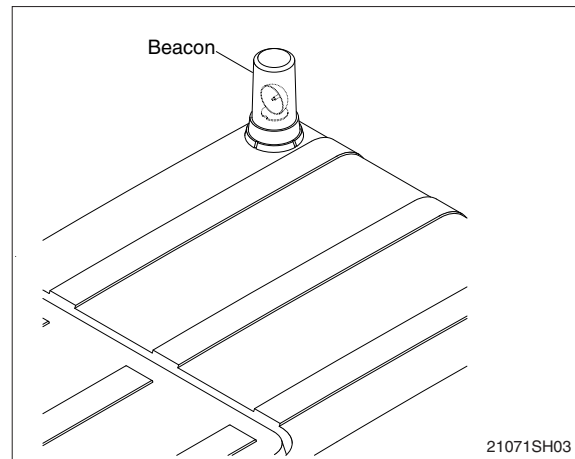

## SAFETY FEATURES

Be sure all guards and covers are in their proper position. Have guards and covers repaired if damaged.

Use safety features such as safety lock and seat belts properly.

**Never** remove any safety features. **Always** keep them in good operating condition.

Improper use of safety features could result in serious bodily injury or death.

## MACHINE CONTROL PATTERN

Check machine control pattern for conformance to pattern on label in cab.

If not, change label to match pattern before operating machine.

Failure to do so could result in injury.

## CALIFORNIA PROPOSITION 65

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

This product contains or emits chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds.

WASH HANDS AFTER HANDLING



13031SH55

Do not load the machine with the lifting eyes on the counterweight.

**▲ The wrong loading method can result in serious bodily injury or death.**

## FIRE PREVENTION AND EXPLOSION PREVENTION

### Regeneration

The exhaust gas temperatures during regeneration will be elevated. Follow proper fire prevention instructions and use the disable regeneration function when appropriate.

### General

All fuels, most lubricants, and some coolant mixtures are flammable.

To minimize the risk of fire or explosion, the following actions are recommended.

Always perform a Walk-Around Inspection, which may help you identify a fire hazard.

Do not operate a machine when a fire hazard exists. Contact your dealer for service.



3001SH01

Understand the use of the primary exit and alternative exit on the machine.

Do not operate a machine with a fluid leak. Repair leaks and clean up fluids before resuming machine operation. Fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire. A fire may cause personal injury or death.

Do not weld on or drill holes in the engine cover. Flammable material such as leaves, twigs, papers, trash may accumulate in engine compartment.

Remove flammable material such as leaves, twigs, papers, trash and so on. These items may accumulate in the engine compartment or around other hot areas and hot parts on the machine.

Keep the access doors to major machine compartments closed and access doors in working condition in order to permit the use of fire suppression equipment, in case a fire should occur.

Clean all accumulations of flammable materials such as fuel, oil, and debris from the machine.

Do not operate the machine near any flame.

Keep shields in place. Exhaust shields (if equipped) protect hot exhaust components from oil spray or fuel spray in a break in a line, in a hose, or in a seal. Exhaust shields must be installed correctly.

Do not weld or flame cut on tanks or lines that contain flammable fluids or flammable material. Empty and purge the lines and tanks. Then clean the lines and tanks with a nonflammable solvent prior to welding or flame cutting. Ensure that the components are properly grounded in order to avoid unwanted arcs.

Dust that is generated from repairing nonmetallic hoods or fenders may be flammable and/or explosive. Repair such components in a ventilated area away from open flames or sparks. Use suitable Personal Protection Equipment (PPE).


Inspect all lines and hoses for wear or deterioration. Replace damaged lines and hoses. The lines and the hoses should have adequate support and secure clamps. Tighten all connections to the recommended torque. Damage to the protective cover or insulation may provide fuel for fires.

Store fuels and lubricants in properly marked containers away from unauthorized personnel. Store oily rags and flammable materials in protective containers. Do not smoke in areas that are used for storing flammable materials.



3001SH02

Use caution when you are fueling a machine. Do not smoke while you are fueling a machine. Do not fuel a machine near open flames or sparks. Always stop the engine before fueling. Fill the fuel tank outdoors. Properly clean areas of spillage.

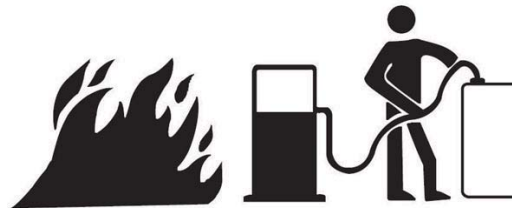

3001SH03

### Battery and battery cables

The following actions are recommended to minimize the risk of fire or an explosion related to the battery.



3001SH04

Do not operate a machine if battery cables or related parts show signs of wear or damage. Contact your dealer for service.

Follow safe procedures for engine starting with jump-start cables. Improper jumper cable connections can cause an explosion that may result in injury.

Do not charge a frozen battery. This action may cause an explosion.

Gases from a battery can explode. Keep any open flames or sparks away from the top of a battery. Do not smoke in battery charging areas.

Never check the battery charge by placing a metal object across the terminal posts. Use a voltmeter in order to check the battery charge.

Daily inspect battery cables that are in areas that are visible. Inspect cables, clips, straps, and other restraint for damage. Replace any damaged parts. Check for signs of the following, which can occur over time due to use and environmental factors :

- Fraying
- Abrasion
- Cracking
- Discoloration
- Cuts on the insulation of the cable
- Fouling
- Corroded terminals, damaged terminals, and loose terminals

Replace damaged battery cable (s) and replace any related parts. Eliminate any fouling, which may have caused insulation failure or related component damage or wear. Ensure that all components are reinstalled correctly.

An exposed wire on the battery cable may cause a short ground if the exposed area comes into contact with a grounded surface. A battery cable short produces heat from the battery current, which may be a fire hazard.

An exposed wire on the ground cable between the battery and the disconnect switch may cause the disconnect switch to be bypassed if the exposed area comes into contact with a grounded surface. This action may result in an unsafe condition for servicing the machine. Repair components or replace components before servicing the machine.

**▲ Fire on a machine can result in personal injury or death. Exposed battery cables that come into contact with a grounded connection can result in fires. Replace cables and related parts that show signs of wear or damage. Contact your HD Hyundai Construction Equipment dealer.**

## **Wiring**

Check electrical wires daily. If any of the following conditions exist, replace parts before you operate the machine.

- Fraying
- Signs of abrasion or wear
- Cracking
- Discoloration
- Cuts on insulation
- Other damage

Make sure that all clamps, guards, clips, and straps are reinstalled correctly. This action will help to prevent vibration, rubbing against other parts, and excessive heat during machine operation.

Attaching electrical wiring to hoses and tubes that contain flammable fluids or combustible fluids should be avoided.

Consult your HD Hyundai Construction Equipment dealer for repair or for replacement parts.

Keep wiring and electrical connections free of debris.

## **Lines, Tubes, and Hoses**

Do not bend high-pressure lines. Do not strike high-pressure lines. Do not install any lines that are bent or damaged. Use the appropriate backup wrenches in order to tighten all connections to the recommended torque.

Check lines, tubes, and hoses carefully. Wear Personal Protection Equipment (PPE) in order to check for leaks. Always use a board or cardboard when you check for a leak. Leaking fluid that is under pressure can penetrate body tissue. Fluid penetration can cause serious injury and possible death. A pin hole leak can cause severe injury. If fluid is injected into your skin, you must get treatment immediately. Seek treatment from a doctor that is familiar with this type of injury.

Replace the affected parts if any of the following conditions are present :

- End fittings are damaged or leaking.
- Outer coverings are chafed or cut.
- Wires are exposed.
- Outer coverings are swelling or ballooning.
- Flexible parts of the hoses are kinked.
- Outer covers have exposed embedded armoring.
- End fittings are displaced.

Make sure that all clamps, guards, and heat shields are installed correctly. During machine operation, this action will help to prevent vibration, rubbing against other parts, excessive heat, and failure of lines, tubes, and hoses.

Do not operate a machine when a fire hazard exists. Repair any lines that are corroded, loose, or damaged. Leaks may provide fuel for fires. Consult your HD Hyundai Construction Equipment dealer for repair or for replacement parts.

## **Ether**

Ether (if equipped) is commonly used in cold weather applications. Ether is flammable and poisonous.

Do not spray ether manually into an engine if the machine is equipped with a thermal starting aid for cold weather starting.

Use ether in ventilated areas. Do not smoke while you are replacing an ether cylinder or while you are using an ether spray.

Do not store ether cylinders in living areas or in the operator compartment of a machine. Do not store ether cylinders in direct sunlight or in temperatures above 49°C(120.2 °F). Keep ether cylinders away from unauthorized personnel.

## Fire Extinguisher

As an additional safety measure, keep a fire extinguisher on the machine.

Be familiar with the operation of the fire extinguisher. Inspect the fire extinguisher and service the fire extinguisher regularly. Follow the recommendations on the instruction plate.

Consider installation of an aftermarket Fire Suppression System, if the application and working conditions warrant the installation.

## Fire Safety

※ **Locate secondary exits and how to use the secondary exits before you operate the machine.**

※ **Locate fire extinguishers and how to use a fire extinguisher before you operate the machine.**

If you find that you are involved in a machine fire, your safety and that of others on site is the top priority. The following actions should only be performed if the actions do not present a danger or risk to you and any nearby people. At all times you should assess the risk of personal injury and move away to a safe distance as soon as you feel unsafe.

Move the machine away from nearby combustible material such as fuel/oil stations, structures, trash, mulch and timber.

Lower any implements and turn off the engine as soon as possible. If you leave the engine running, the engine will continue to feed a fire. The fire will be fed from away damaged hoses that are attached to the engine or pumps.

If possible, turn the battery disconnect switch to the OFF position. Disconnecting the battery will remove the ignition source in the event of an electrical short. Disconnecting the battery will eliminate a second ignition source if electrical wiring is damaged by the fire, resulting in a short circuit.

Notify emergency personnel of the fire and your location.

If your machine is equipped with a fire suppression system, follow the manufacturers procedure for activating the system.

※ **Fire suppression systems need to be regularly inspected by qualified personnel. You must be trained to operate the fire suppression system.**

Use the on-board fire extinguisher and use the following procedure :

1. Pull the pin.
2. Aim the extinguisher or nozzle at the base of the fire.
3. Squeeze the handle and release the extinguishing agent.
4. Sweep the extinguisher from side to side across the base of the fire until the fire is out.

Remember, if you are unable to do anything else, shut off the machine before exiting. By shutting off the machine, fuels will not continue to be pumped into the fire.

If the fire grows out of control, be aware of the following risks :

- Tires on wheeled machines pose a risk of explosion as tires burn. Hot shrapnel and debris can be thrown great distances in an explosion.
- Tanks, accumulators, hoses, and fittings can rupture in a fire, spraying fuels and shrapnel over a large area.

Remember that nearby all of the fluids on the machine are flammable, including coolant and oils. Additionally, plastics, rubbers, fabrics, and resins in fiberglass panels are also flammable.

## **Fire extinguisher Location**

Make sure that a fire extinguisher is available. Be familiar with the operation of the fire extinguisher. Inspect the fire extinguisher and service the fire extinguisher. Obey the recommendations on the instruction plate.

Mount the fire extinguisher in the accepted location per local regulations.

If your machine is equipped with a ROPS structure, strap the mounting plate to the ROPS in order to mount the fire extinguisher. If the weight of the fire extinguisher exceeds 4.5 kg (10 lb), mount the fire extinguisher near the bottom of the ROPS. Do not mount the fire extinguisher at the upper one-third area on the ROPS.

Do not weld the ROPS structure in order to install the fire extinguisher. Also, do not drill holes in the ROPS structure in order to mount the fire extinguisher on the ROPS.

Consult your HD Hyundai Construction Equipment dealer for the proper procedure for mounting the fire extinguisher.

## THE EUROPEAN UNION PHYSICAL AGENTS (VIBRATION) DIRECTIVE 2002/44/EC

### Vibration Data for Earth-moving Machines

#### Information Concerning Hand/Arm Vibration Level

When the machine is operated according to the intended use, the hand/arm vibration of this machine is below  $2.5 \text{ m/s}^2$ .

#### Information Concerning Whole Body Vibration Level

The highest root mean square value of weighted acceleration to which the whole body is subjected, is less than  $0.5 \text{ m/s}^2$ .

This section provides vibration data and a method for estimating the vibration level for earth moving machines.

**Vibration levels are influenced by many different parameters. Many items are listed below.**

- Operator training, behavior, mode and stress
- Job site organization, preparation, environment, weather and material
- Machine type, quality of the seat, quality of the suspension system, attachments and condition of the equipment

It is not possible to get precise vibration levels for this machine. The expected vibration levels can be estimated with the information in below Table in order to calculate the daily vibration exposure. A simple evaluation of the machine application can be used.

Estimate the vibration levels for the three vibration directions. For typical operating conditions, use the average vibration levels as the estimated level. With an experienced operator and smooth terrain, subtract the Scenario Factors from the average vibration level. For aggressive operations and severe terrain, add the Scenario Factors to the average vibration level in order to obtain the estimated vibration level.

※ All vibration levels are in meter per second squared.

ISO Reference Table A – Equivalent vibration levels of whole body vibration emission for earthmoving equipment.

Machine family	Machine kind	Typical operating condition	Vibration Levels			Scenario Factors		
			X axis	Y axis	Z axis	X axis	Y axis	Z axis
Excavator	Compact crawler excavator	Excavating	0.33	0.21	0.19	0.19	0.12	0.10
		Hydraulic breaker app.	0.49	0.28	0.36	0.20	0.13	0.17
		Transfer movement	0.45	0.39	0.62	0.17	0.18	0.28
	Crawler excavator	Excavating	0.44	0.27	0.30	0.24	0.16	0.17
		Hydraulic breaker app.	0.53	0.31	0.55	0.30	0.18	0.28
		Mining application	0.65	0.42	0.61	0.21	0.15	0.32
		Transfer movement	0.48	0.32	0.79	0.19	0.20	0.23
	Wheeled excavator	Excavating	0.52	0.35	0.29	0.26	0.22	0.13
		Transfer movement	0.41	0.53	0.61	0.12	0.20	0.19

ISO Reference Table A – Equivalent vibration levels of whole body vibration emission for earthmoving equipment.

Machine family	Machine kind	Typical operating condition	Vibration Levels			Scenario Factors		
			X axis	Y axis	Z axis	X axis	Y axis	Z axis
Loader	skid steer loader (tracks)	V-shaped motion	1.21	1.00	0.82	0.30	0.84	0.32
	Wheel backhoe loader	Excavating	0.28	0.26	0.20	0.09	0.16	0.06
	Wheel loader	Load and carry motion	0.84	0.81	0.52	0.23	0.20	0.14
		Mining application	1.27	0.97	0.81	0.47	0.31	0.47
		Transfer movement	0.76	0.91	0.49	0.33	0.35	0.17
		V-shape motion	0.99	0.84	0.54	0.29	0.32	0.14

※ Refer to “ISO/TR 25398 Mechanical Vibration-Guideline for the assessment of exposure to whole body vibration of ride on operated earthmoving machines” for more information about vibration. This publication uses data that is measured by international institutes, organizations and manufacturers. This document provides information about the whole body exposure of operators of earthmoving equipment.

## **Guidelines for Reducing Vibration Levels on Earthmoving Equipment**

Properly adjust machines. Properly maintain machines. Operate machines smoothly. Maintain the conditions of the terrain. The following guidelines can help reduce the whole body vibration level :

1. Use the right type and size of machine, equipment, and attachments.
2. Maintain machines according to the manufacturer's recommendations.
  - a. Tire pressures
  - b. Brake and steering systems
  - c. Controls, hydraulic system and linkages
3. Keep the terrain in good condition.
  - a. Remove any large rocks or obstacles.
  - b. Fill any ditches and holes.
  - c. Provide machines and schedule time in order to maintain the conditions of the terrain.
4. Use a seat that meets "ISO 7096". Keep the seat maintained and adjusted.
  - a. Adjust the seat and suspension for the weight and the size of the operator.
  - b. Inspect and maintain the seat suspension and adjustment mechanisms.
5. Perform the following operations smoothly.
  - a. Steer
  - b. Brake
  - c. Accelerate
  - d. Shift the gears.
6. Move the attachments smoothly.
7. Adjust the machine speed and the route in order to minimize the vibration level.
  - a. Drive around obstacles and rough terrain.
  - b. Slow down when it is necessary to go over rough terrain.
8. Minimize vibrations for a long work cycle or a long travel distance.
  - a. Use machines that are equipped with suspension systems.
  - b. Use the ride control system on machines.
  - c. If no ride control system is available, reduce speed in order to prevent bounce.
  - d. Haul the machines between workplaces.
9. Less operator comfort may be caused by other risk factors. The following guidelines can be effective in order to provide better operator comfort:
  - a. Adjust the seat and adjust the controls in order to achieve good posture.
  - b. Adjust the mirrors in order to minimize twisted posture.
  - c. Provide breaks in order to reduce long periods of sitting.
  - d. Avoid jumping from the cab
  - e. Minimize repeated handling of loads and lifting of loads.
  - f. Minimize any shocks and impacts during sports and leisure activities.

## **Sources**


The vibration information and calculation procedure is based on "ISO/TR 25398 Mechanical Vibration- Guideline for whole body vibration exposure of operators of earthmoving equipment. The method is based on measured vibration emission under real working conditions for all machines.

You should check the original directive. This document summarizes part of the content of the applicable law. This document is not meant to substitute the original sources. Other parts of these documents are based on information from the United Kingdom Health and Safety Executive.

## 2. DURING OPERATING THE MACHINE


Use the handle and footstep when getting on or off the machine.

Do not jump on or off the machine.

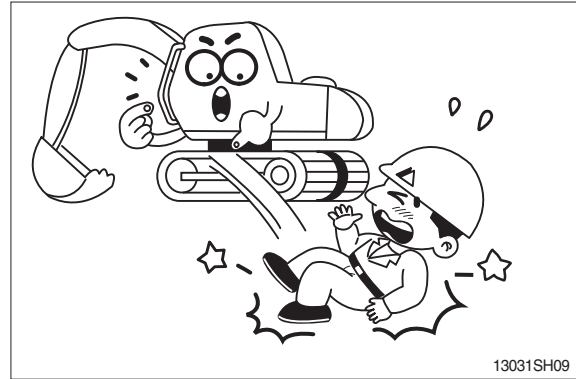


Sound the horn to warn nearby personnel before operating the machine.

Remove all the obstacles like frost on the window before operating the machine for the good visibility.

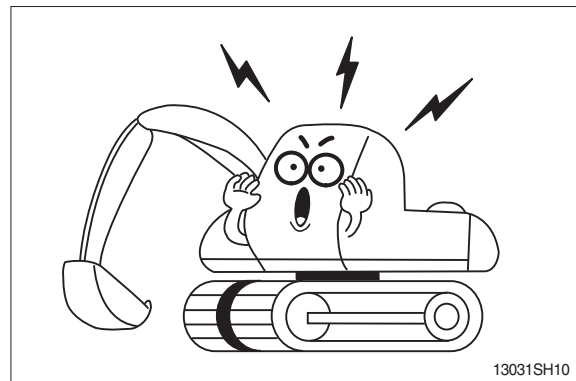


Operate carefully to make sure all personnel or obstacles are clear within the working range of the machine.


Place safety guards if necessary.

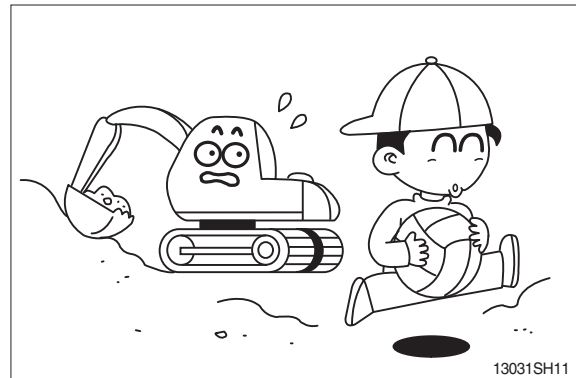


When using the work equipment, pay attention to job site.

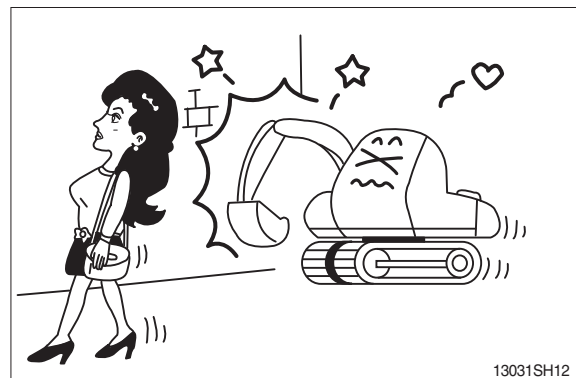

Provide proper ventilation when operating engine in a closed area to avoid the danger of exhaust gases.

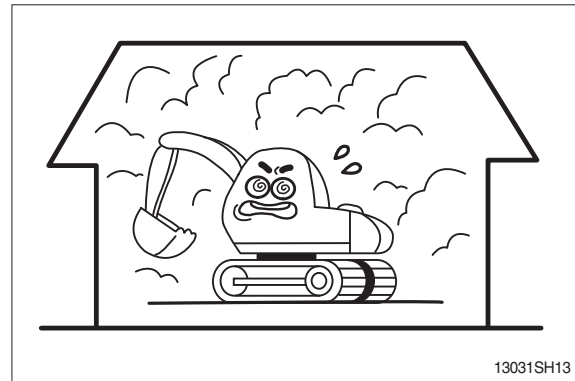


Check the locations of underground gas pipes or water line and secure the safety before operation.

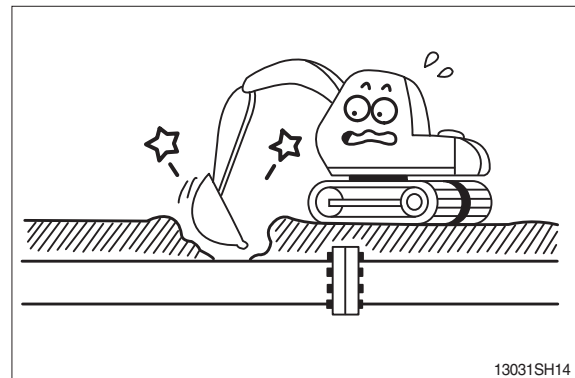


The operating near the electrical lines is very dangerous.  
Operate within safe working range permitted as below.

Supply voltage	Min safe separation
6.6 kV	3m (10 ft)
33.0 kV	4m (13 ft)
66.0 kV	5m (16 ft)
154.0 kV	8m (26 ft)
275.0 kV	10m (33 ft)

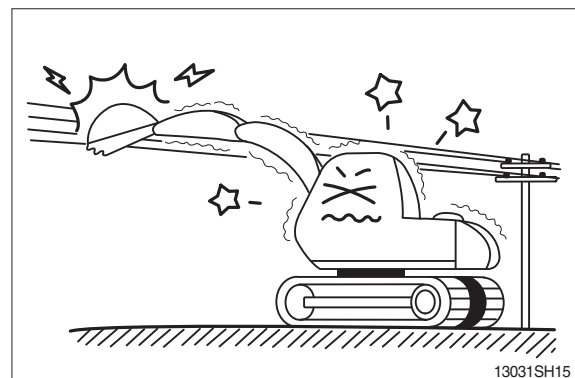


If the machine touches the electric power lines, keep sitting on the operator's seat and make sure the personnel on the ground not to touch the machine until turning off the electric current. Jump off the machine without contacting the machine when you need to get off.

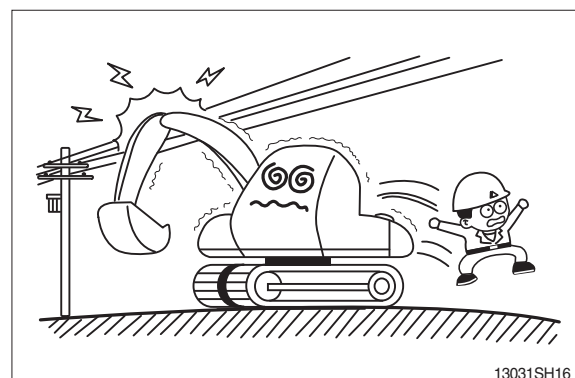


Watch out for obstacles.

Be particularly careful to check the machine clearance during the swing.

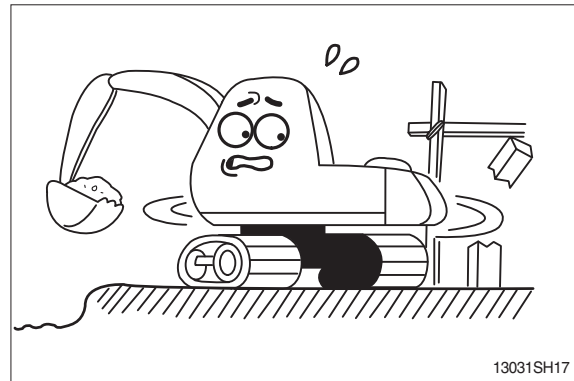


When using the machine as breaker or working in a place where stones may fall down, cab roof guard and head guard should be provided for proper protection.

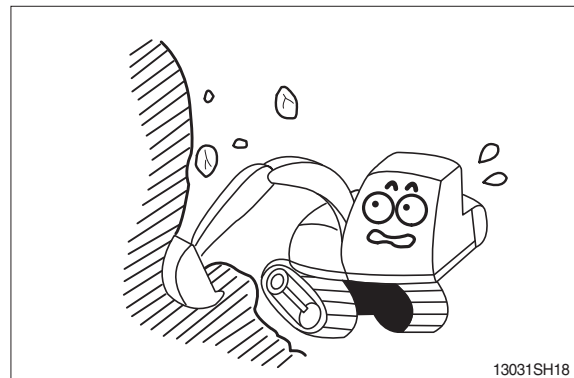


Avoid operating on a cliff or soft ground as there is danger of rolling over.

Make sure to get off easily as keeping the track at a right angle and putting the travel motor into the backward position when working on a cliff or soft ground inevitably.

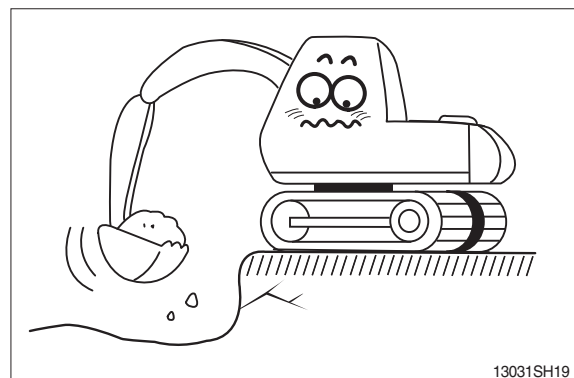


Operate for the lifting work considering the capacity of machine, weight and width of the load.


Be careful not to lift exceeding the machine capacity as it can be the cause of machine damage and safety accident.

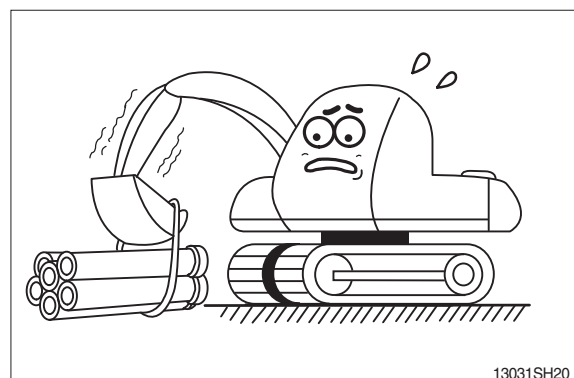


The operation on a slope is dangerous.  
Avoid operating the machine on a slope of over 10 degree.

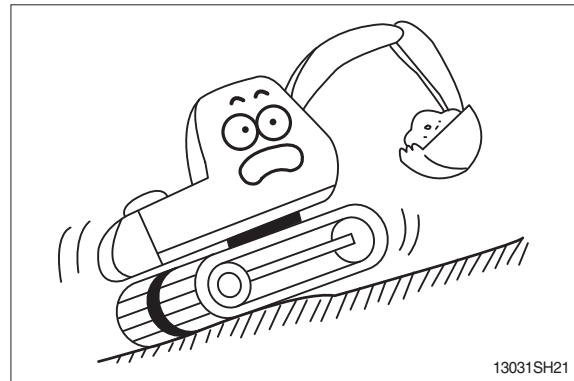


Operate the machine after making ground flat when operation is required on a slope.

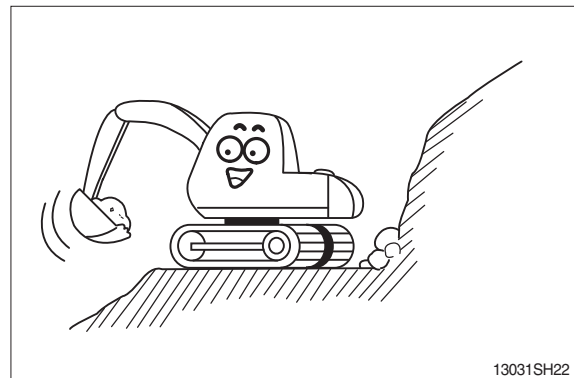


The swing on the slope can be danger of rolling over.  
Do not operate to swing the machine with the bucket loaded on a slope since the machine may lose its balance under such an instance.

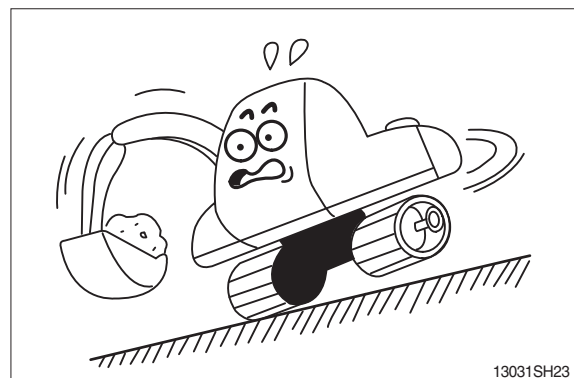


Avoid parking and stopping on a slope.  
Lower the bucket to the ground and block the track when parking.

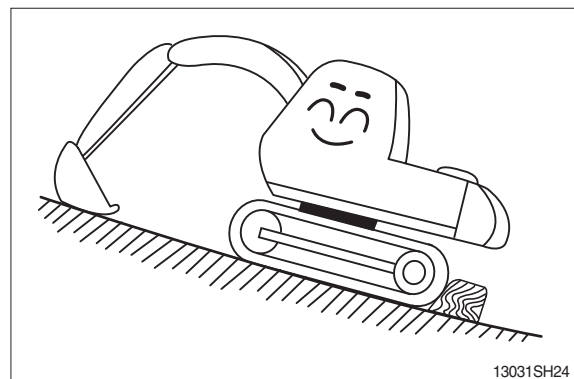


Avoid traveling in a cross direction on a slope as it can cause the danger of rolling over and sliding.

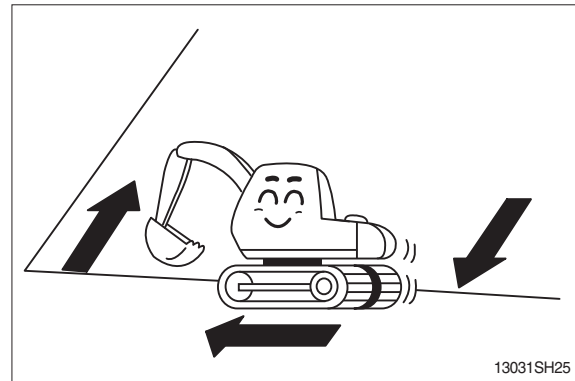


Traveling on a slope is dangerous.  
Be sure to operate slowly when traveling down a slope and maintain the bucket at a height of 20~30 cm (1 ft) above the ground so that it can be used as brake in an emergency.

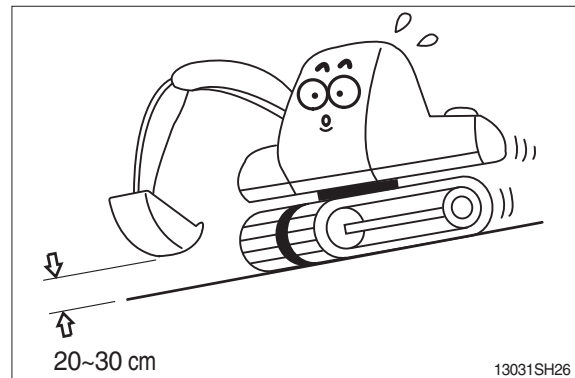


Steering of the machine while traveling on a slope is dangerous.  
When an inevitable turning of direction is required, turn on the flat and solid ground.

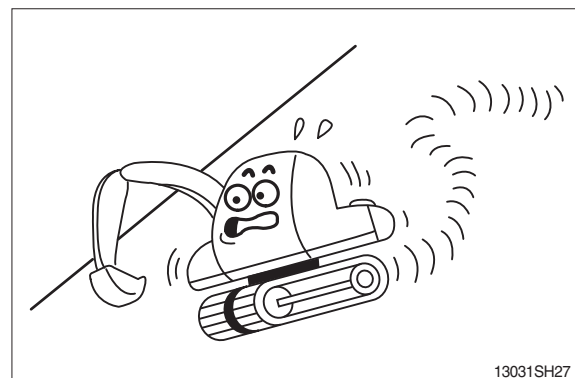


The engine angularity limits are 35 degree.  
Do not operate by more than the engine limits in any case.

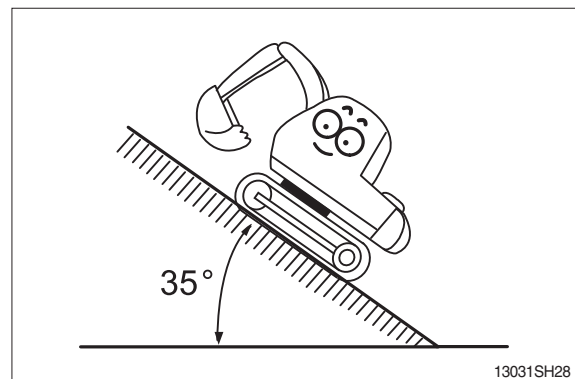


Before traveling the machine, sound the horn to warn nearby personnel.  
Operate forward and backward correctly with confirming the location of the travel motor.

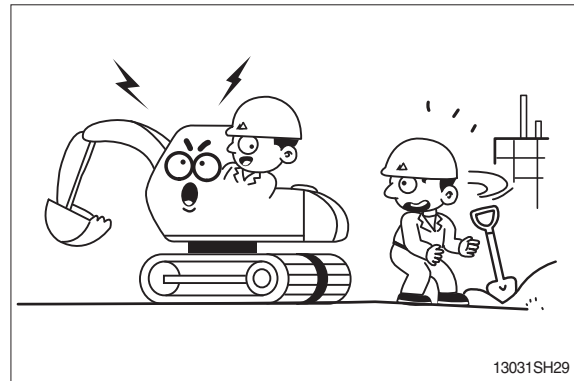


Slow down when traveling through obstacles or uneven ground.

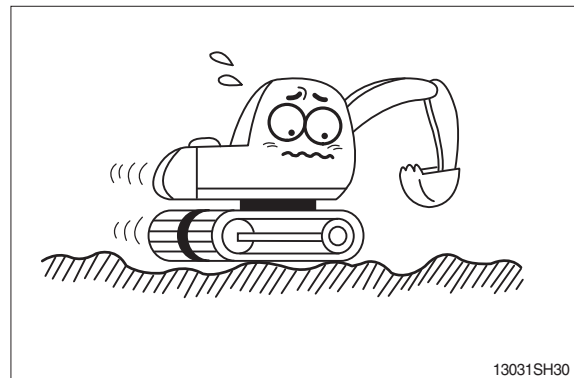


When working on soft ground, place mats or wood boards on the ground to prevent the machine sinking.

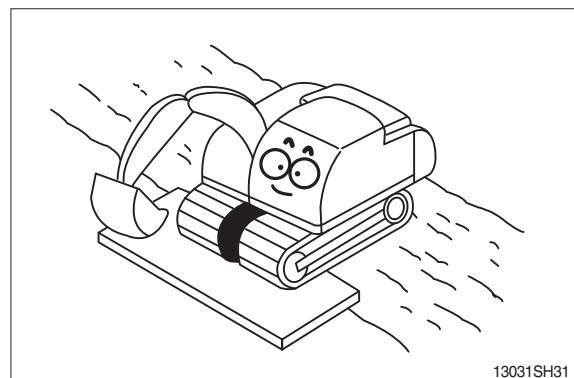

When operating in water or when crossing shallow, check the bed soil condition and depth and flow speed of water, then proceed taking care that water is not above carrier roller.

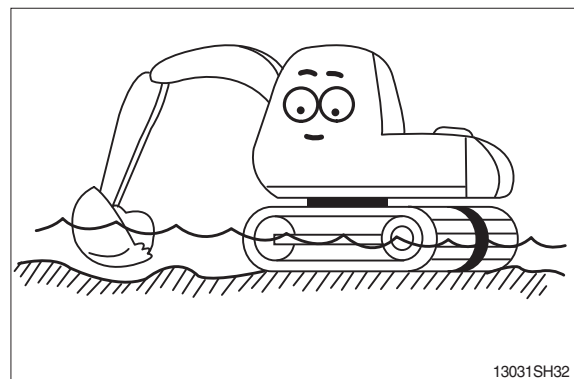

This machine has ROPS / FOG with option.  
 Do not attempt to repair a rollover protective structure (ROPS) after an accident.  
 Repaired structures do not provide the original structure and protection.  
 Test and approved as a protective CAB according to ROPS and FOG standard.  
 Meets : ISO 10262 / 3449 / 12117-2  
 SAE J1356 / JISO 3449

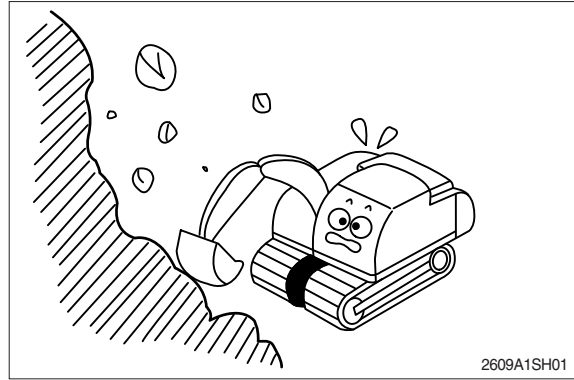

## MOUNTING AND DISMOUNTING

**Never** jump on or off the machine. **Never** get on or off a moving machine.

When mounting or dismounting, always face the machine and use the handrails, machine or track frame steps, and track shoes. Additional track frame step can be fitted for wider optional shoe. In this case please contact your HD Hyundai Construction Equipment distributor.

Do not hold any control levers when getting on or off the machine.

Ensure safety by always maintaining at least three-point contact of hands and feet with the handrails, steps or track shoes.


Always remove any oil or mud from the handrails, steps and track shoes. If they are damaged, repair them and tighten any loose bolts.

If grasping the door handrail when mounting or dismounting or moving on the track, open and lock the door securely in the open position. Otherwise, the door may move suddenly, causing you to lose balance and fall.

## KEEP RIDERS OFF MACHINE

Riders on a machine are subject to injury such as being struck objects and being thrown off the machine.


Only allow the operator on the machine. Keep riders off.

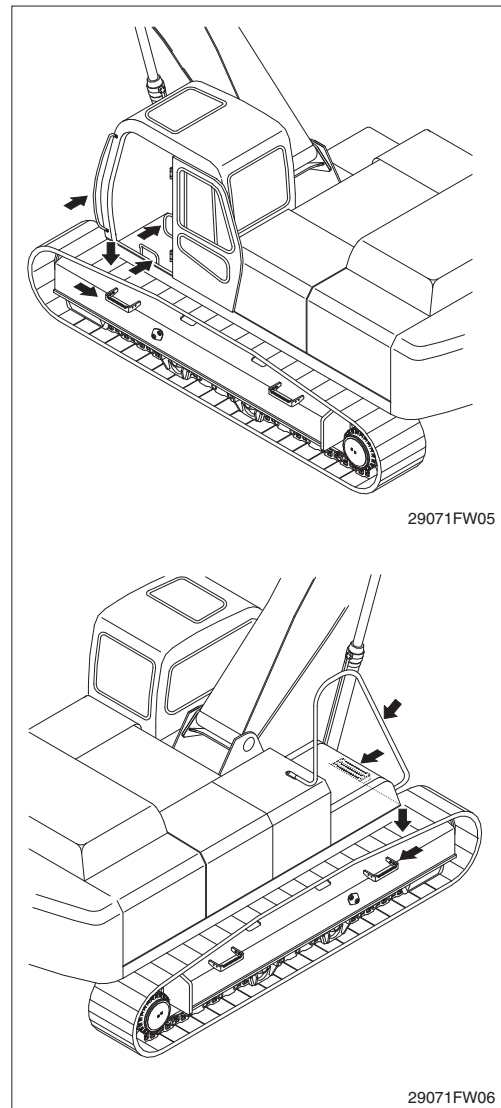


### 3. DURING MAINTENANCE

Stop the engine immediately when the trouble of the machine is found.


Inspect immediately the cause of trouble such as vibration, overheating and trouble in the cluster then repair.

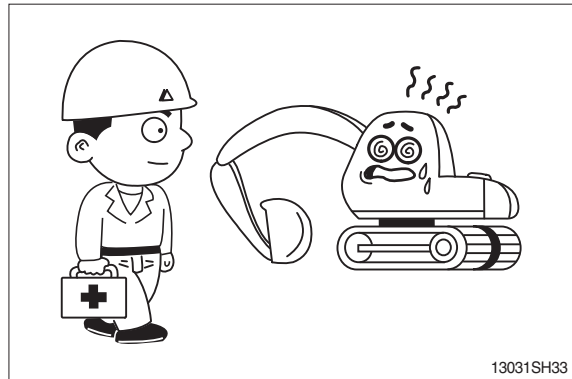


Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)  
Extreme care shall be taken during maintenance work. Parts may require additional safe guard.

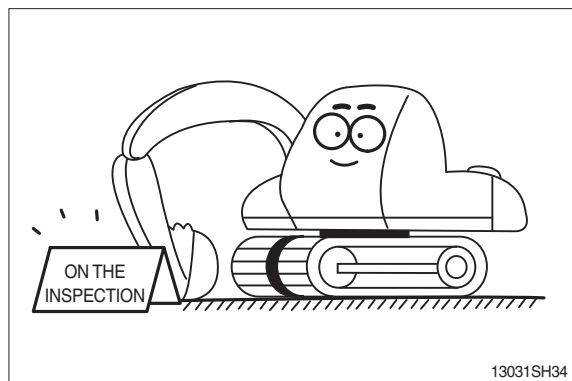


Do not remove the radiator cap from hot engine.  
Open the cap after the engine cools, below 50 °C (122 °F) to prevent personal injury from heated coolant spray or steam.

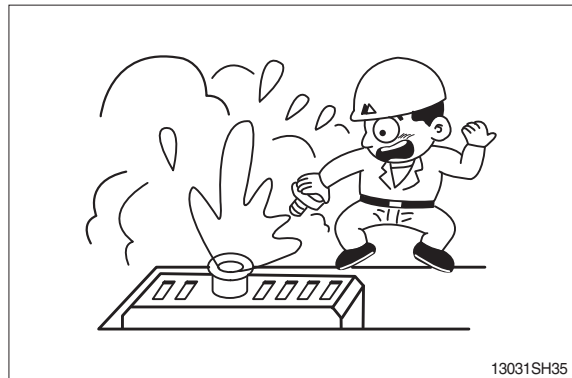


Do not work below the machine.  
Be sure to work with proper safety supports.  
Do not depend on the hydraulic cylinders to hold up the equipment and attachment.

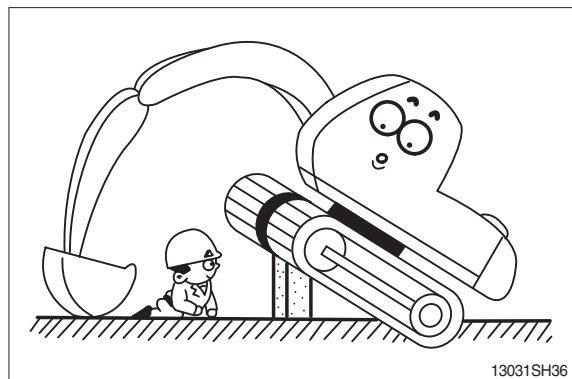

There is the danger of fire in fuel and oil.  
Store in cool and dry area, away from any open flames.

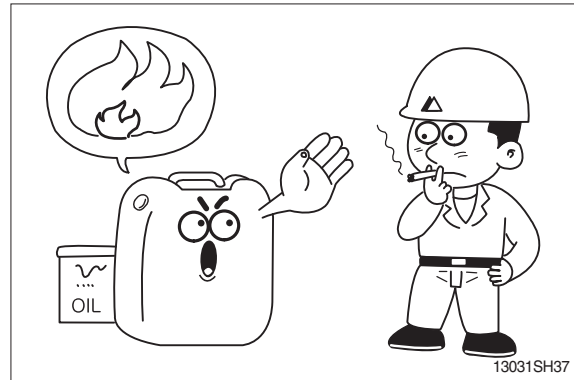


Do not touch exhaust pipe, or may cause severe burn.

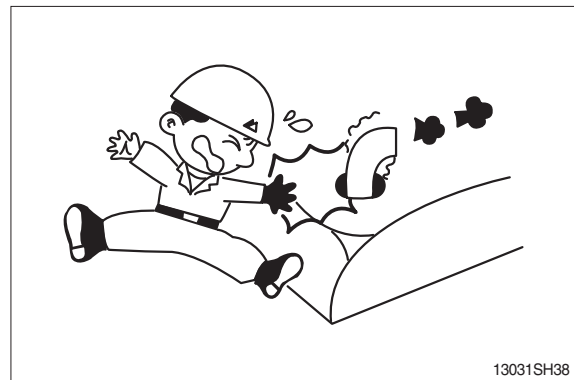

Do not open the engine hood and covers while the engine is running.



Be careful of not hitting the edges when you service engine.

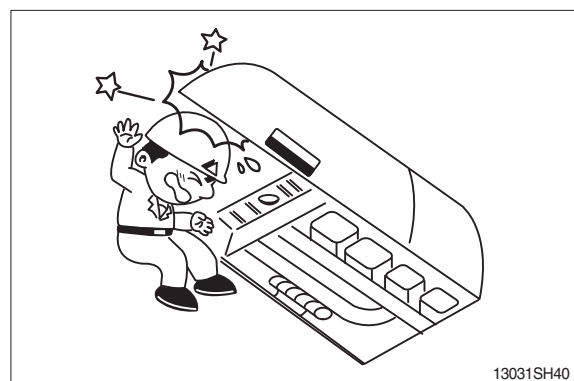

Be careful that the front window may be promptly closed.


Be sure to support stay, when the side door needs to be opened.

Be careful that the open side door may closed by the external or natural force like strong wind.




The antislip protection should be replaced if they have become worn or have been printed over.

Be sure to free of oil, water and grease etc.

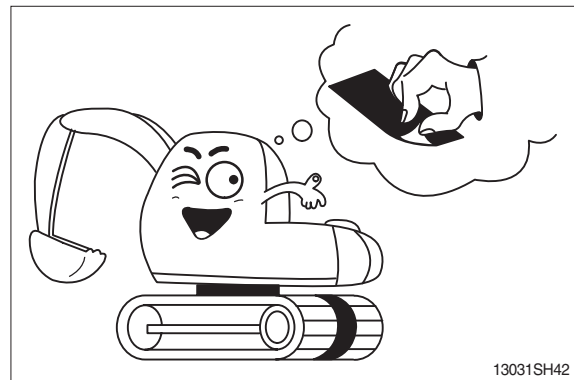

Be careful of not touching slip, fall down etc., when you work at the upper frame to service engine and/or other component.

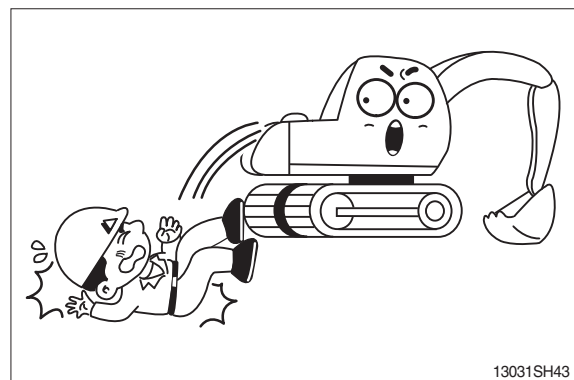


## HIGH PRESSURE GAS

Contain high pressure gas.

To avoid explosion and personal injury, do not expose to fire, do not weld, do not drill.

Relieve pressure before discharging.

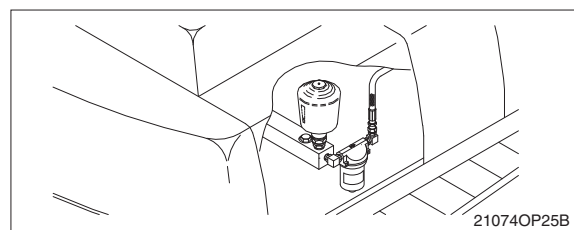


## LIFT EYES CAN FAIL

Lift eyes or tank can fail when lifting tank containing fluids resulting in possible personal injury.


Drain tank of all fluids before lifting.

## 4. PARKING


When leaving the machine after parking, lower the bucket to the ground completely and put the safety knob at the LOCK position then remove the key.  
Lock the cab door.

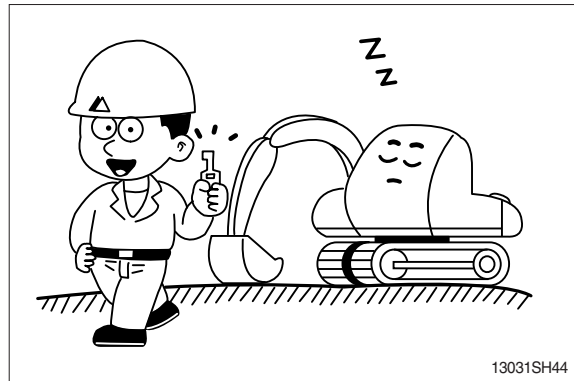


Park the machine in the flat and safe place.

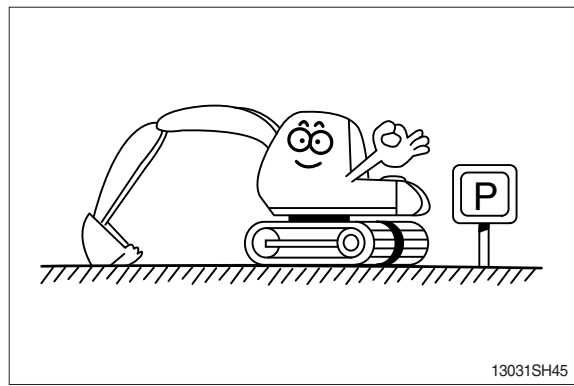

Hope you can work easily and safely observing safety rules.  
For safe operation, observe all safety rules.

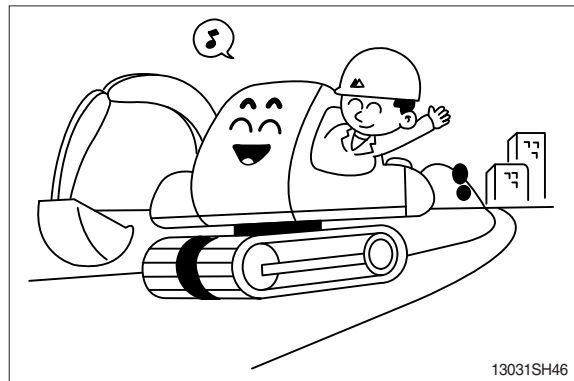


## 1. MAJOR COMPONENT

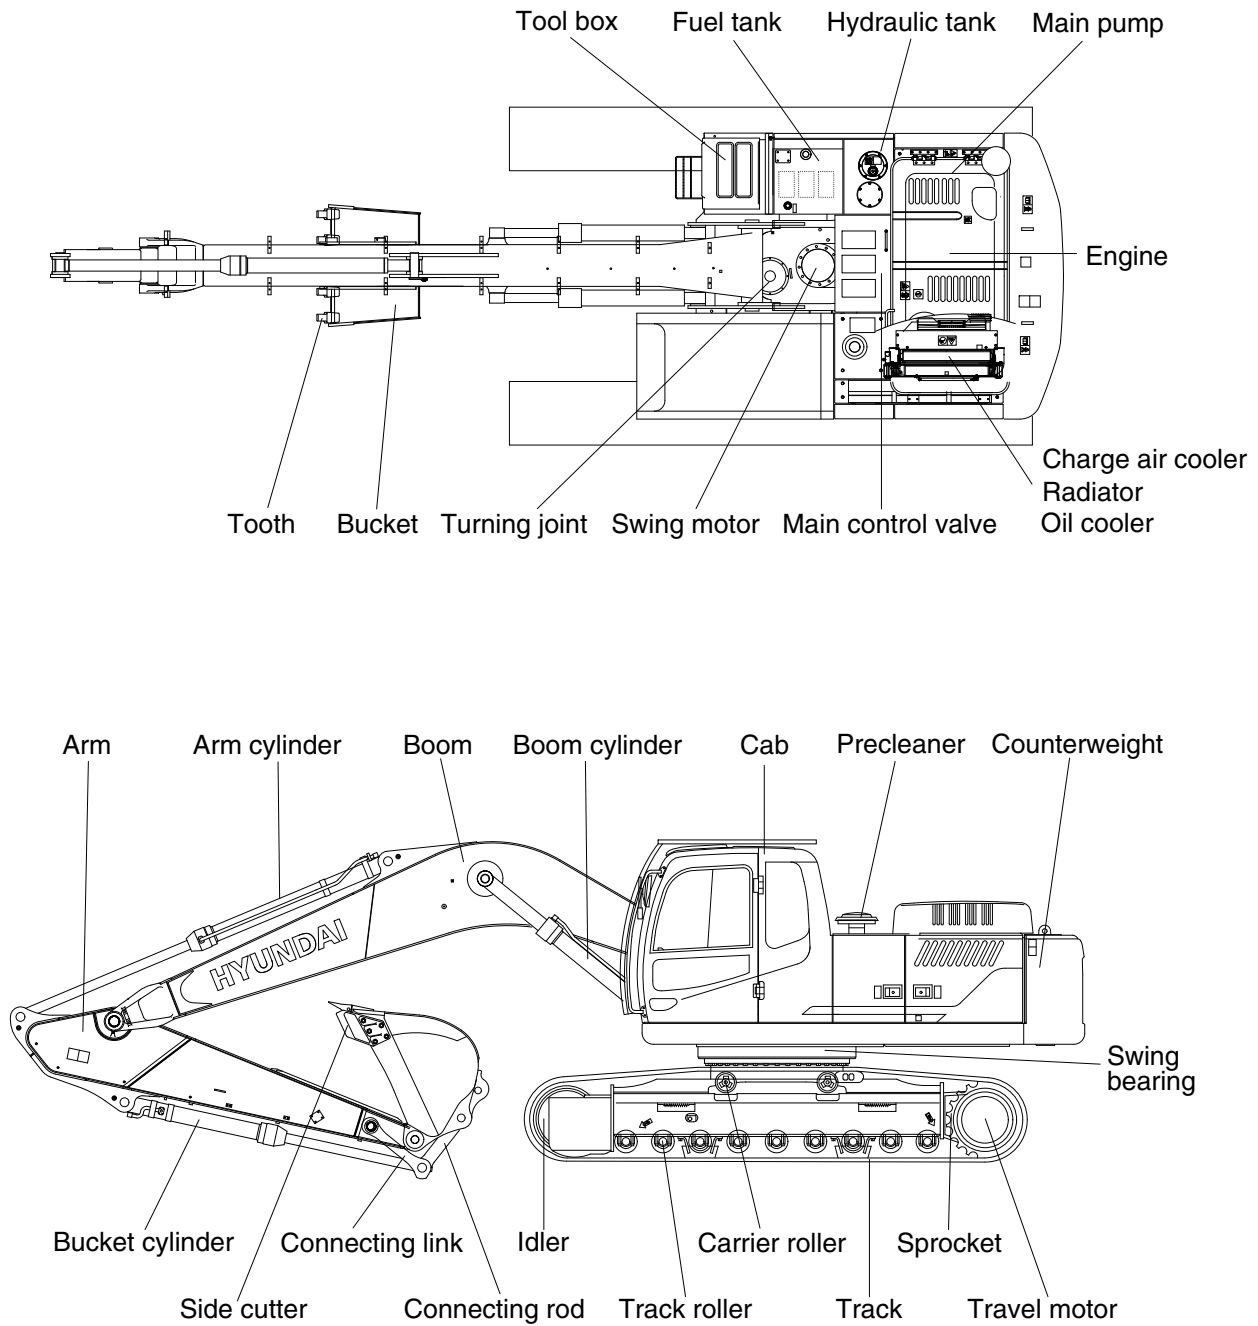

210S2SP01A

## 2. SPECIFICATIONS


### 1) HX210S, MONO BOOM

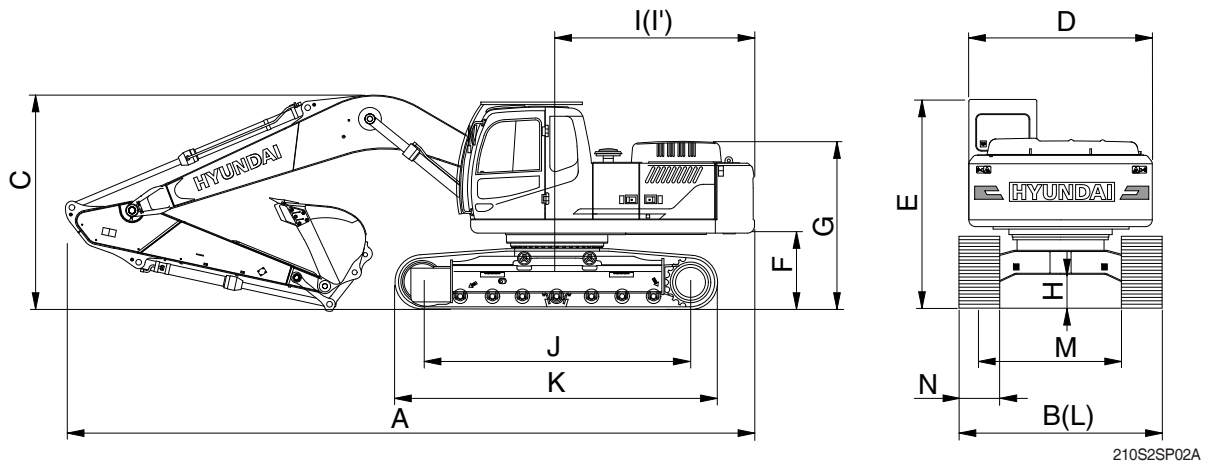

Description		Unit		Specification		
		m (ft-in)	Boom	5.68 (18' 8")		
			Arm	2.92 (9' 7")	2.00 (6' 7")	2.40 (7' 10")
		mm (in)	Shoe	600 (24)		
Operating weight		kg (lb)		20830 (45920)	20670 (45570)	20740 (45720)
Bucket capacity (SAE heaped), standard		m³ (yd³)		0.92 (1.20)	0.92 (1.20)	0.92 (1.20)
Overall length	A	mm (ft-in)		9530 (31' 3")	9650 (31' 8")	9570 (31' 5")
Overall width	B			2800 (9' 2")	2800 (9' 2")	2800 (9' 2")
Overall height of boom	C			3030 (9' 11")	3200 (10' 6")	3110 (10' 2")
Superstructure width	D			2700 (8' 10")	2700 (8' 10")	2700 (8' 10")
Overall height of cab	E			3000 (9' 10")	3000 (9' 10")	3000 (9' 10")
Ground clearance of counterweight	F			1060 (3' 6")	1060 (3' 6")	1060 (3' 6")
Overall height of engine hood	G			2380 (7' 10")	2380 (7' 10")	2380 (7' 10")
Overall height of handrail	G'			2970 (9' 9")	2970 (9' 9")	2970 (9' 9")
Minimum ground clearance	H			470 (1' 7")	470 (1' 7")	470 (1' 7")
Rear-end distance	I			2770 (9' 1")	2770 (9' 1")	2770 (9' 1")
Rear-end swing radius	I'			2845 (9' 4")	2845 (9' 4")	2845 (9' 4")
Distance between tumblers	J			3360 (11' 0")	3360 (11' 0")	3360 (11' 0")
Undercarriage length	K			4170 (13' 8")	4170 (13' 8")	4170 (13' 8")
Undercarriage width	L			2800 (9' 2")	2800 (9' 2")	2800 (9' 2")
Track gauge	M			2200 (7' 3")	2200 (7' 3")	2200 (7' 3")
Track shoe width, standard	N			600 (2' 0")	600 (2' 0")	600 (2' 0")
Travel speed (low/high)		km/hr (mph)		3.5/5.7 (2.2/3.5)	3.5/5.7 (2.2/3.5)	3.5/5.7 (2.2/3.5)
Swing speed		rpm		12.2	12.2	12.2
Gradeability		Degree (%)		35 (70)	35 (70)	35 (70)
Ground pressure		kgf/cm² (psi)		0.48 (6.81)	0.48 (6.76)	0.48 (6.78)
Max traction force		kg (lb)		21100 (46517)	21100 (46517)	21100 (46517)

Machine Serial No. : -#4560, #4880-#4922

## 2) HX220S, MONO BOOM

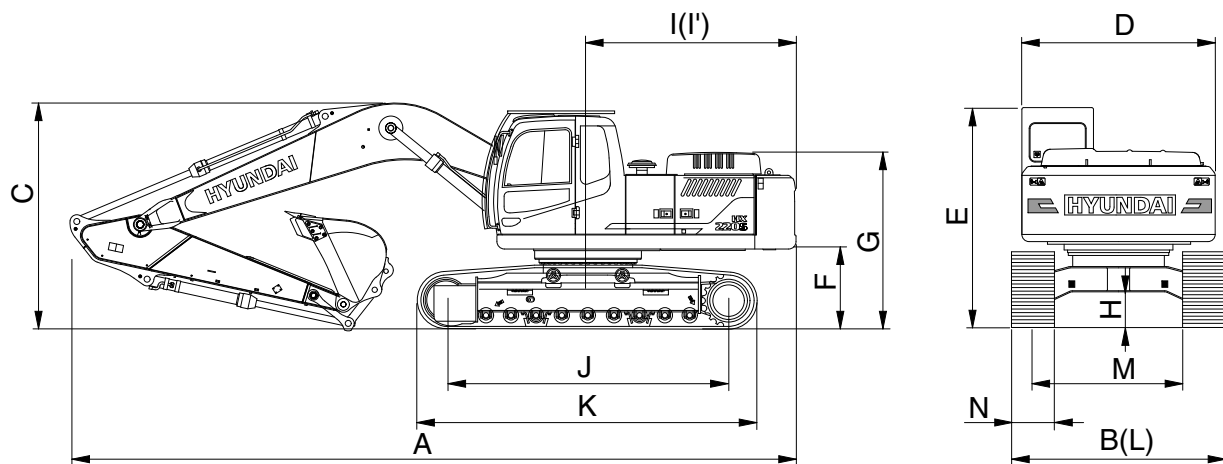


210S2SP03

Description		Unit		Specification		
		m (ft-in)	Boom	5.68 (20' 6")		
			Arm	2.92 (9' 7")	2.00 (6' 7")	2.40 (7' 10")
		mm (in)	Shoe	600 (24)		
Operating weight		kg (lb)		21260 (46870)	21100 (46520)	21160 (46650)
Bucket capacity (SAE heaped), standard		m <sup>3</sup> (yd <sup>3</sup> )		0.92 (1.20)	0.92 (1.20)	0.92 (1.20)
Overall length	A	mm (ft-in)		9530 (31' 3")	9650 (31' 8")	9570 (31' 5")
Overall width	B			2990 (9' 10")	2990 (9' 10")	2990 (9' 10")
Overall height of boom	C			3030 (9' 11")	3200 (10' 6")	3110 (10' 2")
Superstructure width	D			2700 (8' 10")	2700 (8' 10")	2700 (8' 10")
Overall height of cab	E			3000 (9' 10")	3000 (9' 10")	3000 (9' 10")
Ground clearance of counterweight	F			1060 (3' 6")	1060 (3' 6")	1060 (3' 6")
Overall height of engine hood	G			2380 (7' 10")	2380 (7' 10")	2380 (7' 10")
Overall height of handrail	G'			2970 (9' 9")	2970 (9' 9")	2970 (9' 9")
Minimum ground clearance	H			470 (1' 7")	470 (1' 7")	470 (1' 7")
Rear-end distance	I			2770 (9' 1")	2770 (9' 1")	2770 (9' 1")
Rear-end swing radius	I'			2845 (9' 4")	2845 (9' 4")	2845 (9' 4")
Distance between tumblers	J			3650 (12' 0")	3650 (12' 0")	3650 (12' 0")
Undercarriage length	K			4440 (14' 7")	4440 (14' 7")	4440 (14' 7")
Undercarriage width	L			2990 (9' 10")	2990 (9' 10")	2990 (9' 10")
Track gauge	M			2390 (7' 10")	2390 (7' 10")	2390 (7' 10")
Track shoe width, standard	N			600 (2' 0")	600 (2' 0")	600 (2' 0")
Travel speed (low/high)		km/hr (mph)		3.5/5.7 (2.2/3.5)	3.5/5.7 (2.2/3.5)	3.5/5.7 (2.2/3.5)
Swing speed		rpm		12.2	12.2	12.2
Gradeability		Degree (%)		35 (70)	35 (70)	35 (70)
Ground pressure		kgf/cm <sup>2</sup> (psi)		0.45 (6.45)	0.45 (6.41)	0.45 (6.42)
Max traction force		kg (lb)		21100 (46517)	21100 (46517)	21100 (46517)

Machine Serial No. : -#4560, #4880-#4922

3) HX220S LR

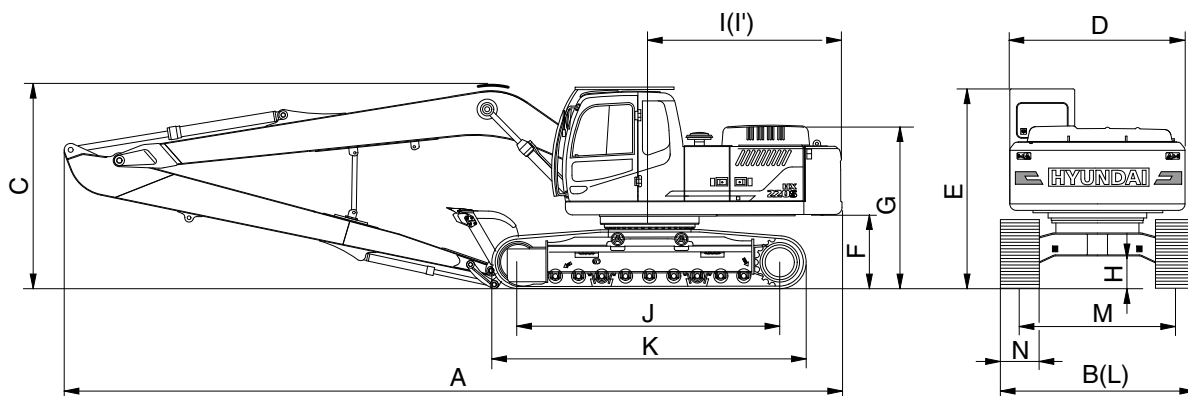


210S2SP10

Description		Unit		Specification
		m (ft-in)	Boom	8.2 (26' 11")
			Arm	6.30 (20' 8")
		mm (in)	Shoe	800 (32)
Operating weight		kg (lb)		24390 (53770)
Bucket capacity (SAE heaped), standard		m <sup>3</sup> (yd <sup>3</sup> )		0.52 (0.68)
Overall length	A	mm (ft-in)		12030 (39' 6")
Overall width	B			3190 (10' 6")
Overall height of boom	C			3280 (10' 9")
Superstructure width	D			2700 (8' 10")
Overall height of cab	E			3000 (9' 10")
Ground clearance of counterweight	F			1060 (3' 6")
Overall height of engine hood	G			2380 (7' 10")
Overall height of handrail	G'			2970 (9' 9")
Minimum ground clearance	H			470 (1' 7")
Rear-end distance	I			2770 (9' 1")
Rear-end swing radius	I'			2845 (9' 4")
Distance between tumblers	J			3650 (12' 0")
Undercarriage length	K			4440 (14' 7")
Undercarriage width	L			3190 (10' 6")
Track gauge	M			2390 (7' 10")
Track shoe width, standard	N			800 (2' 7")
Travel speed (low/high)		km/hr (mph)		3.66/5.76
Swing speed		rpm		12.4
Gradeability		Degree (%)		35 (70)
Ground pressure		kgf/cm <sup>2</sup> (psi)		0.39 (5.55)
Max traction force		kg (lb)		20832 (45930)

### 3. WORKING RANGE AND DIGGING FORCE

#### 1) HX210S, MONO BOOM

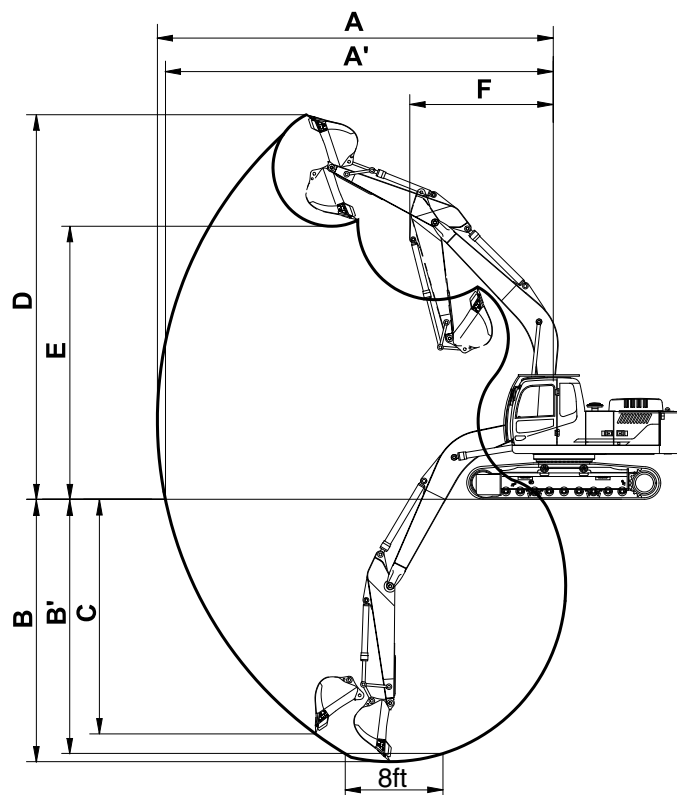


210S2SP04A

Description	m (ft-in)	Boom	5.68 (18' 8")		
		Arm	2.92 (9' 7")	2.00 (6' 7")	2.40 (7' 10")
Max digging reach	mm (ft-in)	A	9,980 ( 32' 9")	9,140 ( 30' 0")	9,500 ( 31' 2")
Max digging reach on ground		A'	9,820 ( 32' 3")	8,960 ( 29' 5")	9,330 ( 30' 7")
Max digging depth		B	6,730 ( 22' 1")	5,820 ( 19' 1")	6,220 ( 20' 5")
Max digging depth (8 ft level)		B'	6,560 ( 21' 6")	5,580 ( 18' 4")	6,010 ( 19' 9")
Max vertical wall digging depth		C	6,280 ( 20' 7")	5,280 ( 17' 4")	5,720 ( 18' 9")
Max digging height		D	9,600 ( 31' 6")	9,140 ( 30' 0")	9,340 ( 30' 8")
Max dumping height		E	6,780 ( 22' 3")	6,330 ( 20' 9")	6,520 ( 21' 5")
Min swing radius		F	3,670 ( 12' 0")	3,750 ( 12' 4")	3,740 ( 12' 3")
Bucket digging force	kN	SAE	133.4	133.4	133.4
	kgf		13600	13600	13600
	lbf		29980	29980	29980
	kN	ISO	152.0	152.0	152.0
	kgf		15500	15500	15500
	lbf		34170	34170	34170
Arm digging force	kN	SAE	102.0	144.2	119.6
	kgf		10400	14700	12200
	lbf		22930	32410	26900
	kN	ISO	106.9	151.0	125.5
	kgf		10900	15400	12800
	lbf		24030	33950	28220

Machine Serial No. : -#4560, #4880-#4922

2) HX220S, MONO BOOM

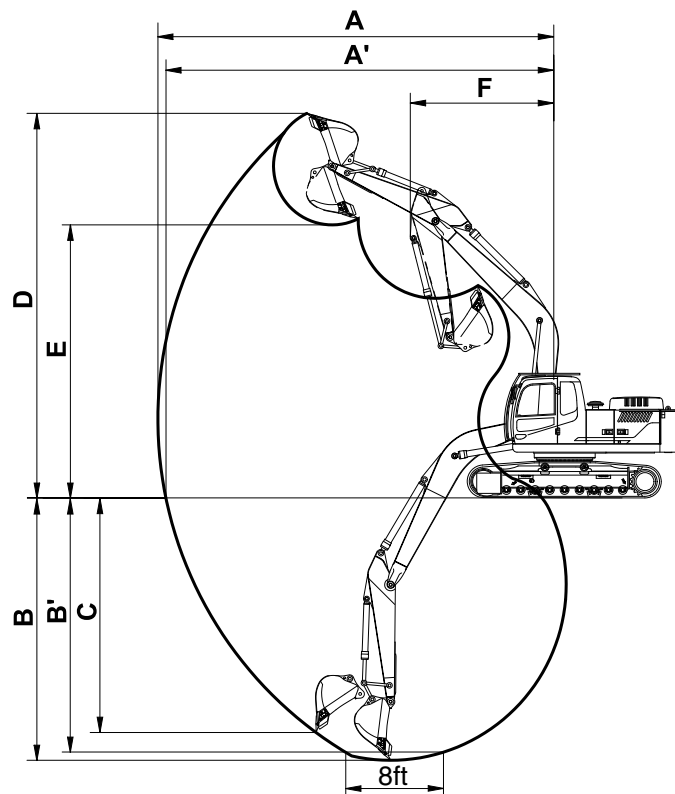


210S2SP04A

Description	m (ft-in)	Boom	5.68 (20' 6")		
		Arm	2.92 (9' 7")	2.00 (6' 7")	2.40 (7' 10")
Max digging reach	mm (ft-in)	A	9,980 ( 32' 9")	9,140 ( 30' 0")	9,500 ( 31' 2")
Max digging reach on ground		A'	9,820 ( 32' 3")	8,960 ( 29' 5")	9,330 ( 30' 7")
Max digging depth		B	6,730 ( 22' 1")	5,820 ( 19' 1")	6,220 ( 20' 5")
Max digging depth (8 ft level)		B'	6,560 ( 21' 6")	5,580 ( 18' 4")	6,010 ( 19' 9")
Max vertical wall digging depth		C	6,280 ( 20' 7")	5,280 ( 17' 4")	5,720 ( 18' 9")
Max digging height		D	9,600 ( 31' 6")	9,140 ( 30' 0")	9,340 ( 30' 8")
Max dumping height		E	6,780 ( 22' 3")	6,330 ( 20' 9")	6,520 ( 21' 5")
Min swing radius		F	3,670 ( 12' 0")	3,750 ( 12' 4")	3,740 ( 12' 3")
Bucket digging force	kN	SAE	133.4	133.4	133.4
	kgf		13600	13600	13600
	lbf		29980	29980	29980
	kN	ISO	152.0	152.0	152.0
	kgf		15500	15500	15500
	lbf		34170	34170	34170
Arm digging force	kN	SAE	102.0	144.2	119.6
	kgf		10400	14700	12200
	lbf		22930	32410	26900
	kN	ISO	106.9	151.0	125.5
	kgf		10900	15400	12800
	lbf		24030	33950	28220

Machine Serial No. : #4561-#4879, #4923-

### 3) HX220S LR

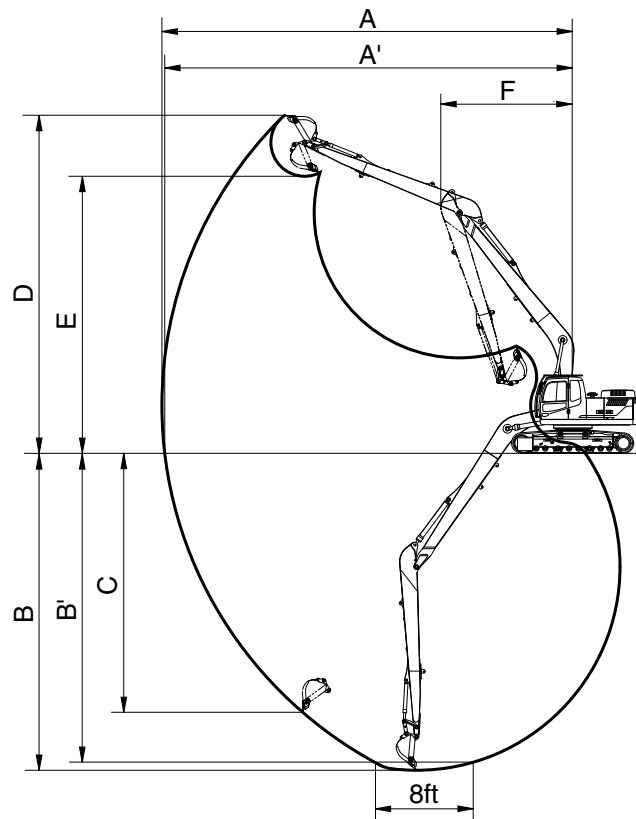

210S2SP11A

Description	m (ft-in)	Boom	8.50 (27' 11")
		Arm	6.20 (20' 4")
Max digging reach	mm (ft-in)	A	15425 (50' 7")
Max digging reach on ground		A'	15320 (50' 3")
Max digging depth		B	11500 (37' 9")
Max digging depth (8 ft level)		B'	11355 (37' 3")
Max vertical wall digging depth		C	10265 (33' 8")
Max digging height		D	13445 (44' 1")
Max dumping height		E	11200 (36' 9")
Min swing radius		F	4705 (15' 5")
Bucket digging force	kN	SAE	68.0
	kgf		6930
	lbf		15280
	kN	ISO	80.3
	kgf		8190
	lbf		18060
Arm digging force	kN	SAE	49.5
	kgf		5050
	lbf		11130
	kN	ISO	50.5
	kgf		5150
	lbf		11350

Machine Serial No. : -#4560, #4880-#4922


#### 4. WEIGHT











Item	HX210S		HX220S	
	kg	lb	kg	lb
Upperstructure assembly	8950	19730	←	
Main frame weld assembly	2600	5730	←	
Engine assembly	437	963	←	
Main pump assembly	120	265	←	
Main control valve assembly	200	440	←	
Swing motor assembly	190	420	←	
Hydraulic oil tank assembly	240	530	←	
Fuel tank assembly	195	430	←	
Counterweight	3600	7940	←	
Cab assembly	310	680	←	
Lower chassis assembly	8060	17770	8700	19180
Track frame weld assembly	2545	5611	2720	6000
Swing bearing	290	639	←	
Travel motor assembly	305	670	←	
Turning joint	55	120	←	
Track recoil spring	140	309	←	
Idler	151	333	←	
Carrier roller	21	46	←	
Track roller	48	106	←	
Track-chain assembly (600 mm standard triple grouser shoe)	1353	2983	1356	2989
Front attachment assembly (5.68 m boom, 2.92 m arm, 0.87 m³ SAE heaped bucket)	4030	8880	←	
5.68 m boom assembly	1520	3350	←	
2.92 m arm assembly	750	1650	←	
0.92 m³ SAE heaped bucket	765	1690	←	
Boom cylinder assembly	180	400	←	
Arm cylinder assembly	290	640	←	
Bucket cylinder assembly	175	390	←	
Bucket control link assembly	170	370	←	

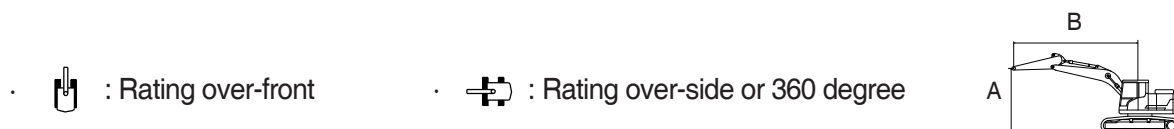Machine Serial No. : -#4560, #4880-#4922

## 5. LIFTING CAPACITIES

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX210S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5680	2000	3600	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*5710 *12590	*5710 *12590	5.00 (16.4)
6.0 m (19.7 ft)	kg lb					*5450 *12020	4330 9550			*5520 *12170	3920 8640	6.35 (20.8)
4.5 m (14.8 ft)	kg lb			*6890 *15190	6510 14350	*5800 *12790	4200 9260			4900 10800	3170 6990	7.14 (23.4)
3.0 m (9.8 ft)	kg lb			*8680 *19140	5970 13160	6260 13800	3990 8800	4440 9790	2860 6310	4400 9700	2830 6240	7.55 (24.8)
1.5 m (4.9 ft)	kg lb					6040 13320	3790 8360	4360 9610	2780 6130	4240 9350	2710 5970	7.64 (25.1)
0.0 m (0.0 ft)	kg lb			9190 20260	5450 12020	5910 13030	3670 8090			4370 9630	2770 6110	7.43 (24.4)
-1.5 m (-4.9 ft)	kg lb			9210 20300	5460 12040	5900 13010	3660 8070			4880 10760	3080 6790	6.88 (22.6)
-3.0 m (-9.8 ft)	kg lb	*12380 *27290	10760 23720	*9130 *20130	5600 12350					6190 13650	3880 8550	5.90 (19.4)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause possible personal injury or property damage.


Make adjustments to the rated load as necessary for non-standard configurations.









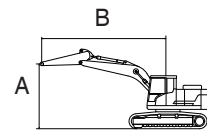

**Machine Serial No. : -#4560, #4880-#4922**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX210S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5680	2400	3600	600	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*5080 *11200	4920 10850	5.58 (18.3)
6.0 m (19.7 ft)	kg lb					*5000 *11020	4380 9660			*4620 *10190	3500 7720	6.82 (22.4)
4.5 m (14.8 ft)	kg lb			*6340 *13980	*6340 *13980	*5440 *11990	4240 9350	4530 9990	2930 6460	4480 9880	2890 6370	7.55 (24.8)
3.0 m (9.8 ft)	kg lb			*8140 *17950	6060 13360	*6230 *13730	4010 8840	4450 9810	2860 6310	4060 8950	2600 5730	7.94 (26.1)
1.5 m (4.9 ft)	kg lb			9390 20700	5620 12390	6040 13320	3790 8360	4340 9570	2760 6080	3920 8640	2490 5490	8.03 (26.3)
0.0 m (0.0 ft)	kg lb			9160 20190	5420 11950	5880 12960	3650 8050	4270 9410	2690 5930	4020 8860	2540 5600	7.83 (25.7)
-1.5 m (-4.9 ft)	kg lb	*10830 *23880	10370 22860	9130 20130	5390 11880	5840 12870	3610 7960			4430 9770	2790 6150	7.31 (24.0)
-3.0 m (-9.8 ft)	kg lb	*13260 *29230	10570 23300	9250 20390	5500 12130	5930 13070	3680 8110			5420 11950	3400 7500	6.40 (21.0)
-4.5 m (-14.8 ft)	kg lb			*7160 *15790	5790 12760					*6330 *13960	5180 11420	4.89 (16.0)

**Note** 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ **Lifting capacities are based upon a standard machine conditions.**

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ **Failure to comply to the rated load can cause possible personal injury or property damage.**


Make adjustments to the rated load as necessary for non-standard configurations.













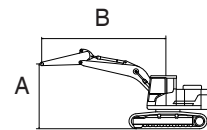**Machine Serial No. : -#4560, #4880-#4922**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX210S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5680	2920	3600	600	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)										At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
														m (ft)
7.5 m (24.6 ft)	kg lb							*4450 *9810	4450 9810			*3370 *7430	*3370 *7430	6.26 (20.5)
6.0 m (19.7 ft)	kg lb							*4440 *9790	*4440 *9790			*3100 *6830	3080 6790	7.38 (24.2)
4.5 m (14.8 ft)	kg lb							*4960 *10930	4280 9440	4570 10080	2960 6530	*3020 *6660	2590 5710	8.07 (26.5)
3.0 m (9.8 ft)	kg lb					*7400 *16310	6190 13650	*5790 *12760	4030 8880	4450 9810	2850 6280	*3070 *6770	2340 5160	8.43 (27.7)
1.5 m (4.9 ft)	kg lb					*9130 *20130	5670 12500	6050 13340	3790 8360	4320 9520	2730 6020	*3250 *7170	2240 4940	8.51 (27.9)
0.0 m (0.0 ft)	kg lb			*5920 *13050	*5920 *13050	9140 20150	5390 11880	5850 12900	3610 7960	4220 9300	2640 5820	*3590 *7910	2280 5030	8.32 (27.3)
-1.5 m (-4.9 ft)	kg lb	*6500 *14330	*6500 *14330	*10400 *22930	10130 22330	9040 19930	5300 11680	5770 12720	3530 7780	4190 9240	2610 5750	3950 8710	2470 5450	7.84 (25.7)
-3.0 m (-9.8 ft)	kg lb	*11120 *24520	*11120 *24520	*14170 *31240	10310 22730	9110 20080	5360 11820	5800 12790	3560 7850			4680 10320	2920 6440	7.00 (23.0)
-4.5 m (-14.8 ft)	kg lb			*11620 *25620	10680 23550	*8190 *18060	5570 12280					*6080 *13400	4080 8990	5.65 (18.5)

**Note** 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ **Lifting capacities are based upon a standard machine conditions.**

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.









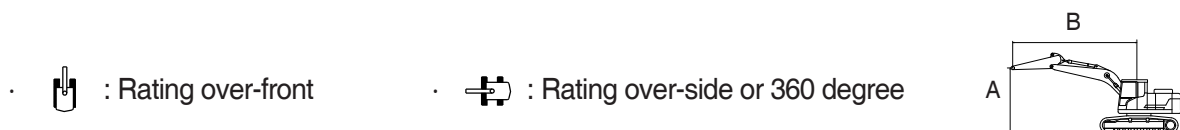

▲ **Failure to comply to the rated load can cause possible personal injury or property damage.**

Make adjustments to the rated load as necessary for non-standard configurations.

Machine Serial No. : -#4560, #4880-#4922

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX220S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5680	2000	3600	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*5710 *12590	*5710 *12590	5.00 (16.4)
6.0 m (19.7 ft)	kg lb					*5450 *12020	4820 10630			*5520 *12170	4370 9630	6.35 (20.8)
4.5 m (14.8 ft)	kg lb			*6880 *15170	*6880 *15170	*5800 *12790	4690 10340			5520 12170	3550 7830	7.14 (23.4)
3.0 m (9.8 ft)	kg lb			*8680 *19140	6730 14840	*6530 *14400	4470 9850	5010 11050	3200 7050	4960 10930	3170 6990	7.55 (24.8)
1.5 m (4.9 ft)	kg lb					6860 15120	4270 9410	4930 10870	3120 6880	4800 10580	3040 6700	7.64 (25.1)
0.0 m (0.0 ft)	kg lb			*10510 *23170	6190 13650	6730 14840	4150 9150			4950 10910	3120 6880	7.43 (24.4)
-1.5 m (-4.9 ft)	kg lb			*10220 *22530	6210 13690	6720 14820	4140 9130			5530 12190	3470 7650	6.88 (22.6)
-3.0 m (-9.8 ft)	kg lb	*12380 *27290	*12380 *27290	*9130 *20130	6350 14000					*6670 *14700	4360 9610	5.91 (19.4)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.


▲ Failure to comply to the rated load can cause possible personal injury or property damage.


Make adjustments to the rated load as necessary for non-standard configurations.









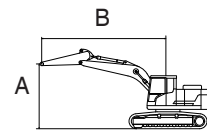

**Machine Serial No. : -#4560, #4880-#4922**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX220S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5680	2400	3600	600	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*5080 *11200	*5080 *11200	5.58 (18.3)
6.0 m (19.7 ft)	kg lb					*5000 *11020	4870 10740			*4620 *10190	3910 8620	6.81 (22.4)
4.5 m (14.8 ft)	kg lb			*6340 *13980	*6340 *13980	*5440 *11990	4720 10410	*4990 *11000	3280 7230	*4490 *9900	3240 7140	7.55 (24.8)
3.0 m (9.8 ft)	kg lb			*8130 *17920	6830 15060	*6220 *13710	4490 9900	5020 11070	3200 7050	*4580 *10100	2920 6440	7.94 (26.1)
1.5 m (4.9 ft)	kg lb			*9700 *21380	6370 14040	6870 15150	4260 9390	4910 10820	3100 6830	4430 9770	2810 6190	8.03 (26.3)
0.0 m (0.0 ft)	kg lb			*10400 *22930	6170 13600	6710 14790	4120 9080	4840 10670	3040 6700	4550 10030	2870 6330	7.83 (25.7)
-1.5 m (-4.9 ft)	kg lb	*10820 *23850	*10820 *23850	*10330 *22770	6140 13540	6660 14680	4080 8990			5020 11070	3140 6920	7.31 (24.0)
-3.0 m (-9.8 ft)	kg lb	*13260 *29230	12250 27010	*9500 *20940	6250 13780	6750 14880	4160 9170			6160 13580	3830 8440	6.41 (21.0)
-4.5 m (-14.8 ft)	kg lb			*7160 *15790	6550 14440					*6330 *13960	5840 12870	4.89 (16.0)

**Note** 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ **Lifting capacities are based upon a standard machine conditions.**

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.


▲ **Failure to comply to the rated load can cause possible personal injury or property damage.**


Make adjustments to the rated load as necessary for non-standard configurations.













**Machine Serial No. : -#4560, #4880-#4922**

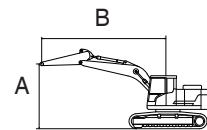Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX220S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5680	2920	3600	600	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)										At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
														m (ft)
7.5 m (24.6 ft)	kg lb							*4450 *9810	*4450 *9810			*3370 *7430	*3370 *7430	6.26 (20.5)
6.0 m (19.7 ft)	kg lb							*4440 *9790	*4440 *9790			*3100 *6830	*3100 *6830	7.38 (24.2)
4.5 m (14.8 ft)	kg lb							*4950 *10910	4770 10520	*4700 *10360	3310 7300	*3020 *6660	2900 6390	8.07 (26.5)
3.0 m (9.8 ft)	kg lb					*7390 *16290	6960 15340	*5790 *12760	4520 9960	5030 11090	3200 7050	*3070 *6770	2640 5820	8.43 (27.7)
1.5 m (4.9 ft)	kg lb					*9130 *20130	6430 14180	*6670 *14700	4270 9410	4890 10780	3080 6790	*3250 *7170	2530 5580	8.51 (27.9)
0.0 m (0.0 ft)	kg lb			*5920 *13050	*5920 *13050	*10130 *22330	6130 13510	6680 14730	4090 9020	4790 10560	2990 6590	*3590 *7910	2580 5690	8.32 (27.3)
-1.5 m (-4.9 ft)	kg lb	*6500 *14330	*6500 *14330	*10390 *22910	*10390 *22910	*10340 *22800	6050 13340	6590 14530	4010 8840	4750 10470	2950 6500	*4200 *9260	2790 6150	7.84 (25.7)
-3.0 m (-9.8 ft)	kg lb	*11110 *24490	*11110 *24490	*14180 *31260	11990 26430	*9820 *21650	6110 13470	6620 14590	4040 8910			5310 11710	3300 7280	7.01 (23.0)
-4.5 m (-14.8 ft)	kg lb			*11620 *25620	*11620 *25620	*8200 *18080	6330 13960					*6080 *13400	4600 10140	5.66 (18.6)

**Note 1.** Lifting capacity are based on ISO 10567.

**2.** Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

**3.** The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

**4.** \*Indicates load limited by hydraulic capacity.

※ **Lifting capacities are based upon a standard machine conditions.**

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.









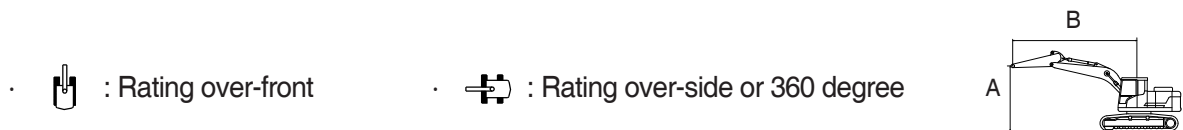











▲ **Failure to comply to the rated load can cause possible personal injury or property damage.**

Make adjustments to the rated load as necessary for non-standard configurations.

**Machine Serial No. : -#4560, #4880-#4922**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX220S LR	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		8200	6300	5300	800	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)																		At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		9.0 m (29.5 ft)		10.5 m (34.4 ft)		12.0 m (39.4 ft)		13.5 m (44.3 ft)		Capacity		Reach
																						m (ft)
10.5m 34.4ft	kg lb													*1210 *2670	*1210 *2670					*900 *1980	*900 *1980	10.88 (35.7)
9.0m 29.5ft	kg lb																			*850 *1870	*850 *1870	11.94 (39.2)
7.5m 24.6ft	kg lb													*1910 *4210	*1910 *4210	*1440 *3170	*1440 *3170			*820 *1810	*820 *1810	12.73 (41.8)
6.0m 19.7ft	kg lb													*2030 *4480	*2030 *4480	*1810 *3990	*1810 *3990			*820 *1810	*820 *1810	13.31 (43.7)
4.5m 14.8ft	kg lb											*2330 *5140	*2330 *5140	*2220 *4890	*2220 *4890	*2110 *4650	1900 4190	*1080 *2380	*1080 *2380	*830 *1830	*830 *1830	13.70 (45.0)
3.0m 9.8ft	kg lb									*3030 *6680	*3030 *6680	*2680 *5910	*2680 *5910	*2450 *5400	2320 5110	*2300 *5070	1820 4010	*1370 *3020	*1370 *3020	*860 *1900	*860 *1900	13.92 (45.7)
1.5m 4.9ft	kg lb			*2840 *6260	*2840 *6260	*6410 *14130	*6410 *14130	*4540 *10010	*4540 *10010	*3600 *7940	*3600 *7940	*3050 *6720	2800 6170	*2700 *5950	2180 4810	*2470 *5450	1730 3810	*1520 *3350	1380 3040	*910 *2010	*910 *2010	13.97 (45.8)
0.0m 0.0ft	kg lb			*2450 *5400	*2450 *5400	*6310 *13910	*6310 *13910	*5340 *11770	4570 10080	*4120 *9080	3380 7450	*3400 *7500	2600 5730	*2950 *6500	2060 4540	*2640 *5820	1650 3640	*1500 *3310	1330 2930	*980 *2160	*980 *2160	13.85 (45.5)
-1.5m -4.9ft	kg lb	*2020 *4450	*2020 *4450	*3010 *6640	*3010 *6640	*5640 *12430	*5640 *12430	*5920 *13050	4250 9370	*4540 *10010	3160 6970	*3710 *8180	2450 5400	*3160 *6970	1950 4300	2640 5820	1580 3480	*1200 *2650	*1200 *2650	*1080 *2380	*1080 *2380	13.57 (44.5)
-3.0m -9.8ft	kg lb	*2900 *6390	*2900 *6390	*3830 *8440	*3830 *8440	*6080 *13400	*6080 *13400	*6270 *13820	4080 8990	*4830 *10650	3010 6640	3910 8620	2340 5160	3140 6920	1880 4140	2600 5730	1540 3400			*1220 *2690	*1220 *2690	13.11 (43.0)
-4.5m -14.8ft	kg lb	*3820 *8420	*3820 *8420	*4830 *10650	*4830 *10650	*7050 *15540	6110 13470	*6400 *14110	4020 8860	*4970 *10960	2950 6500	3850 8490	2290 5050	3110 6860	1850 4080	*2410 *5310	1530 3370			*1420 *3130	*1420 *3130	12.45 (40.9)
-6.0m -19.7ft	kg lb	*4830 *10650	*4830 *10650	*6000 *13230	*6000 *13230	*8460 *18650	6210 13690	*6300 *13890	4050 8930	*4940 *10890	2950 6500	3860 8510	2300 5070	3130 6900	1860 4100					*1750 *3860	1650 3640	11.56 (37.9)
-7.5m -24.6ft	kg lb	*5980 *13180	*5980 *13180	*7440 *16400	*7440 *16400	*7880 *17370	6400 14110	*5940 *13100	4160 9170	*4690 *10340	3030 6680	*3780 *8330	2370 5220							*2330 *5140	1980 4370	10.37 (34.0)
-9.0m -29.5ft	kg lb			*9320 *20550	*9320 *20550	*6820 *15040	6700 14770	*5210 *11490	4360 9610	*4070 *8970	3200 7050									*3240 *7140	2620 5780	8.77 (28.8)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause possible personal injury or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

## 6. BUCKET SELECTION GUIDE

### 1) HX210S, 3600 KG COUNTERWEIGHT



General bucket

Heavy duty  
(without side cutter)

Rock heavy duty



Long reach

Type	Capacity		Width	Weight	Tooth	MONO		
						Recommendation		
	SAE Heaped	CECE heaped	Without side cutter			5.68 m (18' 8") Boom		
				m³ (yd³)	m³ (yd³)	mm (in)	kg (lb)	EA
General bucket	0.92 (1.20)	0.80 (1.05)	1,082 (42.6')	725 (1,600)	5	●	◐	■
	1.10 (1.44)	0.96 (1.26)	1,320 (52.0")	830 (1,830)	5	■	■	▲
	1.20 (1.57)	1.10 (1.44)	1,332 (52.4")	810 (1,790)	5	■	▲	▲
Heavy duty	0.90 (1.18)	0.80 (1.05)	1,082 (42.6")	830 (1,830)	5	●	◐	■
Rock heavy duty	0.87 (1.14)	0.75 (0.98)	1,140 (44.9")	900 (1,980)	5	●	◐	■
	1.20 (1.57)	1.00 (1.31)	1,410 (55.5")	1,030 (2,270)	5	■	▲	X

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
◐	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.


Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

Machine Serial No. : -#4560, #4880-#4922

## 2) HX210S, 4200 KG COUNTERWEIGHT




General bucket

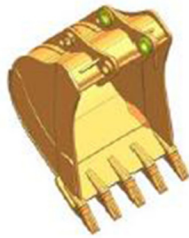

Heavy duty  
(without side cutter)



Rock heavy duty

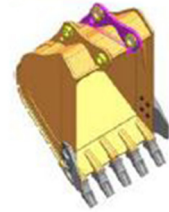

Long reach

Type	Capacity		Width	Weight	Tooth	MONO		
						Recommendation		
	SAE Heaped	CECE heaped	Without side cutter			5.68 m (18' 8") Boom		
	m <sup>3</sup> (yd <sup>3</sup> )	m <sup>3</sup> (yd <sup>3</sup> )	mm (in)	kg (lb)	EA	2.10 m (6' 7") Arm	2.4 m (7' 10") Arm	2.92 m (9' 7") Arm
General bucket	0.92 (1.20)	0.80 (1.05)	1,082 (42.6')	725 (1,600)	5	●	●	◐
	1.10 (1.44)	0.96 (1.26)	1,320 (52.0")	830 (1,830)	5	◐	■	■
	1.20 (1.57)	1.10 (1.44)	1,332 (52.4")	810 (1,790)	5	◐	■	▲
Heavy duty	0.90 (1.18)	0.80 (1.05)	1,082 (42.6")	830 (1,830)	5	●	●	◐
Rock heavy duty	0.87 (1.14)	0.75 (0.98)	1,140 (44.9")	900 (1,980)	5	●	●	◐
	1.20 (1.57)	1.00 (1.31)	1,410 (55.5")	1,030 (2,270)	5	■	■	▲

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
◐	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.

Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

Machine Serial No. : -#4560, #4880-#4922

### 3) HX220S, 3600 KG COUNTERWEIGHT




General bucket



Heavy duty  
(without side cutter)



Rock heavy duty

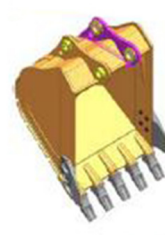

Long reach

Type	Capacity		Width	Weight	Tooth	MONO		
			Without side cutter			Recommendation		
						5.68 m (18' 8") Boom		
	SAE Heaped	CECE heaped				2.10 m (6' 7")Arm	2.4 m (7' 10") Arm	2.92 m (9' 7") Arm
	m³ (yd³)	m³ (yd³)	mm (in)	kg (lb)	EA			
General bucket	0.92 (1.20)	0.80 (1.05)	1,082 (42.6')	725 (1,600)	5	●	●	◐
	1.10 (1.44)	0.96 (1.26)	1,320 (52.0")	830 (1,830)	5	◐	◐	■
	1.20 (1.57)	1.10 (1.44)	1,332 (52.4")	810 (1,790)	5	◐	■	▲
Heavy duty	0.90 (1.18)	0.80 (1.05)	1,082 (42.6")	830 (1,830)	5	●	●	◐
Rock heavy duty	0.87 (1.14)	0.75 (0.98)	1,140 (44.9")	900 (1,980)	5	●	●	◐
	1.20 (1.57)	1.00 (1.31)	1,410 (55.5")	1,030 (2,270)	5	■	■	▲

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
◐	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.

Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

Machine Serial No. : -#4560, #4880-#4922

4) HX220S, 4200 KG COUNTERWEIGHT




General bucket



Heavy duty  
(without side cutter)



Rock heavy duty

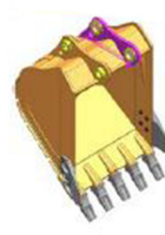

Long reach

Type	Capacity		Width	Weight	Tooth	MONO		
			Without side cutter			Recommendation		
	SAE Heaped	CECE heaped				5.68 m (18' 8") Boom		
	m³ (yd³)	m³ (yd³)	mm (in)	kg (lb)	EA	2.10 m (6' 7") Arm	2.4 m (7' 10") Arm	2.92 m (9' 7") Arm
General bucket	0.92 (1.20)	0.80 (1.05)	1,082 (42.6")	725 (1,600)	5	●	●	●
	1.10 (1.44)	0.96 (1.26)	1,320 (52.0")	830 (1,830)	5	●	◐	■
	1.20 (1.57)	1.10 (1.44)	1,332 (52.4")	810 (1,790)	5	◐	◐	■
Heavy duty	0.90 (1.18)	0.80 (1.05)	1,082 (42.6")	830 (1,830)	5	●	●	●
Rock heavy duty	0.87 (1.14)	0.75 (0.98)	1,140 (44.9")	900 (1,980)	5	●	●	●
	1.20 (1.57)	1.00 (1.31)	1,410 (55.5")	1,030 (2,270)	5	◐	■	■

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
◐	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.


Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

Machine Serial No. : -#4560, #4880-#4922

5) HX220S, 5300 KG COUNTERWEIGHT




General bucket

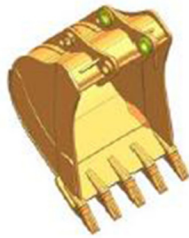

Heavy duty  
(without side cutter)



Rock heavy duty

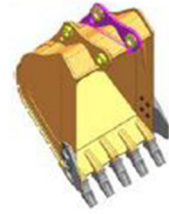

Long reach

Type	Capacity		Width	Weight	Tooth	MONO			L/Reach
						Recommendation			
	SAE Heaped	CECE heaped	Without side cutter			5.68 m (18' 8") Boom			
						m³ (yd³)	m³ (yd³)	mm (in)	kg (lb)
General bucket	0.92 (1.20)	0.80 (1.05)	1,082 (42.6')	725 (1,600)	5	●	●	●	X
	1.10 (1.44)	0.96 (1.26)	1,320 (52.0")	830 (1,830)	5	●	●	●	X
	1.20 (1.57)	1.10 (1.44)	1,332 (52.4")	810 (1,790)	5	●	●	◐	X
Heavy duty	0.90 (1.18)	0.80 (1.05)	1,082 (42.6")	830 (1,830)	5	●	●	●	X
Rock heavy duty	0.87 (1.14)	0.75 (0.98)	1,140 (44.9")	900 (1,980)	5	●	●	●	X
	1.20 (1.57)	1.00 (1.31)	1,410 (55.5")	1,030 (2,270)	5	●	◐	◐	X
LR	0.52 (0.68)	0.45 (0.59)	935 (36.8")	460 (1,010)	5	X	X	X	■

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
◐	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.

Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.


Machine Serial No. : -#4560, #4880-#4922

## 7. UNDERCARRIAGE

### 1) TRACKS

X-leg type center frame is integrally welded with reinforced box-section track frames. The design includes dry tracks, lubricated rollers, idlers, sprockets, hydraulic track adjusters with shock absorbing springs, and assembled track-type tractor shoes with triple grousers.

### 2) TYPES OF SHOES

Model	Shapes		Triple grouser			
						
HX210S	Shoe width	mm (in)	600 (24)	-	-	800 (32)
	Operating weight	kg (lb)	20830 (45920)	-	-	21380 (47140)
	Ground pressure	kgf/cm <sup>2</sup> (psi)	0.48 (6.81)	-	-	0.42 (5.99)
	Overall width	mm (ft-in)	2800 (9' 2")	-	-	3000 (9' 10")
HX220S	Shoe width	mm (in)	600 (24)★	600 (24)	700 (28)	800 (32)
	Operating weight	kg (lb)	21260 (46870)	21450 (47290)	21750 (47950)	22040 (48590)
	Ground pressure	kgf/cm <sup>2</sup> (psi)	0.45 (6.45)	0.46 (6.51)	0.40 (5.56)	0.35 (5.02)
	Overall width	mm (ft-in)	2990 (9' 10")	2800 (9' 2")	3090 (10' 2")	3190 (10' 6")

★ : 8.5 T

### 3) NUMBER OF ROLLERS AND SHOES ON EACH SIDE

Item		Quantity
Carrier rollers		2 EA
Track rollers	HX210S	7 EA
	HX220S	9 EA
Track shoes	HX210S	46 EA
	HX220S	49 EA

Machine Serial No. : -#4560, #4880-#4922

#### 4) SELECTION OF TRACK SHOE

Suitable track shoes should be selected according to operating conditions.

##### Method of selecting shoes

Confirm the category from the list of applications in **table 2**, then use **table 1** to select the shoe. Wide shoes (categories B and C) have limitations on applications. Before using wide shoes, check the precautions, then investigate and study the operating conditions to confirm if these shoes are suitable.

Select the narrowest shoe possible to meet the required flotation and ground pressure.

Application of wider shoes than recommendations will cause unexpected problem such as bending of shoes, crack of link, breakage of pin, loosening of shoe bolts and the other various problems.

※ Table 1

Track shoe	Specification	Category
600 mm triple grouser	Standard	A
700 mm triple grouser	Option	B
800 mm triple grouser	Option	C

※ Table 2

Category	Applications	Precautions
A	Rocky ground, river beds, normal soil	<ul style="list-style-type: none"><li>Travel at low speed on rough ground with large obstacles such as boulders or fallen trees or a wide range of general civil engineering work</li></ul>
B	Normal soil, soft ground	<ul style="list-style-type: none"><li>These shoes cannot be used on rough ground with large obstacles such as boulders or fallen trees</li><li>Travel at high speed only on flat ground</li><li>Travel slowly at low speed if it is impossible to avoid going over obstacles</li></ul>
C	Extremely soft ground (swampy ground)	<ul style="list-style-type: none"><li>Use the shoes only in the conditions that the machine sinks and it is impossible to use the shoes of category A or B</li><li>These shoes cannot be used on rough ground with large obstacles such as boulders or fallen trees</li><li>Travel at high speed only on flat ground</li><li>Travel slowly at low speed if it is impossible to avoid going over obstacles</li></ul>

## 8. SPECIFICATIONS FOR MAJOR COMPONENTS

### 1) ENGINE

Item	Specification
Model	HD Hyundai Construction Equipment 6BTAA-5.9 (HM5.9)
Type	4-cycle, turbocharged, charge air cooled, mechanical controlled diesel engine
Cooling method	Water cooled
Number of cylinders and arrangement	6 cylinders, in-line
Firing order	1-5-3-6-2-4
Combustion chamber type	Direct injection type
Cylinder bore×stroke	102 × 120 mm (4.02 " × 4.72 ")
Piston displacement	5900 cc (360 cu in)
Compression ratio	17.3 : 1
Rated gross horse power (SAE J1995)	148 Hp at 2000rpm (110 kW at 2000 rpm)
Rated net horse power (SAE J1349)	145 Hp at 2000 rpm (108 kW at 2000 rpm)
Maximum torque at 1300 rpm	64 kgf · m (463 lbf · ft)
Engine oil quantity	14 ℓ (3.8 U.S. gal) : -#1289 20 ℓ (5.3 U.S. gal) : #1290-
Dry weight	437 kg (963 lb)
High idling speed	2250 + 50 rpm
Low idling speed	800 ± 100 rpm
Rated fuel consumption	95 g/Hp · hr at 1200 rpm
Starting motor	Lucas 24V
Alternator	Lucas 24V-75A
Battery	2 × 12V × 100Ah

### 2) MAIN PUMP

Item	Specification
Type	Variable displacement tandem axis piston pumps
Capacity	2 × 117 cc/rev
Maximum pressure	350 kgf/cm <sup>2</sup> (4978 psi)
Rated oil flow	2 × 234 ℓ /min (61.8 U.S. gpm/ 51.4 U.K. gpm)
Rated speed	2000 rpm

Machine Serial No. : -#4560, #4880-#4922

### 3) GEAR PUMP

Item	Specification
Type	Fixed displacement gear pump single stage
Capacity	15 cc/rev
Maximum pressure	40 kgf/cm <sup>2</sup> (568 psi)
Rated oil flow	30 ℓ /min (7.9 U.S. gpm/6.7 U.K. gpm)

### 4) MAIN CONTROL VALVE

Item	Specification
Type	9 spools mono-block
Operating method	Hydraulic pilot system
Main relief valve pressure	350 kgf/cm <sup>2</sup> (4978 psi)
Overload relief valve pressure	400 kgf/cm <sup>2</sup> (5689 psi)

### 5) SWING MOTOR

Item	Specification
Type	Two fixed displacement axial piston motor
Capacity	142.8 cc/rev
Relief pressure	265 kgf/cm <sup>2</sup> (3894 psi)
Braking system	Automatic, spring applied hydraulic released
Braking torque	63.3 kgf/cm <sup>2</sup> (470.8 lbf · ft)
Brake release pressure	20.9~35.5 kgf/cm <sup>2</sup> (297~505 psi)
Reduction gear type	2 - stage planetary
Swing speed	12.2rpm

### 6) TRAVEL MOTOR

Item	Specification
Type	Variable displacement axial piston motor
Relief pressure	350 kgf/cm <sup>2</sup> (4978 psi)
Reduction gear type	2-stage planetary
Braking system	Automatic, spring applied hydraulic released
Brake release pressure	13 kgf/cm <sup>2</sup> (182 psi)
Braking torque	65.1 kgf · m (470 lbf · ft)

Machine Serial No. : -#4560, #4880-#4922

## 7) REMOTE CONTROL VALVE

Item		Specification
Type		Pressure reducing type
Operating pressure	Minimum	6.5 kgf/cm <sup>2</sup> (92 psi)
	Maximum	26 kgf/cm <sup>2</sup> (370 psi)
Single operation stroke	Lever	61 mm (2.4 in)
	Pedal	123 mm (4.84 in)

## 8) CYLINDER

Item		Specification
Boom cylinder	Bore dia × Rod dia × Stroke	Ø 120 × Ø 85 × 1290 mm
	Cushion	Extend only
Arm cylinder	Bore dia × Rod dia × Stroke	Ø 140 × Ø 100 × 1510 mm
	Cushion	Extend and retract
Bucket cylinder	Bore dia × Rod dia × Stroke	Ø 120 × Ø 85 × 1055 mm
	Cushion	Extend only

※ Discoloration of cylinder rod can occur when the friction reduction additive of lubrication oil spreads on the rod surface.

※ Discoloration does not cause any harmful effect on the cylinder performance.

## 9) SHOE

Item		Width	Ground pressure	Link quantity	Overall width
HX210S	Standard	600 mm (24")	0.48 kgf/cm <sup>2</sup> (6.81 psi)	46	2800 mm (9' 2")
	Option	800 mm (32")	0.42 kgf/cm <sup>2</sup> (5.99 psi)	46	3000 mm (9' 10")
HX220S	Standard	600 mm (24")	0.45 kgf/cm <sup>2</sup> (6.45 psi)	49	2990 mm (9' 10")
	Option	600 mm (24")	0.46 kgf/cm <sup>2</sup> (6.51 psi)	49	2800 mm (9' 2")
		700 mm (28")	0.40 kgf/cm <sup>2</sup> (5.56 psi)	49	3090 mm (10' 2")
		800 mm (32")	0.35 kgf/cm <sup>2</sup> (5.02 psi)	49	3190 mm (10' 6")

## 10) BUCKET

Item		Capacity		Tooth quantity	Width	
		SAE heaped	CECE heaped		Without side cutter	With side cutter
HX210S	STD	0.92 m <sup>3</sup> (1.20 yd <sup>3</sup> )	0.80 m <sup>3</sup> (1.05 yd <sup>3</sup> )	5	1150 mm (45.3")	1270 mm (50.0")
HX220S	OPT	1.20 m <sup>3</sup> (1.57 yd <sup>3</sup> )	1.00 m <sup>3</sup> (1.31 yd <sup>3</sup> )	5	1400 mm (55.1")	1520 mm (59.8")
		◆0.90 m <sup>3</sup> (1.18 yd <sup>3</sup> )	0.80 m <sup>3</sup> (1.05 yd <sup>3</sup> )	5	1090 mm (42.9")	—

◆ : Heavy duty bucket

## 9. RECOMMENDED OILS

HD Hyundai Construction Equipment genuine lubricating oils have been developed to offer the best performance and service life for your equipment. These oils have been tested according to the specifications of HD Hyundai Construction Equipment and, therefore, will meet the highest safety and quality requirements. We recommend that you use only HD Hyundai Construction Equipment genuine lubricating oils and grease officially approved by HD Hyundai Construction Equipment.

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C ( °F)							
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)
Engine oil pan	Engine oil ★ <sup>2</sup>	14 (3.8) : -#1289 20 (5.3) : #1290-	★SAE 0W-40							
			★SAE 0W-30							
			SAE 5W-30							
			SAE 10W-30							
			SAE 15W-40							
Swing drive	Gear oil	6.2 (1.6)	★SAE 75W-90							
Final drive		4.5 × 2 (1.2 × 2)	SAE 80W-90							
Hydraulic tank	Hydraulic oil	Tank : 160 (42.3) System : 275 (72.6)	★ISO VG 15							
			ISO VG 32							
			ISO VG 46							
			ISO VG 68							
Fuel tank	Diesel fuel	340 (89.8)	★ASTM D975 NO.1							
			ASTM D975 NO.2							
Fitting (grease nipple)	Grease	As required	★NLGI NO.1							
			NLGI NO.2							
Radiator (reservoir tank)	Mixture of antifreeze and soft water★ <sup>1</sup>	31 (8.2)	Ethylene glycol base permanent type (50 : 50)							
			★Ethylene glycol base permanent type (60 : 40)							

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Material

★ : Cold region

Russia, CIS, Mongolia

★<sup>1</sup> : Soft water

City water or distilled water

★<sup>2</sup> : Meets or exceeds


API CI-4 grade

※ Using any lubricating oils other than HD Hyundai Construction Equipment genuine products may lead to a deterioration of performance and cause damage to major components.

※ Do not mix HD Hyundai Construction Equipment genuine oil with any other lubricating oil as it may result in damage to the systems of major components.

※ For HD Hyundai Construction Equipment genuine lubricating oils and grease for use in regions with extremely low temperatures, please contact HD Hyundai Construction Equipment dealers.


## 1. MAJOR COMPONENT

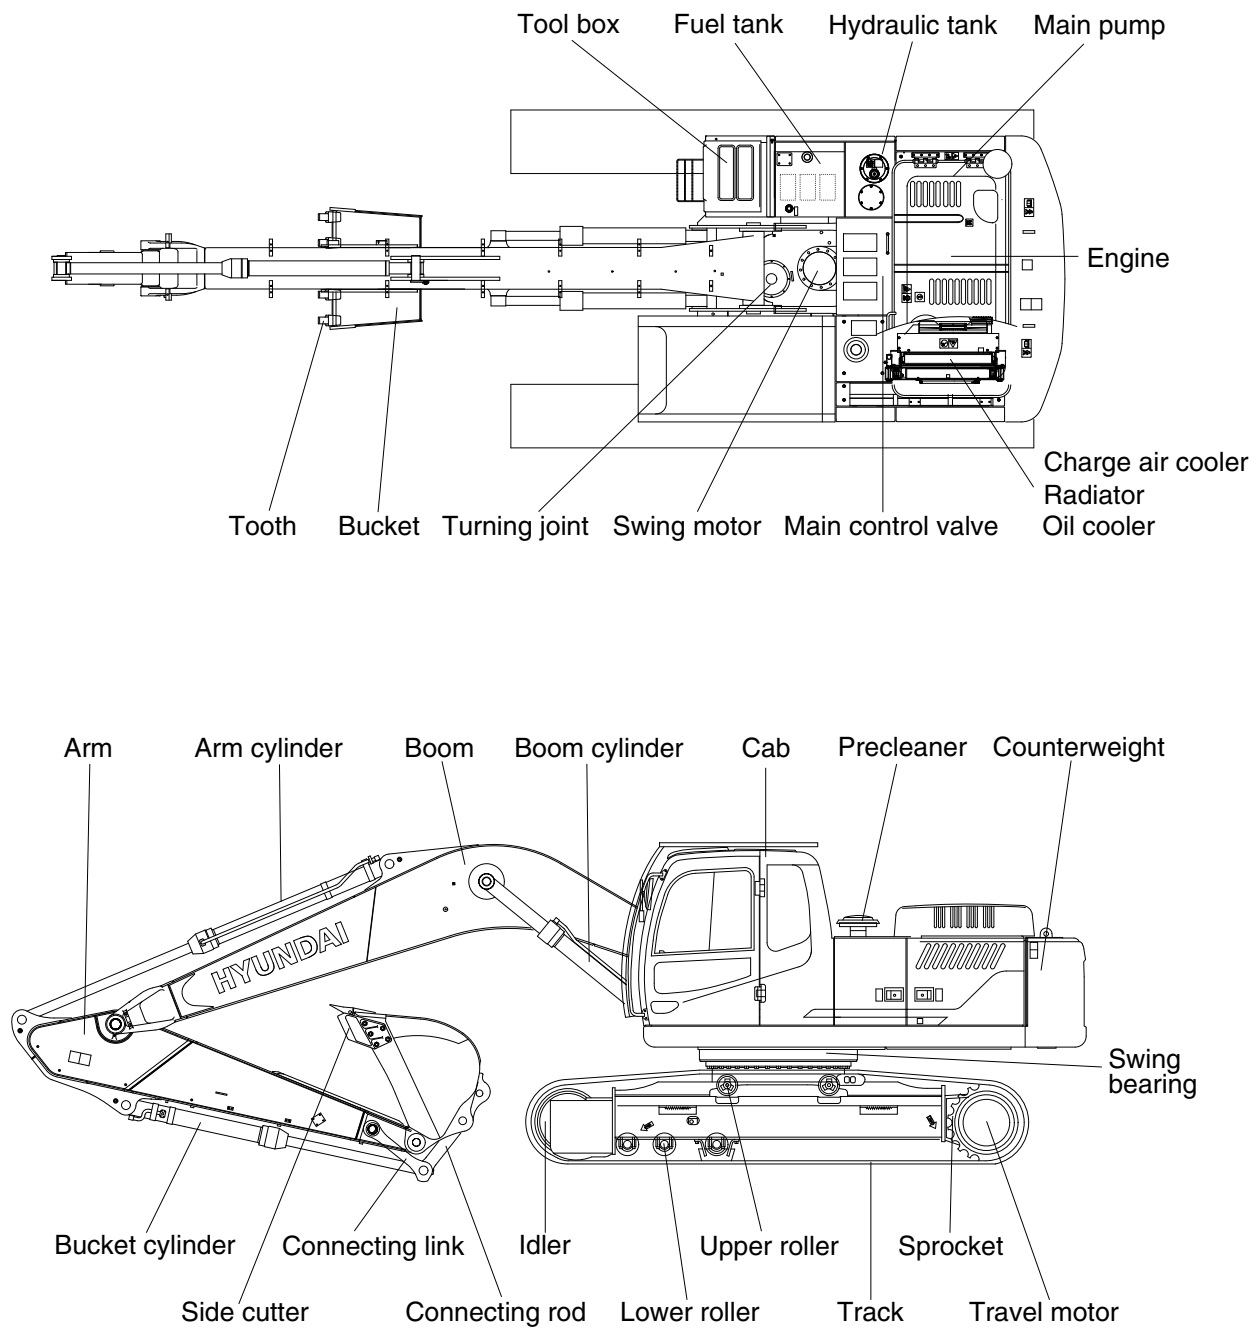

210S2SP01B

## 2. SPECIFICATIONS


### 1) HX210S, MONO BOOM

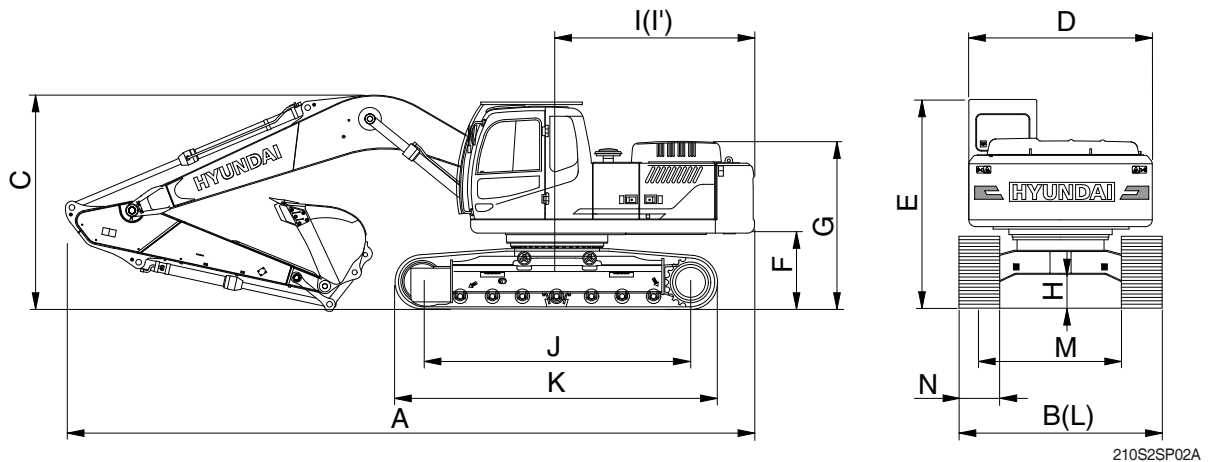

Description		Unit		Specification		
		m (ft-in)	Boom	5.70 (18' 8")		
			Arm	2.90 (9' 6")	2.00 (6' 7")	2.40 (7' 10")
		mm (in)	Shoe	600 (24")		
Operating weight		kg (lb)		20830 (45920)	20670 (45570)	20740 (45720)
Bucket capacity (SAE heaped), standard		m³ (yd³)		0.92 (1.20)	0.92 (1.20)	0.92 (1.20)
Overall length	A	mm (ft-in)		9550 (31' 4")	9620 (31' 7")	9575 (31' 5")
Overall width	B			2800 (9' 2")	2800 (9' 2")	2800 (9' 2")
Overall height of boom	C			2960 (9' 9")	3115 (10' 3")	3020 (9' 11")
Superstructure width	D			2700 (8' 10")	2700 (8' 10")	2700 (8' 10")
Overall height of cab	E			3035 (9' 11")	3035 (9' 11")	3035 (9' 11")
Ground clearance of counterweight	F			1095 (3' 7")	1095 (3' 7")	1095 (3' 7")
Overall height of engine hood	G			2380 (7' 10")	2380 (7' 10")	2380 (7' 10")
Overall height of handrail	G'			2970 (9' 9")	2970 (9' 9")	2970 (9' 9")
Minimum ground clearance	H			475 (1' 7")	475 (1' 7")	475 (1' 7")
Rear-end distance	I			2770 (9' 1")	2770 (9' 1")	2770 (9' 1")
Rear-end swing radius	I'			2845 (9' 4")	2845 (9' 4")	2845 (9' 4")
Distance between tumblers	J			3270 (10' 9")	3270 (10' 9")	3270 (10' 9")
Undercarriage length	K			4015 (13' 2")	4015 (13' 2")	4015 (13' 2")
Undercarriage width	L			2800 (9' 2")	2800 (9' 2")	2800 (9' 2")
Track gauge	M			2200 (7' 3")	2200 (7' 3")	2200 (7' 3")
Track shoe width, standard	N			600 (2' 0")	600 (2' 0")	600 (2' 0")
Travel speed (low/high)		km/hr (mph)		3.5/5.7 (2.2/3.5)	3.5/5.7 (2.2/3.5)	3.5/5.7 (2.2/3.5)
Swing speed		rpm		12.2	12.2	12.2
Gradeability		Degree (%)		35 (70)	35 (70)	35 (70)
Ground pressure		kgf/cm² (psi)		0.48 (6.81)	0.48 (6.76)	0.48 (6.78)
Max traction force		kg (lb)		21100 (46517)	21100 (46517)	21100 (46517)

Machine Serial No. : #4561-#4879, #4923-

2) HX220S, MONO BOOM

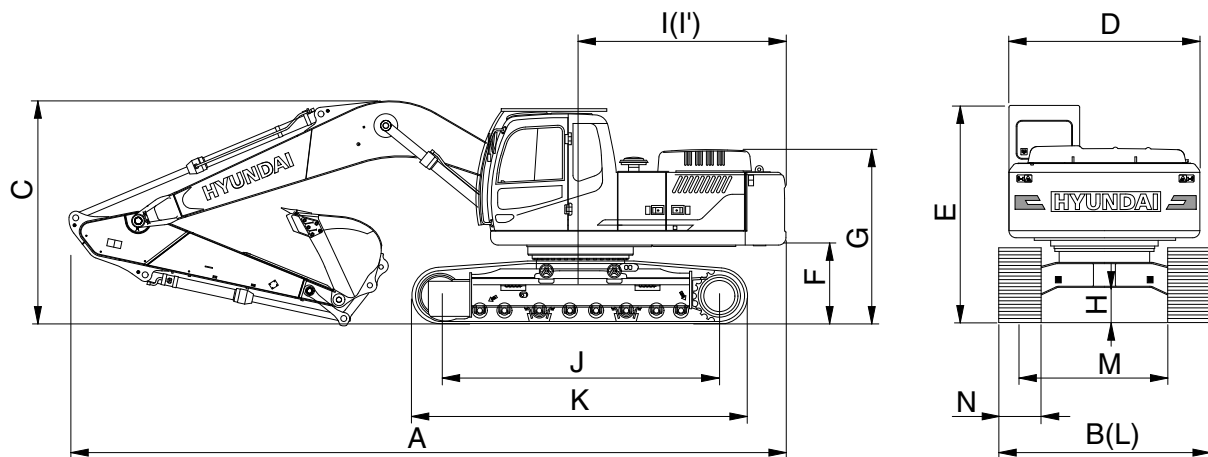


210S2SP03A

Description	Unit		Specification		
	m (ft-in)	Boom	5.70 (18' 8")		
		Arm	2.90 (9' 6")	2.00 (6' 7")	2.40 (7' 10")
	mm (in)	Shoe	600 (24")		
Operating weight	kg (lb)		21260 (46870)	21100 (46520)	21160 (46650)
Bucket capacity (SAE heaped), standard	m³ (yd³)		0.92 (1.20)	0.92 (1.20)	0.92 (1.20)
Overall length	A	mm (ft-in)	9550 (31' 4")	9620 (31' 7")	9575 (31' 5")
Overall width	B		2990 (9' 10")	2990 (9' 10")	2990 (9' 10")
Overall height of boom	C		2960 (9' 9")	3115 (10' 3")	3020 (9' 11")
Superstructure width	D		2700 (8' 10")	2700 (8' 10")	2700 (8' 10")
Overall height of cab	E		3035 (9' 11")	3035 (9' 11")	3035 (9' 11")
Ground clearance of counterweight	F		1095 (3' 7")	1095 (3' 7")	1095 (3' 7")
Overall height of engine hood	G		2380 (7' 10")	2380 (7' 10")	2380 (7' 10")
Overall height of handrail	G'		2970 (9' 9")	2970 (9' 9")	2970 (9' 9")
Minimum ground clearance	H		475 (1' 7")	475 (1' 7")	475 (1' 7")
Rear-end distance	I		2770 (9' 1")	2770 (9' 1")	2770 (9' 1")
Rear-end swing radius	I'		2845 (9' 4")	2845 (9' 4")	2845 (9' 4")
Distance between tumblers	J		3650 (12' 0")	3650 (12' 0")	3650 (12' 0")
Undercarriage length	K		4395 (14' 5")	4395 (14' 5")	4395 (14' 5")
Undercarriage width	L		2990 (9' 10")	2990 (9' 10")	2990 (9' 10")
Track gauge	M		2390 (7' 10")	2390 (7' 10")	2390 (7' 10")
Track shoe width, standard	N		600 (2' 0")	600 (2' 0")	600 (2' 0")
Travel speed (low/high)	km/hr (mph)		3.5/5.7 (2.2/3.5)	3.5/5.7 (2.2/3.5)	3.5/5.7 (2.2/3.5)
Swing speed	rpm		12.2	12.2	12.2
Gradeability	Degree (%)		35 (70)	35 (70)	35 (70)
Ground pressure	kgf/cm² (psi)		0.45 (6.45)	0.45 (6.41)	0.45 (6.42)
Max traction force	kg (lb)		21100 (46517)	21100 (46517)	21100 (46517)

Machine Serial No. : #4561-#4879, #4923-

3) HX220S LR

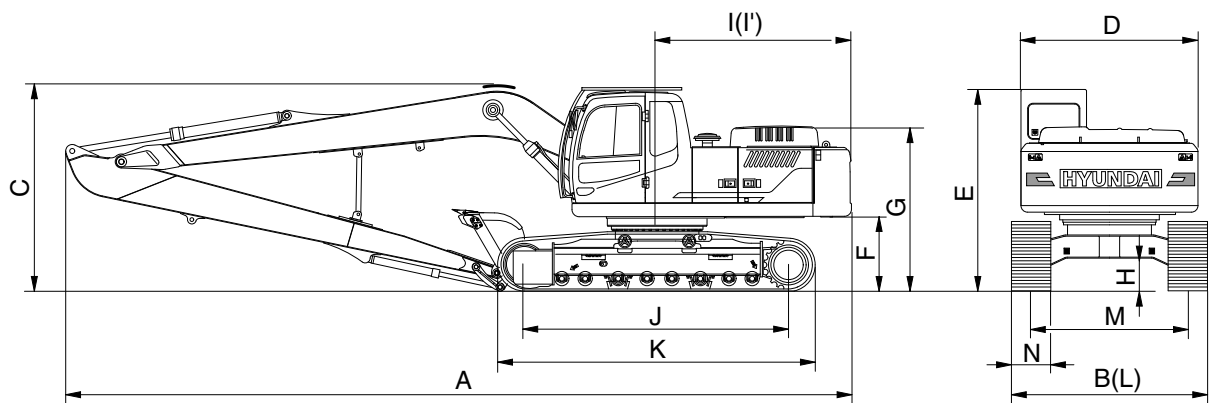


210S2SP10A

Description		Unit		Specification
		m (ft-in)	Boom	8.50 (27' 11")
			Arm	6.20 (20' 4")
		mm (in)	Shoe	800 (32")
Operating weight		kg (lb)		24390 (53770)
Bucket capacity (SAE heaped), standard		m <sup>3</sup> (yd <sup>3</sup> )		0.52 (0.68)
Overall length	A	mm (ft-in)		12345 (40' 6")
Overall width	B			3190 (10' 6")
Overall height of boom	C			3365 (11' 0")
Superstructure width	D			2740 (9' 0")
Overall height of cab	E			3035 (9' 11")
Ground clearance of counterweight	F			1095 (3' 7")
Overall height of engine hood	G			2380 (7' 10")
Overall height of handrail	G'			2970 (9' 9")
Minimum ground clearance	H			475 (1' 7")
Rear-end distance	I			2770 (9' 1")
Rear-end swing radius	I'			2890 (9' 6")
Distance between tumblers	J			3650 (12' 0")
Undercarriage length	K			4395 (14' 5")
Undercarriage width	L			3190 (10' 6")
Track gauge	M			2390 (7' 10")
Track shoe width, standard	N			800 (2' 7")
Travel speed (low/high)		km/hr (mph)		3.66/5.76
Swing speed		rpm		12.4
Gradeability		Degree (%)		35 (70)
Ground pressure		kgf/cm <sup>2</sup> (psi)		0.39 (5.55)
Max traction force		kg (lb)		20832 (45930)

### 3. WORKING RANGE AND DIGGING FORCE

#### 1) HX210S MONO BOOM

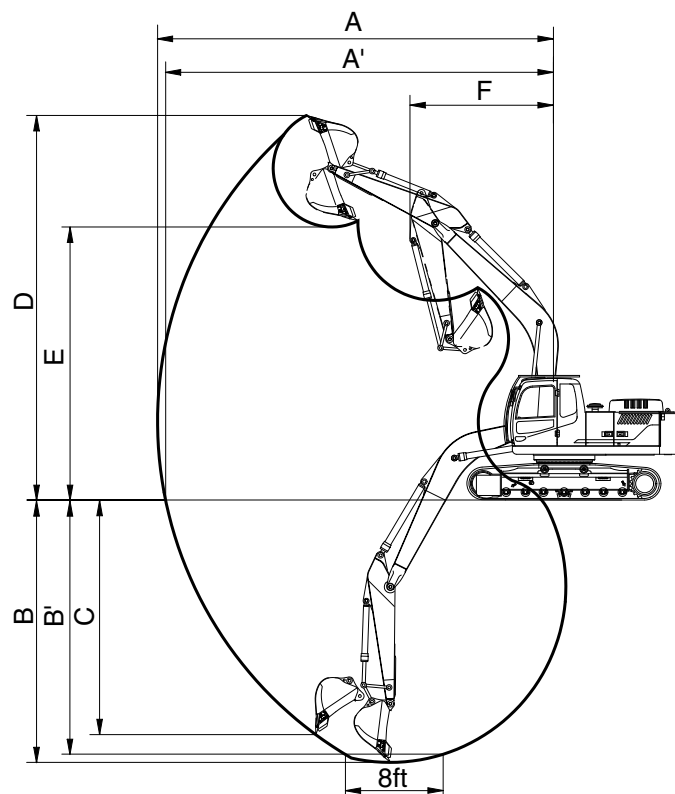


210S2SP04B

Description	m (ft-in)	Boom	5.70 (18' 8")		
		Arm	2.90 (9' 6")	2.00 (6' 7")	2.40 (7' 10")
Max digging reach	mm (ft-in)	A	9945 (32' 8")	9145 (30' 0")	9525 (31' 3")
Max digging reach on ground		A'	9780 (32' 1")	8960 (29' 5")	9355 (30' 8")
Max digging depth		B	6500 (21' 4")	5585 (18' 4")	5990 (19' 8")
Max digging depth (8 ft level)		B'	6315 (20' 9")	5360 (17' 7")	5790 (19' 0")
Max vertical wall digging depth		C	5960 (19' 7")	5070 (16' 8")	5445 (17' 10")
Max digging height		D	9750 (32' 0")	9370 (30' 9")	9625 (31' 7")
Max dumping height		E	6990 (22' 11")	6580 (21' 7")	6830 (22' 5")
Min swing radius		F	3425 (11' 3")	3715 (12' 2")	3400 (11' 2")
Bucket digging force	kN	SAE	130.4 [141.6]	130.4 [141.6]	130.4 [141.6]
	kgf		13300 [14440]	13300 [14440]	13300 [14440]
	lbf		29320 [31830]	29320 [31830]	29320 [31830]
	kN	ISO	152.3 [165.3]	152.3 [165.3]	152.3 [165.3]
	kgf		15530 [16860]	15530 [16860]	15530 [16860]
	lbf		34240 [37170]	34240 [37170]	34240 [37170]
Arm digging force	kN	SAE	102.8 [111.6]	144.3 [156.6]	119.3 [129.4]
	kgf		10480 [11380]	14710 [15970]	12160 [13200]
	lbf		23100 [25090]	32430 [35210]	26810 [29100]
	kN	ISO	106.9 [116.0]	152.0 [165.0]	124.7 [135.4]
	kgf		10900 [11830]	15500 [16830]	12720 [13810]
	lbf		24030 [26080]	34170 [37100]	28040 [30450]

[ ] : Power boost

Machine Serial No. : #4561-#4879, #4923-

## 2) HX220S MONO BOOM

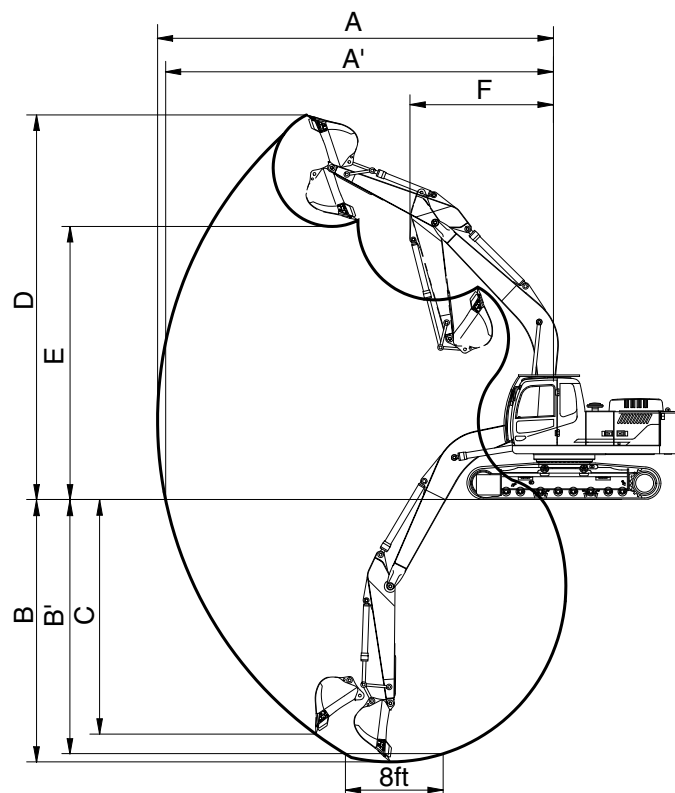


210S2SP12

Description	m (ft-in)	Boom	5.70 (18' 8")		
		Arm	2.90 (9' 6")	2.00 (6' 7")	2.40 (7' 10")
Max digging reach	mm (ft-in)	A	9945 (32' 8")	9145 (30' 0")	9525 (31' 3")
Max digging reach on ground		A'	9780 (32' 1")	8960 (29' 5")	9355 (30' 8")
Max digging depth		B	6500 (21' 4")	5585 (18' 4")	5990 (19' 8")
Max digging depth (8 ft level)		B'	6315 (20' 9")	5360 (17' 7")	5790 (19' 0")
Max vertical wall digging depth		C	5960 (19' 7")	5070 (16' 8")	5445 (17' 10")
Max digging height		D	9750 (32' 0")	9370 (30' 9")	9625 (31' 7")
Max dumping height		E	6990 (22' 11")	6580 (21' 7")	6830 (22' 5")
Min swing radius		F	3425 (11' 3")	3715 (12' 2")	3400 (11' 2")
Bucket digging force	kN	SAE	130.4 [141.6]	130.4 [141.6]	130.4 [141.6]
	kgf		13300 [14440]	13300 [14440]	13300 [14440]
	lbf		29320 [31830]	29320 [31830]	29320 [31830]
	kN	ISO	152.3 [165.3]	152.3 [165.3]	152.3 [165.3]
	kgf		15530 [16860]	15530 [16860]	15530 [16860]
	lbf		34240 [37170]	34240 [37170]	34240 [37170]
Arm digging force	kN	SAE	102.8 [111.6]	144.3 [156.6]	119.3 [129.4]
	kgf		10480 [11380]	14710 [15970]	12160 [13200]
	lbf		23100 [25090]	32430 [35210]	26810 [29100]
	kN	ISO	106.9 [116.0]	152.0 [165.0]	124.7 [135.4]
	kgf		10900 [11830]	15500 [16830]	12720 [13810]
	lbf		24030 [26080]	34170 [37100]	28040 [30450]

[ ] : Power boost

Machine Serial No. : #4561-#4879, #4923-

### 3) HX220S LR

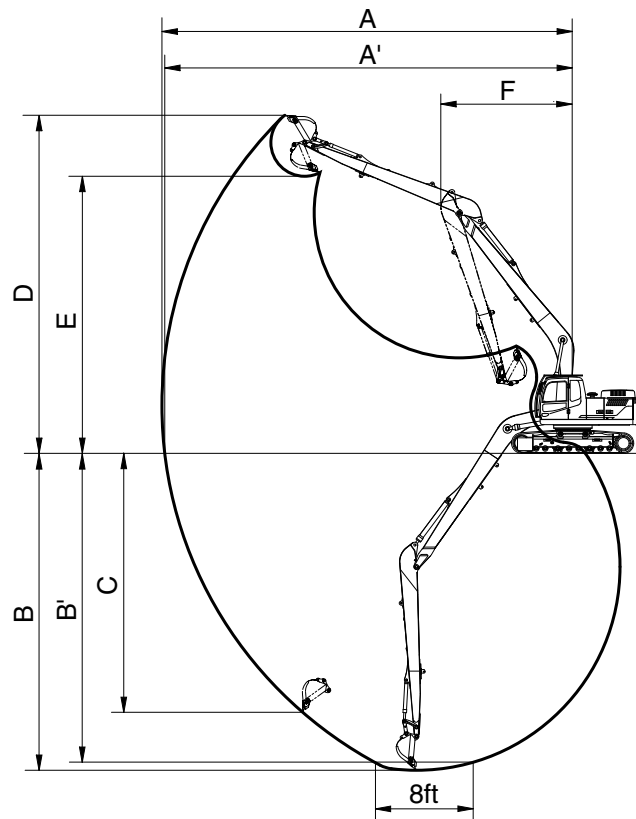

210S2SP11A

Description	m (ft-in)	Boom	8.50 (27' 11")
		Arm	6.20 (20' 4")
Max digging reach	mm (ft-in)	A	15425 (50' 7")
Max digging reach on ground		A'	15320 (50' 3")
Max digging depth		B	11455 (37' 7")
Max digging depth (8 ft level)		B'	11355 (37' 3")
Max vertical wall digging depth		C	10265 (33' 8")
Max digging height		D	13445 (44' 1")
Max dumping height		E	11200 (36' 9")
Min swing radius		F	4705 (15' 5")
Bucket digging force	kN	SAE	68.0
	kgf		6930
	lbf		15280
	kN	ISO	80.3
	kgf		8190
	lbf		18060
Arm digging force	kN	SAE	49.5
	kgf		5050
	lbf		11130
	kN	ISO	50.5
	kgf		5150
	lbf		11350

Machine Serial No. : #4561-#4879, #4923-


## 4. WEIGHT









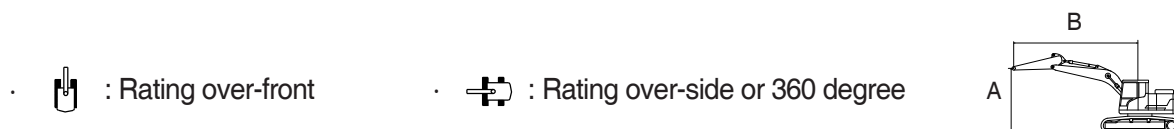

Item	HX210S		HX220S	
	kg	lb	kg	lb
Upperstructure assembly	8950	19730	←	
Main frame weld assembly	2600	5730	←	
Engine assembly	437	963	←	
Main pump assembly	120	265	←	
Main control valve assembly	200	440	←	
Swing motor assembly	190	420	←	
Hydraulic oil tank assembly	240	530	←	
Fuel tank assembly	195	430	←	
Counterweight	3600	7940	←	
Cab assembly	310	680	←	
Lower chassis assembly	8060	17770	8700	19180
Track frame weld assembly	2545	5611	2720	6000
Swing bearing	290	639	←	
Travel motor assembly	305	670	←	
Turning joint	55	120	←	
Track recoil spring	140	309	←	
Idler	151	333	←	
Upper roller	21	46	←	
Lower roller	48	106	←	
Track-chain assembly (600 mm standard triple grouser shoe)	1353	2983	1356	2989
Front attachment assembly (5.70 m boom, 2.90 m arm, 0.87 m³ SAE heaped bucket)	4030	8880	←	
5.70 m boom assembly	1520	3350	←	
2.90 m arm assembly	750	1650	←	
0.92 m³ SAE heaped bucket	765	1690	←	
Boom cylinder assembly	180	400	←	
Arm cylinder assembly	290	640	←	
Bucket cylinder assembly	175	390	←	
Bucket control link assembly	170	370	←	

Machine Serial No. : #4561-#4879, #4923-

## 5. LIFTING CAPACITIES

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX210S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5700	2000	3600	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*6130 *13510	5770 12720	5.05 (16.6)
6.0 m (19.7 ft)	kg lb			*6180 *13620	*6180 *13620	*5780 *12740	4360 9610			*5810 *12810	3910 8620	6.39 (21.0)
4.5 m (14.8 ft)	kg lb			*7370 *16250	6540 14420	*6130 *13510	4240 9350			4890 10780	3190 7030	7.17 (23.5)
3.0 m (9.8 ft)	kg lb					6300 13890	4030 8880	4490 9900	2900 6390	4410 9720	2850 6280	7.58 (24.9)
1.5 m (4.9 ft)	kg lb					6090 13430	3840 8470	4410 9720	2830 6240	4260 9390	2740 6040	7.67 (25.2)
0.0 m (0.0 ft)	kg lb			9270 20440	5530 12190	5970 13160	3730 8220			4400 9700	2810 6190	7.46 (24.5)
-1.5 m (-4.9 ft)	kg lb			9290 20480	5550 12240	5960 13140	3720 8200			4900 10800	3110 6860	6.92 (22.7)
-3.0 m (-9.8 ft)	kg lb	*11600 *25570	10880 23990	*8810 *19420	5680 12520					6180 13620	3900 8600	5.95 (19.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.


▲ Failure to comply to the rated load can cause possible personal injury or property damage.


Make adjustments to the rated load as necessary for non-standard configurations.







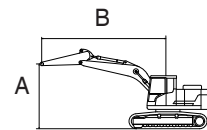



**Machine Serial No. : #4561-#4879, #4923-**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX210S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5700	2400	3600	600	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*5580 *12300	4880 10760	5.62 (18.4)
6.0 m (19.7 ft)	kg lb					*5340 *11770	4410 9720			5360 11820	3510 7740	6.85 (22.5)
4.5 m (14.8 ft)	kg lb			*6830 *15060	6630 14620	*5770 *12720	4260 9390	4570 10080	2970 6550	4480 9880	2910 6420	7.58 (24.9)
3.0 m (9.8 ft)	kg lb			*8560 *18870	6090 13430	6320 13930	4040 8910	4480 9880	2890 6370	4070 8970	2620 5780	7.97 (26.1)
1.5 m (4.9 ft)	kg lb			9440 20810	5660 12480	6080 13400	3830 8440	4380 9660	2800 6170	3940 8690	2520 5560	8.06 (26.4)
0.0 m (0.0 ft)	kg lb			9220 20330	5480 12080	5930 13070	3690 8140	4310 9500	2730 6020	4040 8910	2570 5670	7.85 (25.8)
-1.5 m (-4.9 ft)	kg lb	*9280 *20460	*9280 *20460	9200 20280	5460 12040	5890 12990	3660 8070			4450 9810	2820 6220	7.34 (24.1)
-3.0 m (-9.8 ft)	kg lb	*12580 *27730	10660 23500	*9230 *20350	5560 12260	5970 13160	3730 8220			5430 11970	3420 7540	6.44 (21.1)
-4.5 m (-14.8 ft)	kg lb			*6610 *14570	5840 12870							

**Note 1.** Lifting capacity are based on ISO 10567.

**2.** Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

**3.** The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

**4.** \*Indicates load limited by hydraulic capacity.

※ **Lifting capacities are based upon a standard machine conditions.**

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ **Failure to comply to the rated load can cause possible personal injury or property damage.**


**Make adjustments to the rated load as necessary for non-standard configurations.**













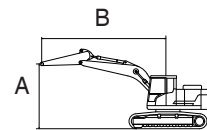**Machine Serial No. : #4561-#4879, #4923-**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX210S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5700	2900	3600	600	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)										At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
														m (ft)
7.5 m (24.6 ft)	kg lb							*4920 *10850	4480 9880			*4330 *9550	4200 9260	6.21 (20.4)
6.0 m (19.7 ft)	kg lb							*4830 *10650	4470 9850			*4030 *8880	3150 6940	7.34 (24.1)
4.5 m (14.8 ft)	kg lb					*6130 *13510	*6130 *13510	*5330 *11750	4310 9500	4600 10140	3000 6610	*3960 *8730	2650 5840	8.03 (26.3)
3.0 m (9.8 ft)	kg lb					*7880 *17370	6210 13690	*6120 *13490	4070 8970	4490 9900	2890 6370	3750 8270	2400 5290	8.39 (27.5)
1.5 m (4.9 ft)	kg lb					*9500 *20940	5710 12590	6090 13430	3830 8440	4360 9610	2780 6130	3630 8000	2310 5090	8.48 (27.8)
0.0 m (0.0 ft)	kg lb			*4930 *10870	*4930 *10870	9190 20260	5440 11990	5900 13010	3660 8070	4270 9410	2690 5930	3700 8160	2340 5160	8.28 (27.2)
-1.5 m (-4.9 ft)	kg lb	*5620 *12390	*5620 *12390	*9410 *20750	*9410 *20750	9110 20080	5370 11840	5820 12830	3590 7910	4240 9350	2660 5860	4020 8860	2530 5580	7.80 (25.6)
-3.0 m (-9.8 ft)	kg lb			*13620 *30030	10420 22970	9180 20240	5430 11970	5860 12920	3620 7980			4770 10520	3000 6610	6.96 (22.8)
-4.5 m (-14.8 ft)	kg lb			*10720 *23630	*10720 *23630	*7730 *17040	5640 12430					*5820 *12830	4180 9220	5.60 (18.4)

**Note** 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ **Lifting capacities are based upon a standard machine conditions.**

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ **Failure to comply to the rated load can cause possible personal injury or property damage.**


Make adjustments to the rated load as necessary for non-standard configurations.













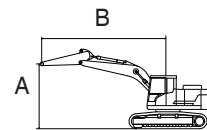**Machine Serial No. : #4561-#4879, #4923-**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX220S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5700	2900	3600	600	-	-	-	-	-

·  : Rating over-front

·  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)										At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
														m (ft)
7.5 m (24.6 ft)	kg							*4920	*4920			*4330	*4330	6.21
	lb							*10850	*10850			*9550	*9550	(20.4)
6.0 m (19.7 ft)	kg							*4830	*4830			*4030	3510	7.34
	lb							*10650	*10650			*8880	7740	(24.1)
4.5 m (14.8 ft)	kg					*6130	*6130	*5330	4800	*4960	3350	*3960	2970	8.03
	lb					*13510	*13510	*11750	10580	*10930	7390	*8730	6550	(26.3)
3.0 m (9.8 ft)	kg					*7880	6980	*6120	4550	5060	3240	*4060	2700	8.39
	lb					*17370	15390	*13490	10030	11160	7140	*8950	5950	(27.5)
1.5 m (4.9 ft)	kg					*9500	6470	6920	4310	4930	3120	4100	2600	8.48
	lb					*20940	14260	15260	9500	10870	6880	9040	5730	(27.8)
0.0 m (0.0 ft)	kg			*4930	*4930	*10340	6190	6720	4140	4830	3030	4190	2640	8.29
	lb			*10870	*10870	*22800	13650	14820	9130	10650	6680	9240	5820	(27.2)
-1.5 m (-4.9 ft)	kg	*5620	*5620	*9400	*9400	*10370	6120	6640	4060	4800	3010	4550	2860	7.80
	lb	*12390	*12390	*20720	*20720	*22860	13490	14640	8950	10580	6640	10030	6310	(25.6)
-3.0 m (-9.8 ft)	kg			*13630	12090	*9640	6180	6680	4100			5410	3380	6.96
	lb			*30050	26650	*21250	13620	14730	9040			11930	7450	(22.8)
-4.5 m (-14.8 ft)	kg			*10720	*10720	*7730	6400					*5820	4710	5.60
	lb			*23630	*23630	*17040	14110					*12830	10380	(18.4)

**Note** 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ **Lifting capacities are based upon a standard machine conditions.**

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.









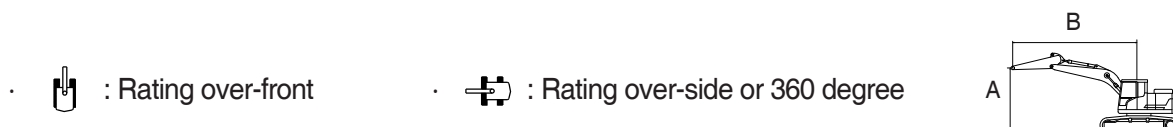

▲ **Failure to comply to the rated load can cause possible personal injury or property damage.**

Make adjustments to the rated load as necessary for non-standard configurations.

**Machine Serial No. : #4561-#4879, #4923-**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX220S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5700	2000	3600	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*6130 *13510	*6130 *13510	5.05 (16.6)
6.0 m (19.7 ft)	kg lb			*6170 *13600	*6170 *13600	*5780 *12740	4850 10690			*5810 *12810	4360 9610	6.39 (21.0)
4.5 m (14.8 ft)	kg lb			*7370 *16250	7320 16140	*6130 *13510	4720 10410			5510 12150	3560 7850	7.17 (23.5)
3.0 m (9.8 ft)	kg lb					*6820 *15040	4510 9940	5060 11160	3250 7170	4970 10960	3190 7030	7.58 (24.9)
1.5 m (4.9 ft)	kg lb					6910 15230	4320 9520	4970 10960	3170 6990	4810 10600	3070 6770	7.67 (25.2)
0.0 m (0.0 ft)	kg lb			*10600 *23370	6270 13820	6790 14970	4210 9280			4970 10960	3150 6940	7.46 (24.5)
-1.5 m (-4.9 ft)	kg lb			*10130 *22330	6290 13870	6780 14950	4200 9260			5540 12210	3500 7720	6.92 (22.7)
-3.0 m (-9.8 ft)	kg lb	*11600 *25570	*11600 *25570	*8810 *19420	6430 14180					*6360 *14020	4380 9660	5.95 (19.5)

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.









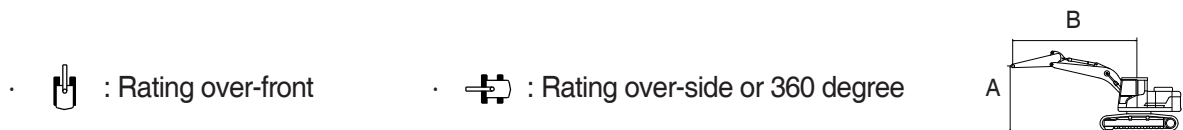

▲ Failure to comply to the rated load can cause possible personal injury or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

**Machine Serial No. : #4561-#4879, #4923-**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX220S	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5700	2400	3600	600	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb									*5580 *12300	5430 11970	5.62 (18.4)
6.0 m (19.7 ft)	kg lb					*5340 *11770	4900 10800			*5390 *11880	3910 8620	6.85 (22.5)
4.5 m (14.8 ft)	kg lb			*6820 *15040	*6820 *15040	*5770 *12720	4750 10470	5140 11330	3320 7320	5040 11110	3250 7170	7.58 (24.9)
3.0 m (9.8 ft)	kg lb			*8560 *18870	6860 15120	*6520 *14370	4520 9960	5050 11130	3240 7140	4590 10120	2940 6480	7.97 (26.1)
1.5 m (4.9 ft)	kg lb			*9990 *22020	6420 14150	6910 15230	4300 9480	4950 10910	3140 6920	4450 9810	2830 6240	8.06 (26.4)
0.0 m (0.0 ft)	kg lb			*10530 *23210	6220 13710	6750 14880	4170 9190	4870 10740	3080 6790	4570 10080	2890 6370	7.85 (25.8)
-1.5 m (-4.9 ft)	kg lb	*9270 *20440	*9270 *20440	*10280 *22660	6200 13670	6710 14790	4130 9110			5030 11090	3170 6990	7.34 (24.1)
-3.0 m (-9.8 ft)	kg lb	*12590 *27760	12350 27230	*9230 *20350	6310 13910	*6790 *14970	4210 9280			*6060 *13360	3850 8490	6.44 (21.1)
-4.5 m (-14.8 ft)	kg lb			*6620 *14590	6600 14550							

**Note** 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ **Lifting capacities are based upon a standard machine conditions.**

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.


Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.









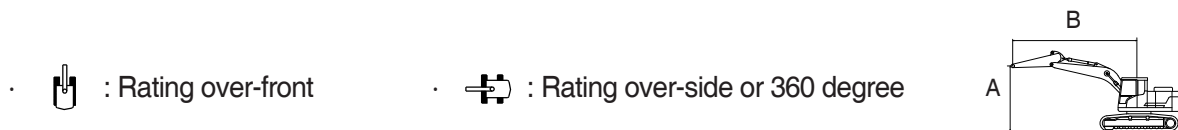













▲ **Failure to comply to the rated load can cause possible personal injury or property damage.**

Make adjustments to the rated load as necessary for non-standard configurations.

**Machine Serial No. : #4561-#4879, #4923-**

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HX220S LR	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		8500	6200	5300	800	-	-	-	-	-



Lift-point height (A)		Lift-point radius (B)																		At max. reach				
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		9.0 m (29.5 ft)		10.5 m (34.4 ft)		12.0 m (39.4 ft)		13.5 m (44.3 ft)		Capacity		Reach		
																								m (ft)
12.0m 39.4ft	kg lb																					*970 *2140	*970 *2140	9.79 (32.1)
10.5m 34.4ft	kg lb													*1530 *3370	*1530 *3370							*880 *1940	*880 *1940	11.17 (36.6)
9.0m 29.5ft	kg lb													*2000 *4410	*2000 *4410	*1090 *2400	*1090 *2400					*830 *1830	*830 *1830	12.21 (40.0)
7.5m 24.6ft	kg lb													*2050 *4520	*2050 *4520	*1800 *3970	*1800 *3970					*810 *1790	*810 *1790	12.99 (42.6)
6.0m 19.7ft	kg lb													*2170 *4780	*2170 *4780	*2110 *4650	1940 4280	*880 *1940	*880 *1940	*800 *1760	*800 *1760	13.55 (44.5)		
4.5m 14.8ft	kg lb												*2530 *5580	*2530 *5580	*2350 *5180	*2350 *5180	*2220 *4890	1860 4100	*1430 *3150	*1430 *3150	*810 *1790	*810 *1790	13.94 (45.7)	
3.0m 9.8ft	kg lb					*5420 *11950	*5420 *11950	*4030 *8880	*4030 *8880	*3300 *7280	*3300 *7280	*2850 *6280	*2850 *6280	*2560 *5640	2260 4980	*2360 *5200	1770 3900	*1770 *3900	1400 3090	*840 *1850	*840 *1850	14.15 (46.4)		
1.5m 4.9ft	kg lb					*6960 *15340	*6960 *15340	*4860 *10710	4840 10670	*3810 *8400	3550 7830	*3180 *7010	2710 5970	*2780 *6130	2120 4670	*2510 *5530	1680 3700	*1960 *4320	1340 2950	*880 *1940	*880 *1940	14.20 (46.6)		
0.0m 0.0ft	kg lb			*2670 *5890	*2670 *5890	*6320 *13930	*6320 *13930	*5550 *12240	4370 9630	*4260 *9390	3250 7170	*3490 *7690	2510 5530	*2990 *6590	1990 4390	*2650 *5840	1590 3510	*1970 *4340	1290 2840	*940 *2070	*940 *2070	14.08 (46.2)		
-1.5m -4.9ft	kg lb	*2530 *5580	*2530 *5580	*3460 *7630	*3460 *7630	*6060 *13360	6020 13270	*6000 *13230	4070 8970	*4600 *10140	3030 6680	*3740 *8250	2360 5200	3150 6940	1880 4140	2590 5710	1520 3350	*1670 *3680	1250 2760	*1040 *2290	*1040 *2290	13.81 (45.3)		
-3.0m -9.8ft	kg lb	*3520 *7760	*3520 *7760	*4440 *9790	*4440 *9790	*6700 *14770	5910 13030	*6220 *13710	3920 8640	*4810 *10600	2900 6390	3820 8420	2250 4960	3080 6790	1810 3990	2550 5620	1480 3260			*1170 *2580	*1170 *2580	13.36 (43.8)		
-4.5m -14.8ft	kg lb	*4540 *10010	*4540 *10010	*5560 *12260	*5560 *12260	*7810 *17220	5920 13050	*6230 *13730	3880 8550	*4860 *10710	2840 6260	3770 8310	2210 4870	3040 6700	1780 3920	2540 5600	1470 3240			*1360 *3000	*1360 *3000	12.71 (41.7)		
-6.0m -19.7ft	kg lb	*5640 *12430	*5640 *12430	*6840 *15080	*6840 *15080	*8000 *17640	6040 13320	*6020 *13270	3920 8640	*4750 *10470	2850 6280	3780 8330	2210 4870	3060 6750	1790 3950					*1650 *3640	1540 3400	11.84 (38.8)		
-7.5m -24.6ft	kg lb	*6860 *15120	*6860 *15120	*8360 *18430	*8360 *18430	*7280 *16050	6240 13760	*5570 *12280	4040 8910	*4430 *9770	2930 6460	*3580 *7890	2280 5030	*2850 *6280	1880 4140					*2170 *4780	1840 4060	10.68 (35.0)		
-9.0m -29.5ft	kg lb			*8410 *18540	*8410 *18540	*6130 *13510	*6130 *13510	*4760 *10490	4240 9350	*3760 *8290	3100 6830	*2880 *6350	2450 5400							*2800 *6170	2410 5310	9.13 (30.0)		

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause possible personal injury or property damage.


Make adjustments to the rated load as necessary for non-standard configurations.

## 6. BUCKET SELECTION GUIDE


### 1) HX210S, 3600 KG COUNTERWEIGHT



General bucket

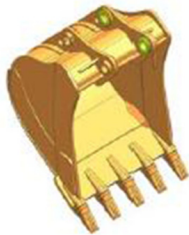Heavy duty  
(without side cutter)

Rock heavy duty

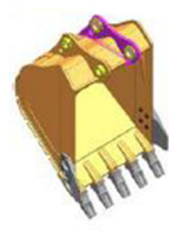

Long reach

Type	Capacity		Width		Weight	Tooth	MONO		
							Recommendation		
	SAE Heaped	CECE heaped	Without side cutter	With side cutter			5.70 m (18' 8") Boom		
	m³ (yd³)	m³ (yd³)	mm (in)	mm (in)			kg (lb)	EA	2.00 m (6' 7") Arm
General bucket	0.92 (1.20)	0.81 (1.06)	1085 (42.7")	1230 (48.4")	750 (1650)	5	●	◐	■
	1.05 (1.37)	0.96 (1.26)	1220 (48.0")	1370 (53.9")	790 (1740)	5	◐	■	▲
	1.17 (1.53)	1.00 (1.31)	1340 (52.8")	1490 (58.7")	850 (1870)	6	■	▲	▲
Heavy duty	0.92 (1.20)	0.83 (1.09)	1050 (41.3")	1095 (43.1")	865 (1910)	5	●	◐	■
	1.08 (1.41)	0.97 (1.27)	1200 (47.2")	1245 (49.0")	935 (2060)	5	■	■	▲
Rock heavy duty	0.91 (1.19)	0.83 (1.09)	1050 (41.3")	1095 (43.1")	1050 (2310)	4	◐	■	■
	1.23 (1.61)	1.11 (1.45)	1350 (53.1")	1395 (54.9")	1240 (2730)	5	▲	▲	X
	0.87 (1.14)	0.75 (0.98)	1150 (45.3")	-	875 (1930)	5	●	◐	■
	1.20 (1.57)	1.00 (1.31)	1425 (56.1")	-	990 (2180)	5	■	▲	▲

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
◐	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.


Select an optimum combination according to the working conditions and the type of work that is being done.

Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom–arm–bucket combination.

Machine Serial No. : #4561-#4879, #4923-  
2) HX210S, 4200 KG COUNTERWEIGHT




General bucket

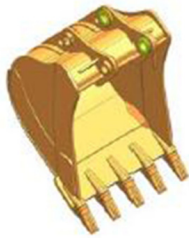

Heavy duty  
(without side cutter)



Rock heavy duty

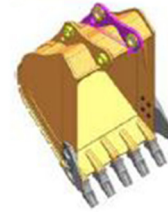

Long reach

Type	Capacity		Width		Weight	Tooth	MONO		
	SAE Heaped	CECE heaped	Without side cutter	With side cutter			Recommendation		
							5.70 m (18' 8") Boom		
							m³ (yd³)	m³ (yd³)	mm (in)
General bucket	0.92 (1.20)	0.81 (1.06)	1085 (42.7")	1230 (48.4")	750 (1650)	5	●	●	◐
	1.05 (1.37)	0.96 (1.26)	1220 (48.0")	1370 (53.9")	790 (1740)	5	◐	◐	■
	1.17 (1.53)	1.00 (1.31)	1340 (52.8")	1490 (58.7")	850 (1870)	6	◐	■	▲
Heavy duty	0.92 (1.20)	0.83 (1.09)	1050 (41.3")	1095 (43.1")	865 (1910)	5	●	◐	◐
	1.08 (1.41)	0.97 (1.27)	1200 (47.2")	1245 (49.0")	935 (2060)	5	◐	■	■
Rock heavy duty	0.91 (1.19)	0.83 (1.09)	1050 (41.3")	1095 (43.1")	1050 (2310)	4	●	◐	■
	1.23 (1.61)	1.11 (1.45)	1350 (53.1")	1395 (54.9")	1240 (2730)	5	■	▲	▲
	0.87 (1.14)	0.75 (0.98)	1150 (45.3")	-	875 (1930)	5	●	●	◐
	1.20 (1.57)	1.00 (1.31)	1425 (56.1")	-	990 (2180)	5	■	■	▲

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
◐	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.


Select an optimum combination according to the working conditions and the type of work that is being done.

Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

Machine Serial No. : #4561-#4879, #4923-  
3) HX220S, 3600 KG COUNTERWEIGHT




General bucket

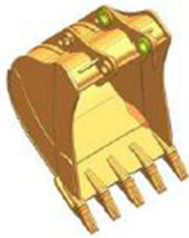

Heavy duty  
(without side cutter)



Rock heavy duty

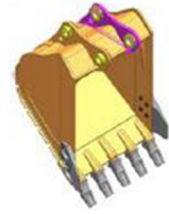

Long reach

Type	Capacity		Width		Weight	Tooth	MONO		
	SAE Heaped	CECE heaped	Without side cutter	With side cutter			Recommendation		
					5.70 m (18' 8") Boom				
					m³ (yd³)	m³ (yd³)	mm (in)	mm (in)	kg (lb)
General bucket	0.92 (1.20)	0.81 (1.06)	1085 (42.7")	1230 (48.4")	750 (1650)	5	●	●	◐
	1.05 (1.37)	0.96 (1.26)	1220 (48.0")	1370 (53.9")	790 (1740)	5	●	◐	■
	1.17 (1.53)	1.00 (1.31)	1340 (52.8")	1490 (58.7")	850 (1870)	6	◐	■	■
Heavy duty	0.92 (1.20)	0.83 (1.09)	1050 (41.3")	1095 (43.1")	865 (1910)	5	●	●	◐
	1.08 (1.41)	0.97 (1.27)	1200 (47.2")	1245 (49.0")	935 (2060)	5	◐	◐	■
Rock heavy duty	0.91 (1.19)	0.83 (1.09)	1050 (41.3")	1095 (43.1")	1050 (2310)	4	●	◐	◐
	1.23 (1.61)	1.11 (1.45)	1350 (53.1")	1395 (54.9")	1240 (2730)	5	■	▲	▲
	0.87 (1.14)	0.75 (0.98)	1150 (45.3")	-	875 (1930)	5	●	●	◐
	1.20 (1.57)	1.00 (1.31)	1425 (56.1")	-	990 (2180)	5	■	■	▲

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
◐	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.


Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

Machine Serial No. : #4561-#4879, #4923-

#### 4) HX220S, 4200 KG COUNTERWEIGHT




General bucket

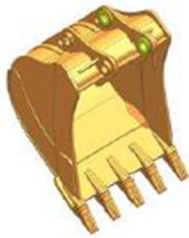

Heavy duty  
(without side cutter)



Rock heavy duty

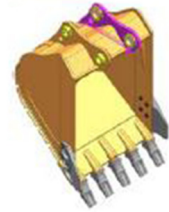

Long reach

Type	Capacity		Width		Weight	Tooth	MONO		
	SAE Heaped	CECE heaped	Without side cutter	With side cutter			Recommendation		
							5.70 m (18' 8") Boom		
							m³ (yd³)	m³ (yd³)	mm (in)
General bucket	0.92 (1.20)	0.81 (1.06)	1085 (42.7")	1230 (48.4")	750 (1650)	5	●	●	●
	1.05 (1.37)	0.96 (1.26)	1220 (48.0")	1370 (53.9")	790 (1740)	5	●	●	◐
	1.17 (1.53)	1.00 (1.31)	1340 (52.8")	1490 (58.7")	850 (1870)	6	●	◐	■
Heavy duty	0.92 (1.20)	0.83 (1.09)	1050 (41.3")	1095 (43.1")	865 (1910)	5	●	●	●
	1.08 (1.41)	0.97 (1.27)	1200 (47.2")	1245 (49.0")	935 (2060)	5	●	◐	◐
Rock heavy duty	0.91 (1.19)	0.83 (1.09)	1050 (41.3")	1095 (43.1")	1050 (2310)	4	●	●	◐
	1.23 (1.61)	1.11 (1.45)	1350 (53.1")	1395 (54.9")	1240 (2730)	5	◐	■	▲
	0.87 (1.14)	0.75 (0.98)	1150 (45.3")	-	875 (1930)	5	●	●	●
	1.20 (1.57)	1.00 (1.31)	1425 (56.1")	-	990 (2180)	5	◐	■	■

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
●	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.

Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

Machine Serial No. : #4561-#4879, #4923-

5) HX220S LR, 5300 KG COUNTERWEIGHT




General bucket



Heavy duty  
(without side cutter)



Rock heavy duty

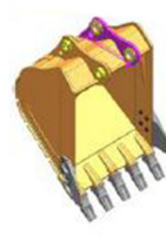

Long reach

Type	Capacity		Width		Weight	Tooth	L/Reach
							Recommendation
	SAE Heaped	CECE heaped	Without side cutter	With side cutter			8.50 m (27' 11") Boom
	m <sup>3</sup> (yd <sup>3</sup> )	m <sup>3</sup> (yd <sup>3</sup> )	mm (in)	mm (in)			6.20 m (20' 4") Arm
LR	0.51 (0.67)	0.45 (0.59)	865 (34.1")	995 (39.2")	395 (870)	5	■

●	Applicable for materials with density of 2100 kg/m <sup>3</sup> (3500 lb/yd <sup>3</sup> ) or less
◐	Applicable for materials with density of 1800 kg/m <sup>3</sup> (3000 lb/yd <sup>3</sup> ) or less
■	Applicable for materials with density of 1500 kg/m <sup>3</sup> (2500 lb/yd <sup>3</sup> ) or less
▲	Applicable for materials with density of 1200 kg/m <sup>3</sup> (2000 lb/yd <sup>3</sup> ) or less
X	Not recommended

※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.


Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom—arm—bucket combination.

## 7. UNDERCARRIAGE

### 1) TRACKS

X-leg type center frame is integrally welded with reinforced box-section track frames. The design includes dry tracks, lubricated rollers, idlers, sprockets, hydraulic track adjusters with shock absorbing springs, and assembled track-type tractor shoes with triple grousers.

### 2) TYPES OF SHOES

Model	Shapes		Triple grouser			
						
HX210S	Shoe width	mm (in)	600 (24)	-	-	800 (32)
	Operating weight	kg (lb)	20830 (45920)	-	-	21380 (47140)
	Ground pressure	kgf/cm <sup>2</sup> (psi)	0.48 (6.81)	-	-	0.42 (5.99)
	Overall width	mm (ft-in)	2800 (9' 2")	-	-	3000 (9' 10")
HX220S	Shoe width	mm (in)	600 (24)★	600 (24)	700 (28)	800 (32)
	Operating weight	kg (lb)	21260 (46870)	21450 (47290)	21750 (47950)	22040 (48590)
	Ground pressure	kgf/cm <sup>2</sup> (psi)	0.45 (6.45)	0.46 (6.51)	0.40 (5.56)	0.35 (5.02)
	Overall width	mm (ft-in)	2990 (9' 10")	2800 (9' 2")	3090 (10' 2")	3190 (10' 6")

★ : 8.5 T

### 3) NUMBER OF ROLLERS AND SHOES ON EACH SIDE

Item	Quantity	
	HX210S	HX220S
Upper rollers	2 EA	2 EA
Lower rollers	7 EA	8 EA
Track shoes	45 EA	49 EA

Machine Serial No. : #4561-#4879, #4923-

#### 4) SELECTION OF TRACK SHOE

Suitable track shoes should be selected according to operating conditions.

##### Method of selecting shoes

Confirm the category from the list of applications in **table 2**, then use **table 1** to select the shoe. Wide shoes (categories B and C) have limitations on applications. Before using wide shoes, check the precautions, then investigate and study the operating conditions to confirm if these shoes are suitable.

Select the narrowest shoe possible to meet the required flotation and ground pressure.

Application of wider shoes than recommendations will cause unexpected problem such as bending of shoes, crack of link, breakage of pin, loosening of shoe bolts and the other various problems.

※ Table 1

Track shoe	Specification	Category
600 mm triple grouser	Standard	A
700 mm triple grouser	Option	B
800 mm triple grouser	Option	C

※ Table 2

Category	Applications	Precautions
A	Rocky ground, river beds, normal soil	<ul style="list-style-type: none"><li>Travel at low speed on rough ground with large obstacles such as boulders or fallen trees or a wide range of general civil engineering work</li></ul>
B	Normal soil, soft ground	<ul style="list-style-type: none"><li>These shoes cannot be used on rough ground with large obstacles such as boulders or fallen trees</li><li>Travel at high speed only on flat ground</li><li>Travel slowly at low speed if it is impossible to avoid going over obstacles</li></ul>
C	Extremely soft ground (swampy ground)	<ul style="list-style-type: none"><li>Use the shoes only in the conditions that the machine sinks and it is impossible to use the shoes of category A or B</li><li>These shoes cannot be used on rough ground with large obstacles such as boulders or fallen trees</li><li>Travel at high speed only on flat ground</li><li>Travel slowly at low speed if it is impossible to avoid going over obstacles</li></ul>

## 8. SPECIFICATIONS FOR MAJOR COMPONENTS

### 1) ENGINE

Item	Specification
Model	HD Hyundai Construction Equipment 6BTAA-5.9 (HM5.9)
Type	4-cycle, turbocharged, charge air cooled, mechanical controlled diesel engine
Cooling method	Water cooled
Number of cylinders and arrangement	6 cylinders, in-line
Firing order	1-5-3-6-2-4
Combustion chamber type	Direct injection type
Cylinder bore×stroke	102 × 120 mm (4.02 " × 4.72 ")
Piston displacement	5900 cc (360 cu in)
Compression ratio	17.3 : 1
Rated gross horse power (SAE J1995)	148 Hp at 2000rpm (110 kW at 2000 rpm)
Rated net horse power (SAE J1349)	145 Hp at 2000 rpm (108 kW at 2000 rpm)
Maximum torque at 1300 rpm	64 kgf · m (463 lbf · ft)
Engine oil quantity	14 ℓ (3.8 U.S. gal) : -#1289 20 ℓ (5.3 U.S. gal) : #1290-
Dry weight	437 kg (963 lb)
High idling speed	2250 + 50 rpm
Low idling speed	800 ± 100 rpm
Rated fuel consumption	95 g/Hp · hr at 1200 rpm
Starting motor	Lucas 24V
Alternator	Lucas 24V-75A
Battery	2 × 12V × 100Ah

### 2) MAIN PUMP

Item	Specification
Type	Variable displacement tandem axis piston pumps
Capacity	2 × 117 cc/rev
Maximum pressure	350 kgf/cm <sup>2</sup> (4978 psi)
Rated oil flow	2 × 234 ℓ /min (61.8 U.S. gpm/ 51.4 U.K. gpm)
Rated speed	2000 rpm

Machine Serial No. : #4561-#4879, #4923-

### 3) GEAR PUMP

Item	Specification
Type	Fixed displacement gear pump single stage
Capacity	15 cc/rev
Maximum pressure	40 kgf/cm <sup>2</sup> (568 psi)
Rated oil flow	30 ℓ /min (7.9 U.S. gpm/6.7 U.K. gpm)

### 4) MAIN CONTROL VALVE

Item	Specification
Type	9 spools mono-block
Operating method	Hydraulic pilot system
Main relief valve pressure	350 kgf/cm <sup>2</sup> (4978 psi)
Overload relief valve pressure	400 kgf/cm <sup>2</sup> (5689 psi)

### 5) SWING MOTOR

Item	Specification
Type	Two fixed displacement axial piston motor
Capacity	142.8 cc/rev
Relief pressure	265 kgf/cm <sup>2</sup> (3894 psi)
Braking system	Automatic, spring applied hydraulic released
Braking torque	63.3 kgf/cm <sup>2</sup> (470.8 lbf · ft)
Brake release pressure	20.9~35.5 kgf/cm <sup>2</sup> (297~505 psi)
Reduction gear type	2 - stage planetary
Swing speed	12.2rpm

### 6) TRAVEL MOTOR

Item	Specification
Type	Variable displacement axial piston motor
Relief pressure	350 kgf/cm <sup>2</sup> (4978 psi)
Reduction gear type	2-stage planetary
Braking system	Automatic, spring applied hydraulic released
Brake release pressure	13 kgf/cm <sup>2</sup> (182 psi)
Braking torque	65.1 kgf · m (470 lbf · ft)

Machine Serial No. : #4561-#4879, #4923-

## 7) REMOTE CONTROL VALVE

Item		Specification
Type		Pressure reducing type
Operating pressure	Minimum	6.5 kgf/cm <sup>2</sup> (92 psi)
	Maximum	26 kgf/cm <sup>2</sup> (370 psi)
Single operation stroke	Lever	61 mm (2.4 in)
	Pedal	123 mm (4.84 in)

## 8) CYLINDER

Item		Specification
Boom cylinder	Bore dia × Stroke	Ø 120 × 1290 mm
	Cushion	Extend only
Arm cylinder	Bore dia × Stroke	Ø 140 × 1443 mm
	Cushion	Extend and retract
Bucket cylinder	Bore dia × Stroke	Ø 120 × 1060 mm
	Cushion	Extend only
Bucket cylinder (Long reach)	Bore dia × Stroke	Ø 95 × 900 mm
	Cushion	Extend only

※ Discoloration of cylinder rod can occur when the friction reduction additive of lubrication oil spreads on the rod surface.

※ Discoloration does not cause any harmful effect on the cylinder performance.

## 9. RECOMMENDED OILS

HD Hyundai Construction Equipment genuine lubricating oils have been developed to offer the best performance and service life for your equipment. These oils have been tested according to the specifications of HD Hyundai Construction Equipment and, therefore, will meet the highest safety and quality requirements. We recommend that you use only HD Hyundai Construction Equipment genuine lubricating oils and grease officially approved by HD Hyundai Construction Equipment.

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C ( °F)							
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)
Engine oil pan	Engine oil ★ <sup>2</sup>	14 (3.8) : -#1289 20 (5.3) : #1290-	★SAE 0W-40							
			★SAE 0W-30							
					SAE 5W-30					
					SAE 10W-30					
					SAE 15W-40					
Swing drive	Gear oil	6.2 (1.6)	★SAE 75W-90							
Final drive		4.5 × 2 (1.2 × 2)			SAE 80W-90					
Hydraulic tank	Hydraulic oil	Tank : 160 (42.3) System : 275 (72.6)	★ISO VG 15							
					ISO VG 32					
					ISO VG 46					
					ISO VG 68					
Fuel tank	Diesel fuel	340 (89.8)	★ASTM D975 NO.1							
					ASTM D975 NO.2					
Fitting (grease nipple)	Grease	As required	★NLGI NO.1							
					NLGI NO.2					
Radiator (reservoir tank)	Mixture of antifreeze and soft water★ <sup>1</sup>	31 (8.2)	Ethylene glycol base permanent type (50 : 50)							
			★Ethylene glycol base permanent type (60 : 40)							

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Material

★ : Cold region

Russia, CIS, Mongolia

★<sup>1</sup> : Soft water

City water or distilled water

★<sup>2</sup> : Meets or exceeds

API CI-4 grade

※ Using any lubricating oils other than HD Hyundai Construction Equipment genuine products may lead to a deterioration of performance and cause damage to major components.

※ Do not mix HD Hyundai Construction Equipment genuine oil with any other lubricating oil as it may result in damage to the systems of major components.

※ For HD Hyundai Construction Equipment genuine lubricating oils and grease for use in regions with extremely low temperatures, please contact HD Hyundai Construction Equipment dealers.


# CONTROL DEVICES

## 1. CAB DEVICES

- 1) The ergonomically designed console box and suspension type seat provide the operator with comfort.

## 2) ELECTRONIC MONITOR SYSTEM

- (1) The centralized electronic monitor system allows the status and conditions of the machine to be monitored at a glance.
- (2) It is equipped with a safety warning system for early detection of machine malfunction.

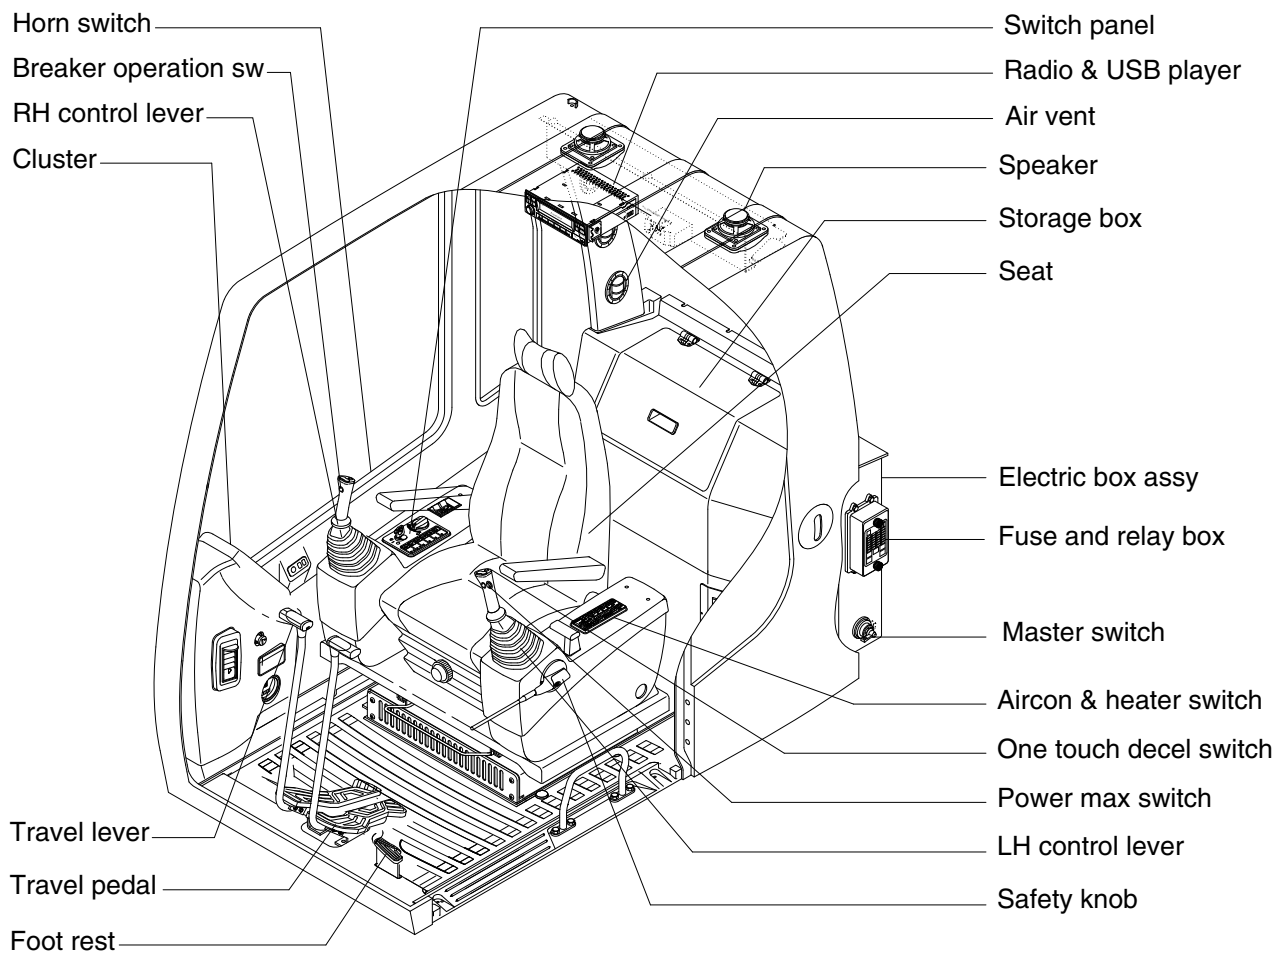

210S3CD01

## 2. CLUSTER


### 1) MONITOR PANEL

The monitor panel consists of LCD and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.

- LCD : Indicate operating status of the machine.
- Warning lamp : Indicate abnormality of the machine(Red).
- Pilot lamp : Indicate operating status of the machine(Amber).

※ The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.

※ When the monitor provides a warning immediately check the problem, and perform the required action.

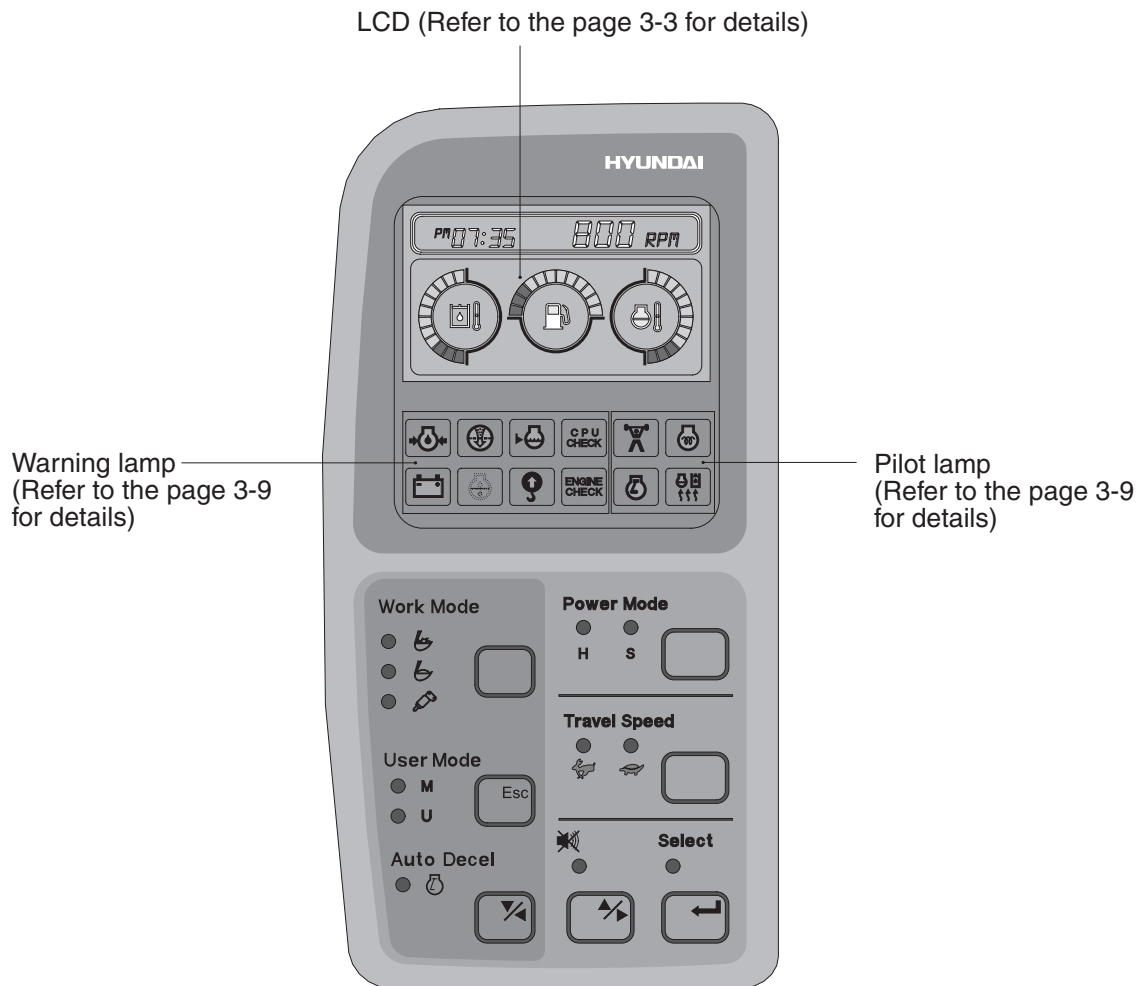

1607A3CD26


※ The warning lamp lights ON and the buzzer sounds when the machine has a problem. In this case, press the buzzer stop switch and buzzer stop, but the warning lamp lights until the problem is cleared.

## 2) LCD main operation display

Default screen



Option screen

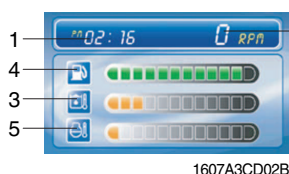

- 1 Time display
- 2 RPM display
- 3 Hydraulic oil temperature gauge
- 4 Fuel level gauge
- 5 Engine coolant temperature gauge

### (1) Time display




- ① This displays the current time.
- ※ Refer to the page 3-7 to set time for details.

### (2) RPM display




- ① This displays the engine rpm.

### (3) Hydraulic oil temperature gauge

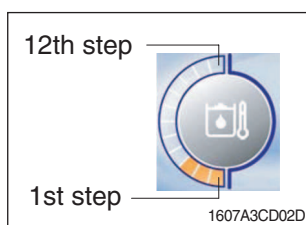


- ① This gauge indicates the temperature of hydraulic oil in 12 step gauge.
  - 1st step : Below 30°C (86°F)
  - 2nd–10th step : 30–105°C (86–221°F)
  - 11th–12th step : Above 105°C (221°F)
- ② The gauge between 2nd and 10th steps illuminates when operating.
- ③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.
- ④ When the gauge of 11th and 12th steps illuminates, reduce the load on the system. If the gauge stays in the 11th–12th steps, stop the machine and check the cause of the problem.

### (4) Fuel level gauge

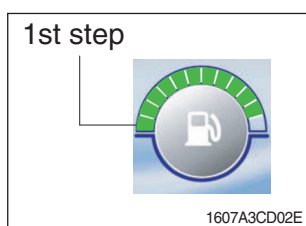

- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when the 1st step or fuel icon blinks in red.
- ※ If the gauge illuminates the 1st step or fuel icon blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

### (5) Engine coolant temperature gauge

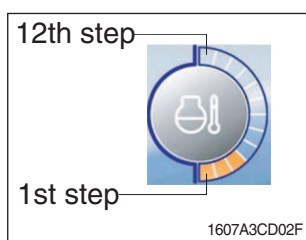

- ① This gauge indicates the temperature of coolant in 12 step gauge.
  - 1st step : Below 30°C (86°F)
  - 2nd–10th step : 30–105°C (86–221°F)
  - 11th–12th step : Above 105°C (221°F)
- ② The gauge between 2nd and 10th steps illuminates when operating.
- ③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.
- ④ When the gauge of 11th and 12th steps illuminates, turn OFF the engine, check the radiator and engine.

### 3) Warning of main operation screen

#### (1) Warning display

##### ① Engine coolant temperature



- This lamp blinks and the buzzer sounds when the temperature of coolant is over the normal temperature 105°C (221°F).
- Check the cooling system when the lamp blinks.

##### ② Fuel level



- This lamp blinks and the buzzer sounds when the level of fuel is below 31 ℓ (8.2 U.S. gal).
- Fill the fuel immediately when the lamp blinks.

##### ③ Hydraulic oil temperature



- This warning lamp operates and the buzzer sounds when the temperature of hydraulic oil is over 105°C (221°F).
- Check the hydraulic oil level when the lamp blinks.
- Check for debris between oil cooler and radiator.

##### ④ All gauge



- This lamp blinks and the buzzer sounds when the all gauge is abnormal.
- Check the each system when the lamp blinks.

##### ⑤ Communication error




- Communication problem between CPU controller and cluster makes the lamp blinks and the buzzer sounds.
- Check if any fuse for CPU burnt off. If not check the communication line between them.






#### (2) Pop-up icon display

No	Switch	Selected mode	Display
1	Work mode switch	General work mode	
		Heavy duty work mode	
		Breaker operation mode	
2	Power mode switch	High power work mode	
		Standard power work mode	

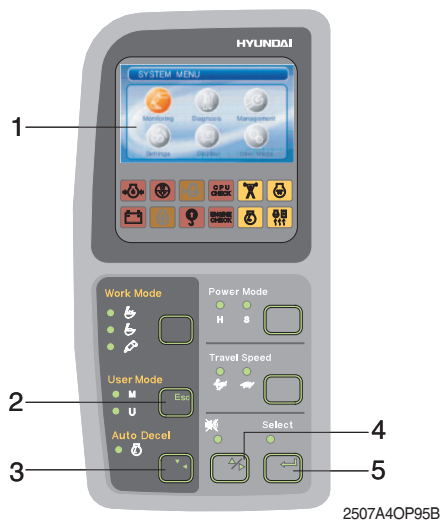
No	Switch	Selected mode	Display
3	Auto deceleration switch	Light ON	
		Light OFF	
4	Travel speed control switch	Low speed	
		High speed	








#### 4) LCD

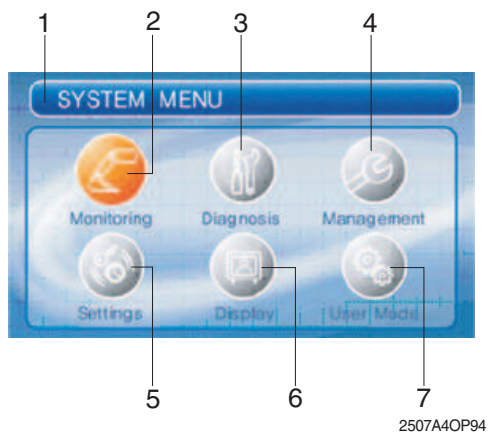

- 1  : LCD
- 2  : Escape,  
Return to the previous menu
- 3  : Down/Left Direction
- 4  : Up/Right Direction
- 5  : Select (Enter)  
Activate the currently chosen item


#### (1) Main menu



- 1  : Menu information
- 2  : Monitoring  
- Equipment, Switch, Output
- 3  : Diagnosis  
- Current error, Recorded error
- 4  : Maintenance
- 5  : Settings  
- Time set, Dual mode  
- System lock (Reserved)
- 6  : Display  
- Operation skin, Brightness,  
Language
- 7  : User mode


## (2) Display map

### ① Monitoring

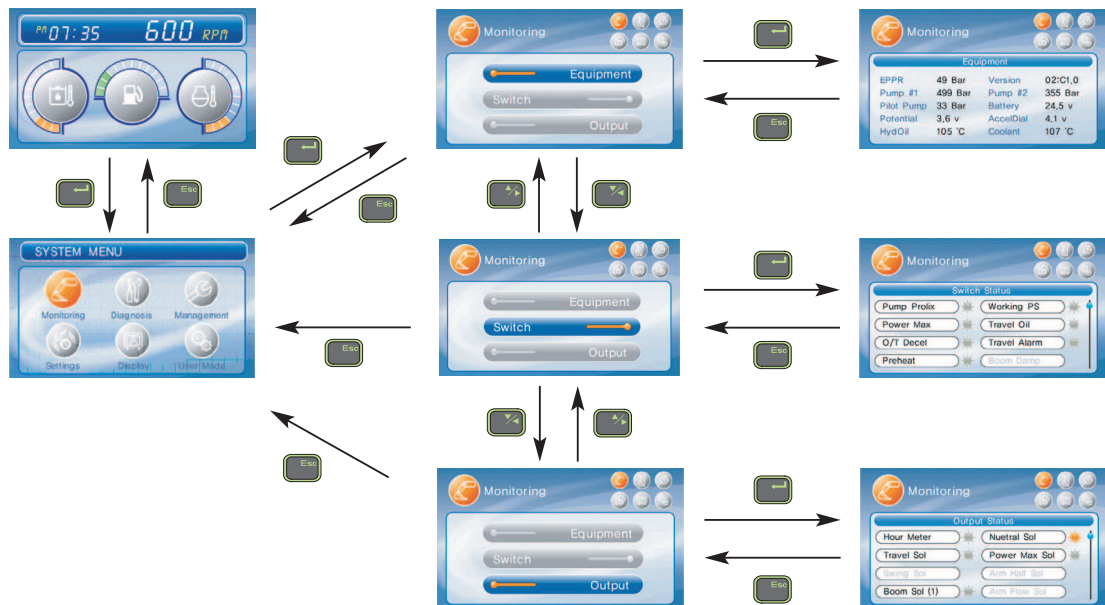


### ② Diagnosis

#### a. Protocol type 1

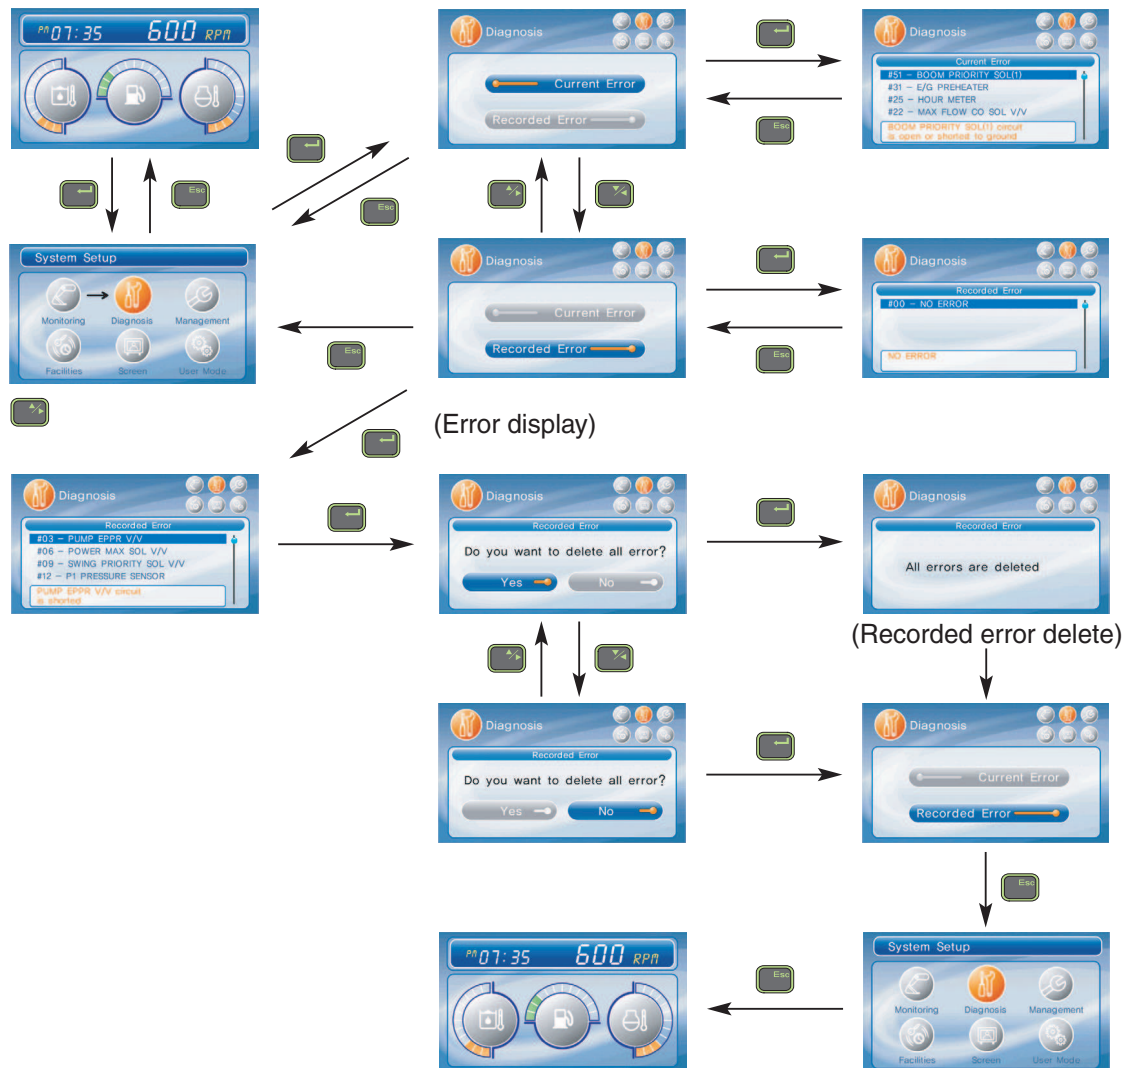


## b. Protocol type 2

- If there are more than 2 error codes, each one can be displayed by pressing or switch respectively.
- 3 error codes (① SPN200200, ② FMI06, ③ SPN6789, ④ FMI04, ⑤ 345) display.

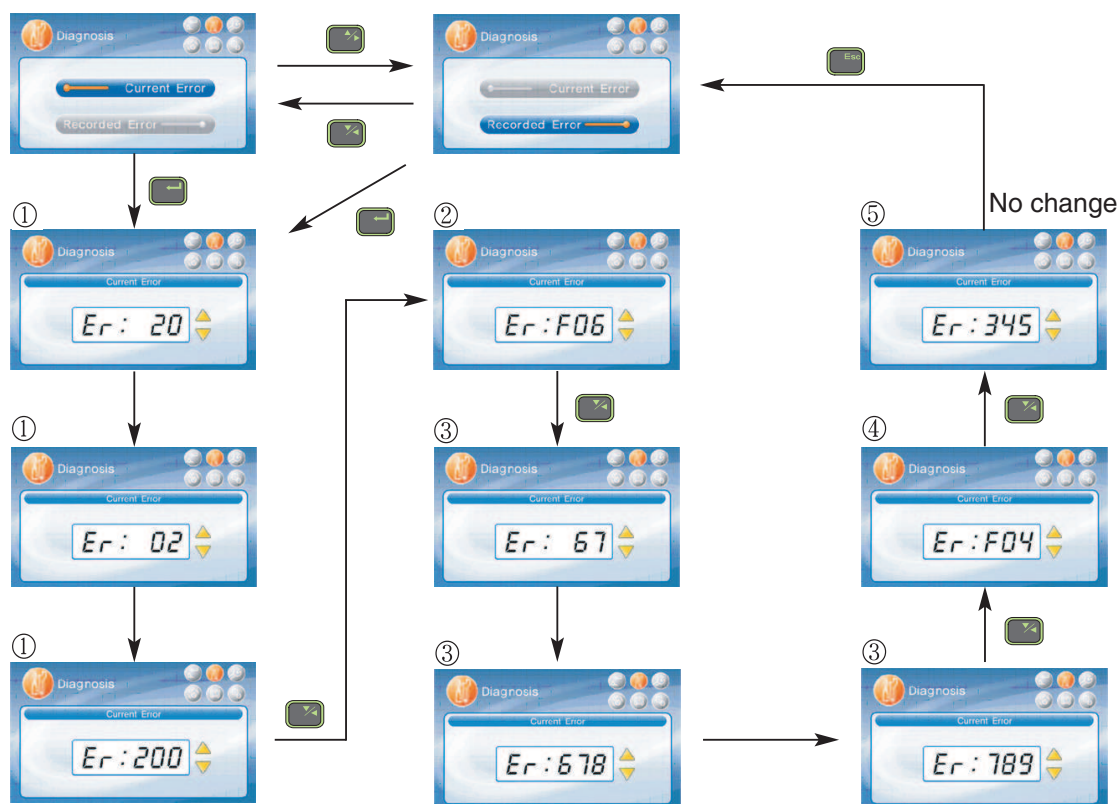


## ③ Maintenance

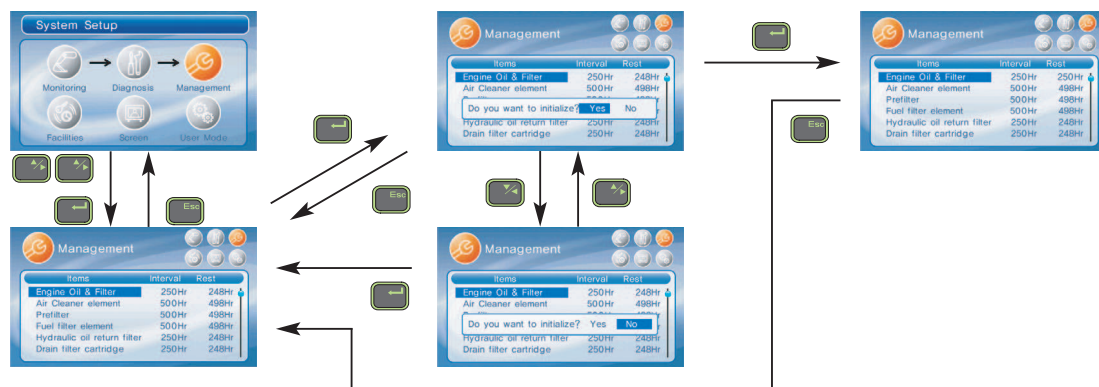

## ④ Setting

### a. Time set

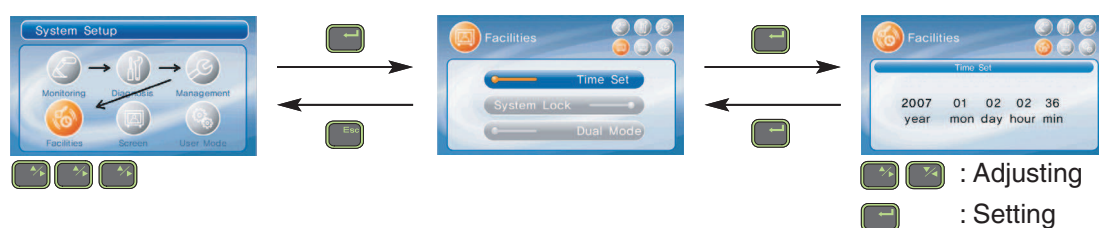


### b. System lock - Reserved

c. Dual mode  
- Changing the MCU mode




⑤ Display


a. Operation skin

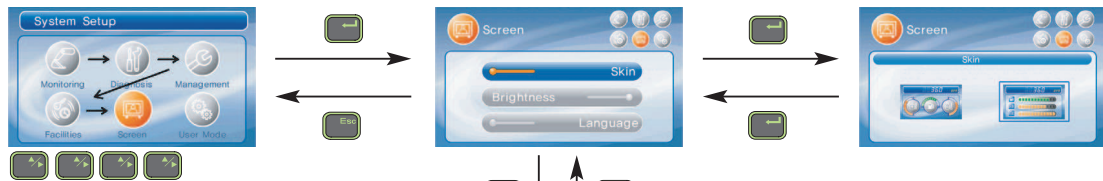


b. Brightness

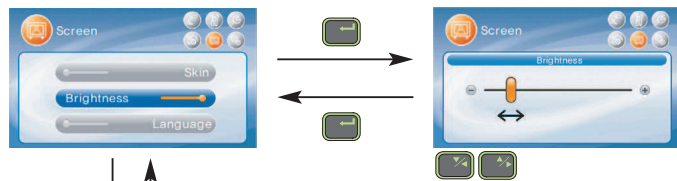

c. Language

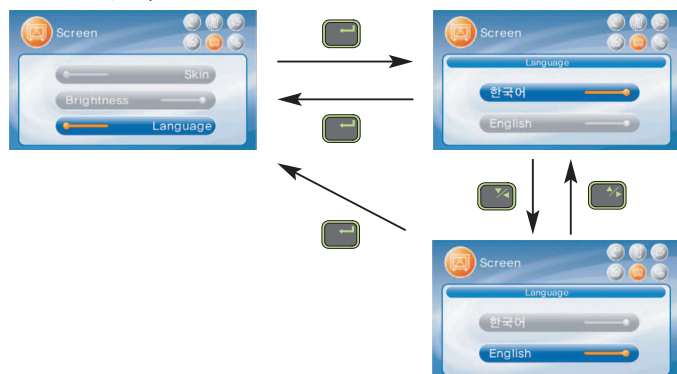


⑥ User mode

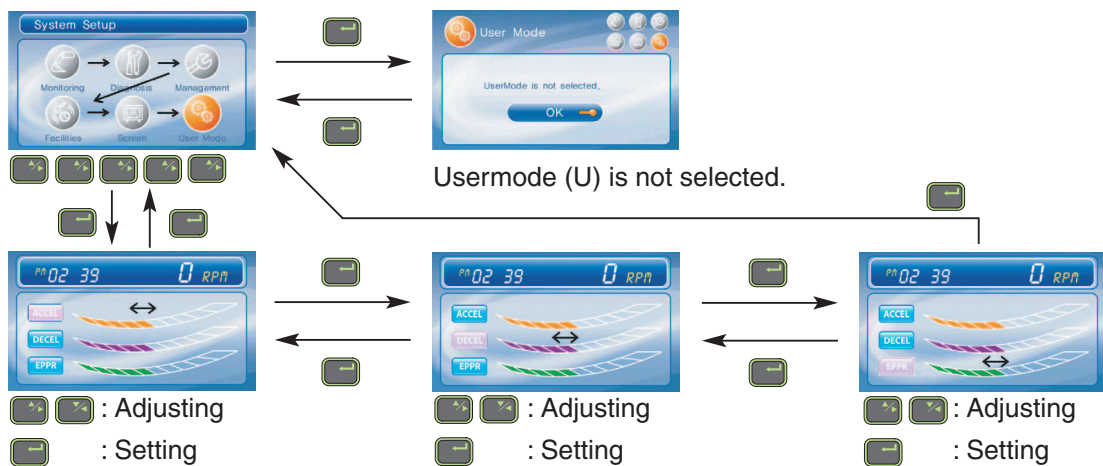

## 5) Warning and pilot lamp


### (1) Engine oil pressure warning lamp

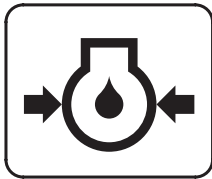

21073CD07

- ① This lamp blinks and the buzzer sounds after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.

### (2) Air cleaner warning lamp

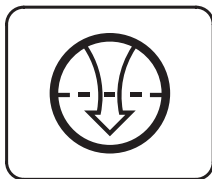

21073CD08

- ① This lamp blinks and the buzzer sounds when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.


### (3) CPU controller check warning lamp



21073CD10

- ① If any fault code is received from CPU controller, this lamp blinks and the buzzer sounds.
- ② Check the communication line between CPU controller and cluster.


### (4) Battery charging warning lamp

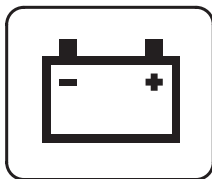

21073CD13

- ① This lamp blinks and the buzzer sounds when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.


### (5) Overload warning lamp

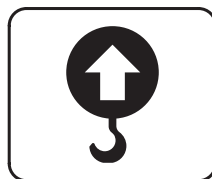

21073CD15

- ① When the machine is overload, the overload warning lamp blinks during the overload switch is ON.

#### (6) Engine check warning lamp

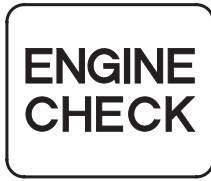

29073CD10

- ① This lamp blinks and the buzzer sounds when the communication between CPU controller and ECU on the engine is abnormal, or if any fault code received from ECU.
- ② Check the communication line between them.  
If the communication line is OK, then check the fault code on the cluster.

#### (7) Power max pilot lamp (null)



21073CD11

- ① The lamp will be ON when pushing power max switch on the LH RCV lever.

#### (8) Decel pilot lamp



21073CD17

- ① Operating auto decel or one touch decel makes the lamp ON.
- ② The lamp will be ON when pushing one touch decel switch on the LH RCV lever.

#### (9) Warming up pilot lamp



21073CD18

- ① This lamp is turned ON when the coolant temperature is below 30°C (86°F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30°C, or when 10 minutes have passed since starting.


#### (10) Preheat pilot lamp



21073CD12

- ① Turning the start key switch ON position starts preheating in cold weather.
- ② Start the engine as this lamp is OFF.


## 6) SWITCH PANEL

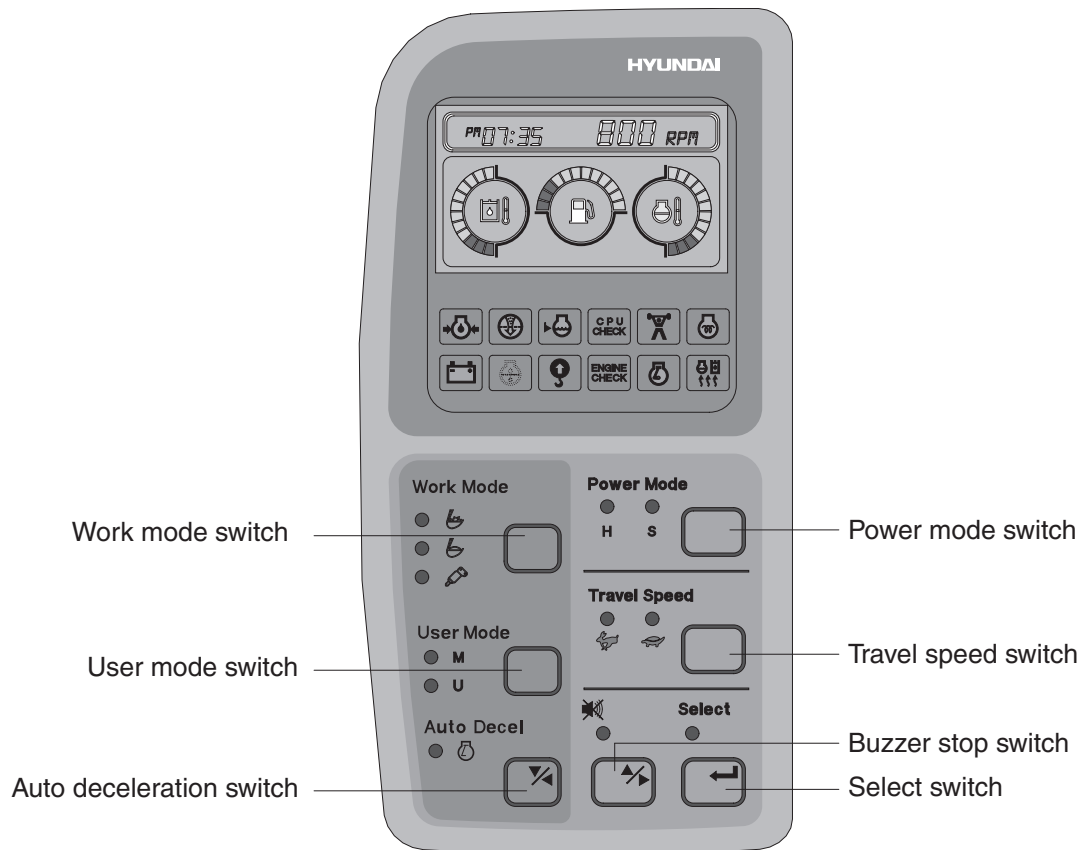

1607A3CD19

※ When the switches (Work mode, Power mode, Auto decel, Travel speed control) are selected, the pop-up icon is displayed on the LCD.  
Refer to page 3-4 for details.

### (1) Work mode switch

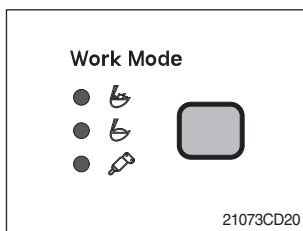


① This switch is to select the machine operation mode, which shifts from general operation mode to heavy operation mode and breaker mode in a row by pressing the switch.

- Heavy duty work mode
- General work mode
- Breaker operation mode

※ Refer to page 4-8 for details.

### (2) User mode switch

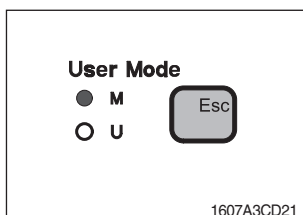


① This switch is to select the maximum power or user mode.

- M : Maximum power.
- U : Memorizing operators preferable power setting.


※ Refer to page 4-8 for details.

### (3) Auto deceleration switch

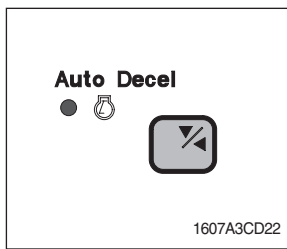


- ① This switch is used to actuate or cancel the auto deceleration function.
- ② When the switch actuated and all control levers and pedals are at neutral position, engine speed will be lowered automatically to save fuel consumption.
  - Light ON : Auto deceleration function is selected.
  - Light OFF : a. Auto deceleration function is cancelled so that the engine speed increased to previous setting value.  
b. One touch decel function is available.

### (4) Power mode switch

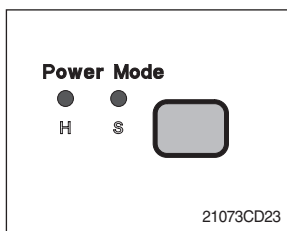


- ① The lamp of selected mode is turned ON by pressing the switch( ).
  - H : High power work.
  - S : Standard power work.

### (5) Travel speed control switch

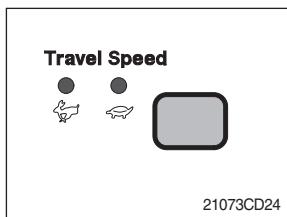


- ① This switch is to control the travel speed which is changed to high speed(Rabbit mark) by pressing the switch and low speed(Turtle mark) by pressing again.

### (6) Buzzer stop switch

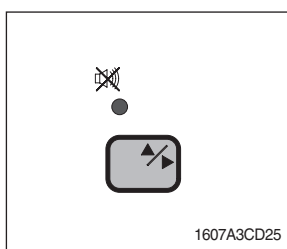


- ① When the starting switch is turned ON first, normally the alarm buzzer sounds for 2 seconds during lamp check operation.
- ② The red lamp lights ON and the buzzer sounds when the machine has a problem.  
In this case, press this switch and buzzer stops, but the red lamp lights until the problem is cleared.

### (7) Select switch

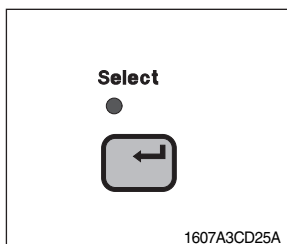


- ① This switch is used to enter main menu and sub menu of LCD.  
※ Refer to the page 3-5 for details.

### 3. SWITCHES

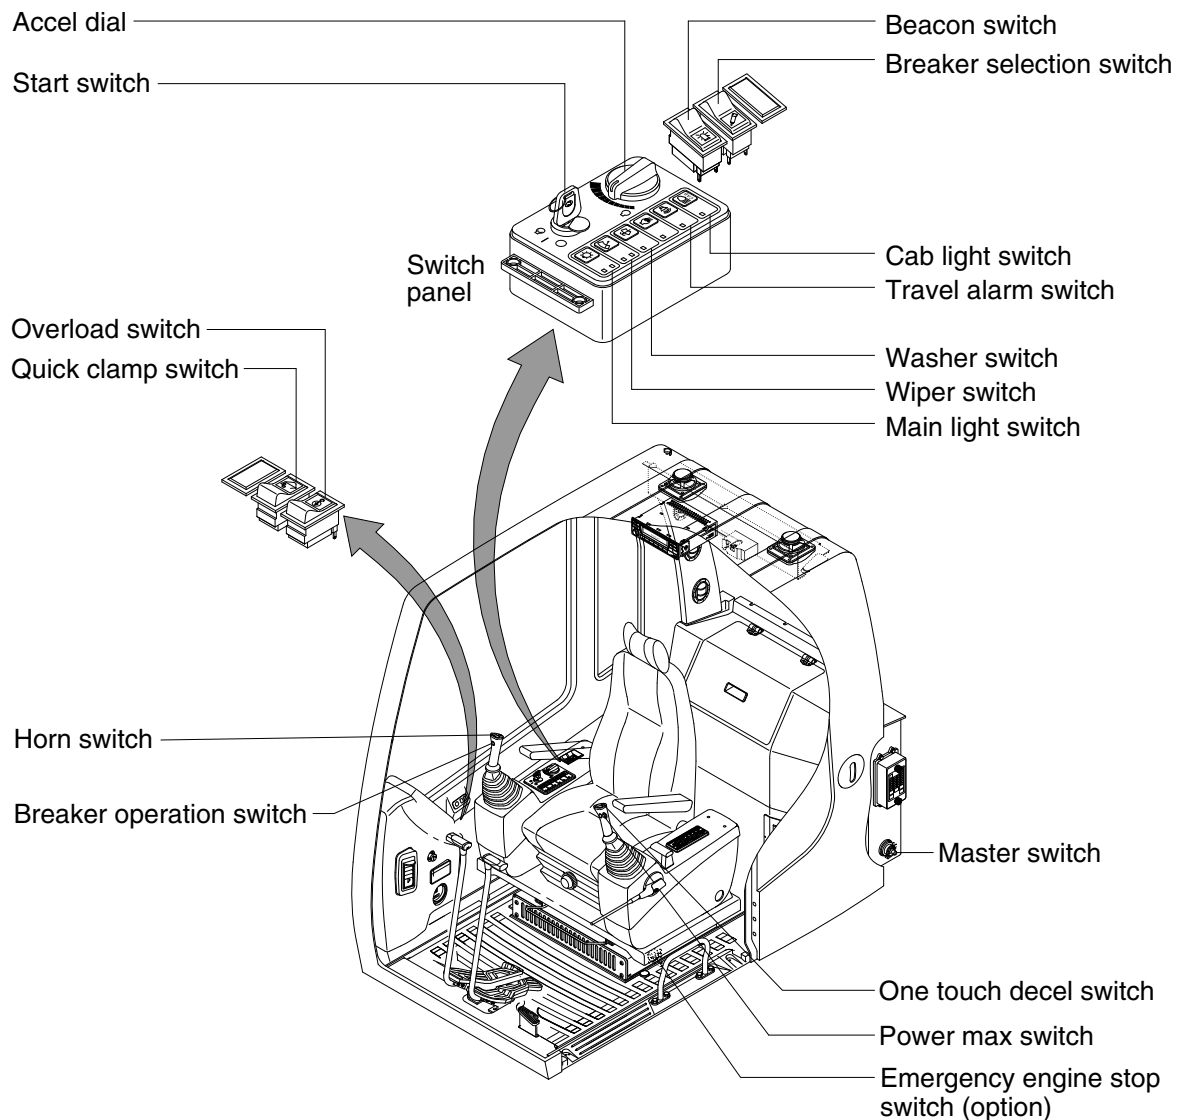

210S3CD26A

#### 1) STARTING SWITCH

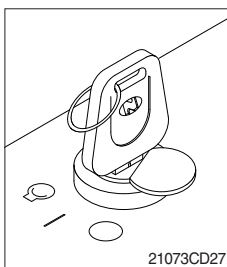


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ○ (START) : Use when starting the engine. Release key immediately after starting.

※ If you turn ON the starting switch in cold weather, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature. Start the engine in 1~2 minutes after turning ON the starting switch. More time may take according to ambient temperature (opt).


※ Key must be in the ON position with engine running maintain electrical and hydraulic function and prevent serious machine damage.

## 2) MASTER SWITCH

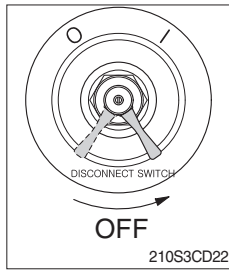


- (1) This switch is used to shut off the entire electrical system.
  - (2) I : The battery remains connected to the electrical system.  
O : The battery is disconnected to the electrical system.
- ※ **Never turn the master switch to O (OFF) with the engine running.**  
**Engine and electrical system damage could result.**

## (3) ACCEL DIAL SWITCH

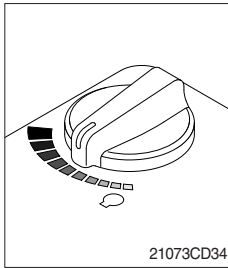


- (1) There are 10 dial setting.  
Setting 1 is low idle (Turtle) and setting 10 is high idle (Rabbit).
- By rotating the accel dial to right : Engine speed increases
  - By rotating the accel dial to left : Engine speed decreases

## (4) MAIN LIGHT SWITCH

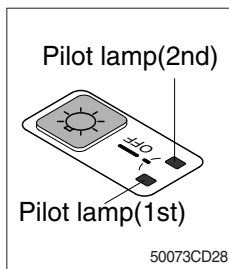


- (1) This switch used to operate the head light and work light.
- Press the switch once to head light comes ON.
  - Press the switch once more to work light comes ON.
  - Press the switch again, return to a first step position.
  - Press the switch more than one second to turn off lights.

## (5) WIPER SWITCH

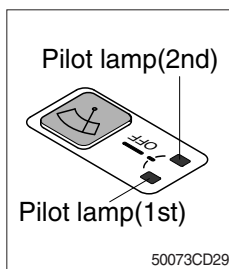


- (1) This switch used to operate wiper.
- Press the switch once to intermittently operate wiper.
  - Press the switch once more to operate wiper low speed.
  - Press the switch again return to a first step position.
  - Press the switch more than one second to turn off wiper.

## (6) WASHER SWITCH

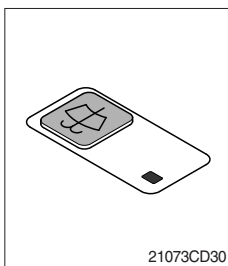

- (1) The washer liquid is sprayed and the wiper is operated only while pressing this switch.
- (2) The indicator lamp is turned ON when operating this switch.


## 7) TRAVEL ALARM SWITCH

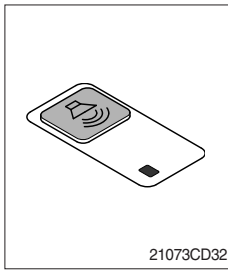

(1) This switch is to activate travel alarm function surrounding when the machine travels.


- ON : The travel alarm function is activated.
- OFF : The travel alarm function is not activated.

## 8) CAB LIGHT SWITCH (OPTION)

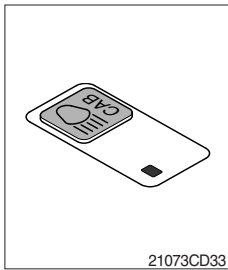

(1) This switch turns ON the cab light on the cab.


## 9) OVERLOAD SWITCH

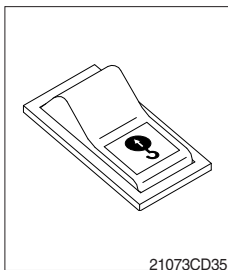

(1) When this switch turned ON, buzzer makes sound and overload warning lamp comes ON in case that the machine is overload.

(2) When turn OFF buzzer stops and warning lamp goes out.


## 10) QUICK CLAMP SWITCH (OPTION)

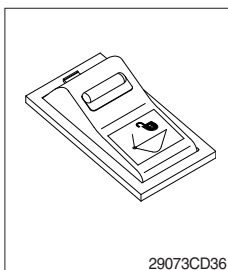

(1) This switch is used for engaging or disengaging the moving hook on quick clamp.

※ Refer to the page 8-6 for details.


## 11) BREAKER SELECTION SWITCH (OPTION)

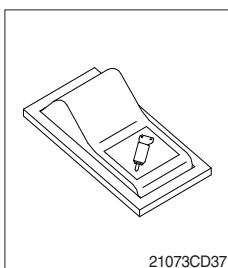

(1) This switch is used to select breaker.


※ The breaker operates only when this switch is selected.

## 12) BEACON SWITCH (OPTION)

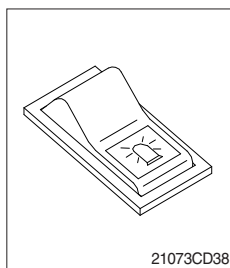


- (1) This switch turns ON the rotary light on the cab.
- (2) The below indicator lamp is turned ON when operating this switch.

## 13) HORN SWITCH

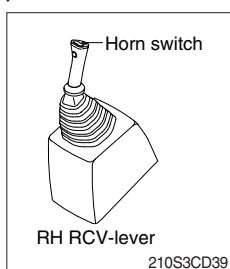


- (1) This switch is at the top of right side control lever. On pressing, the horn sounds.

## 14) BREAKER OPERATION SWITCH

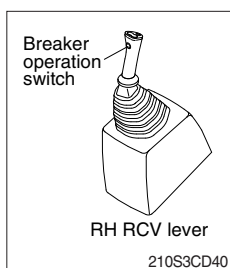


- (1) On pressing this switch, the breaker operates only when the breaker selection switch on the switch panel is selected.

## 15) ONE TOUCH DECEL SWITCH

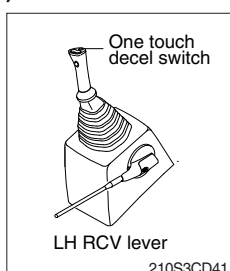


- (1) This switch is used to actuate the deceleration function quickly.
- (2) The engine speed is increased to previous setting value by pressing the switch again.

## 16) POWER MAX SWITCH (NULL)

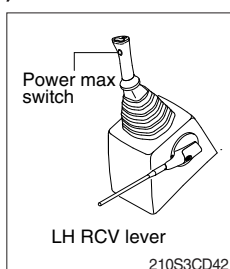

- (1) This switch activate power max function.  
When this switch is kept pressed, hydraulic power of work equipment will increased approx 110 percent during 8 seconds.
  - (2) After 8 seconds, function is cancelled automatically even switch is keep pressed.
- ※ **Don not use for craning purposes.**


## 17) EMERGENCY ENGINE STOP SWITCH (OPTION)

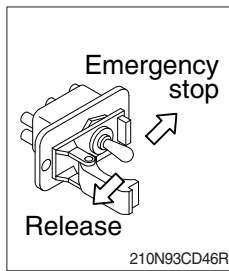

(1) This switch is used to stop the engine in the event of an emergency.


※ **Be sure to return the emergency switch to the release position before trying to restart the engine.**

## 4. LEVERS AND PEDALS

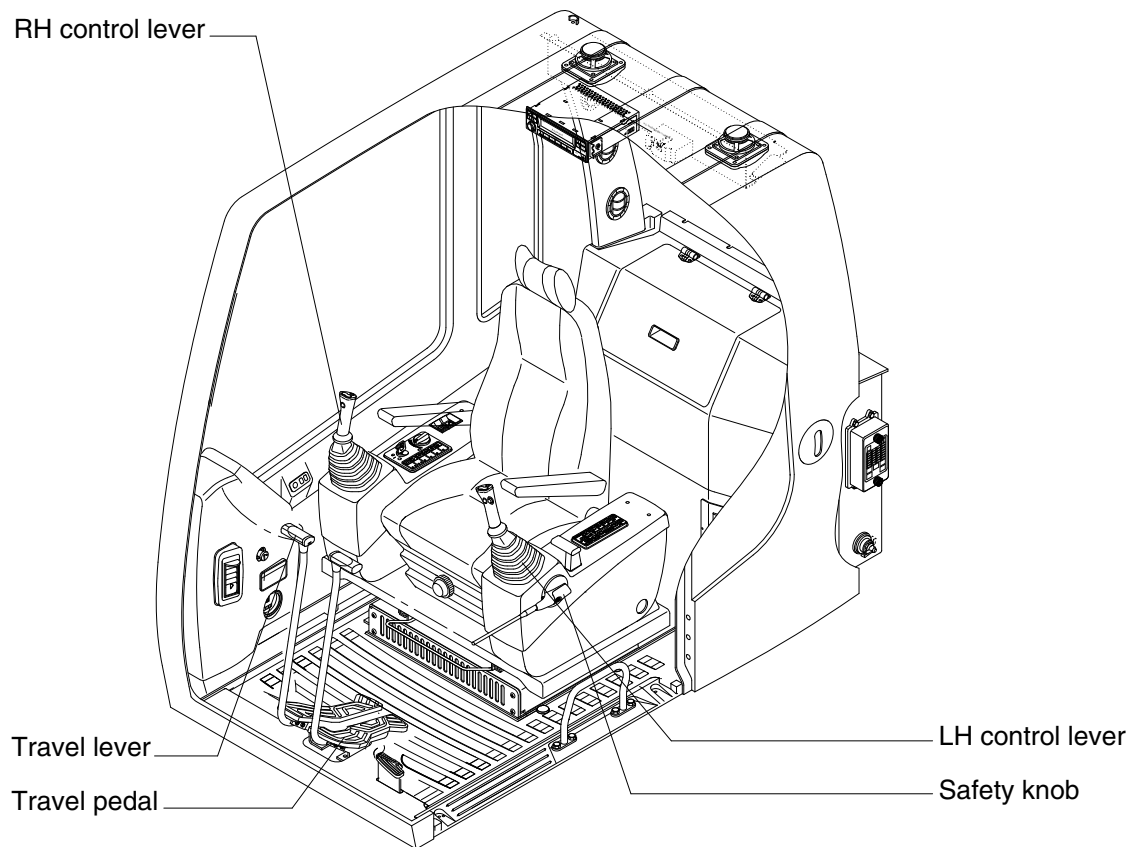


210S3CD38

### 1) LH CONTROL LEVER

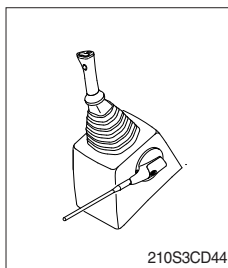


- (1) This joystick is used to control the swing and the arm.
- (2) Refer to **operation of working device** in chapter 4 for details.

### 2) RH CONTROL LEVER

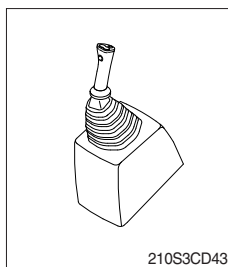


- (1) This joystick is used to control the boom and the bucket.
- (2) Refer to **operation of working device** in chapter 4 for details.

#### 4) EMERGENCY ENGINE STARTING CONNECTOR

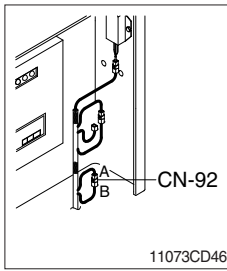


- (1) If the MCU is removed, the engine does not start.
  - (2) Before starting the engine, connect the connector CN-92 A with B.
- ※ Do not connect these connectors when the MCU is not removed.

#### 5) SAFETY KNOB

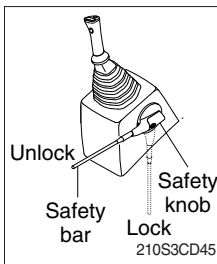


- (1) All control levers and pedals are disabled from operation by locating the safety knob to the LOCK position as shown.
- ※ Be sure to turn the safety knob to the LOCK position when entering or leaving the operators seat/cabin.
- (2) The machine is operational by turning the safety knob to the UNLOCK position.
- ※ Do not use the safety bar for handle when getting on or off the machine.

#### 6) TRAVEL LEVER

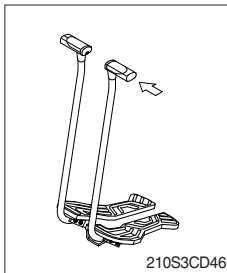


- (1) This lever is mounted on travel pedal and used for traveling by hand. The operation principle is same as the travel pedal.
- (2) Refer to **traveling of machine** in chapter 4 for details.

#### 7) TRAVEL PEDAL

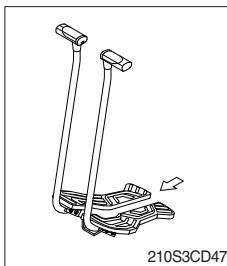

- (1) This pedal is used to move the machine forward or backward.
- (2) If left side pedal is pressed, left track will move.  
If right side pedal is pressed, right track will move.
- (3) Refer to **traveling of machine** in chapter 4 for details.

#### 8) SEAT AND CONSOLE BOX ADJUST LEVER

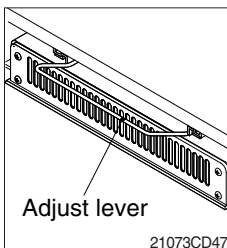


- (1) This lever is used to move the seat and console box to fit the contours of the operator's body.
- (2) Pull the lever to adjust forward or backward over 170 mm (6.7").


## 5. AIR CONDITIONER AND HEATER

Air conditioner and heater are equipped for pleasant operation against outside temperature and defrost on window glass.

- Location of air flow ducts

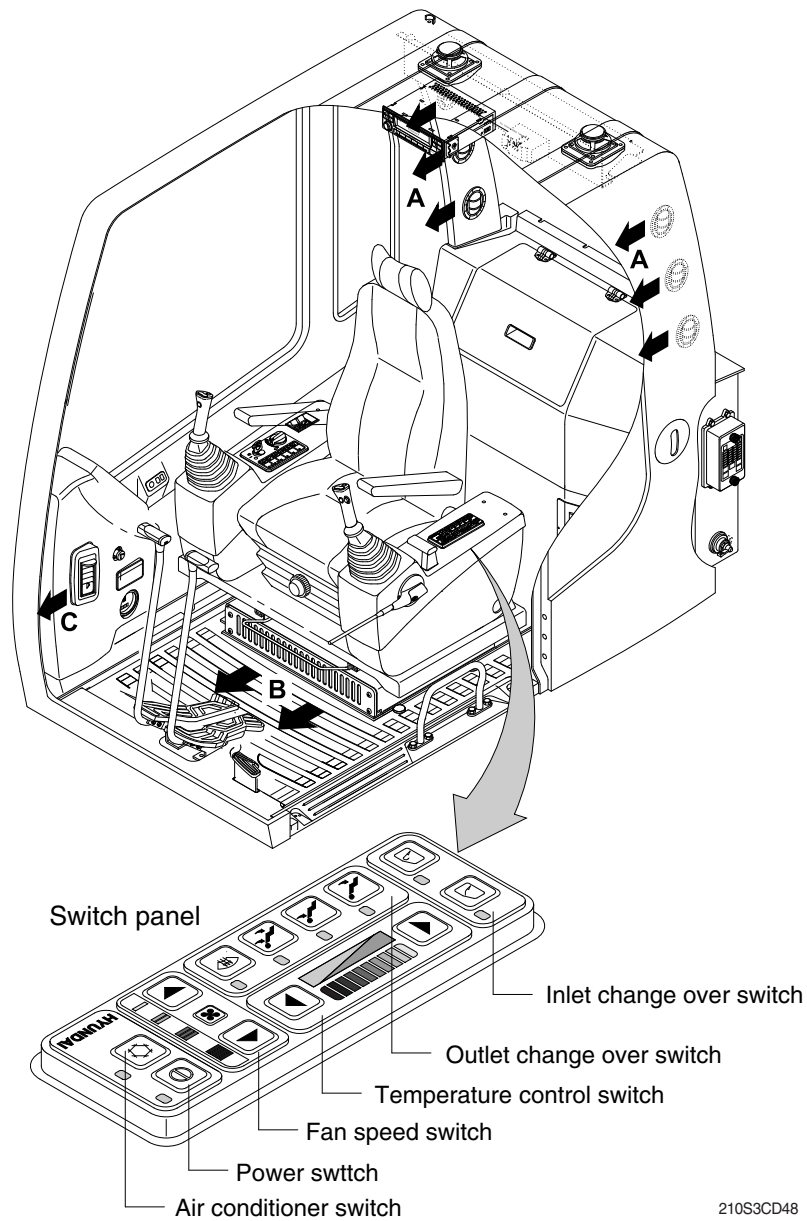

### 1) POWER SWITCH

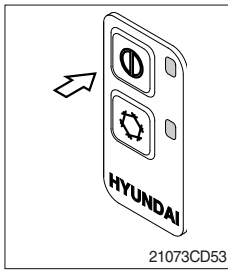


(1) This switch makes the system and the LED simultaneously ON or OFF.

※ **Default setting values**

Function	Air conditioner	Fan speed	Temperature	Outlet	Inlet
Max warm	OFF	1	Max cool	Face	Recirculation

### 2) AIR CONDITIONER SWITCH(Compressor switch)

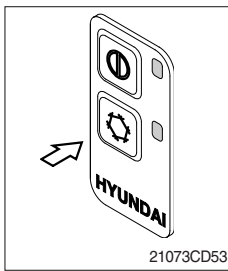


(1) Operating this switch turns the compressor and the LED simultaneously on or off.

(2) In accordance with the evaporator temperature, compressor turns on or off automatically without changing LED stare.

※ **Air conditioner operates to remove vapor and drains water through a drain hose. Water can be sprayed into the cab in case that the vacuum valve of drain hose has a problem.**

**In this case, exchange the vacuum valve.**


### 3) FAN SPEED SWITCH

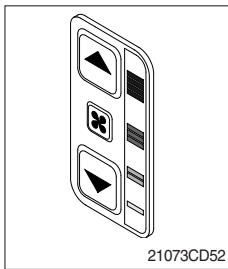

(1) It is possible to control the fan to four steps.

(2) The first step or the fourth step gives 5 times beeps.

### 4) TEMPERATURE CONTROL SWITCH

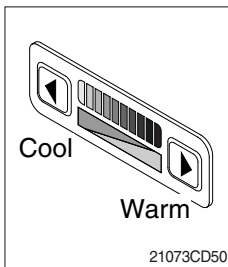


(1) There are 9 steps to control temperature from max cool to max warm controlled up and down by 1 step.

(2) Max cool and max warm arouse 5 times beeps.

(3) For the max warm or the max cool it's better to be configured as following table.

Temperature	Air conditioner	Fan speed	Outlet	Inlet
Max cool	ON	4	Face	Recirculation
Max warm	OFF	3	Foot	Fresh

## 5) OUTLET CHANGE OVER SWITCH

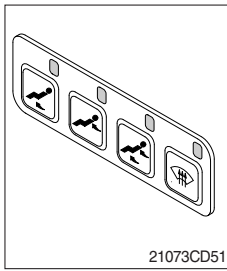


(1) There are four steps of air flow.

Switch position		Mode			
Outlet	A		○	○	
	B	○		○	○
	C				○

(2) When defroster switch operating, INLET switch turns to FRESH mode and air conditioner switch turns ON.

(3) In case of heating range (5~Max warm), air conditioner won't turns ON.

## 6) INLET CHANGE OVER SWITCH

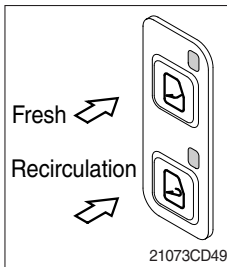

(1) It is possible to change the air-inlet method.

### ① Fresh

Inhaling air from the outside to pressurize cab inside.

※ **Check out the fresh air filter periodically to keep a good efficiency.**

### ② Recirculation


It recycles the heated or cooled air to increase the energy efficiency.

※ **Change air occasionally when using recirculation for a long time.**

※ **Check out the recirculation filter periodically to keep a good efficiency.**

(2) Recirculation function operates when the system is OFF but it can be changed whenever needed.

## 6. OTHERS

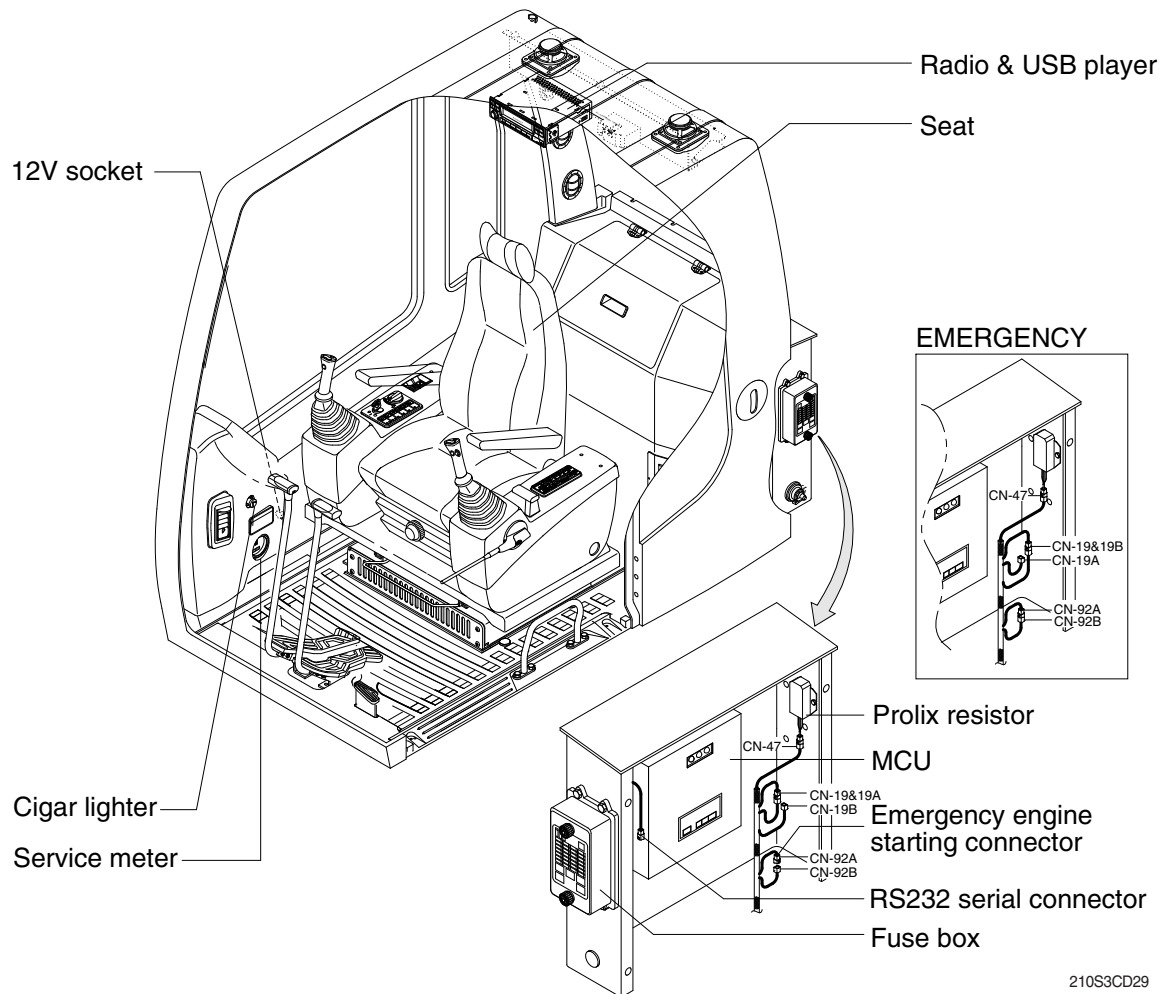

## 1) RADIO AND USB PLAYER



9403CD101

### FRONT PANEL PRESENTATION

- |   |  |   |    |  |   |
|---|--|---|----|--|---|
| 1 |  | ..... Power ON/OFF,<br>Volume UP/DOWN button            | 10 |  | ..... Station preset 5<br>DIR- ..... Directory down button        |
| 2 |  | ..... Manual UP/DOWN Tuning,<br>File search, SEL button | 11 |  | ..... Station preset 6<br>DIR+ ..... Directory up button          |
| 3 |  | ..... Mode button,<br>Audio mute button                 | 12 |  | ..... Scan play button (SCAN)<br>Best station memory (BSM) button |
| 4 |  | ..... Radio seek up button                              | 13 |  | ..... Track up button   |
| 5 |  | ..... Radio seek down button                            | 14 |  | ..... Track down button   |
| 6 |  | ..... Station preset 1<br>DIS ..... Display button      | 15 |  | ..... USB connector   |
| 7 |  | ..... Station preset 2                                  | 16 |  | ..... AUX IN Jack   |
| 8 |  | ..... Station preset 3<br>RPT ..... Repeat play button  |    |  |   |
| 9 |  | ..... Station preset 4<br>RDM ..... Random play button  |    |  |   |

## ■ GENERAL

### (1) Power and volume button



#### ① Power ON / OFF button

Press power button (1) to turn the unit on or off.

#### ② Volume UP/DOWN control knob

Turn VOL knob (1) right to increase the volume level.

Turn VOL knob (1) left to decrease the volume.

After 5 seconds the display will return to the previous display mode.

#### ③ Initial volume level set up

I-VOL is the volume level the unit will play at when next turned on.

To adjust the I-VOL level, press and hold VOL button (1) for longer than 2 seconds. The current volume level displays on the display panel.

Then turn button (1) right or left to set the volume level as the I-VOL level.

#### ④ Clock ON/OFF control

The CLOCK was default at off status. To turn CLOCK ON, press and hold VOL button (1) for longer than 2 seconds to display I-VOL, then short press VOL again, turn VOL knob while CLOCK OFF display, then the CLOCK ON will be displayed.

※ Due to time tolerance, the clock display on the Audio unit might have little difference.

#### ⑤ Clock adjustment

With CLOCK ON selected, press VOL knob again after CLOCK ON display, the hour will blink, turn VOL knob right or left to adjust hour.

Simply press VOL again, the minute will blink, turn VOL knob to adjust minute. Then press VOL again to confirm the clock once finished.

## (2) Menu Selection



- ① This button can adjust the sound effect and other things.

Each time you press this button (2), LCD displays as follows :

BAS → TREB → BAL L=R → FAD F=R → EQ → LOUD ON →  
BEEP 2ND

On each setting, the level can be controlled by turning TUNE knob (2). When the last adjustment is made, after 5 seconds, the display will automatically return to the previous display mode.

### ② Bass control

To adjust the bass tone level, first select the bass mode by pressing SEL button (2) repeatedly until BASS appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the bass level as desired. The bass level will be shown on the display panel from a minimum of BASS-7 to a maximum of BASS+7.

### ③ Treble control

To adjust the treble tone level, first select the treble mode by pressing SEL button (2) repeatedly until TREB appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the treble level as desired. The treble level will be shown on the display panel from a minimum of TREB -7 to a maximum of TREB +7.

### ④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing SEL button (2) repeatedly until BAL indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the balance as desired. The balance position will be shown by the bars on the display panel from BAL 10R (full right) to BAL 10L (full left).

### ⑤ Fader control

To adjust the front-rear speaker balance, first select the fader mode by pressing SEL button (2) repeatedly until FADER indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the front-rear speaker level as desired. The fader position will be shown by the bars on the display panel from FAD 10F (full front) to FAD 10R (full rear).

### ⑥ EQ control

You can select an equalizer curve for 4 music types (CLASSIC, POP, ROCK, JAZZ). Press button (2) until EQ is displayed, then turn knob (2) right or left to select the desired equalizer curve. Each time you turn the knob, LCD displays as follows :

EQ OFF → CLASSIC → POP → ROCK → JAZZ

※ When the EQ mode is activated, the BASS and TREBLE modes are not displayed.

#### ⑦ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response. This action will compensate for the reduction in bass and treble performance experienced at low volume.

To select the loudness feature, press button (2) until LOUD is displayed, then turn knob (2) right or left to activate or deactivate loudness.

#### ⑧ Beep control

To adjust the BEEP mode, first select the BEEP mode by pressing button (2) repeatedly until BEEP indication appears on the display panel. Then turn knob (2) left or right within 5 seconds to select BEEP 2ND, BEEP OFF or BEEP ON.

- BEEP 2ND : You will only hear the beep sound when the buttons are held down for more than 2 seconds.
- BEEP OFF : You can not hear the sound beep when you press the buttons.
- BEEP ON : You can hear the beep sound each time you press the buttons.

#### (3) Mute control

- ① Press and hold MUTE button (3) for over 2 seconds to mute sound output and MUTE ON will blink on the LCD. Press the button again to cancel MUTE function and resume to normal playing mode.

#### (4) Mode selection

- ① Repeat press MODE button (3) to switch between FM1, FM2, AM, USB, AUX, BT MUSIC.
- ※ If there is no USB, AUX, Bluetooth Phone connected, it would not display USB, AUX, BT when you press button (3).

## ■ RADIO

### (1) Mode button



- ① Repeat press MODE button to select FM1, FM2 or AM.

### (2) Manual tuning button



- ① To manually tune to a radio station, simply turn encoder TUNE (2) left or right to increase or decrease the radio frequency.

### (3) Auto tuning button



- ① To automatically select a radio station, simply press Seek up or Track down button.




### (4) Station preset button



- ① In radio mode, pressing buttons (6) to (11) will recall the radio stations that are memorized. To store desired stations into any of the 6 preset memories, in either the AM or FM bands, use the following procedure :
  - a. Select the desired station.
  - b. Press and hold one of the preset buttons for more than 2 seconds to store the current station into preset memory. Six stations can be memorized on each of FM1, FM2, and AM.

#### (5) Preset scan (PS) / Best station memory (BSM) button

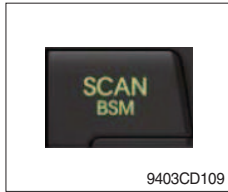

- ① Press BSM button (12) momentarily to scan the 6 preset stations stored in the selected band. When you hear your desired station, press it again to listen to it.

Press BSM button (12) for longer than 2 seconds to activate the Best Station Memory feature which will automatically scan and enter each station into memory.

- ※ **If you have already set the preset memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter into the new ones. This BSM feature is most useful when travelling in a new area where you are not familiar with the local stations.**

## ■USB PLAYER

### (1) USB playback



- ① The unit was equipped with a front USB jack and also a rear USB Jack.

With a USB device plugged in the front USB jack, it will be detected as front USB mode. And with a USB device plugged in the rear USB jack, it will be detected as rear USB. To get to a USB mode, press MODE (3) button momentarily or insert the USB device in front or rear USB jack.

- ※ If no mp3 or wma files in USB device, it will convert to the previous mode after display NO FILE.

### (2) Track Up / Down button



- ① Press SEEK up (13) or TRACK down (14) to select the next or previous track. Press and hold the buttons to advance the track rapidly in the forward or backward direction.



### (3) MP3 directory / File searching



- ① Button (2) is used to select a particular directory and file in the device. Turn button (2) right or left to display the available directories. Press button (2) momentarily when the desired directory is displayed, then turn button (2) right or left again to display the tracks in that directory. Press button (2) to begin playback when the desired file is displayed.

### (4) Directory Up / Down button



- ① During MP3/WMA playback, simply press DIR- button (10) to select the previous directory (if available in the device); simply press DIR+ button (11) to select the next directory (if available in the device).

- ※ If the USB device does not contain directories, it would play MP3/WMA tracks at 10- file when you press DIR- button (10), and play MP3/WMA tracks at 10+ file when you press DIR+ (11) button.

#### (5) Track Scan Play (SCAN) button



- SCAN playback : Simply press SCAN (12) button to play the first 10 seconds of each track.
- SCAN folder : Press and hold SCAN button for longer than 2 seconds to scan play the tracks in current folder.
- SCAN off : Simply press it again to cancel SCAN feature.

#### (6) Track Repeat Play (RPT) button



- REPEAT playback : Simply press RPT (8) button to play current track repeatedly.
- REPEAT folder : Press and hold RPT for longer than 2 seconds to repeat play the tracks in current folder.
- REPEAT off : Simply press it again to cancel REPEAT feature.

#### (7) Track Random Play (RDM) button



- RANDOM playback : Simply press RDM (9) button to play the tracks in the device in a random sequence.
- RANDOM folder : Press and hold RDM button for longer than 2 seconds to random play the tracks in current folder.
- RANDOM off : Simply press it again to cancel RANDOM feature.

#### (8) ID3 v2 (DISP)



- ① While a MP3 file is playing, press DISP button (6) to display ID3 information. Repeat push DISP button (6) to show directory name / file name and album name / performer / title.

※ If the MP3 disc does not have any ID3 information, it will show NO ID3.

\* USB Information and Notice

- Playback FILE SYSTEM and condition allowance.
  - FAT, FAT12, FAT16 and FAT32 in the file system.
  - V1.1, V2.2 and V2.3 in the TAG (ID3) version.
- Display up to 32 characters in the LCD display.
- No support any of MULTI-CAED Reader.
- No high speed playback but only playing with normal full speed.

※ DRM files in the USB may cause malfunction to playback in the radio unit.

※ The temperature below -10 Celsius, the audio unit with USB hook up would be affected to play well.

## ■AUX OPERATION


It is possible to connect your portable media player to the audio system for playback of the audio tracks via the cab speakers.

To get the best results when connecting the portable media to the audio system, follow these steps :

- Use a 3.5 mm stereo plug cable to connect the media player headphone socket at each end as follows.
  - Adjust the portable media player to approximately 3/4 volume and start playback.
  - Press the MODE button (3) on the audio unit to change into AUX mode.
  - The volume and tone can now be adjusted on the audio unit to the desired level.
- ※ The audio quality of your media player and the audio tracks on it may not be of the same sound quality as the audio system is CD Player.
  - ※ If the sound of the media player is too low compared with the radio or CD, increase the volume of the player.
  - ※ If the sound of the media player is too loud and/or distorted, decrease the volume of the player.
  - ※ When in AUX mode, only the Volume, Bass, Treble, EQ and Mode functions of the audio unit can be used.

## 2) SEAT

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

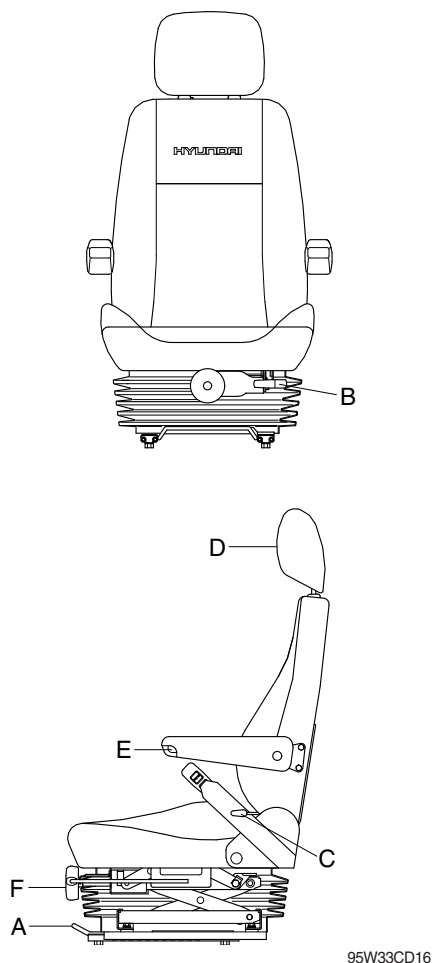

### (1) Forward/Backward adjustment (A)

- ① Pull lever A to adjust seat forward or backward.
- ② The seat can be moved forward and backward over 170 mm (6.7") in 13 steps.

### (2) Upward/Downward adjustment (B)

- ① Pull lever B to adjust seat upward or downward.
- ② Forward or backward side adjustment only can be made, tilting to one side, by moving lever B respectively.

### (3) Reclining adjustment (C)

Pull lever C to adjust seat back rest.

### (4) Arm rest adjustment (E)

This can be adjusted by pushing the button E to right and left.

### (5) Head rest adjustment (D)

This is adjustable vertically to fit operator's requirements.


### (6) Cushion adjustment (F)

Adjust the handle to the operator's weight.

▲ Always check the condition of the seat belt and mounting hardware before operating the machine.

▲ Replace the seat belt at least once every three years, regardless of appearance.

## 3) CIGAR LIGHTER

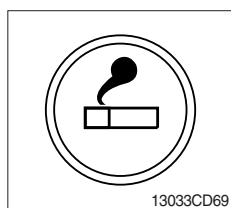


- (1) This can be used when the engine starting switch is ON.
- (2) The lighter can be used when it springs out in a short while after being pressed down.

※ **Service socket**

**Use cigar lighter socket when you need emergency power.**


**Do not use the lighter exceeding 24V, 100W.**

## 4) 12V SOCKET(Optional)

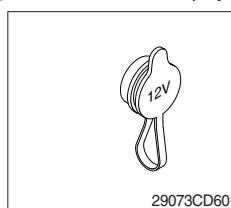

- (1) Utilize the power of 12V as your need and do not exceed power of 12V, 30W.

## 5) FUSE BOX

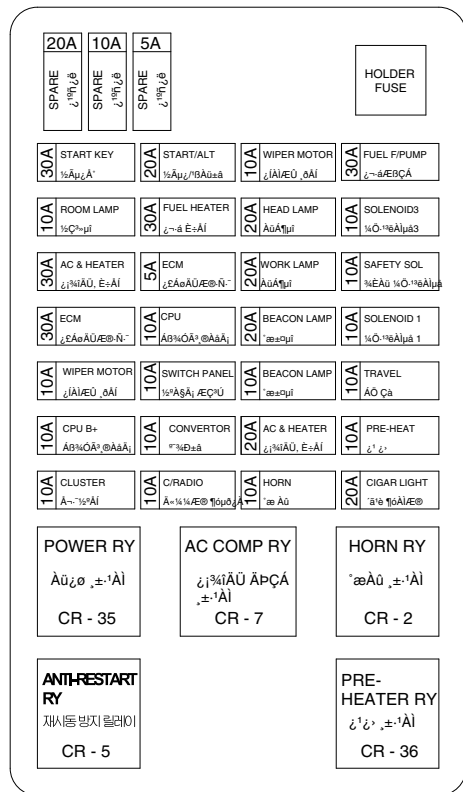

21N5-30141


(1) The fuses protect the electrical parts and wiring from burning out.

(2) The fuse box cover indicates the capacity of each fuse and circuit it protects.

※ Replace a fuse with another of the same capacity.

▲ Before replacing a fuse, be sure to turn OFF the starting switch.

## 6) MCU (machine control unit)

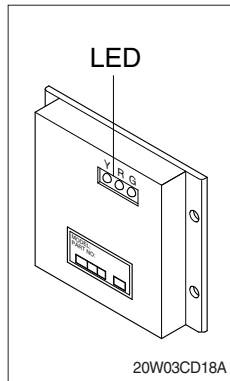


(1) To match the engine torque with the pump absorption torque, MCU controller varies EPPR valve output pressure, which control pump discharge amount whenever feedbacked engine speed drops under the reference rpm of each mode set.

(2) Three LED lamps on the MCU display as below.

LED lamp	Trouble	Service
G is turned ON	Normal	-
G and R are turned ON	Trouble on MCU or ROM	• Change the controller
G and Y are turned ON	Trouble on serial communication line	• Check if serial communication lines between MCU and cluster are connected
Three LED are turned OFF	Trouble on MCU power	• Check if the input power wire (24V, GND) of MCU is disconnected • Check the fuse

G : green, R : red, Y : yellow

## 7) PROLIX RESISTOR (Option)

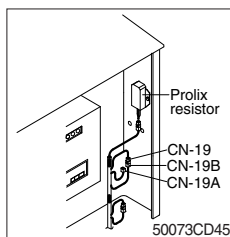


(1) This resistor is used to continuous working in case of malfunction of the MCU.

※ **Never connect connector CN-19 with connector CN-19B when MCU is in normal operation.**

- Normal : CN-19 connect with connector CN-19A
- Emergency : CN-19 connect with connector CN-19B


## 8) SERVICE METER

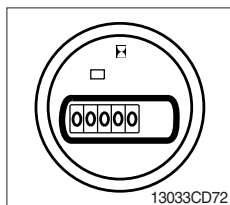

(1) This meter shows the total operation hours of the machine.


(2) Always ensure the operating condition of the meter during the machine operation. Inspect and service the machine based on hours as indicated in chapter 6, maintenance.

## 9) RS232 SERIAL CONNECTOR

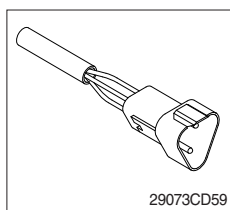

(1) MCU communicates the machine data with Lap top computer through RS232 connector.


## 10) UPPER WINDSHIELD

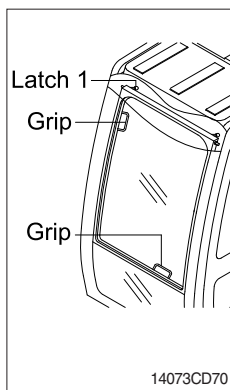

(1) Perform the following procedure in order to open the upper windshield.

- ① Release both latches(1) in order to release the upper windshield.
- ② Hold both grips that are located at the bottom of the windshield frame and at the top of the windshield frame push the windshield upward.
- ③ Hold both grips that are provided on the windshield frame and back into the storage position until auto lock latch(2) is engaged, move the levers of both latches(1) into the locked position. Push the levers toward the rear of the cab in order to hold the windshield in storage position.

▲ **When working, without having locked the windshield by the auto lock (by pushing the windshield to the rear until it's completely fixed), please be careful as it can cause personal injury if the windshield is not fixed or falls off.**

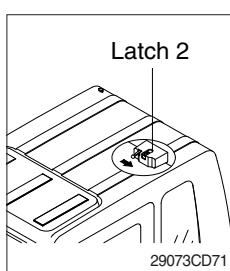

(2) Perform the following procedure in order to close the upper windshield.

- ① Move the lever of the auto lock latch(2) in the direction of the arrow in order to release the auto lock latch.
- ② Reverse step ① through step ③ in order to close the upper windshield.

## 1. SUGGESTION FOR NEW MACHINE

- 1) It takes about 100 operation hours to enhance its designed performance.
- 2) Operate according to below three steps and avoid excessive operation for the initial 100 hours.

Service meter	Load
Until 10 hours	About 60 %
Until 100 hours	About 80 %
After 100 hours	100 %


※ **Excessive operation may deteriorate the potential performance of machine and shorten lifetime of the machine.**

### 3) Be careful during the initial 100 hours operation

- (1) Check daily for the level and leakage of coolant, engine oil, hydraulic oil and fuel.
- (2) Check regularly the lubrication and fill grease daily all lubrication points.
- (3) Tighten bolts.
- (4) Warm up the machine fully before operation.
- (5) Check the gauges occasionally during the operation.
- (6) Check if the machine is operating normally during operation.


### 4) Replace followings after initial 250 hours of operation

Checking items	Hours
Engine oil	250
Engine oil filter element	
Fuel filter	
Prefilter	
Hydraulic oil return filter element	
Hydraulic oil tank drain filter cartridge	
Line filter element	
Swing reduction gear oil	
Travel reduction gear oil	

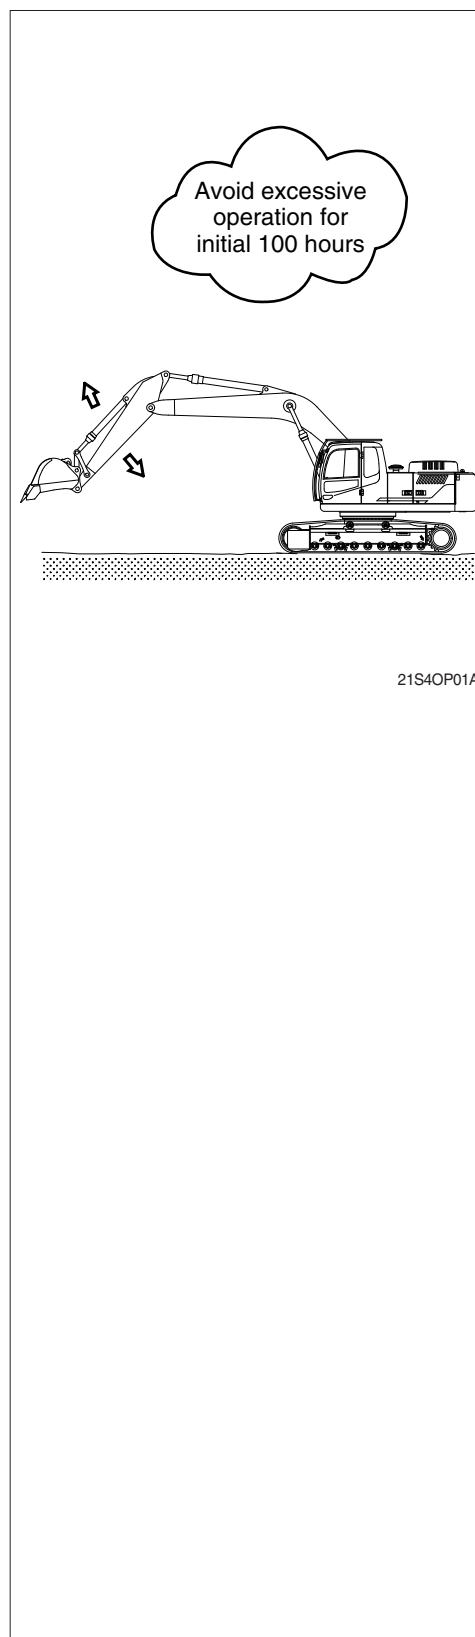

## 2. CHECK BEFORE STARTING THE ENGINE


- 1) Look around the machine and under the machine to check for loosen nut or bolts, collection of dirt, or leakage of oil, fuel or coolant and check the condition of the work equipment and hydraulic system. Check also loosen wiring, and collection of dust at places which reach high temperature.  
※ **Refer to the daily check on the chapter 6, maintenance.**
- 2) Adjust seat to fit the contours of the operator's body for the pleasant operation.
- 3) Adjust the rear view mirror.

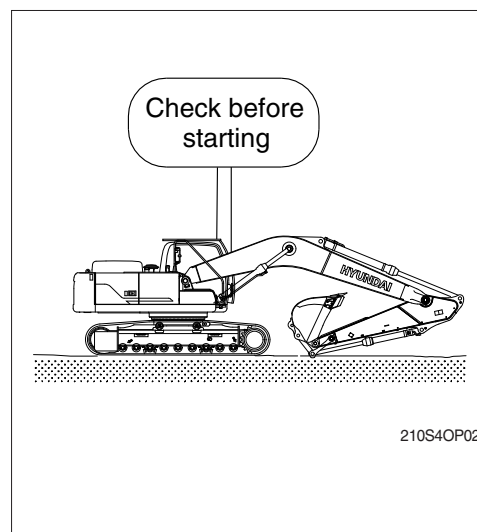

### 3. STARTING AND STOP THE ENGINE

#### 1) CHECK INDICATOR LIGHTS


- (1) Check if all the operating levers are in the neutral position.
- (2) Turn the starting switch to the ON position, and check following.
  - ① If all the lamps light ON and buzzer sounding for 2 seconds.
  - ② After lamp check 「1.00」, the version of cluster program, is displayed on 「LCD(3)」 for 5 seconds and the cluster returns to default.
  - ③ Only below lamps will light ON and all the other lights will turn OFF after 2 seconds.
    - Engine oil pressure warning lamp (1)
    - Battery charging warning lamp (2)

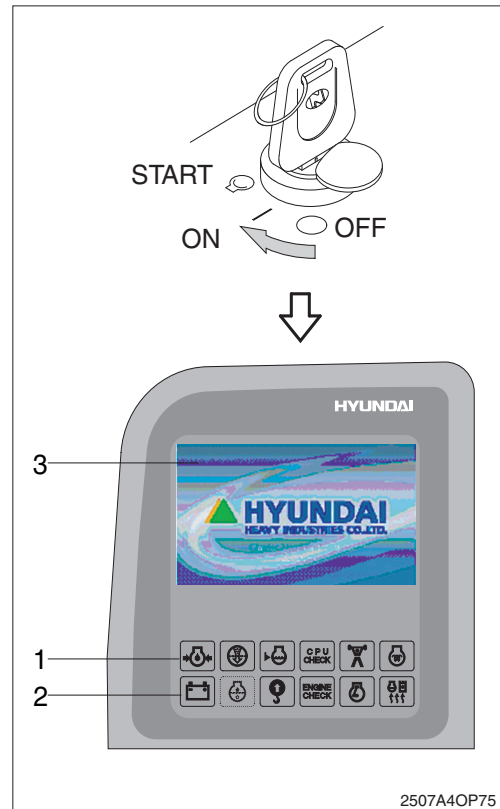

#### 2) STARTING ENGINE IN NORMAL TEMPERATURE

※ Sound the horn to warn the surroundings after checking if personnel or obstacles are in the area.


- (1) Turn the starting switch to START position to start the engine.
  - ※ If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
  - ※ Do not hold the starting switch in the START position for longer than 20 seconds
- (2) Release the starting switch instantly after the engine starts to avoid possible damage to the starting motor.

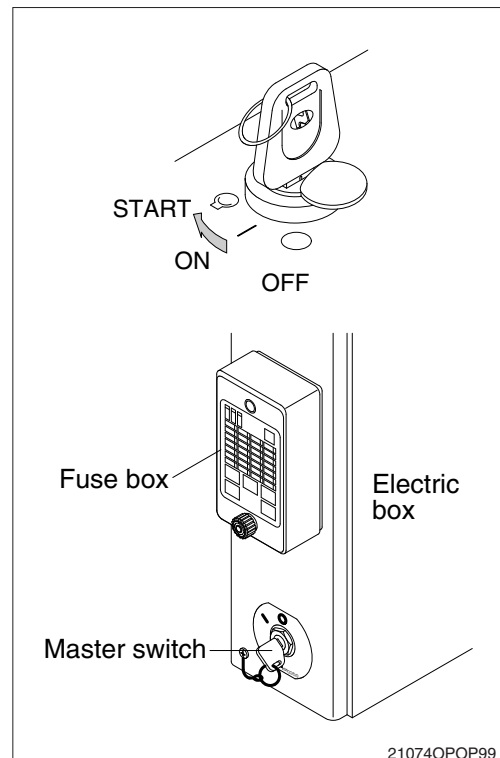

### 3) STARTING ENGINE IN COLD WEATHER

- ※ Sound horn to warn surroundings after checking if there are obstacles in the area.
- ※ Replace the engine oil and fuel referring to recommended oils at page 2-16.
- ※ Fill the anti-freeze solution to the coolant as required.
- ※ If you turn ON the starting switch, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature.


- (1) Check if all the levers are in the neutral position.
  - (2) Turn the starting switch to ON position, and wait 1–2 minutes. More time may take according to ambient temperature.
  - (3) Press the preheat switch ON.
  - (4) Start the engine by turning the starting switch to the START position after the preheat pilot lamp OFF.
- ※ If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (5) Release the starting switch immediately after starting engine.
  - (6) The operation for the warming up machine is automatic.

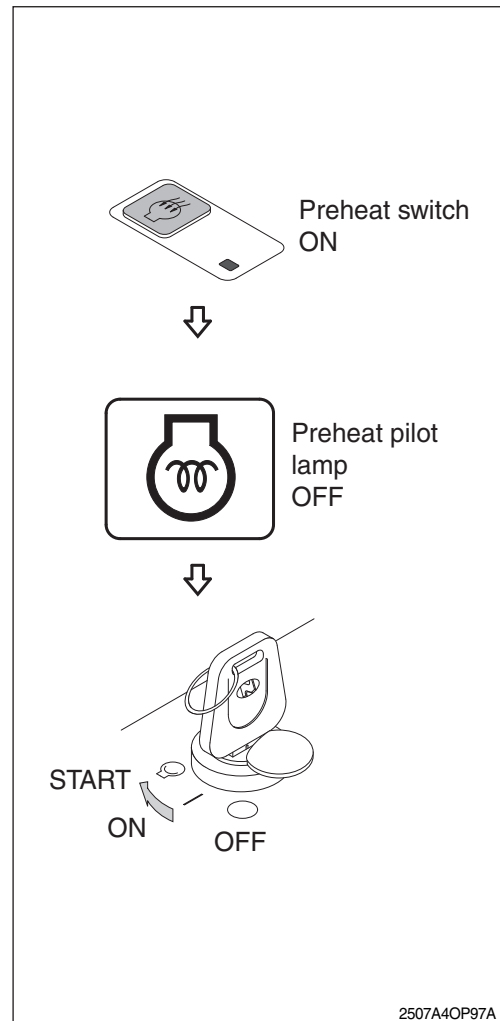

#### 4) INSPECTION AFTER ENGINE START

Inspect and confirm the following after engine starts.

- (1) Is the level gauge of hydraulic oil tank in the normal level?
  - (2) Are there leakages of oil or water?
  - (3) Are all the warning lamps turned OFF (1-8)?
  - (4) Are the indicator of water temperature gauge (9) and hydraulic temperature gauge (10) in the green zone?
  - (5) Is the engine sound and the color of exhaust gas normal?
  - (6) Are the sound and vibration normal?
- ※ **Do not increase engine speed quickly after starting, it can damage engine or turbocharger.**
  - ※ **If there are problems in the control panel, stop the engine immediately and correct problem as required.**

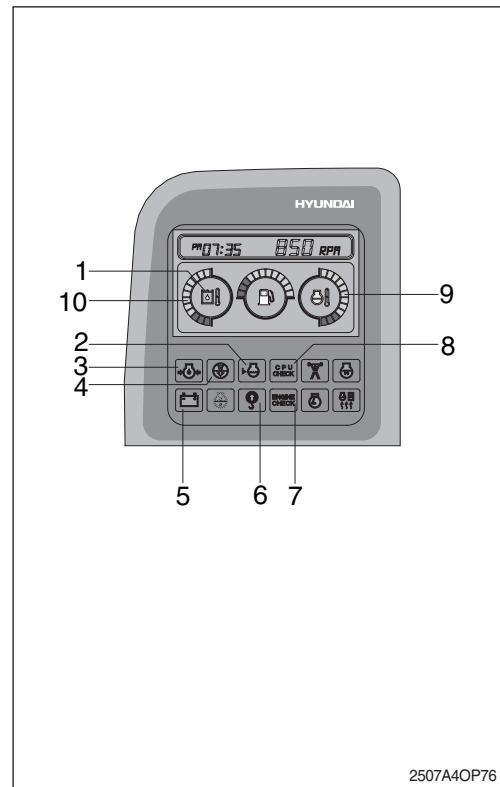


## 5) WARMING-UP OPERATION

※ The most suitable temperature for the hydraulic oil is about 50°C (122°F).

It can cause serious trouble in the hydraulic system by sudden operation when the hydraulic oil temperature is below 25°C (77°F).

Then temperature must be raised to at least 25°C (77°F) before starting work.

- (1) Run the engine at low idle speed for 5 minutes.
- (2) Speed up the idling and run the engine at mid-range speed.
- (3) Operate bucket lever for 5 minutes.  
※ **Do not operate anything except bucket lever.**
- (4) Run the engine at the high speed and operate the bucket lever and arm lever for 5-10 minutes.  
※ **Operate only the bucket lever and arm lever.**
- (5) This warming-up operation will be completed by operation of all cylinders several times, and operation of swing and traveling.  
※ **Increase the warming-up operation during winter.**

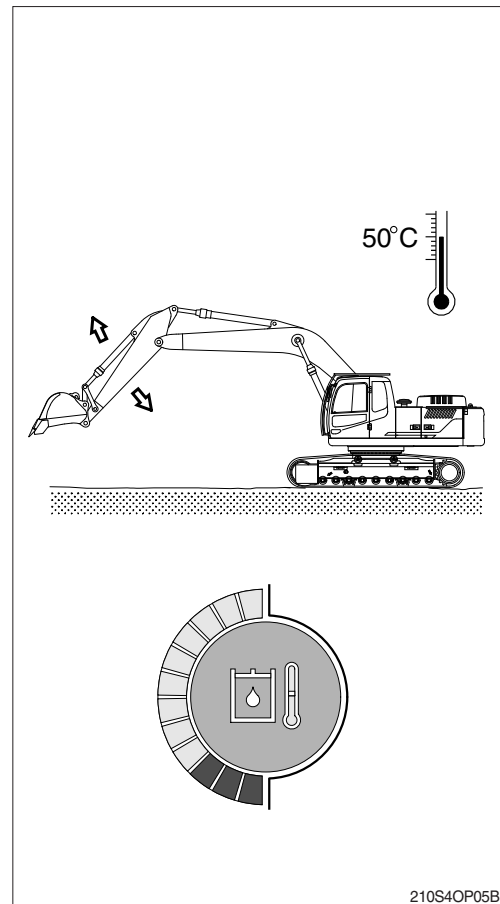


## 6) TO STOP THE ENGINE

※ If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.

※ In particularly if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.

- (1) Down the bucket on the ground then put all the levers in the neutral position.
- (2) Run the engine at low idling speed for about 5 minutes.
- (3) Return the key of starting switch to the OFF position.
- (4) Remove the key to prevent other people using the machine and the safety knob.
- (5) Lock the cab door.

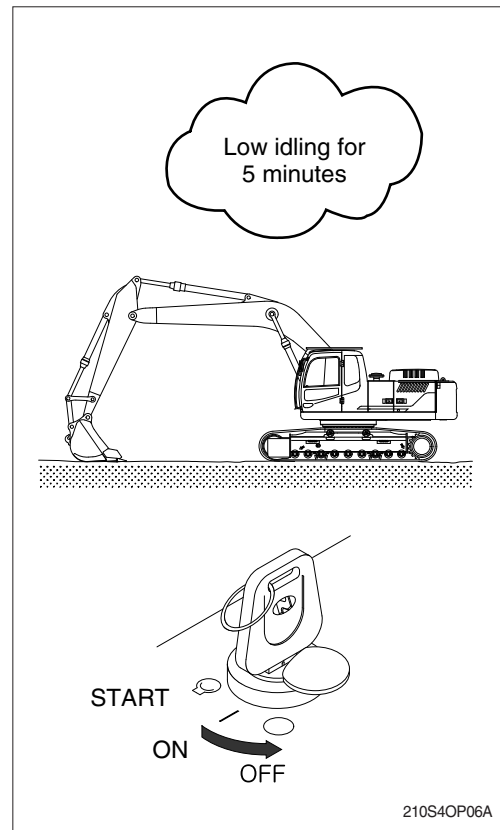


## 7) OPERATION IN CASE OF MALFUNCTION OF THE MCU

※ The following explains the way to start and to work the machine continuously in case of malfunction of the MCU.

### (1) Emergency starting engine


- ① If the MCU is removed, the engine does not start.
- ② Before starting the engine, connect the connector CN-92A with CN-92B.

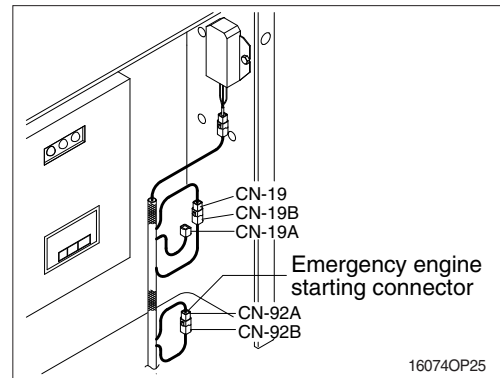

### 2) Engine speed control

Engine speed can be controlled as following.

- ① Disconnect the CN-19A from CN-19 connector.
- ② Connect the CN-19 connector to CN-19B.
- ③ Engine speed controlled by the accel dial.

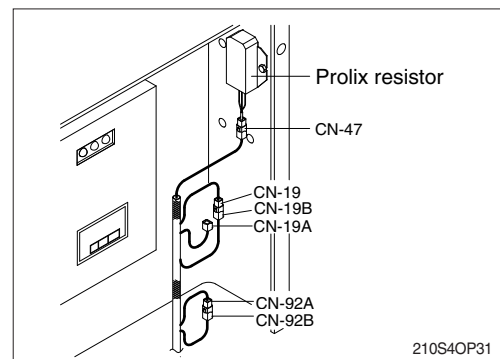

## 4. MODE SELECTION SYSTEM

### 1) STRUCTURE OF CAPO SYSTEM

CAPO, Computer Aided Power Optimization system, is the name of mode selection system developed by HD Hyundai Construction Equipment.

#### (1) Work mode

3 work modes can be selected for the optimal work speed of the machine operation.

##### ① Heavy duty work mode

The boom priority solenoid is activated to make the boom operation speed faster.

##### ② General work mode

When key switch is turned ON, this mode is selected automatically and swing operation speed is faster than heavy duty work mode.

##### ③ Breaker operation mode

It sets the pump flow to the optimal operation of breaker by activating the max flow cut-off solenoid.

#### (2) Power mode

Power mode designed for various work loads maintains high performance and reduces fuel consumption.


- H mode : High power
- S mode : Standard power

#### (3) User mode

- M : Maximum power
- U : You can change the engine and pump power and memorize it for your preference.


#### How to modulate the memory set

- ① Each memory mode has a initial set which are mid-range of max engine speed, auto decel rpm, and EPPR valve input current.

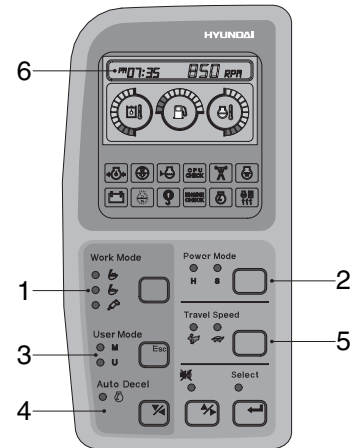

2507A4OP04

- 1 Work mode
- 2 Power mode
- 3 User mode
- 4 Auto decel mode
- 5 Travel mode
- 6 LCD

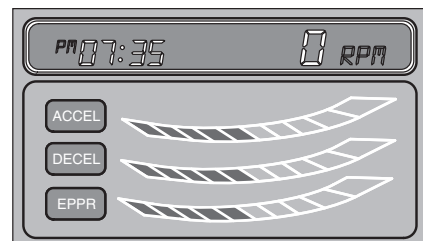

2507A4OP08

- ② High idle rpm, auto decel rpm, EPPR pressure can be modulated and memorized separately in the U-mode.

※ Refer to the page 3-8 for set of user mode.

· LCD segment vs parameter setting

Segment ( ■ )	ACCEL (rpm)	DECEL (rpm)	EPPR (bar)
1	1300	1000 (low idle)	0
2	1400	1050	3
3	1500	1080	6
4	1600	1100	9
5	1650	1150	12
6	1700	1200	16
7	1750	1250 (auto decel)	20
8	1800	1300	26
9	1850	1350	32
10	1900	1400	38

※ One touch decel : 1050 rpm


(4) Auto decel mode

Engine quick deceleration.

(5) Travel mode

 : Low speed traveling.

 : High speed traveling.

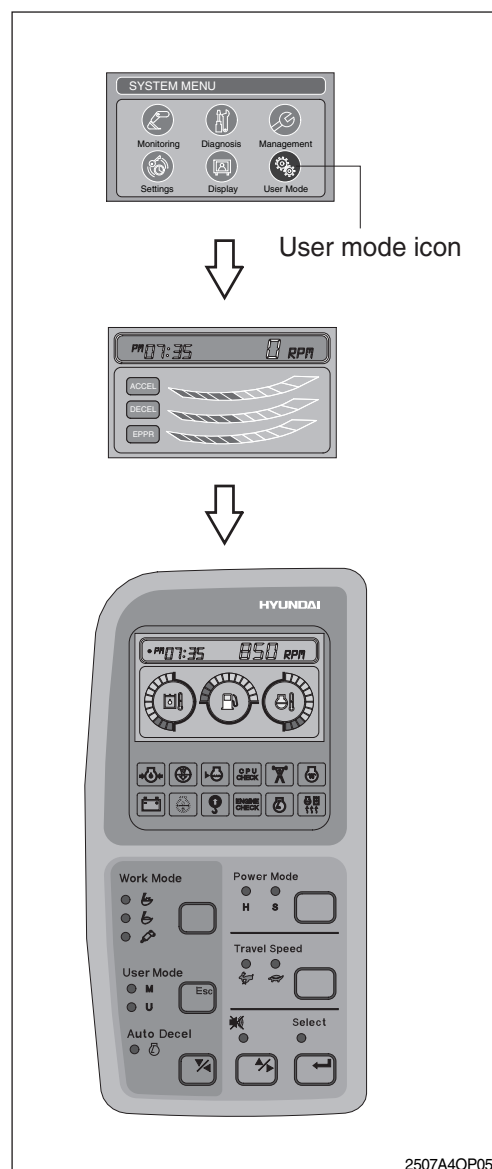

2507A4OP05

## (6) Monitoring system

Information of machine performance as monitored by the CPU controller can be displayed on the LCD. Refer to the page 3–5.

## (7) Self diagnostic system

### ① CPU controller

The CPU controller diagnoses problems in the CAPO system caused by electric parts' malfunction and by open or short circuit, which are displayed on the LCD as error codes (2 digit).

### ② Engine controller (ECU)


If the engine or relevant system has problem ECU diagnoses and displays on the LCD as fault codes (3 digit or more).

※ Consult HD Hyundai Construction Equipment or HD Hyundai Construction Equipment dealer for details.

※ Refer to the page 3-5 for LCD display.

## (8) Anti-restart system

The system protects the starter from inadvertent restarting after the engine is already operational.

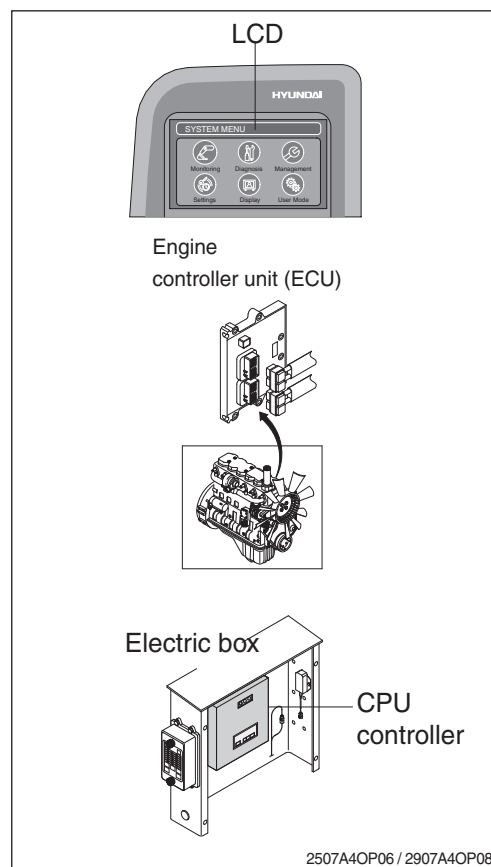

## 2) HOW TO OPERATE MODE SELECTION SYSTEM

### (1) When start key is turned ON

- ① When start key is turned ON, all illumination lamps are ON and all lamps are OFF automatically after 5 seconds. But a battery charging warning lamp and an engine oil pressure warning lamp keep turned ON until engine starting.
- ② After lamp check 「1.00」, the version of cluster program, is displayed on LCD for 2 seconds.
- ③ After the version of program is displayed, the cluster returns to default. Exactly engine rpm, battery charging warning lamp and engine oil pressure warning lamp are turned ON and S mode, auto decel, low travel speed (Turtle mark) are displayed.
- ④ In default condition self-diagnostic function including trouble detecting of electric system can be carried out.



## (2) After engine start


- ① When the engine is started, three lamps are ON as below.

Mode		Status
Work mode		ON
Power mode	S	ON
Travel mode	Low ()	ON
Auto decel mode		ON

- In this condition, tachometer indicates low idle,  $1000 \pm 100$  rpm.
- If coolant temperature is below  $30^{\circ}\text{C}$ , after 10 seconds the engine speed increases to  $1250 \pm 100$  rpm automatically to warm up the machine.
- After 2-3 minutes, you can select any mode depending on job requirement.

- ② Self-diagnostic function can be carried out the same as start key is ON.

※ Refer to 4-12 page for details.

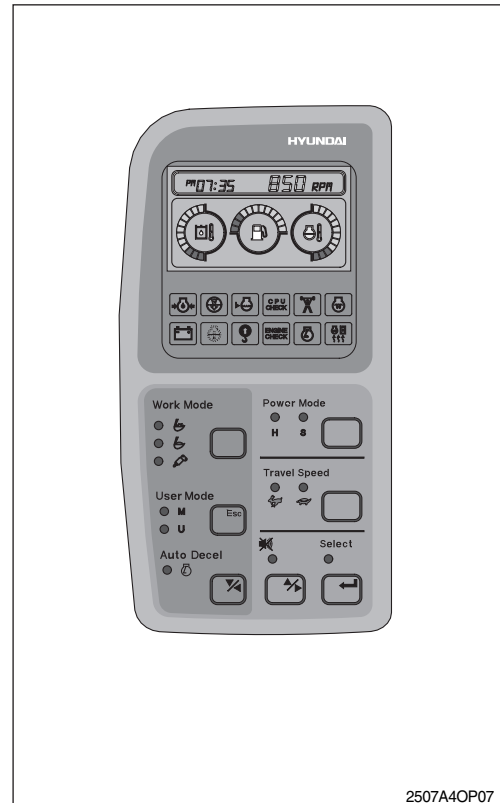


## 3) SELECTION OF POWER MODE

### (1) S mode

When the accel dial is at setting 10 and auto decel mode is cancelled and S mode is selected.

Engine rpm	Effect
$1900 \pm 50$	Same power as non mode type machine.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

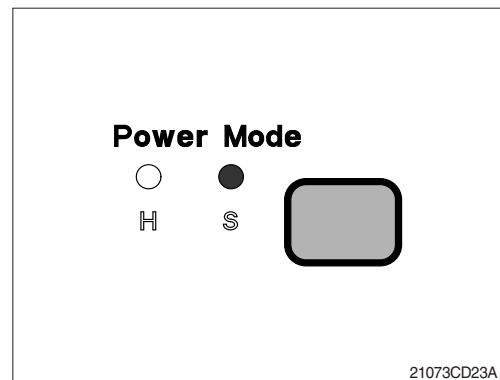


### (2) H mode

When the accel dial is at setting 10 and auto decel mode is cancelled and H mode is selected.

Engine rpm	Effect
$2000 \pm 50$	Approximately 110% of power and speed available than non mode type machine or S mode.

※ When the multimodal dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

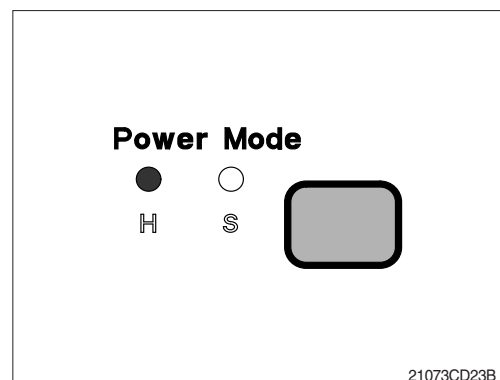


### (3) M mode

When the accel dial is at setting 10 and auto decel mode is cancelled and H mode is selected.

Engine rpm	Effect
2100 $\pm$ 50	Approximately 130 % of power and speed available than <b>non</b> mode type machine or <b>S</b> mode.

※ When the multimodal dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

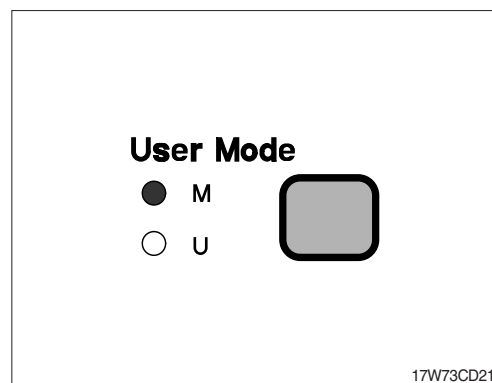


## 5. OPERATION OF THE WORKING DEVICE

※ **Confirm the operation of control lever and working device.**


- 1) Left control lever controls arm and swing.
- 2) Right control lever controls boom and bucket.
- 3) When you release the control lever, control lever returns to neutral position automatically.

※ **When operating swing, consider the swing distance by inertia.**

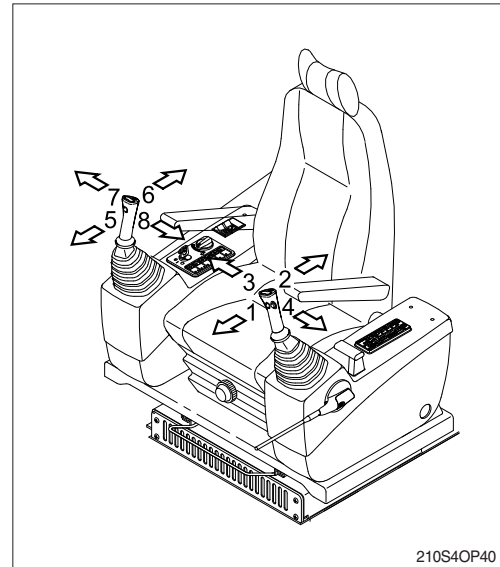


※ **Left control lever**

- 1 Arm roll-out
- 2 Arm roll-in
- 3 Swing right
- 4 Swing left

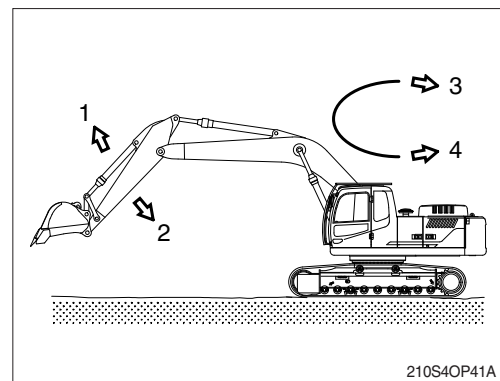

※ **Right control lever**

- 5 Boom lower
- 6 Boom raise
- 7 Bucket roll-out
- 8 Bucket roll-in

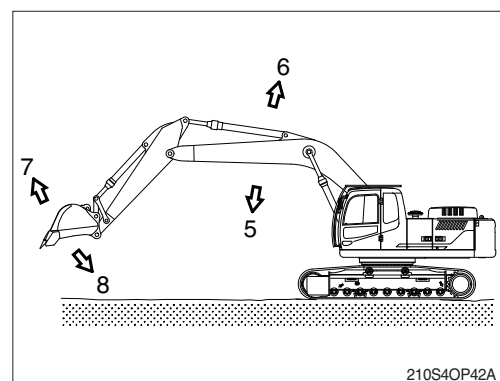

## 6. TRAVELING OF THE MACHINE

### 1) BASIC OPERATION

#### (1) Traveling position


It is the position which the traveling motor is in the rear and the working device is forward.

- ▲ **Be careful as the traveling direction will be reversed when the whole machine is swung 180 degree.**

#### (2) Traveling operation

It is possible to travel by either travel lever or pedal.


- ※ **Do not travel continuously for a long time.**
- ※ **Reduce the engine speed and travel at a low speed when traveling on uneven ground.**

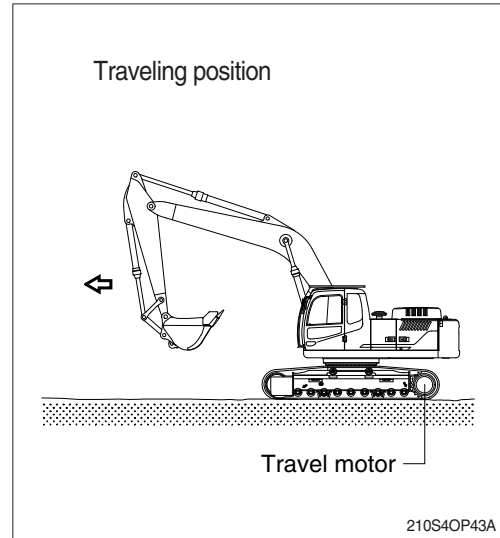

#### (3) Forward and backward traveling


When the left and right travel lever or pedal are pushed at the same time, the machine will travel forward or backward.

- ※ **The speed can be controlled by the operation stroke of lever or pedal and change of direction will be controlled by difference of the left and right stroke.**

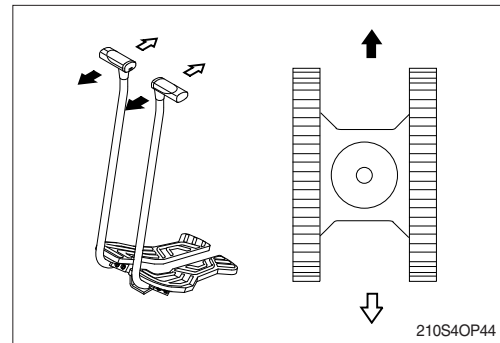


#### (4) Pivot turning

Operating only one side of lever or pedal make the change of direction possible by moving only one track.

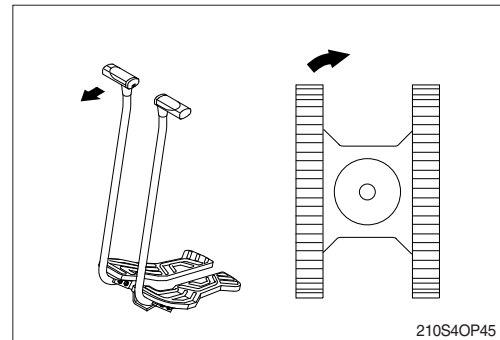


#### (5) Counter rotation

It is to change the direction at the original place by moving the right and left track. Both side of lever or pedal are operated to the other way at the same time.

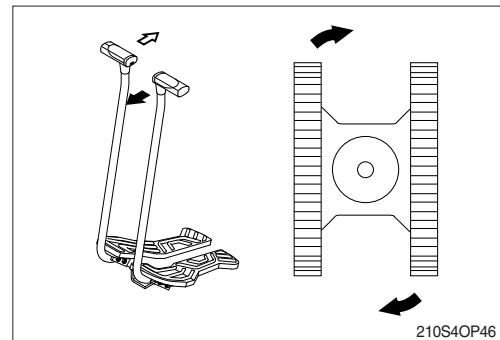


## 2) TRAVELING ON A SLOPE

- (1) Make sure that the travel lever is properly maneuvered by confirming the travel motor is in the right location.
  - (2) Lower the bucket 20 to 30 cm (1 ft) to the ground so that it can be used as a brake in an emergency.
  - (3) If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
  - (4) When parking on a slope, use the bucket as a brake and place blocks behind the tracks to prevent sliding.
- ※ Machine cannot travel effectively on a slope when the oil temperature is low. Do the warming-up operation when it is going to travel on a slope.
- ▲ Be careful when working on slopes. It may cause the machine to lose its balance and turn over.
- ▲ Be sure to keep the travel speed switch on the LOW (Turtle mark) while traveling on a slope.

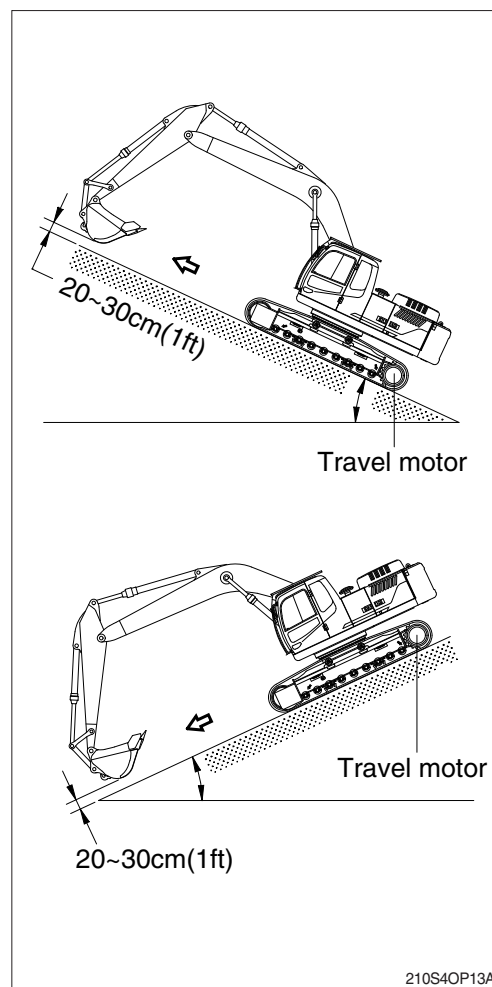

## 3) TRAVELING ON SOFT GROUND

- ※ If possible, avoid to operate on soft ground.
- (1) Move forward as far as machine can move.
  - (2) Take care not to go beyond the depth where towing is impossible on soft ground.
  - (3) When driving becomes impossible, lower bucket and use boom and arm to pull the machine. Operate boom, arm, and travel lever at the same time to avoid the machine sinking.

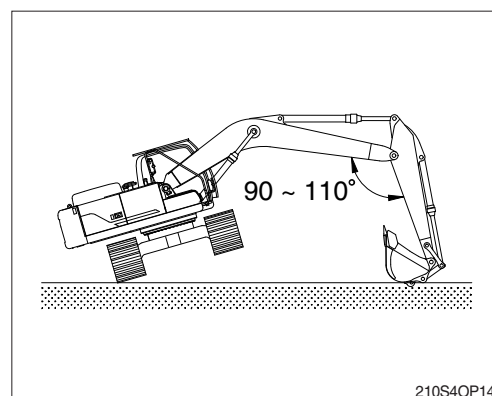

#### 4) TOWING THE MACHINE


Tow the machine as follows when it can not move on it's own.

- (1) Tow the machine by other machine after hook the wire rope to the frame as shown in picture at right.
- (2) Hook the wire rope to the frame and put a support under each part of wire rope to prevent damage.


※ **Never tow the machine using only the tie hole, because this may break.**

▲ **Make sure no personnel are standing close to the tow rope.**

Correct

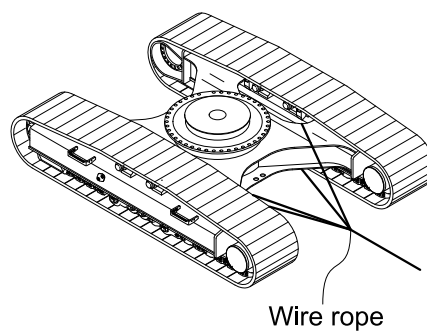

Incorrect

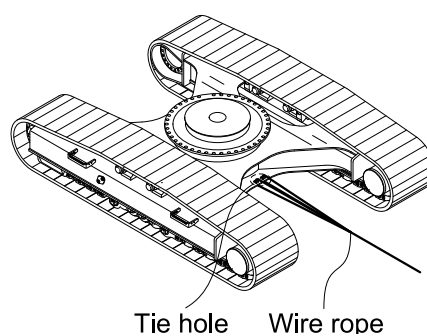


21074OP14A

## 7. EFFICIENT WORKING METHOD


- 1) Do the digging work by arm.

Use the pulling force of arm for digging and use together with the digging force of the bucket if necessary.

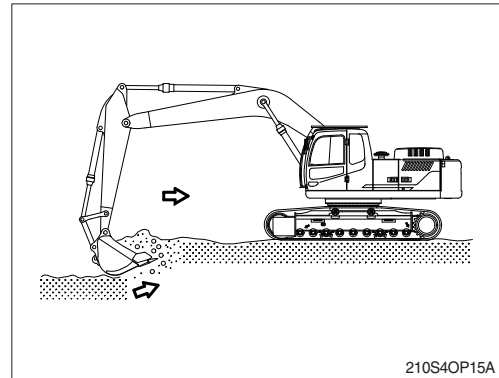


- 2) When lowering and raising the boom operate softly for the beginning and the end.


In particularly, sudden stops while lowering the boom may cause damage to the machine.

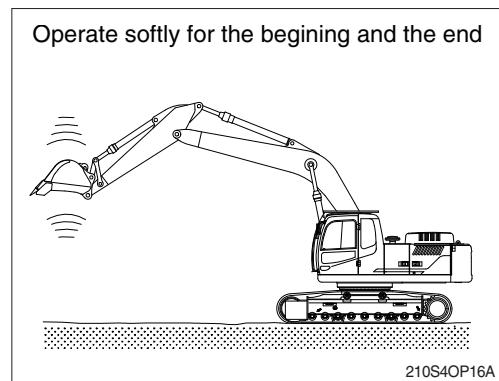


- 3) The digging resistance and wearing of tooth can be reduced by putting the end of bucket tooth to the digging direction.

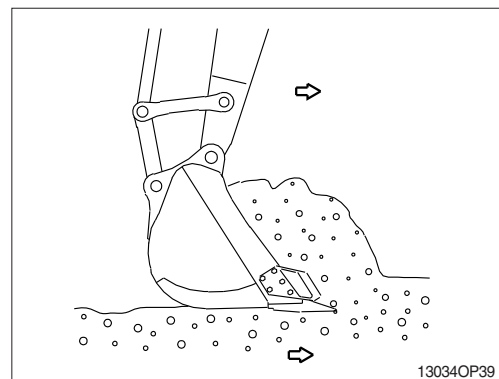


- 4) Set the tracks parallel to the line of the ditch to be excavated when digging ditch. Do not swing while digging.

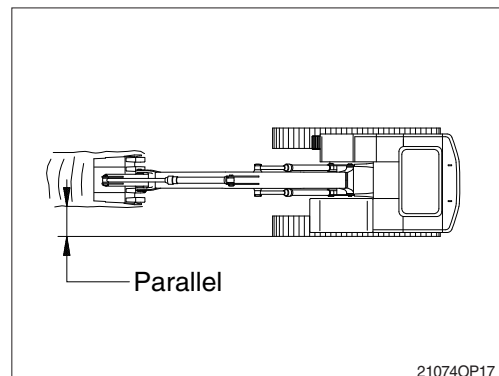

- 5) Dig slowly with keeping the angle of boom and arm, 90-110 degree when maximum digging force is required.

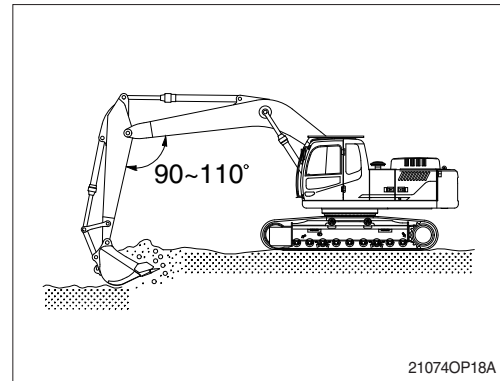


- 6) Operate leaving a small safety margin of cylinder stroke to prevent damage of cylinder when working with the machine.

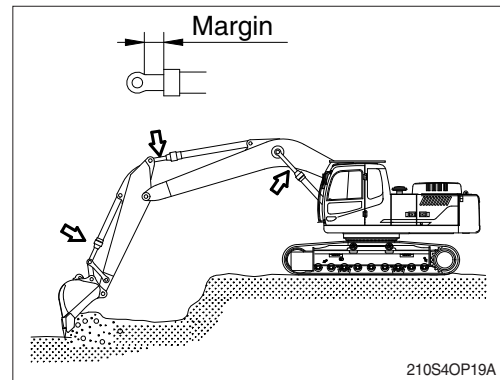


- 7) Keep the bucket to the dumping position and the arm horizontal when dumping the soil from the bucket.  
Operate bucket lever 2 or 3 times when hard to dump.


※ Do not use the impact of bucket tooth when dumping.

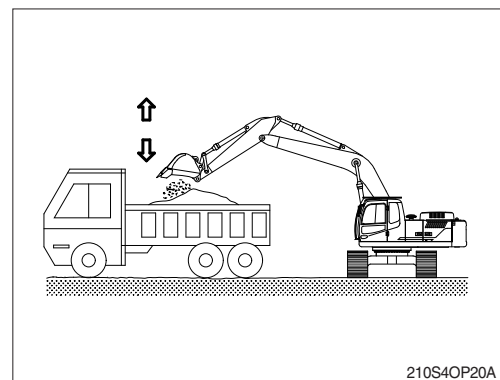


- 8) Operate stop of swing considering the swing slip distance is created by inertia after neutralizing the swing lever.

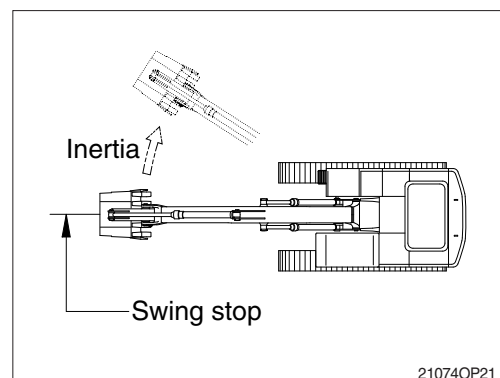


- 9) If the excavation is in an underground location or in a building, make sure that there is adequate overhead clearance and that there is adequate ventilation.

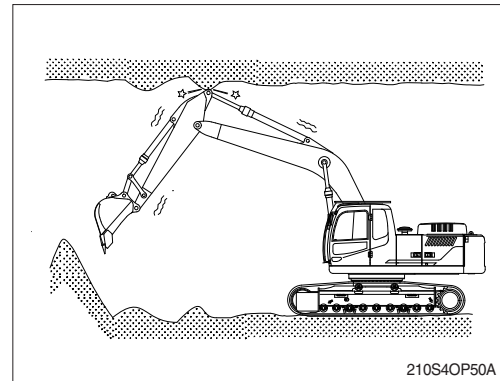

- 10) Do not use the dropping force of the work equipment for digging.  
The machine can be damaged by the impact.

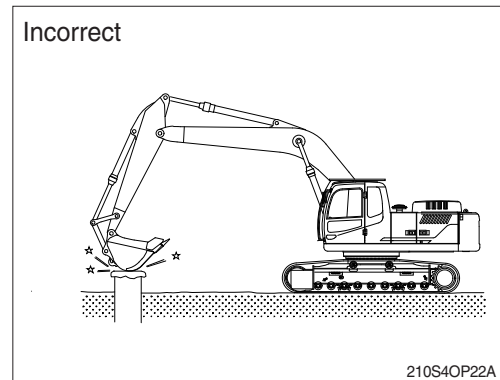

- 11) Do not use the bucket to crack hard objects like concrete or rocks.  
This may break a tooth or pin, or bend boom.

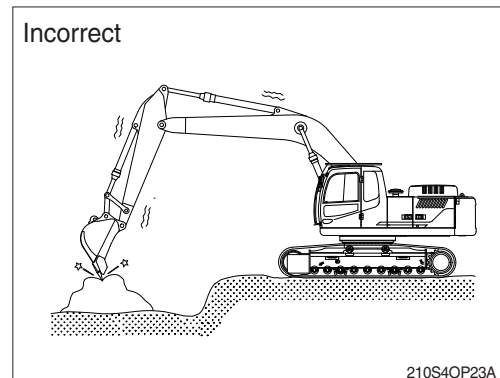

## 12) NEVER CARRY OUT EXCESSIVE OPERATIONS


Operation exceeding machine performance may result in accident or failure.

Carry out lifting operation within specified load limit.

Never carry out operations which may damage the machine such as overload or over-impact-load.

Never travel while carrying a load.

In case you need installing over load warning device for object handling procedure, please contact HD Hyundai Construction Equipment distributor.

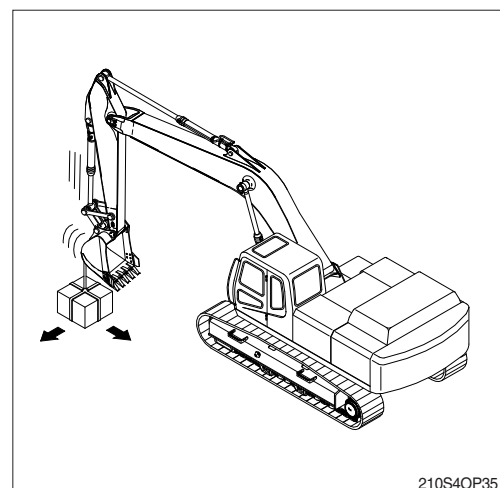

### 13) BUCKET WITH HOOK

When carrying out lifting work, the special lifting hook is necessary.

The following operations are prohibited.

- Lifting loads with a wire rope fitted around the bucket teeth.
- Lifting loads with the wire rope wrapped directly around the boom or arm.

When performing lifting operation, securely hook the wire rope onto the special lifting hook.

When performing lifting operation, never raise or lower a person.


Due to the possible danger of the load falling or of collision with the load, no persons shall be allowed in the working area.

Before performing lifting operation, designate an operation supervisor.

Always execute operation according to his instructions.

- Execute operating methods and procedures under his direction.
- Select a person responsible for signaling. Operate only on signals given by such person.


Never leave the operator's seat while lifting a load.

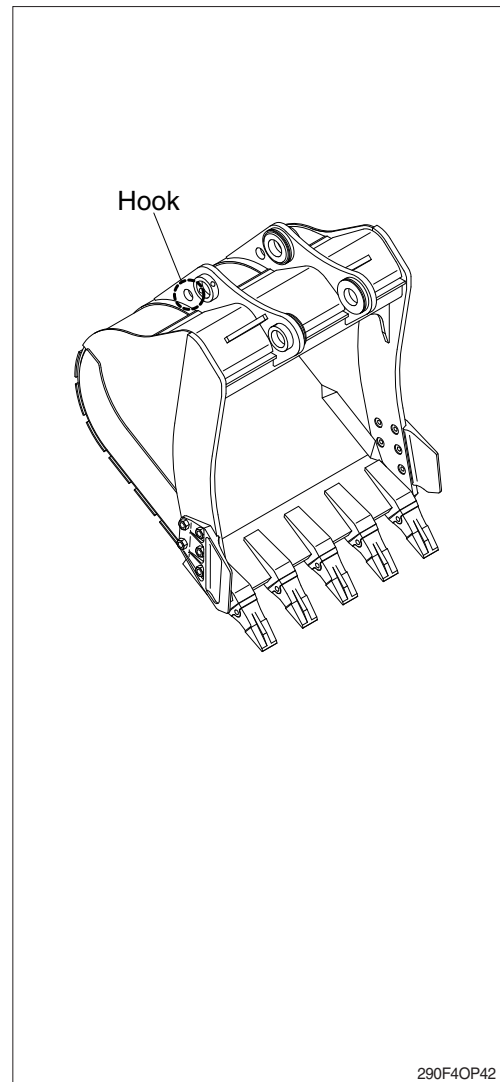

## 8. OPERATION IN THE SPECIAL WORK SITES

### 1) OPERATION THE MACHINE IN A COLD WEATHER

- (1) Use proper engine oil and fuel for the weather.
- (2) Fill the required amount of antifreeze in the coolant.
- (3) Refer to the starting engine in cold weather.  
Start the engine and extend the warming up operation.
- (4) Be sure to open the heater cock when using the heater.
- (5) Always keep the battery completely charged.  
※ **Discharged batteries will freeze more easily than fully charged.**
- (6) Clean the machine and park on the wood plates.

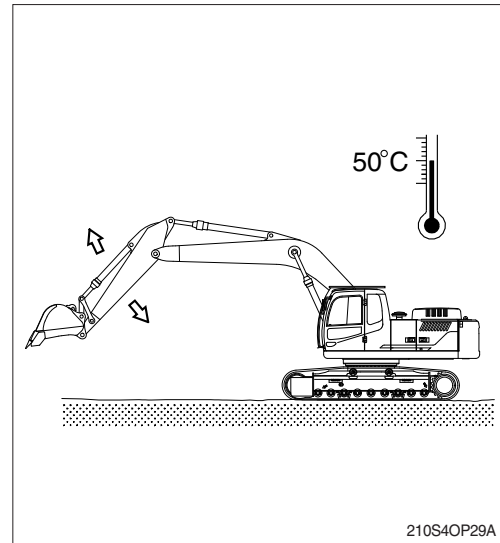

### 2) OPERATION IN SANDY OR DUSTY WORK SITES

- (1) Inspect air cleaner element frequently. Clean or replace element more frequently, if warning lamp comes ON and buzzer sounds simultaneously, regardless of inspection period.  
※ **Replace the inner and outer element after 6 times of cleaning.**
- (2) Inspect radiator frequently, and keep cooling fins clean.
- (3) Prevent sand or dust from getting into fuel tank and hydraulic tank during refilling.
- (4) Prevent sand or dust from penetrating into hydraulic circuit by tightly closing breather cap of hydraulic oil tank. Replace hydraulic oil filter frequently.
- (5) Keep all lubricated part, such as pins and bushings, clean at all times.
- (6) If the air conditioner and heater filters clogged, the heating or cooling capacity will drop. Clean or replace the filter element more frequently.  
※ **Clean electrical components, especially the starting motor and alternator to avoid accumulation of dust.**

### **3) SEA SHORE OPERATION**

- (1) Prevent ingress of salt by securely tightening plugs, cocks and bolts of each part.
- (2) Wash machine after operation to remove salt residue.  
Pay special attention to electrical parts, and hydraulic cylinders and track tension cylinder to prevent corrosion.
- (3) Inspection and lubrication must be carried out more frequently.  
Supply sufficient grease to replace all old grease in bearings which have been submerged in water for a long time.

### **4) OPERATION IN MUD, WATER OR RAIN WORK SITES**

- (1) Perform a walk around inspection to check for any loose fittings, obvious damage to the machine or any fluid leakage.
- (2) After completing operations, clean mud, rocks or debris from the machine. Inspect for damage, cracked welds or loosened parts.
- (3) Perform all daily lubrication and service.
- (4) If the operations were in salt water or other corrosive materials, make sure to flush the affected equipment with fresh water.


### **5) OPERATION IN ROCKY WORK SITES**

- (1) Check for damage to the undercarriage and for looseness, flaws, wear and damage in bolts and nut.
- (2) Loosen the track tension a little when working in such areas.
- (3) Do not turn the undercarriage directly over the sharp edge rock.

## 9. NORMAL OPERATION OF EXCAVATOR

Followings may occur during operation due to the nature of a hydraulic excavator.

- 1) When rolling in the arm, the roll-in movement stop momentary at point X in the picture shown, then recovers speed again after passing point X.  
The reason for this phenomenon is that movement by the arm weight is faster than the speed of oil flow into the cylinder.
- 2) When lowering the boom, one may hear continuous sound.  
This is caused by oil flow in the valve.
- 3) Overloaded movement will produce sound caused by the relief valves, which are for the protection of the hydraulic systems.
- 4) When the machine is started swing or stopped, a noise near the swing motor may be heard. The noise is generated when the brake valve relieves.

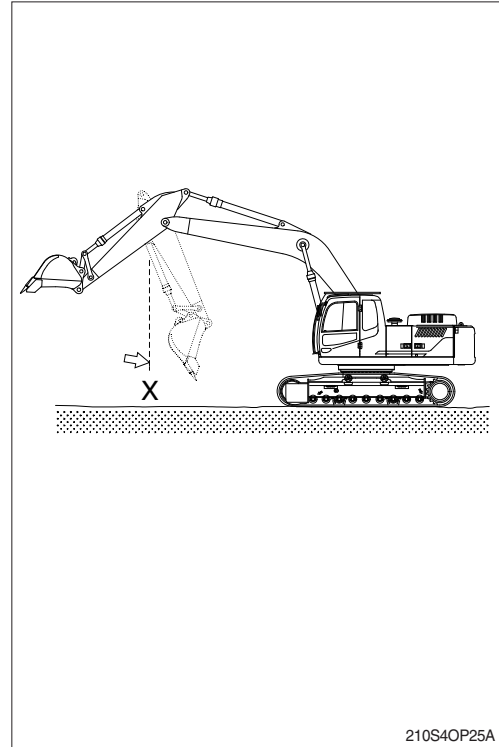

## 10. ATTACHMENT LOWERING (when engine is stopped)

- 1) On machines equipped with an accumulator, for a short time (within 2 minute) after the engine is stopped, the attachment will lower under its own weight when the attachment control lever is shifted to LOWER. This happens only when the starting switch is ON and the safety knob is the in the UNLOCK position. After the engine is stopped, set the safety knob to the LOCK position.

**▲ Be sure no one is under or near the attachment before lowering the boom.**


- 2) The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

**▲ Never make any hole in the accumulator expose it to flame or fire.**

**▲ Do not weld anything to the accumulator.**

- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator.

A special air bleed valve is necessary for this operation, so please contact your HD Hyundai Construction Equipment distributor.

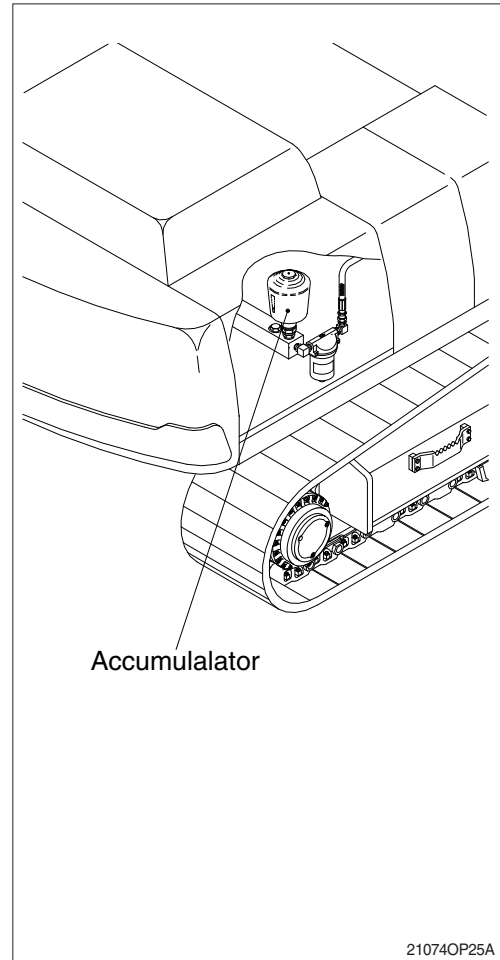

## 11. STORAGE

Maintain the machine taking care of following to prevent the deterioration of machine when storing the machine for a long time, over 1 month.

### 1) BEFORE STORAGE

#### (1) Cleaning the machine

Clean the machine. Check and adjust tracks.  
Grease each lubrication part.


#### (2) Lubrication position of each part

Change all oil.

※ Be particularly careful when you reuse the machine.

As oil can be diluted during storage.

**Apply an anticorrosive lubricant on the exposed part of piston rod of cylinder and in places where the machine rusts easily.**

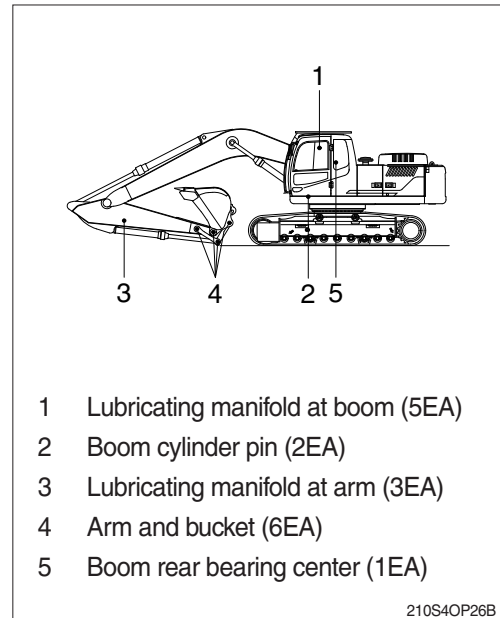


#### (3) Master switch

Turn OFF the master switch mounted electric box and store the machine.

▲ Off the master switch after lamp off.

(4) Be sure to mix anticorrosive antifreezing solution in the radiator.

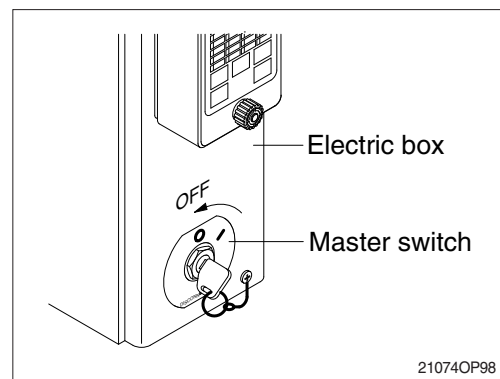


#### (5) Prevention of dust and moisture

Keep machine dry. Store the machine setting wood on the ground.

※ Cover exposed part of piston rod of cylinder.

※ Lower the bucket to the ground and set a support under track.

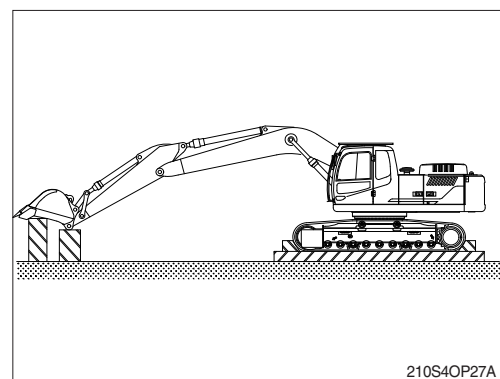

## 2) DURING STORAGE

Start engine and move the machine and work equipment once a month and apply lubrication to each part.

- ※ Check the level of engine oil and coolant and fill if required when starting engine.
- ※ Clean the anticorrosive on the piston rod of cylinder.
- ※ Operate the machine such as traveling, swing and work equipment operation to make sure enough lubrication of all functional components.


### ※ BATTERY

- ① Once a month, start the engine for 15 minutes (or use a charger) to charge the battery.
- ② Every 2 months, check the battery voltage and keep battery voltage over 25.08V.
- ③ If the machine stock period is over 6 months, disconnect the battery negative (-) terminal.


## 3) AFTER STORAGE

Carry out the following procedure when taking out of a long time storage.

- (1) Wipe off the anticorrosive lubricant on the hydraulic piston rod.
  - (2) Completely fill fuel tank, lubricate and add oil.
  - (3) When storage period is 6 months over  
If the machine stock period is over 6 months, carry out the following procedure.  
This procedure is to drain condensation water for the swing reduction gear durability.
- ※ Remove the drain port plug and drain the water until the gear oil comes out and then tighten the drain plug.
  - ※ Refer to the service instruction, section 6 for the drain plug location.
  - ※ If the machine is stored without carrying out the monthly lubricating operation, consult your HD Hyundai Construction Equipment dealer for service.

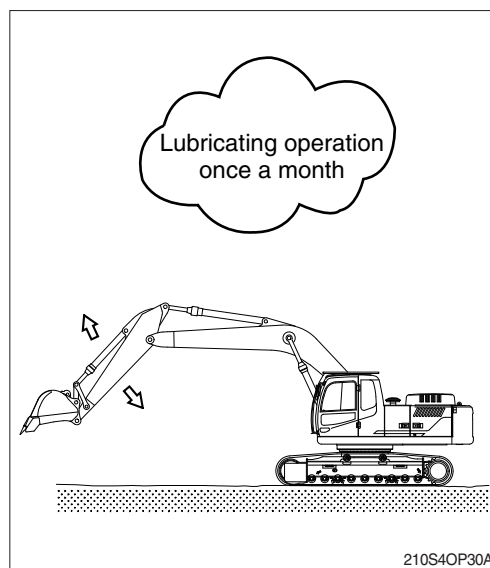

## 12. RCV LEVER OPERATING PATTERN

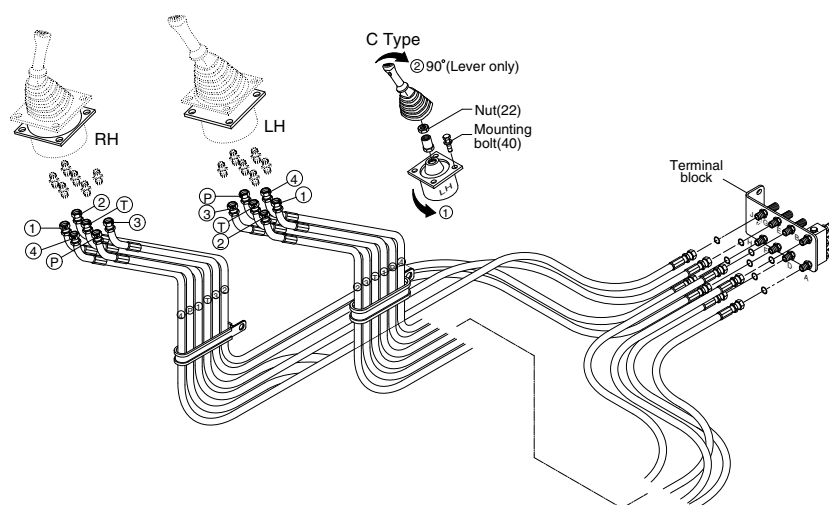

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

※ The hose modification works must be carried out between RCV lever and terminal block (Not between terminal block and MCV).

210S4OP47


Pattern	Operation		Control function		Hose connection (port)		
	Left RCV lever	Right RCV lever			RCV lever	Change of Terminal block	
						From	To
ISO Type			Left	Arm out	②	D	-
Arm in				④	E	-	
Swing right				③	B	-	
Swing left				①	A	-	
HD Hyundai Construction Equipment			Right	Boom lower	④	J	-
				Boom raise	②	H	-
				Bucket out	①	G	-
				Bucket in	③	F	-
A Type			Left	Boom lower	②	D	J
Boom raise				④	E	H	
Swing right				③	B	-	
Swing left				①	A	-	
			Right	Arm out	④	J	D
				Arm in	②	H	E
				Bucket out	①	G	-
				Bucket in	③	F	-
B Type			Left	Boom lower	②	D	J
Boom raise				④	E	H	
Bucket in				③	B	F	
Bucket out				①	A	G	
			Right	Arm out	④	J	D
				Arm in	②	H	E
				Swing right	①	G	B
				Swing left	③	F	A
C Type			Left	① Loosen the RCV lever mounting bolt (40) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut (22) and rotates only lever 90° clockwise.			
Right			Same as ISO type				

### 13. SWITCHING HYDRAULIC ATTACHMENT CIRCUIT

The combined hydraulic attachment circuit is capable of providing single action or double action.

The position of 3 way valve selects the single action hydraulic attachment circuit or the double action hydraulic attachment circuit.

Before you change the flow mode of hydraulic attachment circuit, place the machine in the servicing position as shown. Stop the engine.

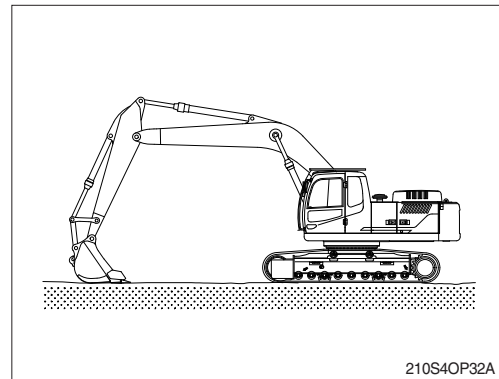


- 4) Use the manual lever to turn the 3 way valve.  
Make sure that you fully turn the valve until the valve stops.

**(1) One way flow** (Hydraulic breaker)

Position the manual lever parallel to the piping (b).

**(2) Two way flow** (Clamshell or shear)

Position the manual lever perpendicular to the piping (c).


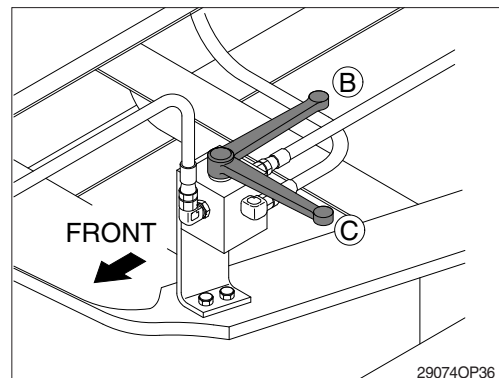


# TRANSPORTATION

## 1. PREPARATION FOR TRANSPORTATION

- 1) When transporting the machine, observe the various road rules, road transportation vehicle laws and vehicle limit ordinances, etc.
- 2) Select proper trailer after confirming the weight and dimension from the chapter 2, specification.
- 3) Check the whole route such as the road width, the height of bridge and limit of weight and etc., which will be passed.
- 4) Get the permission from the related authority if necessary.
- 5) Prepare suitable capacity of trailer to support the machine.
- 6) Prepare gangplank for safe loading referring to the below table and illustration.

A	B
1.0	3.65 ~ 3.85
1.1	4.00 ~ 4.25
1.2	4.35 ~ 4.60
1.3	4.75 ~ 5.00
1.4	5.10 ~ 5.40
1.5	5.50 ~ 5.75

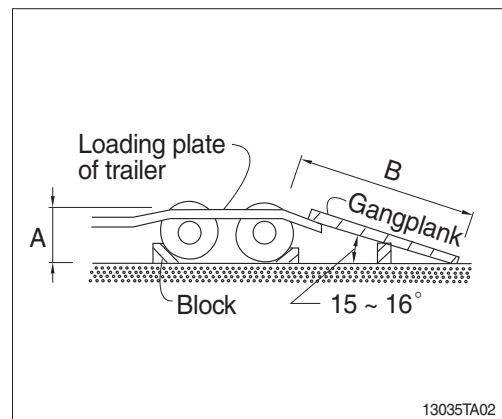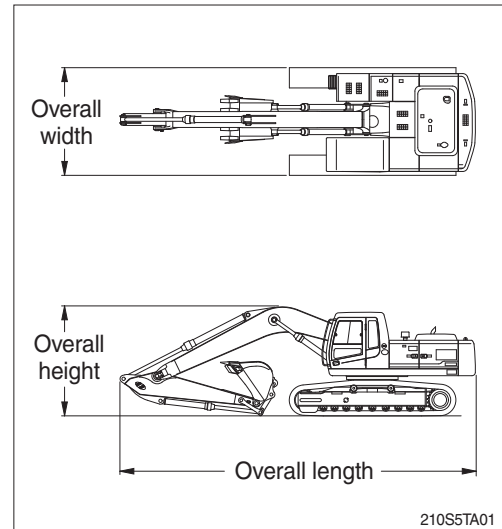


## 2. DIMENSION AND WEIGHT

### 1) BASE MACHINE

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	4990 (16' 4")
H	Height	mm (ft-in)	2920 (9' 7")
W	Width	mm (ft-in)	2990 (9' 10")
Wt	Weight	kg (lb)	17410 (38380)


※ With 600 mm (24") triple grouser shoes and 3600 kg (7940 lb) counterweight.

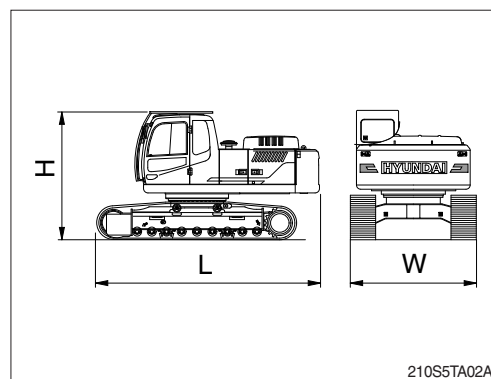

### 2) BOOM ASSEMBLY

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	5900 (19' 4")
H	Height	mm (ft-in)	1550 (5' 1")
W	Width	mm (ft-in)	700 (2' 4")
Wt	Weight	kg (lb)	1950 (4300)


※ 5.68 m (18' 8") boom with arm cylinder (included piping and pins).

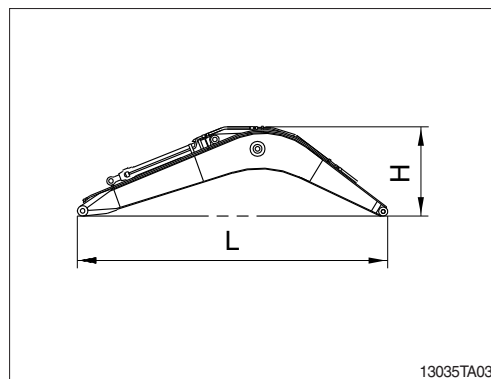

### 3) ARM ASSEMBLY

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	3910 (12' 10")
H	Height	mm (ft-in)	870 (2' 10")
W	Width	mm (ft-in)	350 (1' 2")
Wt	Weight	kg (lb)	1095 (2410)


※ 2.92 m (9' 7") arm with bucket cylinder (included linkage and pins).

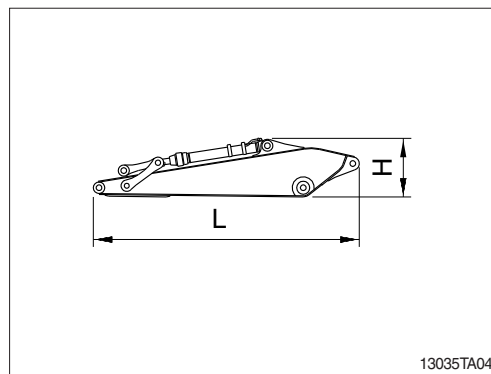

### 4) BUCKET ASSEMBLY

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1600 (5' 3")
H	Height	mm (ft-in)	980 (3' 3")
W	Width	mm (ft-in)	1250 (4' 1")
Wt	Weight	kg (lb)	765 (1690)


※ 0.92 m³ (1.20 yd³) SAE heaped bucket (Included tooth and side cutters).

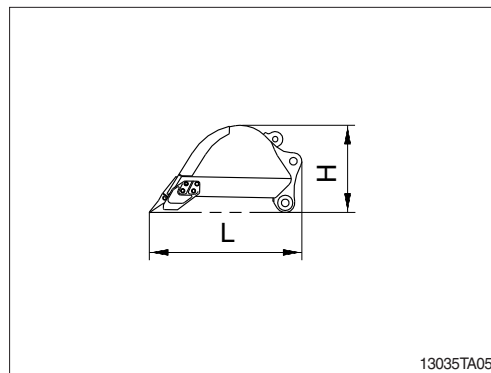

## 5) BOOM CYLINDER


Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1960 ( 6' 5")
H	Height	mm (ft-in)	230 ( 0' 9")
W	Width	mm (ft-in)	330 ( 1' 1")
Wt	Weight	kg (lb)	380 (840)

※ Included piping.

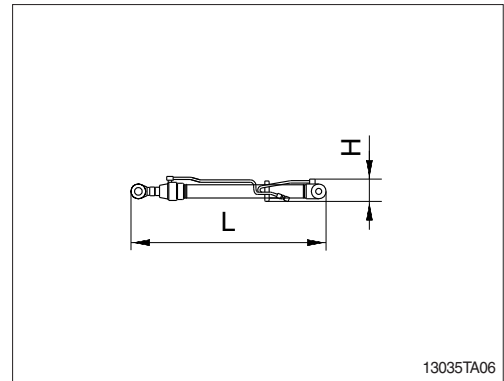


## 6) CAB ASSEMBLY

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1962 ( 6' 4")
H	Height	mm (ft-in)	1676 ( 5' 5")
W	Width	mm (ft-in)	1288 ( 4' 2")
Wt	Weight	kg (lb)	310 (680)

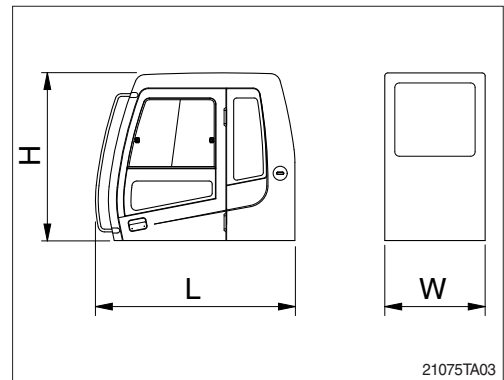

## 7) COUNTERWEIGHT


Mark	Description	Unit	Specification
L	Length	mm (ft-in)	2700 ( 8' 10")
H	Height	mm (ft-in)	1050 ( 3' 5")
W	Width	mm (ft-in)	560 (1' 10")
Wt	Weight	kg (lb)	3600 (7940)

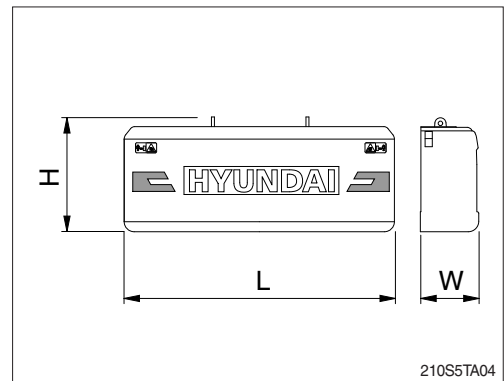

### 3. LOADING THE MACHINE


- 1) Load and unload the machine on a flat ground.
- 2) Use the gangplank with sufficient length, width, thickness and gradient.
- 3) Place the swing lock switch to the LOCK position (if equipped) before fixing the machine at the bed of trailer and confirm if the machine parallels the bed of trailer.

Keep the travel motor in the rear when loading and in the front when unloading.

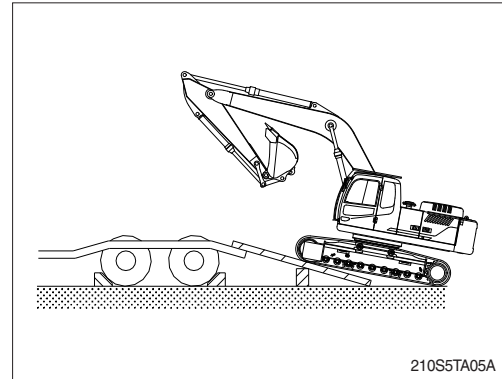


- 4) Do the following after loading the machine to the trailer.

- (1) Stop loading when the machine is located horizontally with the rear wheel of trailer.

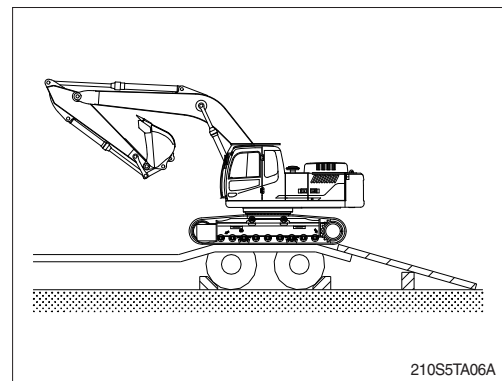

- (2) Place the swing lock switch to the LOCK position (if equipped) after the swing the machine 180 degree.

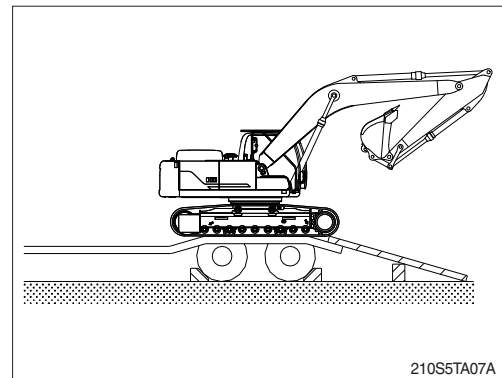

(3) Lower the working equipment gently after the location is determined.


※ **Place rectangular timber under the bucket cylinder to prevent the damage of it during transportation.**

▲ **Be sure to keep the travel speed switch on the LOW (turtle mark) while loading and unloading the machine.**

▲ **Avoid using the working equipment for loading and unloading since it will be very dangerous.**

▲ **Do not operate any other device when loading.**


▲ **Be careful on the boundary place of loading plate or trailer as the balance of machine will abruptly be changed on the point.**

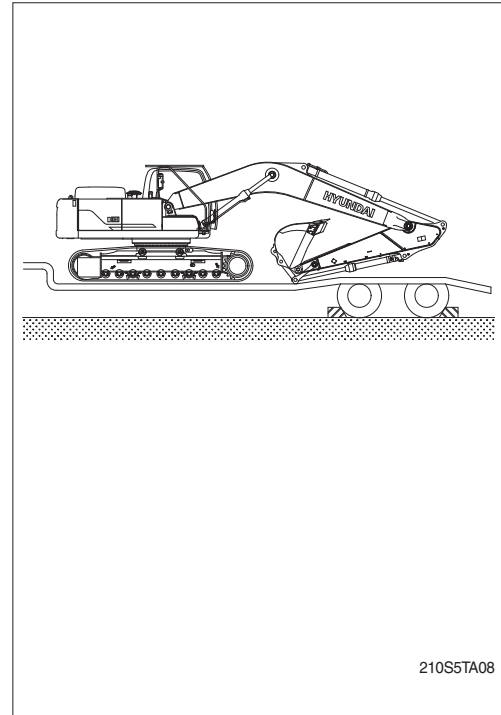


210S5TA08

## 4. FIXING THE MACHINE


- 1) Lower down the working device on the loading plate of trailer.
- 2) Keep the safety knob on the LOCK position.
- 3) Turn OFF all the switches and remove the key.

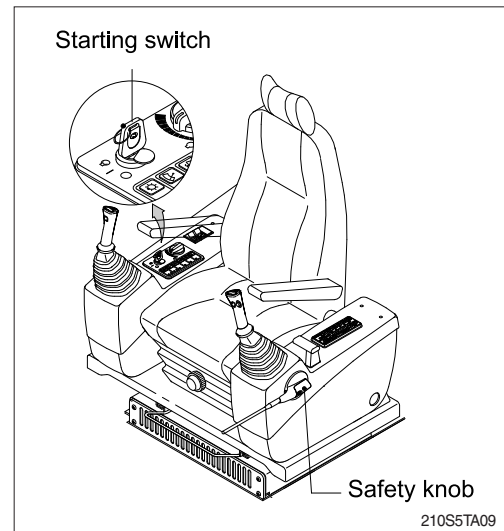

- 4) Secure all locks.

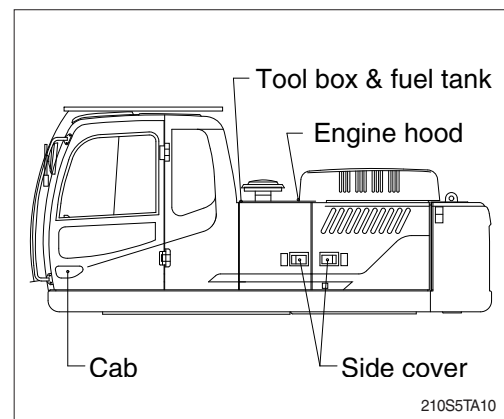

- 5) Place timber underneath of the track and fix firmly with wire rope to prevent the machine from moving forward, backward, right or left.

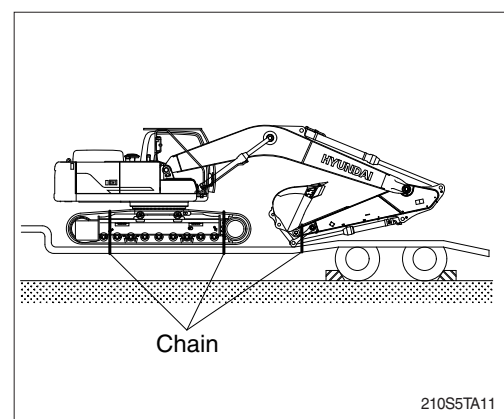

## 5. LOADING AND UNLOADING BY CRANE

⚠ The wrong hoisting method or installation of lifting device can cause serious injury, death, or damage to the machine.


- 1) Check the weight, length, width and height of the machine referring to the chapter 2, Specification when you are going to hoist the machine.
- 2) Use approved lifting device and ensure distance between lifting device and machine to avoid contact between the two.
- ※ **Remove any parts (footboard, etc) that may be damaged by contact with the lifting device before lifting.**
- 3) Place rubber plates at lifting points to avoid any damage to the machine.
- 4) Place crane in the proper place.
- 5) Install approved lifting device as shown in the illustration.
- 6) Use stay between the wire rope and the machine to prevent damage to the rope or machine. set the lifting angle of the wire rope to  $30^{\circ} \sim 40^{\circ}$ .
- 7) After the machine comes off the ground, check the hook condition and the lifting posture, and then lift slowly.

⚠ **Ensure that lifting device is free from any damage and is approved for the weight being lifted and supported.**

⚠ **Place the safety knob to LOCK position to prevent the machine from moving when hoisting the machine.**

⚠ **Do not load abruptly.**


⚠ **Keep area clear of any and all personnel.**

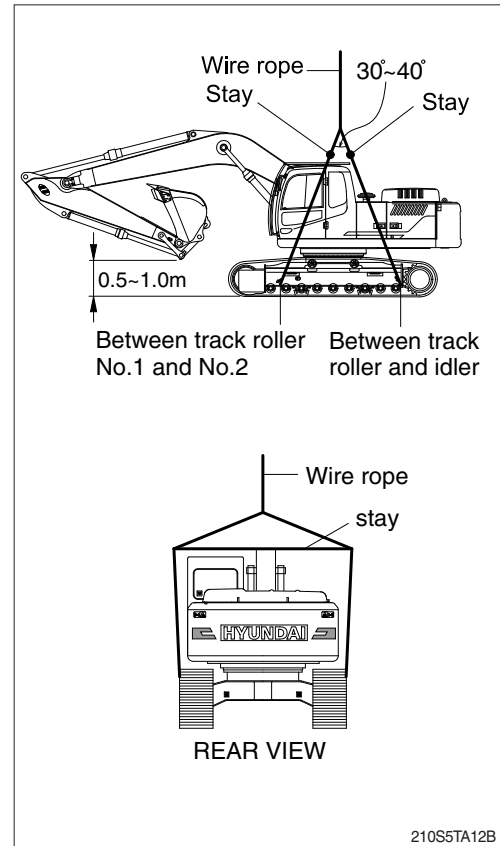

## 1. INSTRUCTION

### 1) INTERVAL OF MAINTENANCE

- (1) You may inspect and service the machine by the period as described at page 6-11 based on hour meter at control panel.
- (2) Shorten the interval of inspect and service depending on site condition. (such as dusty area, quarry, sea shore and etc.)
- (3) Practice the entire related details at the same time when the service interval is doubled.  
For example, in case of 100 hours, carry out all the maintenance 「Each 100 hours, each 50 hours and daily service」 at the same time.

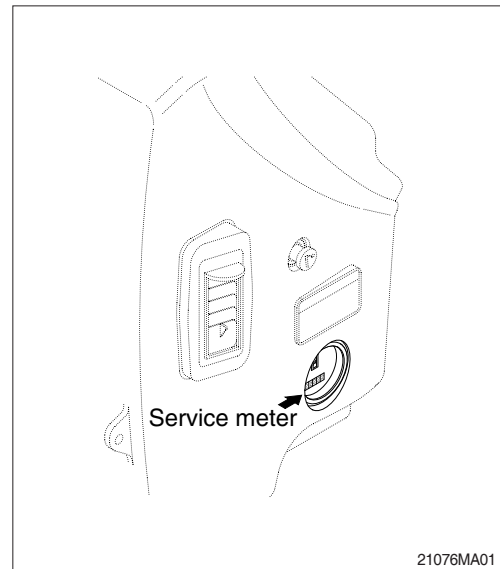

21076MA01

### 2) PRECAUTION

- (1) Start to maintenance after you have the full knowledge of machine.
- (2) The monitor installed on this machine does not entirely guarantee the condition of the machine.  
Daily inspection should be performed according to clause 4, maintenance check list.
- (3) Engine and hydraulic components have been preset in the factory.  
Do not allow unauthorized personnel to reset them.
- (4) Drain the used oil and coolant in a container and handle according to the method of handling for industrial waste to meet with regulations of each province or country.
- ▲ **Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.**
- △ **Accumulated grease and oil on the machine is a fire hazard. Remove this debris with steam cleaning or high pressure water, at least every 1000 hours.**
- △ **Inspect the engine compartment for any trash build up. Remove any trash build up from the engine compartment.**
- (5) Ask to your local dealer or HD Hyundai Construction Equipment for the maintenance advice if unknown.

### 3) PROPER MAINTENANCE

#### (1) Replace and repair of parts

It is required to replace the wearable and consumable parts such as bucket tooth, side cutter, filter and etc., regularly.

Replace damaged or worn parts at proper time to keep the performance of machine.

(2) Use genuine parts.

(3) Use the recommended oil.

(4) Remove the dust or water around the inlet of oil tank before supplying oil.

(5) Drain oil when the temperature of oil is warm.

(6) Do not repair anything while operating the engine.

Stop the engine when you fill the oil.

(7) Relieve hydraulic system of the pressure before repairing the hydraulic system.

(8) Confirm if the cluster is in the normal condition after completion of service.

(9) For more detail information of maintenance, please contact local HD Hyundai Construction Equipment dealer.


※ **Be sure to start the maintenance after fully understand the chapter 1, safety hints.**

#### 4) RELIEVING THE PRESSURE IN THE HYDRAULIC SYSTEM

- ※ Spouting of oil can cause the accident when loosening the cap or hose right after the operating of machine as the machine or oil is on the high pressure on the condition.


Be sure to relieve the pressure in the system before repairing hydraulic system.

- (1) Place machine in parking position, and stop the engine.

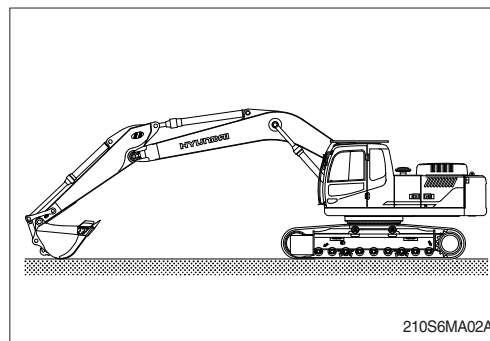


- (2) Set the safety knob completely in the UNLOCK position, operate the control levers and pedals fully to the front, rear, left and right, to release the pressure in the hydraulic circuit.

- ※ This does not completely release the pressure, so when serving hydraulic component, loosen the connections slowly and do not stand in the direction where the oil spurt out.

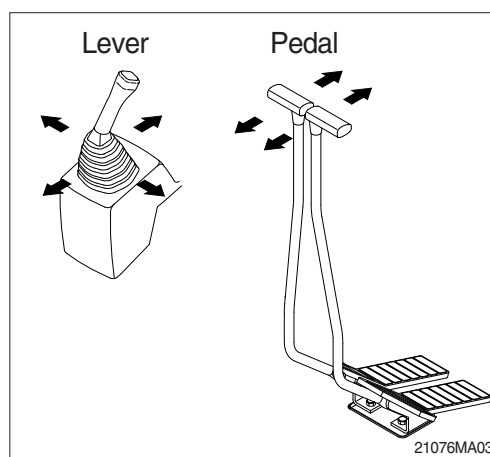

- (3) Relieve the pressure in the tank by pushing the rubber cap of the air breather.

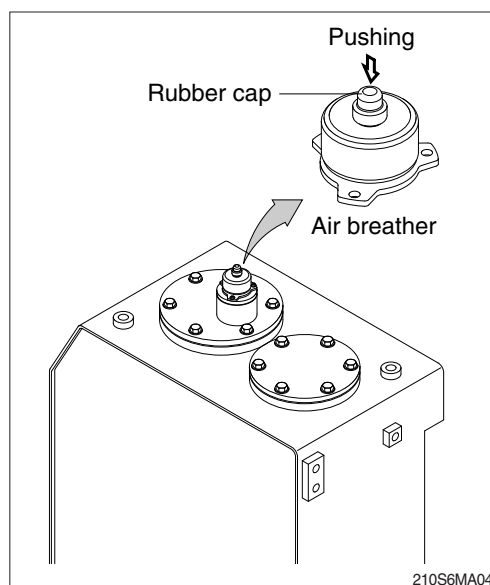

## **5) PRECAUTION WHEN INSTALLING HYDRAULIC HOSES OR PIPES**

- (1) Be particularly careful that the joint of hose, pipe and functioning item are not damaged.  
Avoid contamination.
- (2) Assemble after cleaning the hose, pipe and joint of functioning item.
- (3) Use genuine parts.
- (4) Do not assemble the hose in the condition of twisted or sharp radius.
- (5) Keep the specified tighten torque.

## 6) PERIODICAL REPLACEMENT OF SAFETY PARTS

(1) It is desirable to do periodic maintenance the machine for using the machine safely for a long time.

However, recommend to replace regularly the parts related safety not only safety but maintain satisfied performance.

(2) These parts can cause the disaster of life and material as the quality changes by passing time and it is worn, diluted, and gets fatigued by using repeatedly.

These are the parts which the operator can not judge the remained lifetime of them by visual inspection.

(3) Repair or replace if an abnormality of these parts is found even before the recommended replacement interval.

Periodical replacement of safety parts			Interval
Engine		Fuel hose (tank-engine)	Every 2 years
		Heater hose (heater-engine)	
Hydraulic system	Main circuit	Pump suction hose	Every 2 years
		Pump delivery hose	
		Swing hose	
	Working device	Boom cylinder line hose	Every 2 years
		Arm cylinder line hose	
		Bucket cylinder line hose	

※ 1. Replace O-ring and gasket at the same time when replacing the hose.

2. Replace clamp at the same time if the hose clamp is cracked when checking and replacing the hose.

## 2. TIGHTENING TORQUE

Use following table for unspecified torque.

### 1) BOLT AND NUT

#### (1) Coarse thread

Bolt size	8.8T		10.9T		12.9T	
	kgf·m	lbf·ft	kgf·m	lbf·ft	kgf·m	lbf·ft
M 6 × 1.0	0.8 ~ 1.2	5.8 ~ 8.6	1.2 ~ 1.8	8.7 ~ 13.0	1.5 ~ 2.1	10.9 ~ 15.1
M 8 × 1.25	2.0 ~ 3.0	14.5 ~ 21.6	2.8 ~ 4.2	20.3 ~ 30.4	3.4 ~ 5.0	24.6 ~ 36.1
M10 × 1.5	4.0 ~ 6.0	29.0 ~ 43.3	5.6 ~ 8.4	40.5 ~ 60.8	6.8 ~ 10.0	49.2 ~ 72.3
M12 × 1.75	6.8 ~ 10.2	50.0 ~ 73.7	9.6 ~ 14.4	69.5 ~ 104	12.3 ~ 16.5	89.0 ~ 119
M14 × 2.0	10.9 ~ 16.3	78.9 ~ 117	16.3 ~ 21.9	118 ~ 158	19.5 ~ 26.3	141 ~ 190
M16 × 2.0	17.9 ~ 24.1	130 ~ 174	25.1 ~ 33.9	182 ~ 245	30.2 ~ 40.8	141 ~ 295
M18 × 2.5	24.8 ~ 33.4	180 ~ 241	34.8 ~ 47.0	252 ~ 340	41.8 ~ 56.4	302 ~ 407
M20 × 2.5	34.9 ~ 47.1	253 ~ 340	49.1 ~ 66.3	355 ~ 479	58.9 ~ 79.5	426 ~ 575
M22 × 2.5	46.8 ~ 63.2	339 ~ 457	65.8 ~ 88.8	476 ~ 642	78.9 ~ 106	570 ~ 766
M24 × 3.0	60.2 ~ 81.4	436 ~ 588	84.6 ~ 114	612 ~ 824	102 ~ 137	738 ~ 991
M30 × 3.5	120 ~ 161	868 ~ 1164	168 ~ 227	1216 ~ 1641	202 ~ 272	1461 ~ 1967

#### (2) Fine thread

Bolt size	8.8T		10.9T		12.9T	
	kgf · m	lbf · ft	kgf · m	lbf · ft	kgf · m	lbf · ft
M 8 × 1.0	2.1 ~ 3.1	15.2 ~ 22.4	3.0 ~ 4.4	21.7 ~ 31.8	3.6 ~ 5.4	26.1 ~ 39.0
M10 × 1.25	4.2 ~ 6.2	30.4 ~ 44.9	5.9 ~ 8.7	42.7 ~ 62.9	7.0 ~ 10.4	50.1 ~ 75.2
M12 × 1.25	7.3 ~ 10.9	52.8 ~ 78.8	10.3 ~ 15.3	74.5 ~ 110	13.1 ~ 17.7	94.8 ~ 128
M14 × 1.5	12.4 ~ 16.6	89.7 ~ 120	17.4 ~ 23.4	126 ~ 169	20.8 ~ 28.0	151 ~ 202
M16 × 1.5	18.7 ~ 25.3	136 ~ 182	26.3 ~ 35.5	191 ~ 256	31.6 ~ 42.6	229 ~ 308
M18 × 1.5	27.1 ~ 36.5	196 ~ 264	38.0 ~ 51.4	275 ~ 371	45.7 ~ 61.7	331 ~ 446
M20 × 1.5	37.7 ~ 50.9	273 ~ 368	53.1 ~ 71.7	384 ~ 518	63.6 ~ 86.0	460 ~ 622
M22 × 1.5	51.2 ~ 69.2	370 ~ 500	72.0 ~ 97.2	521 ~ 703	86.4 ~ 116	625 ~ 839
M24 × 2.0	64.1 ~ 86.5	464 ~ 625	90.1 ~ 121	652 ~ 875	108 ~ 146	782 ~ 1056
M30 × 2.0	129 ~ 174	933 ~ 1258	181 ~ 245	1310 ~ 1772	217 ~ 294	1570 ~ 2126

## 2) PIPE AND HOSE (FLARE TYPE)

Thread size (PF)	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

## 3) PIPE AND HOSE (ORFS TYPE)

Thread size (PF)	Width across flat (mm)	kgf · m	lbf · ft
9/16-18	19	4	28.9
11/16-16	22	5	36.2
13/16-16	27	9.5	68.7
1-3/16-12	36	18	130
1-7/16-12	41	21	152
1-11/16-12	50	35	253

## 4) FITTING

Thread size (PF)	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

#### 4) TIGHTENING TORQUE OF MAJOR COMPONENT

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt (engine-bracket)	M12 × 1.75	11.45 ± 1.0	82.8 ± 7.2
2		Engine mounting bolt (bracket-frame, FR)	M20 × 2.5	52.1 ± 5.0	377 ± 36.2
3		Engine mounting bolt (bracket-frame, RR)	M24 × 3.0	90.0 ± 9.0	651 ± 65.1
4		Radiator mounting bolt	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
5		Coupling mounting socket bolt	M20 × 2.5	59.7 ± 8.7	419 ± 62.9
6		Main pump housing mounting bolt	M10 × 1.5	4.8 ± 0.3	34.7 ± 2.2
7	Hydraulic system	Main pump mounting socket bolt	M20 × 2.5	42 ± 4.5	304 ± 32.5
8		Main control valve mounting nut	M12 × 1.75	12.2 ± 1.3	88.2 ± 9.4
9		Fuel tank mounting bolt	M20 × 2.5	45 ± 5.1	325 ± 36.9
10		Hydraulic oil tank mounting bolt	M20 × 2.5	45 ± 5.1	325 ± 36.9
11		Turning joint mounting bolt, nut	M12 × 1.75	12 ± 1.3	86.8 ± 9.4
12	Power train system	Swing motor mounting bolt	M20 × 2.5	57.9 ± 8.7	419 ± 62.9
		Swing bearing upper part mounting bolt	M20 × 2.5	57.8 ± 6.4	418 ± 46.3
13		Swing bearing lower part mounting bolt	M20 × 2.5	57.8 ± 6.4	418 ± 46.3
14		Travel motor mounting bolt	M16 × 2.0	23 ± 2.5	166 ± 18.1
15		Sprocket mounting bolt	M16 × 2.0	26 ± 4.0	188 ± 28.9
16	Under carriage	Carrier roller mounting bolt, nut	M16 × 2.0	29.7 ± 4.4	215 ± 31.8
17		Track roller mounting bolt	M20 × 2.5	54.7 ± 5.0	396 ± 36.2
18		Track tension cylinder mounting bolt	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
19		Track shoe mounting bolt, nut	M20 × 1.5	78 ± 8.0	564 ± 57.9
20		Track guard mounting bolt	M20 × 2.5	57.9 ± 8.7	419 ± 62.9
21	Others	Counter weight mounting bolt	M36 × 3.0	308 ± 46	2228 ± 333
22		Cab mounting bolt	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
23		Operator's seat mounting bolt	M8 × 1.25	4.05 ± 0.8	29.3 ± 5.8

※ For tightening torque of engine and hydraulic components, see engine maintenance guide and service manual.

### 3. FUEL, COOLANT AND LUBRICANTS

#### 1) NEW MACHINE

New machine used and filled with following lubricants.

Description	Specification
Engine oil (API CI-4)	SAE 15W-40, ★SAE 5W-40
Hydraulic oil	HD Hyundai Construction Equipment genuine long life (ISO VG32, VG 46, VG 68) Conventional hydraulic oil (ISO VG 15★)
Swing and travel reduction gear	SAE 85W-140 (API GL-5)
Grease	Lithium base grease NLGI No. 2
Fuel	ASTM D975-No. 2
Coolant	Mixture of 50% ethylene glycol base antifreeze and 50% water. Mixture of 60% ethylene glycol base antifreeze and 40% water. ★

**SAE** : Society of Automotive Engineers

**API** : American Petroleum Institute

**ISO** : International Organization for Standardization

**NLGI** : National Lubricating Grease Institute

**ASTM** : American Society of Testing and Material

★ Cold region

Russia, CIS, Mongolia

## 2) RECOMMENDED OILS

HD Hyundai Construction Equipment genuine lubricating oils have been developed to offer the best performance and service life for your equipment. These oils have been tested according to the specifications of HD Hyundai Construction Equipment and, therefore, will meet the highest safety and quality requirements. We recommend that you use only HD Hyundai Construction Equipment genuine lubricating oils and grease officially approved by HD Hyundai Construction Equipment.

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C ( °F)							
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)
Engine oil pan	Engine oil ★ <sup>2</sup>	14 (3.8) : #1289 20 (5.3) : #1290-	★SAE 0W-40							
			★SAE 0W-30							
			SAE 5W-30							
			SAE 10W-30							
			SAE 15W-40							
Swing drive	Gear oil	6.2 (1.6)	★SAE 75W-90							
Final drive		4.5 × 2 (1.2 × 2)	SAE 80W-90							
Hydraulic tank	Hydraulic oil	Tank : 160 (42.3) System : 275 (72.6)	★ISO VG 15							
			ISO VG 32							
			ISO VG 46							
			ISO VG 68							
Fuel tank	Diesel fuel	340 (89.8)	★ASTM D975 NO.1							
			ASTM D975 NO.2							
Fitting (grease nipple)	Grease	As required	★NLGI NO.1							
			NLGI NO.2							
Radiator (reservoir tank)	Mixture of antifreeze and soft water★ <sup>1</sup>	31 (8.2)	Ethylene glycol base permanent type (50 : 50)							
			★Ethylene glycol base permanent type (60 : 40)							

**SAE** : Society of Automotive Engineers

**API** : American Petroleum Institute

**ISO** : International Organization for Standardization

**NLGI** : National Lubricating Grease Institute

**ASTM** : American Society of Testing and Material

★ : Cold region

Russia, CIS, Mongolia

★<sup>1</sup> : Soft water

City water or distilled water

★<sup>2</sup> : Meets or exceeds

API CI-4 grade

※ Using any lubricating oils other than HD Hyundai Construction Equipment genuine products may lead to a deterioration of performance and cause damage to major components.

※ Do not mix HD Hyundai Construction Equipment genuine oil with any other lubricating oil as it may result in damage to the systems of major components.

※ For HD Hyundai Construction Equipment genuine lubricating oils and grease for use in regions with extremely low temperatures, please contact HD Hyundai Construction Equipment dealers.

## 4. MAINTENANCE CHECK LIST

### 1) DAILY SERVICE BEFORE STARTING

Check items	Service	Page
Visual check		
Fuel tank	Check, Refill	6-26
Hydraulic oil level	Check, Add	6-31
Engine oil level	Check, Add	6-18
Coolant level	Check, Add	6-20
Control panel & pilot lamp	Check, Clean	6-41
Prefilter (water)	Check, Drain	6-27
Fan belt tension and damage	Check	6-24, 25
Attachment pin and bushing ★	Lubricate	6-40
· Boom cylinder tube end		
· Boom foot		
· Boom cylinder rod end		
· Arm cylinder tube end		
· Arm cylinder rod end		
· Boom + Arm connecting		
· Bucket cylinder tube end		

★ Lubricate every 10 hours or daily for initial 100 hours.

### 2) EVERY 50 HOURS SERVICE

Check items	Service	Page
Fuel tank (water, sediment)	Drain	6-26
Track tension	Check, Adjust	6-36
Swing reduction gear oil	Check, Add	6-34
Attachment pin and bushing	Lubricate	6-40
· Bucket cylinder rod end		
· Bucket + Arm connecting		
· Bucket control link + Arm		
· Bucket control rod		

### 3) INITIAL 50 HOURS SERVICE

Check items	Service	Page
<b>Bolts &amp; Nuts</b> <ul style="list-style-type: none"><li>· Sprocket mounting bolts</li><li>· Travel motor mounting bolts</li><li>· Swing motor mounting bolts</li><li>· Swing bearing mounting bolts</li><li>· Engine mounting bolts</li><li>· Counterweight mounting bolts</li><li>· Turning joint locating bolts</li><li>· Track shoe mounting bolts and nuts</li><li>· Carrier roller mounting bolts</li><li>· Track roller mounting bolts</li><li>· Hydraulic pump mounting bolts</li></ul>	Check, Tight	6-8

### 4) EVERY 200 HOURS SERVICE

Check items	Service	Page
Return filter ★	Replace	6-32
Pilot line filter ★	Replace	6-33
Drain filter cartridge ★	Replace	6-33

★ Replace 3 filters for continuous hydraulic breaker operation only.

### 5) INITIAL 250 HOURS SERVICE

Check items	Service	Page
Engine oil	Change	6-18, 19
Engine oil filter	Replace	6-18, 19
Prefilter (element)	Replace	6-27
Fuel filter element	Replace	6-28
Pilot line filter element	Replace	6-33
Hydraulic oil return filter	Replace	6-32
Drain filter cartridge	Replace	6-33
Swing reduction gear oil	Change	6-34
Travel reduction gear case	Change	6-35

## 6) EVERY 250 HOURS SERVICE

Check items	Service	Page
Engine oil * (-#1289)	Change	6-18, 19
Engine oil filter * (-#1289)	Replace	6-18, 19
Battery (voltage)	Check, Clean	6-41
Swing bearing grease	Check, Add	6-34
Bolts & Nuts	Check, Tight	6-8
· Sprocket mounting bolts		
· Travel motor mounting bolts		
· Swing motor mounting bolts		
· Swing bearing mounting bolts		
· Engine mounting bolts		
· Counterweight mounting bolts		
· Turning joint locating bolts		
· Track shoe mounting bolts and nuts		
· Carrier roller mounting bolts		
· Track roller mounting bolts		
· Hydraulic pump mounting bolts		
Attachment pin and bushing	Lubricate	6-40
· Boom cylinder tube end		
· Boom foot		
· Boom cylinder rod end		
· Arm cylinder tube end		
· Arm cylinder rod end		
· Boom + Arm connecting		
· Bucket cylinder tube end		
Aircon & heater filter (fresh air)	Clean	6-44

\* If you use high sulfur containing fuel above than 0.5% or use low grade of engine oil reduce change interval.

## 7) EVERY 500 HOURS SERVICE

Check items	Service	Page
Engine oil * (#1290-)	Change	6-18, 19
Engine oil filter * (#1290-)	Replace	6-18, 19
Radiator, cooler fin and charge air cooler	Check, Clean	6-23
Fuel filter element	Replace	6-28
Prefilter	Replace	6-27
Aircon & heater filter (fresh air)	Clean	6-44
Air cleaner element (primary) * <sup>1</sup>	Check, clean	6-26

\* API CI-4 (Change oil and filter every 250 hours when using API CH-4.)

\*<sup>1</sup> When working in dusty environments, more frequent cleaning is highly recommended.

## 8) EVERY 1000 HOURS SERVICE

Check items	Service	Page
Hydraulic tank air breather element	Replace	6-33
Travel motor reduction gear oil	Change	6-35
Swing reduction gear oil	Change	6-34
Grease in swing gear and pinion	Change	6-35
Hydraulic oil return filter	Replace	6-32
Drain filter cartridge	Replace	6-33
Pilot line filter	Replace	6-33

## 9) EVERY 2000 HOURS SERVICE

Check items	Service	Page
Coolant <sup>*2</sup>	Change	6-20, 21, 22, 23
Air cleaner element (primary, safety) <sup>*1</sup>	Replace	6-26
Hydraulic oil <sup>*2</sup>	Change	6-31-1
Hydraulic tank suction strainer	Check, Clean	6-32
RCV lever	Check, Lubricate	6-36
Hoses, fittings, clamps (fuel, coolant, hydraulic)	Check, Retighten, Replace	-

<sup>\*1</sup> When working in dusty environments, more frequent replacing is highly recommended.

<sup>\*2</sup> Conventional

※ **Change hydraulic oil every 600 hours of continuous hydraulic breaker operation.**

## 10) EVERY 5000 HOURS SERVICE

Check items	Service	Page
Hydraulic oil <sup>*3</sup>	Change	6-31-1

<sup>\*3</sup> HD Hyundai Construction Equipment genuine long life

※ **Change hydraulic oil every 1000 hours of continuous hydraulic breaker operation.**

## 11) EVERY 6000 HOURS SERVICE

Check items	Service	Page
Coolant <sup>*3</sup>	Change	6-20, 21, 22, 23


<sup>\*3</sup> HD Hyundai Construction Equipment genuine long life

## 12) WHEN REQUIRED

Whenever you have trouble in the machine, you must perform the service of related items, system by system.

Check items	Service	Page
Fuel system		
· Fuel tank	Drain or Clean	6-26
· Prefilter (water, element)	Drain or Replace	6-27
· Fuel filter element	Replace	6-28
Engine lubrication system		
· Engine oil	Change	6-18, 19
· Engine oil filter	Replace	6-18, 19
Engine cooling system		
· Coolant	Add or Change	6-20, 21, 22, 23
· Radiator	Clean or Flush	6-20, 21, 22, 23
· Charge air cooler	Check, Clean	6-23
Engine air system		
· Air cleaner element (primary)	Clean or Replace	6-26
· Air cleaner element (safety)	Replace	6-26
Hydraulic system		
· Hydraulic oil	Add or Change	6-31, 31-1
· Return filter	Replace	6-32
· Drain line filter	Replace	6-33
· Pilot line filter	Replace	6-33
· Element of breather	Replace	6-33
· Suction strainer	Clean	6-32
· RCV lever	Lubricate	6-36
Undercarriage		
· Track tension	Check, Adjust	6-36
Bucket		
· Tooth	Replace	6-38
· Side cutter	Replace	6-38
· Linkage	Adjust	6-37
· Bucket assy	Replace	6-37
Air conditioner and heater		
· Fresh air filter	Replace	6-44
· Recirculation filter	Clean, Replace	6-44, 45

## 5. MAINTENANCE CHART

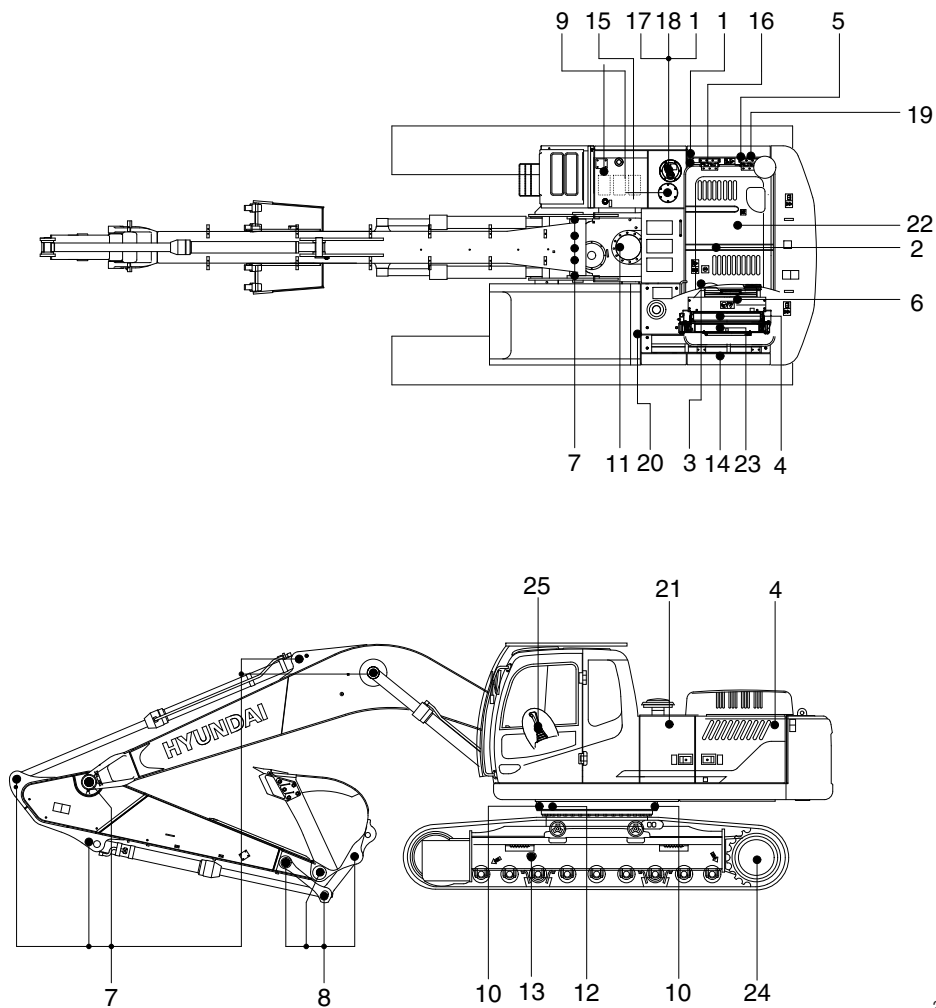

210S6MA05

### Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.

Service interval	No.	Description	Service action	Oil symbol	Capacity ℓ (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	160 (42.3)	1
	2	Engine oil level	Check, Add	EO	14 (3.8)	1
	4	Radiator coolant	Check, Add	C	31 (8.2)	1
	5	Prefilter (water)	Check, Drain	-	-	1
	6	Fan belt tension and damage	Check	-	-	1
	7	*Attachment pin & bushing	Check, Lubricate	PGL		11
50 Hours or weekly	9	Fuel tank	Check, Refill	DF	340 (89.8)	1
	8	Bucket linkage pins	Check, Lubricate	PGL	-	6
	9	Fuel tank (water, sediment)	Check, Drain	-	-	1
	11	Swing reduction gear oil	Check, Add	GO	6.2 (1.6)	1
	13	Track tension	Check, Adjust	PGL	-	2

\* For initial 100 hours.

Service interval	No.	Description	Service action	Oil symbol	Capacity ℓ (U.S.gal)	Service points No.
250 Hours	2	Engine oil (-#1289)	Change	EO	14 (3.8)	1
	3	Engine oil filter (-#1289)	Replace	-	-	1
	7	Attachment pins & bushings	Check, Lubricate	PGL	-	11
	10	Swing bearing grease	Check, Add	PGL	-	2
	14	Battery (voltage)	Check, Clean	-	-	1
	20	Aircon & heater filter (fresh air)	Clean	-	-	1
Initial 250 Hours	2	Engine oil	Change	EO	20 (5.3)	1
	3	Engine oil filter	Replace	-	-	1
	5	Prefilter (element)	Replace	-	-	1
	11	Swing reduction gear oil	Change	GO	6.2 (1.6)	1
	15	Hydraulic oil return filter	Replace	-	-	1
	16	Drain filter cartridge	Replace	-	-	1
	19	Pilot line filter element	Replace	-	-	1
	22	Fuel filter element	Replace	-	-	2
	24	Travel reduction gear case	Change	GO	4.5 (1.2)	2
500 Hours	2	Engine oil (#1290-)	Change	EO	20 (5.3)	1
	3	Engine oil filter (#1290-)	Replace	-	-	1
	5	Prefilter (element)	Replace	-	-	1
	21	Air cleaner element (primary)	Check, Clean	-	-	1
	22	Fuel filter element	Replace	-	-	2
	23	Radiator, oil cooler, charge air cooler	Check, Clean	-	-	3
1000 Hours	11	Swing reduction gear oil	Change	GO	6.2 (1.6)	1
	12	Swing gear and pinion grease	Change	PGL	7.9 kg (17.5 lb)	1
	15	Hydraulic oil return filter	Replace	-	-	1
	16	Drain filter cartridge	Replace	-	-	1
	17	Air breather element	Replace	-	-	1
	19	Pilot line filter	Replace	-	-	1
	24	Travel reduction gear case	Change	GO	4.5 (1.2)	2
2000 Hours	1	Hydraulic oil* <sup>1</sup>	Change	HO	160 (42.3)	1
	4	Radiator coolant* <sup>1</sup>	Change	C	31 (8.2)	1
	18	Hydraulic oil suction strainer	Check, Clean	-	-	1
	21	Air cleaner element (primary, safety)	Replace	-	-	2
	25	RCV lever	Check, Lubricate	PGL	-	2
	-	Hoses, fittings, clamps (fuel, coolant, hydraulic)	Check, Retighten, Replace	-	-	-
5000 Hours	1	Hydraulic oil* <sup>2</sup>	Change	HO	160 (42.3)	1
6000 Hours	4	Radiator coolant* <sup>2</sup>	Change	C	31 (8.2)	1
As required	20	Aircon & heater fresh filter	Replace	-	-	1
	20	Aircon & heater recirculation filter	Clean, Replace	-	-	1
	21	Air cleaner element (primary)	Replace	-	-	1
	21	Air cleaner element (safety)	Replace	-	-	1

\*<sup>1</sup> Conventional      \*<sup>2</sup> HD Hyundai Construction Equipment genuine long life

※ Oil symbol

Please refer to the recommended lubricants for specification.


DF : Diesel fuel      GO : Gear oil      HO : Hydraulic oil      C : Coolant  
PGL : Grease      EO : Engine oil

## 6. SERVICE INSTRUCTION

### 1) CHECK ENGINE OIL LEVEL



Check the oil level with the machine on a flat ground before starting engine.

- (1) Pull out the dipstick and wipe with a clean cloth.
- (2) Check the oil level by inserting the dipstick completely into the hole and pulling out again.
- (3) If oil level is **LOW**, add oil and then check again.
  - ※ If the oil is contaminated or diluted, change the oil regardless of the regular change interval.
  - ※ Check oil level after engine has been stopped for 15 minutes.
  - ▲ Do not operate unless the oil level is in the normal range.

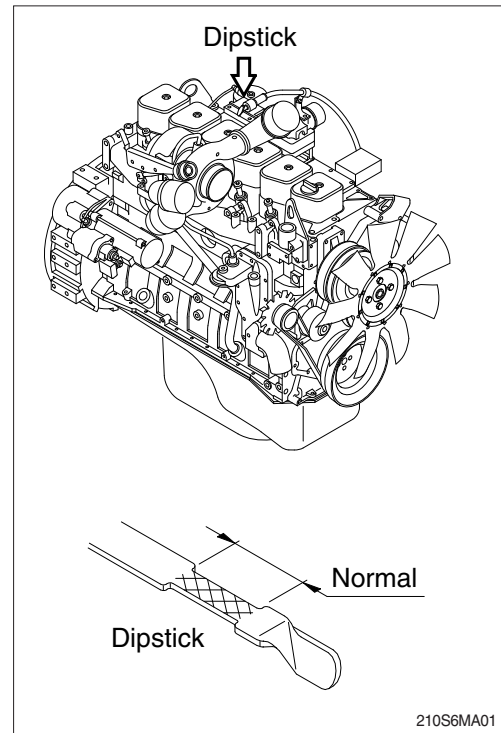


### 2) REPLACEMENT OF ENGINE OIL AND OIL FILTER

- (1) Warm up the engine until the water temperature reaches 60°C (140°F).
- (2) Shut off the engine.
- (3) Remove the oil drain plug.
  - ※ A drain pan with a capacity of 24 liters (6.3 U.S. gallons) will be adequate.
- (4) Clean around the filter head, remove the filter and clean the gasket surface.
  - Wrench size : 90 ~ 95 mm (3.5~3.8 in)
  - ※ The O-ring can stick on the filter head. Make sure it is removed before installing the new filter.

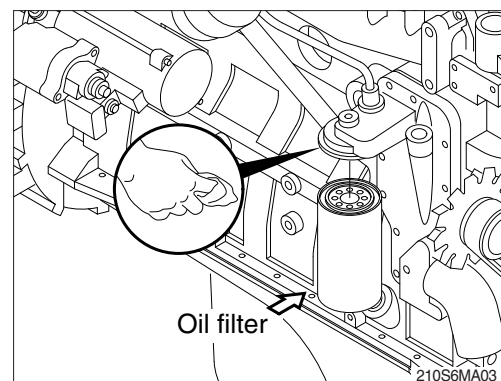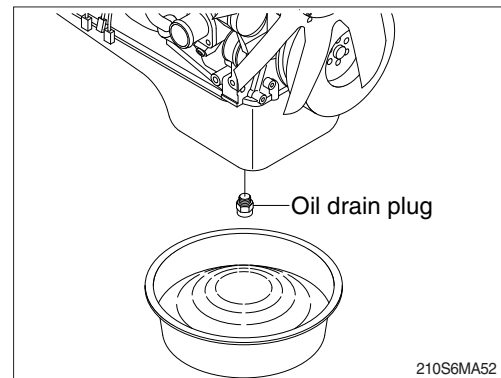

(4) Apply a light film of lubricating oil to the gasket sealing surface before installing the filters.


※ **Fill the filters with clean lubricating oil before installation.**

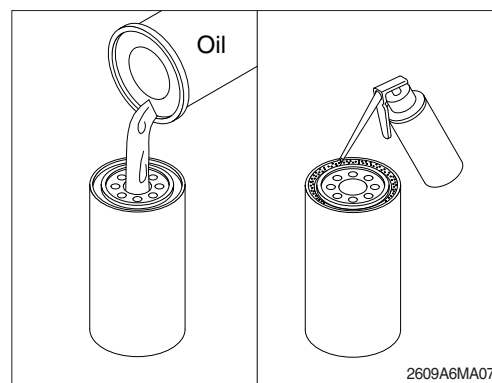

(5) Install the filter to the filter head.


※ **Mechanical over-tightening may distort the threads or damage the filter element seal.**

· Install the filter as specified by the filter manufacturer.

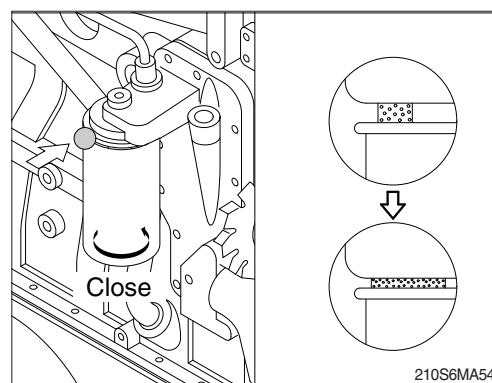


(6) Fill the engine with clean oil to the proper level.

· Quantity : 14 ℓ (3.8 U.S. gallons) (-#1289)  
20 ℓ (5.3 U.S. gallons) (#1290-)

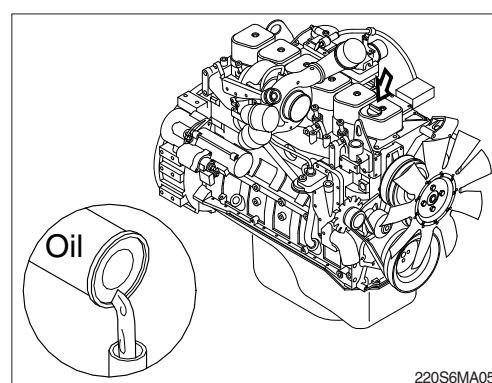

(7) Operate the engine at low idle and inspect for leaks at the filters and the drain plug.



Shut the engine off and check the oil level with the dipstick. Allow 15 minutes for oil to drain down before checking.

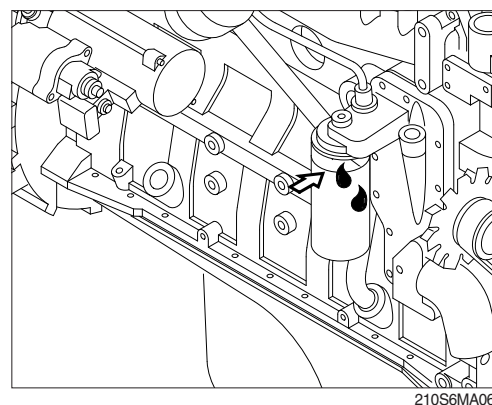

### 3) CHECK COOLANT

- (1) Check if the level of coolant in reservoir tank is between FULL and LOW.
- (2) Add the mixture of antifreeze and water after removing the cap of the reservoir tank if coolant is not sufficient.
- (3) Be sure to add the coolant by opening the cap of radiator when coolant level is below LOW.
- (4) Replace gasket of radiator cap when it is damaged.

**▲ Hot coolant can spray out if radiator cap is removed while engine is hot. Remove the cap after the engine has cooled down.**

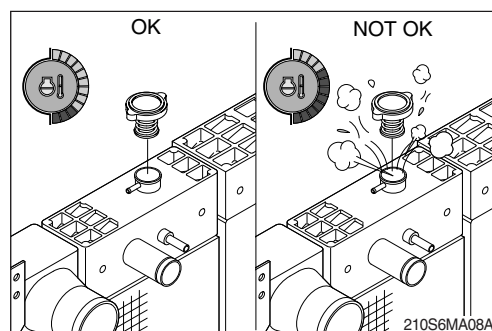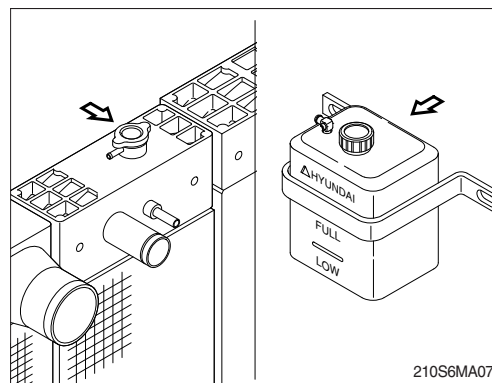

### 4) FLUSHING AND REFILLING OF RADIATOR

- (1) Change coolant

**▲ Avoid prolonged and repeated skin contact with used antifreeze. Such prolonged repeated contact can cause skin disorders or other bodily injury.**


**Avoid excessive contact-wash thoroughly after contact.**

**Keep out of reach of children.**

**※ Protect the environment : Handling and disposal of used antifreeze can be subject to federal, state, and local law regulation.**

**Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for the receipt of used antifreeze.**


**If in doubt, contact your local authorities for guidance as to proper handling of used antifreeze.**

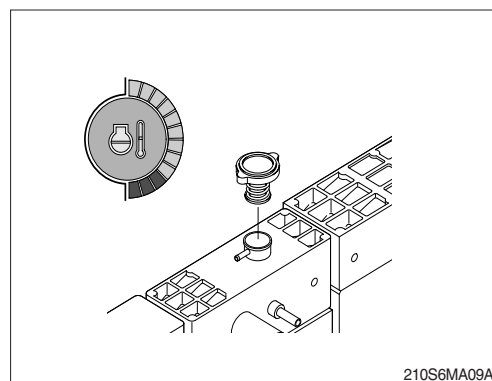

- ▲ Wait until the temperature is below 50 °C (120 °F) before removing the coolant system pressure cap.


Failure to do so can cause personal injury from heated coolant spray.

Drain the cooling system by opening the drain valve on the radiator and removing the plug in the bottom of the water inlet. A drain pan with a capacity of 40 liters (10 U.S. gallons) will be adequate in most applications.

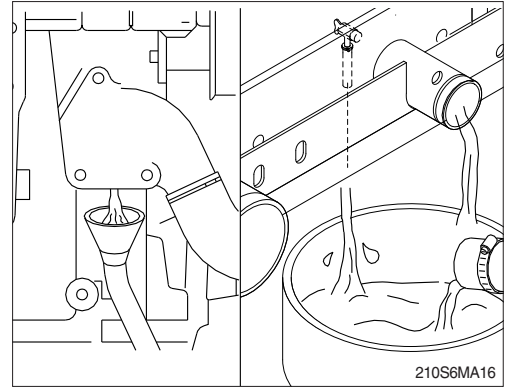


## (2) Flushing of cooling system

- ① Fill the system with a mixture of sodium carbonate and water (or a commercially available equivalent).
  - ※ Use 0.5 kg (1.0 pound) of sodium carbonate for every 23 liters (6.0 U.S. gallons) of water.
  - ※ Do not install the radiator cap. The engine is to be operated without the cap for this process.

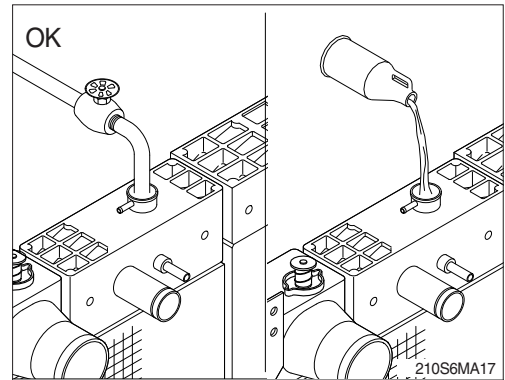


- ※ During filling, air must be vented from the engine coolant passages. Open the engine venting petcock.


The system must be filled slowly to prevent air locks. Wait 2 to 3 minutes to allow air to be vented, then add mixture to bring the level to the top.

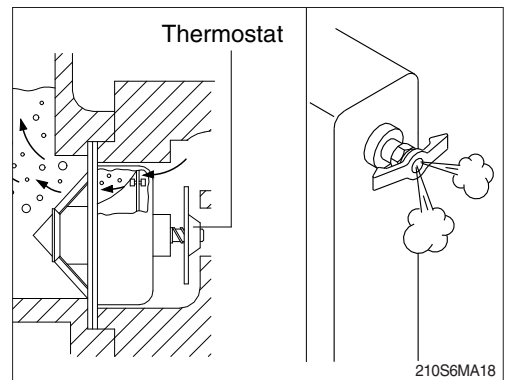


- ② Operate the engine for 5 minutes with the coolant temperature above 80 °C (176 °F). Shut the engine off, and drain the cooling system.

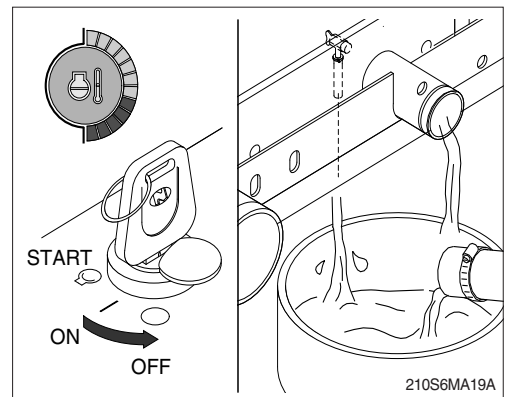

- ③ Fill the cooling system with clean water.
- ※ **Be sure to vent the engine and aftercooler for complete filling.**
- ※ **Do not install the radiator cap or the new coolant filter.**

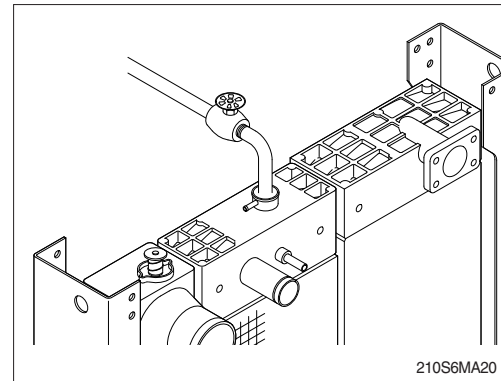


- ④ Operate the engine for 5 minutes with the coolant temperature above 80 °C (176 °F) . Shut the engine off, and drain the cooling system.
- ※ **If the water being drained is still dirty, the system must be flushed again until the water is clean.**

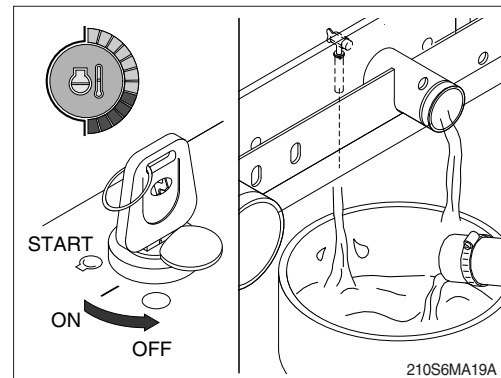


### (3) Cooling system filling


- ① Use a mixture of 50 percent water and 50 percent ethylene glycol antifreeze to fill the cooling system.
- Coolant capacity (engine only) : 9.5 ℓ (2.5 U.S. gallons)

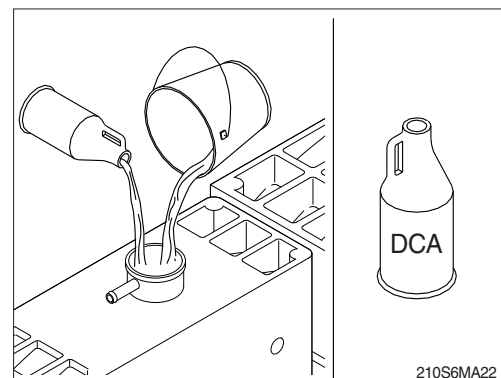

- ② The system has a maximum fill rate of 14 liters (3.5 U.S. gallons) per minute. Do not exceed this fill rate.
  - ※ **The system must be filled slowly to prevent air locks.**
- During filling, air must be vented from the engine coolant passage.**

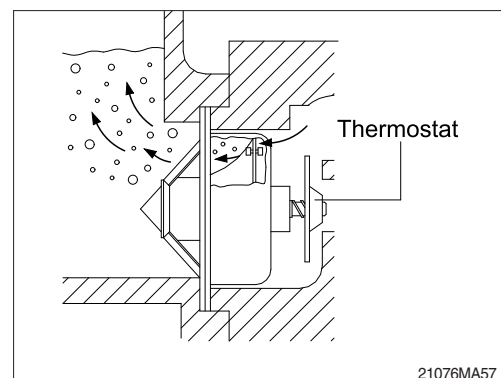



- ③ Install the pressure cap. Operate the engine until it reaches a temperature 80 °C (176 °F), and check for coolant leaks. Check the coolant level again to make sure the system is full of coolant.

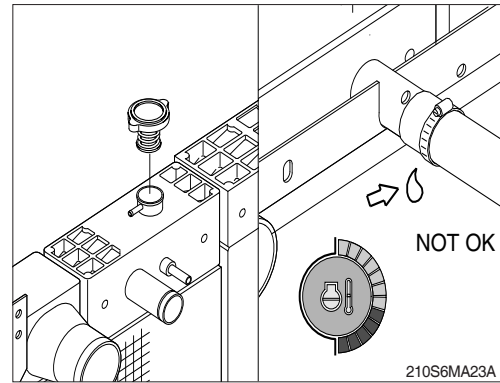

## 5) CLEAN RADIATOR AND OIL COOLER


Check, and if necessary, clean and dry outside of radiator and oil cooler. After working in a dusty place, clean radiator more frequently.

- (1) Visually inspect the radiator for clogged radiator fins.
- (2) Use 550 kPa (80 psi) air pressure to blow the dirt and debris from the fins.  
Blow the air in the opposite direction of the fan air flow.
- (3) Visually inspect the radiator for bent or broken fins.
- ※ **If the radiator must be replaced due to bent or broken fins which can cause the engine to overheat, refer to the manufacturer's replacement procedures.**
- (4) Visually inspect the radiator for core leaks.

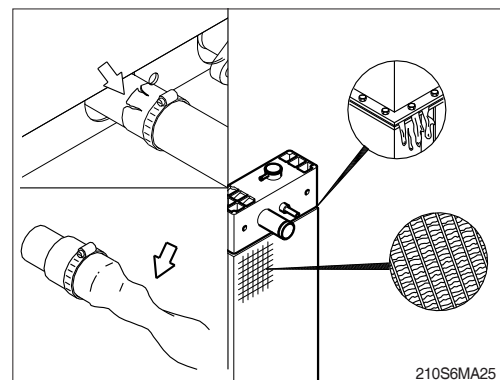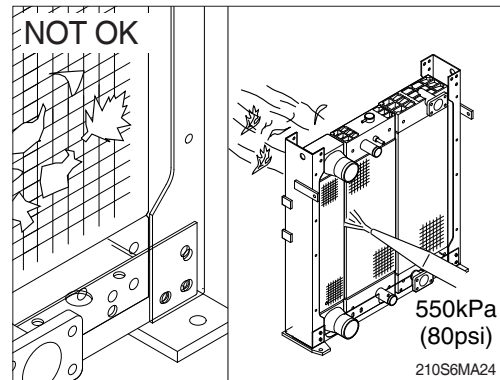


## 6) CHECK CHARGE AIR COOLER

Inspect the charge air cooler for dirt and debris blocking the fins. Check for cracks, holes, or other damage. If damage is found, please contact HD Hyundai Construction Equipment distributor.

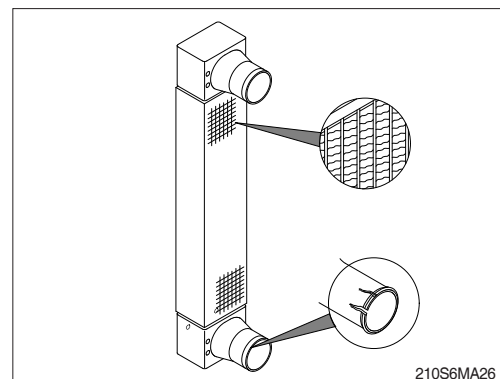

## 7) FAN BELT


- (1) A deflection method can be used to check belt tension by applying 11.3 kgf (25 lbf) force between the pulleys on V-belts. If the deflection is more than one belt thickness per foot of pulley center distance, the belt tension must be adjusted.

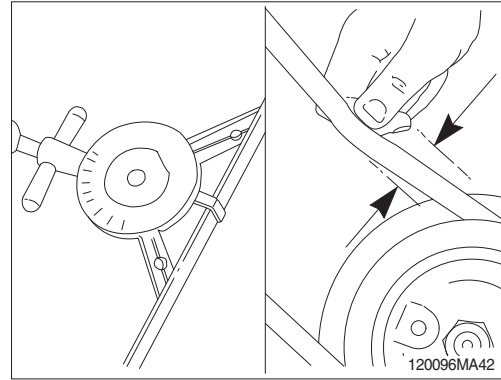

- (2) Inspect the fan belt for damage.

- ① Transverse (across the belt) cracks are acceptable.
- ② Longitudinal (direction of belt ribs) cracks that intersect with transverse cracks are not acceptable.


Replace the belt if it is frayed or has pieces of material missing.

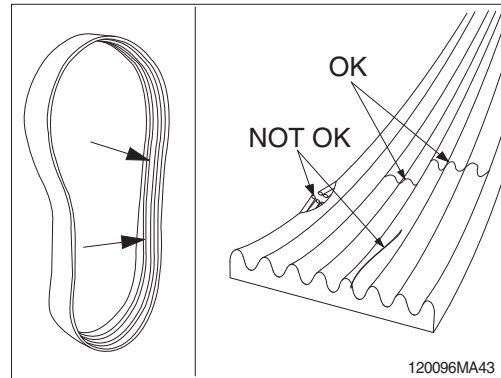

- ③ Inspect the belt

- Embedded debris
- Uneven/excessive rib wear
- Exposed belt cords
- Glazing (high heat)

※ If any of the above conditions are present, the belt is unacceptable for reuse and must be replaced.

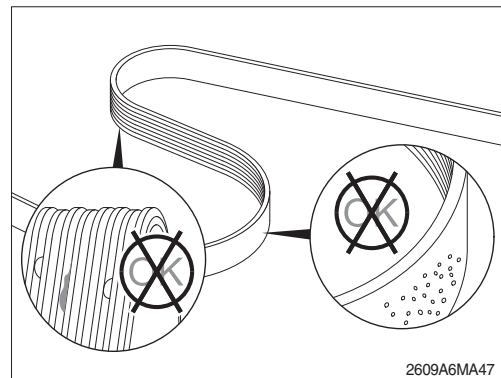

## 8) INSPECTION OF COOLING FAN

▲ Personal injury can result from a fan blade failure. Never pull or pry on the fan. This can damage the fan blade and cause fan failure.


※ Rotate the crankshaft by using the engine bearing gear.

※ A visual inspection of the cooling fan is required daily.

Check for cracks, loose rivets, and bent or loose blades.


Check the fan to make sure it is securely mounted. Tighten the capscrews if necessary.

Replace any fan that is damaged.

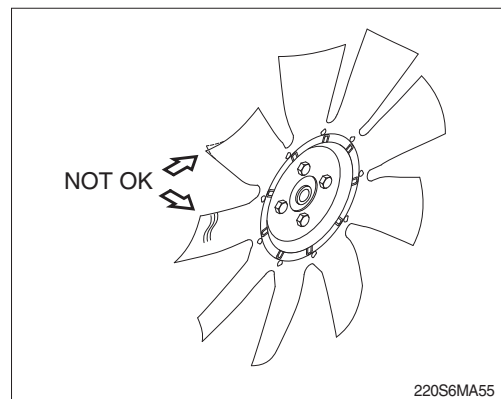


## 9) FAN BELT TENSIONER

- (1) With the engine stopped, check the tensioner arm, pulley, and stops for cracks. If any cracks are found, the tensioner must be replaced.

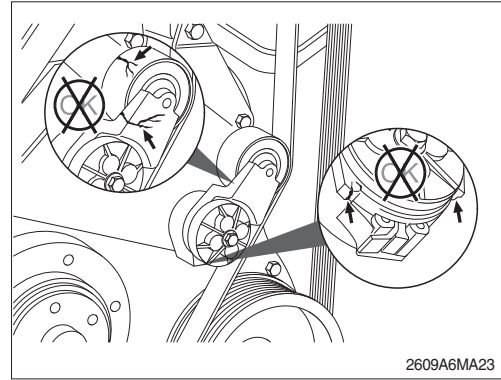


- (2) With the belt installed, verify that neither tensioner arm stop is in contact with the spring case stop.

After replacing the belt, if the tensioner arm stops are still in contact with the spring case stop, replace the tensioner.

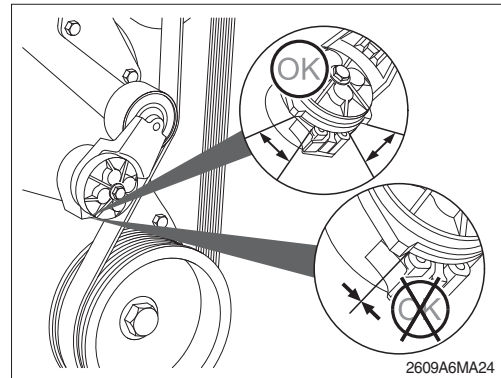


- (3) With the belt removed, verify that the tensioner arm stop is in contact with the spring case stop. If these two are not touching, the tensioner must be replaced.

※ **After replacing the belt, if the tensioner arm stop is still in contact with the spring case stop, the tensioner must be replaced.**

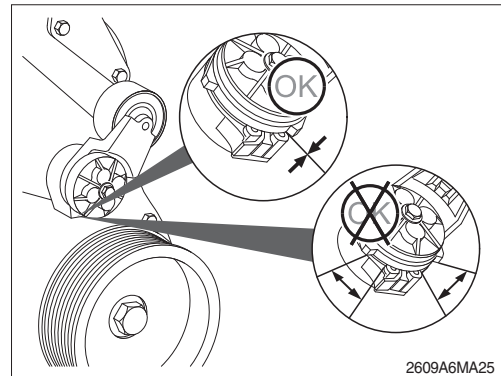

- (4) Check the location of the drive belt on the belt tensioner pulley. The belt should be centered on, or close to the middle of, the pulley. Misaligned belts, either too far forward or backward, can cause belt wear, belt roll-offs, or increase uneven tensioner bushing wear.

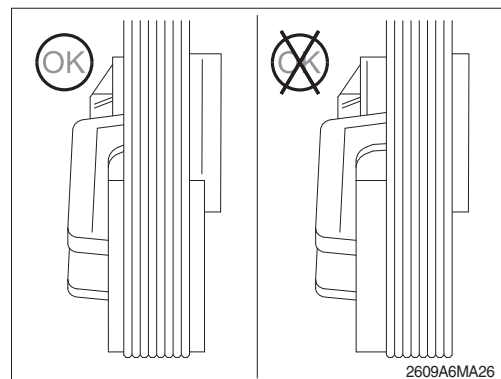



## 10) CLEANING OF AIR CLEANER

### (1) Primary element

- ① Loosen the clamps and remove the element.
  - ② Clean the inside of the body.
  - ③ Clean the element with pressurized air.
    - Remove the dust inside of the element by the pressurized air (below 3 kgf/cm<sup>2</sup>, 40 psi) forward and backward equally.
  - ④ Inspect for cracks or damage of element by putting a light bulb inside of the element.
  - ⑤ Insert element and tighten wing nut.
- ※ **Replace the primary element after 4 times cleanings.**


### (2) Safety element

- ※ **Replace the safety element only when the primary element is cleaned for the 4 times.**
- ※ **Always replace the safety element. Never attempt to reuse the safety element by cleaning the element.**

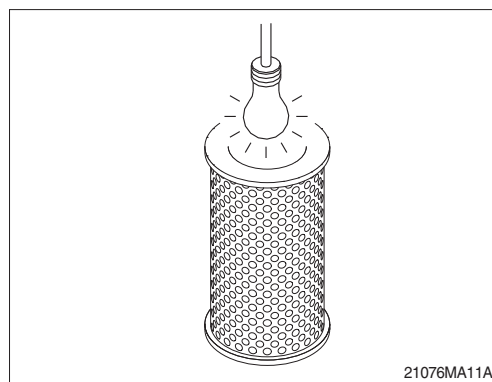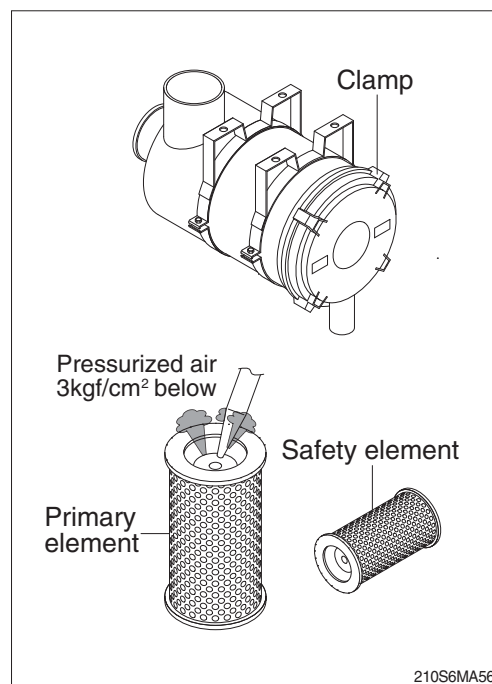

## 11) FUEL TANK

- (1) Fill fuel fully when system the operation to minimize water condensation, and check it with fuel gauge before starting the machine.
  - (2) Drain the water and sediment in the fuel tank by opening the drain cock.
    - ※ Be sure to LOCK the cap of fuel tank.
    - ※ Remove the strainer of the fuel tank and clean it if contaminated.
- ▲ **Stop the engine when refueling.**  
**All lights and flames shall be kept at a safe distance while refueling.**

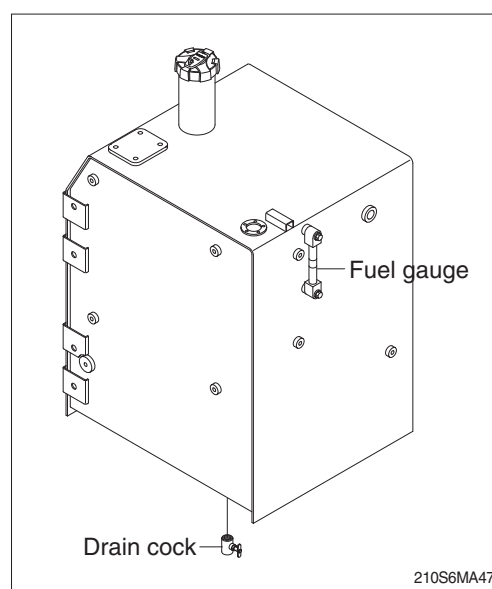

## 12) PREFILTER

※ Inspect or drain the collection bowl of water daily and replace the element every 500 hours.


### (1) Drain water

① Open bowl drain valve to evacuate water.

② Close drain valve.

※ Don't tighten up a drain valve so strong.

※ Please inspect and drain water frequently for remain water volume to be less than 1/3 volume of a collection bowl.

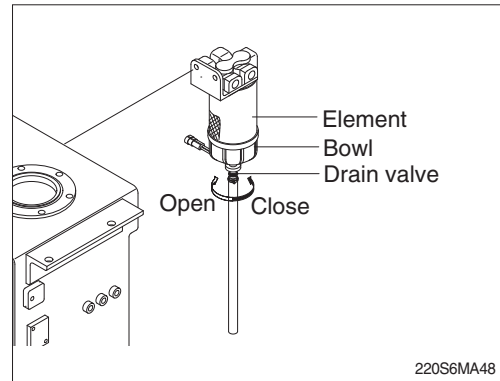


### (2) Replace element

① Drain the unit of fuel. Follow "Drain water" instructions above.

② Remove element and bowl from filter head.

※ The bowl is reusable, do not damage or discard.

③ Separate element from bowl. Clean bowl and seal gland.

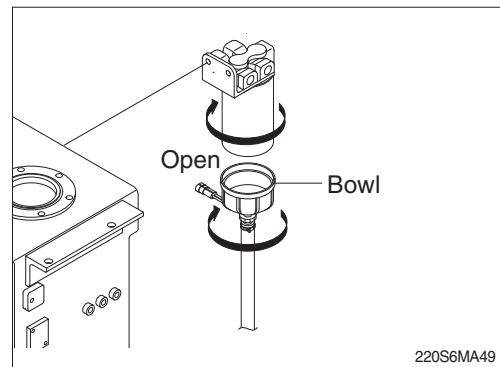


④ Lubricate new bowl seal with clean fuel or motor oil and place in bowl gland.

⑤ Attach bowl to new element firmly by hand.

⑥ Lubricate new element seal and place in element top gland.

⑦ Attach the element and bowl to the head.

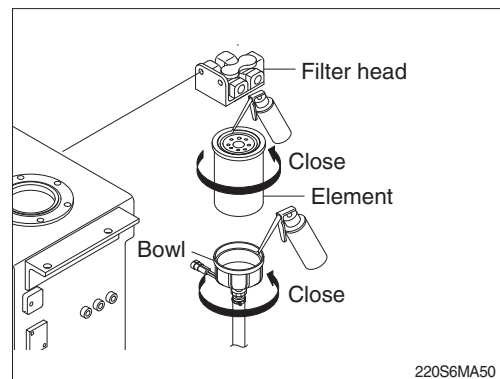

### 13) REPLACEMENT OF FUEL FILTER

(1) Clean the area around the filter head, remove the filter and clean the gasket surface.

Wrench size : 90~95 mm (3.5~3.8 in)


(2) Replace the seal.

(3) Fully fill clean diesel fuel in the new filter.

(4) Apply engine oil on the gasket of filter when mounting, and tighten 1/2 to 3/4 turn more after the gasket touches the filter head.

(5) Relieve the air after mounting.

※ **Check for fuel leakage after the engine starts.**  
**If air is in the fuel system, the engine will not start. Start engine after bleeding the air according to the method of bleeding air.**

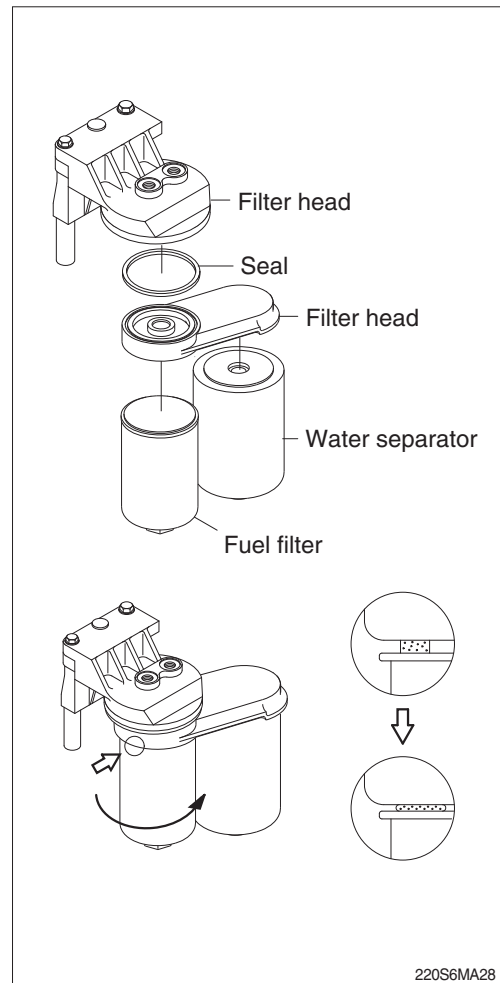


220S6MA28

#### 14) BLEEDING THE FUEL SYSTEM

- (1) Controlled venting is provided at the injection pump through the fuel drain manifold. Small amounts of air introduced by changing the fuel filters or fuel injection pump supply line will be vented automatically, if the fuel filter is changed in accordance with the instructions.


※ **Manual bleeding is required if :**

- The fuel filter is not filled prior to installation.
- Fuel injection pump is replaced.
- High pressure fuel line connections are loosened or fuel lines replaced.
- Initial engine start up or start up after an extended period of no engine operation.
- Machine fuel tank has been run until empty.

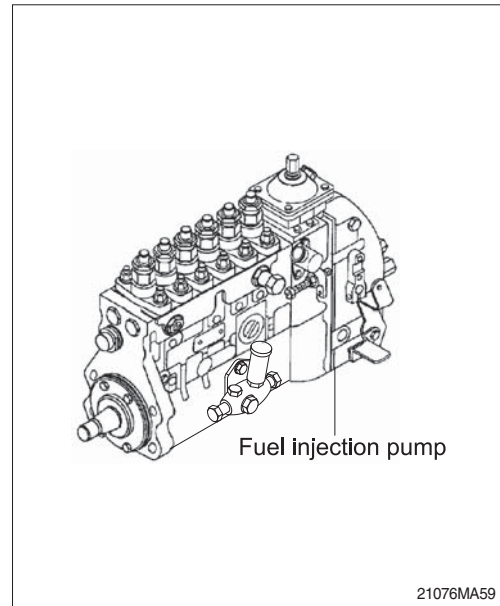

#### (2) Venting the low pressure lines and fuel filter


- ① Open the bleed screw.
- Wrench size : 17 mm

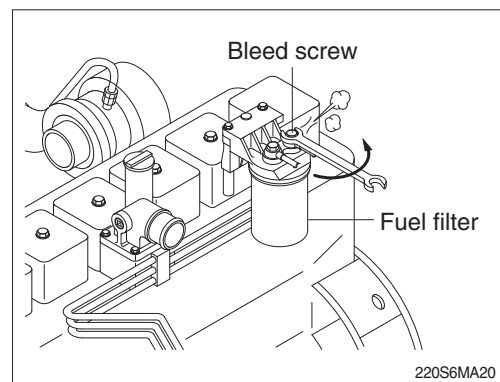

- ② Operate the hand lever until the fuel flowing from the fitting is free of air.
- Tighten the bleed screw.

- Torque : 0.9 kgf · m (6.6 lbf · ft)


- ③ Operate the engine and check for leaks.

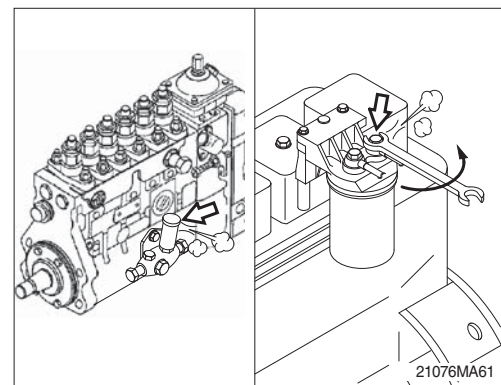

### (3) Venting the high pressure lines


**▲** The pressure of the fuel in the line is sufficient to penetrate the skin and cause serious bodily harm.

- ① Loosen the fittings at the injectors, and crank the engine to allow entrapped air to bleed from the lines. Tighten the fittings.
  - Wrench size :19 mm
- ② Start the engine and vent one line at a time until the engine runs smoothly.

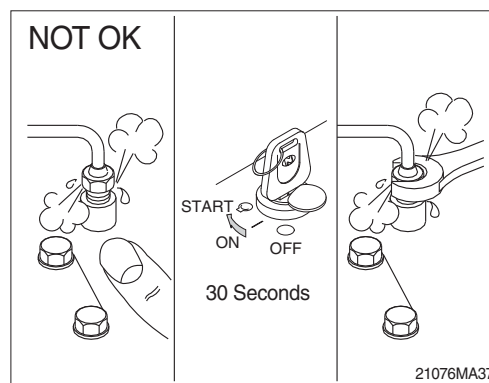


※ Do not engage the starter for more than 30 seconds each time when it is used to vent the system : wait 2 minutes between engagements.

**▲** Do not bleed a hot engine as this could cause fuel to spill onto a hot exhaust manifold creating a danger of fire.

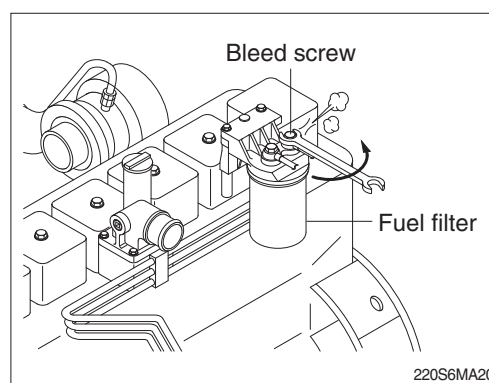

### 15) LEAKAGE OF FUEL

**▲** Be careful and clean the fuel hose, injection pump, fuel filter and other connections as the leakage from these part can cause fire.


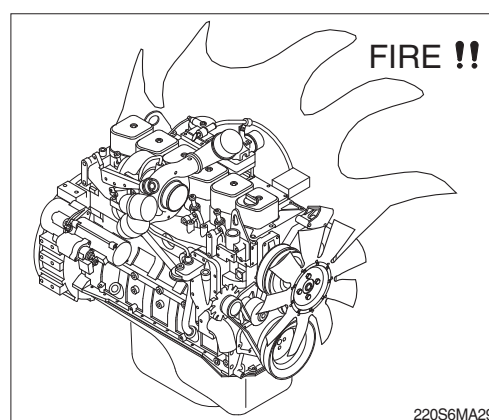


## 16) HYDRAULIC OIL CHECK

- (1) Position the machine as shown in the illustration on the right. Please stop the engine and wait for about 5 minutes.
- (2) Check the oil level at the level gauge of hydraulic oil tank.
- (3) The oil level is normal if the oil is between the red lines. The oil level depends on the temperature of the hydraulic oil. Refer to the height (A) in the below table to check the level gauge.


Temperature		Height A	
°C	°F	mm	inch
0	32	15	0.6
10	50	25	1.0
20	68	30	1.2
30	86	35	1.4
40	104	40	1.6

- ※ Refer to page 3-6 for checking the temperature of the hydraulic oil.
- ※ Add the hydraulic oil, if necessary.

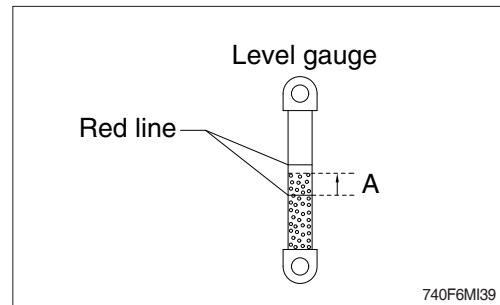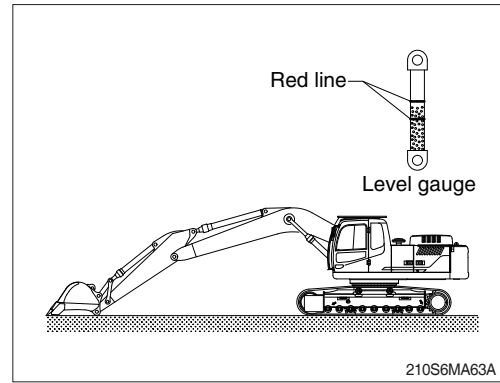


## 17) FILLING HYDRAULIC OIL

- (1) Stop the engine to the position of level check.
- (2) Relieve the pressure in the tank by pushing the top of the air breather.
- (3) Remove the breather on the top of oil tank and fill the oil to the specified level.
  - Tightening torque :  $4.05 \pm 0.8 \text{ kgf} \cdot \text{m}$   
 $(29.3 \pm 5.8 \text{ lbf} \cdot \text{ft})$
- (4) Start engine after filling and operate the work equipment several times.
- (5) Check the oil level at the level check position after engine stops.

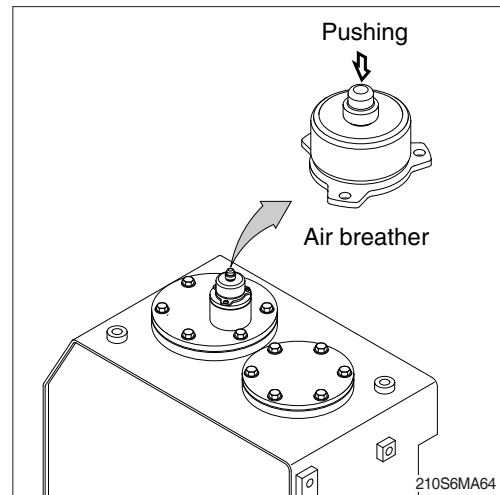

## 18) CHANGE HYDRAULIC OIL


- (1) Lower the bucket on the ground pulling the arm and bucket cylinder to the maximum.
- (2) Relieve the pressure in the tank by pushing the top of the air breather.
- (3) Remove the cover.
  - Tightening torque :  $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$   
( $50 \pm 10 \text{ lbf} \cdot \text{ft}$ )
- (4) Prepare a suitable container.
- (5) To drain the oil open the drain valve at the bottom of the oil tank.
- (6) Fill proper amount of recommended oil.
- (7) Put the breather in the right position.
- (8) Bleed air hydraulic pump loosen the air breather at top of hydraulic pump assembly.**
- (9) Start engine and run continually. Release the air by full stroke of each control lever.

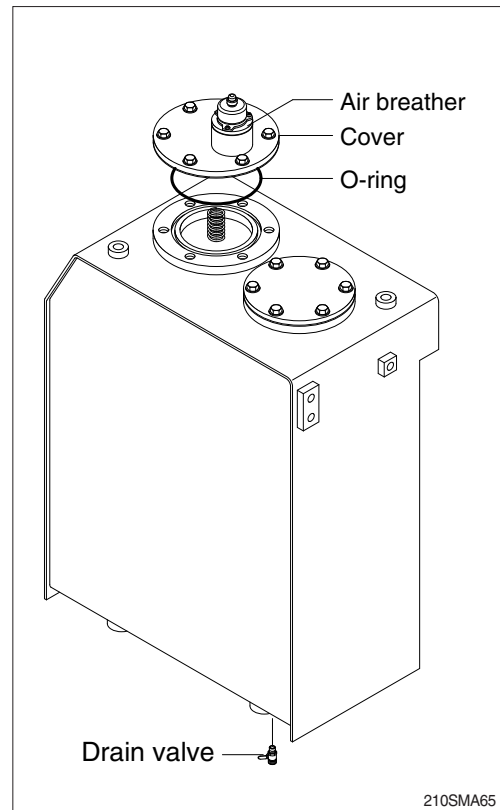

## 19) CLEAN SUCTION STRAINER

Clean suction strainer as follows paying attention to the cause to be kept during oil filling.


- (1) Remove the cover on the top of the oil tank.
    - Tightening torque :  $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$   
( $50 \pm 10 \text{ lbf} \cdot \text{ft}$ )
  - (2) Pull out the strainer in the tank.
  - (3) Wash the foreign material on the suction strainer with gasoline or cleaning oil.
  - (4) Replace the suction strainer if it is damaged.
  - (5) Assemble with reverse order of disassembly.  
Be sure to install a new O-ring and reinsert in the oil tank.
- ※ Loosen the bolt slowly at the cover can be spring out by the spring when removing it.

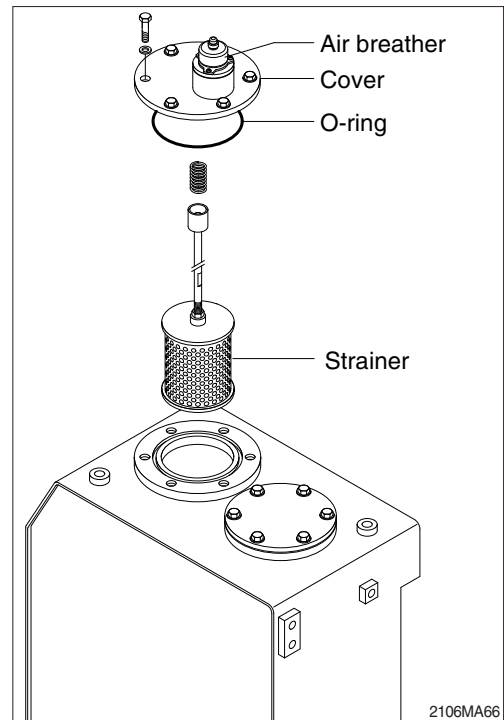

## 20) REPLACEMENT OF RETURN FILTER


Replace as follows paying attention to the cause to be kept during the replacement.

- (1) Remove the cover.
  - Tightening torque :  $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$   
( $50 \pm 10 \text{ lbf} \cdot \text{ft}$ )
- (2) Remove the spring, by-pass valve, and return filter in the tank.
- (3) Replace the element with a new one.

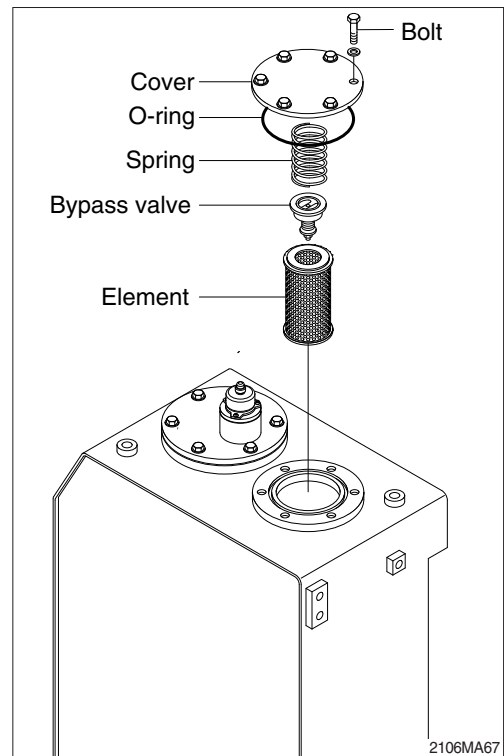

## 21) REPLACEMENT OF ELEMENT IN HYDRAULIC TANK BREATHER


- (1) Relieve the pressure in the tank by pushing the rubber cap of the air breather.
- (2) Loosen the bolt and remove the cover.
- (3) Pull out the filter element.
- (4) Replace the filter element new one.
- (5) Apply oil on the O-ring and reassemble by reverse order of disassembly.
  - Tightening torque : 0.8~1.0 kgf · m  
(5.9~7.4 lbf · ft)

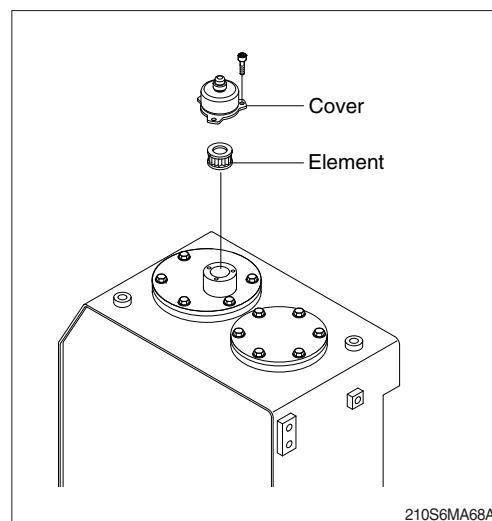

## 22) REPLACE OF DRAIN FILTER CARTRIDGE


Clean the dust around filter and replace with new one after removing the cartridge.

- ※ Tighten about 2/3 turn more after the gasket of cartridge contacts seal side of filter body for mounting.
- ※ Change cartridge after initial 50 hours of operation. Thereafter, change cartridge every 250 hours.

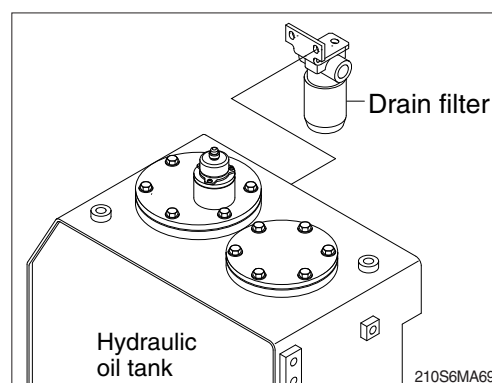


## 23) REPLACE OF PILOT LINE FILTER

- (1) Loosen the nut positioned on the filter body.
  - (2) Pull out the filter element and clean filter housing.
  - (3) Install the new element and tighten using specified torque.
- ※ Change cartridge after initial 250 hours of operation. Thereafter, change cartridge every 1000 hours.

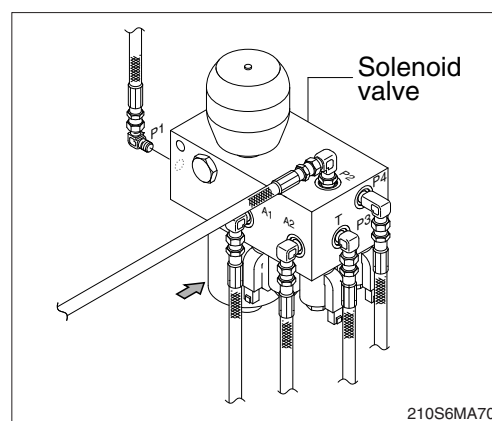


## 24) CHECK THE SWING REDUCTION GEAR OIL

- (1) Pull out the dipstick and clean it.
- (2) Insert it again.
- (3) Pull out one more time to check the oil level and fill the oil if the level is not sufficient.

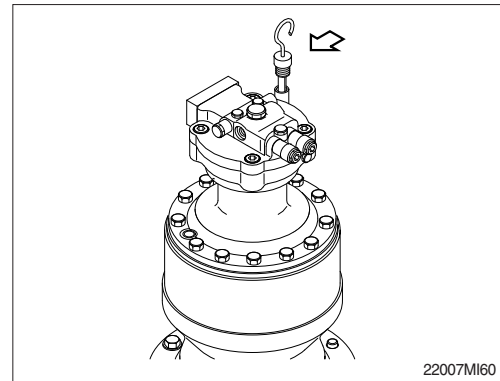


## 25) CHANGE SWING REDUCTION GEAR OIL

- (1) Raise the temperature of oil by swinging the machine before replace the oil and park the machine on the flat ground.
- (2) Loosen the plug of the drain port.
- (3) Drain into a proper container.
- (4) Wash the drain plug and reinstall it with sealing tape.  
Fill proper amount of recommended oil.  
· Amount of oil : 6.2 ℓ (1.6 U.S.gal)

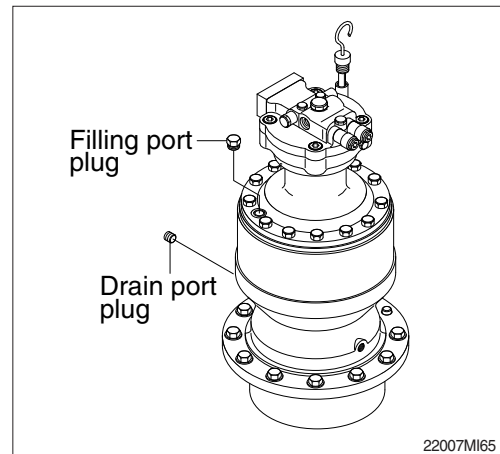


## 26) LUBRICATE BEARING OF OUTPUT SHAFT IN REDUCTION GEAR

- (1) Remove air vent plug.
- (2) Remove grease fill plug and install grease fitting at that place.
- (3) Lubricate NLGI No.2 with grease gun until comes out new grease from air vent port.  
· Amount of oil : 1.1 kg (2.4 lb)

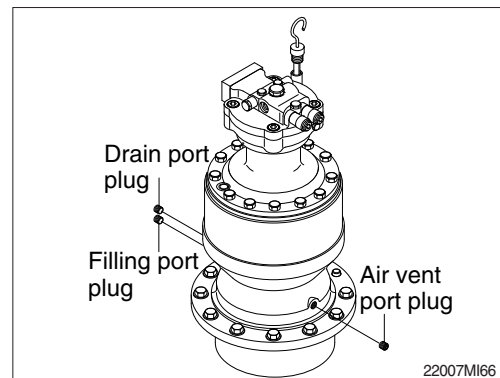

## 27) LUBRICATE SWING BEARING


- (1) Grease at 2 fitting.  
※ Lubricate every 250 hours.

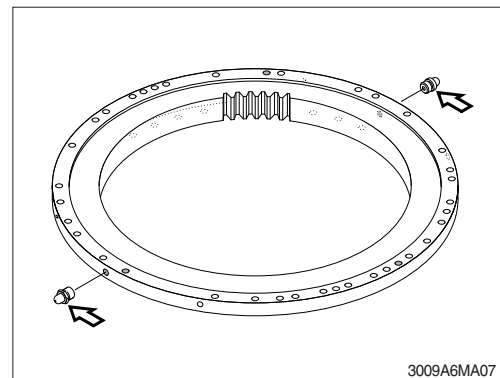

## 28) SWING GEAR AND PINION


### (1) Drain old grease

- ① Remove under cover of lower frame.
- ② Remove drain cover of lower frame.
- ③ Remove filler cover of upper frame.
- ④ Operate full turn (360°) of swing several times.

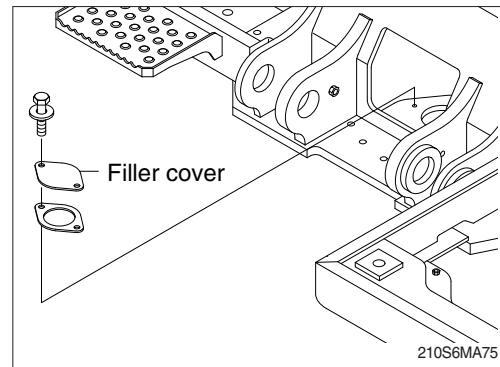


### (2) Refill new grease

- ① Install drain cover.
  - ② Fill with new grease.
  - ③ Install filler cover.
- Capacity : 7.9 kg (17.5 lb)

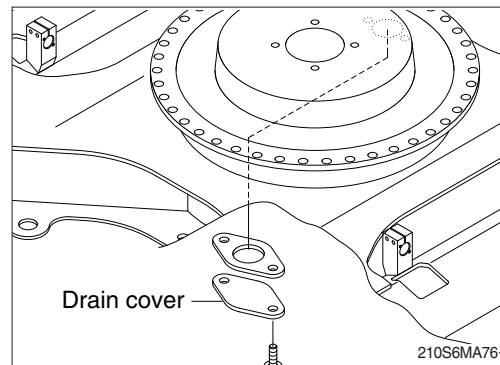


## 29) CHECK THE TRAVEL REDUCTION GEAR OIL

- (1) Operate the machine to the position of drain plug down to the flat ground.
- (2) Loosen the level plug and check the oil level.  
If the level is at the hole of the plug, it is normal.  
Fill the oil if it is not sufficient.

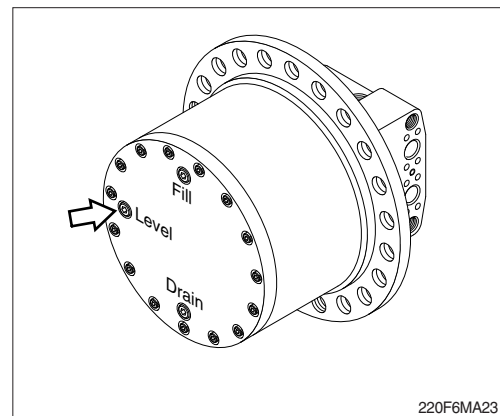


## 30) CHANGE OF THE TRAVEL REDUCTION GEAR OIL

- (1) Raise the temperature of the oil by traveling machine first.
- (2) Stop when the position of the drain plug is down.
- (3) Loosen the level plug and then the drain plug.
- (4) Drain the oil to adequate container.
- (5) Tighten the drain plug and fill specified amount of oil at filling port.
- (6) Tighten the level plug and travel slowly to check if there is any leakage of oil.

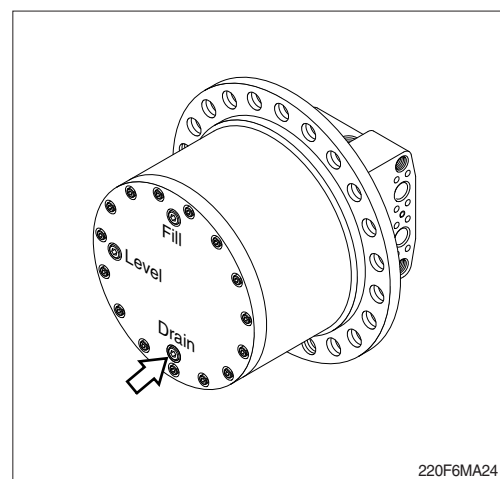

### 31) LUBRICATE RCV LEVER

Remove the bellows and with a grease gun grease the joint part (A) and sliding parts (B).

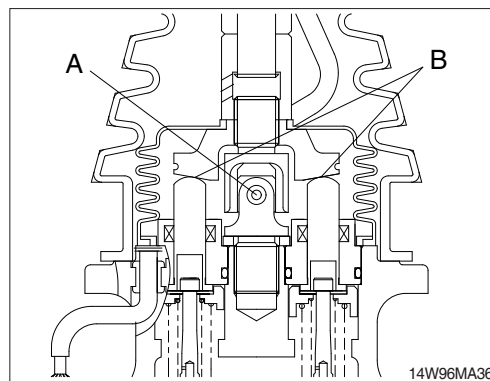

### 32) ADJUSTMENT OF TRACK TENSION

(Machine Serial No. : -#4560, #4880-#4922)

- ※ It is important to adjust the tension of track properly to extend the lifetime of track and traveling device.
- ※ The wear of pins and bushings on the undercarriage will vary with the working conditions and soil properties.  
It is thus necessary to continually inspect the track tension so as to maintain the standard tension on it.


- (1) Raise the chassis with the boom and arm.
- (2) Measure the distance between bottom of track frame on track center and back of shoe.
- ※ **Remove mud with rotating the track before measuring.**
- (3) If the tension is tight, drain the grease in the grease nipple and if the tension is loose, charge the grease.

▲ **Personal injury or death can result from grease under pressure.**

▲ **When loosening the grease nipple, do not loosen more than one turn as there is a danger of a spring coming out of the nipple because of the high pressure inside.**

- ※ **When the grease is drained, move the track to the forward and backward slightly.**

If the track tension is loose even after the grease is charged to the maximum, change the pins and bushings as there are worn seriously.

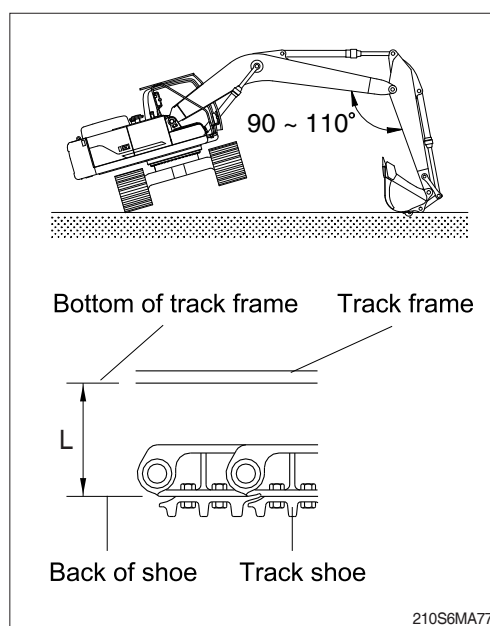

Length (L)	
300~330 mm	11.8~13"

### 32) ADJUSTMENT OF TRACK TENSION

(Machine Serial No. : #4561-#4879, #4923- )

▲ Serious injury or death can result from grease under pressure. Keep face, hands and body away from the fitting valve.

※ It is important to adjust the tension of track properly to extend the life of track and traveling components.

※ The wear of pins and bushings on the undercarriage will vary with the working conditions and soil properties.

It is thus necessary to continually inspect the track tension so as to maintain the standard tension on it.

(1) Raise the chassis with the boom and arm as shown in the illustration.

(2) Measure the distance between bottom of track frame on track center and back of shoe.

※ **Remove mud by rotating the track before measuring.**


(3) The track tension can be adjusted using the grease fitting valve (A) and handle screws (B) located in the center of each side frame. When you fill the grease fittings with grease, it increases the length of the adjustable cylinders. As the adjustable cylinders become longer, pressure builds up in the tension springs, causing them to expand beyond the track idlers.

(4) If the tracks and adjustment devices expand to the point where there is insufficient deflection or space between parts, turn the handle screw clockwise once or twice to release some of the grease. Once the track tension is suitable, tighten the handle screw in the counterclockwise direction.


· Valve tightening torque :  $7 \pm 1$  kgf·m ( $5.2 \pm 0.7$  lb·ft)

※ **Check the tension again after rotating the track 3~4 times.**

▲ After draining, if the handle screw can not be turned counterclockwise, the grease will continue to drain. Moreover, excessive counterclockwise turning may damage the screw's stopper. Rotate the handle screw by no more than one or two turns.

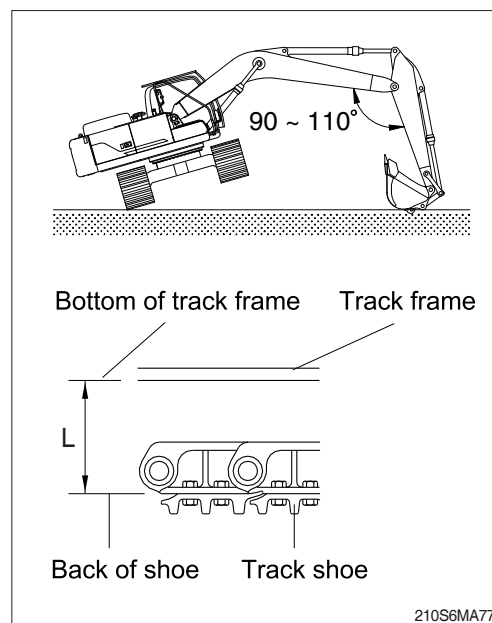

Length (L)	
300~330 mm	11.8~13"

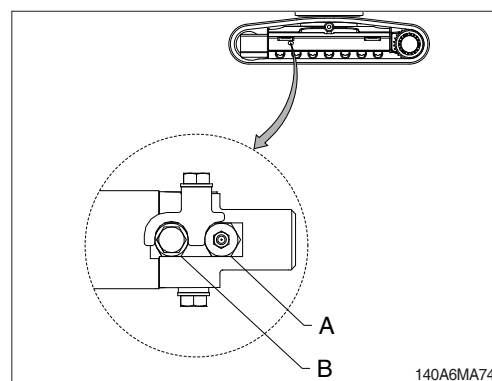

### 33) REPLACEMENT OF BUCKET

⚠ When knocking the pin in with a hammer, metal particles may fly and cause serious injury, particularly if they get into your eyes. When carrying out this operation, always wear goggles, helmet, gloves, and other protective equipment.

※ When the bucket is removed, place it in a stable condition.

※ When performing joint work, make sure signals to each other and work carefully for safety's sake.

(1) Lower the bucket on the ground as the picture shown in the right.

(2) Lock the safety knob to the LOCK position and stop the engine.

(3) Remove the stopper bolts (1) and nuts (2), then remove pins (3, 4) and remove the bucket.

※ When removing the pins, place the bucket so that it is in light contact with the ground.

※ If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.





※ After remove the pins, make sure that they do not become contaminated with sand or mud and that the seals of bushing on both sides do not become damaged.

(4) Align the arm with holes (A) and the link with holes (B), then coat with grease and install pins (3, 4)

※ When installing the bucket, the O-rings are easily damaged, so fit the O-rings on the boss of the bucket as shown in the picture.

After knocking the pin, move the O-ring down to the regular groove.


(5) Install the stopper bolt (1) and nuts (2) for each pin, then grease the pin.

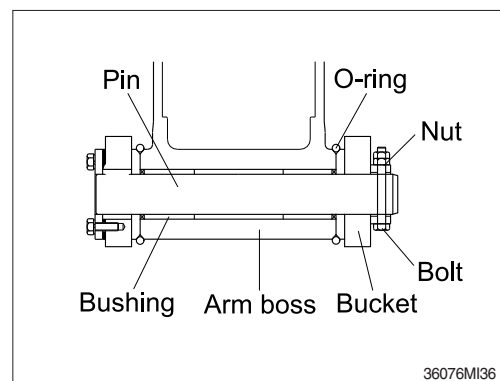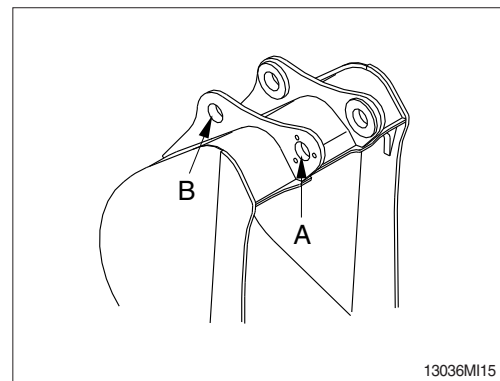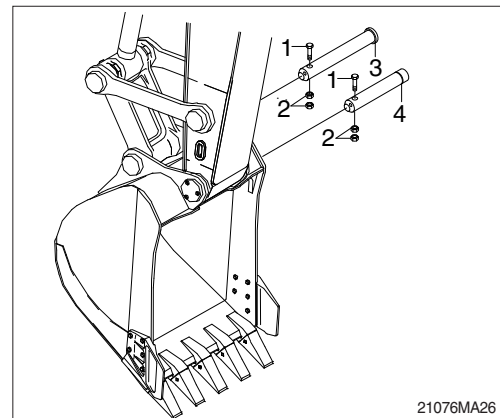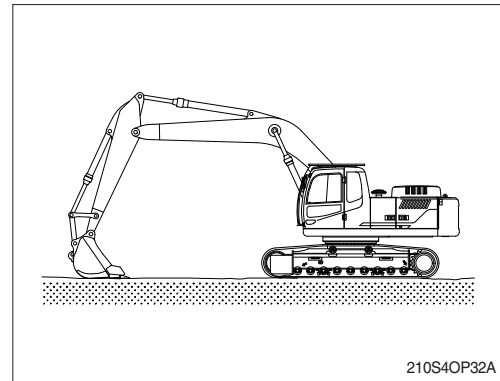

### 34) REPLACEMENT OF BUCKET TOOTH

#### (1) Timing of replacement


- ① Check wearing condition as shown in the illustration and replace tooth point before adapter starts to wear.
- ② If excessive use, tooth adapter has worn out, replacement may become impossible.

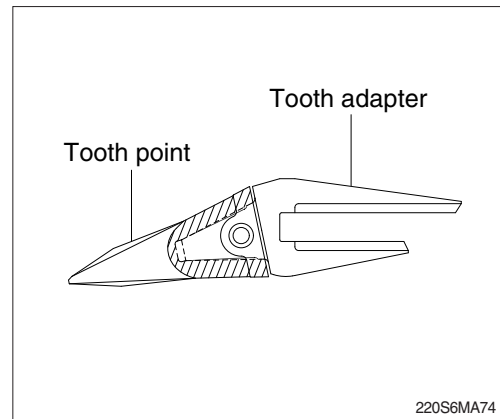

#### (2) Instructions for replacement

- ① Pull out pin by striking pin with punch or hammer, avoiding damage to lock washer.
- ② Remove dust and mud from surface of tooth adapter by using knife.
- ③ Place lock washer in its proper place, and fit tooth point to adapter.
- ④ Insert pin until lock washer is positioned at tooth pin groove.

- ▲ Personal injury can result from bucket falling.
- ▲ Block the bucket before changing tooth points or side cutters.

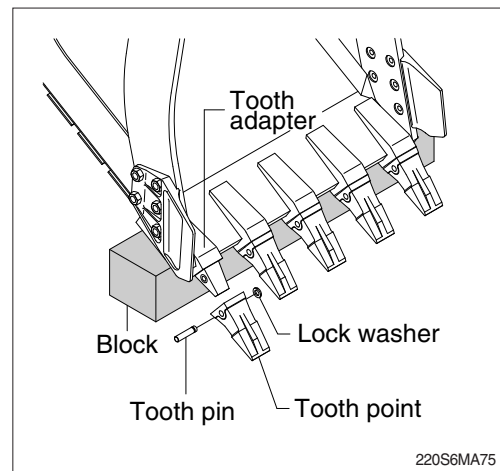


### 35) ADJUSTMENT OF BUCKET CLEARANCE

- (1) Lower the bucket on the ground as the picture shown in the right.
- (2) Swing to the right and keep the arm boss to be contact to the bucket left.
- (3) Lock the safety knob to the LOCK position and stop the engine.
- (4) Measure the clearance (A) between bucket and arm boss. This is the total clearance.

#### (5) Adjusting

- ① Loosen bolt (2), and remove washer (3), plate (1) and shim (4).
- ② Remove the shim equivalent value with measuring value.
- ③ Assemble the parts in the reverse order of removal.
  - Tightening torque :  $29.6 \pm 3.2 \text{ kgf} \cdot \text{m}$   
( $214.0 \pm 23.1 \text{ lbf} \cdot \text{ft}$ )
  - Normal clearance :  $0.5 \sim 1.0 \text{ mm}$   
( $0.02 \sim 0.04 \text{ in}$ )

※ If the bucket is not adjusted correctly, noise and vibration created during operation, and damaged O-ring, pin and bushing quickly.

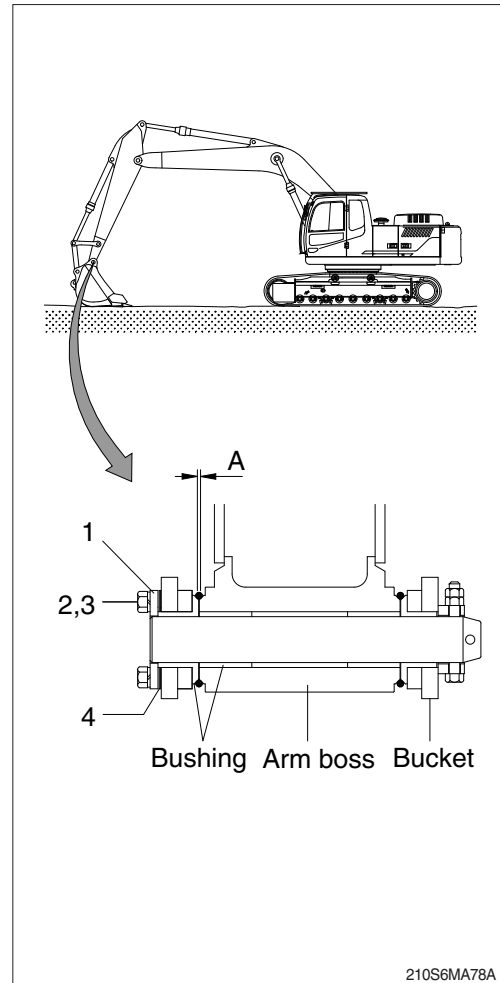

### 36) LUBRICATE PIN AND BUSHING

#### (1) Lubricate to each pin of working device

Lubricate the grease to the grease nipple according to the lubricating interval.

No.	Description	Qty
1	Lubrication manifold at boom	5
2	Boom cylinder pin (head)	2
3	Lubrication manifold at arm	3
4	Bucket cylinder pin (rod)	1
	Bucket link (control rod)	2
	Arm and bucket connection pin	1
	Bucket and control rod connection pin	1
	Arm and control link connection pin	1
5	Boom rear bearing center ★	1

※ Shorten lubricating interval when working in water or dusty places.




★ Not required : If necessary, lubricate the grease.

(2) Dust seals are mounted on the rotating part of working device to extend the lubricating interval.

※ Mount the lip to be faced outside when replace the dust seal.

※ If it is assembled in wrong direction, it will cause fast wear of pin and bushing, and create noise and vibration during operation.


※ Assemble the seal same direction with picture and use with plastic hammer when replace.

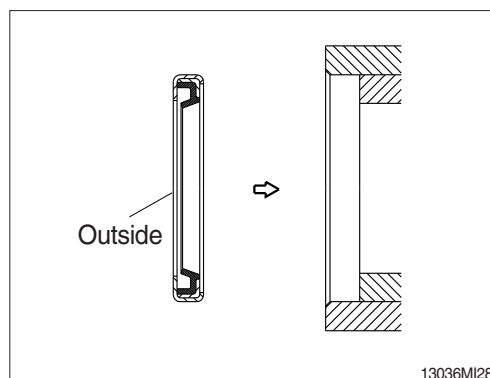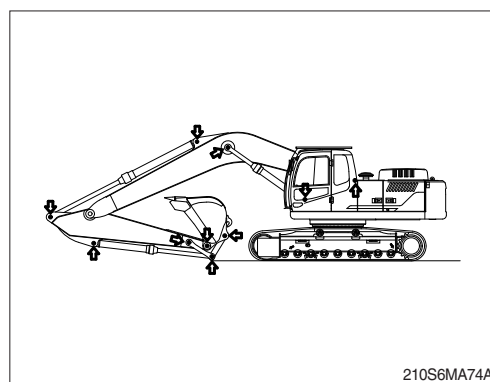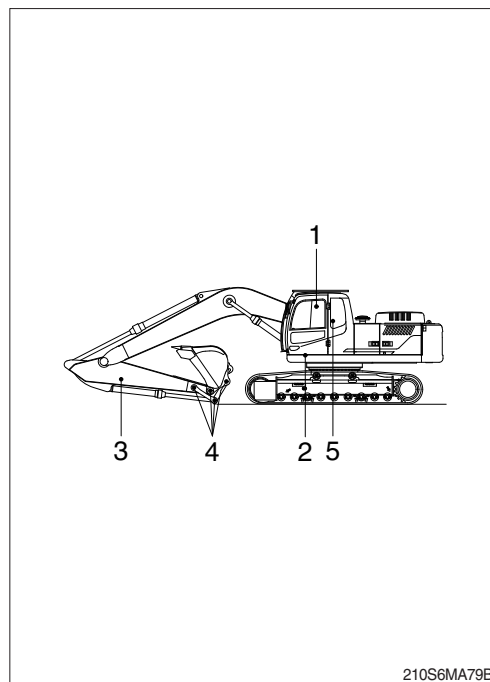

## 7. ELECTRICAL SYSTEM

### 1) WIRING, GAUGES

Check regularly and repair loose or malfunctioning gauges when found.

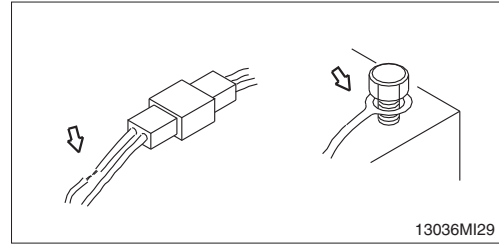

### 2) BATTERY

#### (1) Check and repair


- ① Check the electrolyte level and fill with distilled water to the prescribed level as necessary.
- ② Wash the terminal with hot water if it is contaminated, and apply grease to the terminals after washing.

**⚠ Do not stain clothes or skin with electrolyte as it is acid.**

**Be careful not to get the electrolyte in eyes.**

**Wash with clean water and go to the doctor if it enters the eyes.**

**※ Remove the fire and spark around battery.**

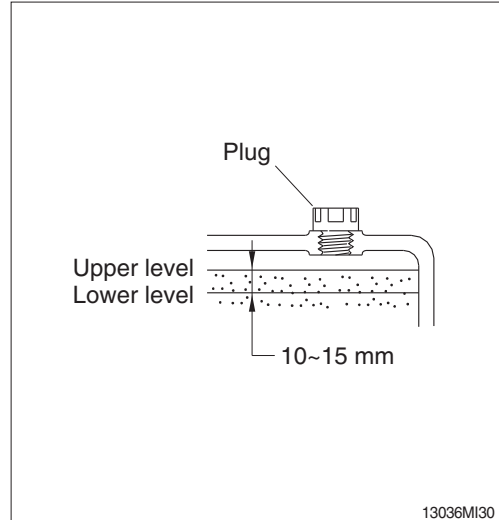


#### (2) Specific gravity of battery

Judge the charging rate of battery by the specific gravity. The specific gravity changes by the ambient temperature.


Check the charging rate by referring to the chart below.

Temperature Charging rate	20°C (68°F)	10°C (50°F)	-10°C (14°F)
100%	1.26	1.27	1.28
90%	1.24	1.25	1.26
80%	1.22	1.23	1.24
75%	1.21	1.22	1.23

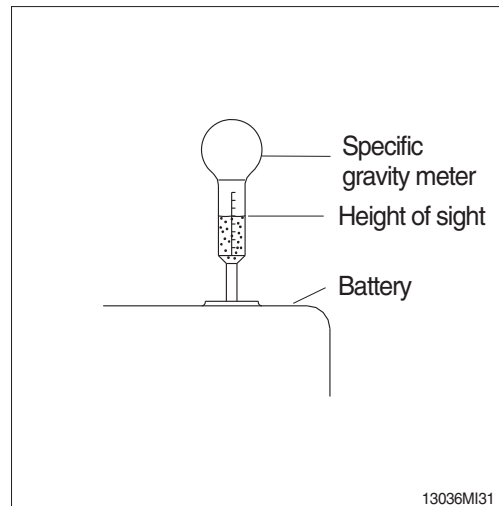

#### (3) Method of removing the battery cable

Remove the cable from the ground connection first (⊖ terminal side) and reconnect it last when reassembling.

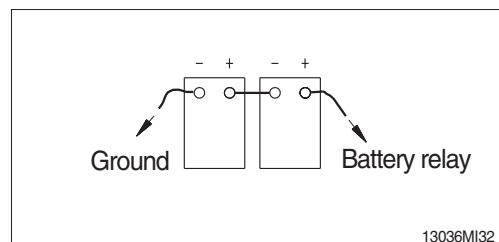

### 3) STARTING THE ENGINE WITH A BOOSTER CABLE


Keep following order when you are going to start engine using booster cable.

#### (1) Connection of booster cable

※ **Use the same capacity of battery for starting.**


- ① Make sure that the starting switches of the normal machine and trouble machine are both at the OFF position.
- ② Connect the red terminal of booster cable to the battery (+) terminal between exhausted and new battery.
- ③ Connect the black terminal of the booster cable between new battery (-) terminal and chassis of trouble machine.

※ **Keep firmly all connection, the spark will be caused when connecting finally.**

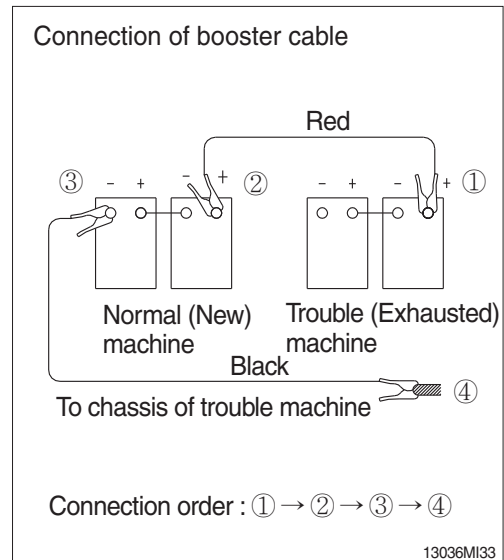

#### (2) Starting the engine

- ① Starting the engine of the normal machine and keep it to run at high idle.
- ② Start engine of the trouble machine with starting switch.
- ③ If you can not start it by one time, restart the engine after 2 minutes.

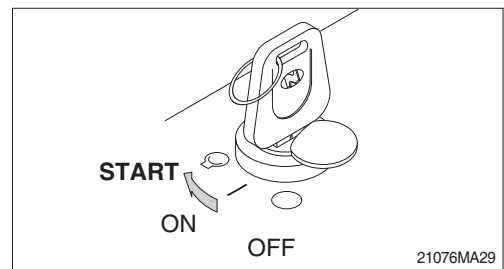

#### (3) Taking off the booster cable


- ① Take off the booster cable (black).
- ② Take off the booster cable (red) connected to the (+) terminal.
- ③ Run engine with high idle until charging the exhausted battery by alternator, fully.

▲ **Explosive gas is generated while using the battery or charging it. Keep away flame and be careful not to cause the spark.**

※ **Charge the battery in the well ventilated place.**

※ **Place the machine on the earth or concrete. Avoid charging the machine on the steel plate.**


※ **Do not connect (+) terminal and (-) terminal when connecting booster cable because it will be shorted.**

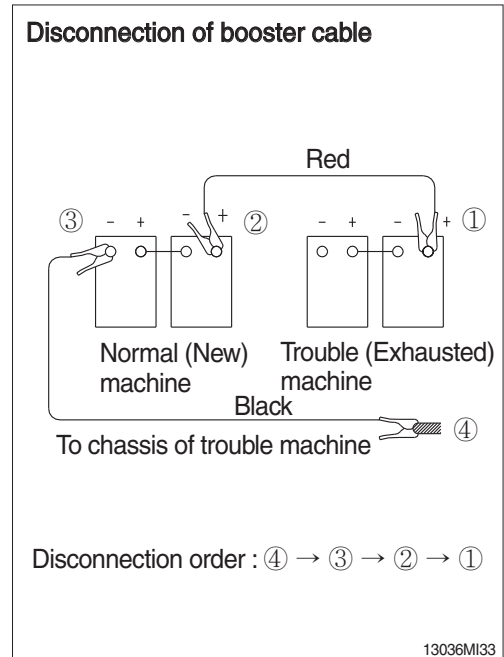

#### (4) Welding repair

Before start to welding, follow the below procedure.

- ① Shut off the engine and remove the starting switch.
  - ② Disconnect ground cable from battery by master switch.
  - ③ Before carrying out any electric welding on the machine, the battery cables should be disconnected and the connectors pulled out of the electronic control units (MCU, cluster etc).
  - ④ Connect the earth (ground) lead of the welding equipment as close to the welding point as possible.
- ※ Do not weld or flame cut on pipes or tubes that contain flammable fluids. Clean them thoroughly with nonflammable solvent before welding or flame cutting on them.
- ▲ Do not attempt to welding work before carry out the above.  
If not, it will caused serious damage at electric system.

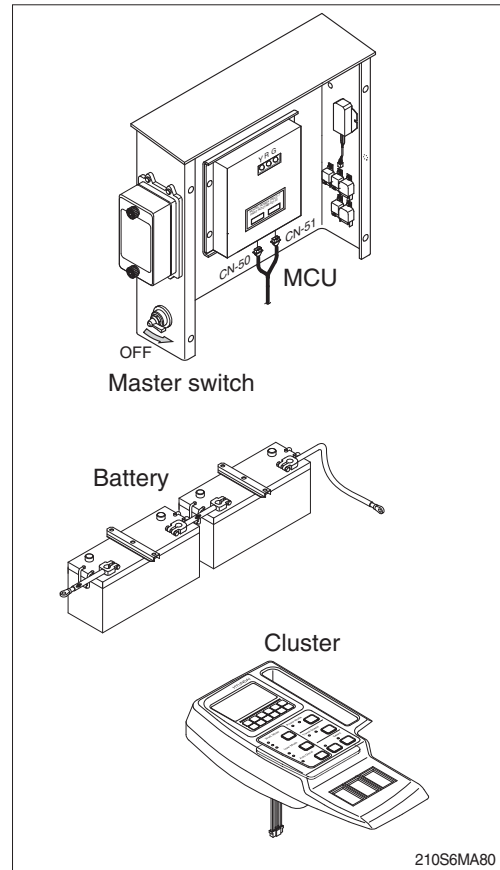


## 8. AIR CONDITIONER AND HEATER

### 1) CLEAN AND REPLACE OF FRESH AIR FILTER


※ **Always stop the engine before servicing.**

- (1) Move seat and console box to arrow direction using the adjust lever.

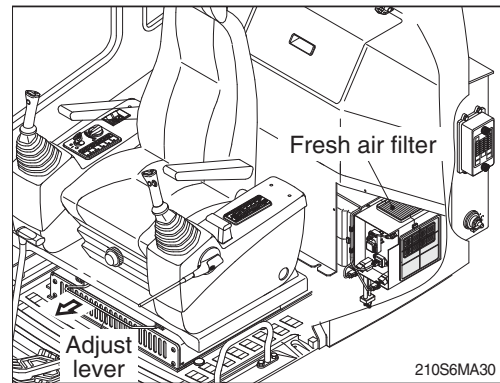

- (2) Remove the fresh air filter.


※ **When installing a filter, be careful not to change the filter direction.**

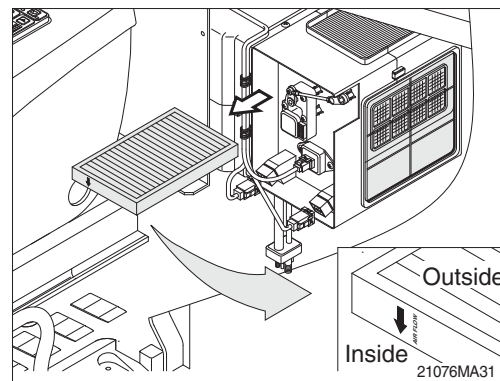

- (3) Clean the filter using a pressurized air (Below 2 kgf/cm<sup>2</sup>, 28 psi).

△ **When using pressurized air, be sure to wear safety glasses.**


- (4) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

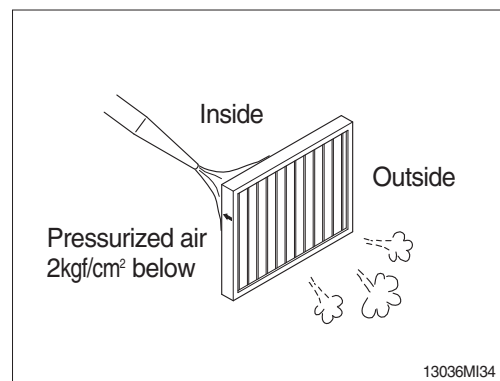


### 2) CLEAN AND REPLACE OF RECIRCULATION FILTER

※ **Always stop the engine before servicing.**

- (1) Move seat and console box to arrow direction using the adjust lever.

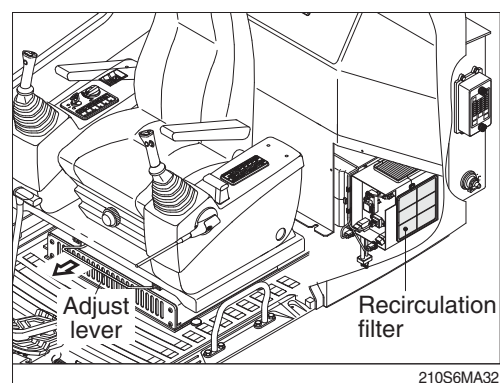

(2) Remove recirculation filter

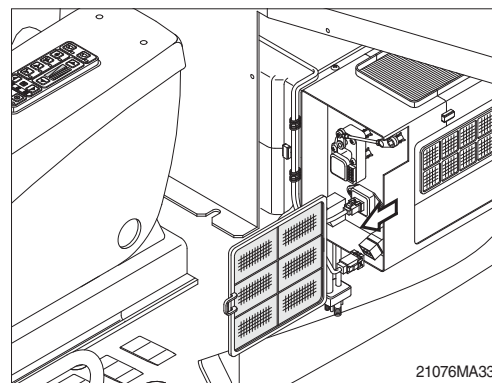


(3) Clean the recirculation filter using a pressurized air (below 2 kgf/cm<sup>2</sup>, 28 psi) or washing with water.

△ **When using pressurized air, be sure to wear safety glasses.**

※ **Dry off after washing with water.**

(4) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

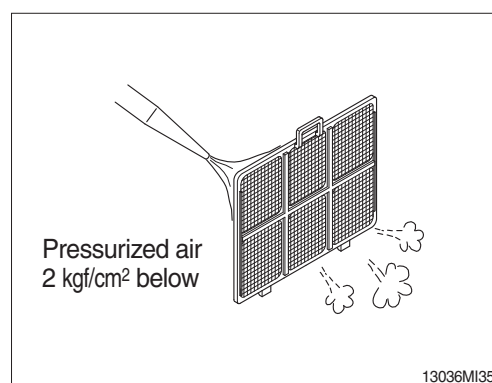

### 3) PRECAUTIONS FOR USING AIR CONDITIONER

- (1) When using the air conditioner for a long time, open the window once every one hour.
- (2) Be careful not to overcool the cab.
- (3) The cab is properly cooled if the operator feels cool when entering there from outside (about 5°C lower than the outside temperature).
- (4) When cooling, change air occasionally.

### 4) CHECK DURING SEASON

Ask the service center for replenishment of refrigerant or other maintenance service so that the cooling performance is not damaged.

### 5) CHECK DURING OFF-SEASON

Operate the air conditioner 2 or 3 times a month (each for a few minutes) to avoid loss of oil film in the compressor.

# TROUBLESHOOTING GUIDE

## 1. ENGINE

This guide is not intended to cover every conditions, however many of the more common possibilities are listed.

Trouble	Service	Remark
The engine oil pressure lamp lights ON when engine speed is raised after completion of warm up.	<ul style="list-style-type: none"> <li>· Add the oil to the specified level.</li> <li>· Replace the oil filter cartridge.</li> <li>· Check oil leakage from the pipe or the joint.</li> <li>· Replace the monitor.</li> </ul>	
Steam is emitted from the top part of the radiator (the pressure valve). Coolant level warning lamp lights ON.	<ul style="list-style-type: none"> <li>· Supply the coolant and check leakage.</li> <li>· Adjust fan belt tension.</li> <li>· Wash out inside of cooling system.</li> <li>· Clean or repair the radiator fin.</li> <li>· Check the thermostat.</li> <li>· Tighten the radiator cap firmly or replace the packing of it.</li> <li>· Replace the monitor.</li> </ul>	
The engine does not start when the starting motor is turned over.	<ul style="list-style-type: none"> <li>· Add fuel.</li> <li>· Repair where air is leaking into fuel system.</li> <li>· Check the injection pump or the nozzle.</li> <li>· Check the valve clearance.</li> <li>· Check engine compression pressure.</li> <li>· In cold weather, check if fuel warmer system is working normal (opt).</li> </ul>	Refer to the pages 3-13 and 4-4.
Exhaust gas is white or blue.	<ul style="list-style-type: none"> <li>· Adjust to specified oil quantity.</li> <li>· Replace with specified fuel.</li> </ul>	
Exhaust gas occasionally turns black.	<ul style="list-style-type: none"> <li>· Clean or replace the air cleaner element.</li> <li>· Check the nozzle.</li> <li>· Check engine compression pressure.</li> <li>· Clean or replace the turbocharger.</li> </ul>	
Combustion noise occasionally changes to breathing sound.	<ul style="list-style-type: none"> <li>· Check the nozzle.</li> </ul>	
Unusual combustion noise or mechanical noise.	<ul style="list-style-type: none"> <li>· Check with specified fuel.</li> <li>· Check over-heating</li> <li>· Replace the muffler.</li> <li>· Adjust valve clearance.</li> </ul>	

## 2. ELECTRICAL SYSTEM

Trouble	Service	Remark
Lamp does not glow brightly even when engine runs at high speed. Lamp flickers while engine runs.	<ul style="list-style-type: none"> <li>· Check for loose terminals and open-circuit wiring.</li> <li>· Adjust belt tension.</li> </ul>	
Battery charging lamp does not go out even when engine runs at high speed.	<ul style="list-style-type: none"> <li>· Check the alternator.</li> <li>· Check and repair wiring.</li> </ul>	
Unusual noise is emitted from the alternator.	<ul style="list-style-type: none"> <li>· Check the alternator.</li> </ul>	
Starting motor does not turn when starting switch is turned ON.	<ul style="list-style-type: none"> <li>· Check and repair the wiring.</li> <li>· Charge the battery.</li> <li>· Check the starting motor.</li> <li>· Check the safety relay.</li> </ul>	
The pinion of the starting motor keeps going in and out.	<ul style="list-style-type: none"> <li>· Charge the battery.</li> <li>· Check the safety relay.</li> </ul>	
Starting motor turns the engine sluggishly.	<ul style="list-style-type: none"> <li>· Charge the battery.</li> <li>· Check the starting motor.</li> </ul>	
The starting motor disengages before the engine starts up.	<ul style="list-style-type: none"> <li>· Check and repair the wiring.</li> <li>· Charge the battery.</li> </ul>	
The engine warming up lamp does not go ON.	<ul style="list-style-type: none"> <li>· Check and repair wiring.</li> <li>· Check the monitor.</li> </ul>	
The engine oil pressure lamp does not light up when engine is stationary (When the starting switch is in ON position.)	<ul style="list-style-type: none"> <li>· Check the monitor.</li> <li>· Check the caution lamp switch.</li> </ul>	
Battery charging lamp does not light up when the engine is stationary. (when the starting switch is in ON position.)	<ul style="list-style-type: none"> <li>· Check the monitor.</li> <li>· Check and repair the wiring.</li> </ul>	

### 3. OTHERS

Trouble	Service	Remark
Track slip out of place. Excessive wear of the sprocket.	<ul style="list-style-type: none"> <li>Adjust tension of track.</li> </ul>	
Bucket either rises slowly or not at all.	<ul style="list-style-type: none"> <li>Add oil to specified level.</li> </ul>	
Slow speed of travel, swing, boom, arm and bucket.	<ul style="list-style-type: none"> <li>Add oil to specified level.</li> </ul>	
Unusual noise emitted from pump.	<ul style="list-style-type: none"> <li>Clean the hydraulic tank strainer.</li> </ul>	
Excessive oil temperature rise of hydraulic oil.	<ul style="list-style-type: none"> <li>Clean the oil cooler.</li> <li>Adjust fan belt tension.</li> <li>Add oil to specified level.</li> </ul>	

# HYDRAULIC BREAKER AND QUICK CLAMP

## 1. SELECTING HYDRAULIC BREAKER

- ※ Read safety hints in this manual and breaker & quick coupler manuals in website (Dealer Portal) before using breaker and quick coupler.
- 1) Become familiar with the manual and select breakers suitable to machine specifications.
- 2) Make careful selection in consideration of oil quantity, pressure and striking force, to enable satisfied performance.
- 3) When apply a breaker to the machine, consult your local dealer of HD Hyundai Construction Equipment for further explanation.

## 2. CIRCUIT CONFIGURATION

- 1) As for breaker oil pressure line, use extra spool of main control valve.
- 2) Set proper breaker pressure on load relief valve.
- 3) The pressure of the HX210S, HX220S system is 330 kgf/cm<sup>2</sup> (4700 psi).

### 4) Adjusting oil quantity

- (1) Use the breaker mode from work mode. Default oil flow quantity is 185 lpm at 2100 rpm. Use accel dial switch to control the oil flow quantity.
- (2) If the quantity of hydraulic oil is not controlled properly, it causes short lifecycle of the breaker and the machine by increased breaking force and count.

Oil quantity according to engine rpm

Engine rpm	Oil flow ℓ/min	Oil flow U.S.gpm
2000	176	46.5
1900	168	44.4
1800	159	42.0
1700	150	39.6

※ Relief pressure : 200 kgf/cm<sup>2</sup>

- 5) The accumulator should be used to the breaker charging and return line.  
If the accumulator is not used, it will be damage as the input wave is delivered.  
※ **Keep the pressure pulsation of pump below 60 kgf/cm<sup>2</sup> (853 psi) by installing the accumulator.**
- 6) Do not connect the breaker return line to the main control, but connect to the return line front of the cooler.
- 7) Do not connect the breaker return line to drain lines, such as of swing motor, travel motor or pump, otherwise they should be damaged.
- 8) One of spool of the main control valve should be connected to the tank.
- 9) Select the size of pipe laying considering the back pressure.
- 10) Shimless tube should be used for the piping. The hose and seal should be used HD Hyundai Construction Equipment genuine parts.
- 11) Weld the bracket for pipe clamp to prevent damage caused by vibration.

### 3. MAINTENANCE

1)

#### MAINTENANCE OF HYDRAULIC OIL AND FILTER

(1)

As machine with an hydraulic breaker provides the hydraulic oil becomes severely contaminated.

(2)

(3) So, unless frequently maintained, the machine may easily go out of order.

Inspect and maintain hydraulic oil and 3 kinds of filter elements in particular, in order to prolong machine life.

#### RELEASE THE PRESSURE IN BREAKER CIRCUIT

When breaker operating is finished, stop engine and push pedal or switch for breaker to release pressure in breaker circuit.

If 3) pressure still remains, the lifetime of the diaphragm in the accumulator will be shortened.

Be careful to prevent contamination by dust, sand and etc.

If 4) such pollution become mixed into the oil, the pump moving parts will wear abnormally, shorten lifetime and become damaged.

When operating breaker, bolts and nuts of main equipment may be loosened by vibration. So, it must be inspected periodically.

Service interval

unit : hours

Attachment	Operating rate	Hydraulic oil	Filter element
Breaker	100 %	600* <sup>1</sup>	200
		1000* <sup>2</sup>	


\*<sup>1</sup>: Conventional hydraulic oil

\*<sup>2</sup>: HD Hyundai Construction Equipment genuine long life hydraulic oil

#### ● Replace following filter same time

- Hydraulic return filter : 1 EA
- Pilot line filter : 1 EA
- Drain filter cartridge : 1 EA

Filter replace guide for hydraulic breaker

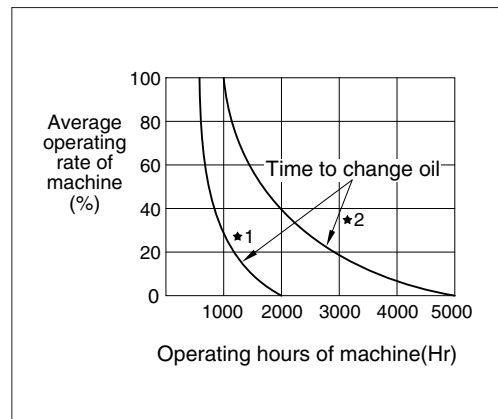

\*<sup>1</sup>: Conventional hydraulic oil


\*<sup>2</sup>: HD Hyundai Construction Equipment genuine long life hydraulic oil

## 4. PRECAUTIONS WHILE OPERATING THE BREAKER

### DO NOT BREAK ROCK WHILE LOWERING


As the breaker is heavy in comparison with bucket, it must be operated slowly.

If breaker is rapidly pushed down, working device may be damaged.

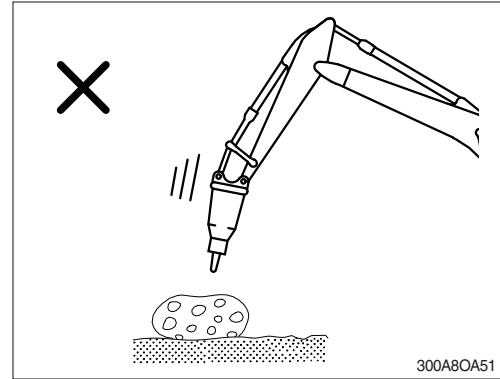

### DIRECTION OF THRUST


Apply a thrust in a straight line with the tool. Place the tool on a rock with the hammering side as vertically as possible. If the hammering side is oblique, the tool may slip during hammering, causing the chisel and piston to break, or seized. When breaking, select the point of a rock on which hammering can perform stably and fully stabilize the chisel to the hammer.

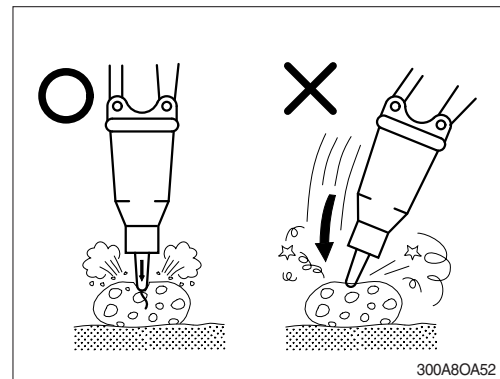

### PROPER THRUST


To break effectively, a proper thrust force must be applied to the breaker. If thrust is too low, impact energy of the piston may not be sufficient to break rocks.

Breaking force is transferred to the breaker body, arm and boom resulting in damage of those parts.

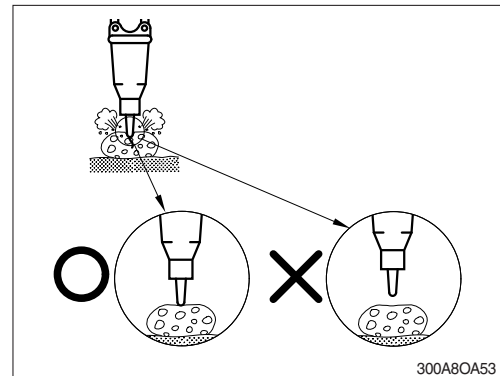


Move the impact point from the edge to the interior. Never try to break off a too large block, if the object has not broken within 30 seconds. The object should be broken up piece by piece in small blocks. Large distance steps will not improve working results.

Operating the breaker longer than 30 seconds may cause damage to the breaker.

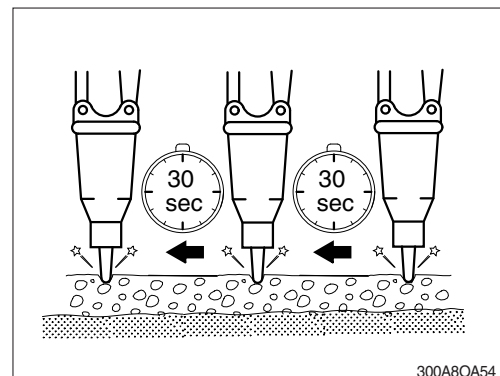

### BLANKS THRUST


Blank blows, which are impact on the chisel without contact with the object, are very harmful for the breaker. Always press the chisel down onto the material before starting the breaker. And stop operation immediately as soon as the object has been broken. If operation is continued, blank blows could result in excessive wear to major components.

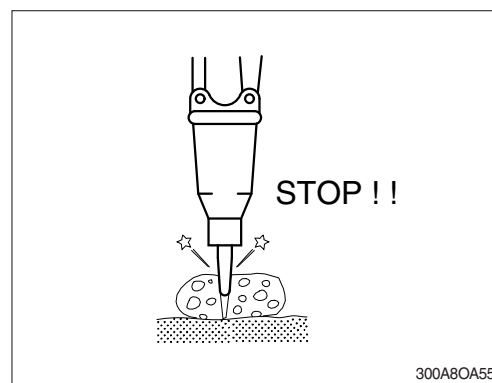

### DO NOT MOVE MACHINE OR BREAKER WHILE STRIKING


Do not move hammer while striking.

This will cause damage to the working device and the swing system.

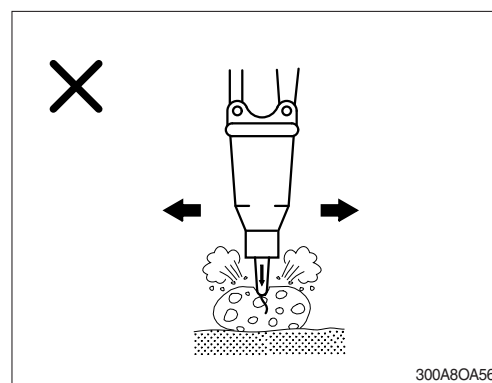


### OPERATE BREAKER WITH A GAP IN EXCESS OF 100 mm (4 inches) FROM THE END OF THE STROKE TIP

If breaker is operated with the end tip, the cylinder may be damaged.

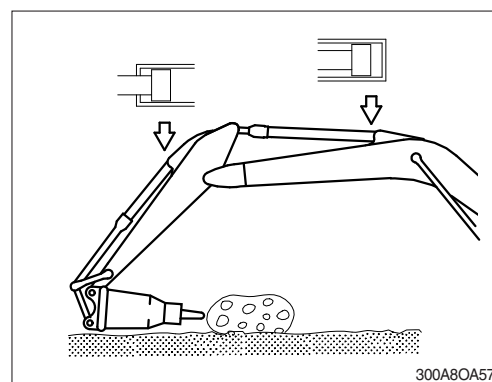


### STOP THE OPERATION IMMEDIATELY IF HOSES VIBRATE EXCESSIVELY

Violent pulsations of the high / low pressure breaker hoses could indicate an accumulator fault. Check for oil leaks at the hose fitting points retightening as necessary. Should symptoms persist, contact the service shop appointed by the Hyundai dealer in your territory for repair. An excessive gap between tool and workpiece between strikes may indicate seizure of the tool in the front head. Disassemble the front head, inspect the components and repair or replace defective parts.

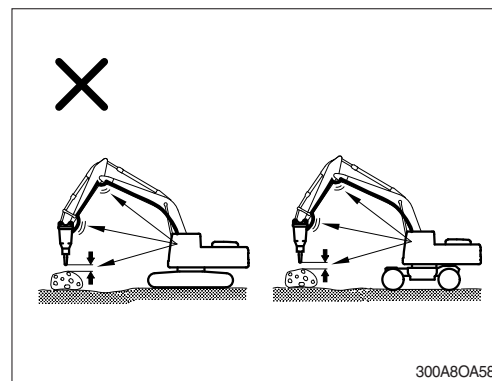


### DO NOT WORK WHILE IN A SWING STATE


Do not work while swinging the upper structure. It cause oil leakage of the bend in the track shoe and rollers.

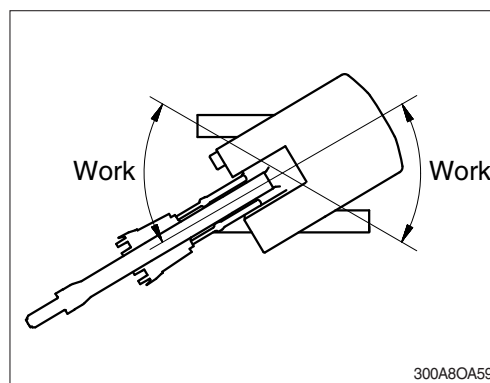

Conversely, if thrust is excessive or breaking is performed with boom of the lower chassis raised as shown, the machine may suddenly tip toward the movement. The breaker body may strike the broken rocks violently resulting in damage.

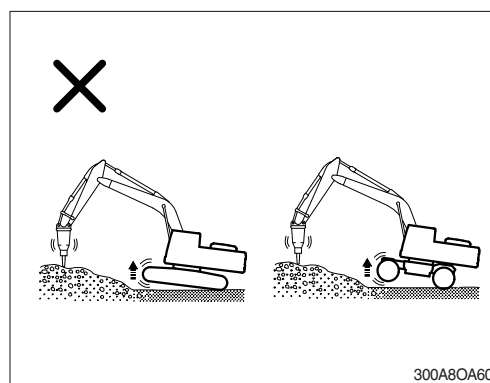


Do not extend the bucket cylinder fully and thrusting to raise the machine off the ground.

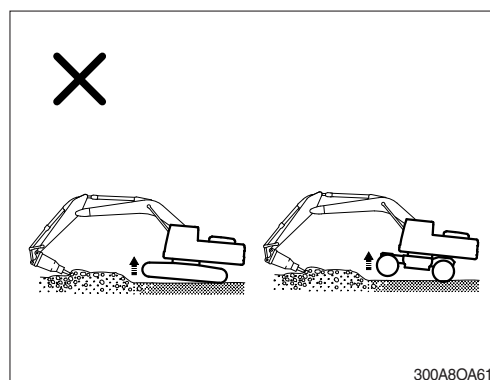

Excessive force as above may also result in vibrations being transmitted to the tracks causing damage.

Care is required to ensure adequate but not excessive force is applied to the breaker in operation.

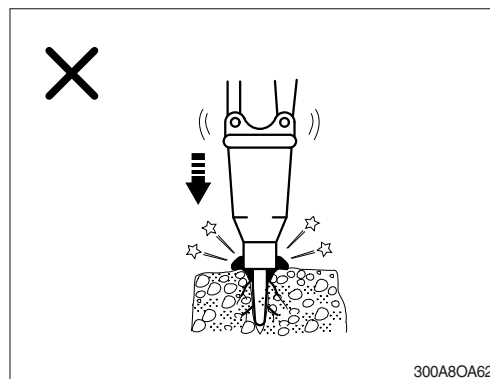


## NEVER DRIVE THE CHISEL INTO THE GROUND

If the advance is too large and the chisel is not rocked to release the dust, the chisel will be driven into the material without breaking the material. This causes the chisel tip to glow red-hot and lose its hardness.

As a result, the chisel wears out more quickly. Operating in this way is not permitted.

Dust dampens impact power, when the chisel is inserted into the ground, and reduces the efficiency of the breaker. Tilt the breaker slightly backward and forward, not more than  $5^{\circ}$ , while operating so that the dust can escape.

Do not rock the breaker at angles greater than  $5^{\circ}$  or the chisel will be broken.

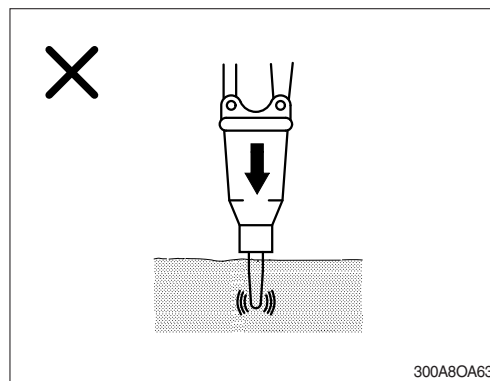


## NEVER USE AS A LEVER

Do not use the chisel as a lever; e.g. crowbar, as this will cause the chisel to break.


Under any circumstances, operating in this way is not permitted.

Most of bending failure of the chisel may be caused by lever action in stone that is inside hard or frozen ground. Be careful and stop operating if you feel sudden resistance under the chisel.

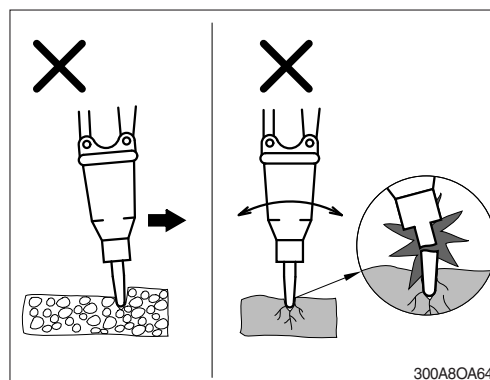

## TAKE CARE OF CHISEL AND BOOM INTERFACE


Be aware of clearance between breaker tip and the underside of boom as shown.

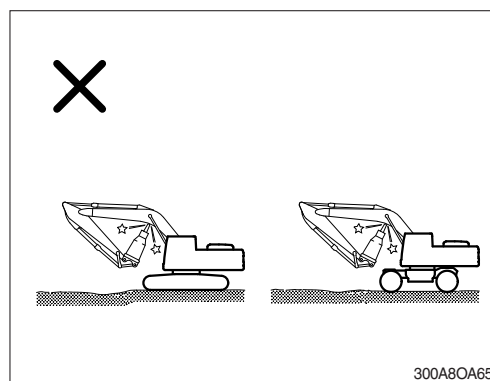

### **NEVER USE FOR LIFT OR TRANSPORT PURPOSES**


The hydraulic breaker is not designed to lift or transport loads. Never use the chisel as a lifting point.

This is dangerous and could damage the breaker or the chisel.

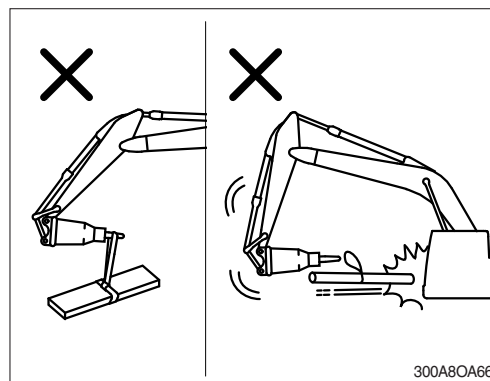


### **NEVER USE THE HYDRAULIC BREAKER UNDER WATER**

The hydraulic breaker, as a standard assembly, never be used in or under water without prior conversion. If you use under water, water fills the impact chamber between the piston and the chisel, a strong hydraulic pressure wave is generated and will damage the seals in the breaker. And, in addition, corrosion, lack of lubrication or penetration of water could result in further damage to components of the breaker and the lower chassis. To operate the breaker under water, compressed air must be supplied into the breaker, into the impact chamber of the front-head, prior to use. Consult your HD Hyundai Construction Equipment dealer for the underwater kit.

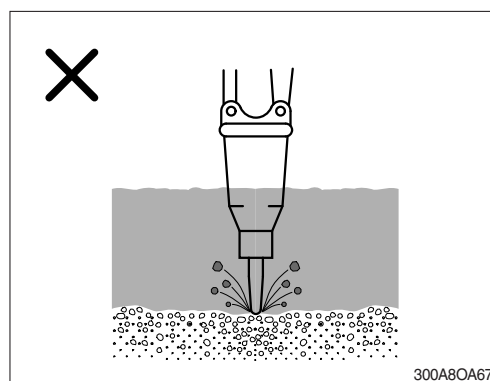

### **DO NOT USE BREAKER TO CARRY BROKEN STONE OR ROCK BY SWING OPERATING**

This may damage the operation device and swing system.

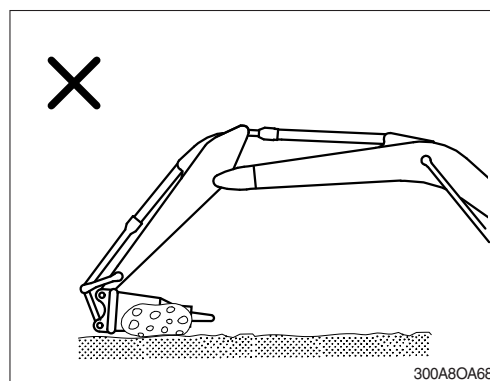


**NEVER USE THE CHISEL OR HYDRAULIC BREAKER TO MOVE ROCKS OR OTHER OBJECTS**

The hydraulic breaker is not designed for this usage.

Do not use the breaker or chisel to roll, push the object or reposition the lower chassis.


This may cause damage to the breaker and the lower chassis.

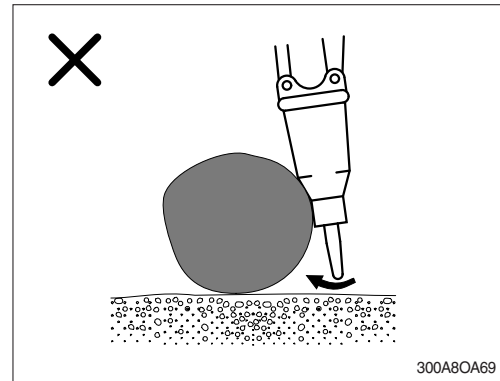


## 5. QUICK CLAMP

### 1) FIXING BUCKET WITH QUICK CLAMP


- (1) Before fixing bucket, remove safety pin of the moving hook.
- (2) Pulling safety button, press the quick clamp switch to unlock position. Then, the moving hook is placed on release position.

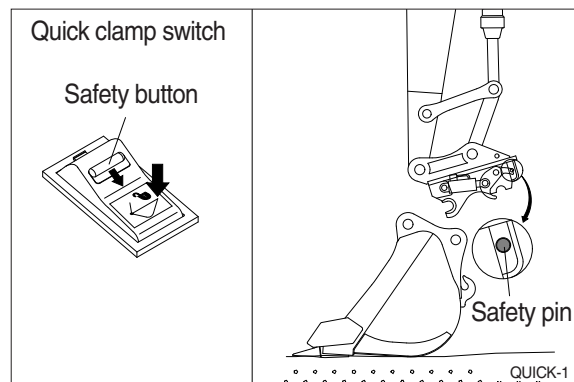


- (3) Aligning the arm and bucket, insert static hook of quick clamp to the bucket pin.

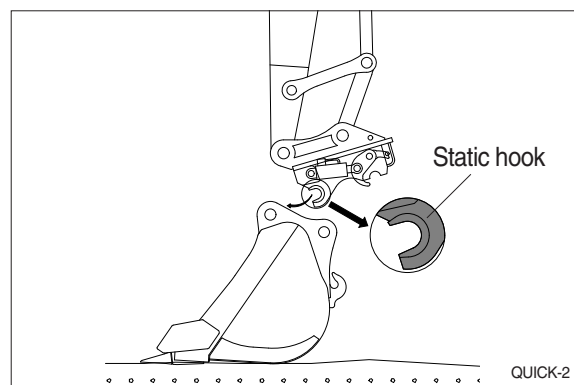


- (4) Operate RCV lever to bucket-in position. Then, the moving hook is coupled with the bucket link pin. Make sure that the moving hook is completely contacted with bucket link pin.

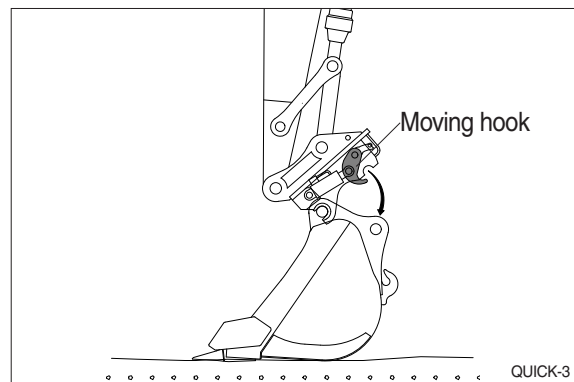

- (5) Push safety button to lock position. Operate RCV lever to bucket-in position.
- ※ **Be sure to check connection status between bucket pins and hooks of quick clamp.**

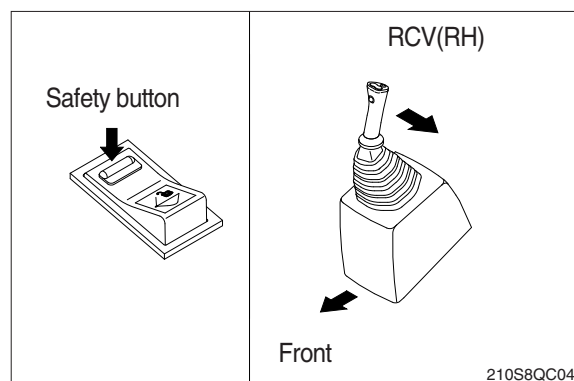

- (6) After checking the connection status between bucket pins and hooks of quick clamp, **insert safety pin of moving hook to lock position.**

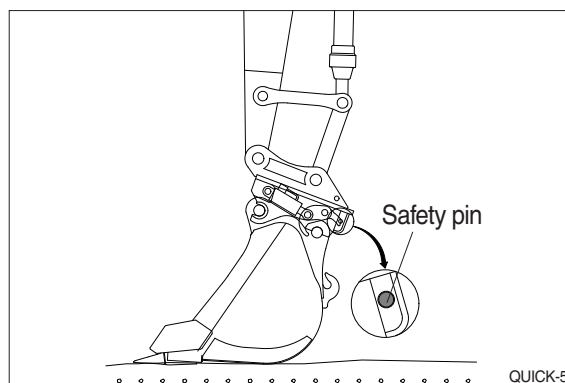

## 2) REMOVE BUCKET FROM QUICK CLAMP

Removing procedure is reverse of fixing.

## 3) PRECAUTION OF USING QUICK CLAMP



- ⚠ When operating the machine with quick clamp, confirm that the quick clamp switch is lock position and safety pin of moving hook is inserted.

Operating the machine with quick clamp switch unlocked and without safety pin of moving hook can cause the bucket to drop off and bring about the accident.

- ⚠ Serious injury or death can result from this accident.

- ⚠ Be careful to operate the machine equipped with quick clamp. The bucket may hit cab, boom and boom cylinders when it reaches vicinity of them.

- ※ HD Hyundai Construction Equipment will not be responsible for any injury or damage in case that safety pin is not installed properly.

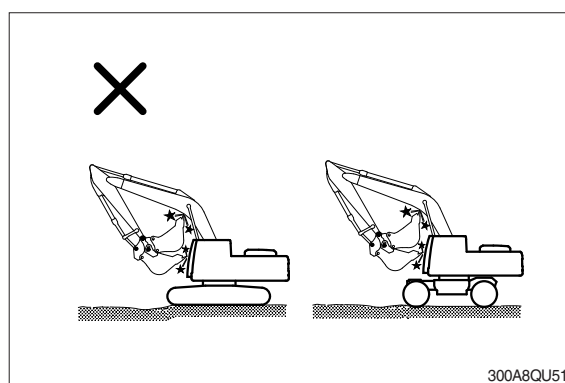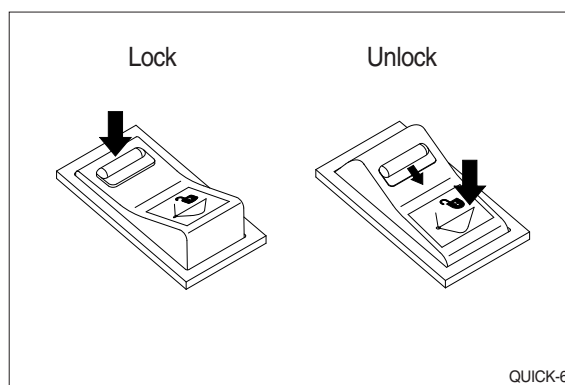

## A

Accel dial switch .....	3-14
After engine start .....	4-5
Air breather element .....	6-33
Air cleaner filter .....	6-26
Air conditioner & heater .....	3-19
Air conditioner filter .....	6-44
Alternate exit .....	0-12
Attachment lowering .....	4-24

## B

Battery .....	6-41
Before starting engine .....	4-2
Boom lowering .....	4-24
Booster starting .....	6-42
Bucket clearance adjustment .....	6-39
Bucket replacement .....	6-37
Bucket selection guide .....	2-10
Bucket tooth replacement .....	6-38

## C

Cab air filter .....	6-44
Cab device .....	3-1
Changing machine control pattern .....	4-27
Cigar lighter .....	3-32
Cluster .....	3-2
Coolant .....	6-20
Cooling fan .....	6-24

## D

Dimension and weight .....	5-2
Drain filter .....	6-33

## E

Engine oil filter .....	6-18
Engine oil level .....	6-18
Engine starting & stop .....	4-3
Engine starting by booster .....	6-42
Engine stop .....	4-6

## F

Fan belt .....	6-24
Fixing the machine .....	5-6

Fuel filter .....	6-28
Fuel leakage .....	6-30
Fuel system bleeding .....	6-29
Fuel tank .....	6-26
Fuse & relay box .....	3-33

## G

Gauge .....	3-3
-------------	-----

## H

Hydraulic breaker .....	8-1
Hydraulic oil changing .....	6-31-1
Hydraulic oil filling .....	6-31
Hydraulic oil level .....	6-31

## L

Levers & pedals .....	3-17
Lifting capacities .....	2-6
Loading the machine .....	5-4
Loading and unloading by crane .....	5-7
Lubricant specification .....	6-9

## M

Machine data plate .....	0-18
Maintenance check list .....	6-11
Major component .....	2-1
MCU (Machine Control Unit) .....	3-33
Mode selection system .....	4-8
Mounting and dismounting .....	1-21

## N

New machine operation .....	4-1
-----------------------------	-----

## O

Oil cooler .....	6-23
Operating pattern .....	4-27

## P

Pedals .....	3-17
Periodical replacement parts .....	6-5
Pilot line filter .....	6-33
Pin & bushing lubrication .....	6-40
Prefilter .....	6-27
Pilot lamps .....	3-10

## Q

Quick clamp .....	8-6
-------------------	-----

## R

Radiator flushing .....	6-20
Radio & USB player .....	3-23
RCV lever lubricate .....	6-36
Recommended oils .....	2-16, 6-10
Relieving pressure .....	6-3
Reservoir tank .....	6-20
Return filter .....	6-32
RCV lever operating pattern .....	4-27

## S

Safety hints .....	1-1
Safety labels .....	0-5
Safety parts .....	6-5
Seat .....	3-32
Seat belt .....	3-32
Service meter .....	3-34
Service socket .....	3-32
Specification for major component .....	2-13
Specification .....	2-2
Start switch .....	3-13
Storage .....	4-25
Suction strainer .....	6-32
Swing bearing grease .....	6-34
Swing gear & pinion grease .....	6-35
Swing reduction gear oil .....	6-34
Switch panel .....	3-11
Switches .....	3-11, 3-13

## T

Torques-major component .....	6-8
Torques-fastener .....	6-6
Towing machine .....	4-16
Track adjustment .....	6-36
Track shoe selection .....	2-12
Transportation .....	5-1
Travel reduction gear oil .....	6-35
Traveling machine .....	4-14
Troubleshooting guide .....	7-1

## U

Undercarriage .....	2-11
USB port .....	3-29

## W

Warming up operation .....	4-6
Warning lamps .....	3-9
Weight .....	2-5
Welding repair .....	6-43
Windshield .....	3-34
Working device operation .....	4-13
Working method .....	4-17
Working range .....	2-4