

SECTION 4 BRAKE SYSTEM

Group 1	Structure and function	4-1
Group 2	Operational checks and troubleshooting	4-8
Group 3	Tests and adjustments	4-10

SECTION 4 BRAKE SYSTEM

GROUP 1 STRUCTURE AND FUNCTION

1. OUTLINE

There are two brake systems, the foot brake system and the hand brake system.

In the foot brake system, oil pressure is generated in the master cylinder by treading on the brake pedal. This pressure causes the wheel cylinder pistons to extend, expanding the brake shoes and pressing them against the brake drums to attain braking force.

In the hand (parking) brake system, the brake shoes are expanded by operating the brake lever. Force from the lever is transmitted to the brake shoes through the hand brake cables and a lever arm in each disk brake assembly.

2. SPECIFICATION

1) DISK BRAKE


Item		Specification
Type		Wet disk brake
Brake valve step/bore piston diameter		40 mm (1.6 in) / 30 mm (1.2 in)
Pedal adjustment	Pedal height	126~134 mm (4.96~5.28 in)
	Play	2~4 mm (0.08~0.16 in)
Brake oil		Azolla ZS32 (ISO VG32 hydraulic oil)

2) PARKING BRAKE

Item		Specification
Type		Ratchet, internal expanding mechanical type
Parking lever stroke		23°
Parking cable stroke		28 mm (1.1 in)

3. BRAKE PEDAL AND PIPING

1) STRUCTURE

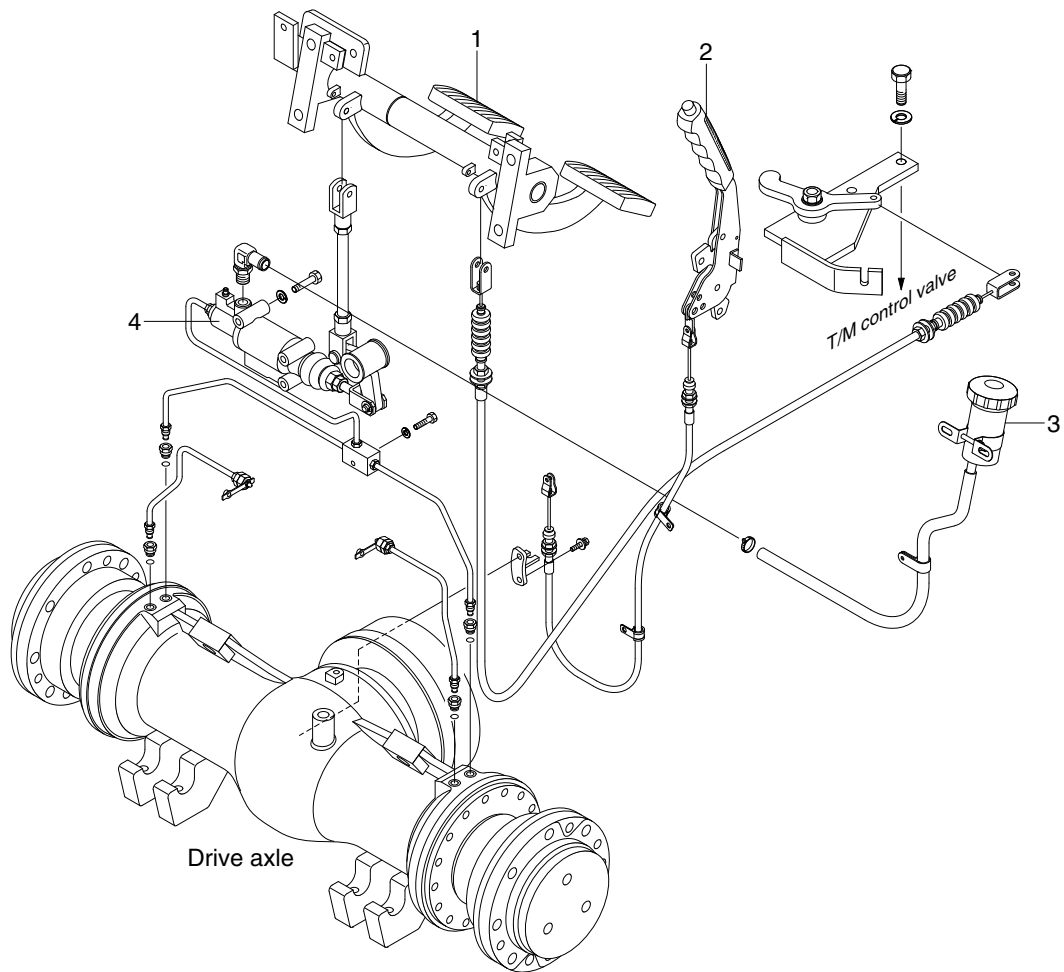



35D9SBS03

- 1 Brake pedal & bracket assembly
- 2 Parking lever assembly

- 3 Reservoir tank assembly
- 4 Brake valve

4. INCHING PEDAL AND LINKAGE


The brake pedal serves to actuate the hydraulic brakes on the front axle. At the beginning of the pedal stroke, the inching spool of the transmission control valve is actuated to shift the hydraulic clutch to neutral and turn off the driving force. By treading the pedal further, the brake is applied.

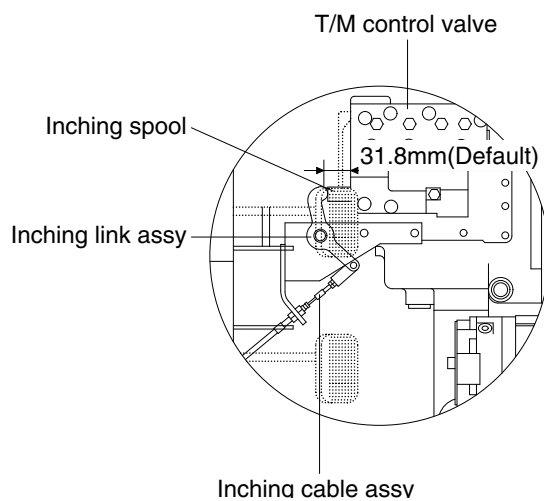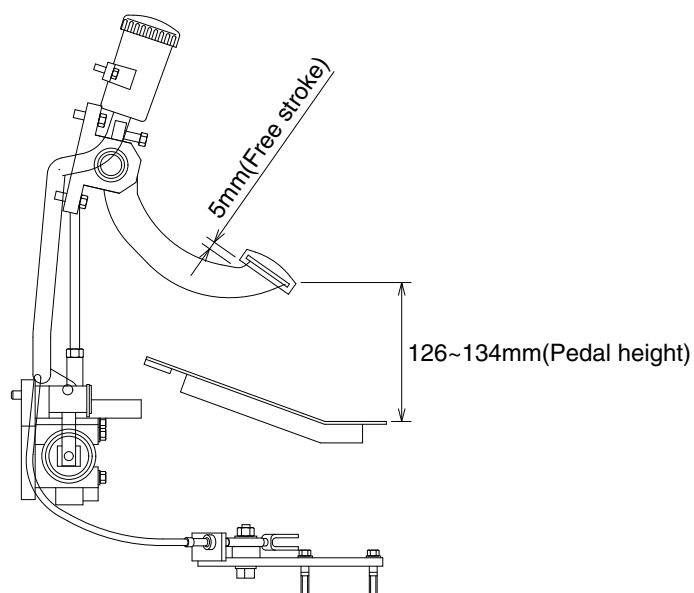

35D9KBS04

5. WET DISK BRAKE

1) STRUCTURE

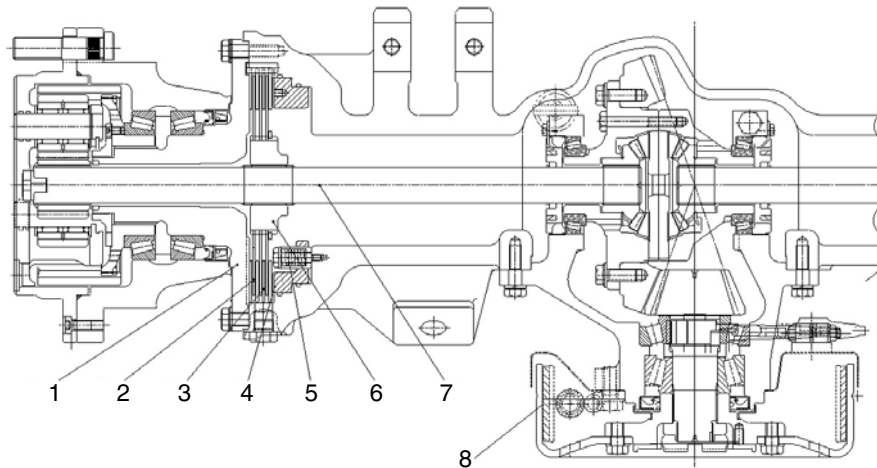

35D7ETA10

- | | | | | | |
|---|-------------|---|----------------------------|---|---------------|
| 1 | Spindle | 4 | Service piston | 7 | Drive shaft |
| 2 | Steel plate | 5 | Service piston adjust bolt | 8 | Parking brake |
| 3 | Disk plate | 6 | Spline collar | | |

Sealed up structure of hydraulic multi-disk brake system secures good brake performance even in the high humid or dusty area.


Because it is possible to use the brake semi-permanently, there is no need to replace or change the lining as drum type brake do. Also with self-adjust of friction plate clearance, it's easy to prevent the brake performance drop due to friction material wear.

Major components are 3 disk plates (3), 4 steel plates (2), service piston (4) and 4 piston adjust bolts (5).

Braking takes place when the discs and plates are pressed each other which make rotation resistance to the collar (6) and the drive shaft (7).

6. BRAKE VALVE

1) STRUCTURE

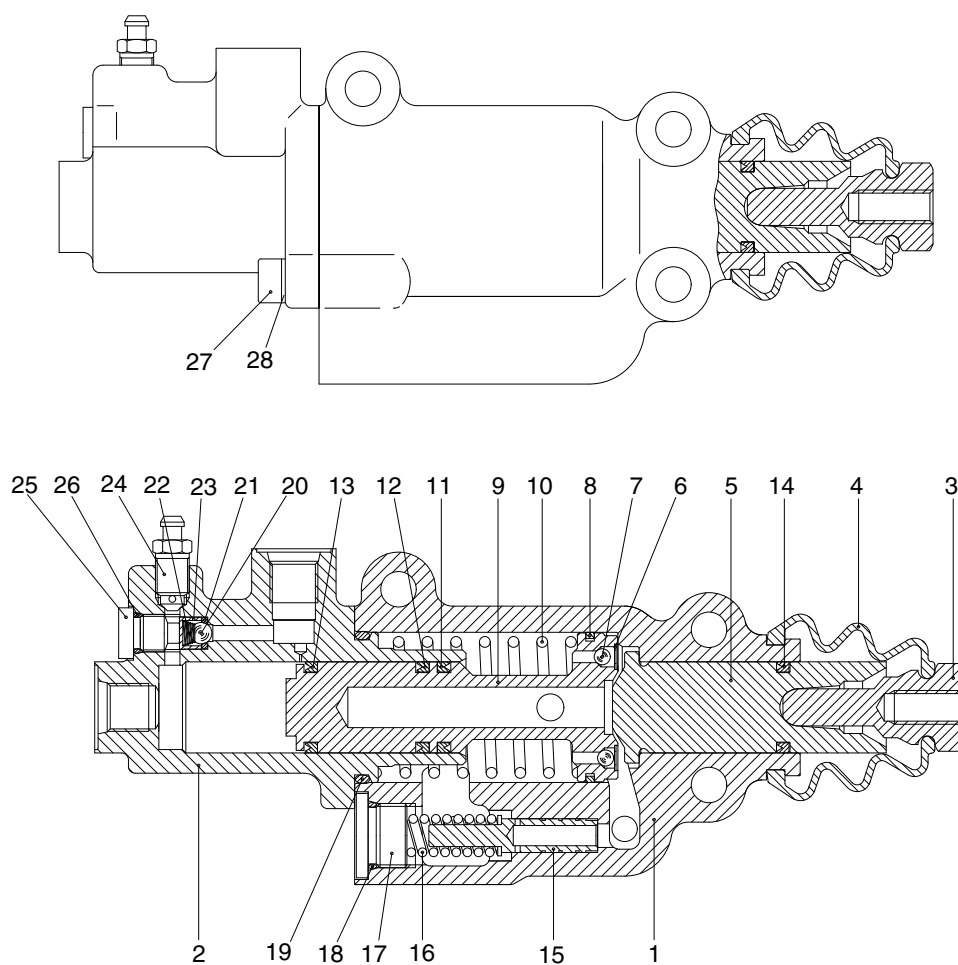


35D7EBV00


1	Front housing	11	U-cup seal	21	O-ring
2	Rear housing	12	U-cup seal	22	Spring
3	Push rod	13	U-cup seal	23	Gauge
4	Bellows	14	U-cup seal	24	Air bent
5	Master piston	15	Relief piston	25	Plug
6	Lock washer	16	Relief spring	26	O-ring
7	Piston ball	17	Relief plug	27	Bolt
8	Piston ring	18	O-ring	28	Spring washer
9	Servo piston				
10	Servo spring	20	Ball		

2) DISASSEMBLY


- (1) Remove push rod (3), bellows (4), air vent (24), bolt (27) and washer (28).

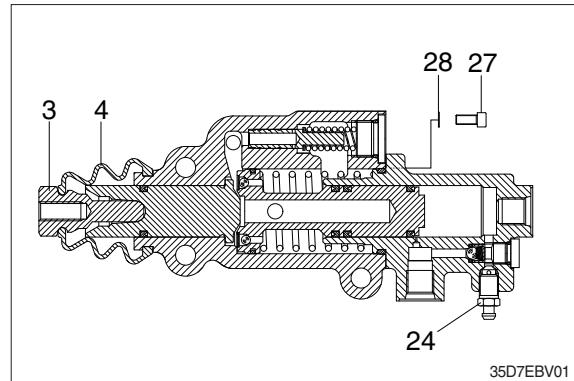


- (2) Remove front housing (1), rear housing (2), servo spring (10), servo piston (9) and master piston (5).

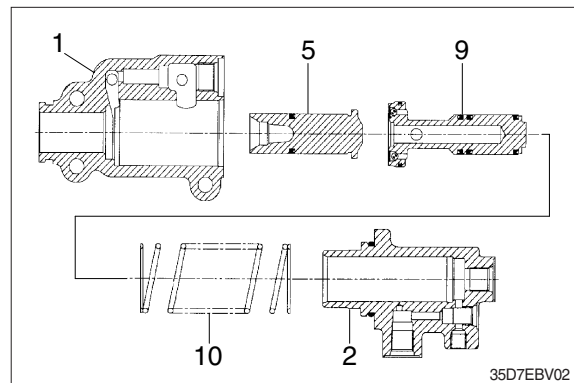

- (3) Remove relief plug (17) with O-ring (18), relief spring (16) and relief piston (15).

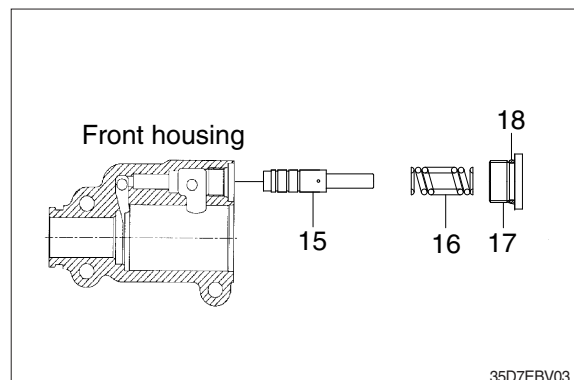

- (4) Remove O-ring (19), check plug (25) with O-ring (26), cage (23), check spring (22), check ball (20) and O-ring (21).

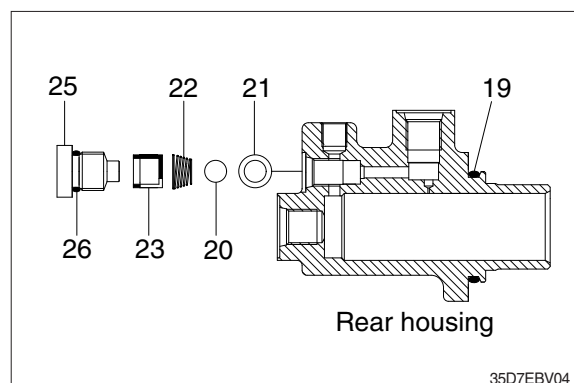

3) INSPECTION AND ASSEMBLY

- (1) Clean all parts thoroughly and lubricate the parts either with mineral or with hydraulic oil, according to their use destination.
 - (2) All single parts are to be checked for damage and replaced, if required.
 - (3) Assembly is in opposite order to disassembly.
 - (4) Seal kit : XKAU-00176
- ▲ Use only brake fluid (Azolla ZS32) into the compensation reservoirs.

GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING


1. OPERATIONAL CHECKS

1) BRAKE PIPING

- (1) Check pipes, hoses and joints for damage, oil leakage or interference.
- (2) Operate brake pedal and check operating force when pedal is depressed. Check also change in operating force, and change in position of pedal when pedal is kept depressed.

2) PARKING BRAKE

- (1) Operating force of parking lever is 35 ~ 40 kgf·m (253 ~ 290 lbf·ft).
- (2) Check that parking brake can hold machine in position when loaded on 20% slope. If there is no slope available, travel at low speed and check braking effect of parking brake.

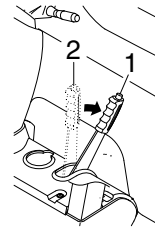

15L7ATA19


2. TROUBLESHOOTING

Problem	Cause	Remedy
Insufficient braking force	<ul style="list-style-type: none"> Hydraulic system leaks oil. Hydraulic system leaks air. Disk worn. Brake valve malfunctioning. Hydraulic system clogged. 	<ul style="list-style-type: none"> Repair and add oil. Bleed air. Replace. Repair or replace. Clean.
Brake acting unevenly. (Machine is turned to one side during braking.)	<ul style="list-style-type: none"> Tires unequally inflated. Brake out of adjustment. Disk surface roughened. Wheel bearing out of adjustment. Hydraulic system clogged. 	<ul style="list-style-type: none"> Adjust tire pressure. Adjust. Repair by polishing or replace. Adjust or replace. Clean.
Brake trailing.	<ul style="list-style-type: none"> Pedal has no play. Piston cup faulty. Brake valve return port clogged. Hydraulic system clogged. Wheel bearing out of adjustment. 	<ul style="list-style-type: none"> Adjust. Replace. Clean. Clean. Adjust or replace.
Brake chirps	<ul style="list-style-type: none"> Brake trailing. Piston fails to return. Disk worn. Disk surface roughened. 	<ul style="list-style-type: none"> See above. Brake trailing. Replace. Replace. Repair by polishing or replace.
Brake squeaks	<ul style="list-style-type: none"> Disk surface roughened. Disk worn. Excessively large friction between disk plate. 	<ul style="list-style-type: none"> Repair by polishing or replace. Replace. Clean and apply brake grease.
Large pedal stroke	<ul style="list-style-type: none"> Brake out of adjustment. Hydraulic line sucking air. Oil leaks from hydraulic line, or lack of oil. Disk worn. 	<ul style="list-style-type: none"> Adjust. Bleed air. Check and repair or add oil. Replace.
Pedal dragging.	<ul style="list-style-type: none"> Twisted push rod caused by improperly fitted brake valve. Brake valve seal faulty. 	<ul style="list-style-type: none"> Adjust. Replace.

GROUP 3 TESTS AND ADJUSTMENTS

1. AIR BLEEDING OF BRAKE SYSTEM

- 1) Air bleeding should be performed by two persons :
One rides on truck for depressing and releasing brake pedal : the other person is on the ground and removes cap from air vent plug on wheel cylinder.
- 2) Block the front wheel securely and apply parking brake.
- 3) Start the engine.
- 4) Attach a vinyl tube to air vent plug and immerse other end of tube into a vessel filled with hydraulic oil.
- 5) Loosen air vent plug by turning it 3/4 with a wrench. Depress brake pedal to drain oil mixed with air bubbles from plug hole.
- 6) Depress brake pedal until no air bubbles come out of air vent plug hole.
- 7) After completion of air bleeding, securely tighten air vent plug. Install cap on plug.

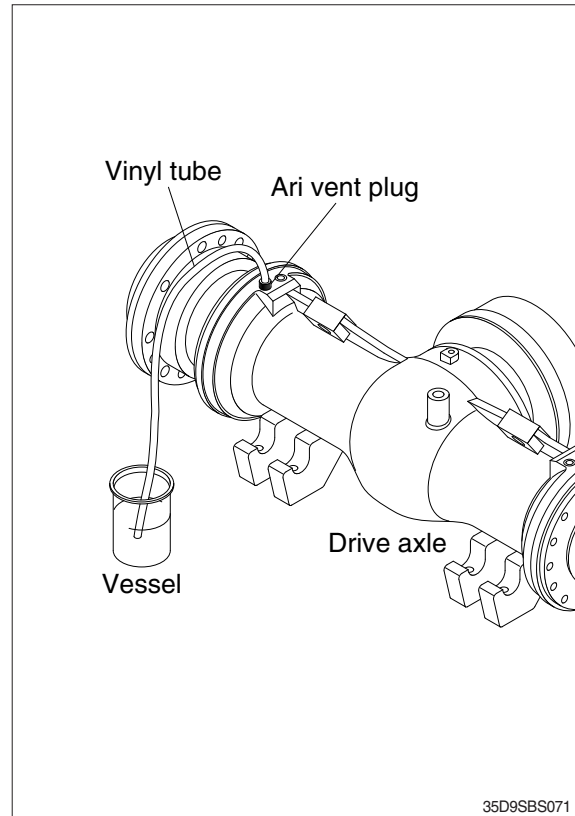

2. ADJUSTMENT OF PEDAL

1) BRAKE PEDAL

(1) Pedal height from floor plate


Adjust with stopper bolt.

- Pedal height : 126~134 mm (4.96~5.28 in)

(2) Idle stroke


Adjust with rod of brake valve

- Play : 2~4 mm (0.08~0.16 in)

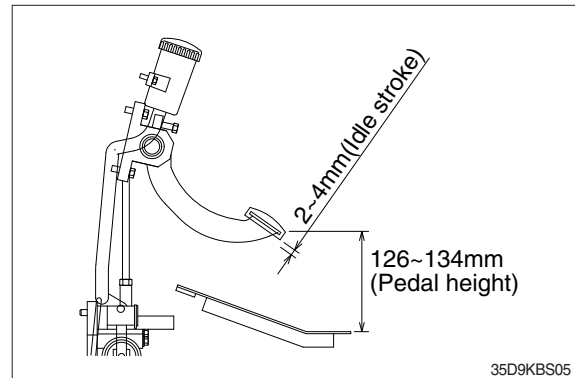

(3) Micro switch for parking brake (if equipped)

- ① After assembling parking brake and parking cable, put the parking brake lever released.
- ② Loosen the nut for parking brake plate to play up and down.
- ③ Move up the plate so that the stopper can be contacted with the pin and then reassemble nut.
 - Micro switch stroke when parking brake is applied : 2~3 mm (0.08~0.1 in)
 - Parking cable stroke : 28 mm (1.1 in)

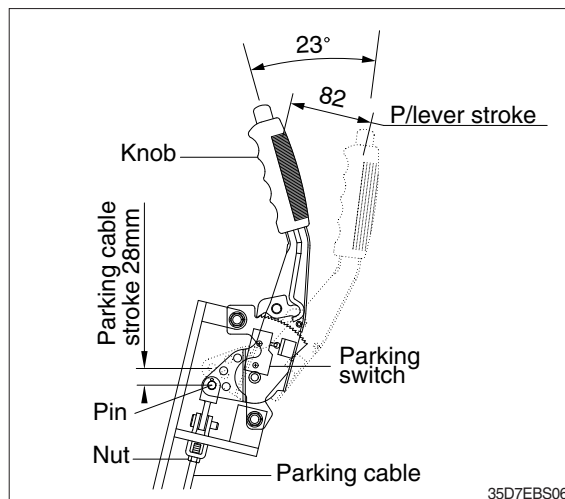


2) INCHING PEDAL

Pedal height from floor plate

Adjust with stopper bolt.

- Pedal height : 126~134 mm (4.96~5.28 in)
- Free stroke : 5 mm (0.19 in)

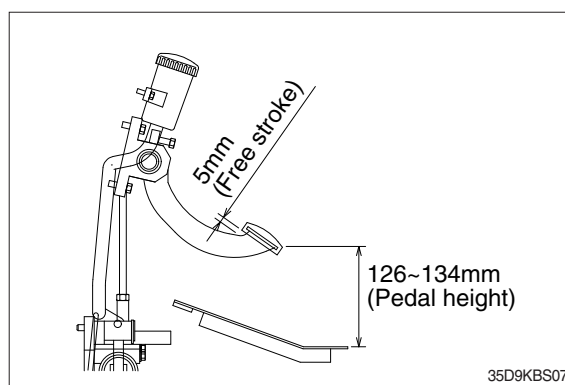


SECTION 5 STEERING SYSTEM

Group 1	Structure and Function	5-1
Group 2	Operational Checks and Troubleshooting	5-10
Group 3	Disassembly and Assembly	5-12

SECTION 5 STEERING SYSTEM

GROUP 1 STRUCTURE AND FUNCTION

1. OUTLINE

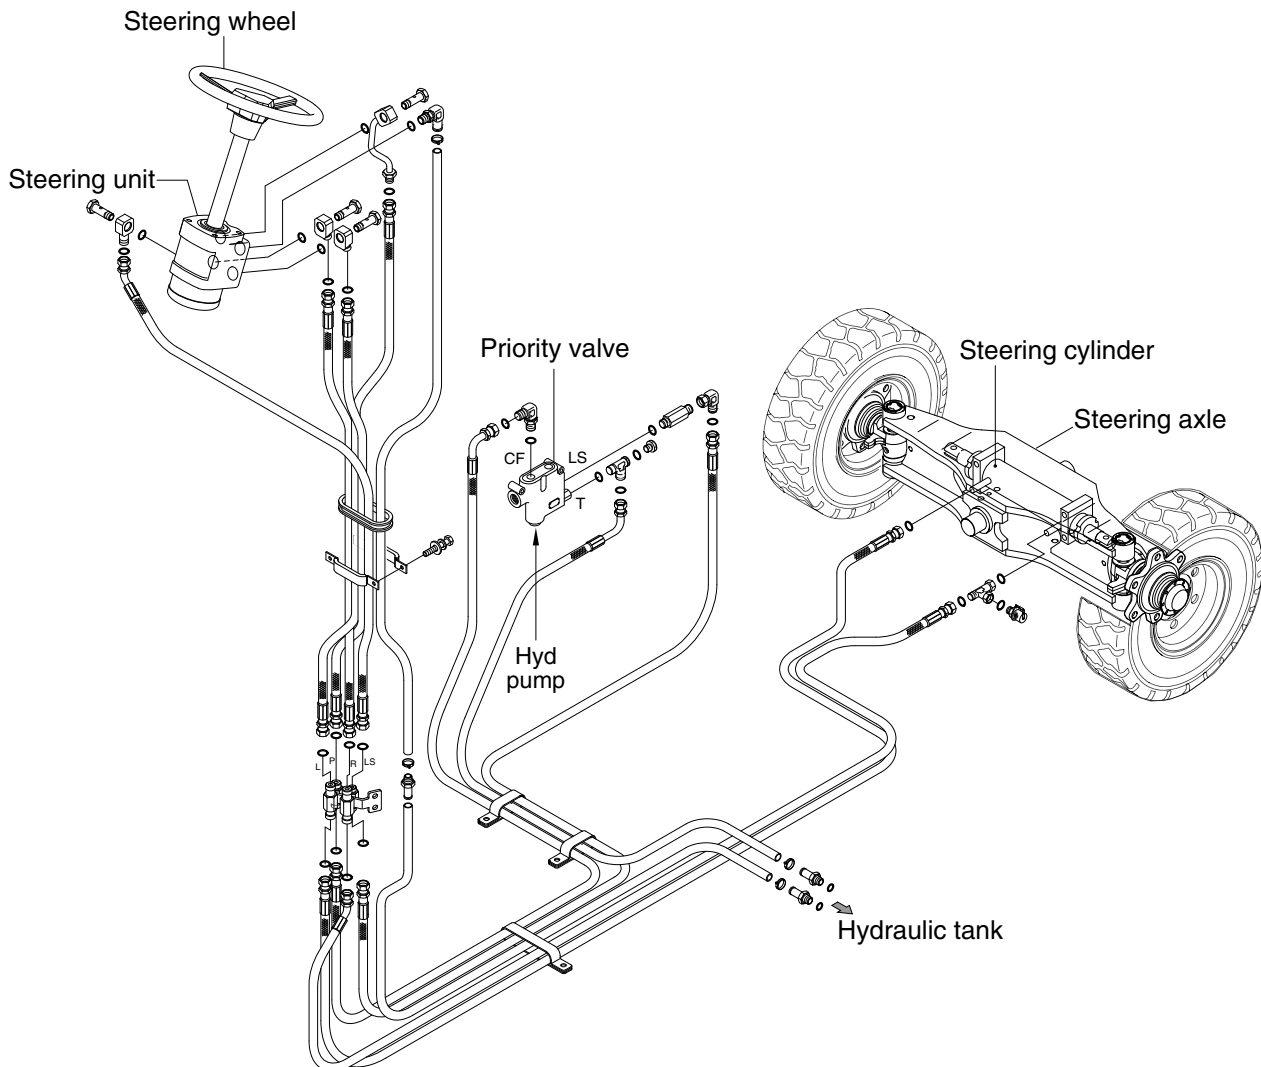


35D9KSE01

The steering system for this machine is composed of steering wheel assembly, steering unit, priority valve steering cylinder, steering axle and piping. The steering force given to the steering wheel enters the steering unit through the steering column. The required oil flow is sensed by the function of the control section of the unit, and pressurized oil delivered from the hydraulic pump is fed to the steering cylinder. The force produced by the steering cylinder moves the knuckle of steering tires through the intermediate link.

The axle body is unit structure having steering knuckles installed to its both ends by means of kingpins. Hub and wheel are mounted through bearing to spindle of knuckle.


2. HYDRAULIC CIRCUIT

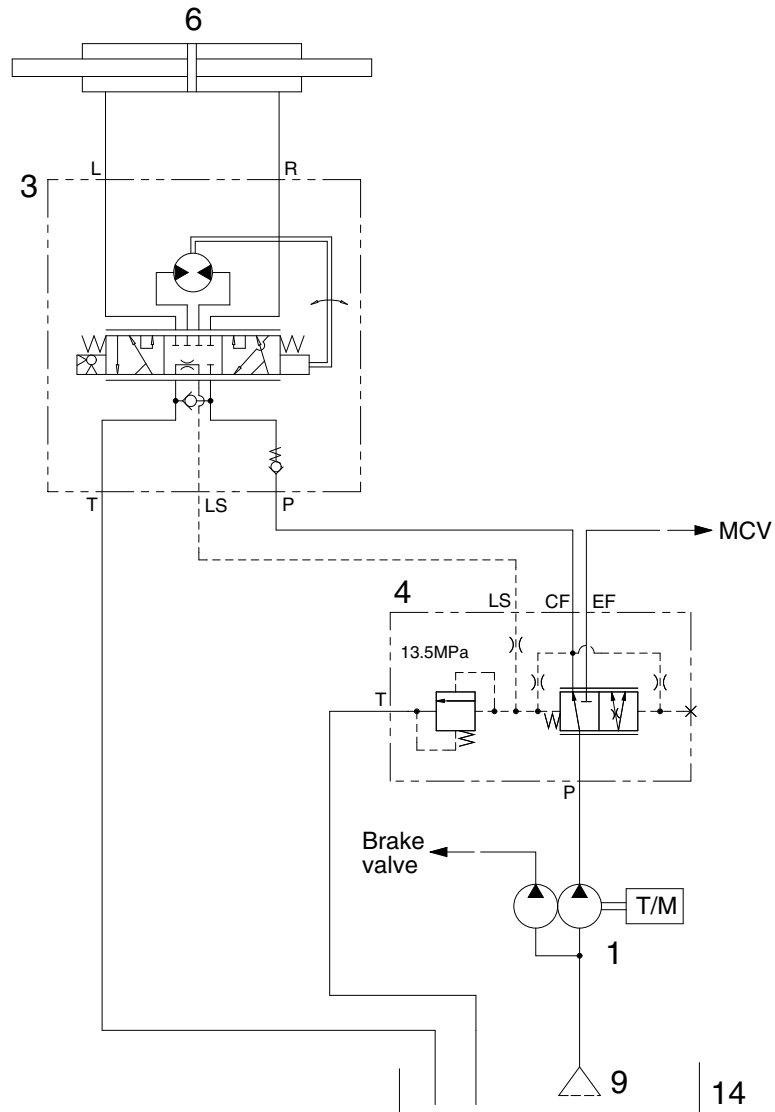

35D9KSE02

- | | | | |
|---|---------------------|----|-------------------|
| 1 | Hydraulic gear pump | 6 | Steering cylinder |
| 3 | Steering unit | 9 | Suction filter |
| 4 | Priority valve | 14 | Hydraulic tank |

1) NEUTRAL

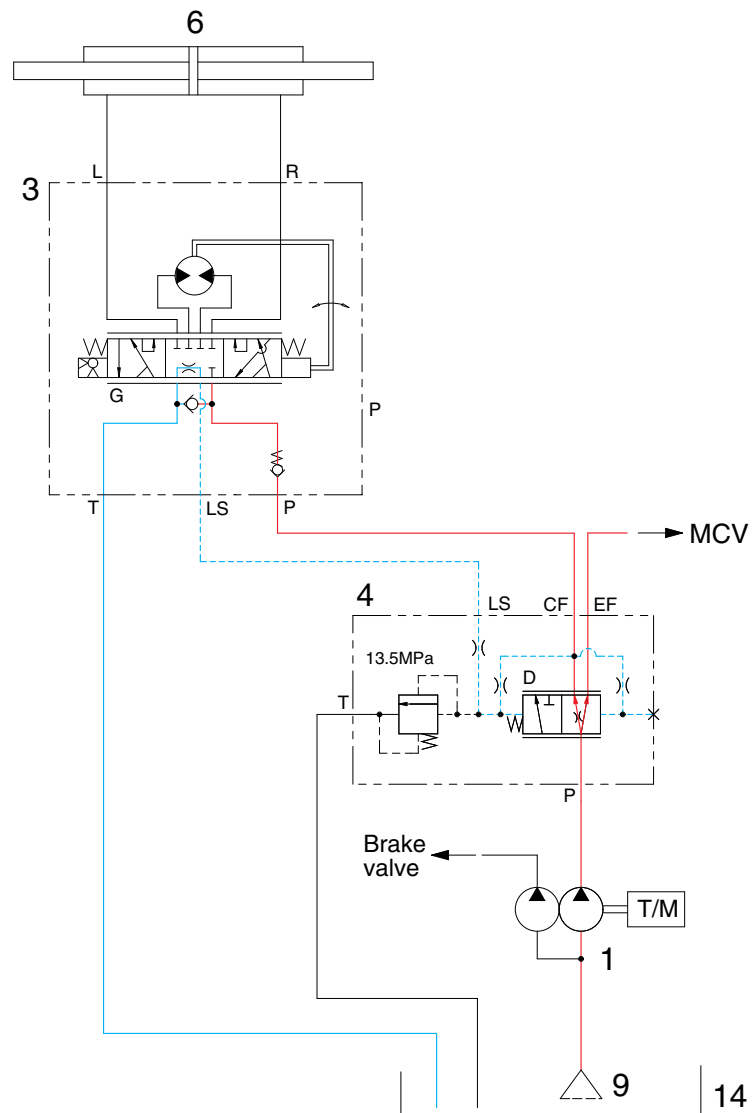

35D9KSE03


The steering wheel is not being operated, so control spool (G) does not move.

The oil from hydraulic gear pump (1) enters the port P of priority valve (4) and the inlet pressure oil moves the spool (D) to the left.

Oil flow into LS port to the hydraulic tank (14).

So, the pump flow is routed to the main control valve.

2) LEFT TURN

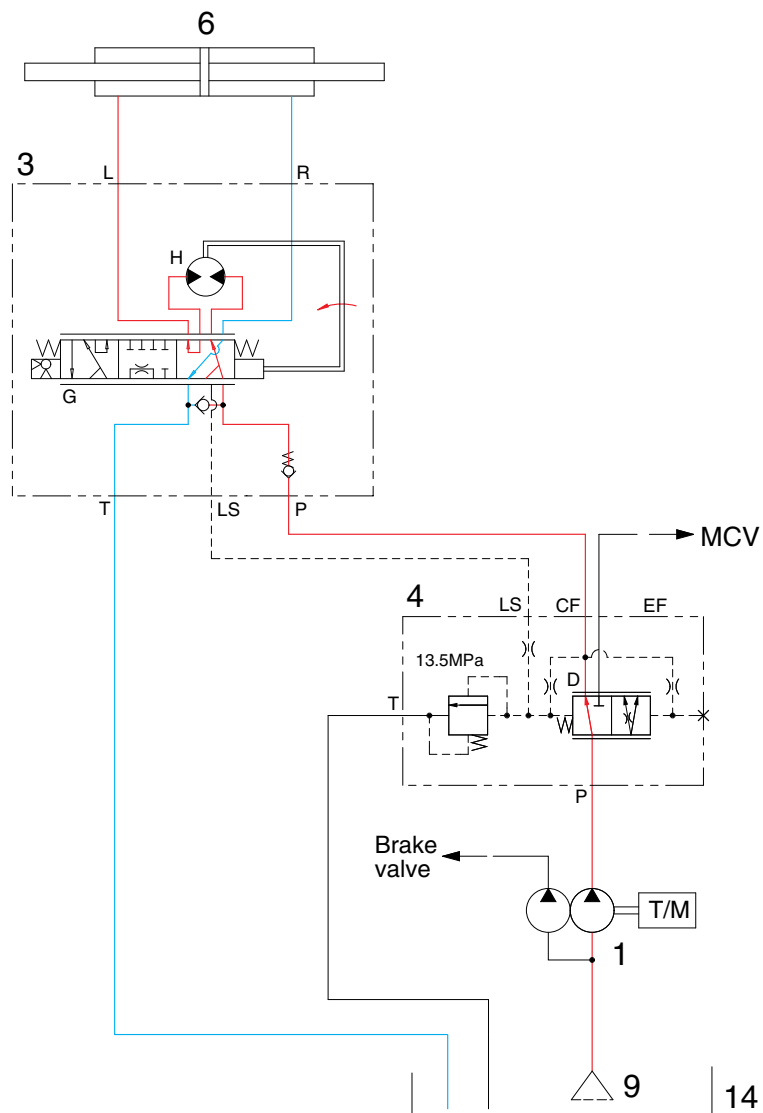

35D9KSE04

When the steering wheel is turned to the left, the spool (G) within the steering unit (3) connected with steering column turns in left hand direction.


At this time, the oil discharged from the pump flows into the spool (G) within the steering unit (3) through the spool (D) of priority valve (4) and flows the gerotor (H).

Oil flow from the gerotor (H) flows back into the spool (G) where it is directed out the left work port (L).

Oil returned from cylinder returns to hydraulic tank (14).

When the above operation is completed, the machine turns to the left.

3) RIGHT TURN

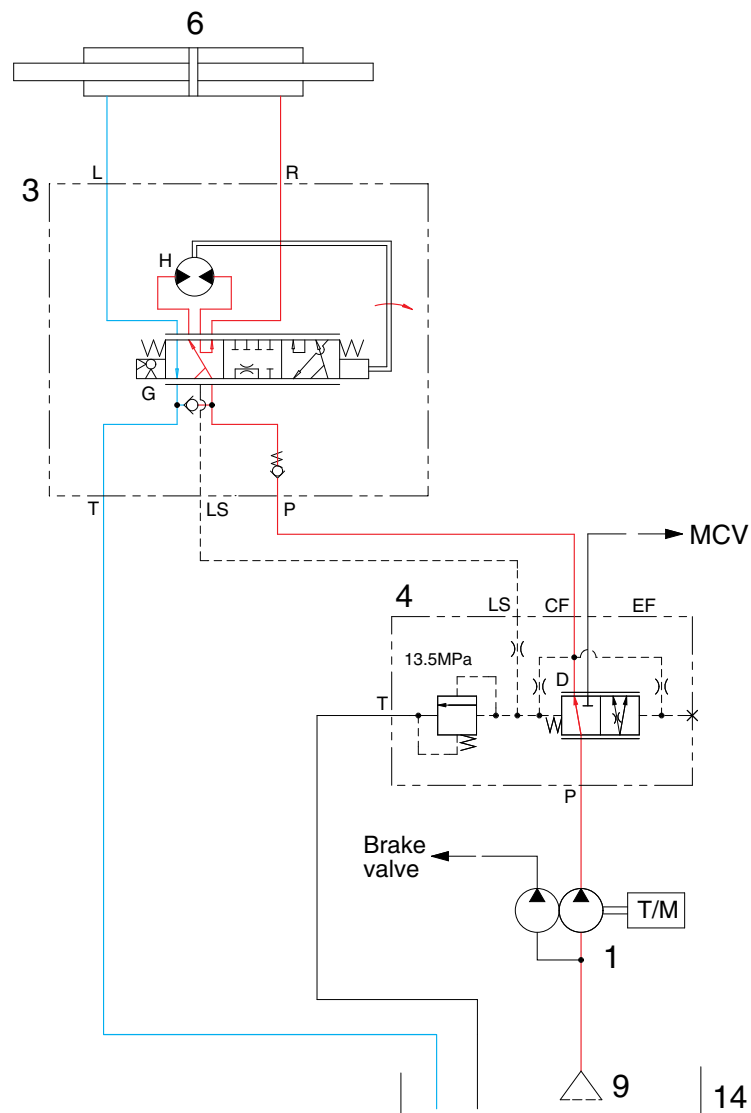

35D9KSE05

When the steering wheel is turned to the right, the spool (G) within the steering unit (3) connected with steering column turns in right hand direction.

At this time, the oil discharged from the pump flows into the spool (G) within the steering unit (3) through the spool (D) of priority valve (4) and flows the gerotor (H).


Oil flow from the gerotor (H) flows back into the spool (G) where it is directed out the right work port (R).

Oil returned from cylinder returns to hydraulic tank (14).

When the above operation is completed, the machine turns to the right.

3. STEERING UNIT

1) STRUCTURE

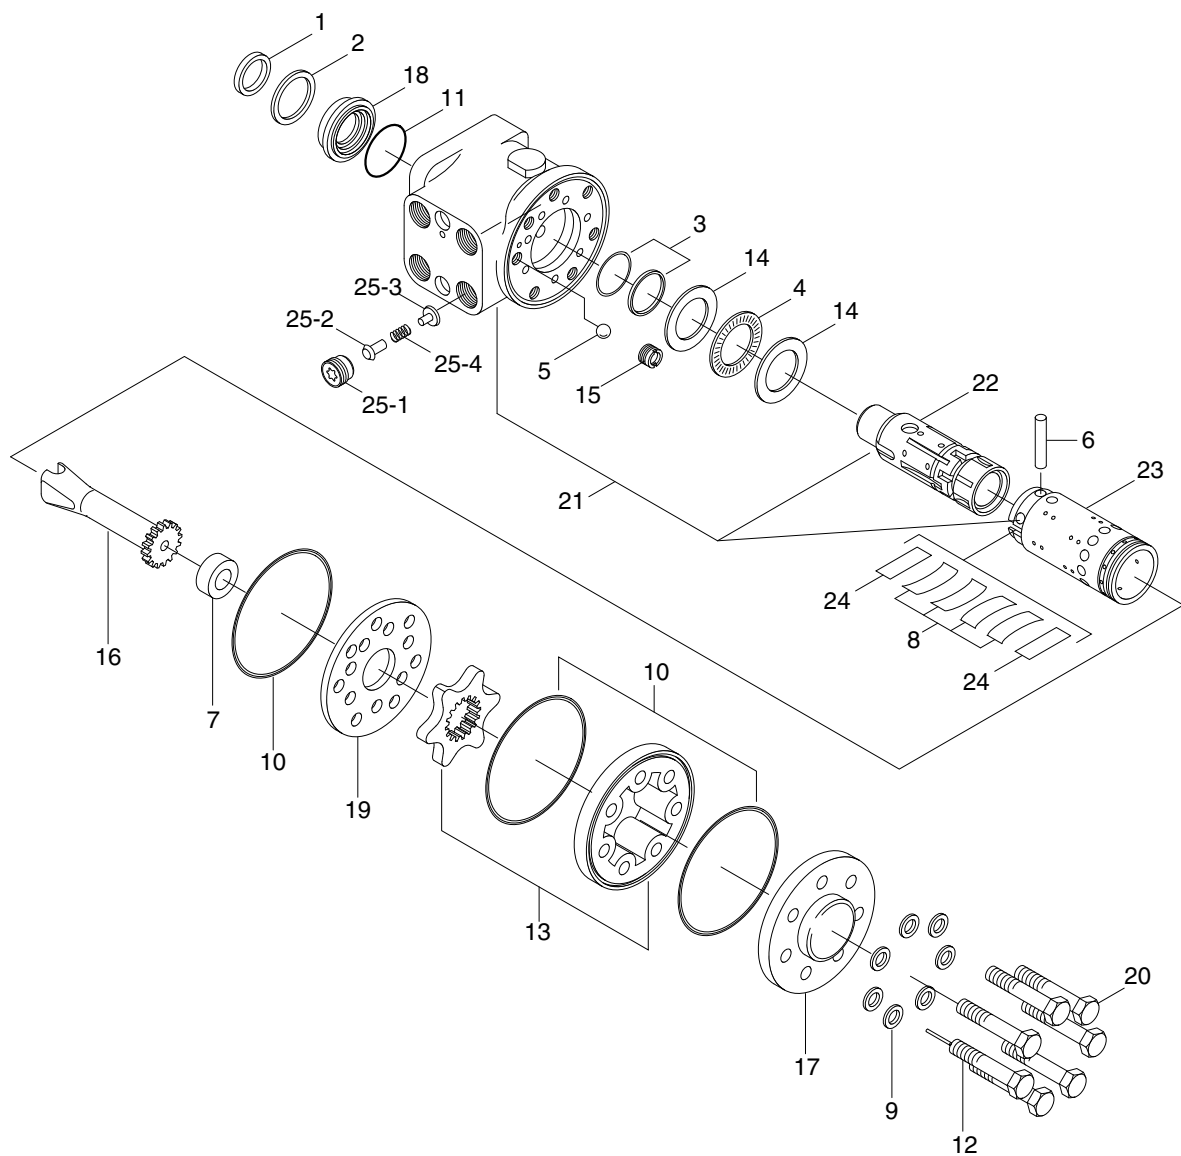

20D7SS06

- | | | |
|------------------|------------------|-----------------------|
| 1 Dust seal | 11 O-ring | 21 Housing |
| 2 Retaining ring | 12 Rolled screw | 22 Spool |
| 3 Cap seal | 13 Gerotor set | 23 Sleeve |
| 4 Thrust bearing | 14 Bearing race | 24 Plate spring |
| 5 Ball | 15 Bore screw | 25 P-port check valve |
| 6 Pin | 16 Drive | 25-1 Plug |
| 7 Spacer | 17 End cap | 25-2 Poppet |
| 8 Center spring | 18 Gland bushing | 25-3 Spring seat |
| 9 Washer | 19 Plate | 25-4 Spring |
| 10 O-ring | 20 Cap screw | |

2) OPERATION

The steering unit is composed of the control valve (rotary valve) and the metering device. The control valve controls the flow of oil from the pump in the interior of the unit depending on the condition of the steering wheel. The metering device is a kind of hydraulic motor composed of a stator and a rotor. It meters the required oil volume, feeds the metered oil to the power cylinder and detects cylinder's motion value, that is, cylinder's motion rate.


When the steering wheel is turned, the spool turns, the oil path is switched and the oil is fed into the metering device. As a result, the rotor is caused to run by oil pressure, and the sleeve is caused to run through the drive shaft and cross pin. Therefore, when the spool is turned, the spool turns by the same value in such a manner that it follows the motion of the spool. Steering motion can be accomplished when this operation is performed in a continuous state.

▲ If the hoses of the steering system are incorrectly connected, the steering wheel can turn very rapidly when the engine is started. Keep clear of the steering wheel when starting the engine.

The centering spring for the spool and sleeve is provided to cause the valve to return to the neutral position. It is therefore possible to obtain a constant steering feeling, which is transmitted to the hands of the driver. Return to the center position occurs when the steering wheel is released.

4. STEERING AXLE


1) STRUCTURE

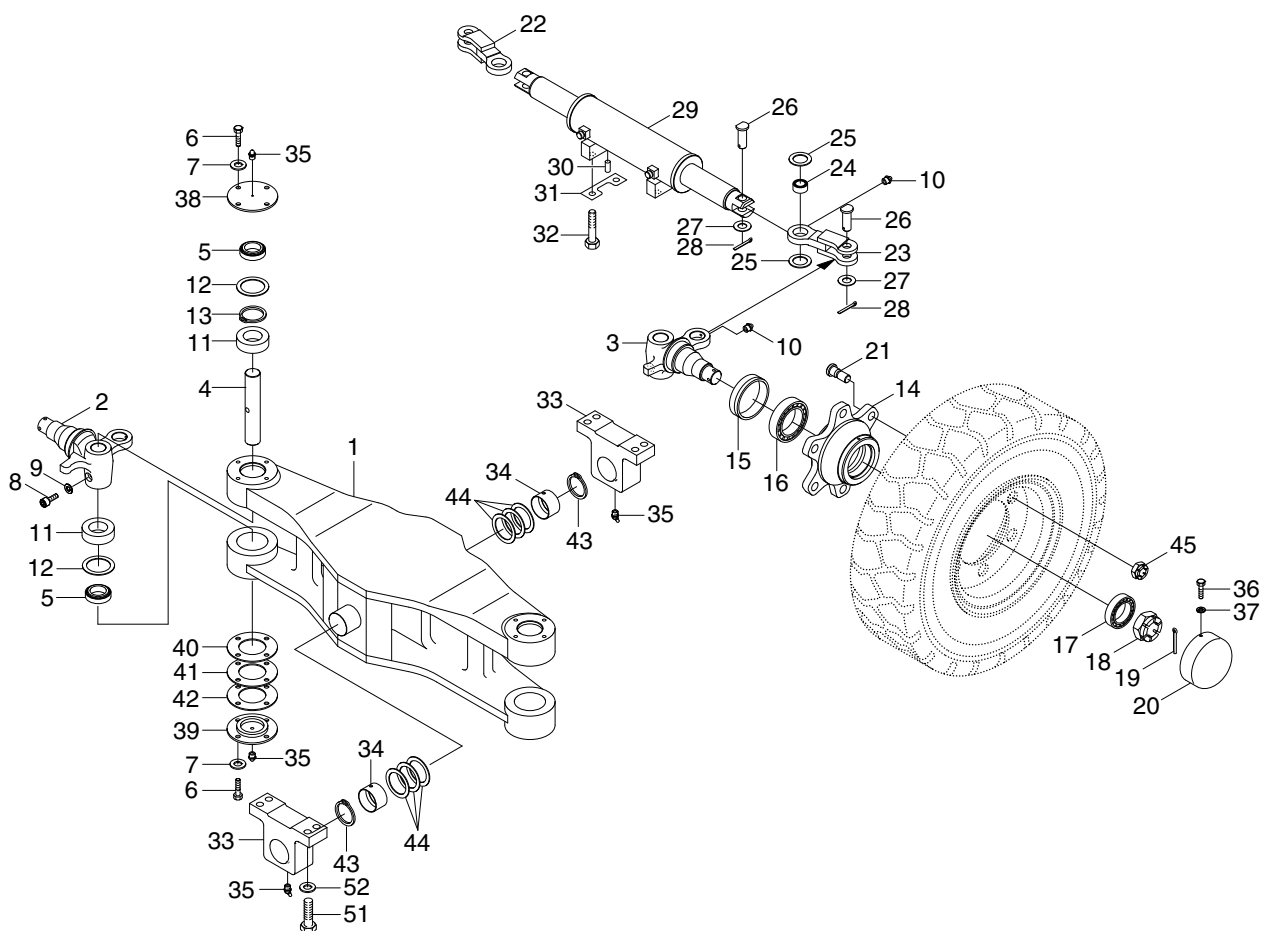

35D9SSE06

1	Axle center	13	Retaining ring	25	Thrust washer	37	Spring washer
2	Knuckle-RH	14	Hub	26	Clevis pin	38	Upper cover
3	Knuckle-LH	15	Oil seal	27	Plain washer	39	Lower cover
4	King pin	16	Taper roller bearing	28	Split pin	40	Shim (0.1t)
5	Taper roller bearing	17	Taper roller bearing	29	Steering cylinder	41	Shim (0.15t)
6	Hexagon bolt	18	Slotted nut	30	Pin	42	Shim (0.3t)
7	Spring washer	19	Split pin	31	Lock plate	43	Retaining ring
8	Special bolt	20	Hub cap	32	Hexagon bolt	44	Shim (0.5t)
9	Spring washer	21	Serration bolt	33	Support	45	Hub nut
10	Grease nipple	22	Link-RH	34	Bushing	51	Hexagon bolt
11	Collar	23	Link-LH	35	Grease nipple	52	Spring washer
12	Oil seal	24	SPH plain bearing	36	Hexagon bolt		

2) GREASING AND SPECIFICATION

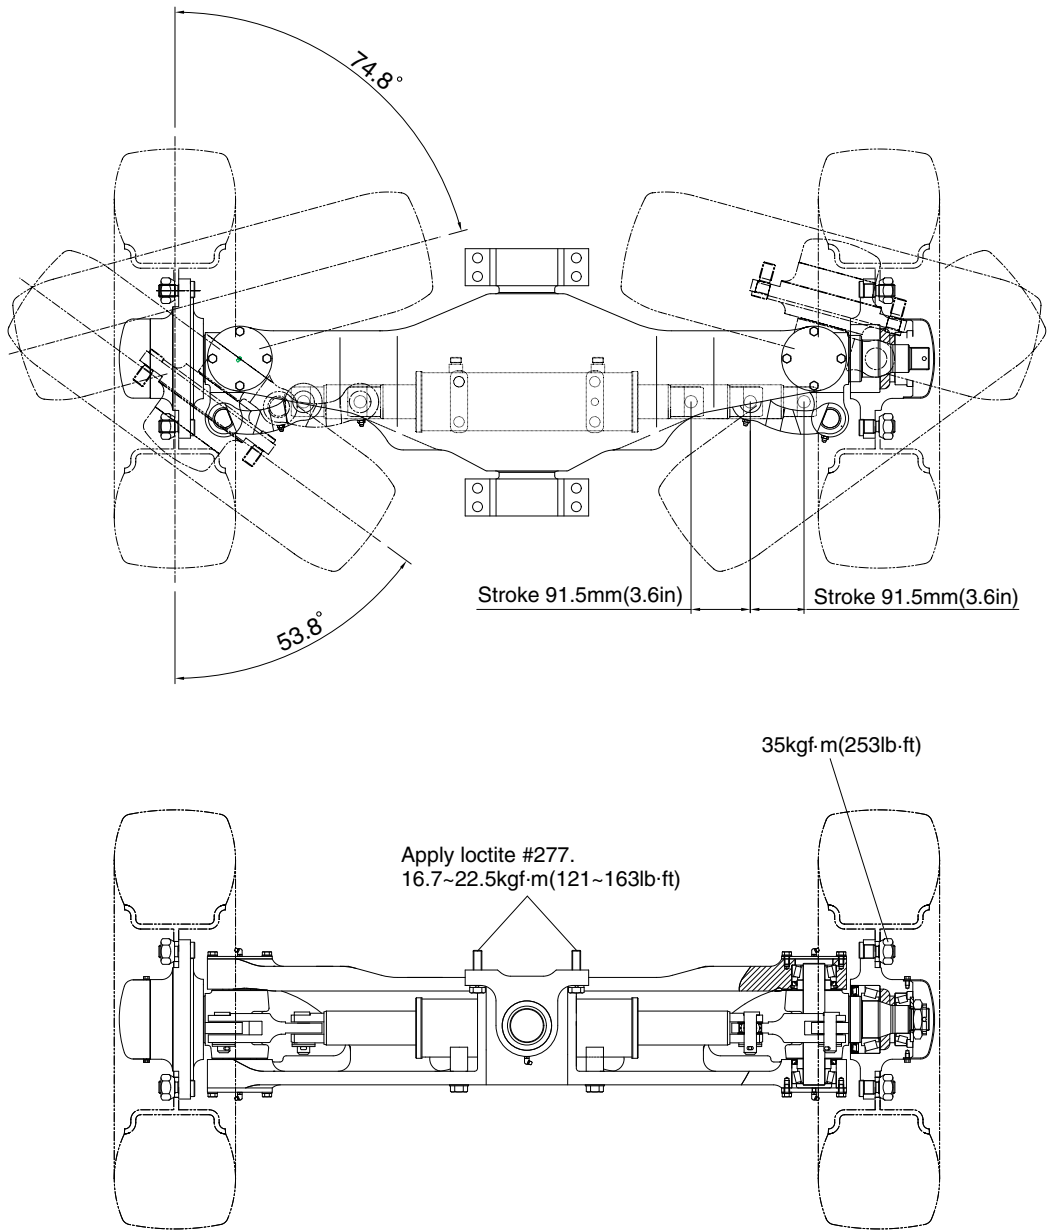


35DS7SE07

Type	Unit	Center pin support single shaft
Structure of knuckle	-	Elliott type
Toe-in	degree	0
Camber	degree	0
Caster	degree	0
King pin angle	degree	0
Max steering angle of wheels(Inside/Outside)	degree	74.8/53.8
Tread	mm (in)	1140 (45)

GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING

1. OPERATIONAL CHECKS

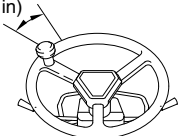Check item	Checking procedure								
Steering wheel 30-60mm (1.2-2.4 in) 	<ul style="list-style-type: none">Set rear wheels facing straight forward, then turn steering wheel to left and right. Measure range of steering wheel movement before rear wheel starts to move. Range should be 30~60 mm at rim of steering wheel. If play is too large, adjust at gear box.Test steering wheel play with engine at idling.								
Knuckle	<ul style="list-style-type: none">Check knuckle visually or use crack detection method. If the knuckle is bent, the tire wear is uneven, so check tire wear.								
Steering axle	<ul style="list-style-type: none">Put camber gauge in contact with hub and measure camber. If camber is not within $0 \pm 0.5^\circ$; rear axle is bent.Ask assistant to drive machine at minimum turning radius.Fit bar and a piece of chalk at outside edge of counterweight to mark line of turning radius.If minimum turning radius is not within ± 100 mm (± 4 in) of specified value, adjust turning angle stopper bolt. <p>Min turning radius (Outside)</p> <table><tr><td>35D-9K</td><td>2868 mm (113 in)</td><td>45D-9K</td><td>2965 mm (117 in)</td></tr><tr><td>40D-9K</td><td>2915 mm (115 in)</td><td>50DA-9K</td><td>3004 mm (118 in)</td></tr></table>	35D-9K	2868 mm (113 in)	45D-9K	2965 mm (117 in)	40D-9K	2915 mm (115 in)	50DA-9K	3004 mm (118 in)
35D-9K	2868 mm (113 in)	45D-9K	2965 mm (117 in)						
40D-9K	2915 mm (115 in)	50DA-9K	3004 mm (118 in)						
Hydraulic pressure of power steering	<p>Remove screw coupling from CF port of priority valve and install oil pressure gauge. Turn steering wheel fully and check oil pressure.</p> <p>※ Oil pressure : 125 kgf/cm² (1780 psi)</p>								

2. TROUBLESHOOTING


Problem	Cause	Remedy
Steering wheel drags.	<ul style="list-style-type: none"> Low oil pressure. Bearing faulty. Spring spool faulty. Reaction plunger faulty. Ball-and-screw assembly faulty. Sector shaft adjusting screw excessively tight. Gears poorly meshing. Flow divider coil spring fatigued. 	<ul style="list-style-type: none"> Check lockout. Repair. Clean or replace. Clean or replace. Replace. Clean or replace. Adjust. Check and correct meshing. Replace.
Steering wheel fails to return smoothly.	<ul style="list-style-type: none"> Bearing faulty. Reaction plunger faulty. Ball-and-screw assembly faulty. Gears poorly meshing. 	<ul style="list-style-type: none"> Clean or replace. Replace. Clean or replace. Check and correct meshing.

Problem	cause	Remedy
Steering wheel turns unsteadily. Steering system makes abnormal sound or vibration.	<ul style="list-style-type: none"> • Lockout loosening. • Metal spring deteriorated. • Gear backlash out of adjustment. • Lockout loosening. • Air in oil circuit. 	<ul style="list-style-type: none"> • Retighten. • Replace. • Adjust. • Retighten. • Bleed air.
Abnormal sound heard when steering wheel is turned fully	Valve <ul style="list-style-type: none"> • Faulty. (Valve fails to open.) Piping <ul style="list-style-type: none"> • Pipe (from pump to power steering cylinder) dented or clogged. 	<ul style="list-style-type: none"> • Adjust valve set pressure and check for specified oil pressure. • Repair or replace.
Piping makes abnormal sounds.	Oil pump <ul style="list-style-type: none"> • Lack of oil. • Oil inlet pipe sucks air. • Insufficient air bleeding. 	<ul style="list-style-type: none"> • Add oil. • Repair. • Bleed air completely.
Valve or valve unit makes abnormal sounds.	Oil pump <ul style="list-style-type: none"> • Oil inlet pipe sucks air. Valve <ul style="list-style-type: none"> • Faulty. (Unbalance oil pressure) Piping <ul style="list-style-type: none"> • Pipe (from pump to power steering) dented or clogged. • Insufficient air bleeding. 	<ul style="list-style-type: none"> • Repair or replace. • Adjust valve set pressure and check specified oil pressure. • Repair or replace. • Bleed air completely.
Insufficient or variable oil flow.	<ul style="list-style-type: none"> • Flow control valve orifice clogged. 	<ul style="list-style-type: none"> • Clean
Insufficient or variable discharge pressure.	Piping <ul style="list-style-type: none"> • Pipe (from tank to pipe) dented or clogged. 	<ul style="list-style-type: none"> • Repair or replace.
Steering cylinder head leakage (Piston rod)	<ul style="list-style-type: none"> • Packing foreign material. • Piston rod damage. • Rod seal damage and distortion. • Chrome gilding damage. 	<ul style="list-style-type: none"> • Replace • Grind surface with oil stone. • Replace • Grind
Steering cylinder head thread (A little bit leak is no problem)	<ul style="list-style-type: none"> • O-ring damage. 	<ul style="list-style-type: none"> • Replace
Welding leakage	<ul style="list-style-type: none"> • Cylinder tube damage. 	<ul style="list-style-type: none"> • Tube replace.
Rod	<ul style="list-style-type: none"> • Tube inside damage. • Piston seal damage and distortion 	<ul style="list-style-type: none"> • Grind surface with oil store. • Replace
Piston rod bushing inner diameter excessive gap	<ul style="list-style-type: none"> • Bushing wear. 	<ul style="list-style-type: none"> • Replace

GROUP 3 DISASSEMBLY AND ASSEMBLY

1. STEERING UNIT

1) STRUCTURE

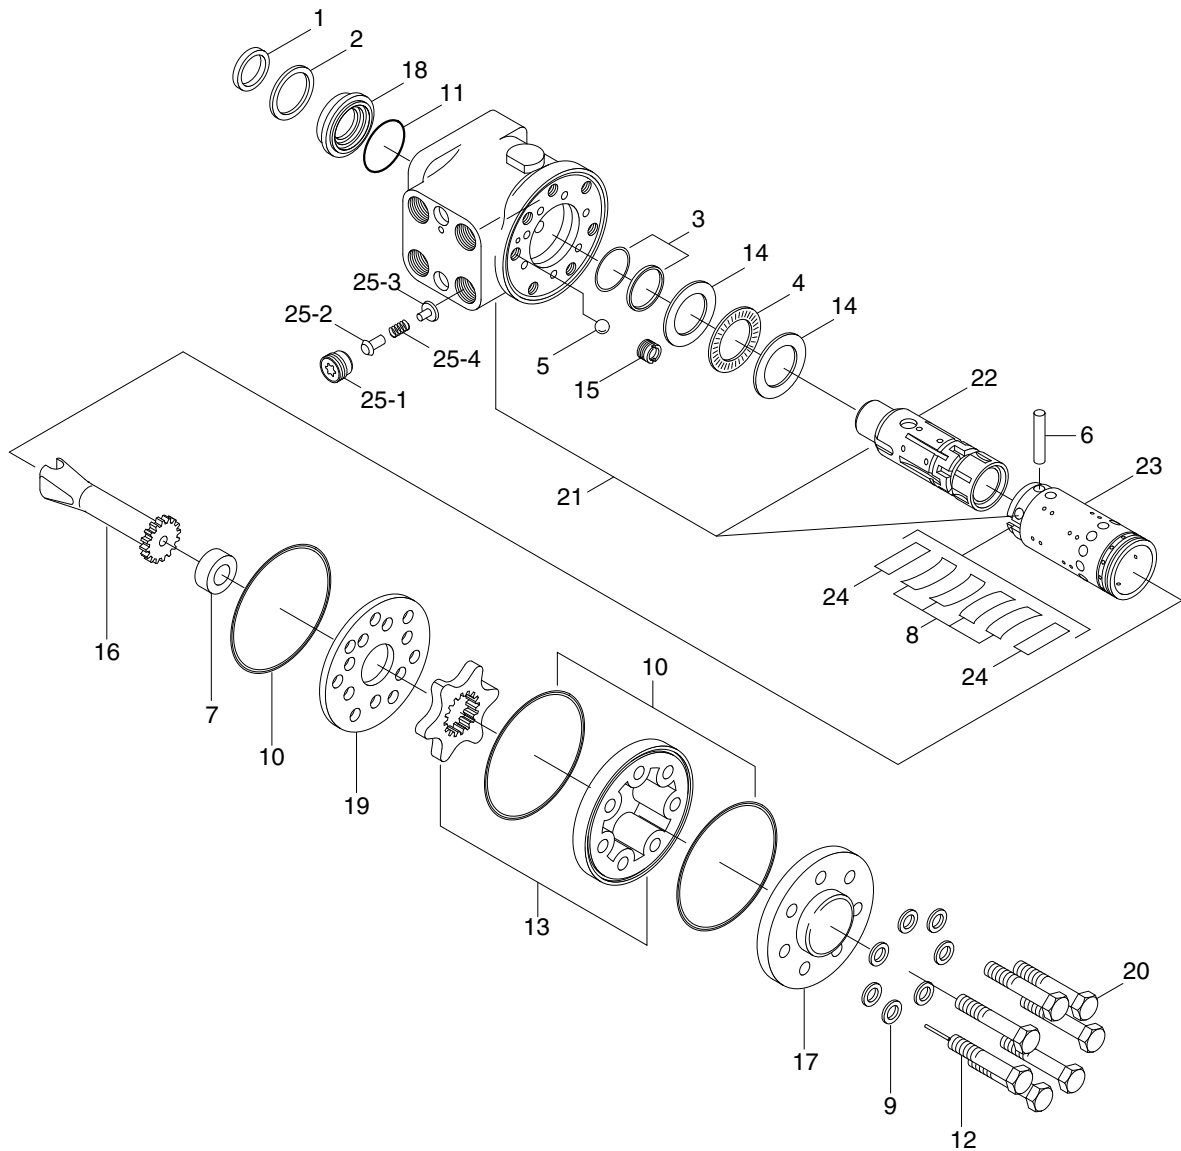


20D7SS06


- | | | |
|------------------|------------------|-----------------------|
| 1 Dust seal | 11 O-ring | 21 Housing |
| 2 Retaining ring | 12 Rolled screw | 22 Spool |
| 3 Cap seal | 13 Gerotor set | 23 Sleeve |
| 4 Thrust bearing | 14 Bearing race | 24 Plate spring |
| 5 Ball | 15 Bore screw | 25 P-port check valve |
| 6 Pin | 16 Drive | 25-1 Plug |
| 7 Spacer | 17 End cap | 25-2 Poppet |
| 8 Center spring | 18 Gland bushing | 25-3 Spring seat |
| 9 Washer | 19 Plate | 25-4 Spring |
| 10 O-ring | 20 Cap screw | |

2) TOOLS


(1) Holding tool.

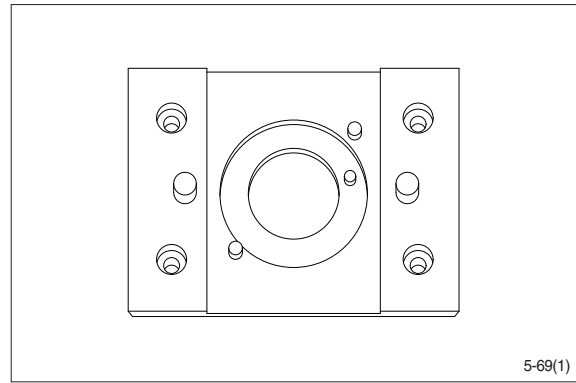


(2) Assembly tool for O-ring and kin-ring.

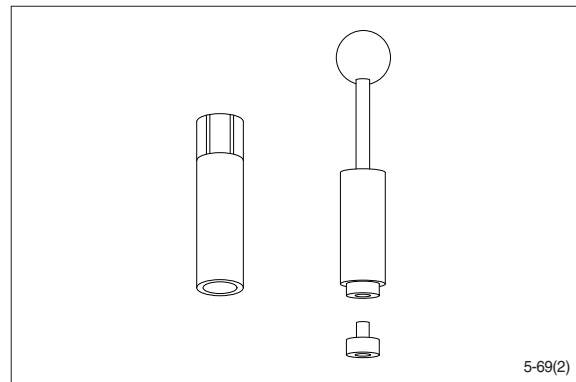


(3) Assembly tool for lip seal.

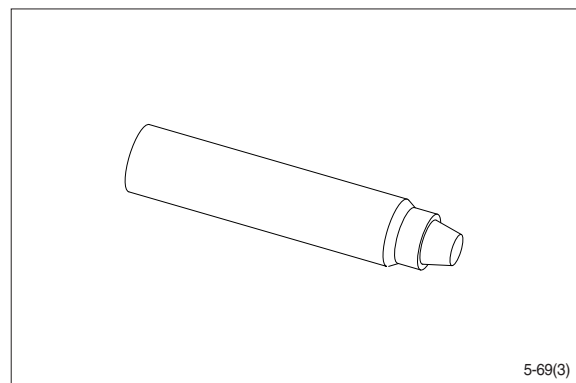

(4) Assembly tool for cardan shaft.

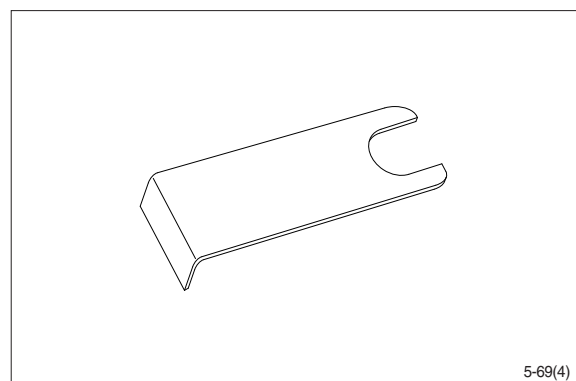


(5) Assembly tool for dust seal.

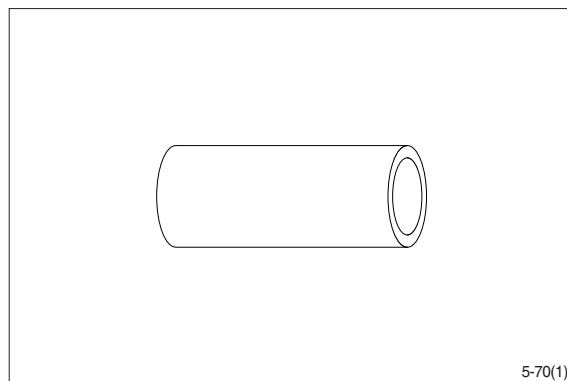


(6) Torque wrench 0~7.1 kgf · m
(0~54.4 lbf · ft)

13 mm socket spanner
6, 8 mm and 12 mm hexagon sockets
12 mm screwdriver
2 mm screwdriver
13 mm ring spanner
6, 8 and 12 mm hexagon socket spanners
Plastic hammer
Tweezers

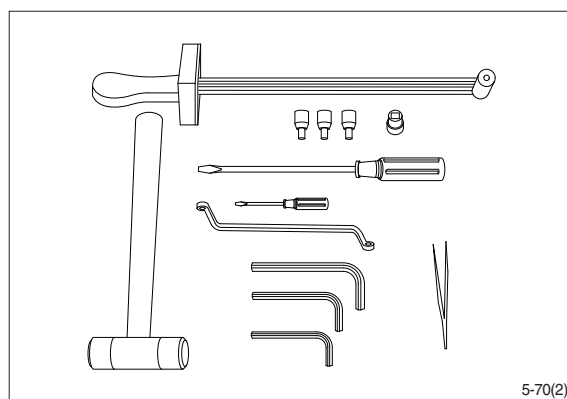

3) TIGHTENING TORQUE


L : Left port
R : Right port
T : Tank
P : Pump

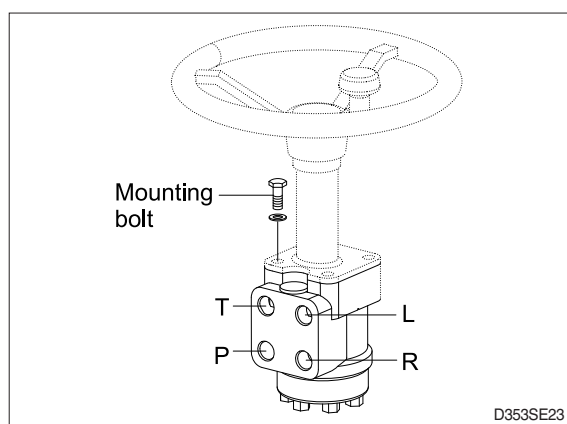


Port	Size	Torque [kgf · m (lbf · ft)]
L	3/4 UNF - 16	6.1 ± 0.6 (44.1 ± 4.3)
R	3/4 UNF - 16	6.1 ± 0.6 (44.1 ± 4.3)
T	3/4 UNF - 16	6.1 ± 0.6 (44.1 ± 4.3)
P	3/4 UNF - 16	6.1 ± 0.6 (44.1 ± 4.3)
Mounting bolt	M10 × 1.5	4.0 ± 0.5 (29 ± 3.6)

4) DISASSEMBLY


- (1) Disassemble steering column from steering unit and place the steering unit in the holding tool.
Screw out the screws in the end cover (6-off plus one special screw).

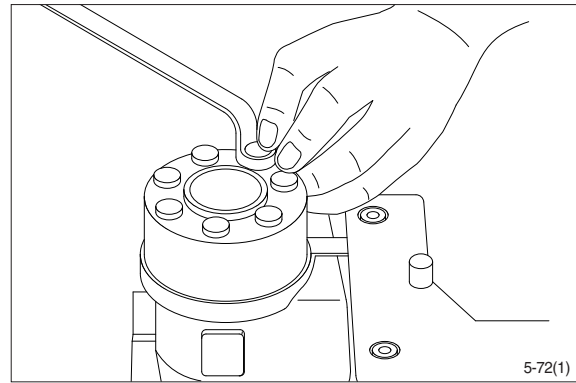


- (2) Remove the end cover, sideways.

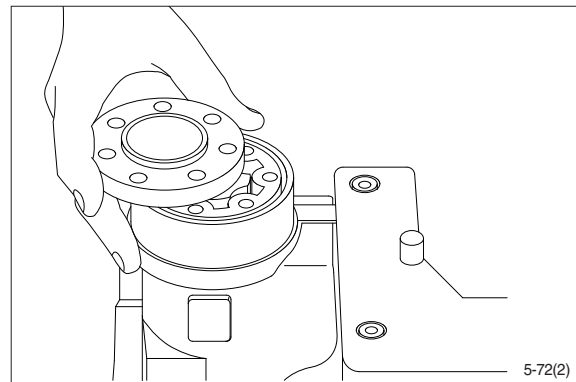


- (3) Lift the gearwheel set (With spacer if fitted) off the unit.
Take out the two O-rings.

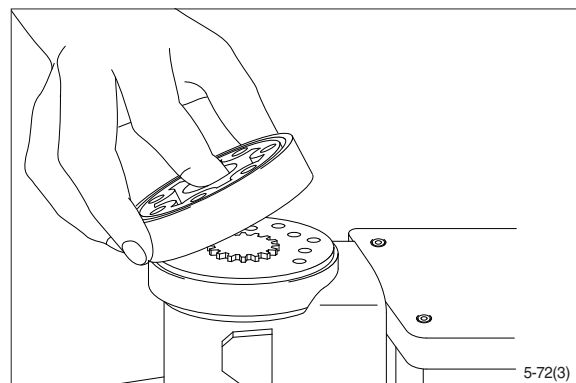


- (4) Remove cardan shaft.

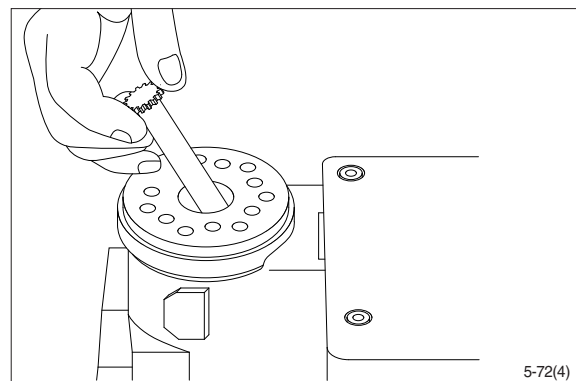


(5) Remove distributor plate.

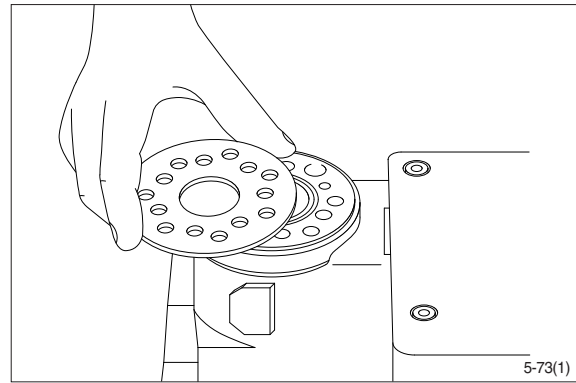


(6) Screw out the threaded bush over the check valve.

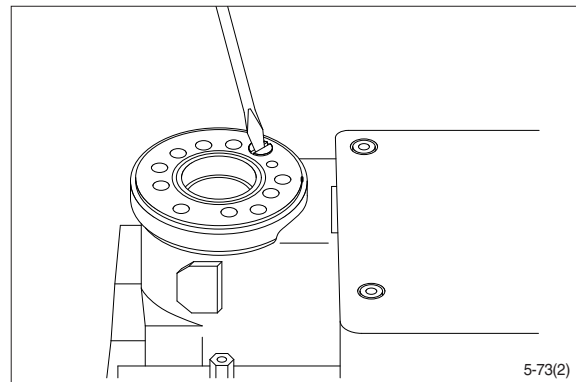


(7) Remove O-ring.

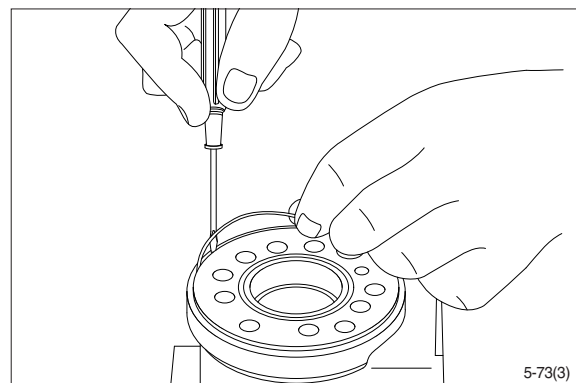


(8) Shake out the check valve ball and suction valve pins and balls.

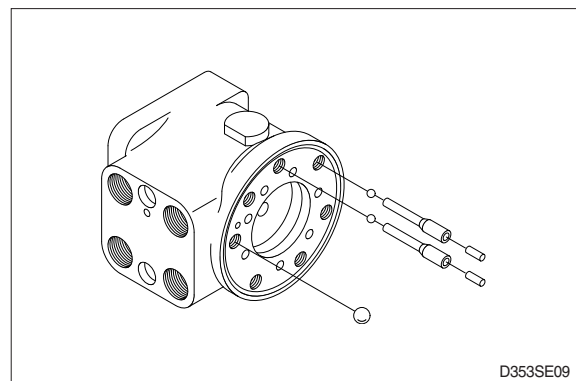


- (9) Take care to keep the cross pin in the sleeve and spool horizontal. The pin can be seen through the open end of the spool. Press the spool inwards and the sleeve, ring, bearing races and thrust bearing will be pushed out of the housing together.

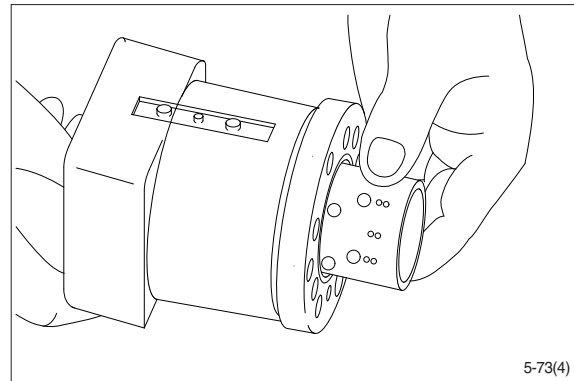


- (10) Take ring, bearing races and thrust bearing from sleeve and spool. The outer (Thin) bearing race can sometimes "stick" in the housing, therefore check that it has come out.

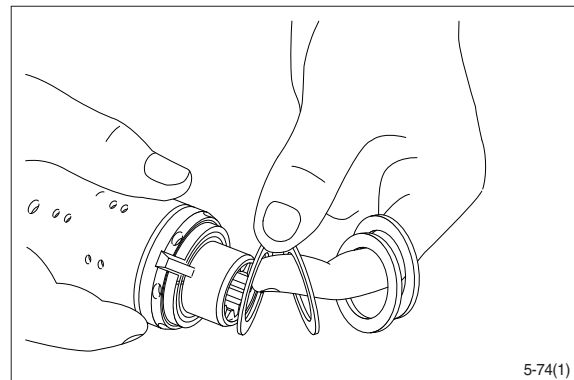


- (11) Press out the cross pin. Use the special screw from the end cover.

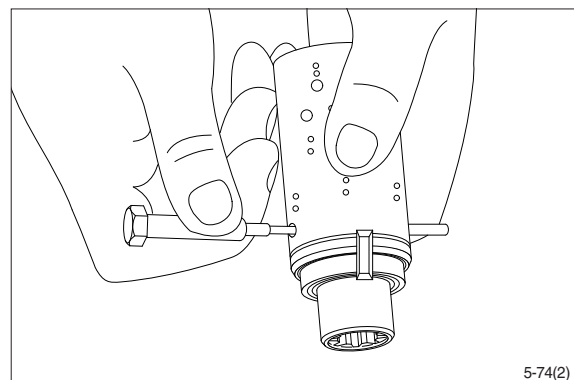


- ※ A small mark has been made with a pumice stone on both spool and sleeve close to one of the slots for the neutral position springs (See drawing). If the mark is not visible, remember to leave a mark of your own on sleeve and spool before the neutral position springs are disassembled.

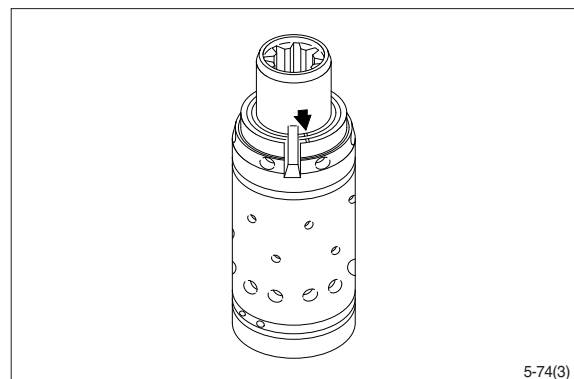


(12) Carefully press the spool out of the sleeve.

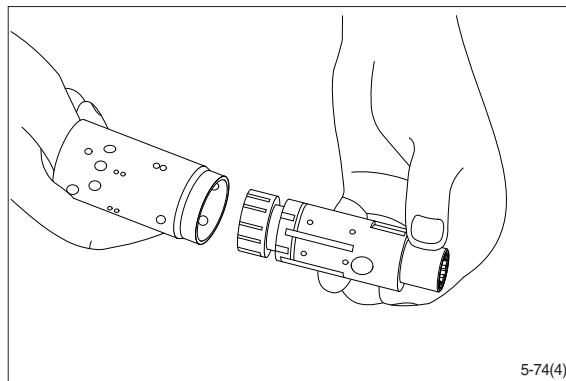

(13) Press the neutral position springs out of their slots in the spool.

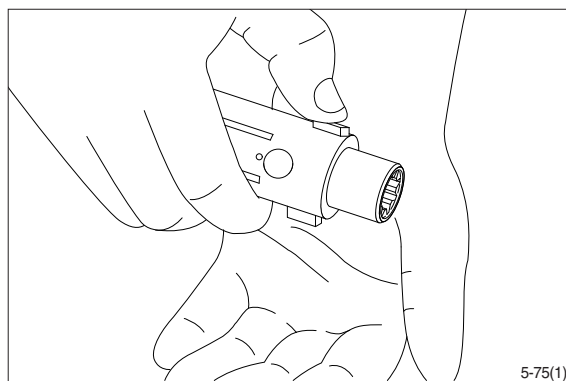


(14) Remove dust seal and O-ring.

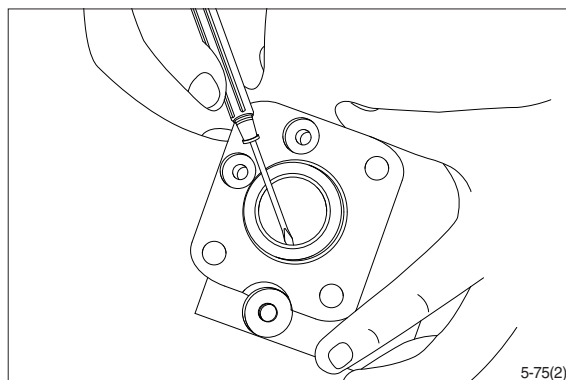


Disassembling the pressure relief valve


(15) Screw out the plug using an 8mm hexagon socket spanner.
Remove seal washers.

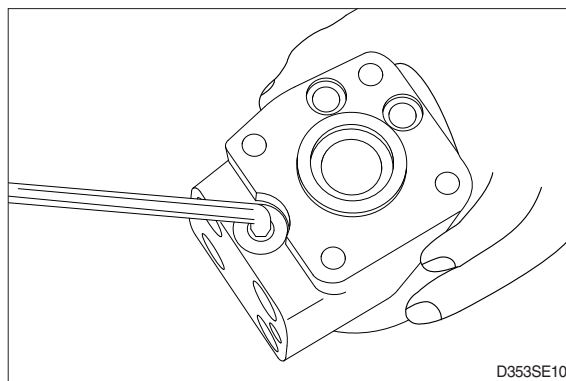


- (16) Unscrew the setting screw using an 8mm hexagon socket spanner.

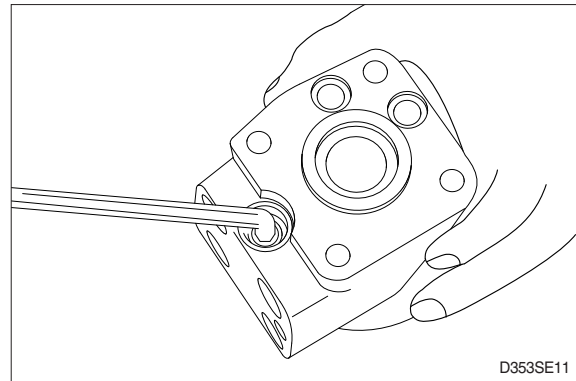

- (17) Shake out spring and piston. The valve seat is bonded into the housing and cannot be removed.

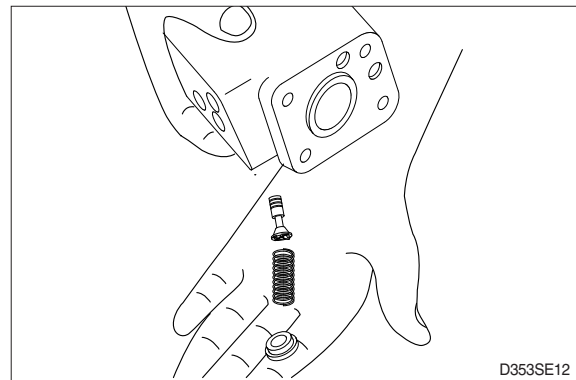


- (18) The pressure relief valve is now disassembled.

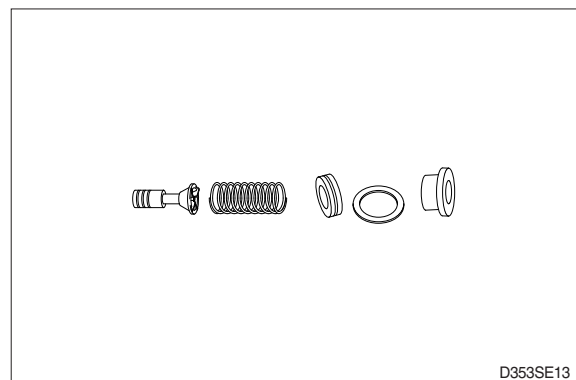

5) ASSEMBLY


(1) Assemble spool and sleeve.

※ When assembling spool and sleeve only one of two possible ways of positioning the spring slots is correct. There are three slots in the spool and three holes in the sleeve in the end of the spool / sleeve opposite to the end with spring slots. Place the slots and holes opposite each other so that parts of the holes in the sleeve are visible through the slots in the spool.

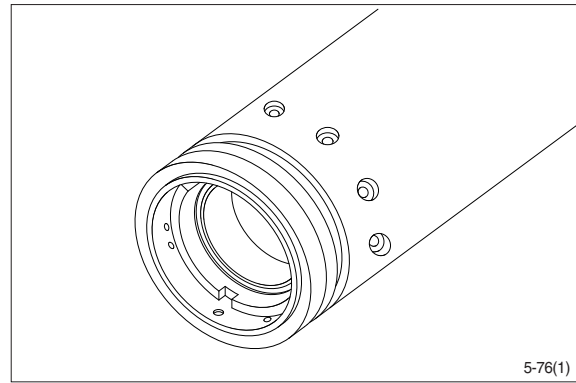


(2) Place the two flat neutral position springs in the slot.


Place the curved springs between the flat ones and press them into place (see assembly pattern).

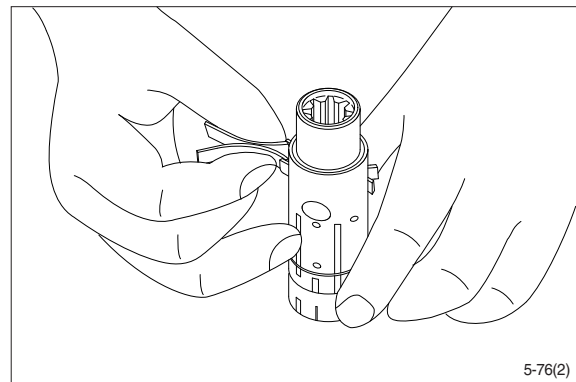


(3) Line up the spring set.

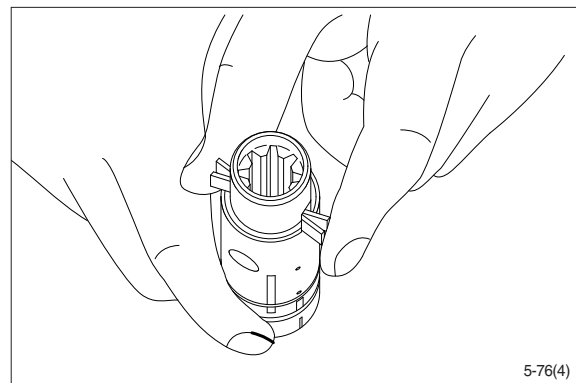


(4) Guide the spool into the sleeve. Make sure that spool and sleeve are placed correctly in relation to each other.

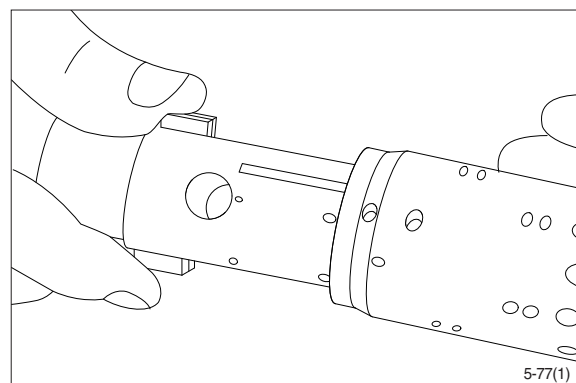


- (5) Press the springs together and push the neutral position springs into place in the sleeve.

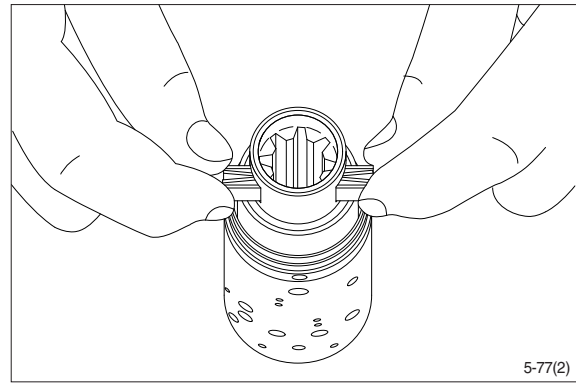


- (6) Line up the springs and center them.

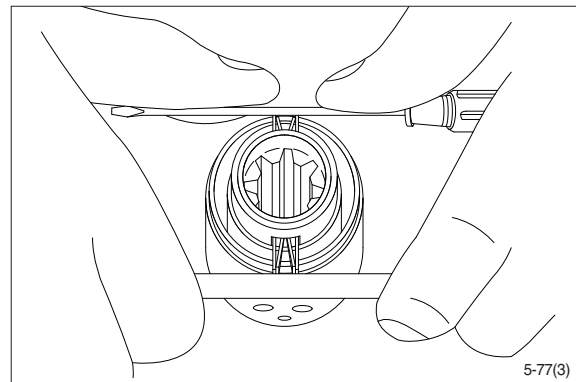


- (7) Guide the ring down over the sleeve.
※ The ring should be able to rotate free of the springs.

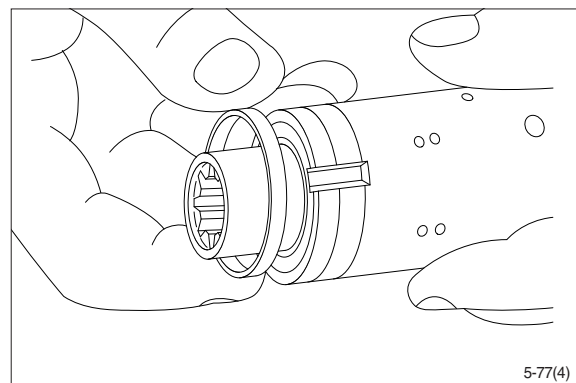

- (8) Fit the cross pin into the spool / sleeve.

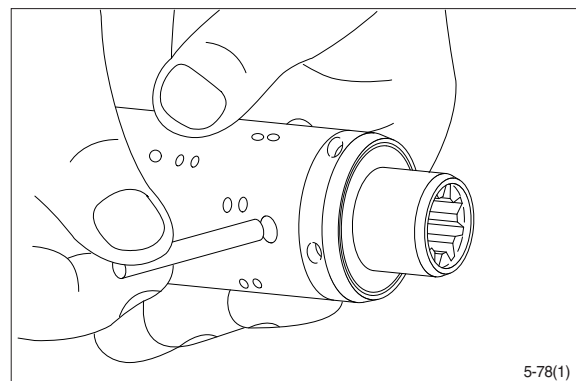


- (9) Fit bearing races and needle bearing as shown on below drawing.

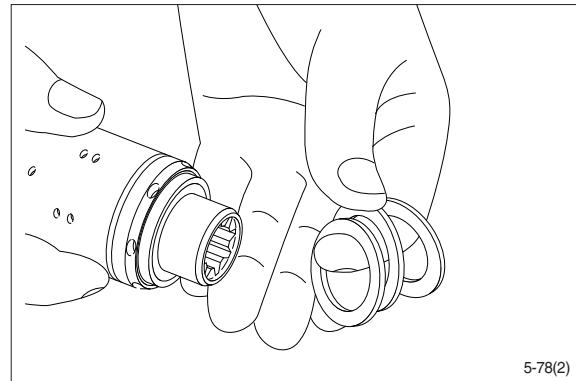


※ **Assembly pattern for standard bearings**

- 1 Outer bearing race
- 2 Thrust bearing
- 3 Inner bearing race
- 4 Spool
- 5 Sleeve


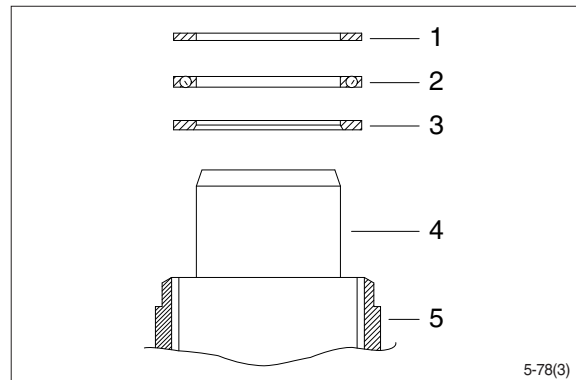


Installation instruction for O-ring


- (10) Turn the steering unit until the bore is horizontal. Guide the outer part of the assembly tool into the bore for the spool / sleeve.

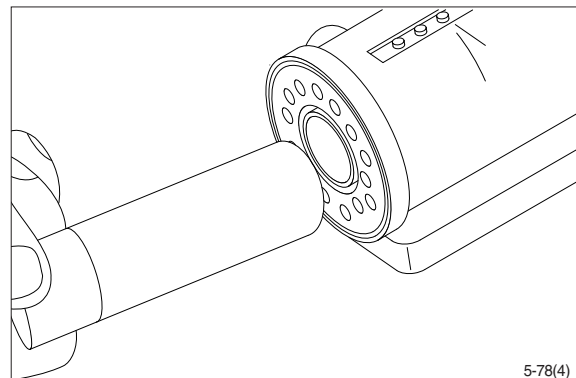


- (11) Grease O-ring with hydraulic oil and place them on the tool.

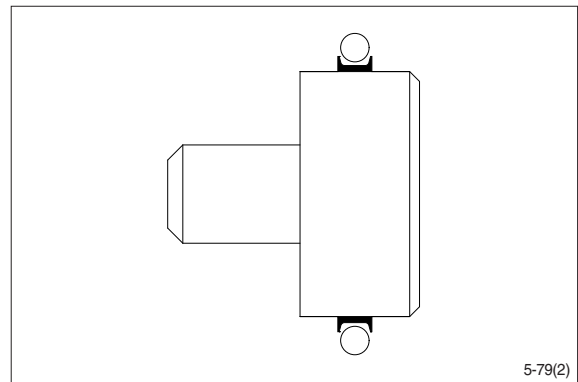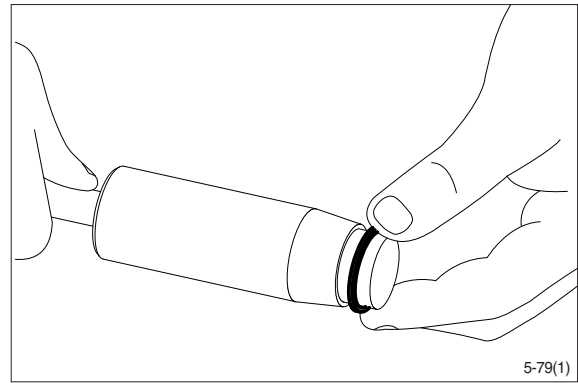


- (12) Hold the outer part of the assembly tool in the bottom of the steering unit housing and guide the inner part of the tool right to the bottom.

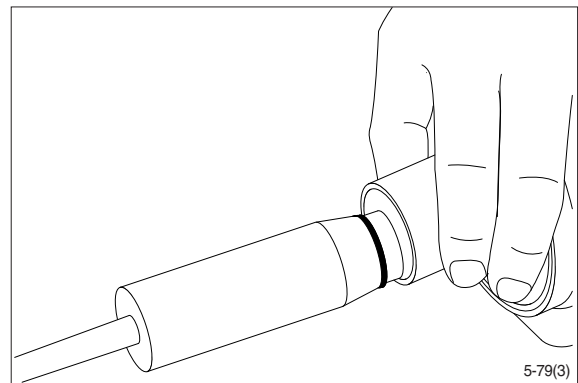

- (13) Press and turn the O-ring into position in the housing.


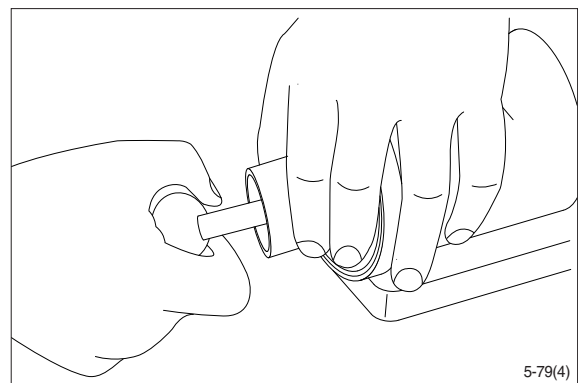


- (14) Draw the inner and outer parts of the assembly tool out of the steering unit bore, leaving the guide from the inner part in the bore.

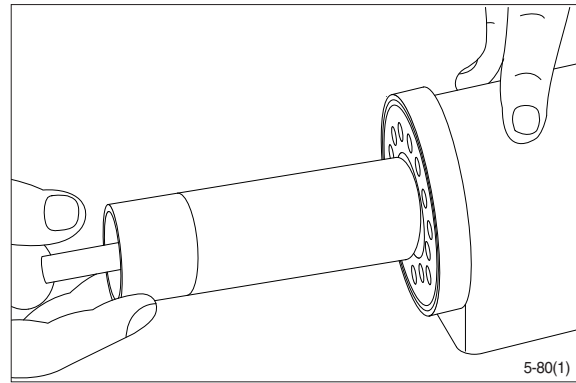


Installation instructions for lip seal


- (15) Lubricate the lip seal with hydraulic oil and place it on the assembly tool.

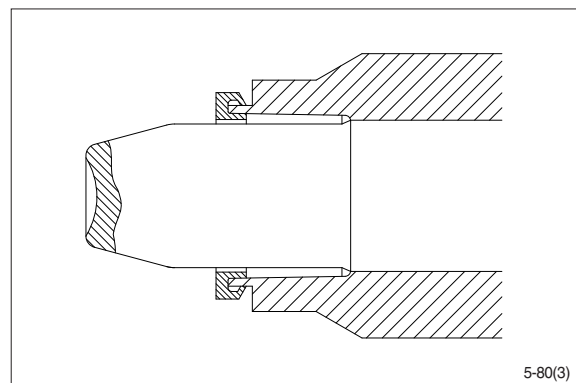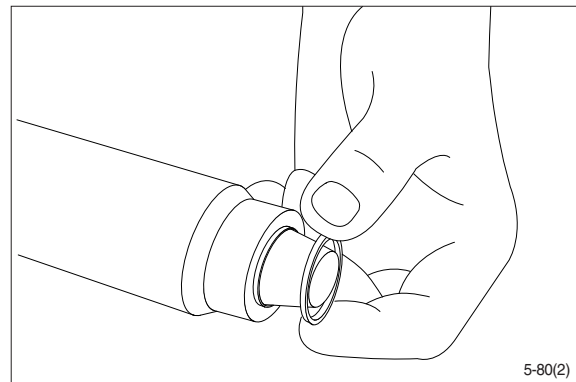


- (16) Guide the assembly tool right to the bottom.

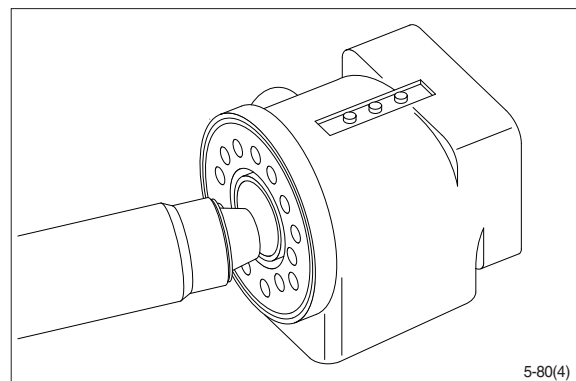


- (17) Press and turn the lip seal into place in the housing.

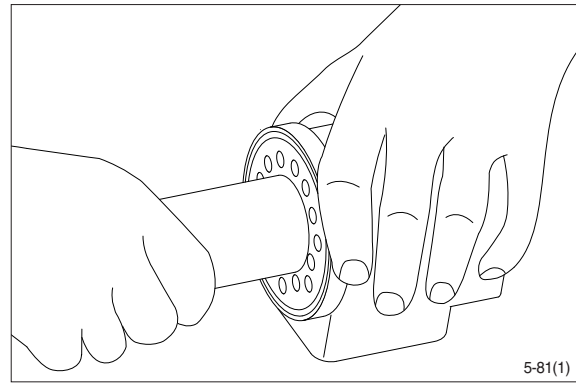


- (18) With a light turning movement, guide the spool and sleeve into the bore.
※ Fit the spool set holding the cross pin horizontal.

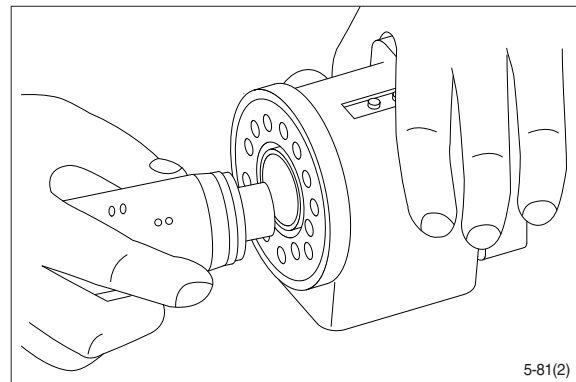


- (19) The spool set will push out the assembly tool guide.
The O-ring are now in position.

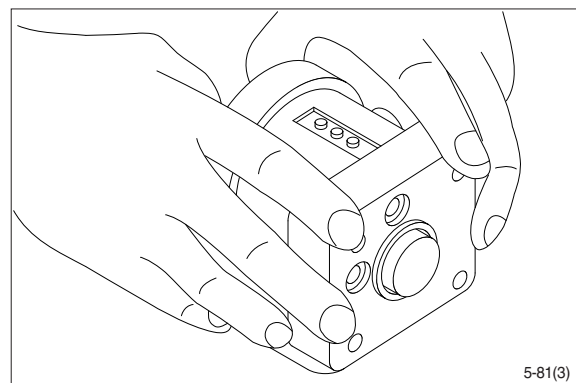


- (20) Turn the steering unit until the bore is vertical again. Put the check valve ball into the hole indicated by the arrow.

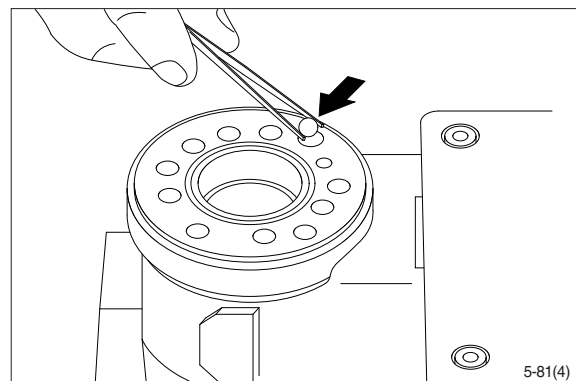


- (21) Screw the threaded bush lightly into the check valve bore. The top of the bush must lie just below the surface of the housing.

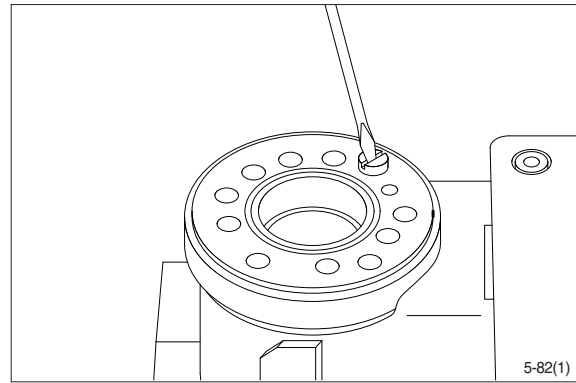


- (22) Grease the O-ring with mineral oil approx. viscosity 500 cSt at 20°C.

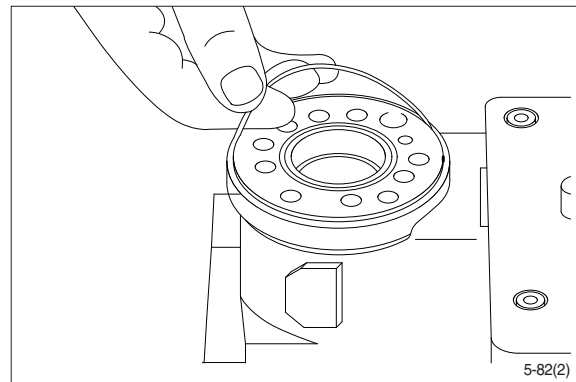


- (23) Place the distributor plate so that the channel holes match the holes in the housing.

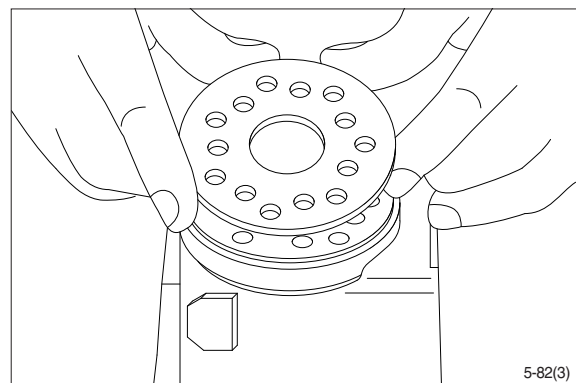


- (24) Guide the cardan shaft down into the bore so that the slot is parallel with the connection flange.

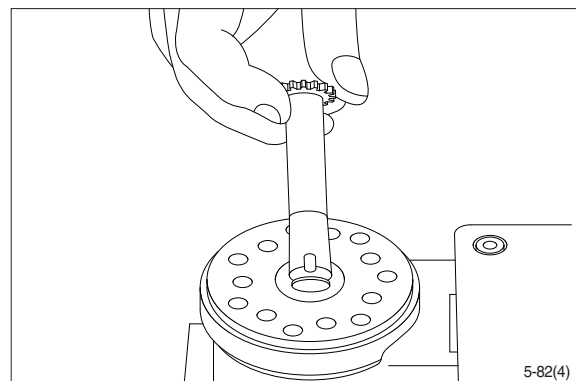

- (25) Place the cardan shaft as shown - so that it is held in position by the mounting fork.

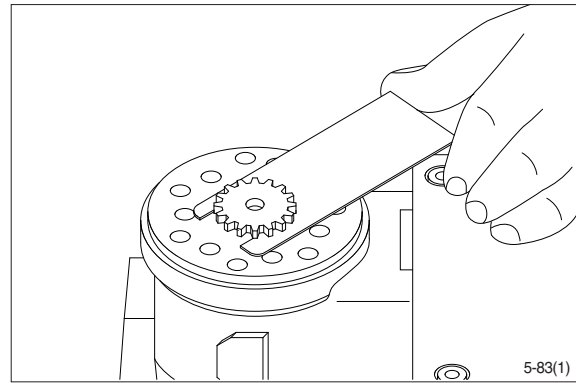


- (26) Grease the two O-rings with mineral oil approx. viscosity 500 cSt at 20°C and place them in the two grooves in the gear rim. Fit the gearwheel and rim on the cardan shaft.

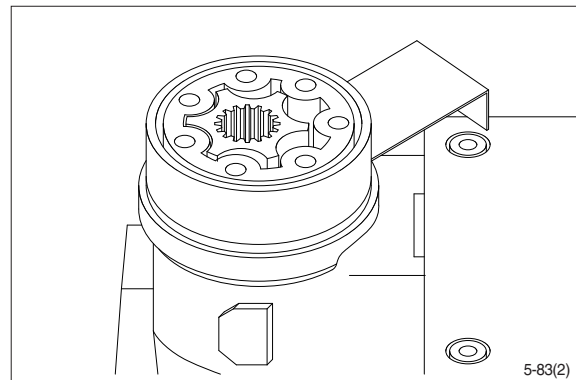


(27) Important

Fit the gearwheel (Rotor) and cardan shaft so that a tooth base in the rotor is positioned in relation to the shaft slot as shown.


Turn the gear rim so that the seven through holes match the holes in the housing.

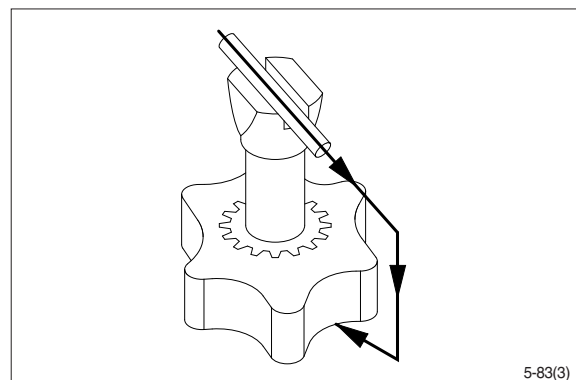


- (28) Fit the spacer, if any.

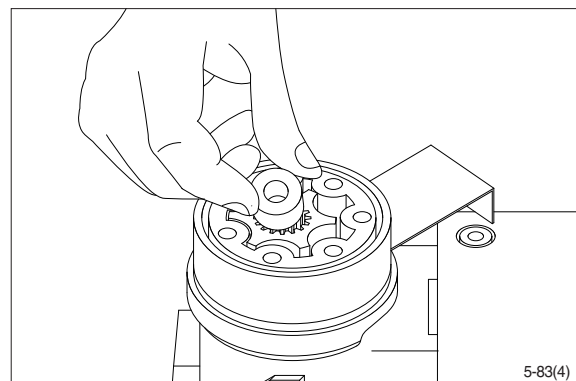

(29) Place the end cover in position.

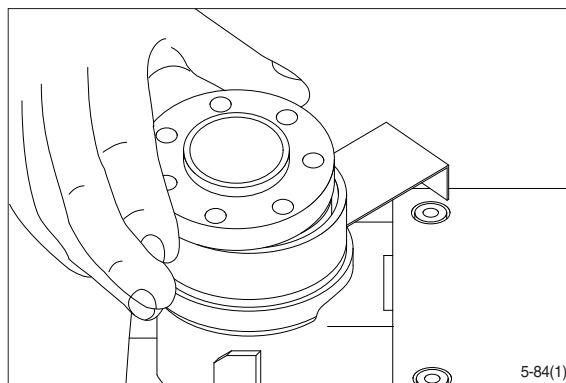


(30) Fit the special screw with washer and place it in the hole shown.

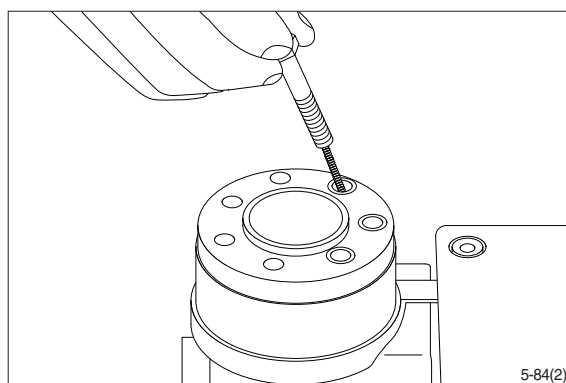


(31) Fit the six screws with washers and insert them. Cross-tighten all the screws and the rolled pin.


- Tightening torque : $4.0 \pm 0.5 \text{ kgf} \cdot \text{m}$
($28.9 \pm 3.6 \text{ lbf} \cdot \text{ft}$)

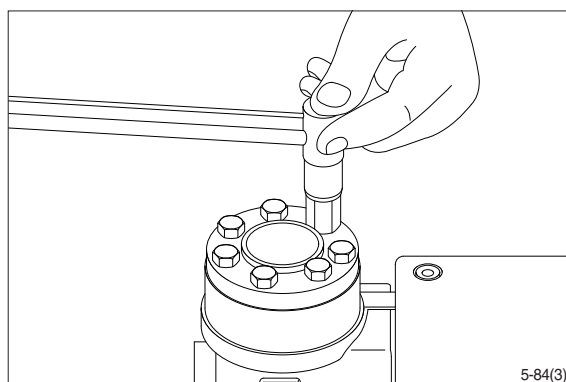

(32) Place the dust seal ring in the housing.

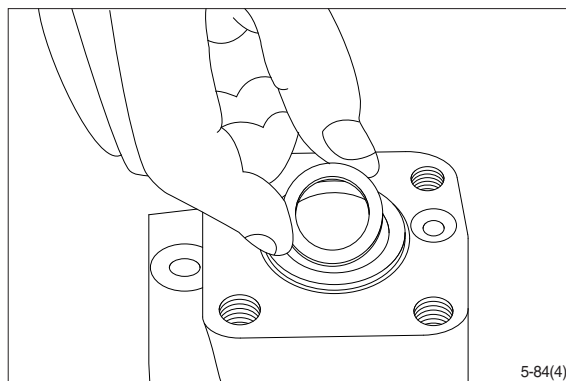


(33) Fit the dust seal ring in the housing.

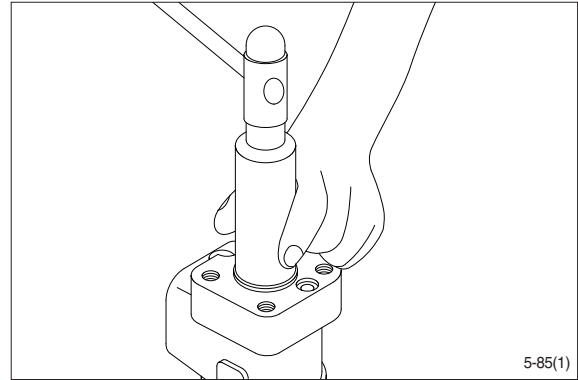


(34) Press the plastic plugs into the connection ports.

※ Do not use a hammer!

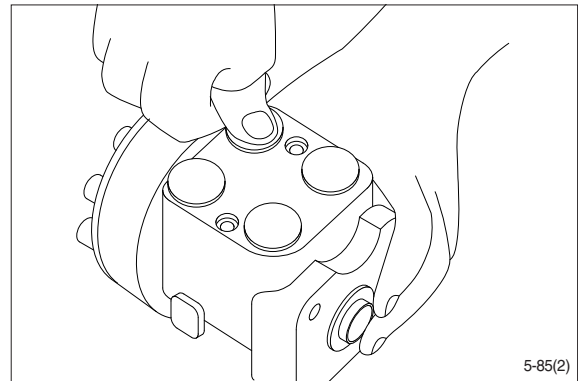

2. STEERING CYLINDER

1) STRUCTURE

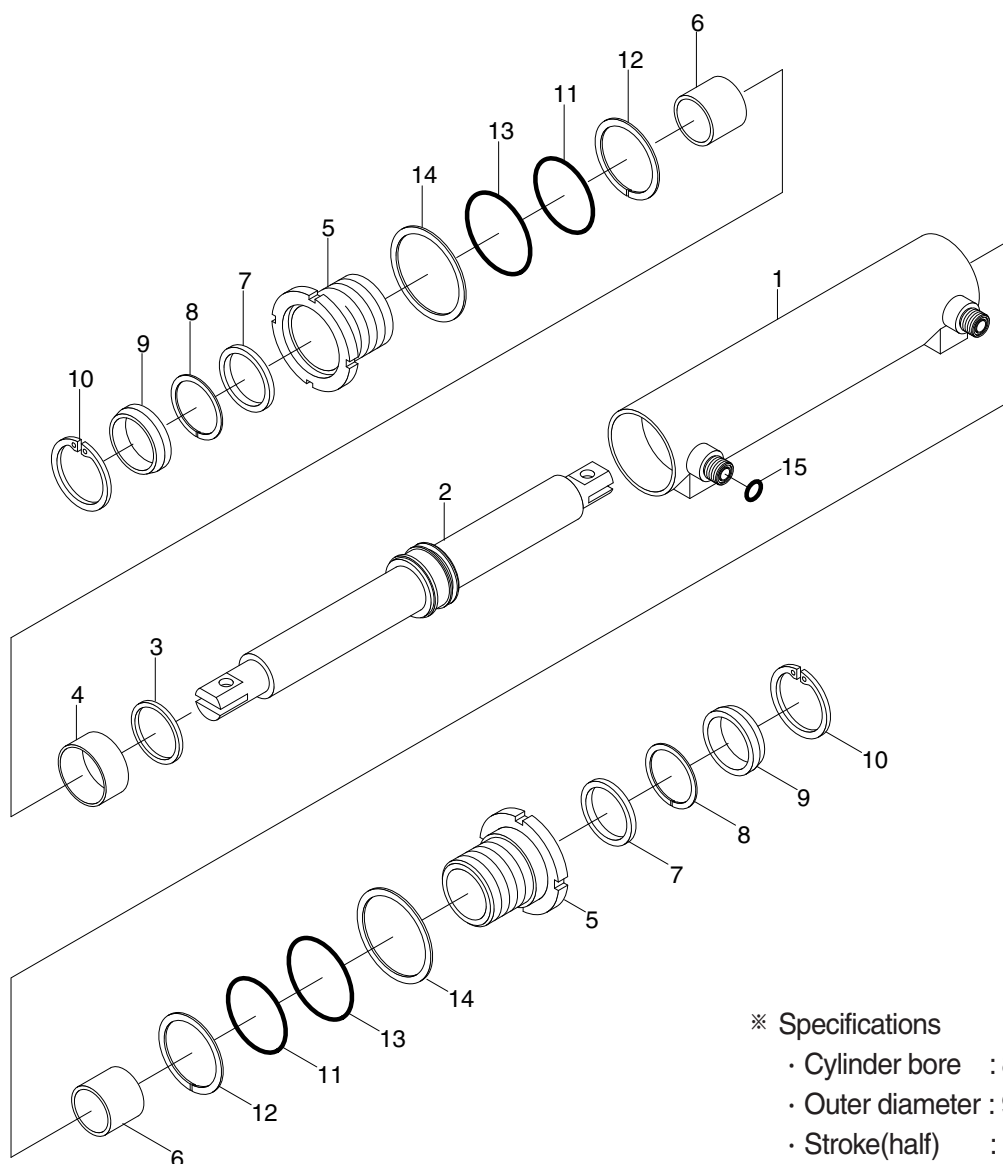

※ Specifications

- Cylinder bore : 80 mm
- Outer diameter : 94 mm
- Stroke(half) : 180 mm
- Rod diameter : 55 mm

D357SE21

- | | | |
|---------------|----------------|-----------------|
| 1 Tube assy | 6 DU bushing | 11 O-ring |
| 2 Rod assy | 7 Rod seal | 12 Back up ring |
| 3 Piston seal | 8 Back up ring | 13 O-ring |
| 4 Wear ring | 9 Dust wiper | 14 Lock washer |
| 5 Gland | 10 Snap ring | 15 O-ring |

2) DISASSEMBLY

※ Before disassembling steering cylinder, release oil in the cylinder first.

- (1) Put wooden blocks against the cylinder tube, then hold in & vice.
- (2) Remove the cover by hook a wrench in the notch of cylinder head and turn counter-clockwise.
- (3) Remove the cylinder rod and piston from the tube.
- (4) Check wear condition of the sealing parts (O-ring, oil seal, dust seal, U-packing, bush). If there are some damage, replace with new parts.

3) CHECK AND INSPECTION


mm (in)

Check item	Criteria		Remedy
	Standard size	Repair limit	
Clearance between piston & cylinder tube	0.05~0.25 (0.002~0.01)	0.4 (0.02)	Replace piston seal
Clearance between cylinder rod & bushing	0.05~0.18 (0.002~0.007)	0.3 (0.01)	Replace bushing
Seals, O-ring	Damage		Replace
Cylinder rod	Dents		Replace
Cylinder tube	Biting		Replace


4) ASSEMBLY

- (1) Install a new piston seal around the groove on the piston.


※ Be careful not to scratch the seal too much during installation or it could not be seated properly.

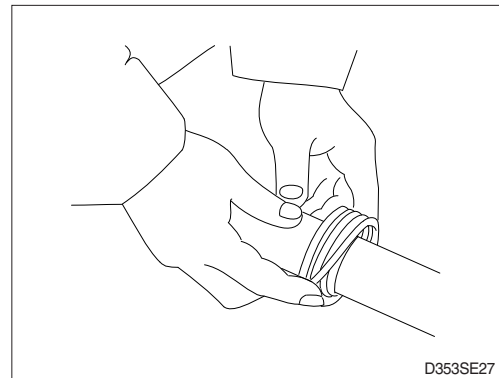


- (2) Install the rod seal to the position in the gland applying a slight coat with grease prior to install.

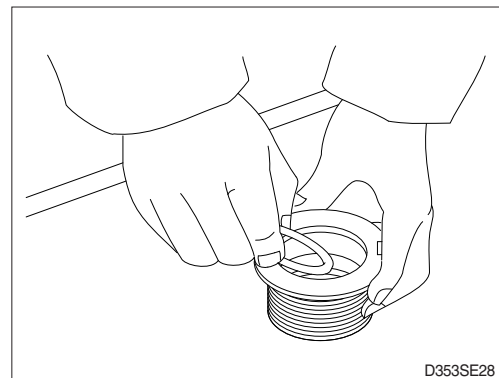


- (3) Install the dust wiper to the gland using a special installing tool. Coat the dust wiper with grease slightly before installing.
- (4) Using a special tool, install gland assembly into the cylinder tube.

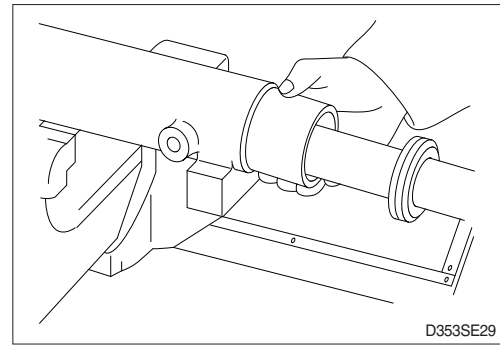

- (5) Using a hook spanner, install the gland assembly, and tighten it with torque $60 \pm 6 \text{ kgf}\cdot\text{m}$ ($434 \pm 43 \text{ lbf}\cdot\text{ft}$).

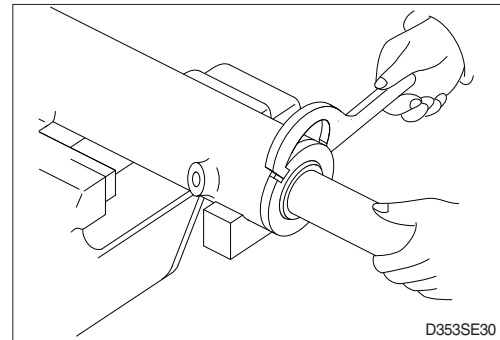


- (6) After the gland assembly was installed to the cylinder tube, calk at the tube end into the groove on the gland to prevent screw loosening.
- ※ If it is needed to calk again, never calk on the same place.

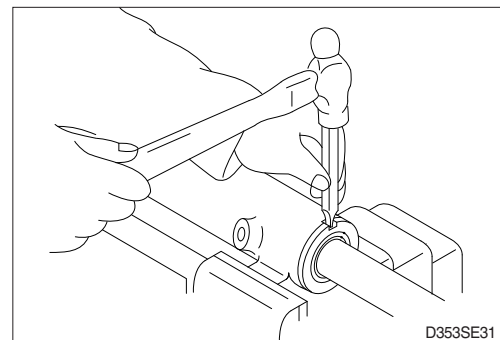

- (7) Move the piston rod back and forth several times for the full distance of its stroke. This helps to seat the ring and seals before applying full hydraulic pressure to the cylinder.
- (8) Install cylinder into trail axle.
- (9) While idling the engine with the rear wheels off the ground, operate the steering wheel left and right alternately.
- ※ Then, repeat the above operation at gradually increasing engine rpm. This releases air from the system and completes preparation for operation.
- (10) Stop the engine, lower the floating rear wheels, and check pump joints for oil leaks and looseness and retighten, them as required.

3. STEERING AXLE


1) STRUCTURE

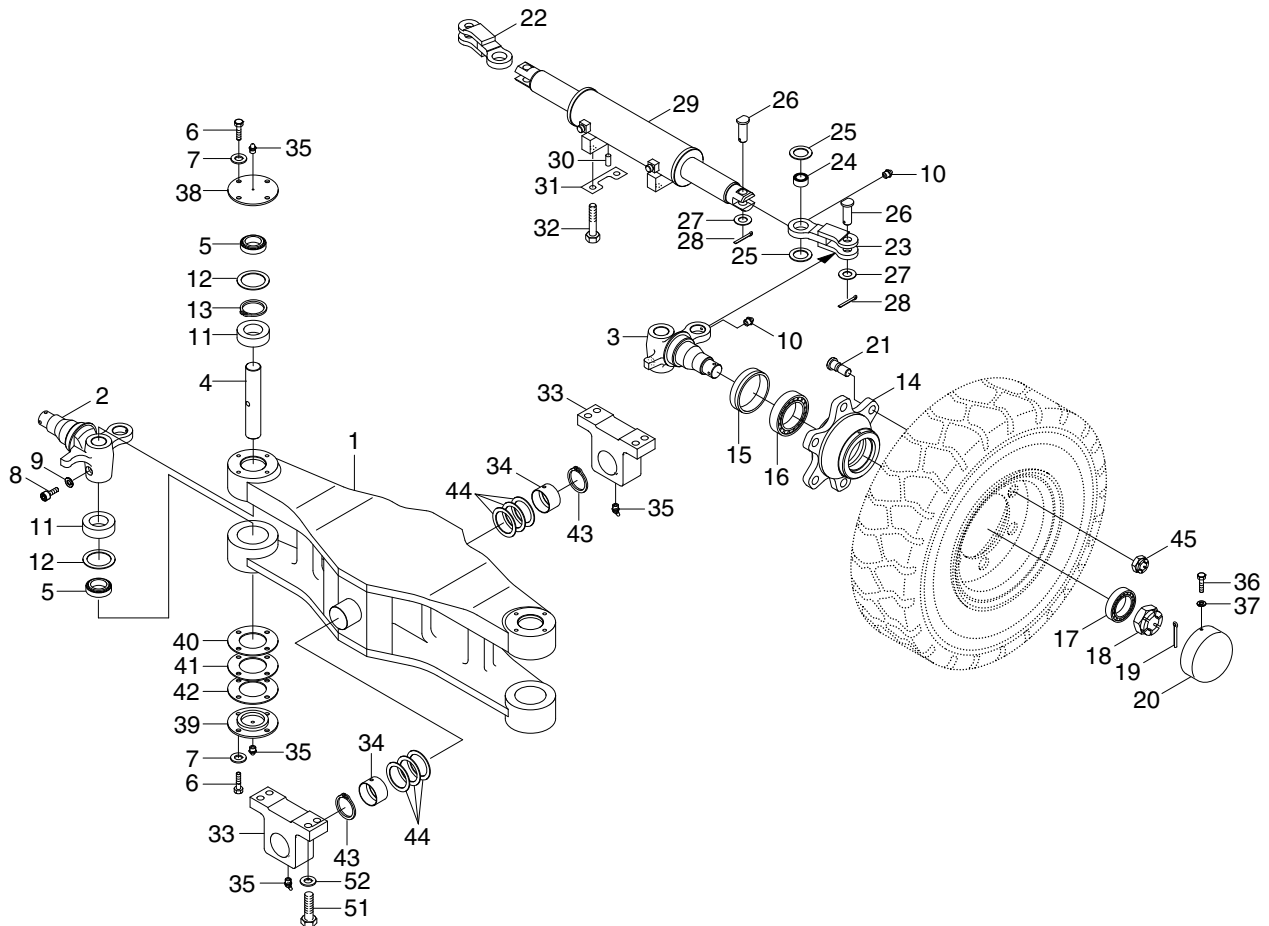

35D9SSE06

1	Axle center	13	Retaining ring	25	Thrust washer	37	Spring washer
2	Knuckle-RH	14	Hub	26	Clevis pin	38	Upper cover
3	Knuckle-LH	15	Oil seal	27	Plain washer	39	Lower cover
4	King pin	16	Taper roller bearing	28	Split pin	40	Shim (0.1t)
5	Taper roller bearing	17	Taper roller bearing	29	Steering cylinder	41	Shim (0.15t)
6	Hexagon bolt	18	Slotted nut	30	Pin	42	Shim (0.3t)
7	Spring washer	19	Split pin	31	Lock plate	43	Retaining ring
8	Special bolt	20	Hub cap	32	Hexagon bolt	44	Shim (0.5t)
9	Spring washer	21	Serration bolt	33	Support	45	Hub nut
10	Grease nipple	22	Link-RH	34	Bushing	51	Hexagon bolt
11	Collar	23	Link-LH	35	Grease nipple	52	Spring washer
12	Oil seal	24	SPH plain bearing	36	Hexagon bolt		

2) CHECK AND INSPECTION

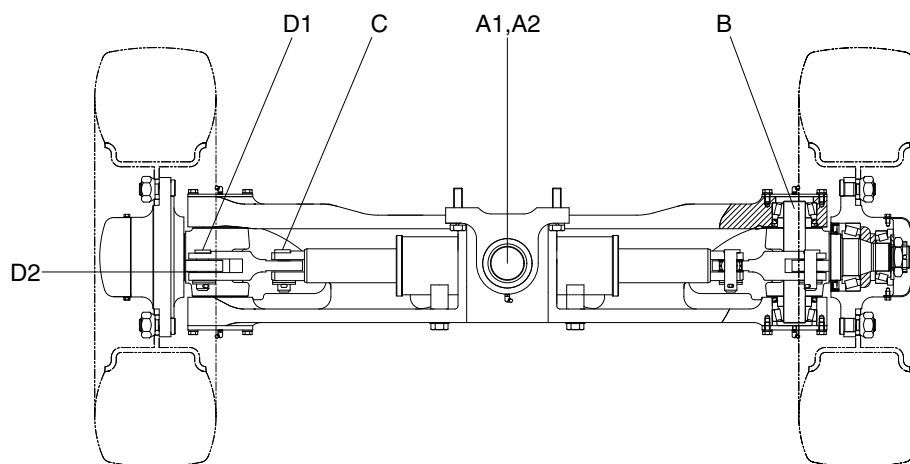

35DS7SE08

unit : mm (in)


No.	Check item			Criteria		Remedy
				Standard size	Repair limit	
A	Shaft	A1	OD of shaft	55 (2.2)	54.5 (2.1)	Replace
		A2	ID of bushing	55 (2.2)	55.5 (2.2)	
B	OD of king pin			35 (1.4)	34.5 (1.4)	
C	OD of steering cylinder pin			20 (0.8)	19.5 (0.8)	
D	Knuckle	D1	OD of pin	20 (0.8)	19.5 (0.8)	Adjust with shims
		D2	Vertical play	-	-	

- OD : Outer diameter
- ID : Inner diameter


3) DISASSEMBLY

※ Servicing work on the knuckle part can be carried out without removing the axle assy from chassis.
The work can be done by jacking up the counter weight part of the truck.


- (1) Loosen the hub nut and take off the steering wheel tire.

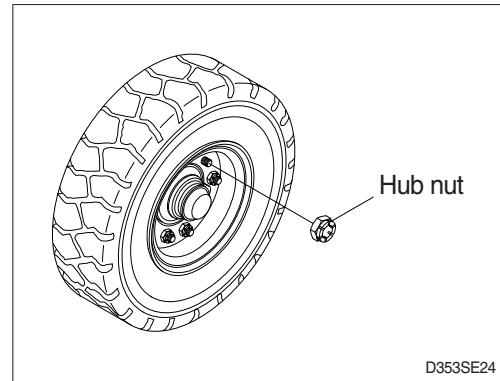

- (2) Remove Hub cap.
- (3) Pull out split pin and remove lock nut.
- (4) Using the puller, take off the hub together with the roller bearing.
 - ※ Be very careful because just before the hub comes off, tapered roller bearing will fall out.
- (5) After hub is removed take off the inner race of roller bearing.
- (6) Pull out oil seal.
 - ※ Don't use same oil seal twice.
- (7) Repeat the same procedure for the other side.
Moreover, when disassembling is completed, part the lock nut in the knuckle to protect the threaded portion.

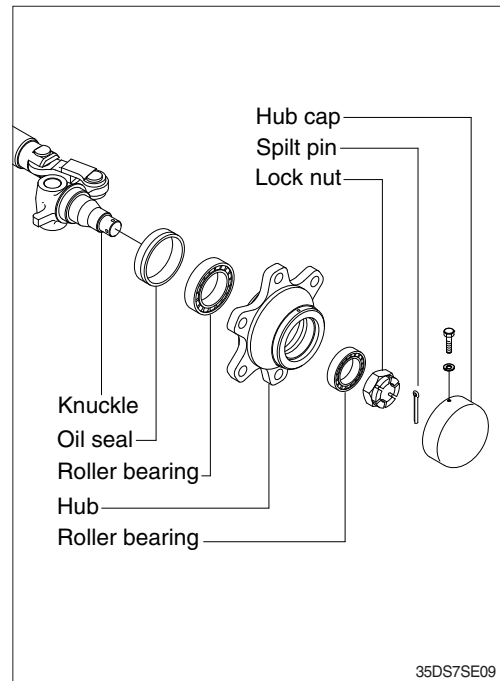

- (8) Loosen special bolt (8) and spring washer (9).
- (9) Remove hexagon bolt (6) and upper cover (38).
- (10) Push out the king pin (4) without damaging the knuckle arm (2).
- (11) If defect is observed in taper roller bearing (5), pull it out by using extractor.
- (12) Remove split pin (28), plain washer (27) and clevis pin (26).

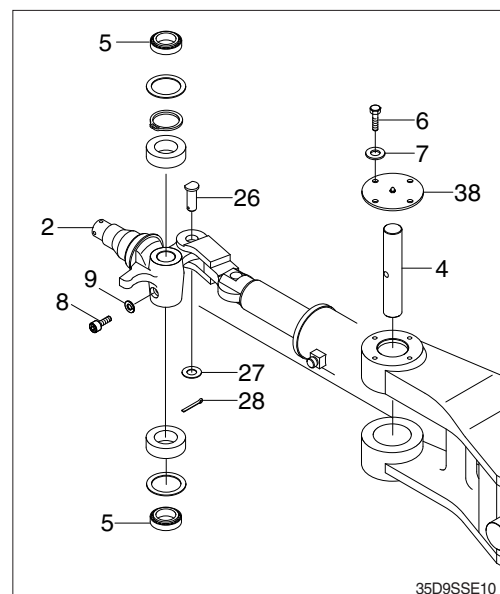

4) ASSEMBLY


※ In reassembling, have all parts washed, grease applied to lubricating parts, and all expendable items such as oil seal and spring washers replaced by new ones.

Perform the disassembly in reverse order.

- (1) Tighten the special bolt (8) and washer (9) of king pin (4).
- (2) There is a notch in the middle of the king pin (4), make sure that this notch is on the special bolt side.
- (3) Do not hammer to drive in taper roller bearing (5) because it will break.
Always use drive-in tool.
Be sure that the fixed ring of the bearing is placed in position facing the knuckle (3).

(4) Hub

- ① Mount oil seal (15) and inner race of taper roller bearing (16) on the knuckle. The bearing should be well greased before assembling.
- ② Install the outer race of the taper roller bearing (17) in the wheel center and assemble to the knuckle.
- ③ Tighten nut (18) and lock with split pin (19). In locking with split pin, locate the hole for the split pin by turning the nut back 1/6 of a turn. Adjust the preload of bearing.
- ④ Mount the hub cap (20) and tighten with bolt (36).
Bearing should be well greased before assembling.

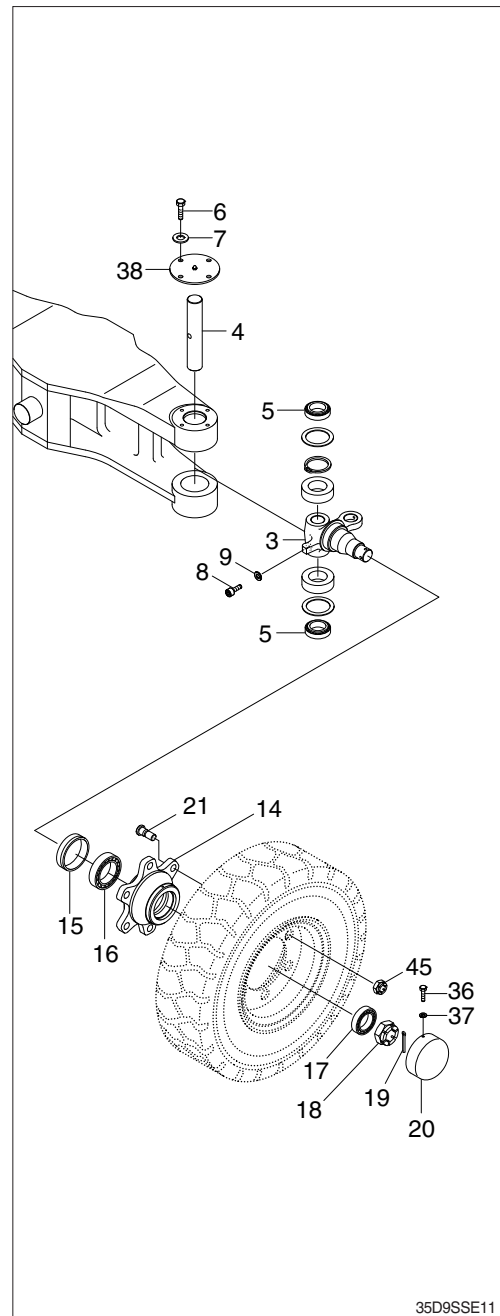

35D9SSE11