

SECTION 6 HYDRAULIC SYSTEM


Group 1	Structure and function	6-1
Group 2	Operational checks and troubleshooting	6-19
Group 3	Disassembly and assembly	6-23

GROUP 1 STRUCTURE AND FUNCTION


50D9HS01

- | | | | | | |
|---|----------------------|----|--------------------|----|--------------------|
| 1 | Main pump | 10 | Accumulator | 19 | Lift cylinder |
| 2 | Axle cooling pump | 11 | Pressure switch | 20 | Tilt cylinder |
| 3 | Priority valve | 12 | Accumulator | 21 | Steering cylinder |
| 4 | Main control valve | 13 | Line filter | 22 | Hand pump |
| 5 | Steering unit | 14 | Pressure switch | 23 | Electric pump |
| 6 | Brake valve | 15 | Down control valve | 24 | Cab tilt cylinder |
| 7 | Cut-off valve | 16 | Down safety valve | 25 | Latch |
| 8 | Remote control valve | 17 | Suction strainer | 26 | Hydraulic oil tank |
| 9 | Line filter | 18 | Return filter | | |



6-1

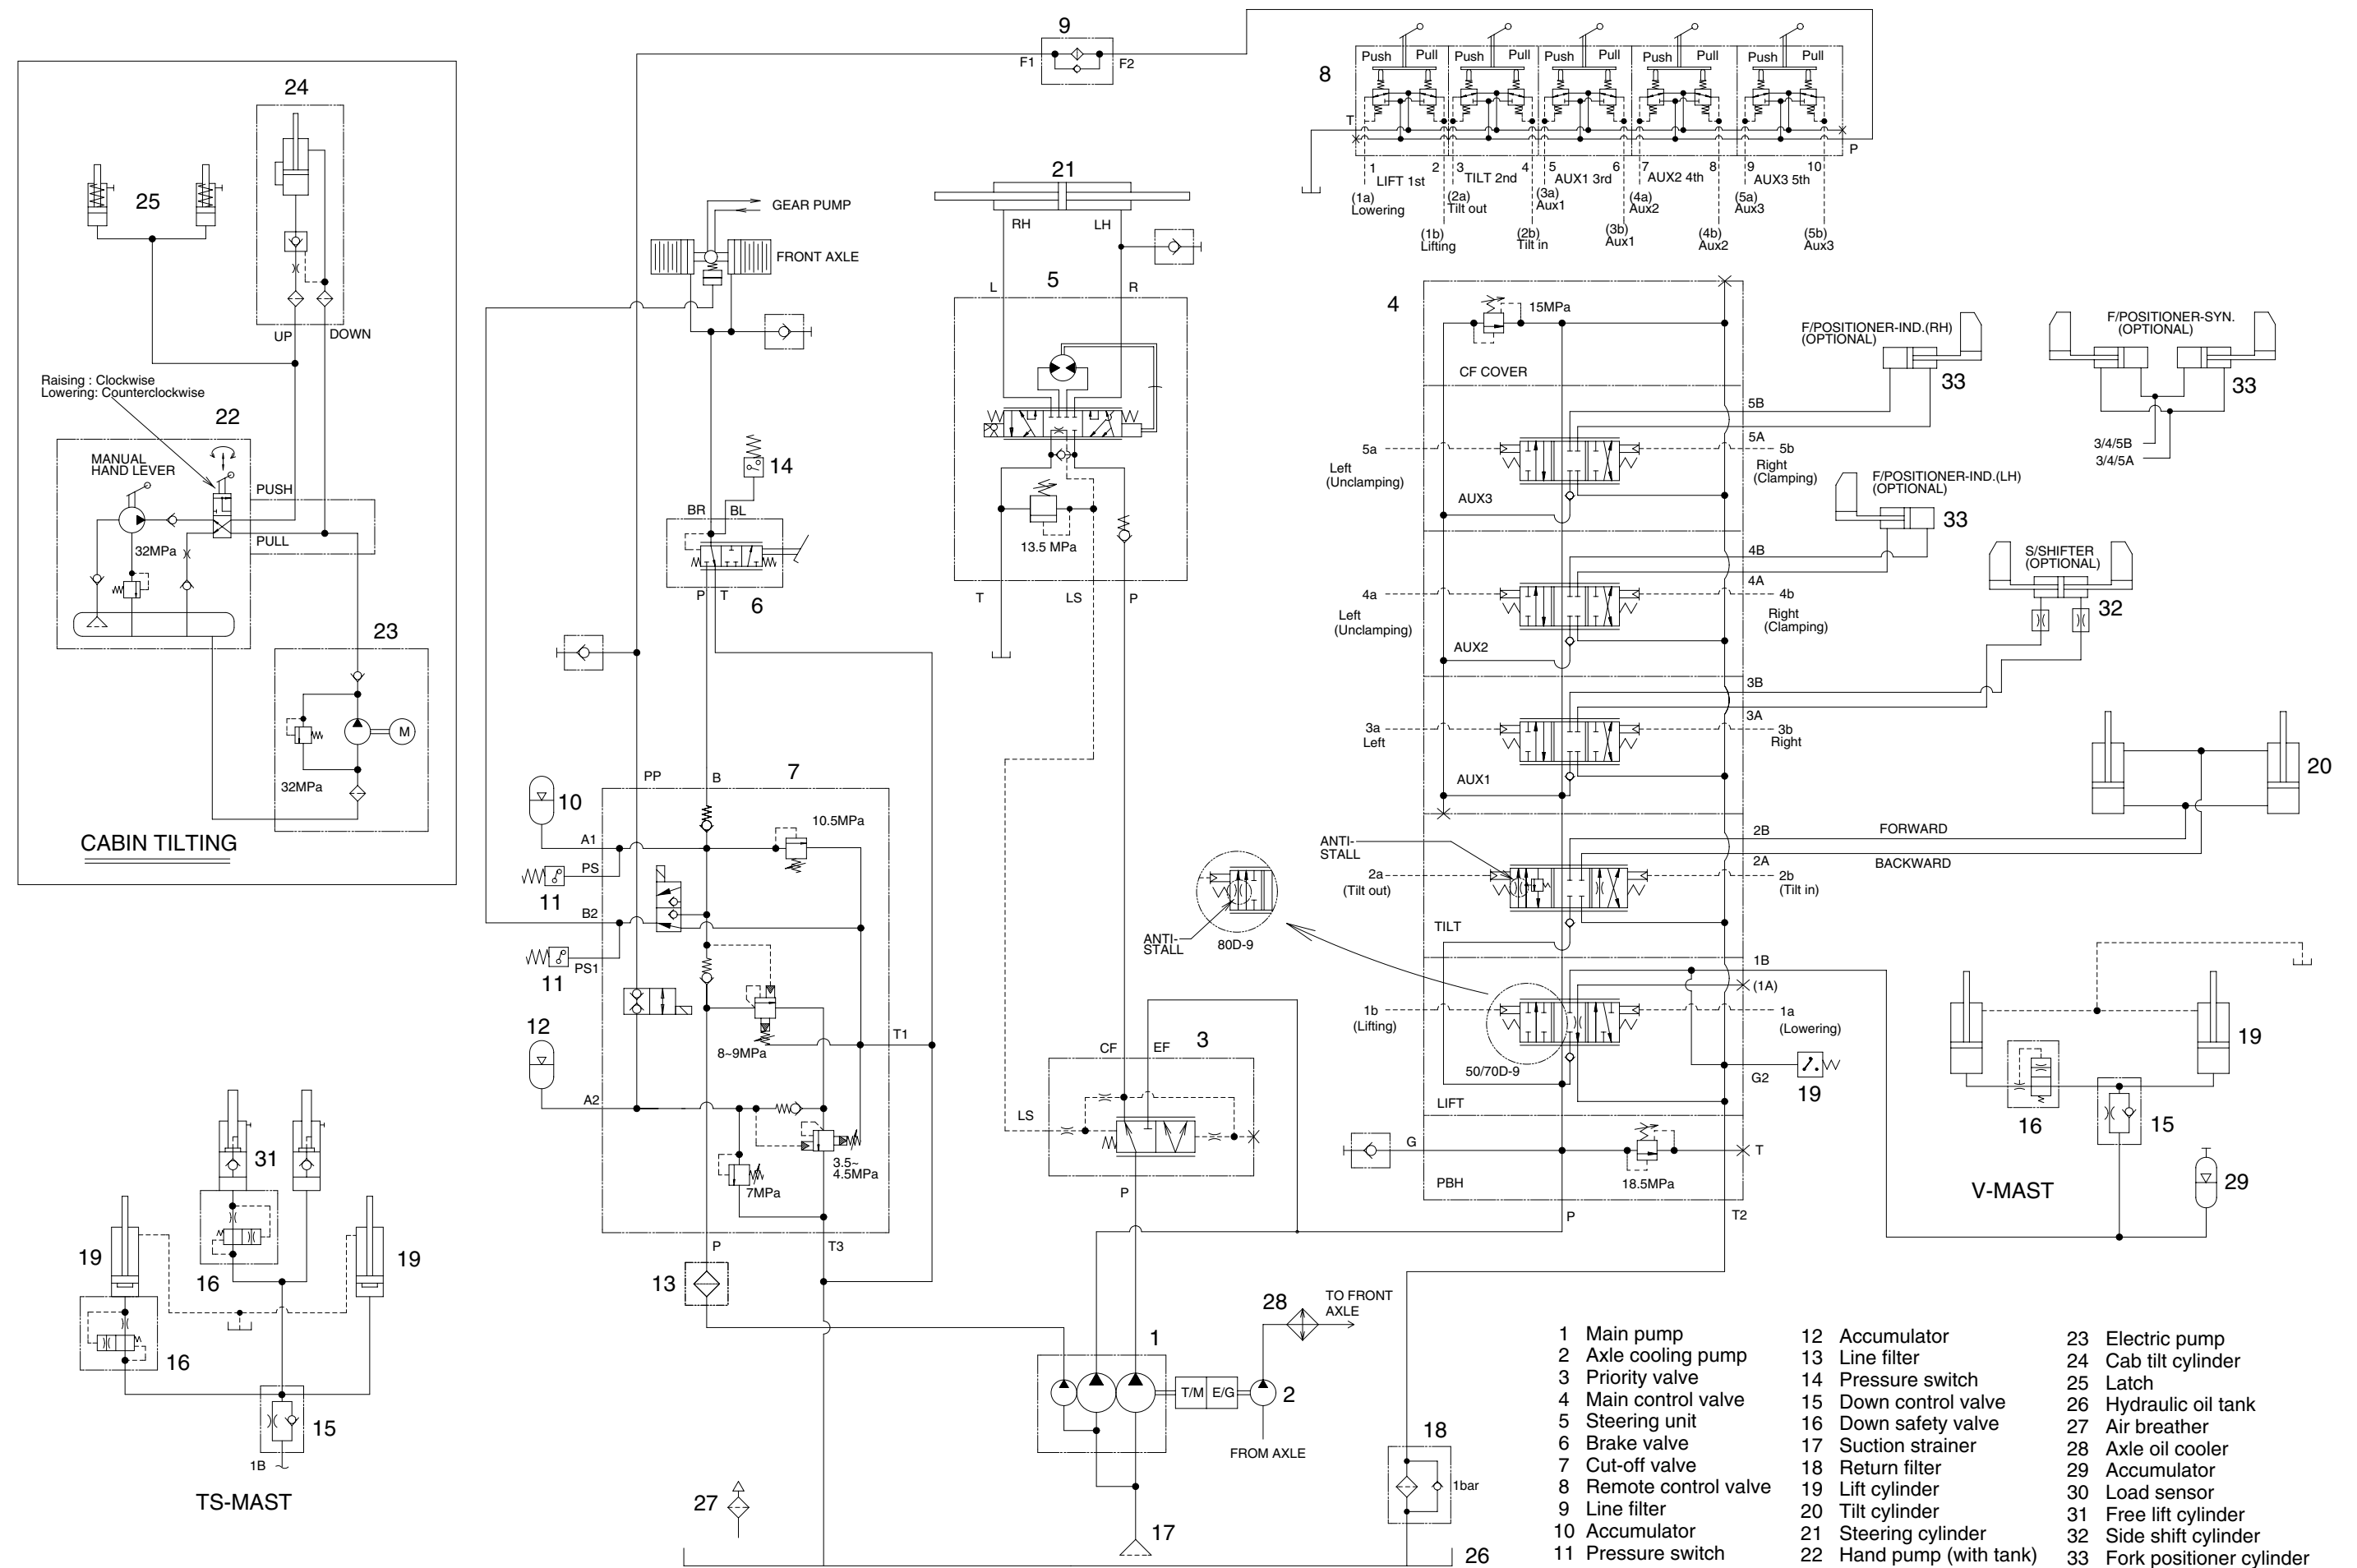


HYDRAULIC CIRCUIT (50D-9 : #0089-, 70D-9 : #1002-, 80D-9 : #0542-)

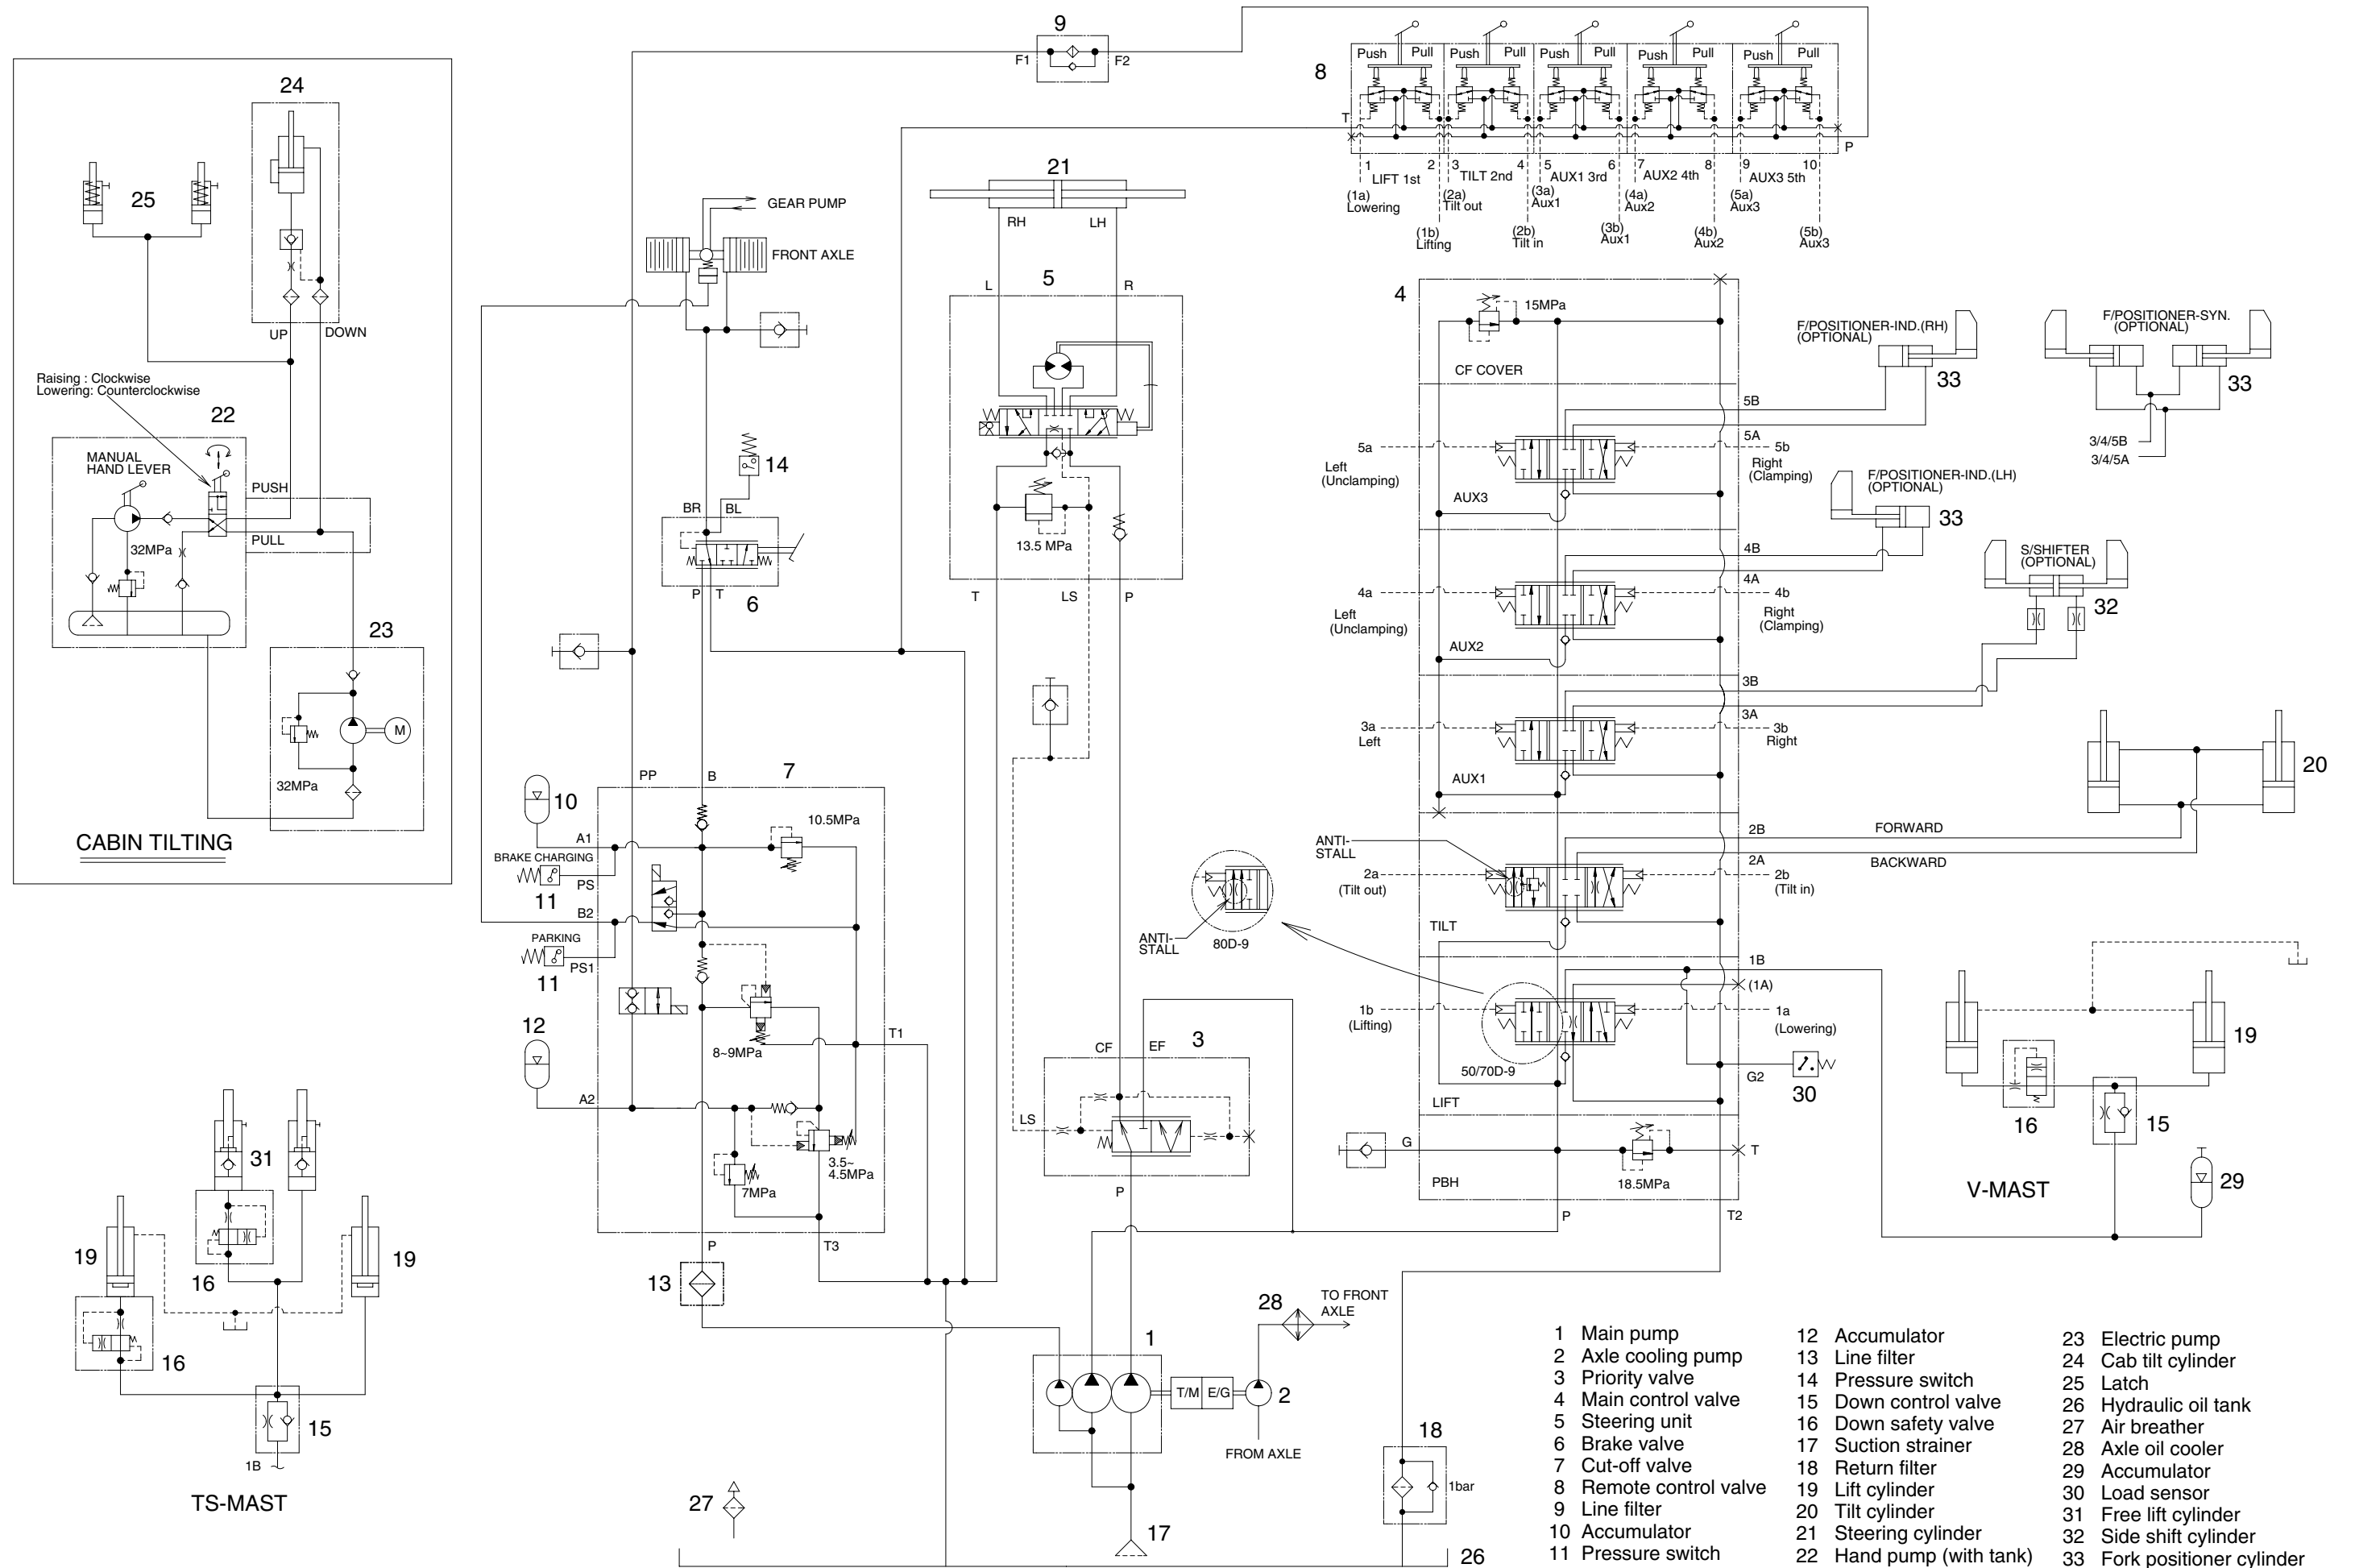


HYDRAULIC CIRCUIT (FINGERTIP OPTION)

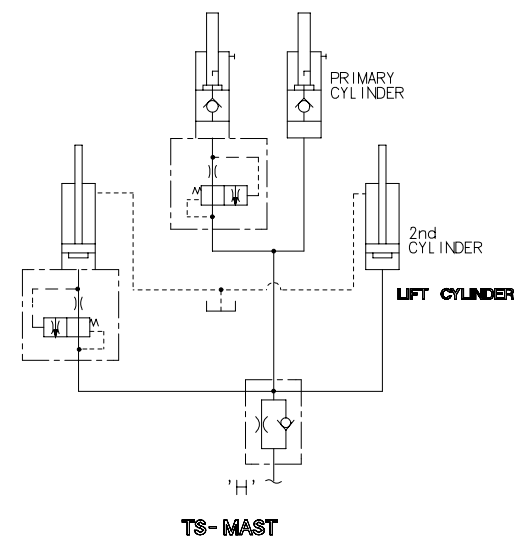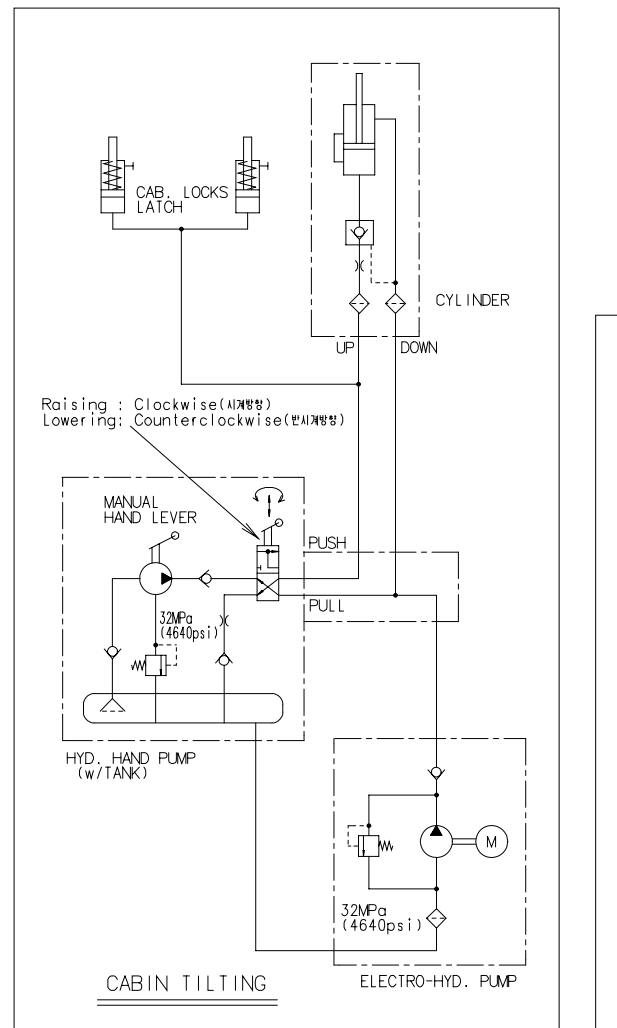


		- RELIEF VALVE PRESSUER (UNIT: bar<psi>)		
		5t	7t	8t
MCV	MAIN	150<2180>	185<2680>	185<2680>
	2nd	140<2030>	140<2030>	140<2030>
STEERING		135<1960>		

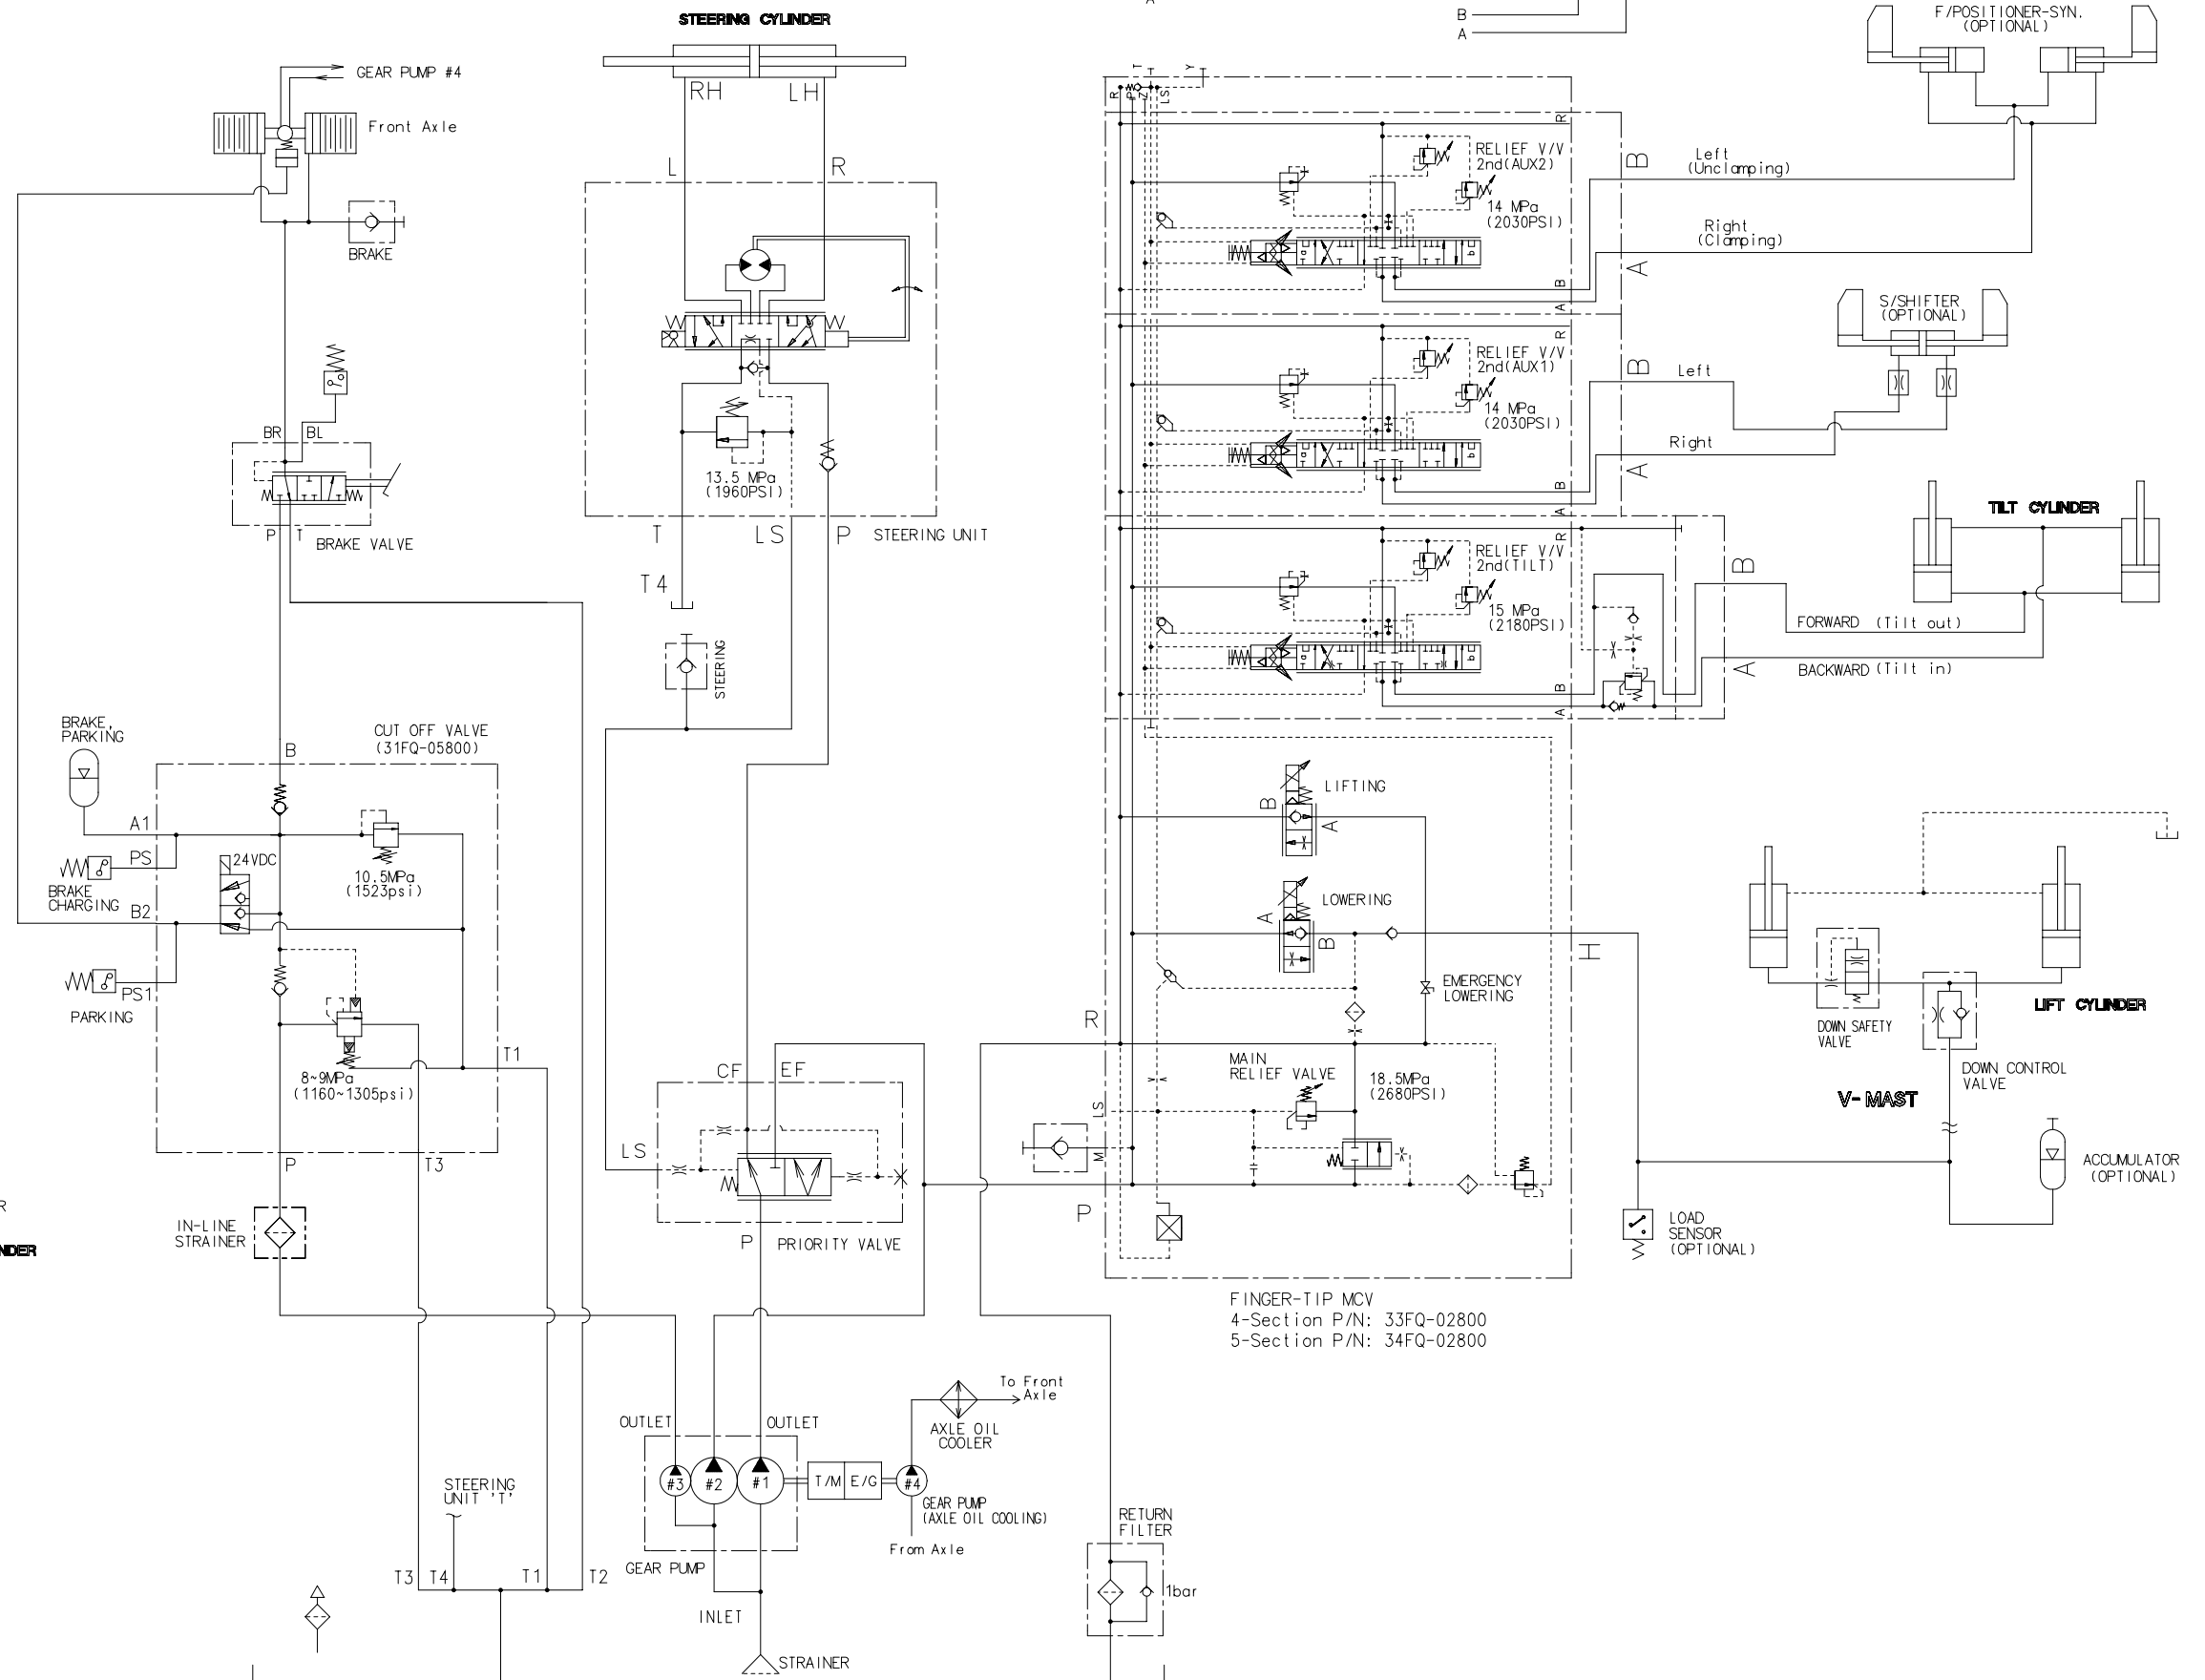


HYDRAULIC CIRCUIT (Floating Cabin : 50D-9 : #80~, 70D-9 : #836~, 80D-9: #378~)

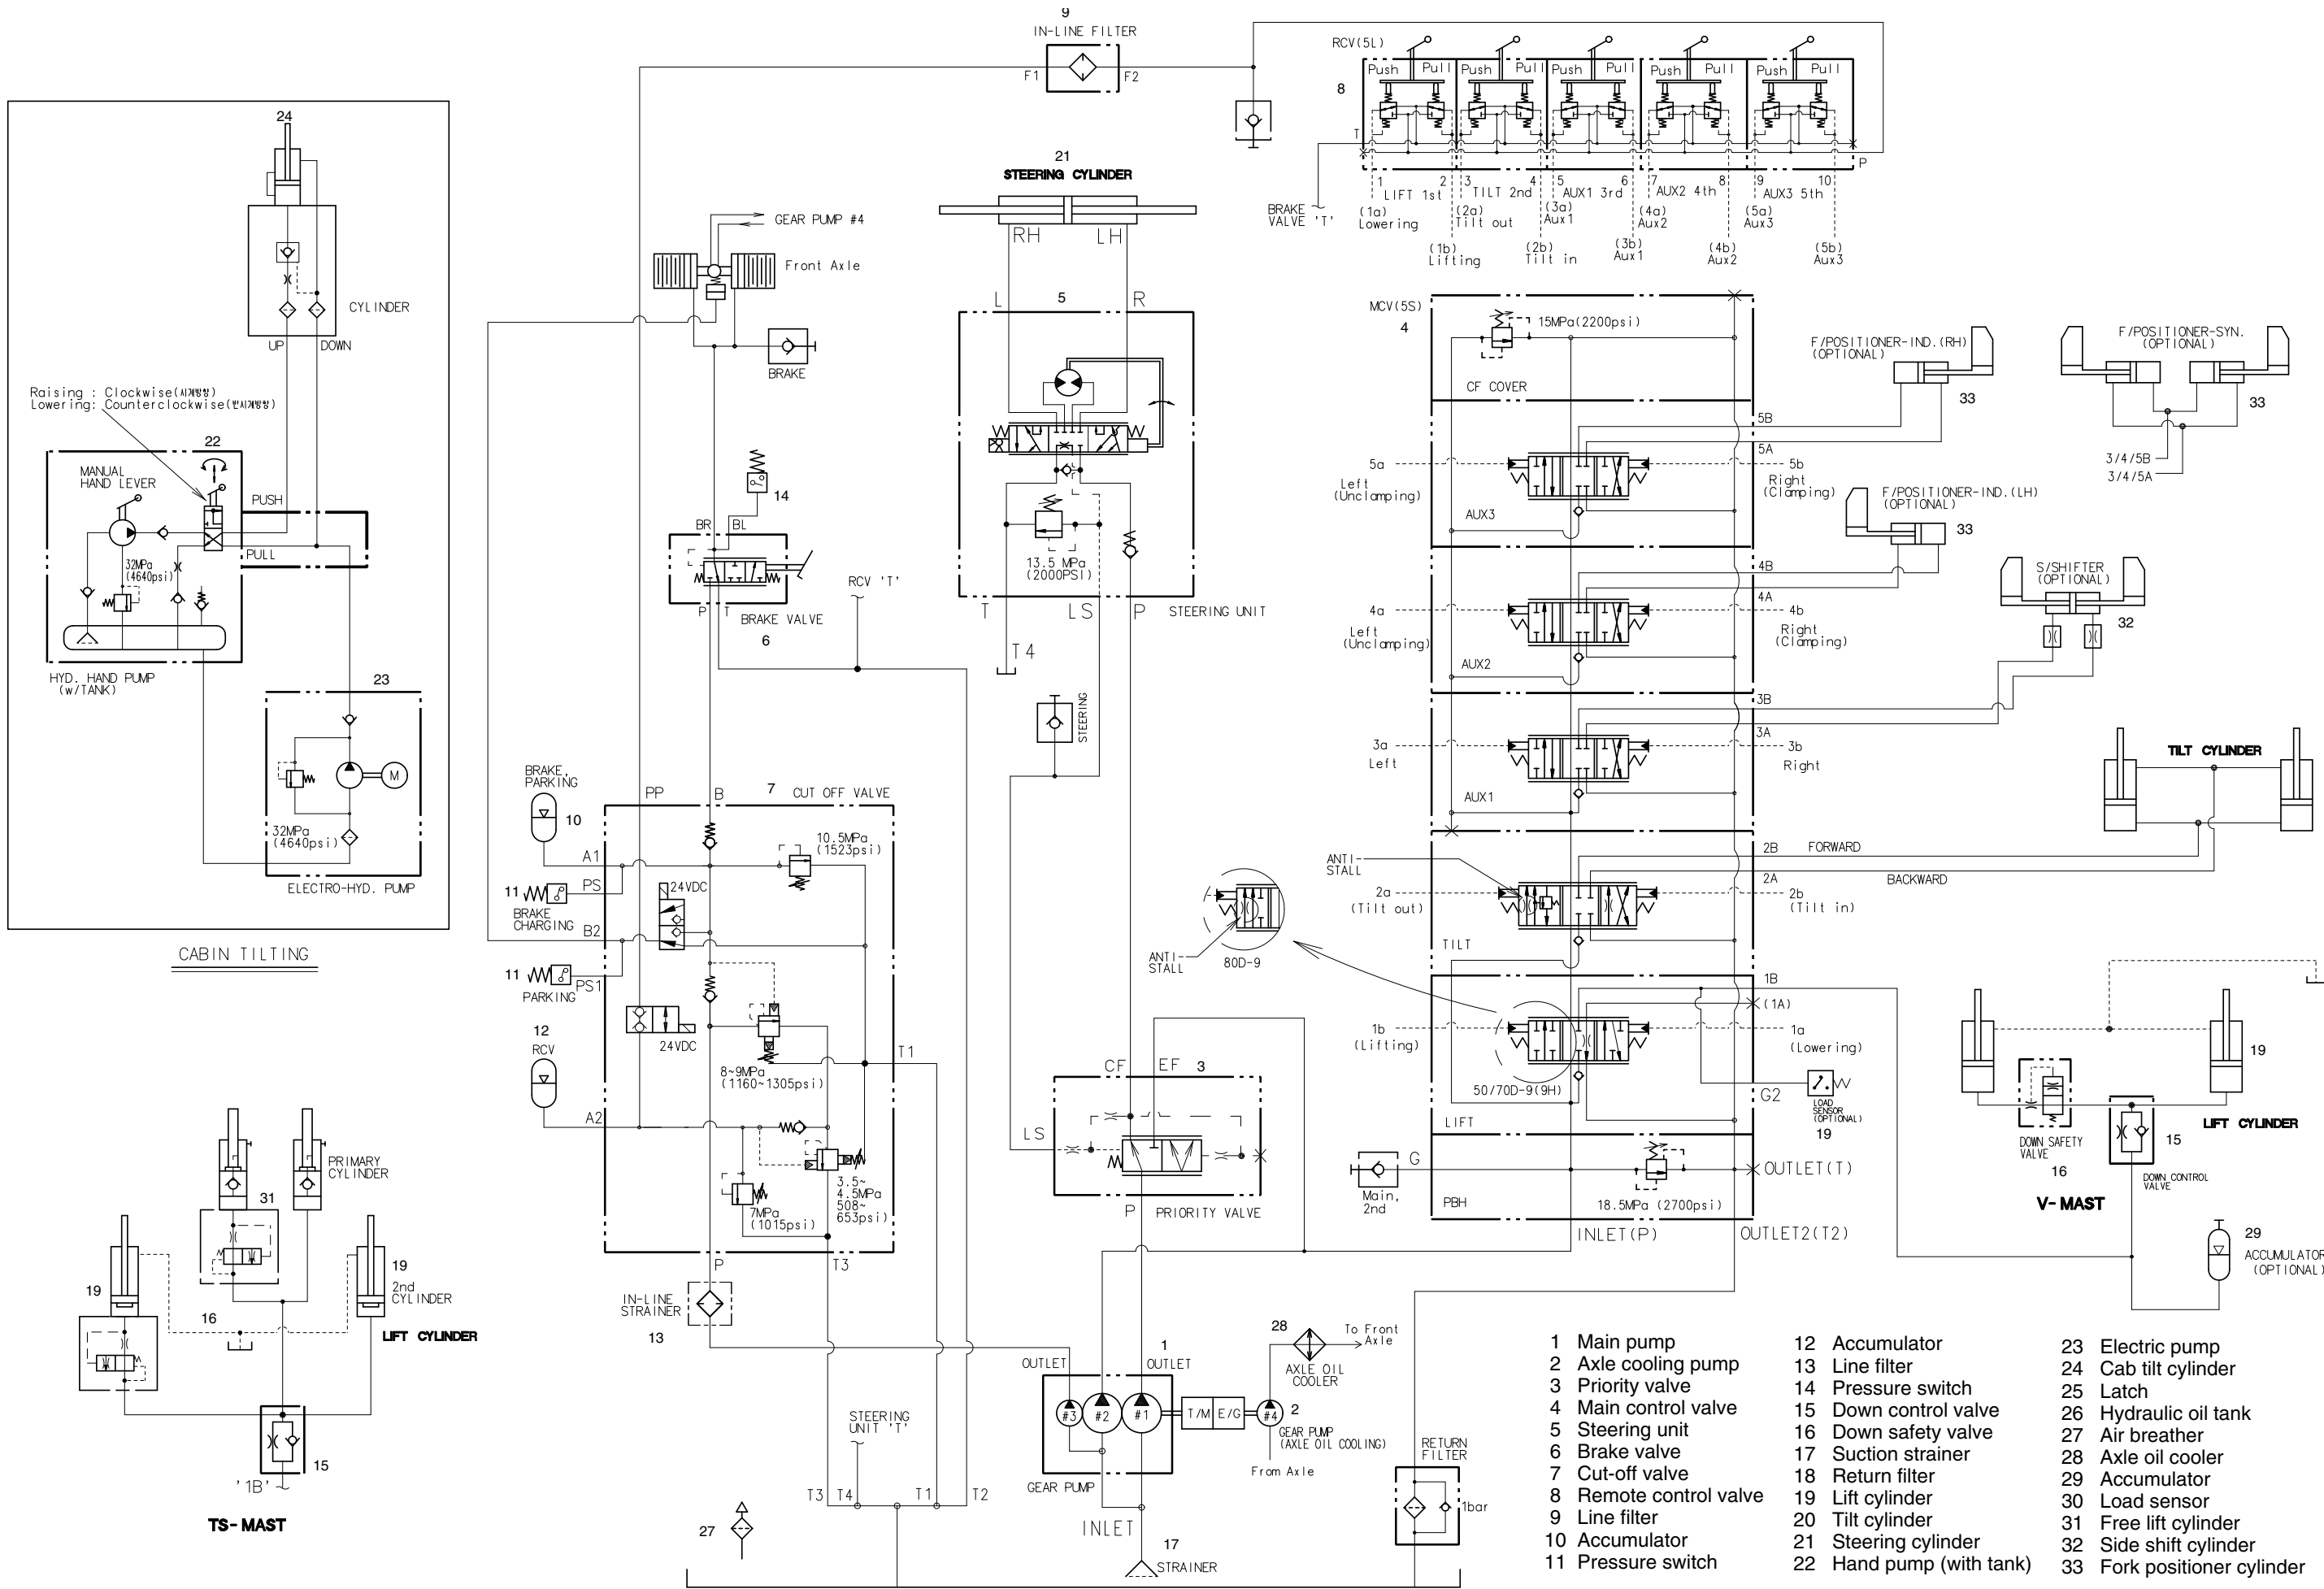

HYDRAULIC CIRCUIT (Fingertip Type, Floating Cabin : 50D-9 : #80~, 70D-9 : #836~, 80D-9: #378~)


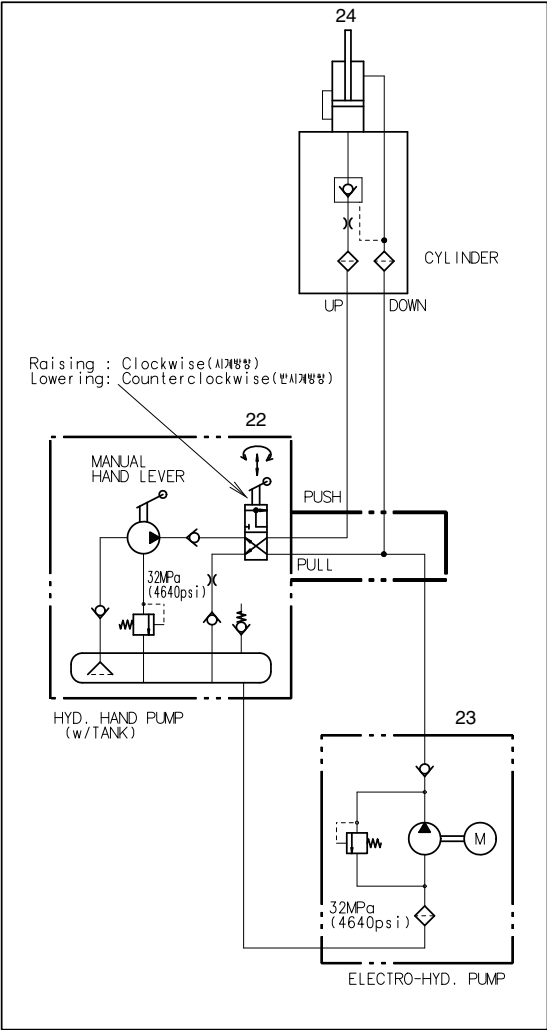


CABIN TILTING

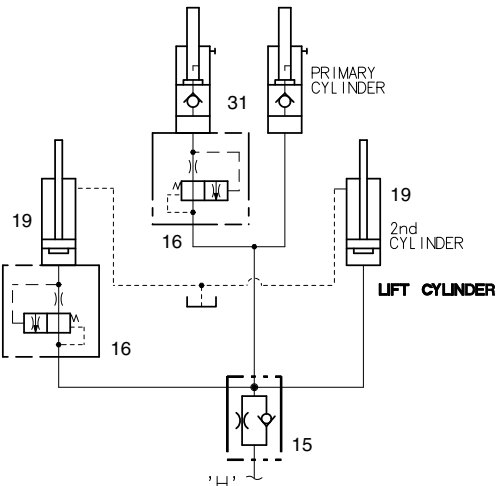


TS-MAST

RELIEF VALVE PRESSURE (UNIT: bar<psi>)		5t	7t	8t
MCV	MAIN	150<2180>	185<2680>	185<2680>
	2nd	140<2030>	140<2030>	140<2030>
STEERING		135<1960>		

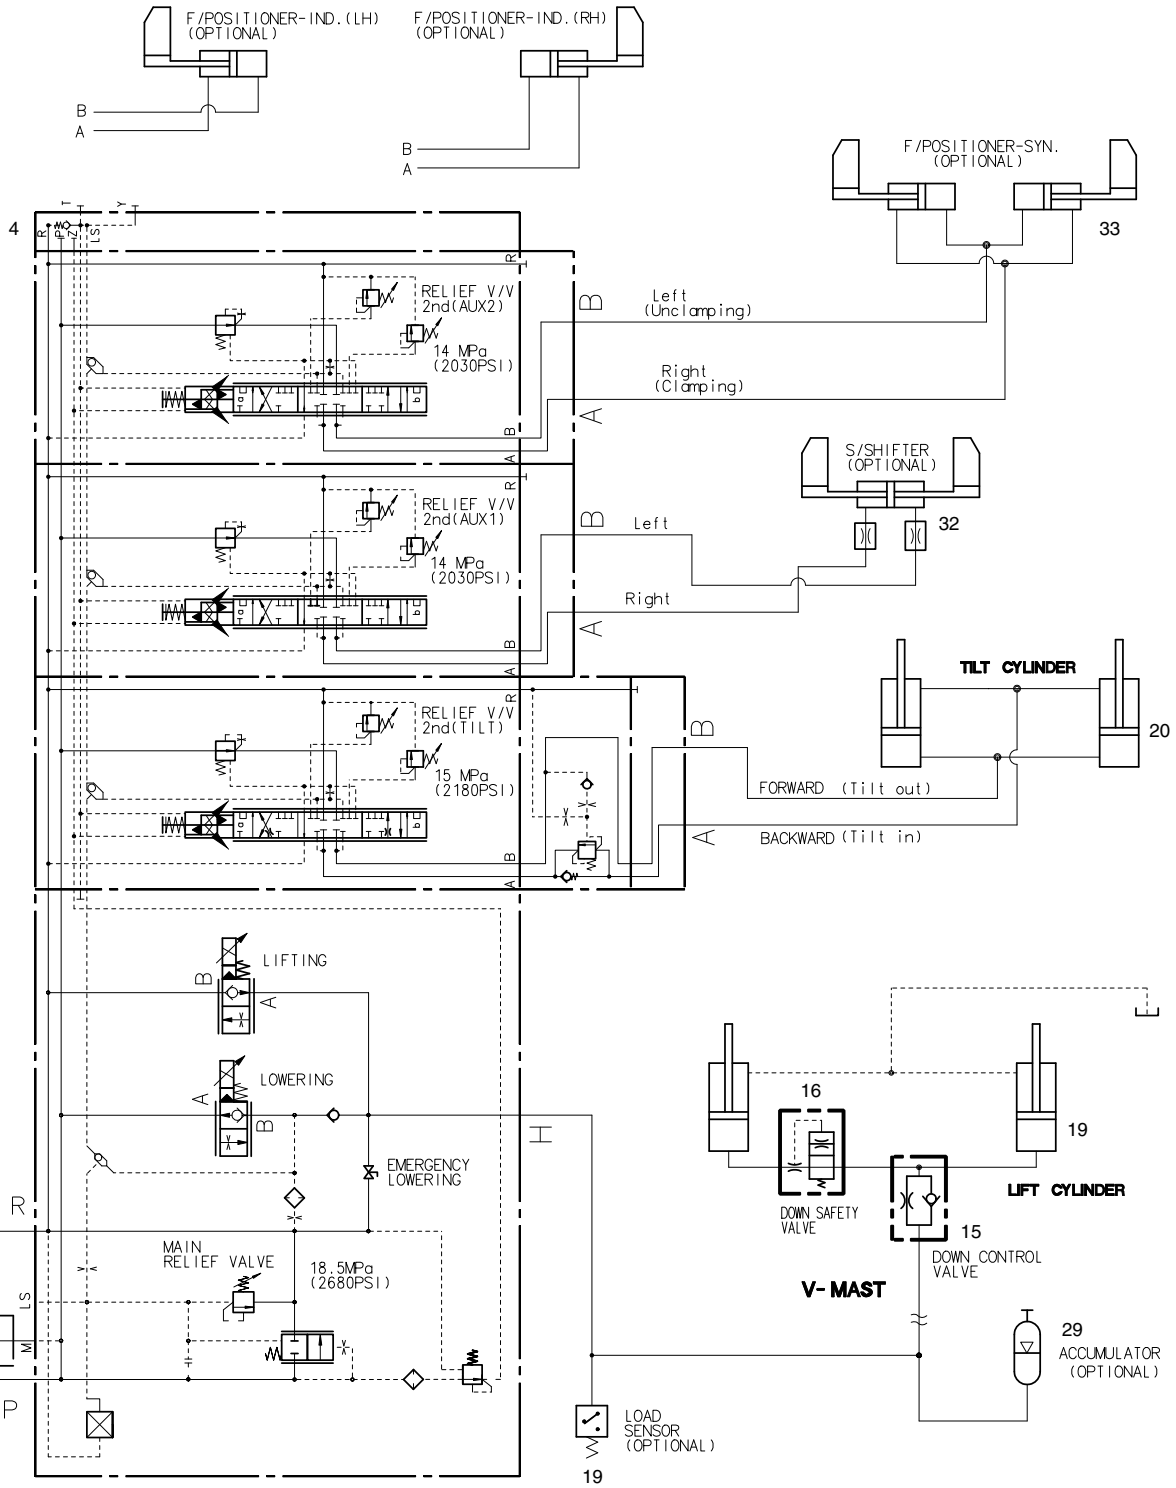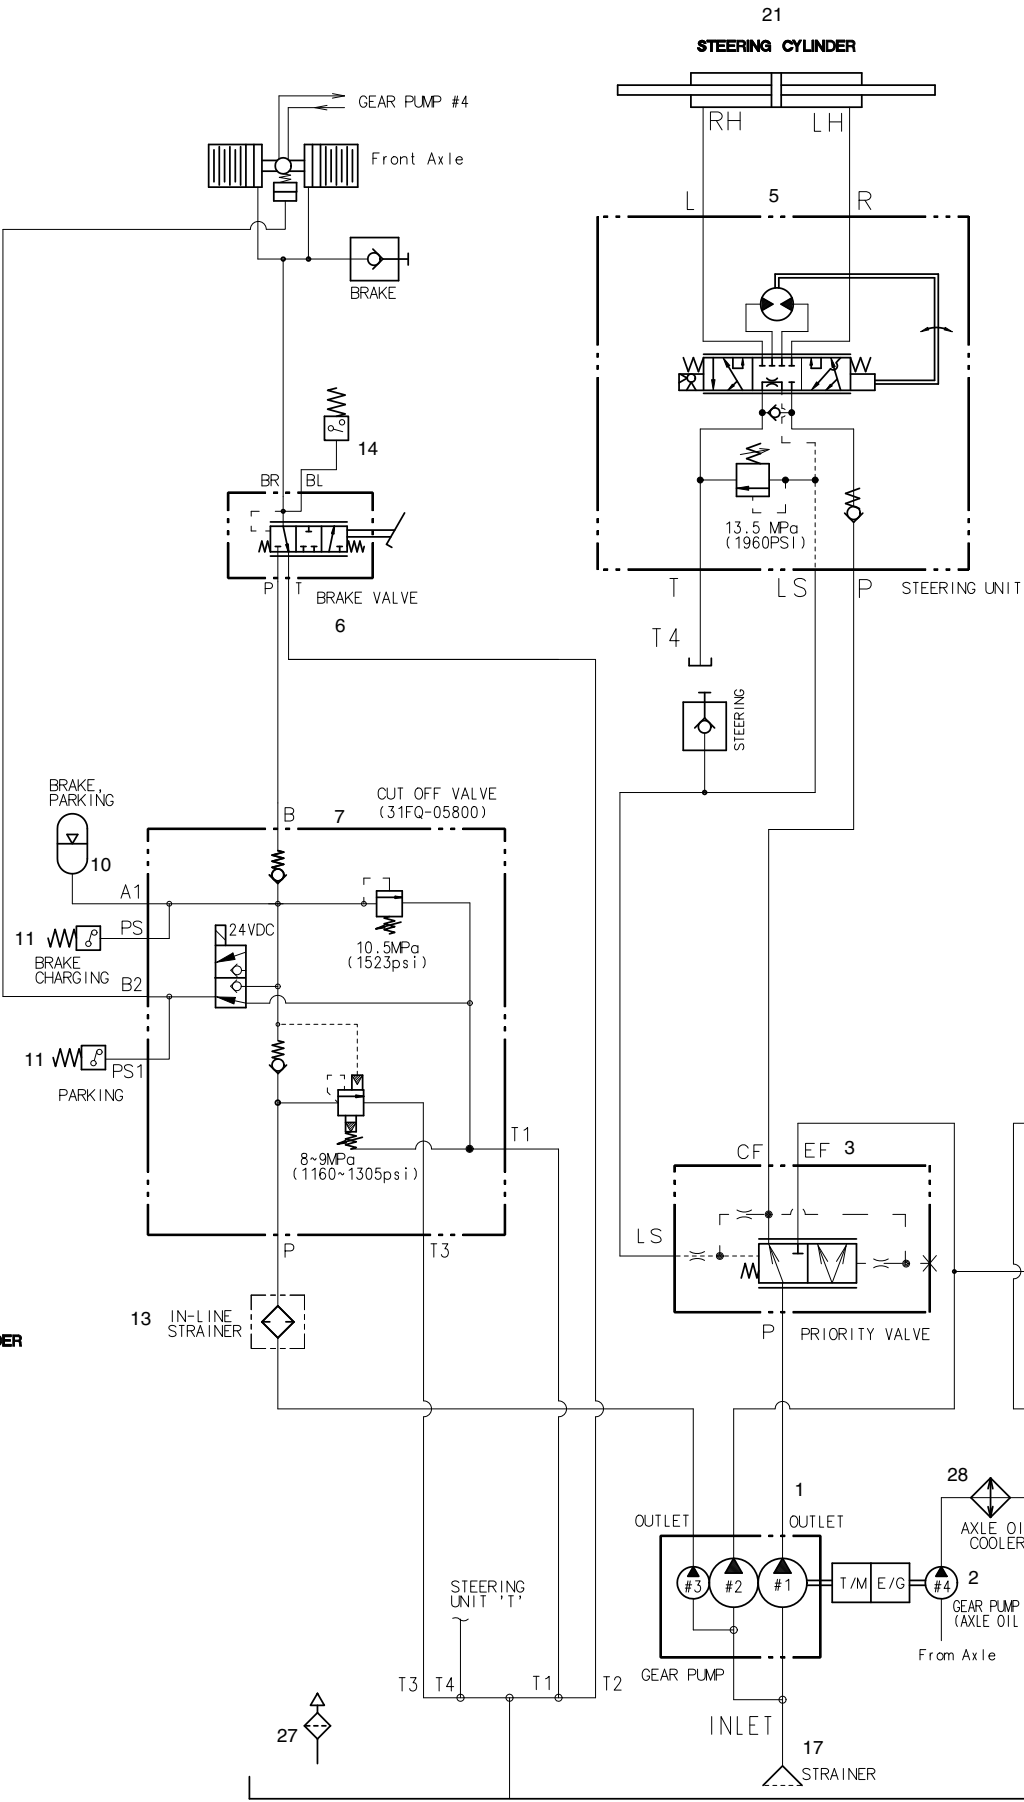

- | | | |
|------------------------|--------------------------|-----------------------------|
| 1 Main pump | 12 Accumulator | 23 Electric pump |
| 2 Axle cooling pump | 13 Line filter | 24 Cab tilt cylinder |
| 3 Priority valve | 14 Pressure switch | 25 Latch |
| 4 Main control valve | 15 Down control valve | 26 Hydraulic oil tank |
| 5 Steering unit | 16 Down safety valve | 27 Air breather |
| 6 Brake valve | 17 Suction strainer | 28 Axle oil cooler |
| 7 Cut-off valve | 18 Return filter | 29 Accumulator |
| 8 Remote control valve | 19 Lift cylinder | 30 Load sensor |
| 9 Line filter | 20 Tilt cylinder | 31 Free lift cylinder |
| 10 Accumulator | 21 Steering cylinder | 32 Side shift cylinder |
| 11 Pressure switch | 22 Hand pump (with tank) | 33 Fork positioner cylinder |

1) WHEN THE LIFT CONTROL LEVER IS IN THE LIFT POSITION

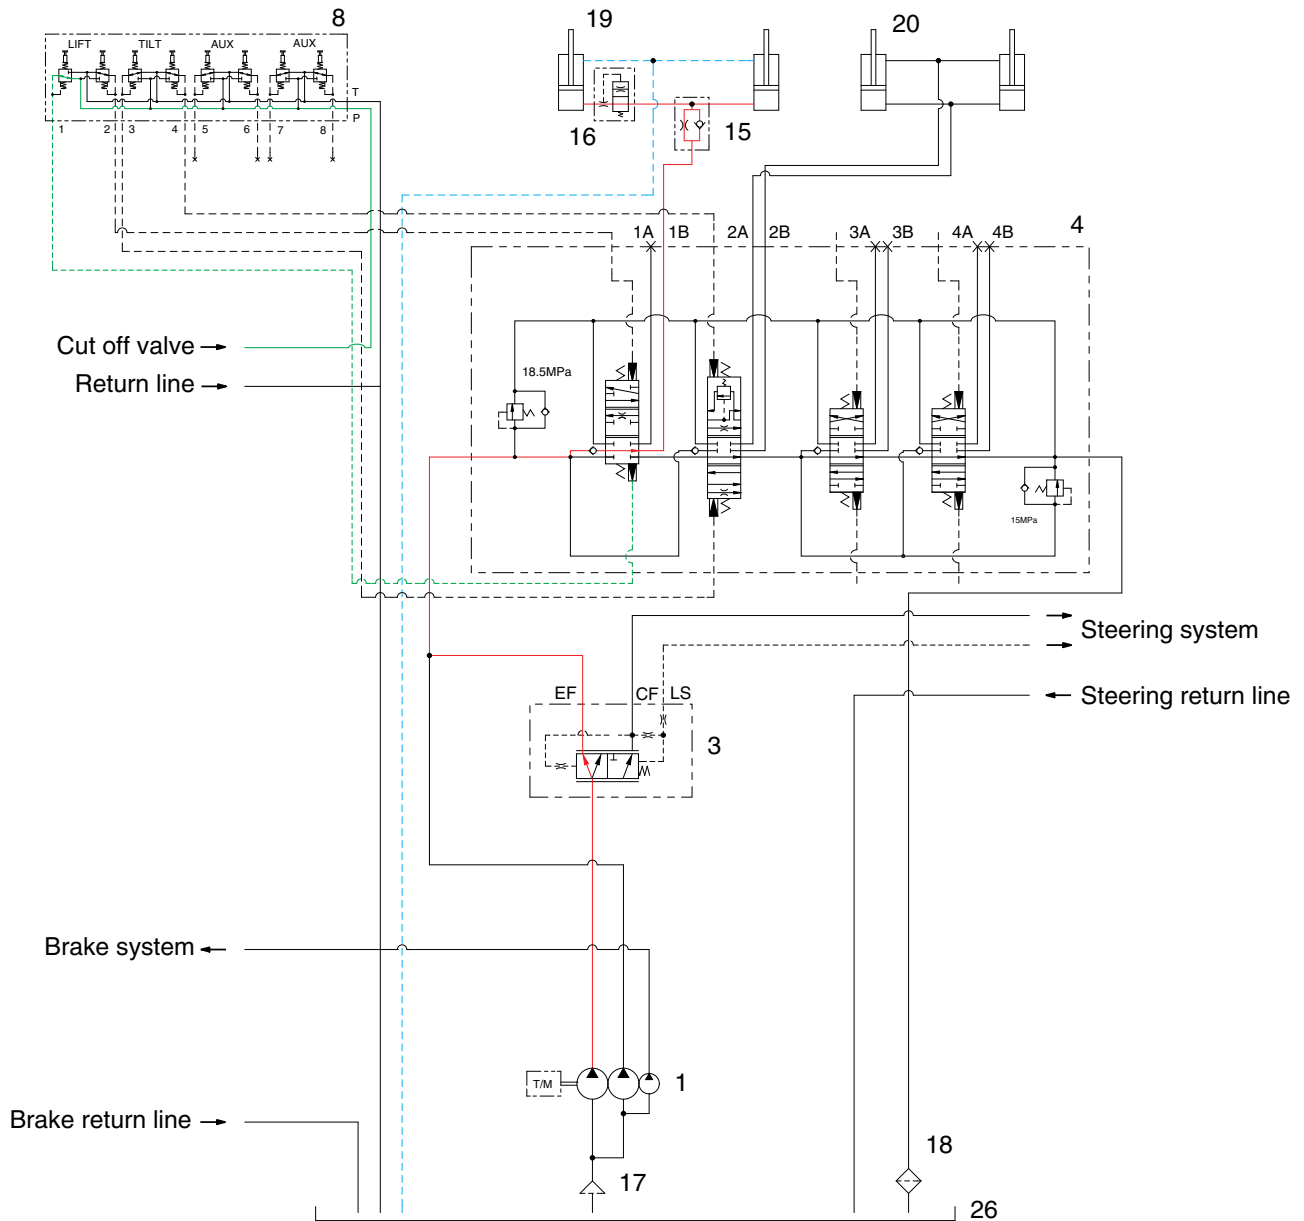

50D9HS02

When the lift control lever is pulled back, the spool on the first block is moves to lift position.


The oil from main pump (1) flows into main control valve (4) and then goes to the large chamber of lift cylinder (19) by pushing the load check valve of the spool.

The oil from the small chamber of lift cylinder (19) returns to hydraulic oil tank (26) at the same time.

When this happens, the forks go up.

※ The circuit diagram may differ from the equipment, so please check before a repair.

2) WHEN THE LIFT CONTROL LEVER IS IN THE LOWER POSITION

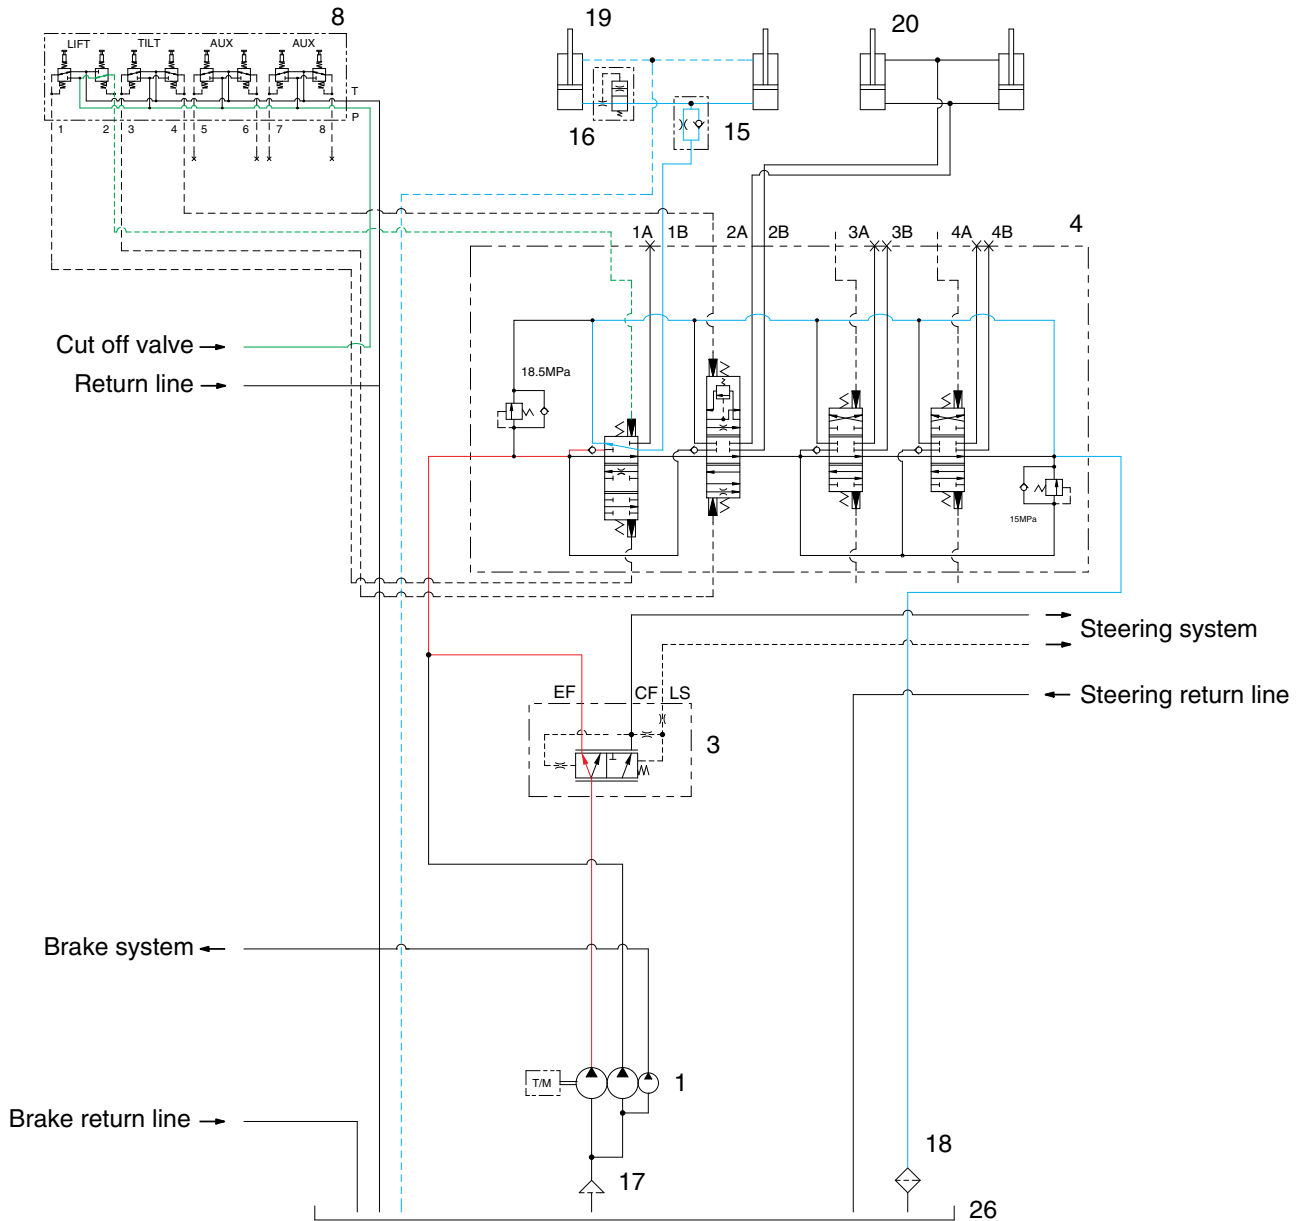


50D9HS03

When the lift control is pushed forward, the spool on the first block is moved to lower position.

The work port (1B) and the small chamber and the large chamber are connected to the return passage, so the lift will be lowered due to its own weight.

※ The circuit diagram may differ from the equipment, so please check before a repair.

3) WHEN THE TILT CONTROL LEVER IS IN THE FORWARD POSITION

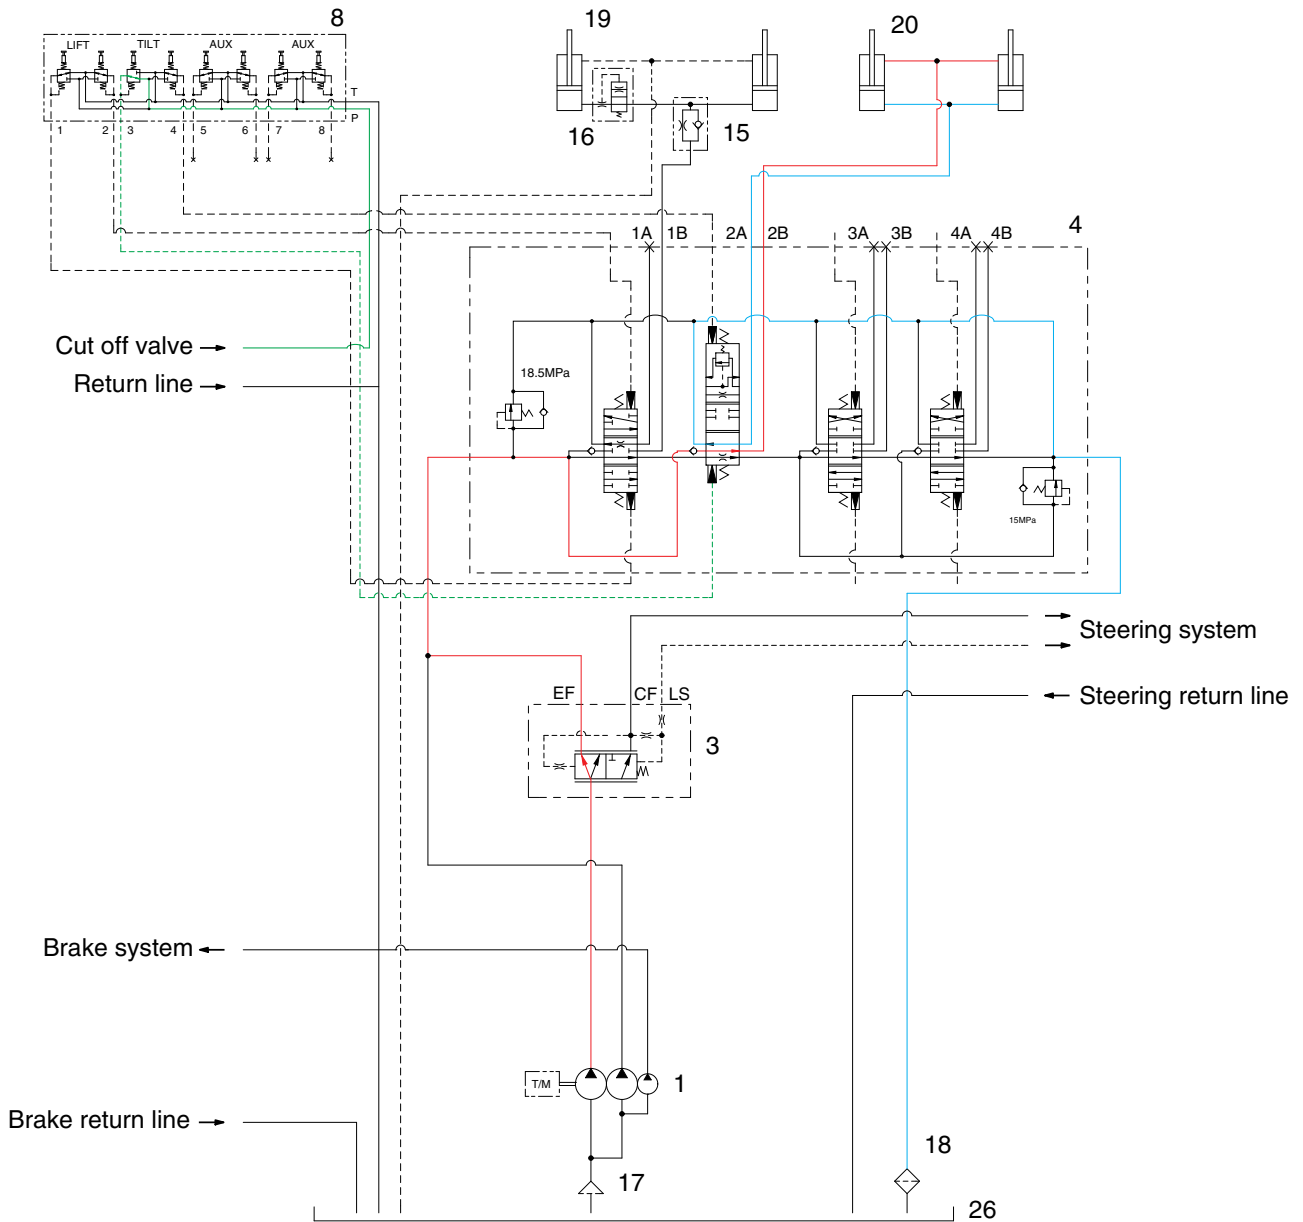

50D9HS04

When the tilt control lever is pushed forward, the spool on the second block is moved to tilt forward position.


The oil from main pump (1) flows into main control valve (4) and then goes to the large chamber of tilt cylinder (20) by pushing the load check valve of the spool.

The oil at the small chamber of tilt cylinder (20) returns to hydraulic oil tank (26) at the same time.

When this happens, the mast tilt forward.

※ The circuit diagram may differ from the equipment, so please check before a repair.

4) WHEN THE TILT CONTROL LEVER IS IN THE BACKWARD POSITION

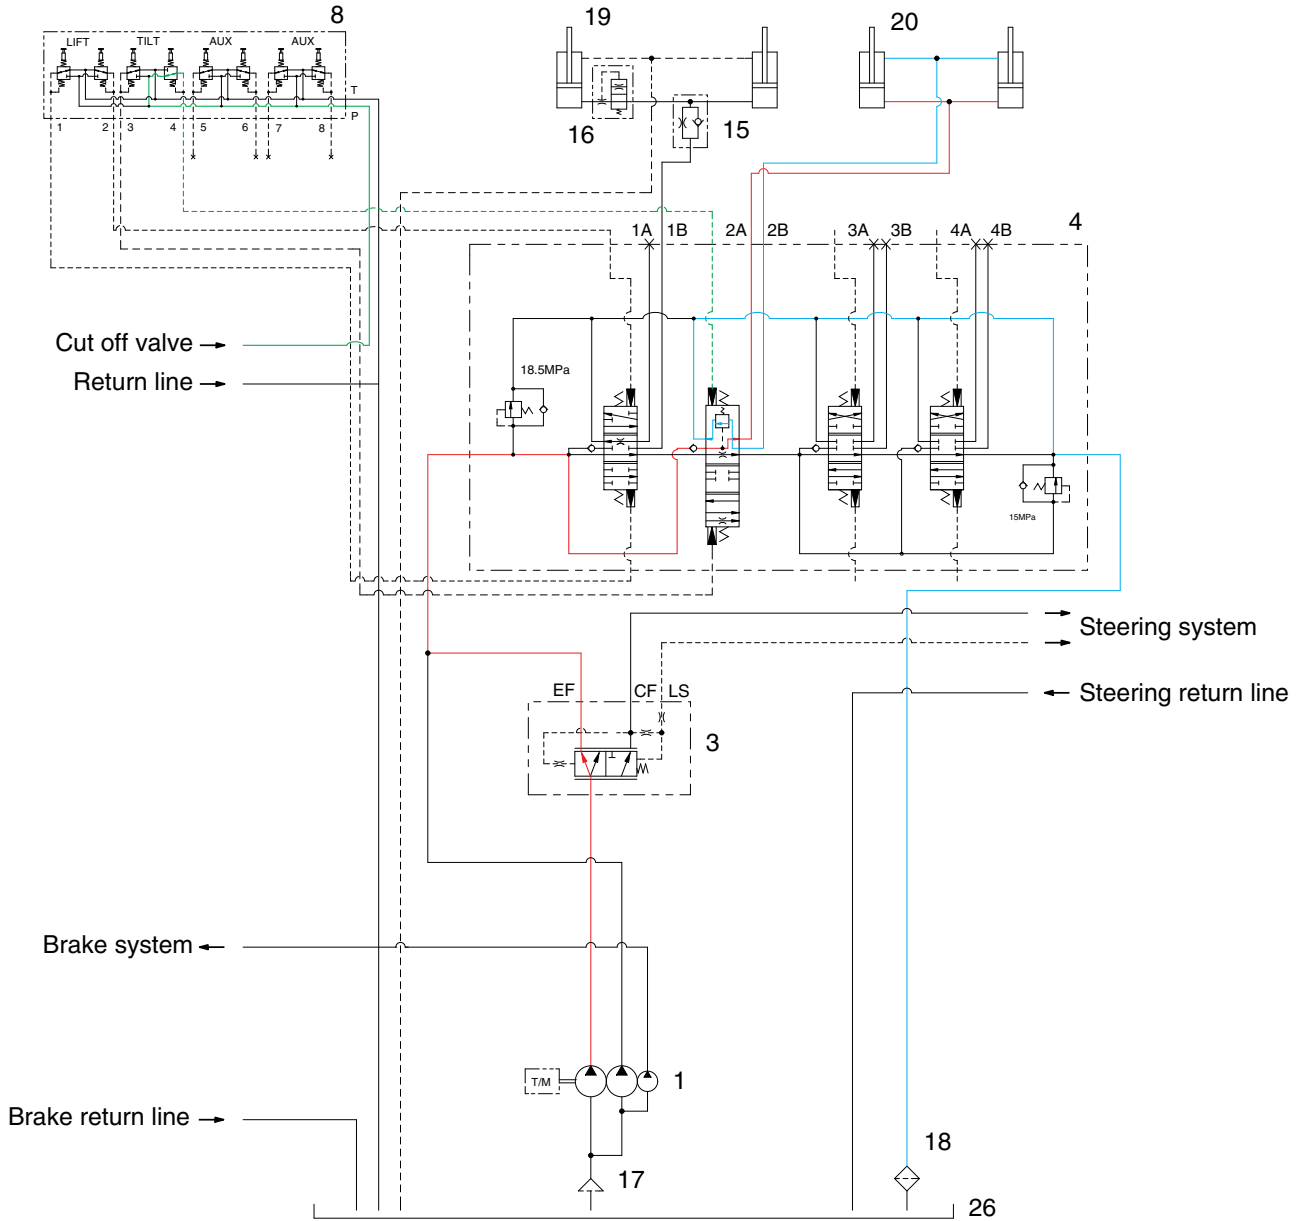

50D9HS05

When the tilt control lever is pulled back, the spool on the second block is moved to tilt backward position.

The oil from main pump (1) flows into main control valve (4) and then goes to the small chamber of tilt cylinder (20) by pushing the load check valve of spool.

The oil at the large chamber of tilt cylinder (20) returns to hydraulic oil tank (26) at the same time.


When this happens, the mast tilt backward.

※ The circuit diagram may differ from the equipment, so please check before a repair.

2. HYDRAULIC GEAR PUMP

1) STRUCTURE


(1) General pump (standard)

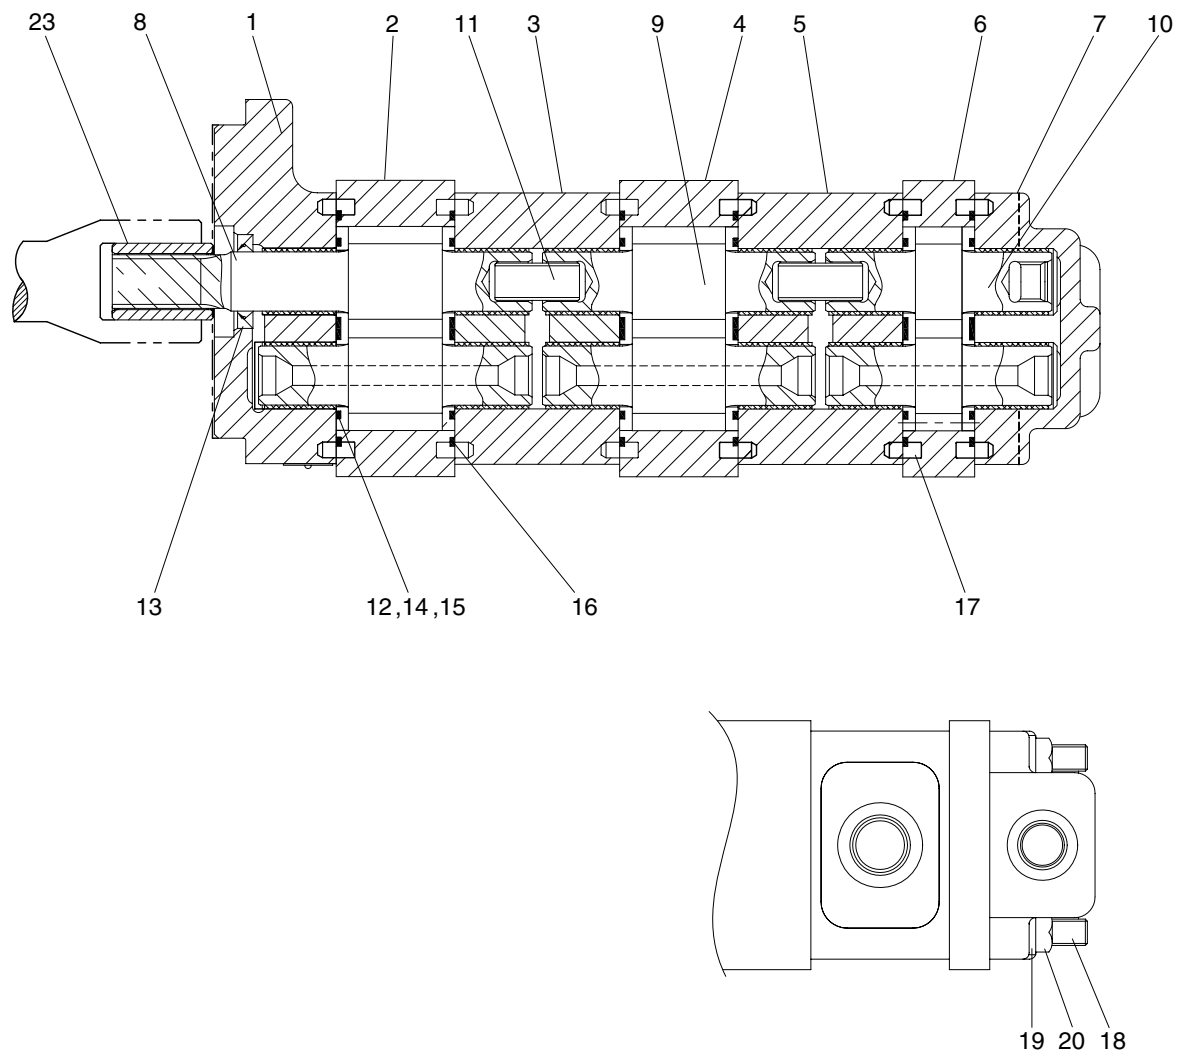

50D7EHS06

1	Cover	8	Shaft gear	15	Seal
2	Gear housing	9	Drive gear - middle	16	Seal
3	Carrier	10	Drive gear set - last	17	Dowel pin
4	Gear housing	11	Connecting shaft	18	Stud bolt
5	Carrier	12	Thrust plate	19	Washer
6	Gear housing	13	Seal	20	Hex nut
7	Cover	14	Seal	23	Connecting shaft

(2) Low noise pump (option)





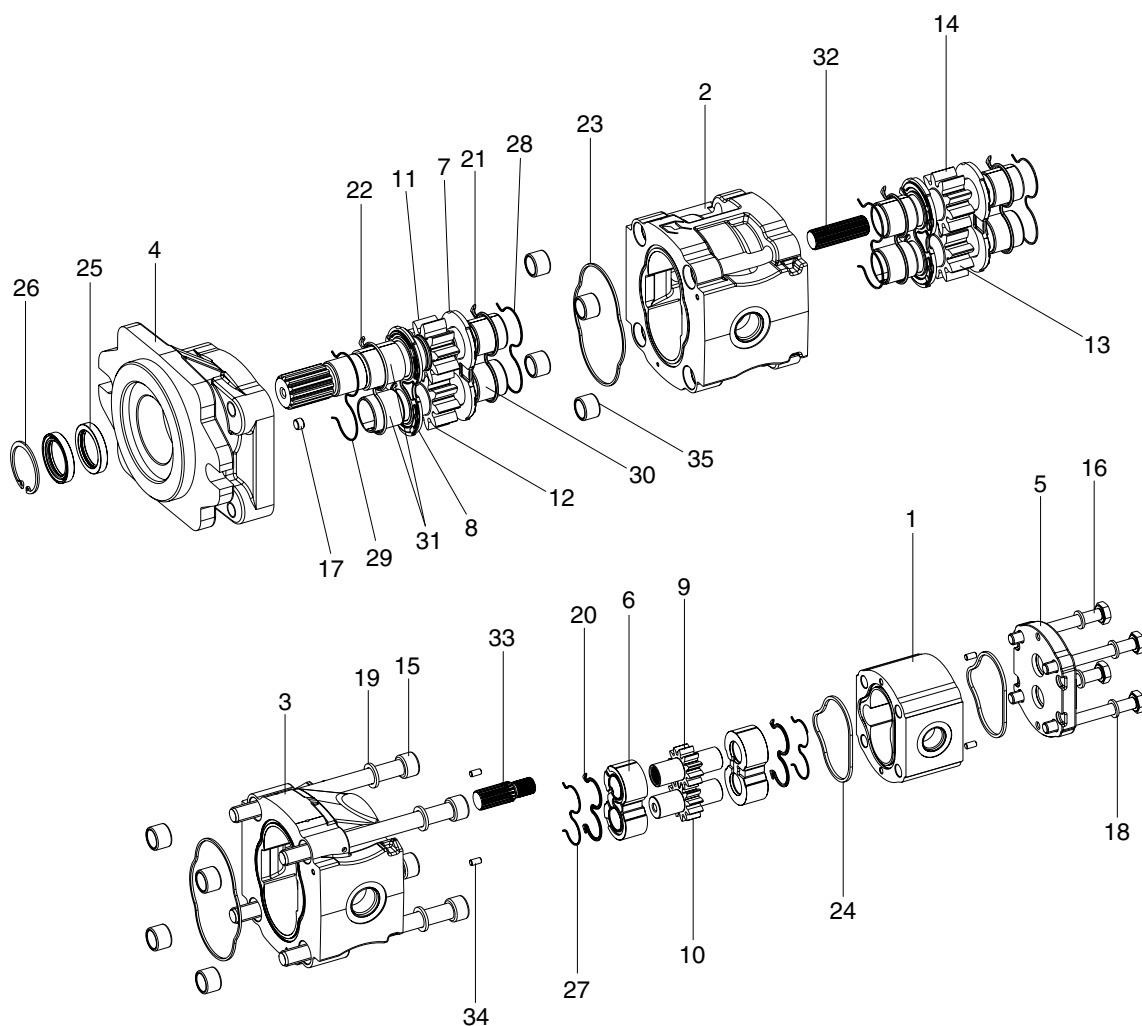


50D9HS06A

1	Gear housing	13	Driven gear	25	Shaft seal
2	Body	14	Drive shaft	26	Ring
3	Gear housing	15	Screw	27	Antiextrusion
4	Cover	16	Screw	28	Antiextrusion ring
5	Rear cover	17	Grub screw	29	Upper antiextrusion ring
6	Thrust plate	18	Washer	30	Sleeve bearing
7	Thrust plate	19	Washer	31	Upper sleeve bearing
8	Upper thrust plate	20	Seal	32	Hub
9	Drive gear	21	Seal	33	Hub
10	Driven gear	22	Upper seal	34	Dowel pin
11	Drive shaft	23	Standard seal	35	Steel bushing
12	Driven gear	24	Seal		

3. MAIN CONTROL VALVE

1) STRUCTURE (5 Spool)

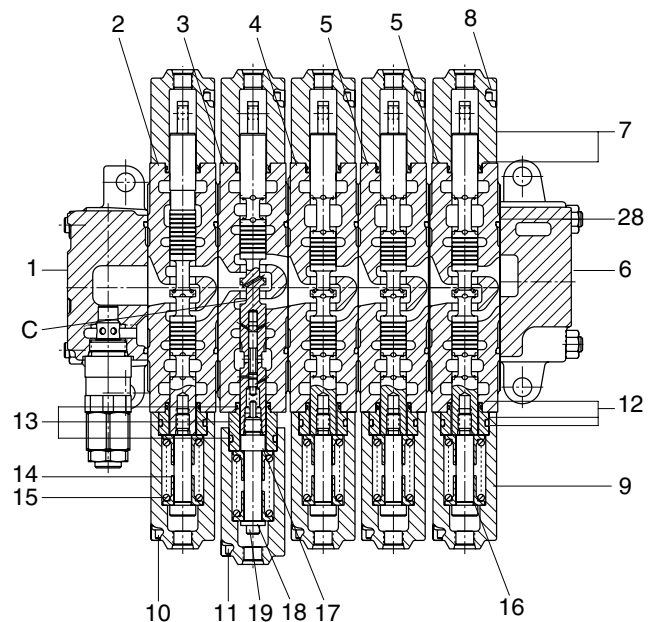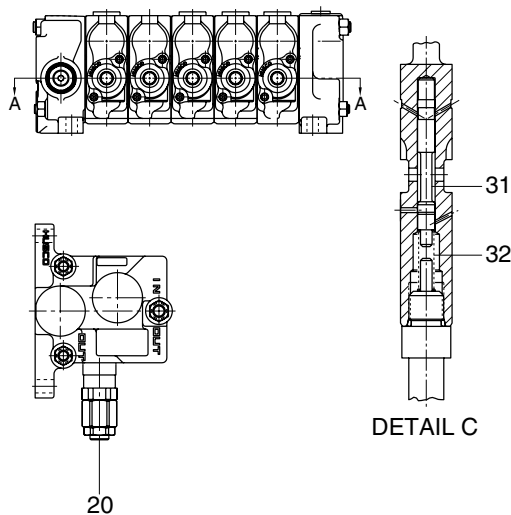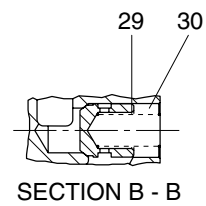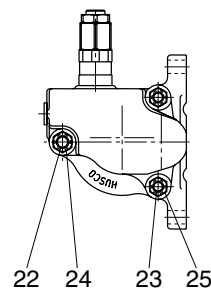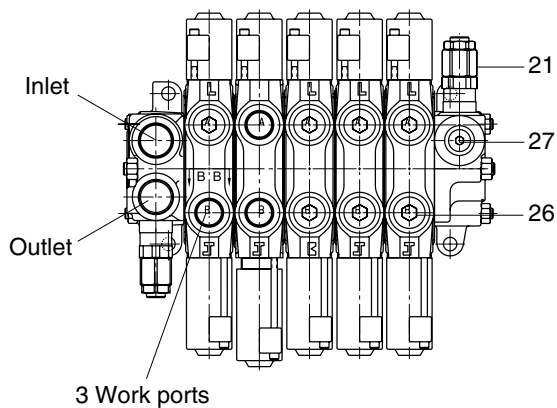

SECTION A - A


Port name	Size
Inlet port	1-5/16-12UNF
Outlet port	1-5/16-12UNF
Gauge port	PF1/4
Work port	1-1/16-12UNF

50D7EHS07

- | | | |
|-----------------------------|---------------------------|----------------|
| 1 Inlet section assy | 12 Retainer | 23 Tie rod |
| 2 Spool section assy (Lift) | 13 Retainer | 24 Special nut |
| 3 Spool section assy (Tilt) | 14 Spring set | 25 Special nut |
| 4 Spool section assy (Aux) | 15 Spring | 26 Plug |
| 5 Spool section assy (Aux) | 16 Screw | 27 Plug |
| 6 Outlet section assy | 17 Spool end | 28 O-ring |
| 7 Spool cap | 18 Washer | 29 Poppet |
| 8 Cap screw | 19 Cap screw | 30 Spring |
| 9 Spool cap | 20 Main relief valve assy | 31 Piston |
| 10 Cap screw | 21 Port relief valve assy | 32 Spring |
| 11 Cap screw | 22 Tie rod | |

2) LIFT SECTION OPERATION

(1) Lift position

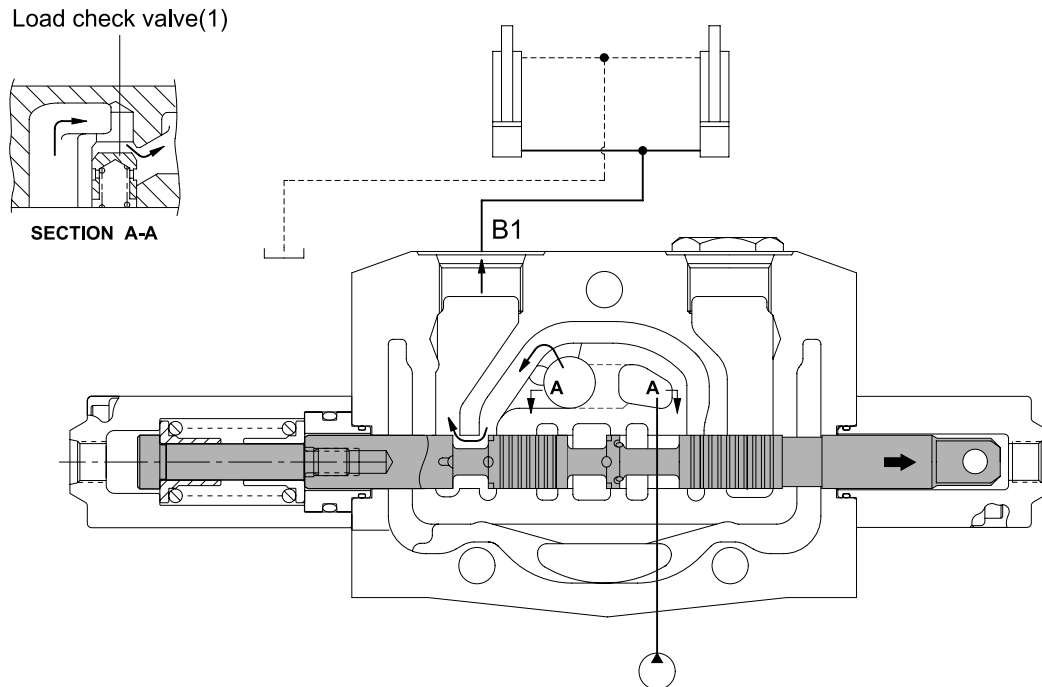

50D7EHS08


When the lift control lever is pulled back, the spool moves to the right and the neutral passage is closed.

The oil supplied from the pump pushes up the load check valve (1) and flow into lift cylinder port (B1).

The pump pressure reaches proportionally the load of cylinder and fine control finished by shut off of the neutral passage.

The return oil from cylinder flows into the tank.

(2) Lower position

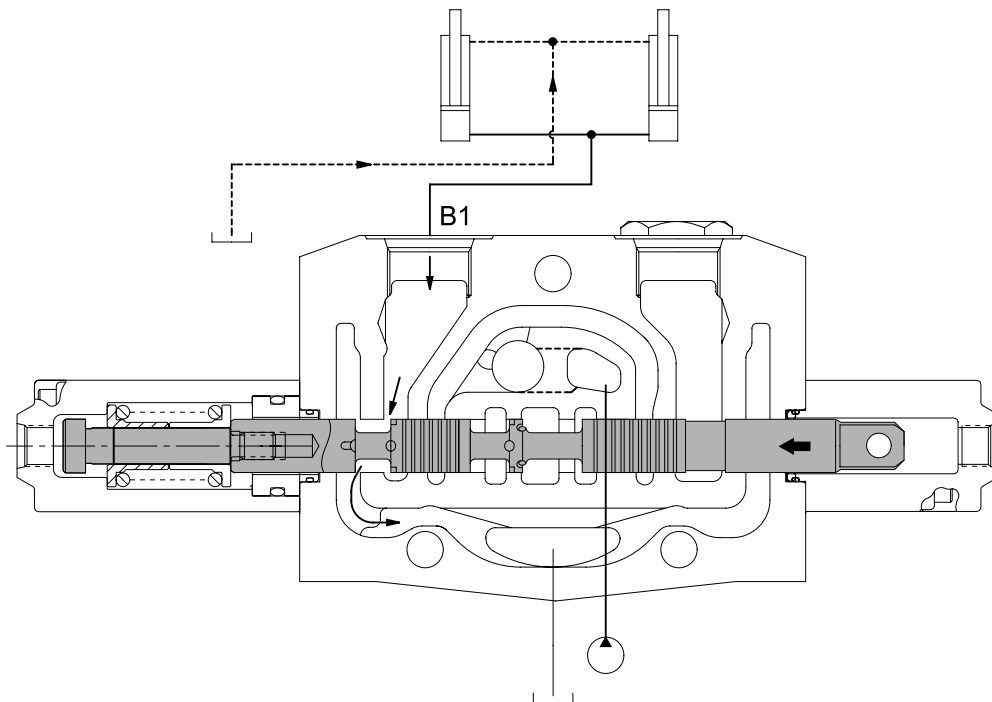


50D7EHS09

When the lift control lever is pushed forward, the spool moves to the left and the neutral passage is closed.

The spool moves to the lift lower position, opening up the neutral passage to tank and (B1) → T.
In lift lower position the fork drops due to its own weight.

3) TILT SECTION OPERATION

(1) Tilt forward position

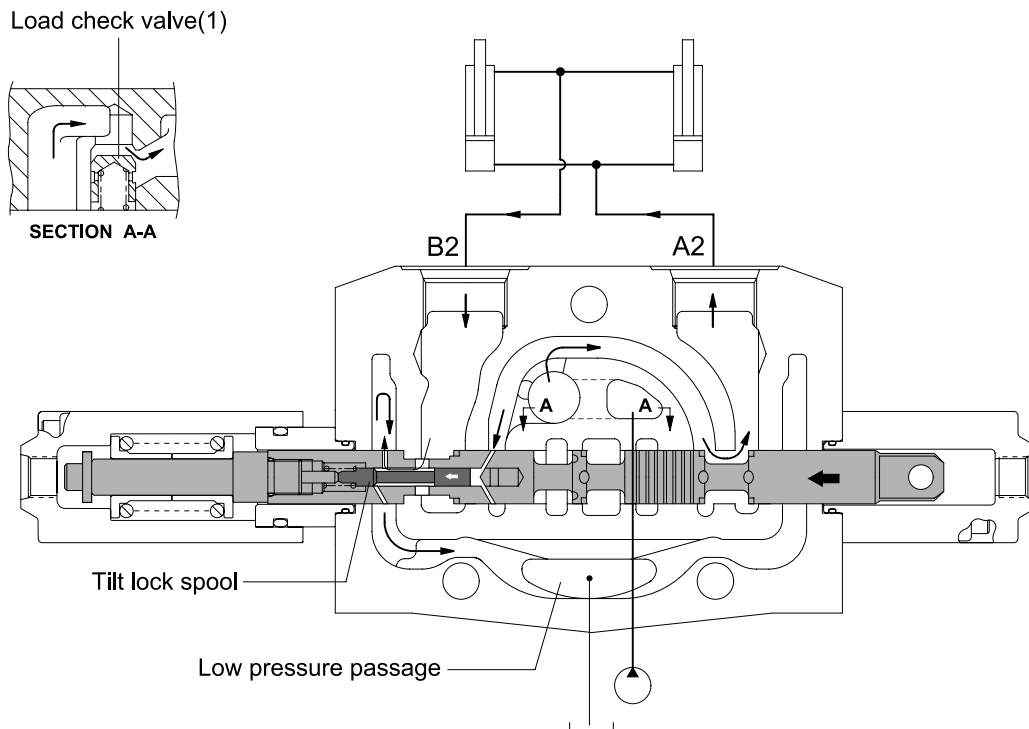

50D7EHS10


When the tilt control lever is pushed forward, the spool moves to the left and the neutral passage is closed.

The oil supplied from the pump pushes up the load check valve (1) and flow into tilt cylinder port (A2).

The pump pressure reaches proportionally the load of cylinders and fine control finished by closing the neutral passage.

The return oil from cylinder port (B2) flows into the tank through the hole of the tilt lock spool.

(2) Tilt backward position

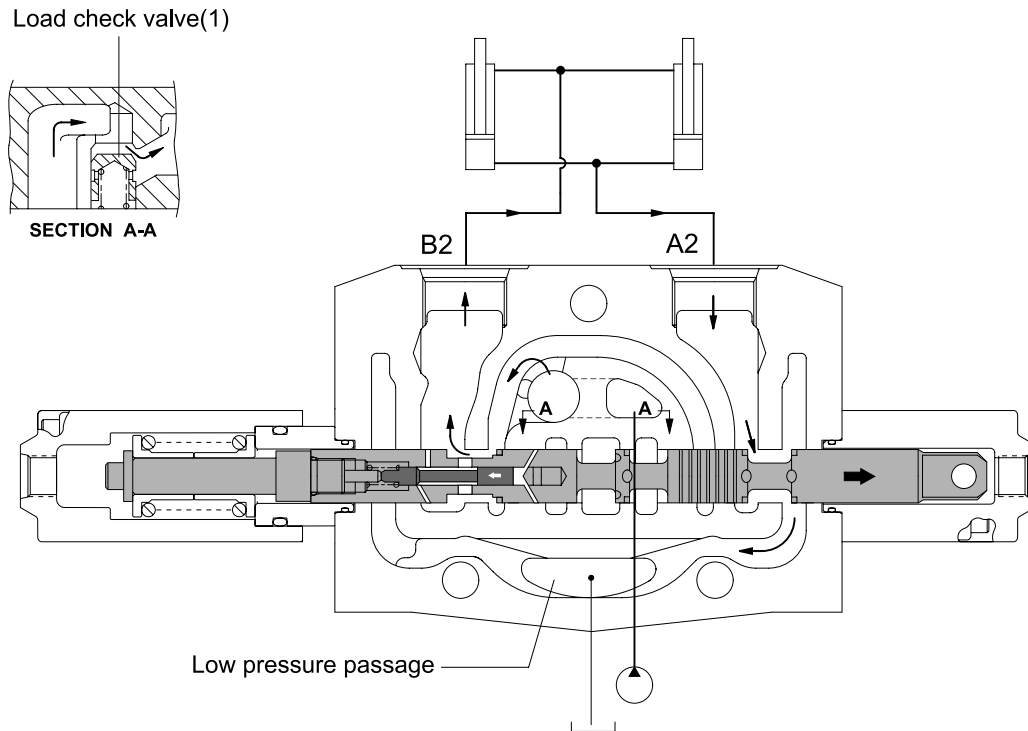

50D7EHS11

When the tilt control lever is pulled back, the spool moves to the right and the neutral passage is closed.

The oil supplied from the pump pushes up the load check valve (1) and flows into tilt cylinder port (B2). The pump pressure reaches proportionally the load of cylinder and fine control finished by shut off of the neutral passage.

The return oil from cylinder port (A2) flows into the tank via the low pressure passage.


4) MAIN RELIEF VALVE

(1) Pressure setting

A good pressure gauge must be installed in the line which is in communication with the work port relief. A load must be applied in a manner to reach the set pressure of the relief unit.

Procedure


- ① Loosen lock nut.
- ② Set adjusting nut to desired pressure setting.
- ③ If desired pressure setting cannot be achieved, add or remove shims as required.
- ④ Tighten lock nut.
- ⑤ Retest in similar manner as above.

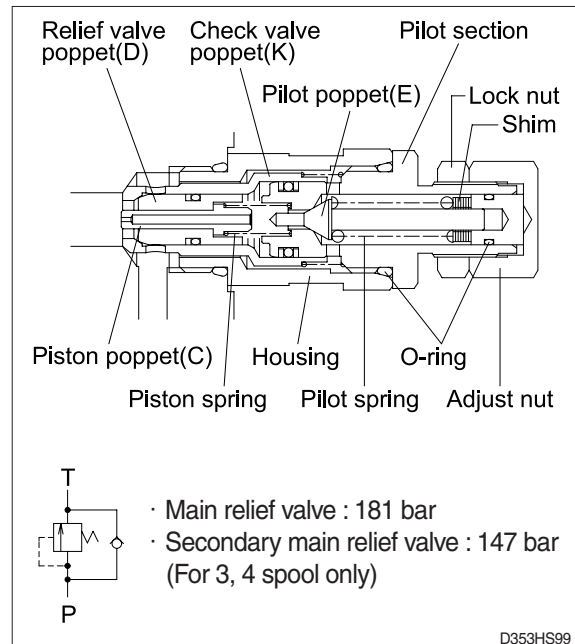


(2) Function

① As work port relief


The relief valve is in communication between the high pressure port HP and low pressure LP. Oil is admitted through the hole in poppet C and because of the differential area between diameters A and B relief valve poppet D and check valve poppet K are tightly seated as shown.

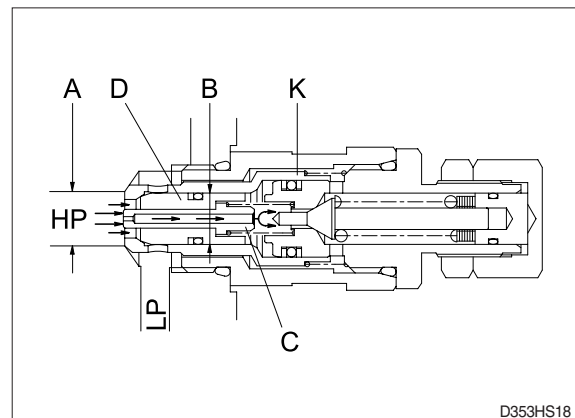


The oil pressure in the high pressure port HP has reached the setting of the pilot poppet spring force and unseats the pilot poppet E and oil flows around the poppet through the cross drilled holes and to the low pressure area LP.

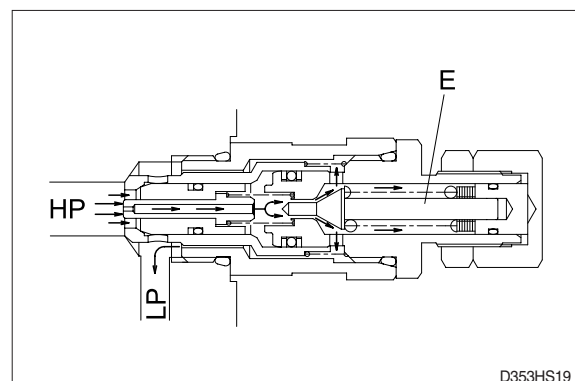

The loss of oil behind poppet C, effected by the opening of pilot poppet E, causes poppet C to move back and seat against pilot puppet E. This shuts off the oil flow to the area behind relief valve poppet D, and causes a low pressure area internally.

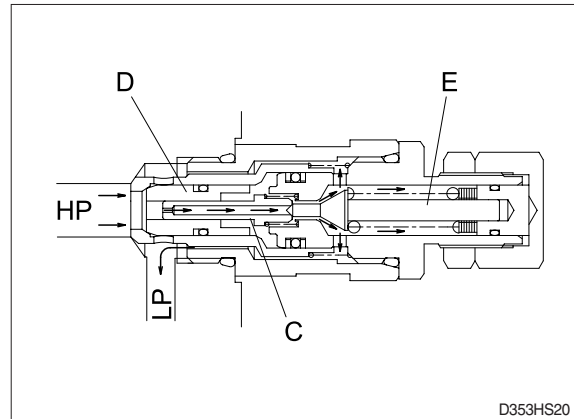


The imbalance of pressure on the inside as compared to that of the high pressure port HP, forces the relief valve poppet D to open and relieve the oil directly to the low pressure chamber LP in the valve.

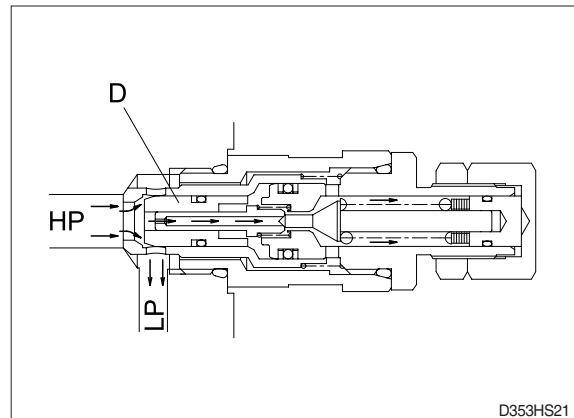


② As anti void

The anti-void unit supplies oil to the high pressure port HP when cavitation has occurred. A lower pressure exists in the port HP compared to the low pressure chamber LP. The difference between the effective area of diameter A and G causes imbalance of the check valve poppet K which unseats, thus allowing oil from the low pressure chamber LP to enter the port HP and fill the void.

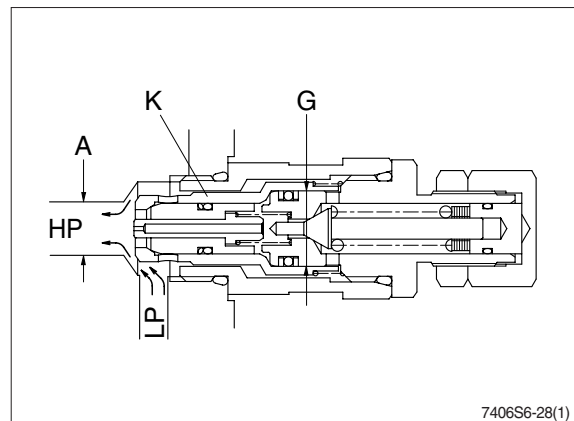

4. REMOTE CONTROL VALVE


1) STRUCTURE

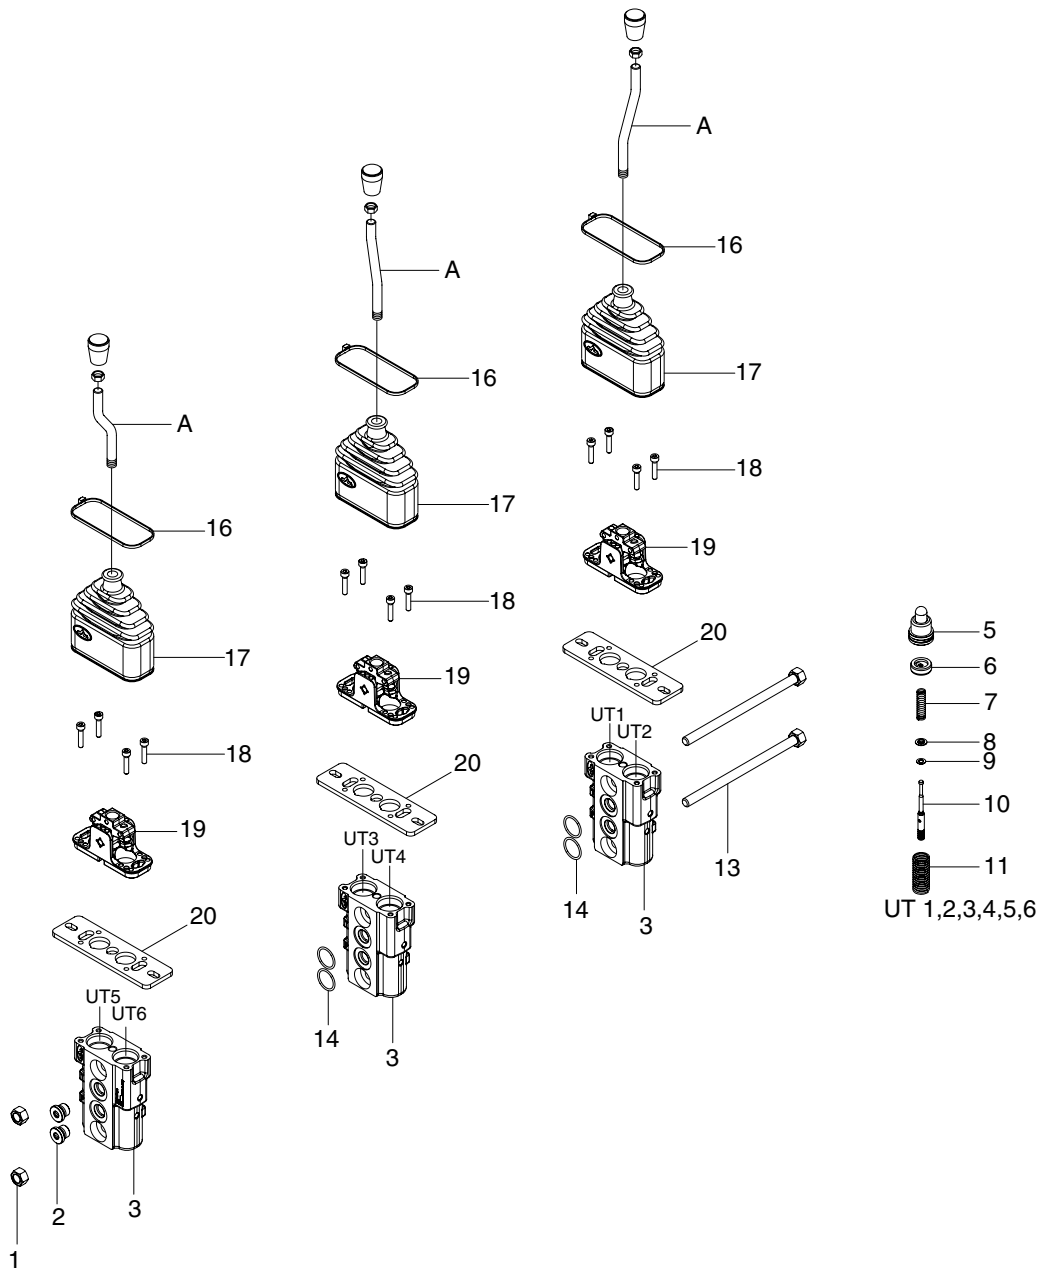

100D7RCV00

A	Lever	7	Metering spring	14	O-ring
1	Nut	8	Seeger ring	15	Kit 3
2	Plug	9	Seeger ring	16	Clamp
3	Body	10	Docking rod	17	Rubber bellows
4	Kit 1	11	Spring	18	Screw
5	Plunger kit	12	Kit 2	19	Support kit
6	Spring guide	13	Tie rod with nut	20	Flange

2) OPERATION

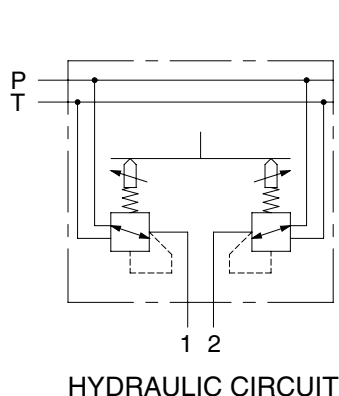

(1) Hydraulic functional principle

Pilot devices with end position locks operate as direct operated pressure reducing valves.

They basically comprise of control lever (A), two pressure reducing valves, body (3) and locks.

Each pressure reducing valve comprises of a plunger kit (5), a metering spring (7) and a spring (11).

At rest, control lever(A) is held in its neutral position by return springs (11). Ports (1, 2) are connected to tank port T.


When control lever (A) is deflected, plunger kit (5) is pressed against return spring (11) and metering spring (7).

Metering spring (7) initially moves docking rod (10) downwards and closes the connection between the relevant port and tank port T. At the same time the relevant port is connected to port P. The control phase starts as soon as docking rod (10) finds its balance between the force from metering spring (7) and the force, which results from the hydraulic pressure in the relevant port (ports 1, 2).

Due to the interaction between docking rod (10) and metering spring (7) the pressure in the relevant port is proportional to the stroke of plunger (5) and hence to the position of control lever (A).

This pressure control which is dependent on the position of the control lever and the characteristics of the control spring permits the proportional hydraulic control of the main directional valves and high response valves for hydraulic pumps.


A rubber bellows (17) protects the mechanical components in the housing from contamination.

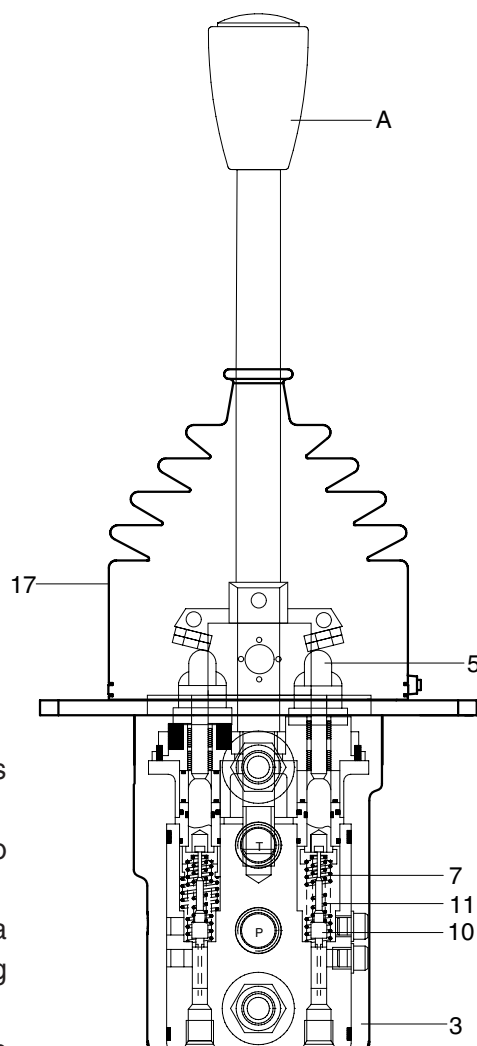

100D7RCV01

5. LIFT CYLINDER


1) V-MAST

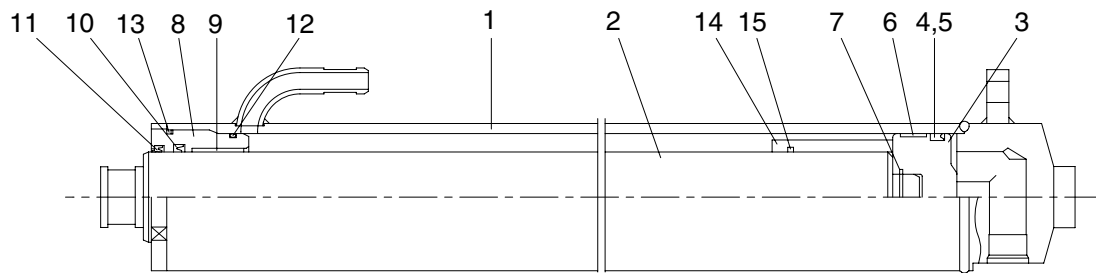

50D9HS12A

1	Tube assy	6	Wear ring	11	Dust wiper
2	Rod	7	Cushion seal	12	O-ring
3	Piston	8	Gland	13	O-ring
4	Piston seal	9	Du bushing	14	Spacer
5	Back up ring	10	Rod seal	15	O-ring


2) TF/TS MAST

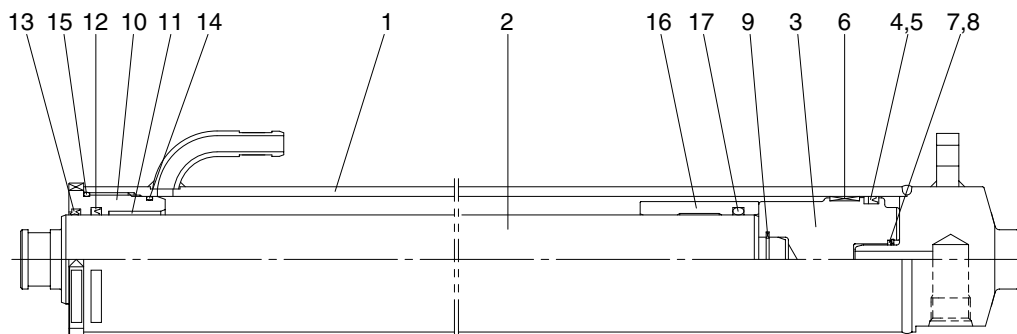

D507HS12

1	Tube assy	7	Cushion seal	13	Dust wiper
2	Rod	8	Retaining ring	14	O-ring
3	Piston	9	Retaining ring	15	O-ring
4	Piston seal	10	Gland	16	Spacer
5	Back up ring	11	Du bushing	17	O-ring
6	Wear ring	12	Rod seal		


6. TILT CYLINDER

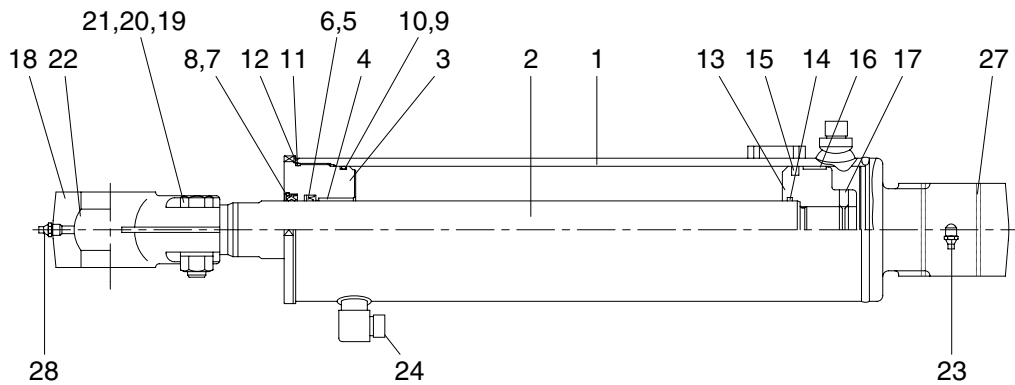

50D9HS12C

- | | | |
|----------------|-----------------|----------------------|
| 1 Tube assy | 10 Back up ring | 19 Hex bolt |
| 2 Rod | 11 O-ring | 20 Hex nut |
| 3 Rod cover | 12 Washer | 21 Spring washer |
| 4 Rod bushing | 13 Piston | 22 Spherical bearing |
| 5 U-packing | 14 O-ring | 23 Grease nipple |
| 6 Back up ring | 15 Piston seal | 24 O-ring |
| 7 Dust wiper | 16 Wear ring | 27 Rod bushing |
| 8 Stop ring | 17 Set screw | 28 Grease nipple |
| 9 O-ring | 18 Eye | |

7. FREE LIFT CYLINDER (TF-MAST)

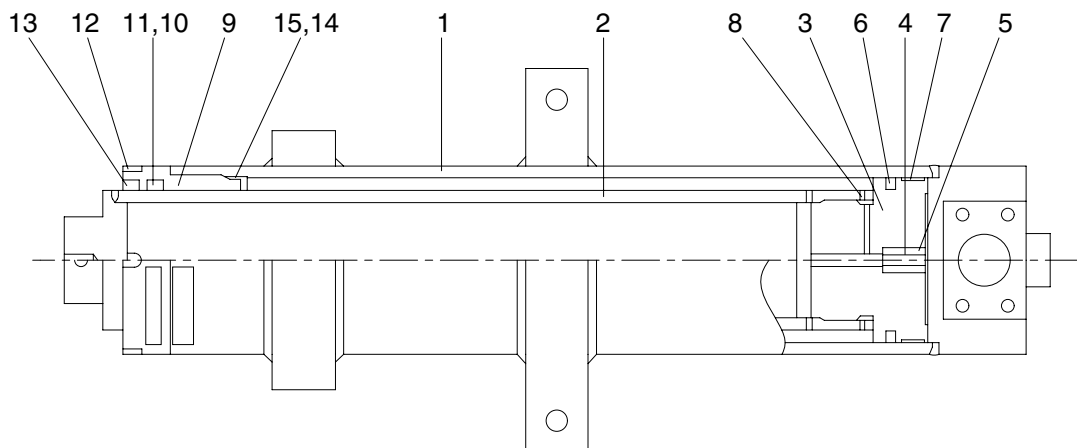

50D9HS12B

- | | | |
|------------------|-------------|-----------------|
| 1 Tube assy | 6 GLYD ring | 11 Back up ring |
| 2 Rod assy | 7 Wear ring | 12 Dust wiper |
| 3 Piston | 8 Set screw | 13 Snap ring |
| 4 Check valve | 9 Gland | 14 O-ring |
| 5 Retaining ring | 10 Rod seal | 15 Back up ring |

GROUP 2 OPERATIONAL CHECKS AND TROUBLESHOOTING

1. OPERATIONAL CHECKS

1) CHECK ITEM

- (1) Check visually for deformation, cracks or damage of rod.
- (2) Load maximum load, set mast vertical and raise 1 m from ground. Wait for 10 minutes and measure hydraulic drift (amount forks move down and amount mast tilts forward).



· Hydraulic drift

- Down (Downward movement of forks)
: Within 100 mm (3.9 in)
- Forward (Extension of tilt cylinder)
: Within 5 °

If the hydraulic drift is more than the specified value, replace the control valve or cylinder packing.


- (3) Check that clearance between tilt cylinder bushing and mounting pin is within standard range.

	mm (in)
Standard	Under 0.6 (0.02)

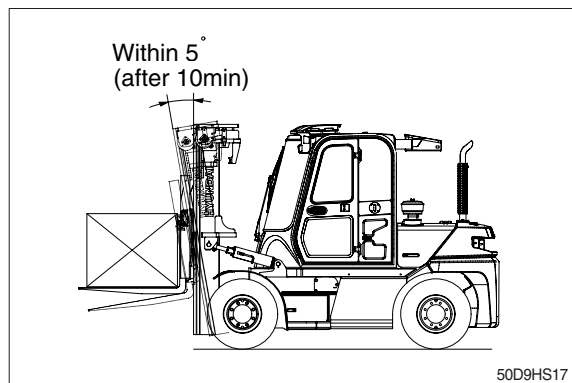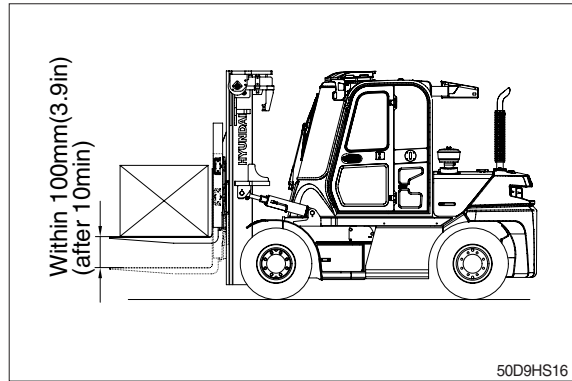

2) HYDRAULIC OIL

- (1) Using dipstick, measure oil level, and oil if necessary.
- (2) When changing hydraulic oil, clean suction strainer(screwed into outlet port pipe) and line filter(screwed into inlet pipe).

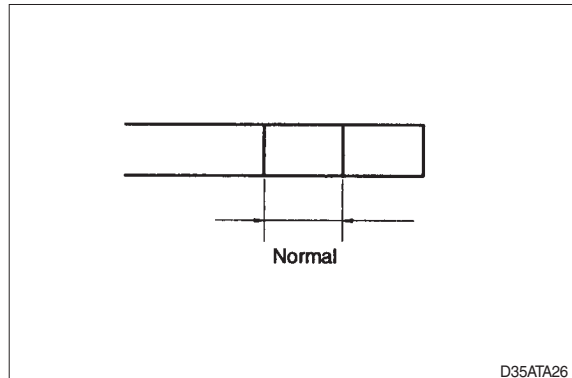

3) CONTROL VALVE

- (1) Raise forks to maximum height and measure oil pressure.
Check that oil pressure is 188 kgf/cm².
(2675 psi)

2. TROUBLESHOOTING

1) SYSTEM

Problem	Cause	Remedy
Large fork lowering speed	<ul style="list-style-type: none"> Seal inside control valve defective. Oil leaks from joint or hose. Seal inside cylinder defective. 	<ul style="list-style-type: none"> Replace spool or valve body. Replace. Replace packing.
Large spontaneous tilt of mast	<ul style="list-style-type: none"> Tilting backward : Check valve defective. Tilting forward : tilt lock valve defective. Oil leaks from joint or hose. Seal inside cylinder defective. 	<ul style="list-style-type: none"> Clean or replace. Clean or replace. Replace. Replace seal.
Slow fork lifting or slow mast tilting	<ul style="list-style-type: none"> Lack of hydraulic oil. Hydraulic oil mixed with air. Oil leaks from joint or hose. Excessive restriction of oil flow on pump suction side. Relief valve fails to keep specified pressure. Poor sealing inside cylinder. High hydraulic oil viscosity. Mast fails to move smoothly. Oil leaks from lift control valve spool. Oil leaks from tilt control valve spool. 	<ul style="list-style-type: none"> Add oil. Bleed air. Replace. Clean filter. Adjust relief valve. Replace packing. Change to SAE10W, class CD engine oil. Adjust roll to rail clearance. Replace spool or valve body. Replace spool or valve body.
Hydraulic system makes abnormal sounds	<ul style="list-style-type: none"> Excessive restriction of oil flow pump suction side. Gear or bearing in hydraulic pump defective. 	<ul style="list-style-type: none"> Clean filter. Replace gear or bearing.
Control valve lever is locked	<ul style="list-style-type: none"> Foreign matter jammed between spool and valve body. Valve body defective. 	<ul style="list-style-type: none"> Clean. Tighten body mounting bolts uniformly.
High oil temperature	<ul style="list-style-type: none"> Lack of hydraulic oil. High oil viscosity. Oil filter clogged. 	<ul style="list-style-type: none"> Add oil. Change to SAE10W, class CD engine oil. Clean filter.

2) HYDRAULIC GEAR PUMP

Problem	Cause	Remedy
Pump does not develop full pressure	<ul style="list-style-type: none"> · System relief valve set too low or leaking. · Oil viscosity too low. · Pump is worn out. 	<ul style="list-style-type: none"> · Check system relief valve for proper setting. · Change to proper viscosity oil. · Repair or replace pump.
Pump will not pump oil	<ul style="list-style-type: none"> · Reservoir low or empty. · Suction strainer clogged. 	<ul style="list-style-type: none"> · Fill reservoir to proper level. · Clean suction strainer.
Noisy pump caused by cavitation	<ul style="list-style-type: none"> · Oil too thick. · Oil filter plugged. · Suction line plugged or too small. 	<ul style="list-style-type: none"> · Change to proper viscosity. · Clean filters. · Clean line and check for proper size.
Oil heating	<ul style="list-style-type: none"> · Oil supply low. · Contaminated oil. · Setting of relief valve too high or too low. · Oil viscosity too low. 	<ul style="list-style-type: none"> · Fill reservoir to proper level. · Drain reservoir and refill with clean oil. · Set to correct pressure. · Drain reservoir and fill with proper viscosity.
Foaming oil	<ul style="list-style-type: none"> · Low oil level. · Air leaking into suction line. · Wrong kind of oil. 	<ul style="list-style-type: none"> · Fill reservoir to proper level. · Tighten fittings, check condition of line. · Drain reservoir, fill with non-foaming oil.
Shaft seal leakage	<ul style="list-style-type: none"> · Worn shaft seal. · Worn shaft in seal area. 	<ul style="list-style-type: none"> · Replace shaft seal. · Replace drive shaft and seal.

3) MAIN RELIEF VALVE

Problem	Cause	Remedy
Can't get pressure	<ul style="list-style-type: none"> · Poppet D, E or K stuck open or contamination under seat. 	<ul style="list-style-type: none"> · Check for foreign matter between poppets D, E or K and their mating parts. Parts must slide freely.
Erratic pressure	<ul style="list-style-type: none"> · Pilot poppet seat damaged. · Poppet C sticking in D. 	<ul style="list-style-type: none"> · Replace the relief valve. · Clean and remove surface marks for free movement.
Pressure setting not correct	<ul style="list-style-type: none"> · Normal wear. Lock nut & adjust screw loose. 	<ul style="list-style-type: none"> · See ★How to set pressure on work main relief.
Leaks	<ul style="list-style-type: none"> · Damaged seats. · Worn O-rings. · Parts sticking due to contamination. 	<ul style="list-style-type: none"> · Replace the relief valve. · Install seal and spring kit. · Disassemble and clean.

★ A good pressure gauge must be installed in the line which is in communication with the main relief. A load must be applied in a manner to reach the set pressure of the main relief unit.

Then, follow these steps:


- Loosen lock nut.
- Set adjusting nut to desired pressure setting.
- If desired pressure setting cannot be achieved, tighten or loosen the adjusting screw as required.
- Tighten lock nut.
- Retest in similar manner as above.

4) CYLINDER

Problem	Cause	Remedy
Oil leaks out from rod cover through rod	<ul style="list-style-type: none"> Foreign matters on packing. Unallowable score on rod. Unusual distortion of dust seal. Chrome plating is striped. 	<ul style="list-style-type: none"> Replace packing. Smooth rod surface with an oil stone. Replace dust seal. Replace rod.
Oil leaks out from cylinder rod cover thread	<ul style="list-style-type: none"> O-ring damaged. 	<ul style="list-style-type: none"> Replace O-ring.
Rod spontaneously retract	<ul style="list-style-type: none"> Scores on inner surface of tube. Unallowable score on the inner surface of tube. Foreign matters in piston seal. 	<ul style="list-style-type: none"> Smooth rod surface with an oil stone. Replace cylinder tube. Replace piston seal.
Wear (clearance between cylinder tube and wear ring)	<ul style="list-style-type: none"> Excessive clearance between cylinder tube and wear ring. 	<ul style="list-style-type: none"> Replace wear ring.
Abnormal noise is produced during tilting operation	<ul style="list-style-type: none"> Insufficient lubrication of anchor pin or worn bushing and pin. Bent tilt cylinder rod. 	<ul style="list-style-type: none"> Lubricate or replace. Replace.

5) FINGER TIP (OPTION)

(1) DTC Error code and Trouble shooting

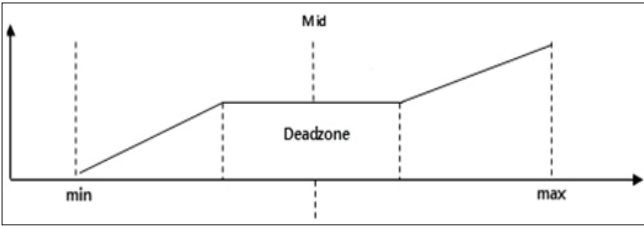Category	DTC Error Code	Action
Lever setting error	<ul style="list-style-type: none"> Lift Lever Setting Error Tilt Lever Setting Error Aux1 Lever Setting Error Aux2 Lever Setting Error  <p>* VCU : Valve Control Unit (HAWE "CANIO14+") **DTC : Diagnostic Trouble Code</p>	<p>Check Lever Setting Value is correct like below values, and retry lever setting correctly.</p> <p>Min = 0.3~0.7 Mid = 2.3~2.7 Max = 4.3~4.7 (Voltage)</p> <p>If the Lever Value doesn't change from "0", Check fingertip levers. It might parts failure or Electric wire failure.</p>
Valve open error	<ul style="list-style-type: none"> Lift up (down) Valve 0 (1) Open Tilt in (out) Valve 2 (3) Open Aux1 in (out) Valve 4 (5) Open Aux2 in (out) Valve 6 (7) Open 	Check Valve Electric wire open circuit.
Valve short error	<ul style="list-style-type: none"> Lift up (down) Valve 0 (1) Short Tilt in (out) Valve 2 (3) Short Aux1 in (out) Valve 4 (5) Short Aux2 in (out) Valve 6 (7) Short 	Check Valve Electric wire short circuit.
Valve VCC missing error	<ul style="list-style-type: none"> Lift up (down) Valve 0 (1) VCC missing Tilt in (out) Valve 2 (3) VCC missing Aux1 in (out) Valve 4 (5) VCC missing Aux2 in (out) Valve 6 (7) VCC missing 	Check VCU VCC(Supply Voltage). About 24V must be supplied for A1, A8, B5 Pin.

(2) Equipment setup - Finger Tip(option)

※ How to set the "Finger Tip Lever Position"

① Press the "Equipment" button




② Enter password : Default "0000"



③ Press the "Finger Tip Setting" button



④ Press the "Lever Setting" button

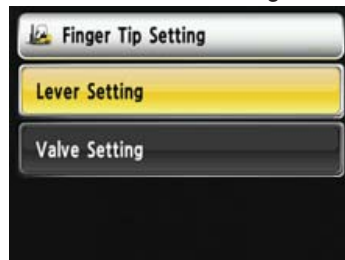

⑤ Press the "Lift Lever" button



⑥ You can enter "Lift Lever" display



⑦ Activate the "Min" button



⑧ Pull the lever backwards as much as possible and set Min. voltage value



⑨ Place the lever in neutral and set the Mid value



⑩ Push the lever forwards as much as possible and set the Max value



⑪ Lift lever setting is completed



⑫ Repeat the same process for "Tilt, Aux1, Aux2 Lever" as 5-11



※ How to set the "Finger Tip Lever Deadzone"

- ① Press the "Lever Deadzone" button ② Press the "Upper Zone" button ③ Set the upper deadzone value




- ④ Repeat for "Lower Zone" as 2-3




※ How to set the "Finger Tip Lift Section Valve"

- ① Press the "Valve Setting" button ② Press the "Lift Section Valve" button ③ Press "Up valve" or "Down Valve" button

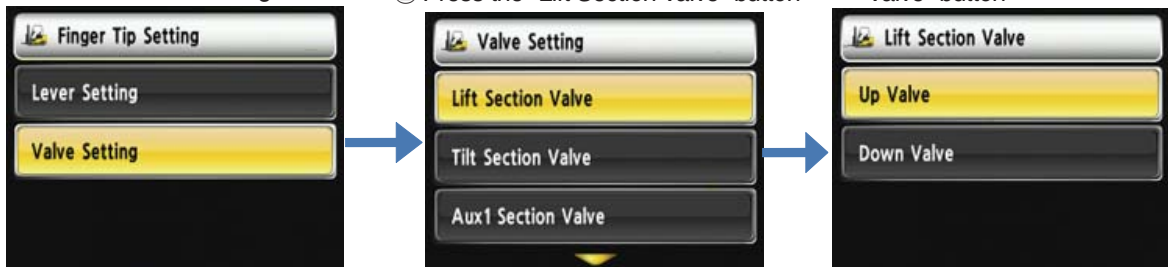


- ④ Press the "Min Open" button ⑤ Set the minimum open value ⑥ Set the "Maximum Opening" and "Open Delay" as 4-5

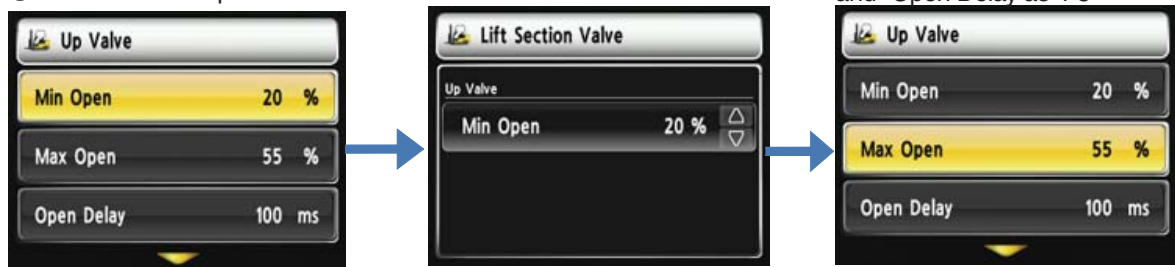

※ How to set the "Finger Tip Tilt, Aux1, Aux2 Section Valve"

- ① Press "Tilt Section Valves" or "Aux1 Section Valve" or "Aux2 Section Valve" button ② Press "A Valve" or "B Valve" and set the value

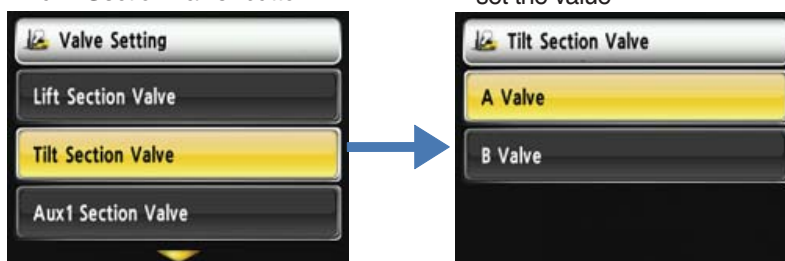

2) GENERAL INSTRUCTION

(1) Cleanliness

- ① Cleanliness is the primary means of assuring satisfactory hydraulic pump life.

Components such as flanges and covers are best cleaned in soap and hot water, then air dried.

Gears should be washed in solvent, air dried, and oiled immediately.

▲ Certain cleaning solvents are flammable. Do not allow sources of ignition in the area when using cleaning solvents.

- ② Protect all exposed surfaces and open cavities from damage and foreign material.

※ Gear journals and gear faces are super finished. Take care not to touch these surfaces after oil and solvent.

(2) Lubrication of moving parts

During assembly, all running surfaces (Bearing and wear plate) must be lightly lubricated with a clean oil or aerosol lubricant.

(3) Tools required for assembly

- ① Socket set (1/2" drive)
- ② Internal snap ring pliers
- ③ Shaft seal sleeve or clear tape
- ④ Torque wrench (200 lbf · ft capacity)
- ⑤ Plastic hammer
- ⑥ Torque wrench box end adapters

3) DISASSEMBLY (general pump, standard)

- (1) Loosen and remove the nuts and washers from cover.



- (2) Remove cover and dowel pin stud bolts from cover.



(3) Remove connection shaft, drive gear and driven gear set from gear housing.

※ When removing the gear housing, keep it as straight as possible during removal so that it can not happen scratch or damage to inner surface by touching gear teeth.




(4) Remove gear housing from carrier.
Remove thrust plate from gear housing.



(5) Remove bearing carrier from gear housing.



(6) Remove connecting shaft from gear set.
Remove thrust plate from gear housing.

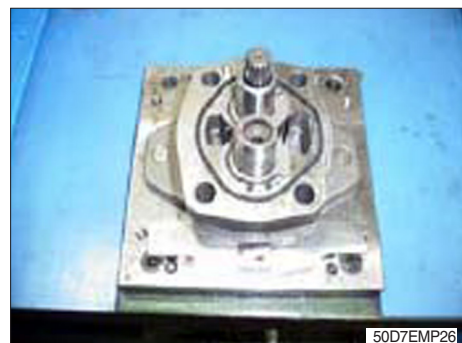

(7) After taking out connecting shaft, remove gear housing, drive gear and driven gear set from cover.

※ When removing the gear housing, keep it as straight as possible so that it can not happen scratch or damage to inner surface by touching gear teeth.

Inspect scoring or excessive wear of shaft and gear teeth for both drive gear and driven gear set.



(8) Remove lip seal from the cover.

※ When remove the lip seal from the cover, take care not to give any scratch or damage on the surface of shaft hole or seal bore.



4) ASSEMBLY

(1) Thoroughly clean seal bore, press the shaft seal in to the seal bore of the cover.

※ Uniform pressure must be used to prevent misalignment or damage to the seal.



(2) Assemble shaft to the cover.

※ Thoroughly clean mounting surface of the gear housing for the seals.



- (3) Assemble gear housing and thrust plate to the cover.



- (4) Assemble gear set and thrust plate, shaft.
※ Thoroughly clean mounting surface of square seal and insert the seal in the gear housing, thrust plate.



- (5) Assemble gear housing to carrier using dowel pin.



- (6) Assemble gear housing and gear set.



- (7) Assemble carrier to gear housing using dowel pins.
Assemble gear housing to carrier using dowel pins.

- ※ Thoroughly clean mounting surface of seals, and then insert seals and thrust plate.
- ※ Take care not to happen any damage of the seals.



- (8) Assemble last drive gear and driven gear set to the drive gear and driven gear set using connecting shaft.
Assemble cover to gear housing using dowel pin.

- ※ Thoroughly clean mounting surface of seals and then insert the seals and thrust plate.
- ※ Take care not to happen any damage of the seals.




- (9) Assemble stud bolts, washers and fasten nuts.
· Tightening torque for nut : 15 kg · m



MAIN PUMP (LOW NOISE PUMP, OPTION)

1) STRUCTURE

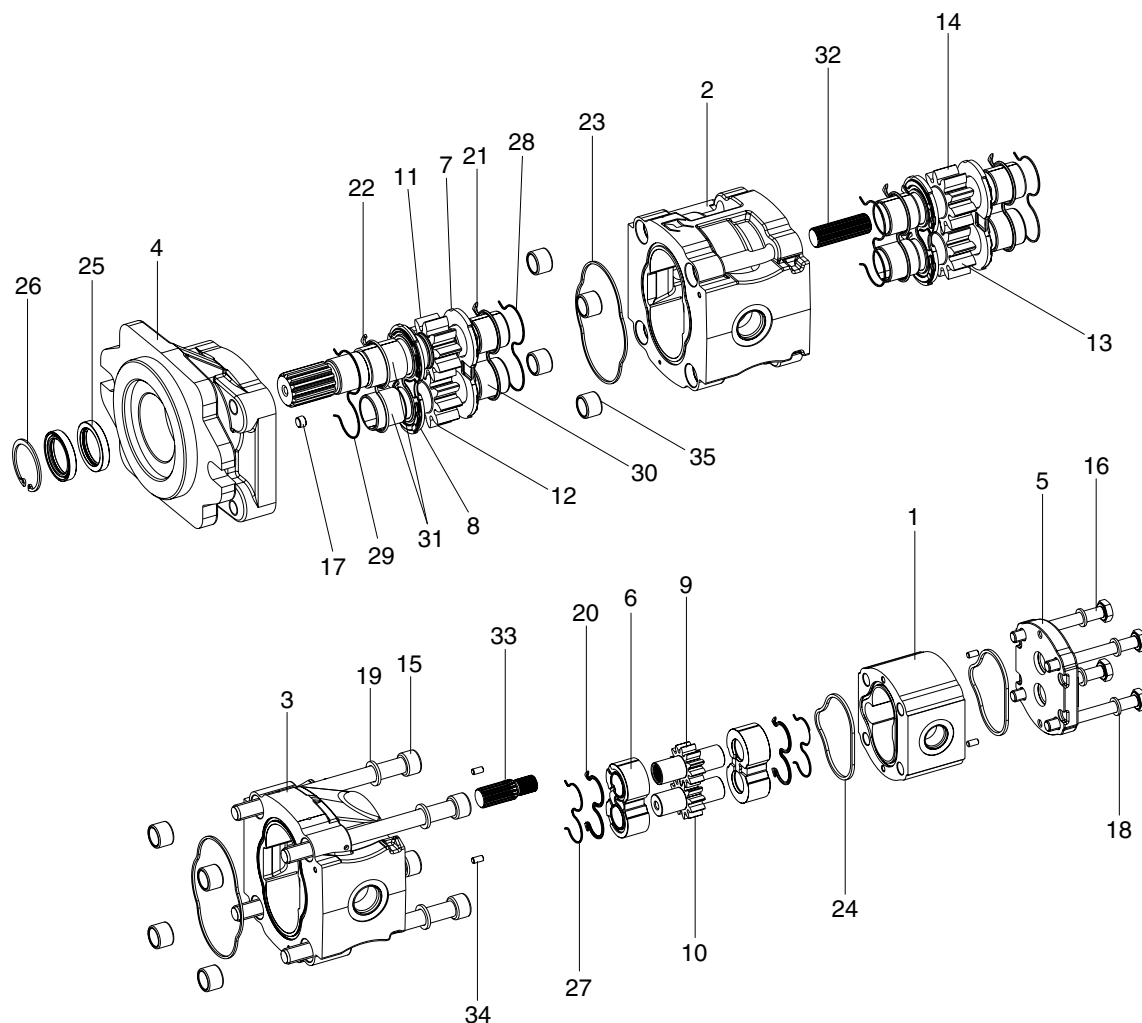

50D9HS06A

1	Gear housing	13	Driven gear	25	Shaft seal
2	Body	14	Drive shaft	26	Ring
3	Gear housing	15	Screw	27	Antiextrusion
4	Cover	16	Screw	28	Antiextrusion ring
5	Rear cover	17	Grub screw	29	Upper Antiextrusion ring
6	Thrust plate	18	Washer	30	Sleeve bearing
7	Thrust plate	19	Washer	31	Upper sleeve bearing
8	Upper thrust plate	20	Seal	32	Hub
9	Drive gear	21	Seal	33	Hub
10	Driven gear	22	Upper seal	34	Dowel pin
11	Drive shaft	23	Standard seal	35	Steel bushing
12	Driven gear	24	Seal		

2) GENERAL INSTRUCTION

(1) Cleanliness

- ① Cleanliness is the primary means of assuring satisfactory hydraulic pump life.

Components such as flanges and covers are best cleaned in soap and hot water, then air dried.

Gears should be washed in solvent, air dried, and oiled immediately.

▲ Certain cleaning solvents are flammable. Do not allow sources of ignition in the area when using cleaning solvents.

- ② Protect all exposed surfaces and open cavities from damage and foreign material.

※ Gear journals and gear faces are super finished. Take care not to touch these surfaces after oil and solvent.

(2) Lubrication of moving parts

During assembly, all running surfaces (Bearing and wear plate) must be lightly lubricated with a clean oil or aerosol lubricant.

(3) Tools required for assembly

- ① Socket set (1/2" drive)
- ② Internal snap ring pliers
- ③ Shaft seal sleeve or clear tape
- ④ Torque wrench (200 lbf · ft capacity)
- ⑤ Plastic hammer
- ⑥ Torque wrench box end adapters


3) DISASSEMBLY

(1) Rear section

- ① Loosen and remove the clamp bolts (18) from rear working section (1).

※ Related parts


Washer (21), rear cover (4), dowel pin (36) and square-ring (26).

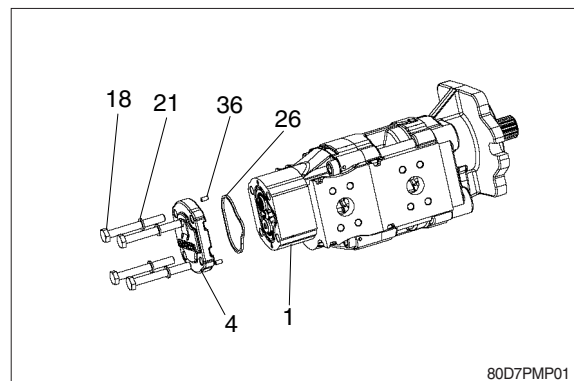

- ② Remove driving gear (11), driven gear (12) with thrust plate parts (8, 22, 29), keeping gear as straight as possible, and working section (1) also.

※ Related parts


Back-up ring (29), O-ring (22), thrust plate (8), working body (1) and square ring (26).

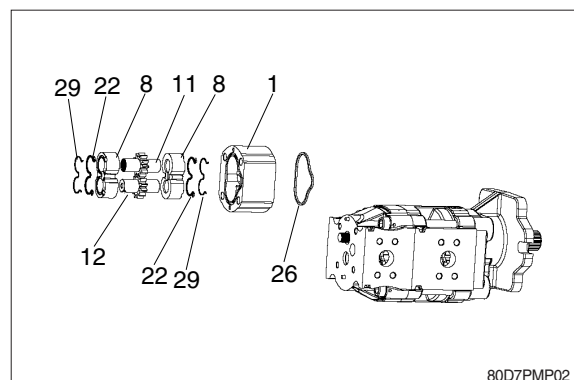

(2) Center section


- ① Remove through shaft (35) from driving shaft (15).
- ② Loosen and remove the clamp bolt (17) with washer (21), and then remove the working section (2) with dowel pin (36).

※ Related parts
Square ring (25).

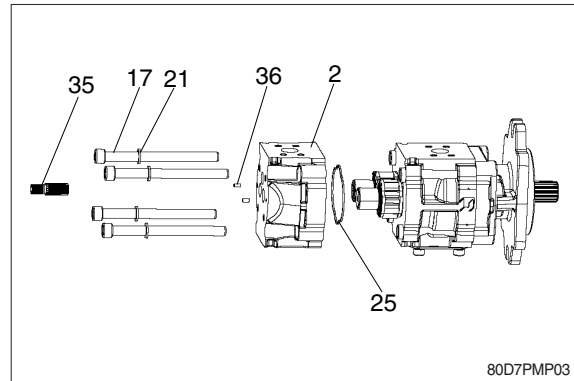

- ③ Remove driving gear (15), driven gear (14) with thrust plate parts (9, 23, 30), keeping gear as straight as possible, from first working body.

※ Related parts
Back-up ring (30), O-ring (23) and thrust plate (9).


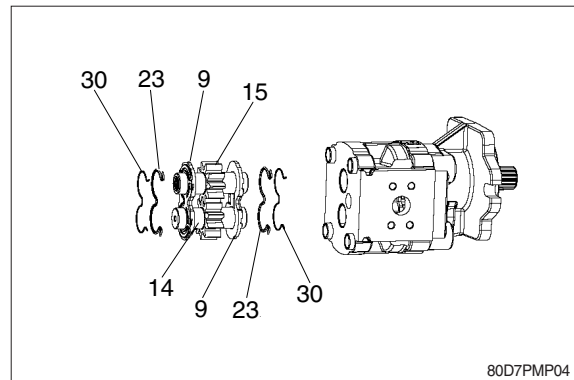


(3) Front section

- ① Remove the snap-ring (28) and shaft seal (27), and then remove mounting flange (5) and square ring (25) from working section (3).

- ② Remove driving gear (13), driven gear (14) with through shaft (34) and thrust plate parts (10, 24, 31) from the working body (3), keeping gear as straight as possible.


Related parts
Plug (19), back-up ring (31), O-ring (24) and thrust plate (10).

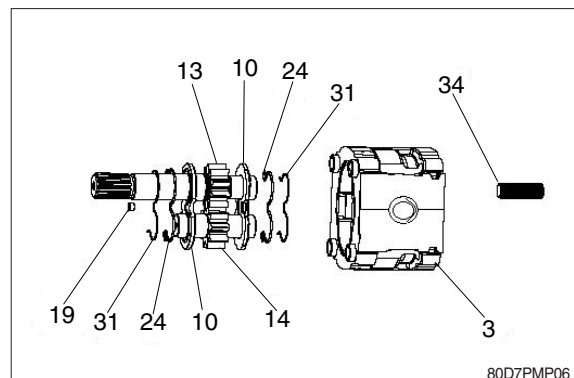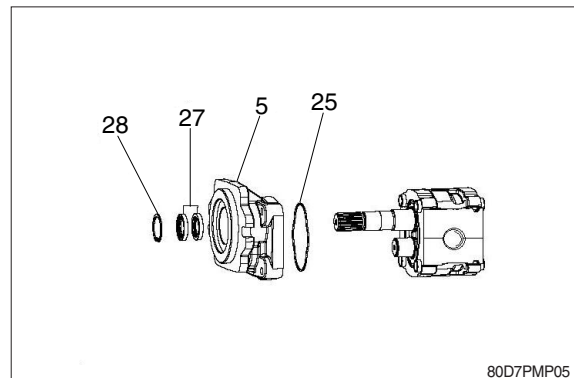

4) REASSEMBLY

※ Information for assembly way of thrust plates

It is important that all of thrust plate parts in this hydraulic pump should be assembled such as below picture during reassembly. Below figures show assembling sequence and direction.

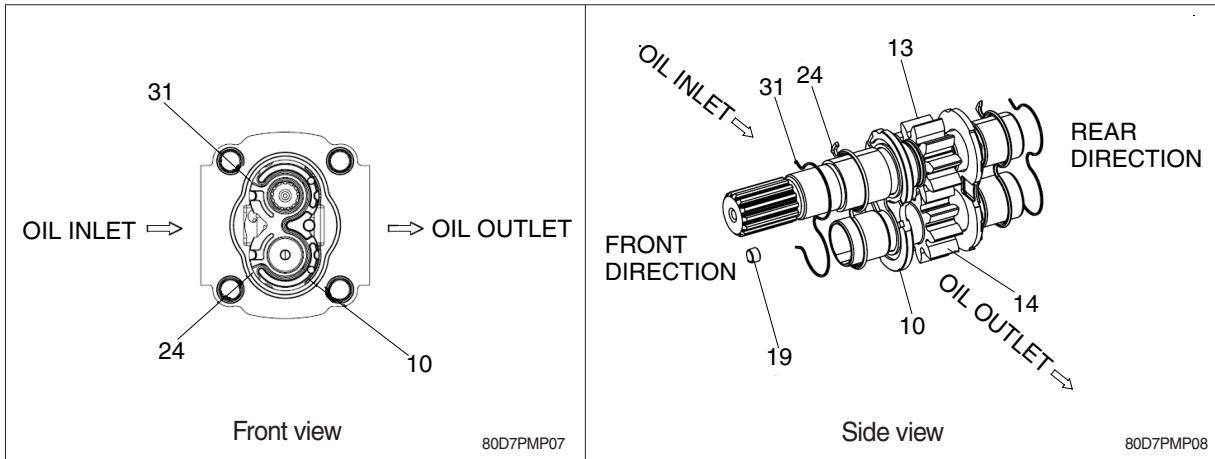

10 Thrust plate

13 Driving gear

14 Driven gear


19 Plug

24 O-ring

31 Back-up ring


(1) Front cover area

- ① Insert the shaft seal (27) carefully and fit it inside of mounting flange (5) with proper tool.
- ② Fit the snap-ring (28) in pre-arranged position with proper tool.

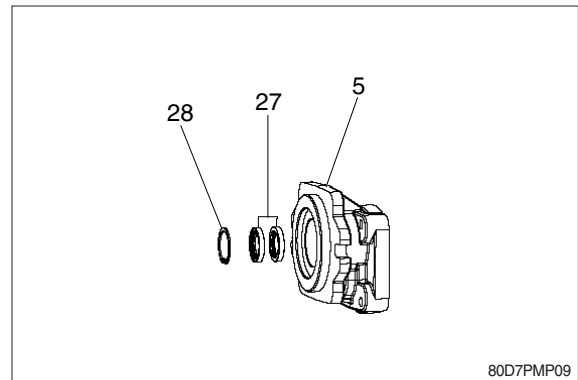


(2) Center section

- ① Fit the square ring (25) on the prearranged groove of the working section (3).
- ※ Smear clean grease on the square ring (25) to avoid drifting away of square ring from the working section (3).

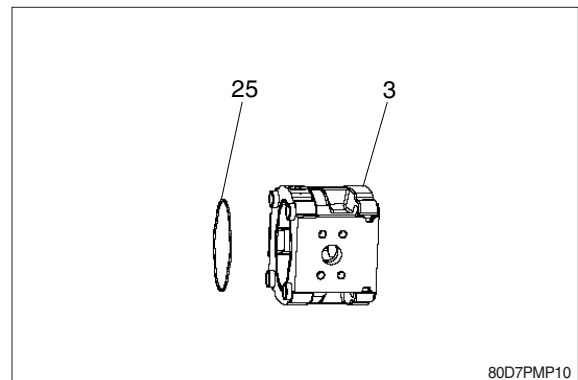


- ② Locate the o-ring (24) on the groove prearranged on the thrust plate (10).
- ③ Then, locate back-up ring (31) on the groove pre-arranged on the seals (10, 24) with plug (19).

※ Smear clean grease on the seal (24,31).
(The front and rear thrust plates and seals and back-up ring are same.)

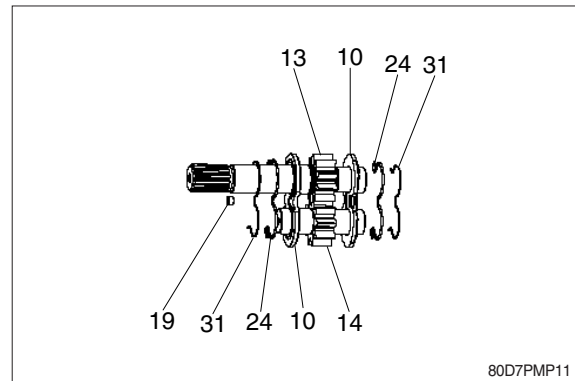


- ④ Insert the driving gear (13) and driven gear (14) into working section (3) while keeping the gears straight.

※ Locate thrust plate (10+24+31) with care for the direction.

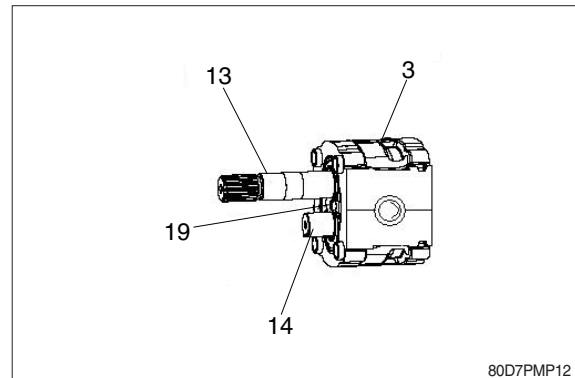


- ⑤ Locate the completed mounting flange (5+27+28) to working section (3) while tacking care not to give any damage on the shaft seal by edge of shaft (13).
- ⑥ Insert the through shaft (34) to rear side of the driving shaft (13).

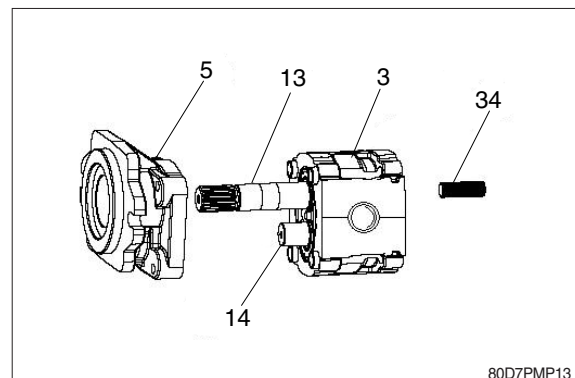


- ⑦ Locate the O-ring (23) on the groove prearranged on the thrust plate (9).
- ⑧ Then, locate back-up ring (30) on the groove pre-arranged on the seals (9, 23).

※ Smear clean grease on the seal (9,23)
(The front and rear thrust plates and seals and back-up ring are same.)

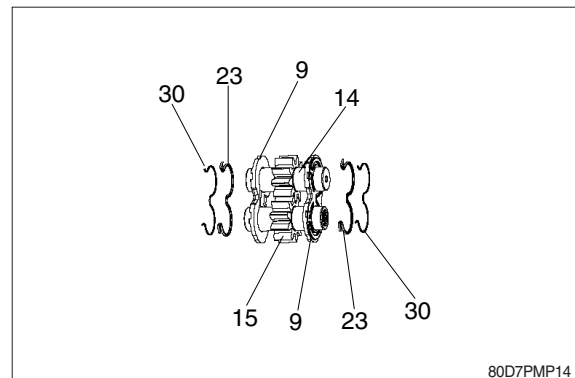


- ⑨ Insert the driving shaft (15) and driven gear (14) including the completed thrust plate (9+23+30) into working section (3) while keeping the plate straight.

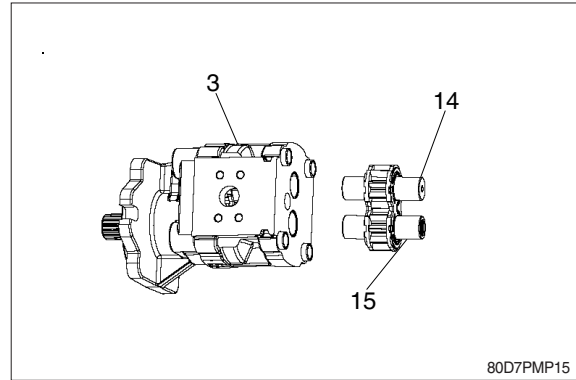


- ⑩ Insert the through shaft (35) into driving shaft (15), and then locate the working body (2) after inserting the squaring ring (25) to body (2).

※ Smear clean grease on the square ring (25) to avoid drifting away of square ring from the working body (2).

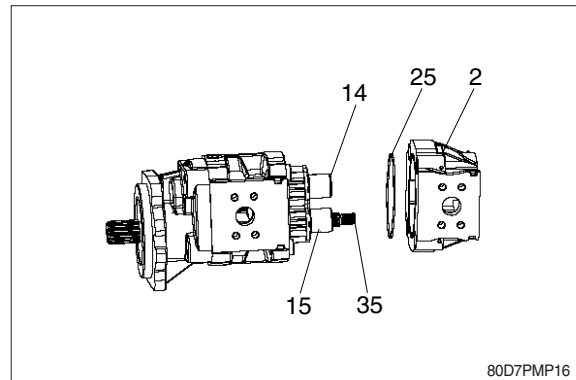


- ⑪ Tighten the bolt (17) with washer (21) in a cross pattern to torque value of 140 Nm.

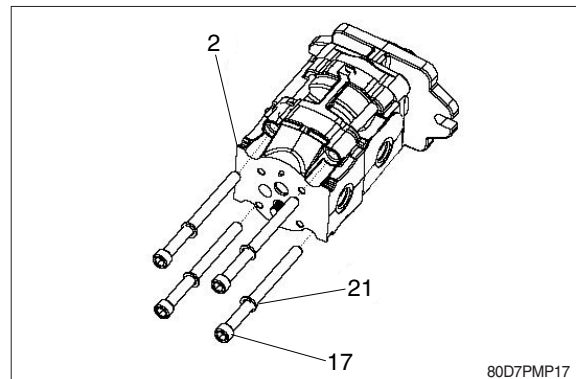


(3) Rear section


- ① Locate the O-ring (22) on the groove prearranged on the thrust plate (8).
- ② Then, locate back-up ring (29) on the groove pre-arranged on the seals (8, 22).
- ※ Smear clean grease on the seal (8,22) (The front and rear thrust plates and seals and back-up ring are same.)

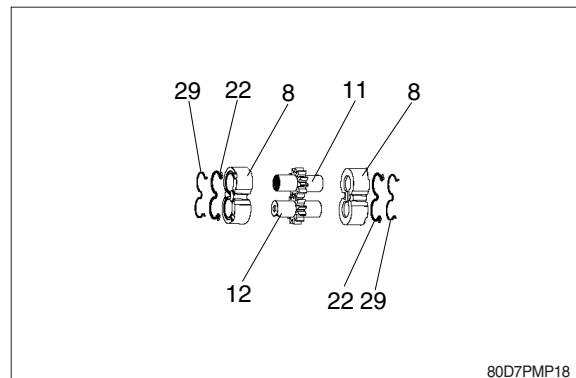


- ③ Locate the driving gear (11) and driven gear (12) with thrust plate parts (8+22+29) into working section (2).
- ④ Insert the dowel pin into the working section (2) and then, locate the rear working section (1) to working section (2) while keeping the gear straight.
- ※ Smear clean grease on the square ring (26) to avoid drifting away of square ring from the rear working section (1).

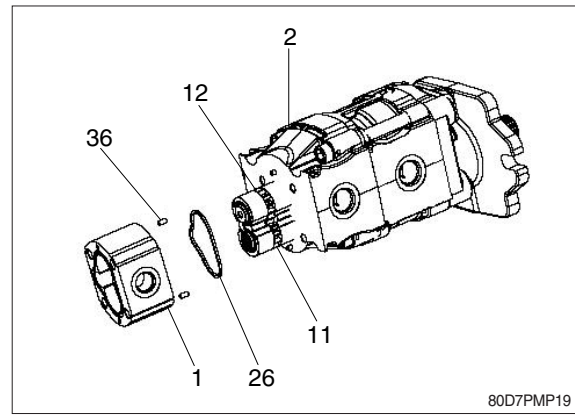


- ⑤ Locate the rear cover (4) after inserting the square ring (26) and the dowel pin (36) into the rear working section (1).
- ※ Smear clean grease on the square ring (26) to avoid drifting away of square ring (26) from the rear cover (4).

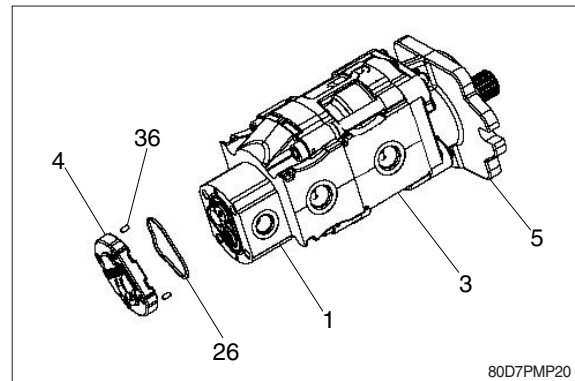

- ⑥ Tighten the bolt (18) with washer (21) in a cross pattern to torque value of 45 Nm.
- ※ Check that the pump rotate freely when the driving shaft is turned by hand. If not a thrust plate seal may be pinched.

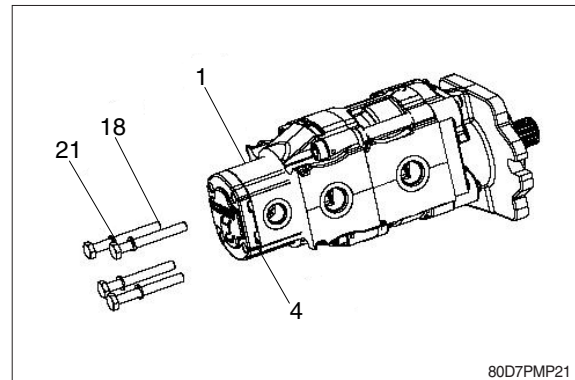

(4) Reference

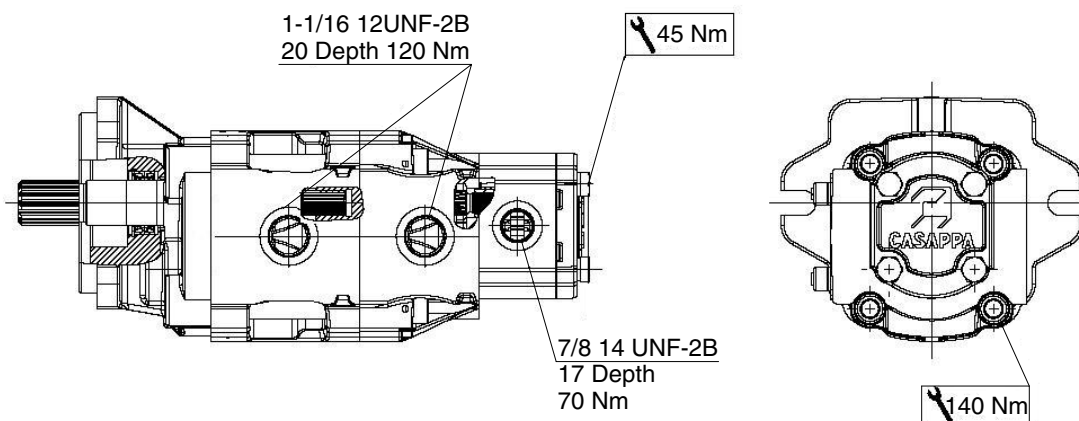


Torque configuration for hydraulic pump


80D7PMP22

2. MAIN CONTROL VALVE


- 1) Lay out valve components on a clean, flat working surface. The inlet assembly will include an O-ring, and the spool section (s) include an O-ring, a load check poppet and a load check spring. Tools required for basic valve assembly include 3/4 and 11/16 open or box end wrenches and a torque wrench with thin wall sockets.

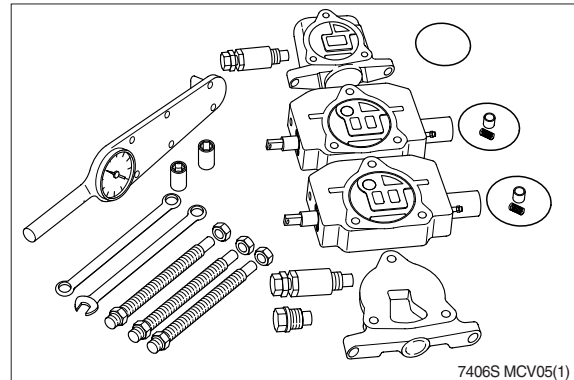


- 2) Assemble tie rod nuts to one end of each tie rod with one or two threads showing. Insert tie rods through tie rod holes of inlet (Large tie rod at top). Lay inlet on end with tie rods up, place O-ring into position.

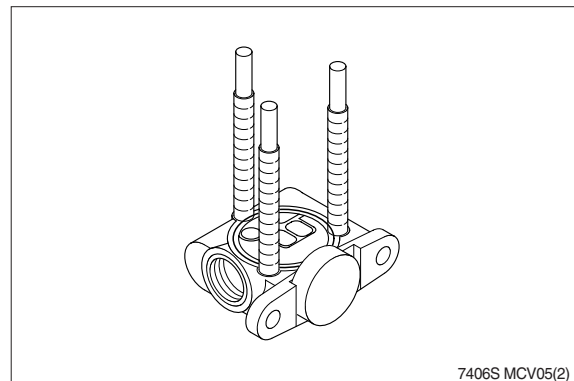


- 3) Place first spool section (O-ring side up) on inlet section, position O-ring and insert load check poppet (Nose down) and spring (Behind poppet) into load check cavity as shown. Repeat this procedure for each spool section ; The load check springs are compressed by the following sections during assembly.

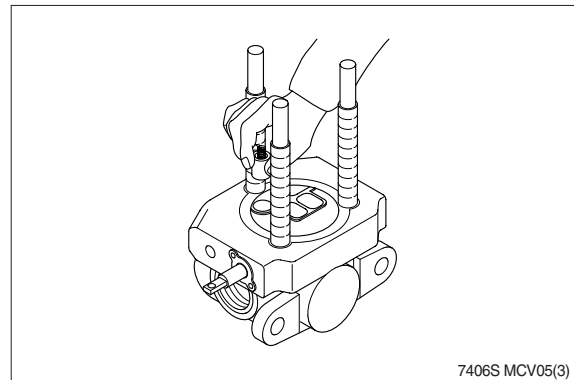

- 4) Position end section on last spool section as shown and hand tighten tie rod nuts. The end section on picture is a "turn around" section without ports. Universal outlet / power beyond section and power beyond and closed center sections are also used as end sections. These end sections do not have O-ring grooves.

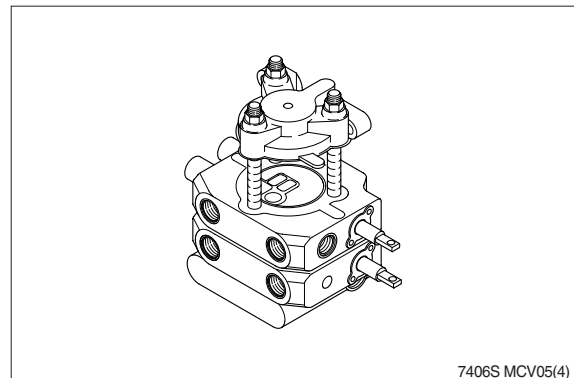


- 5) Position valve assembly with the mounting pads of the end sections on a flat surface. To obtain proper alignment of end sections relative to the spool sections apply downward pressure to the end sections ; Snug tie rod nuts to about 10lb·ft. Final torque the two 11/16 nuts to 48 ± 5 lb·ft ; Final torque the 3/4 nut to 74 ± 8 lb·ft. Check for proper spool movement.

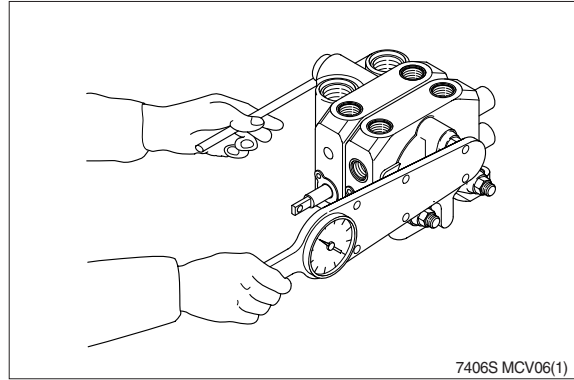

- 6) Install auxiliary valves and plugs and torque to proper specifications.

※ **General assembly notes:**


- A. Lever assemblies can be installed on section before or after complete valve assembly.
- B. The load check and spring may be omitted from assembly in certain circuit conditions (i.e., motor spools).

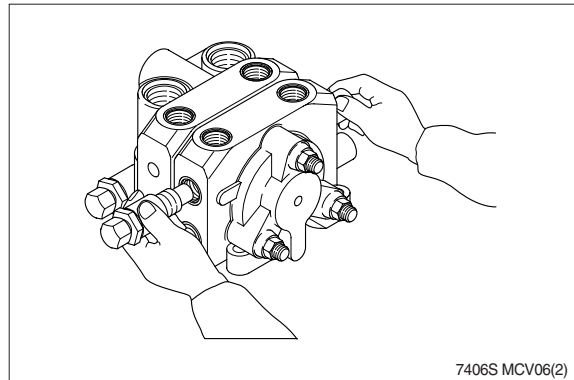

3. LIFT CYLINDER

1) STRUCTURE


(1) V-mast

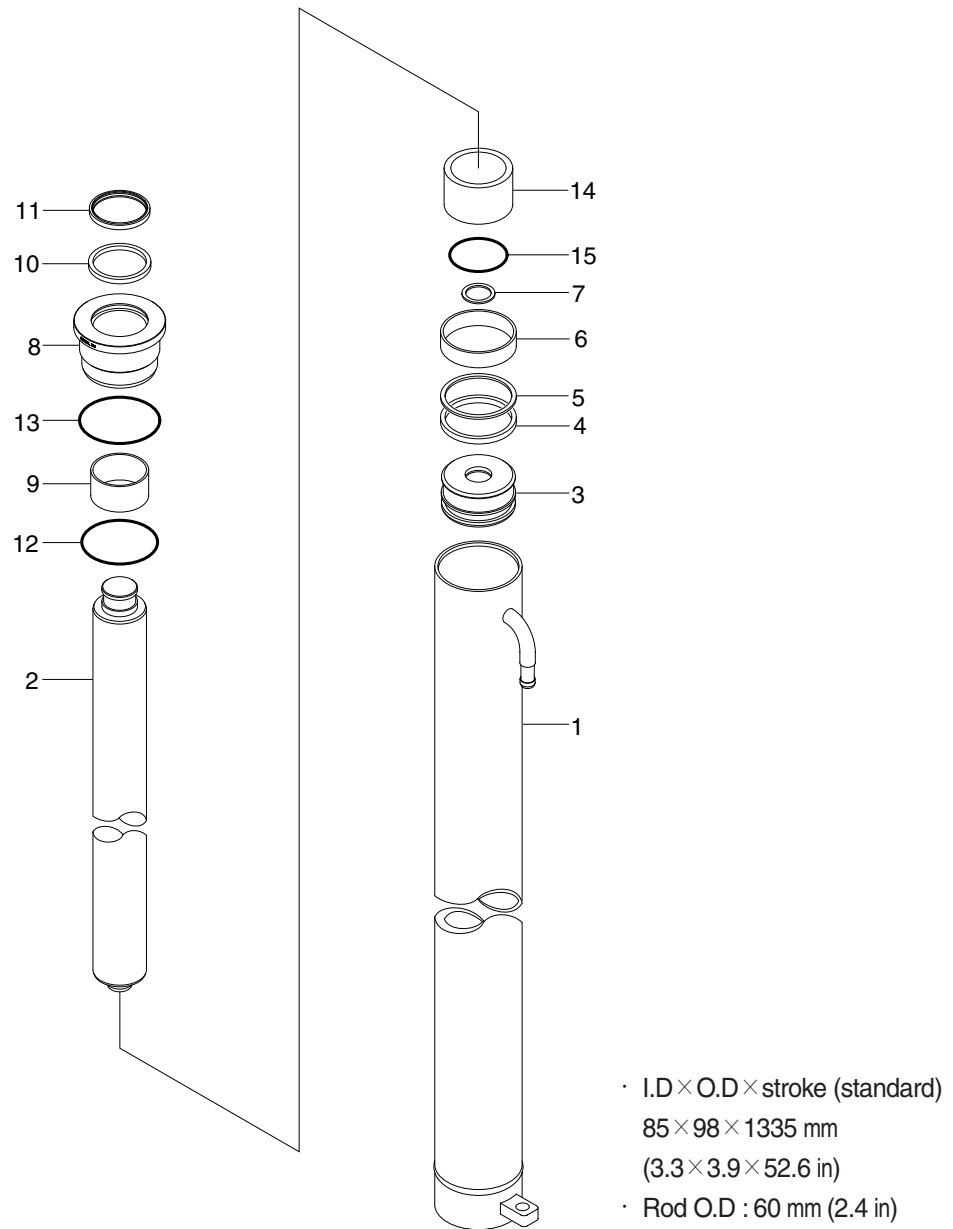

50D9HS19

- | | | | | | |
|---|--------------|----|--------------|----|------------|
| 1 | Tube assy | 6 | Wear ring | 11 | Dust wiper |
| 2 | Rod | 7 | Cushion seal | 12 | O-ring |
| 3 | Piston | 8 | Gland | 13 | O-ring |
| 4 | Piston seal | 9 | Du bushing | 14 | Spacer |
| 5 | Back up ring | 10 | Rod seal | 15 | O-ring |

(2) TF/TS-mast

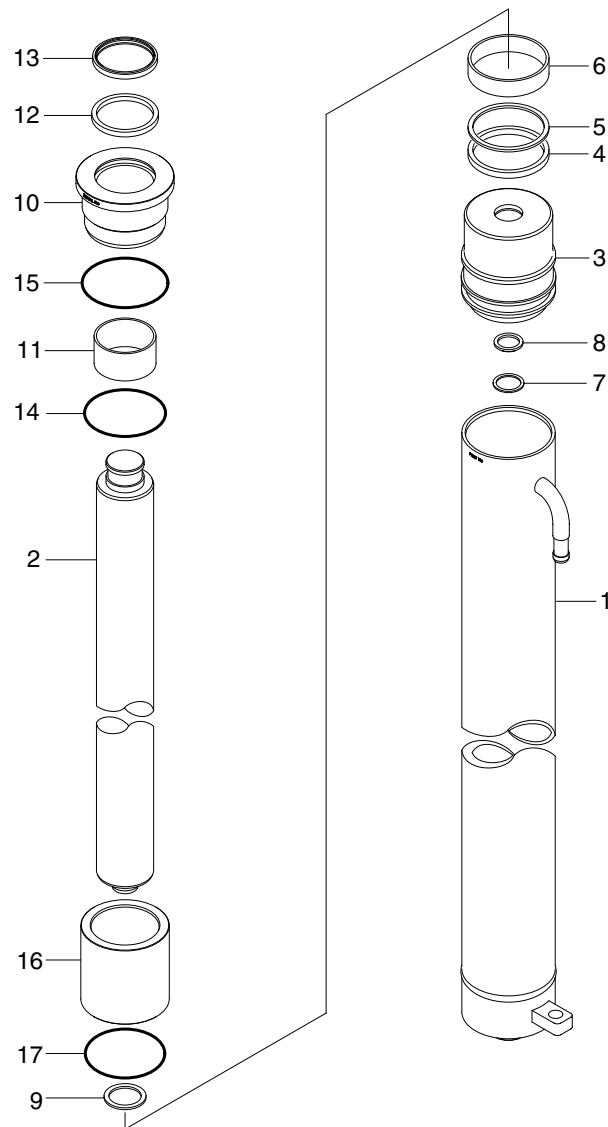


- I.D × O.D × stroke (standard)
85 × 98 × 1335 mm
(3.3 × 3.9 × 52.6 in)
- Rod O.D : 60 mm (2.4 in)

50D9HS20

- | | | |
|----------------|------------------|---------------|
| 1 Tube assy | 7 Cushion seal | 13 Dust wiper |
| 2 Rod | 8 Retaining ring | 14 O-ring |
| 3 Piston | 9 Retaining ring | 15 O-ring |
| 4 Piston seal | 9 Gland | 16 Spacer |
| 5 Back up ring | 10 Du bushing | 17 O-ring |
| 6 Wear ring | 11 Rod seal | |

(3) Free lift (TF-mast)

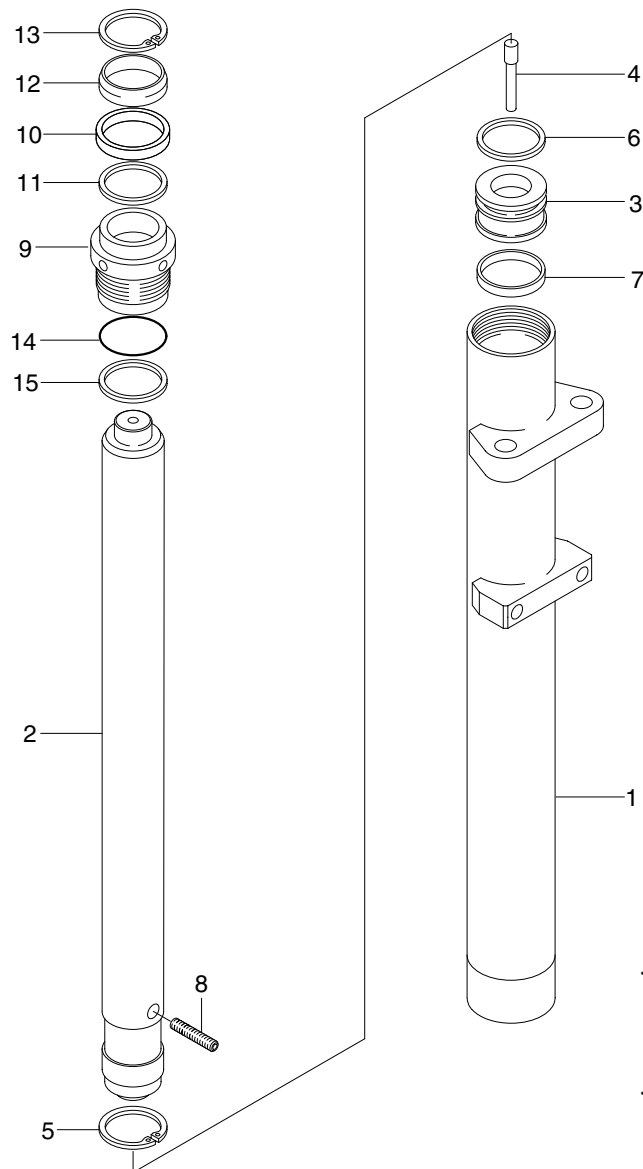


- I.D×O.D×stroke (standard)
85×98×1335 mm
(3.3×3.9×52.6 in)
- Rod O.D : 60 mm (2.4 in)

50D9HS21

- | | | |
|------------------|-------------|-----------------|
| 1 Tube assy | 6 GLYD ring | 11 Back up ring |
| 2 Rod assy | 7 Wear ring | 12 Dust wiper |
| 3 Piston | 8 Set screw | 13 Snap ring |
| 4 Check valve | 9 Gland | 14 O-ring |
| 5 Retaining ring | 10 Rod seal | 15 Back up ring |

2) DISASSEMBLY

- (1) Hold the cylinder tube in a vice, loosen the cylinder head and remove it.
Remove the spacer from the cylinder tube and knock out the bushing. Hook a wrench in the hole in the retainer at the piston end and turn. Lever up the edge of the guide, then turn the guide in again and the guide can be removed.

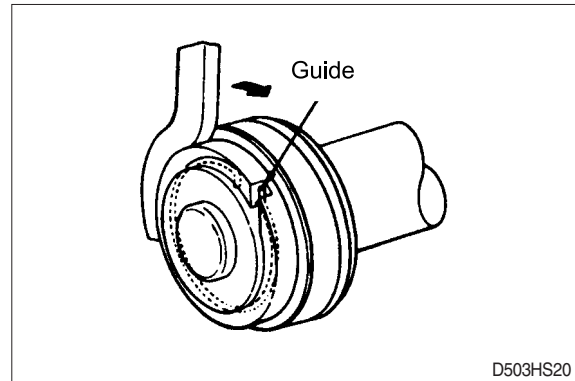


3) CHECK AND INSPECTION

mm (in)

Check item	Standard size	Repair limit	Remedy
Clearance between cylinder rod & bushing	0.05~0.25 (0.002~0.01)	0.4 (0.0015)	Replace bushing
Clearance between piston ring & tube	0.05~0.35 (0.002~0.013)	0.5 (0.02)	Replace piston ring


4) ASSEMBLY

- (1) Soak the piston ring in hydraulic oil at a temperature of 40 to 50°C, expand the inside diameter and assemble on the piston. Install a piston seal.
Bend the edge of the guide and rotate it to install the guide completely.

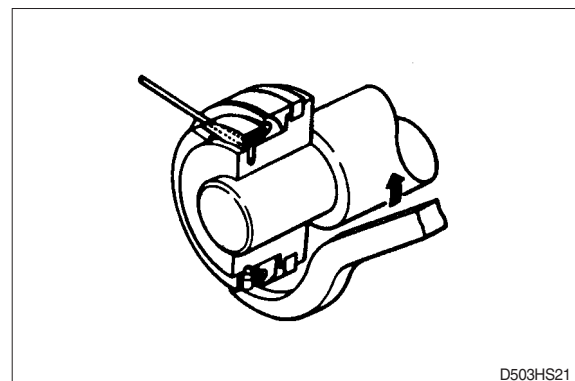

4. TILT CYLINDER

1) STRUCTURE

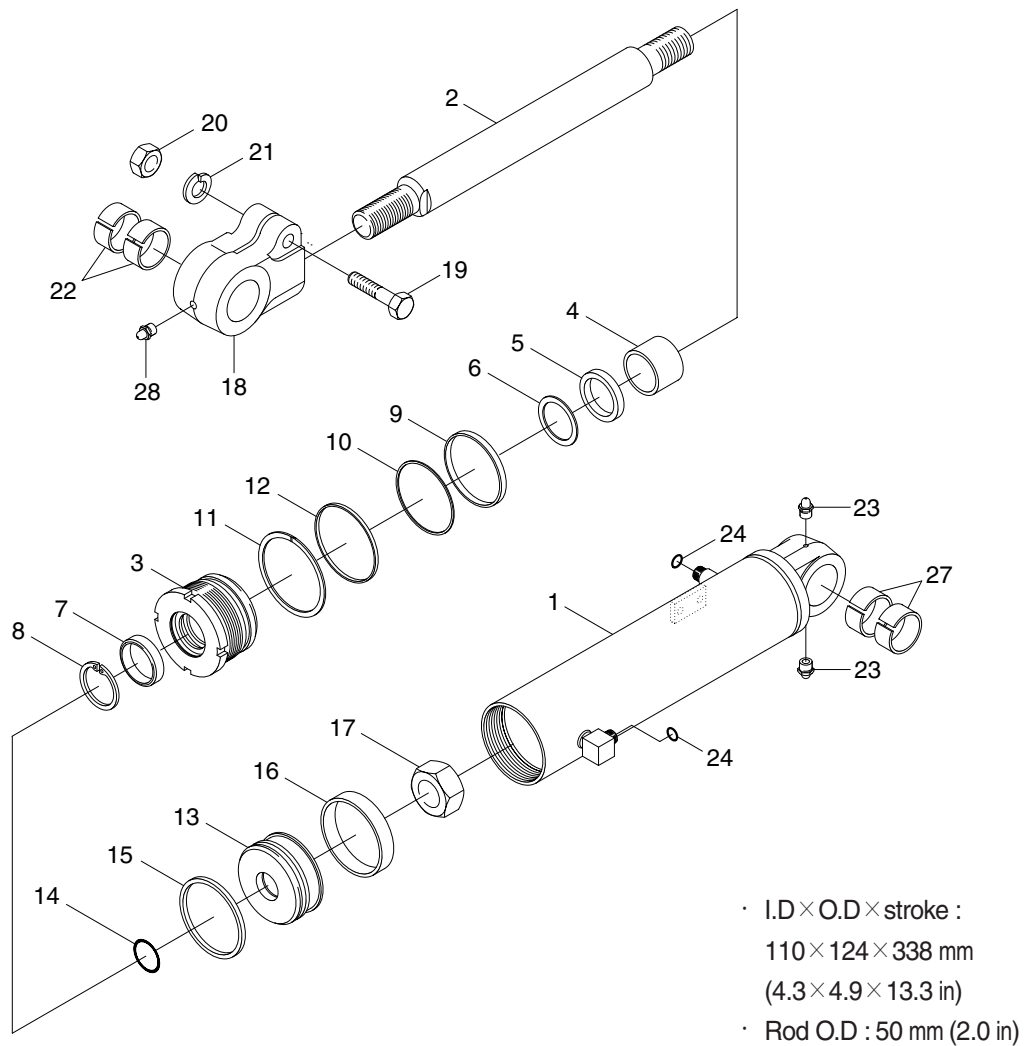


50D9HS22

1	Tube assy	10	Back up ring	19	Hex bolt
2	Rod	11	O-ring	20	Hex nut
3	Rod cover	12	Washer	21	Spring washer
4	Rod bushing	13	Piston	22	Spherical bearing
5	U-packing	14	O-ring	23	Grease nipple
6	Back up ring	15	Piston seal	24	O-ring
7	Dust wiper	16	Wear ring	27	Rod bushing
8	Stop ring	17	Set screw	28	Grease nipple
9	O-ring	18	Eye		

2) DISASSEMBLY

- (1) Hold the parallel parts of the cylinder tube bottom in a vice and mark the rod head end to show how much it is screwed in, then remove the rod head. Next, hook a wrench into the notch at the cylinder head and remove the cylinder head from cylinder tube.

When doing this, wind tape round the threaded part of the rod and be careful not to damage the dust seal and rod seal inside cylinder head.

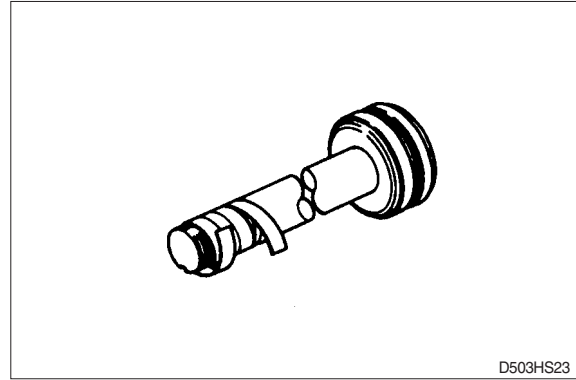

3) CHECK AND INSPECTION

mm (in)

Check item	Standard size	Repair limit	Remedy
Clearance between cylinder rod & bushing	0.072~0.288 (0.003~0.011)	0.5 (0.020)	Replace bushing
Clearance between rod head bushing & pin	0.10~0.35 (0.004~0.014)	0.6 (0.024)	Replace bushing