


1. CAB DEVICES

- 1) The ergonomically designed console box and suspension type seat provide the operator with comfort.

2) ELECTRONIC MONITOR SYSTEM

- (1) The centralized electronic monitor system allows the status and conditions of the machine to be monitored at a glance.
- (2) It is equipped with a safety warning system for early detection of machine malfunction.

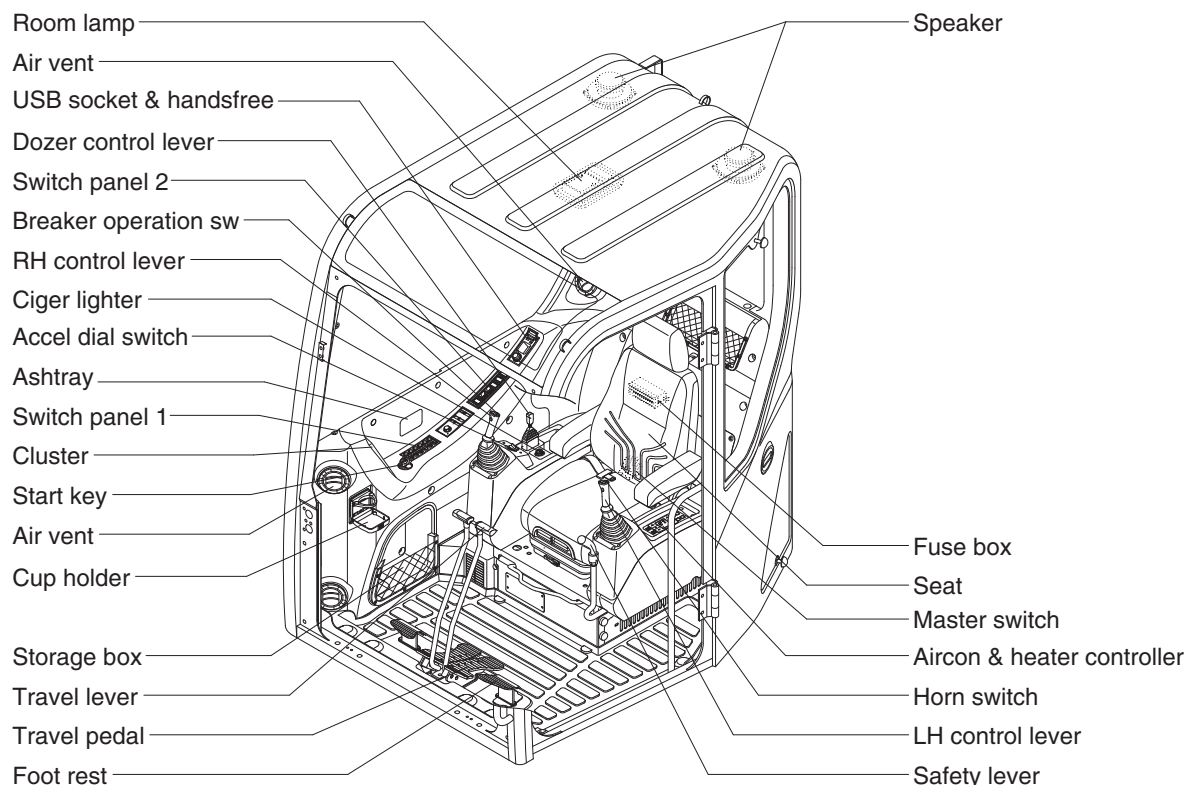


80CR93CD01

2. CLUSTER

The cluster consists of gauges and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.

- Gauges : Indicate operating status of the machine.
 - Warning lamp : Indicate abnormality of the machine (red).
 - Pilot lamp : Indicate operating status of the machine.
- ※ The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.
- ※ When the monitor provides a warning, immediately check the problem and perform the required action.

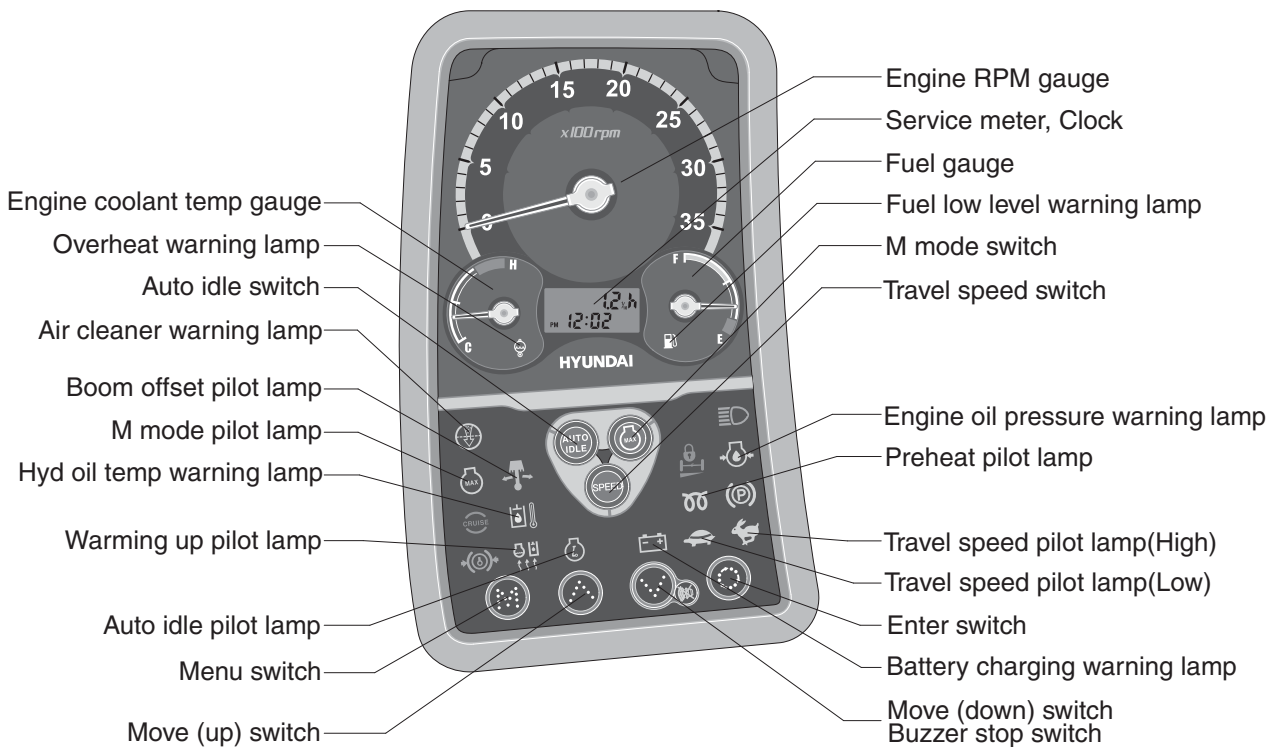


5593CD02

- ※ The warning lamp lights ON and the buzzer sounds when the machine has a problem. In this case, press the buzzer stop switch and buzzer stop, but the warning lamp lights until the problem is cleared.

1) GAUGES AND DISPLAYS

(1) LCD display

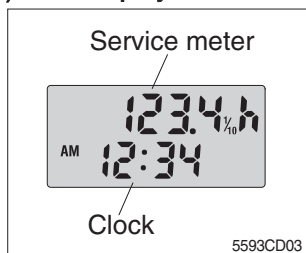

① **Service meter** : This meter shows the total operation hours of the machine.

※ Always ensure the operating condition of the meter during the machine operation.


※ The last unit $4\frac{1}{10}$ indicates 1/10 of 4 hours.

(for example : $1\frac{1}{10}$ indicates 6 minutes)

② **Clock** : This displays the current time.


※ Refer to the "menu switch" for the setting time/ESL switch.

(2) Fuel gauge

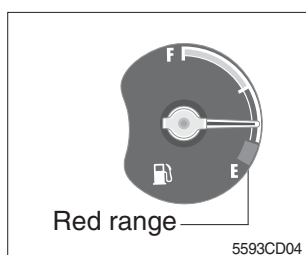


① This gauge indicates the amount of fuel in the fuel tank.


② Fill the fuel when the red range or warning lamp  blinks.

※ **If the gauge indicate the red range or warning lamp  ON. Even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.**

(3) Engine coolant temperature gauge

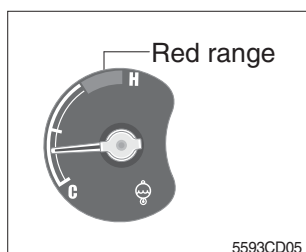


① This indicates the temperature of coolant.

② When the red range pointed or warning lamp  blinks, engine do not abruptly stop but run it at medium speed to allow it to cool gradually, then stop it.

Check the radiator and engine.

※ **If the engine is stopped without cooled down running, the temperature of engine parts will rise suddenly, this could cause severe engine trouble.**

(4) Engine rpm gauge

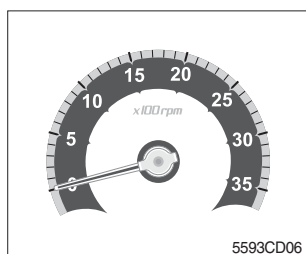

① This gauge displays the number of engine revolutions per minute.


2) WARNING AND PILOT LAMPS

(1) Fuel low level warning lamp




- ① This lamp blinks and the buzzer sounds when the level of fuel is below 17 ℓ (4.5 U.S. gal).
- ② Fill the fuel immediately when the lamp blinks.

(2) Hydraulic oil temperature warning lamp

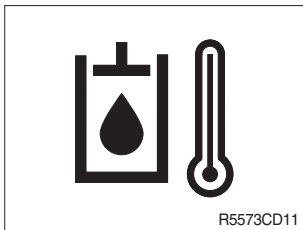


- ① This warning lamp operates and the buzzer sounds when the temperature of hydraulic oil is over 105°C (221°F) .
- ② Check the hydraulic oil level when the lamp blinks.
- ③ Check for debris between oil cooler and radiator.

(3) Overheat warning lamp

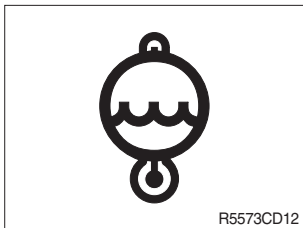

- ① This lamp blinks and the buzzer sounds when the temperature of coolant is over the normal temperature 110°C (230°F) .
- ② Check the cooling system when the lamp blinks.

(4) Engine oil pressure warning lamp

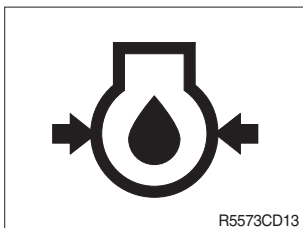


- ① This lamp blinks and the buzzer sounds after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.

(5) Air cleaner warning lamp




- ① This lamp blinks and the buzzer sounds when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.

(6) Battery charging warning lamp

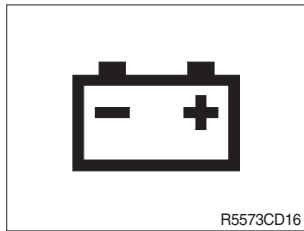


- ① This lamp blinks and the buzzer sounds when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.

(7) Warming up pilot lamp

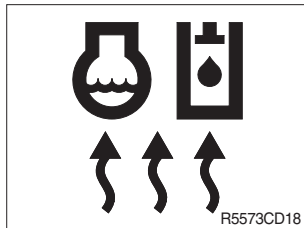


- ① This lamp is turned ON when the coolant temperature is below 30°C (86°F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30°C, or when 10 minutes have passed since starting.

(8) Preheat pilot lamp

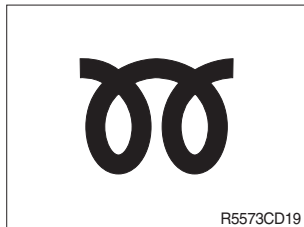


- ① When engine preheating switch is turned ON, pilot lamp comes ON.
- ② Refer to the preheating switch for details.

(9) Travel speed pilot lamp (high)

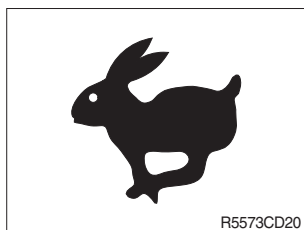


- ① When this lamp turned ON, the machine travel high speed.
- ② Refer to the travel speed select switch for details.

(10) Travel speed pilot lamp (low)

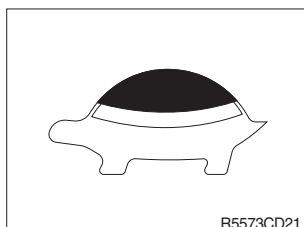

- ① When this lamp turned ON, the machine travel low speed.
- ② Refer to the travel speed select switch for details.

(11) Auto idel pilot lamp

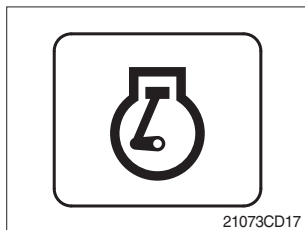


- ① If the control lever and pedal are not moved for several seconds with auto idle switch pressed, the indicator illuminates and engine speed is decelerated.
- ② If the auto idle switch is pressed once more or the control lever or pedal is moved, the indicator turns off and the number of engine revolution is turned to the previous condition.

(12) M mode pilot lamp



- ① This lamp is ON when the M mode switch is pressed.
- ② Engine is operated with a maximum speed.


(13) Boom offset pilot lamp

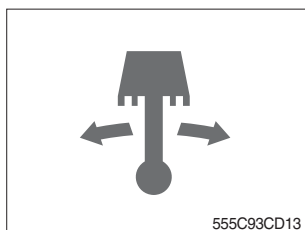

- ① This lamp is ON when the boom offset switch is pressed.


3) SWITCHES

(1) Travel speed control switch

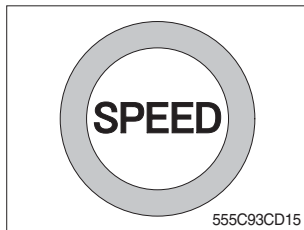


- ① This switch is to control the travel speed which is changed to high speed (rabbit mark) by pressing the switch and low speed (turtle mark) by pressing it again.

(2) Auto idle switch

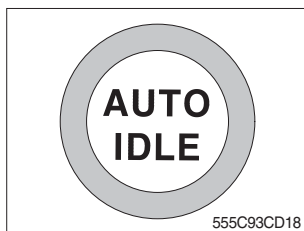


- ① This switch is used to actuate or cancel the auto idle function.
- ② When the switch actuated and all control levers and pedals are at neutral position, engine speed will be lowered automatically to save fuel consumption.

(3) M mode switch

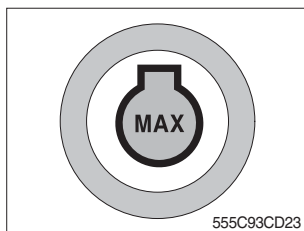


- ① This switch is used to maximum power.
- ② When this switch is pressed, the M mode pilot lamp is ON or OFF.

(4) Move (down) & buzzer stop switch

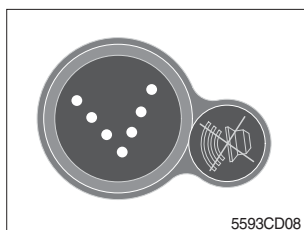


- ① When the starting switch is turned ON first, normally the alarm buzzer sounds for 6 seconds during lamp check operation.
 - ② The lamp lights ON and the buzzer sounds when the machine has a problem.
In this case, press this switch and buzzer stops, but the lamp lights until the problem is cleared.
 - ③ This switch is used to move down or decrease input value.
- ※ Refer to page 3-8.

(5) Move (up) switch

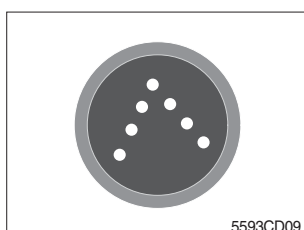


- ① This switch is used to move up or increase input value.
- ※ Refer to page 3-8.

(6) Menu and enter switch

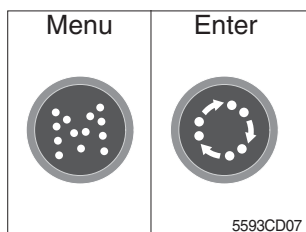


① These switches are used to set time or set ESL (Engine Start Limit) function.

- The Enter button (⊙) is used to select a function.
- The Menu button (⊞) is used to select a menu or return to the time display menu.

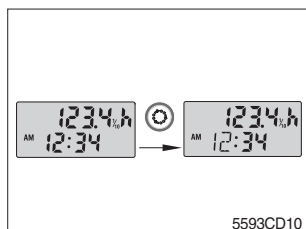

② Setting time

- Press Enter button (⊙) to set time, then the screen will be changed to a display for time setting as a following picture and time cipher will blink.
- **Set hours** : When the cipher for hour blinks, press up (⬆) or down (⬇) button and set the hour.
- **Set minutes** : When the cipher for minute blinks, press up (⬆) or down (⬇) button and set the minute.

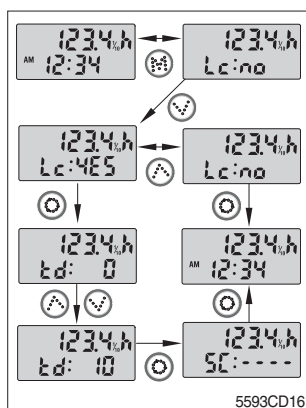

③ Set ESL (Engine Start Limit) function


- Press Menu button (⊞), the display is changed from the time display menu to ESL function menu.
- Select YES or NO by Move button (⬆, ⬇) and set the ESL function by the Enter button (⊙).
 - YES : ESL function is activated.
 - NO : ESL function is cancelled.

④ Set the interval time

- Select ESL function to YES and press the Enter button (⊙), then the display is changed to the interval time set menu.
- Set the interval time by move button (⬆, ⬇) and press the Enter button (⊙).
- You can finish setting the interval time by inputting the password and pressing the Enter button (⊙) once more.
- Interval times : 5 kinds (0, 10, 30, 60 minutes, 1 day)


※ If the ESL function is set to YES, the password is required when a operator starting engine first.

But the operator can restart the engine within the interval time period without inputting the password.

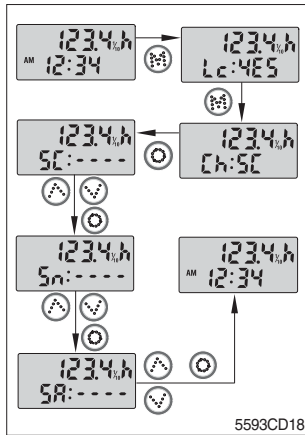

⑤ Change password

- Select ESL function to YES and press the Menu button (⊕), the display is shifted to the password change menu.
 - Input a new password (Sn : - - - -) after enter the current password successfully (SC : - - - -).
 - Push enter (⊙) button for a second to finish the setting after the new password is entered once again (SA : - - - -).
 - When the setting is done, the display will blink 3 times and return to the time display screen.

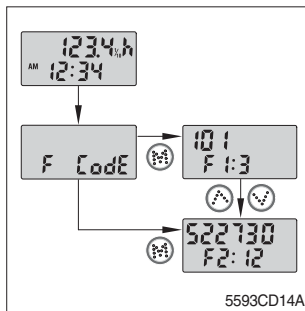

⑥ Check machine and engine diagnostic codes

- If the F : Code is displayed on the LCD display, you can check faults of the machine and/or engine.
- The machine fault code is displayed by pressing the Menu button (⊕) and the engine fault code is displayed by pressing the Menu button (⊕) once more.
- Other fault codes can be displayed by using the Move up / down button (⬆, ⬇).

※ Refer to the following pages for the fault codes.

⑦ Machine fault code


Fault code		Description
HCESPN	FMI	
105	0	Working pressure sensor data above normal range (or open circuit)
	1	Working pressure sensor data below normal range
	2	Working pressure sensor data error
	4	Working pressure sensor circuit - voltage below normal, or shorted to low source
	14	Working pressure sensor circuit - special instructions
	16	Working pressure sensor circuit - voltage valid but above normal operational range
	18	Working pressure sensor circuit - voltage valid but below normal operational range
167	4	Travel speed solenoid circuit - voltage below normal, or shorted to low source (or open circuit)
	6	Travel speed solenoid circuit - current above normal
503	0	Brake pressure sensor data above normal range (or open circuit)
	1	Brake pressure sensor data below normal range
	2	Brake pressure sensor data error
	4	Brake pressure sensor data - voltage below normal, or shorted to low source
	16	Brake pressure sensor data - voltage valid but above normal operational range
	18	Brake pressure sensor data - voltage valid but below normal operational range
505	0	Working brake pressure sensor data above normal range (or open circuit)
	1	Working brake pressure sensor data below normal range
	2	Working brake pressure sensor data error
	4	Working brake pressure sensor circuit - voltage below normal, or shorted to low source
	16	Working brake pressure sensor circuit - voltage valid but above normal operational range
	18	Working brake pressure sensor circuit - voltage valid but below normal operational range
525	4	Ram lock solenoid circuit - voltage below normal, or shorted to low source (or open circuit)
	6	Ram lock solenoid circuit - current above normal
530	0	Travel fwd pilot pressure sensor data above normal range (or open circuit)
	1	Travel fwd pilot pressure sensor data below normal range
	2	Travel fwd pilot pressure sensor data error
	4	Travel fwd pilot pressure sensor circuit - voltage below normal, or shorted to low source
	14	Travel fwd pilot pressure sensor circuit - special instructions
	16	Travel fwd pilot pressure sensor circuit - voltage valid but above normal operational range
	18	Travel fwd pilot pressure sensor circuit - voltage valid but below normal operational range
701	4	Hour meter circuit - voltage below normal, or shorted to low source
705	0	MCU input voltage high
	1	MCU input voltage low
707	1	Alternator node I voltage low (or open circuit)
714	3	Acc. dial circuit - voltage above normal, or shorted to high source (or open circuit)
	4	Acc. dial circuit - voltage below normal, or shorted to low source
830	12	MCU internal memory error
840	2	Cluster communication data error
841	2	ECM communication data error
850	2	RMCU communication data error

⑧ Engine fault code

Fault code		Description
YANMAR SPN	FMI	
1210	4	Engine fuel rack position sensor : shorted to low source
	3	Engine fuel rack position sensor : shorted to high source
91	4	Accelerator pedal position sensor "A" : shorted to low source
	3	Accelerator pedal position sensor "A" : shorted to high source
	2	Accelerator pedal position sensor "A" : intermittent fault
	1	Accelerator pedal position sensor "A" : below normal operational range (SAE J1843)
	0	Accelerator pedal position sensor "A" : above normal operational range (SAE J1843)
	15	Accelerator pedal position sensor "A" : not available (SAE J1843)
29	4	Accelerator pedal position sensor "B" : shorted to low source
	3	Accelerator pedal position sensor "B" : shorted to high source
	2	Accelerator pedal position sensor "B" : intermittent fault
	1	Accelerator pedal position sensor "B" : below normal operational range (SAE J1843)
	0	Accelerator pedal position sensor "B" : above normal operational range (SAE J1843)
	8	Accelerator pedal position sensor "B" : communication fault
	15	Accelerator pedal position sensor "B" : not available (SAE J1843)
108	4	Barometric pressure sensor : shorted to low source
	3	Barometric pressure sensor : shorted to high source
	2	Barometric pressure sensor : intermittent fault
1136	4	E-ECU internal temperature sensor : shorted to low source
	3	E-ECU internal temperature sensor : shorted to high source
	2	E-ECU internal temperature sensor : intermittent fault
	0	E-ECU internal temperature : too high
110	4	Engine coolant temperature sensor : shorted to low source
	3	Engine coolant temperature sensor : shorted to high source
	2	Engine coolant temperature sensor : intermittent fault
	0	Engine coolant temperature : too high
1079	4	Sensor 5V : shorted to low source
	3	Sensor 5V : shorted to high source
	2	Sensor 5V : intermittent fault
158	1	E-ECU system voltage : too low
	0	E-ECU system voltage : too high
1078	4	Engine fuel injection pump speed sensor : shorted to low source
522402	4	Auxiliary speed sensor : shorted to low source
522241	4	Engine fuel rack actuator relay : open circuit
	3	Engine fuel rack actuator relay : short circuit
	7	Engine fuel rack actuator relay : mechanical malfunction
	2	Engine fuel rack actuator relay : intermittent fault
522243	4	Air heater relay : open circuit
	3	Air heater relay : short circuit
	2	Air heater relay : intermittent fault


Fault code		Description
YANMAR SPN	FMI	
522242	4	Cold start device : open circuit
	3	Cold start device : short circuit
	2	Cold start device : intermittent fault
522251	4	EGR stepping motor "A" : open circuit
	3	EGR stepping motor "A" : short circuit
522252	4	EGR stepping motor "B" : open circuit
	3	EGR stepping motor "B" : short circuit
522253	4	EGR stepping motor "C" : open circuit
	3	EGR stepping motor "C" : short circuit
522254	4	EGR stepping motor "D" : open circuit
	3	EGR stepping motor "D" : short circuit
100	4	Oil pressure switch : shorted to low source
	1	Oil pressure : too low
167	4	Battery charge switch : shorted to low source
	1	Battery charge : charge warning
522314	0	Engine coolant temperature : abnormal temperature
522323	0	Air cleaner : mechanical malfunction
522329	0	Oily water separator : mechanical malfunction
190	0	Engine speed : over speed condition
638	4	Engine fuel rack actuator : shorted to low source
	3	Engine fuel rack actuator : shorted to high source
	7	Engine fuel rack actuator : mechanical malfunction
639	12	High speed CAN communication : communication fault
630	2	E-ECU internal fault : EEPROM check sum error (data set 2)
	12	E-ECU internal fault : EEPROM error
628	12	E-ECU internal fault : flashROM check sum error (main software)
	2	E-ECU internal fault : flashROM check sum error (data set 1)
	2	E-ECU internal fault : flashROM check sum error (data set 2)
1485	4	E-ECU main relay : shorted to low source
522727	12	E-ECU internal fault : cyclic redundancy check of sub-CPU error
	12	E-ECU internal fault : acknowledgement of sub-CPU error
	12	E-ECU internal fault : communication with sub-CPU error
522728	12	E-ECU internal fault : engine map data version error
522730	12	Immobilizer : CAN communication fault
	8	Immobilizer : pulse communication fault
1202	2	Immobilizer : system fault

3. SWITCHES

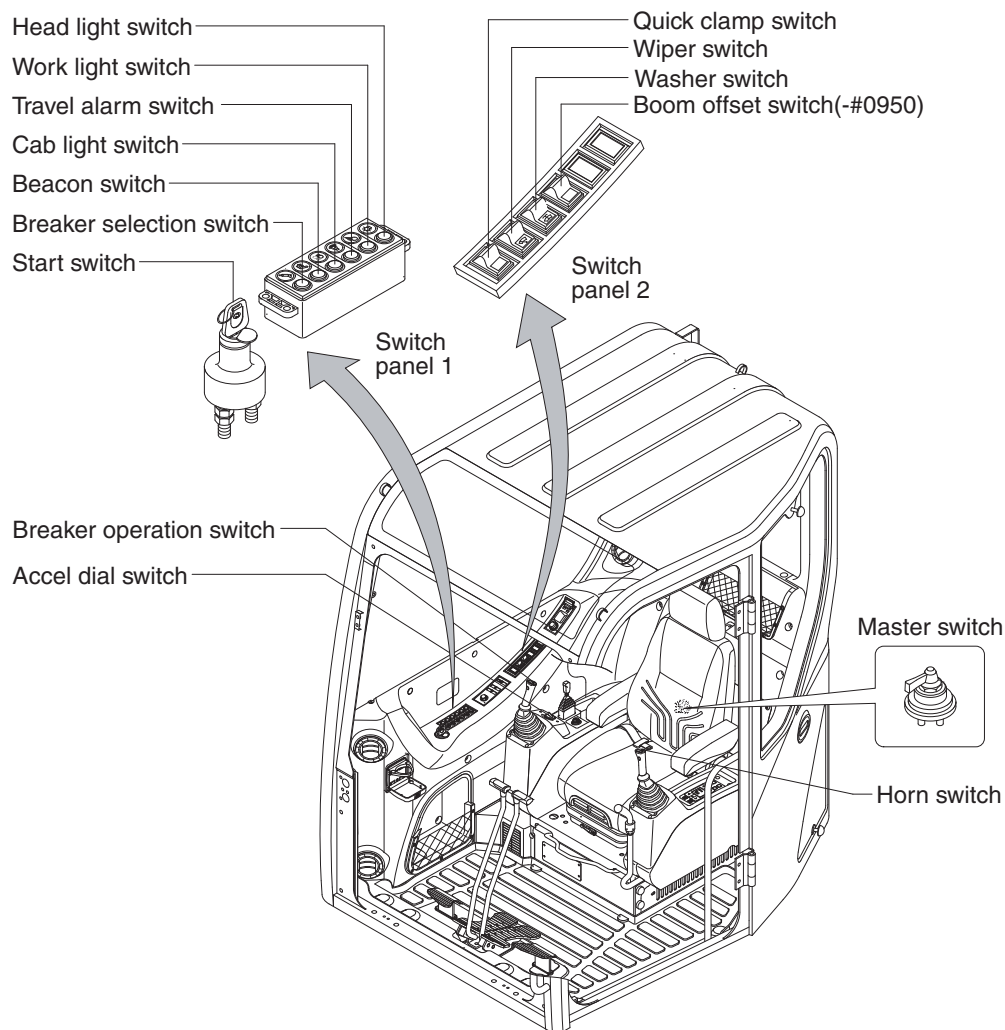

80CR93CD02-1

1) STARTING SWITCH

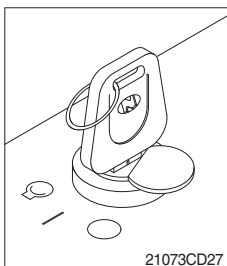


(1) There are three positions, OFF, ON and START.

- ○(OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ○(START) : Use when starting the engine. Release key immediately after starting.


※ **Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.**

2) ACCEL DIAL

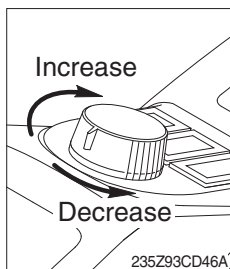


- (1) There are 10 dial setting.
- (2) Setting 1 is low idle and setting 10 is high idle.
 - By rotating the accel dial to right : Engine speed increased.
 - By rotating the accel dial to left : Engine speed decreased.

3) HEAD LIGHT SWITCH

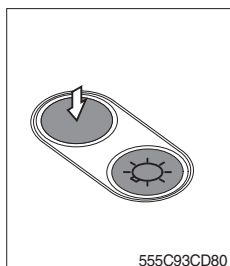


- (1) This switch is used to operate the head light.
 - Press the switch once, the head light comes ON and the pilot lamp ON.
 - Press the switch once more, the head light and pilot lamp turn off.

4) WORK LIGHT

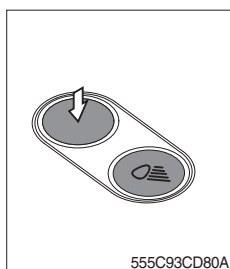


- (1) This switch is used to operate the work light.
 - Press the switch once, the work light comes ON and the pilot lamp ON.
 - Press the switch once more, the work light and pilot lamp turn off.

5) TRAVEL ALARM SWITCH

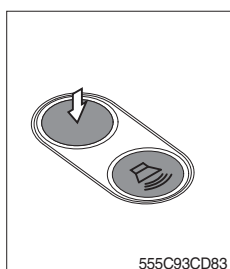


- (1) This switch is used to alarm surroundings when the machine travels to forward and backward.
- (2) On pressing this switch, the alarm operates only when the machine is traveling.

6) CAB LIGHT SWITCH

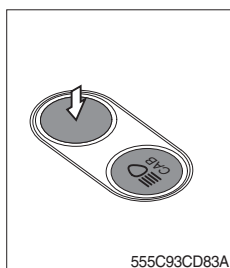


- (1) This switch turns on the cab light on the cab.

7) BEACON SWITCH (option)

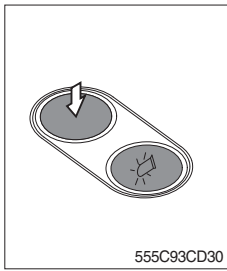


- (1) This switch turns ON the rotary light on the cab.
- (2) The below indicator lamp is turned ON when operating this switch.

8) BREAKER SELECTION SWITCH (option)

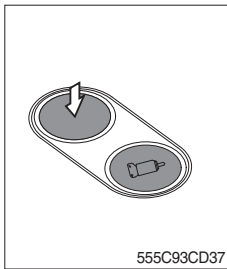


- (1) This switch is used to operate breaker.
- ※ **The breaker operates only when this switch is pressed.**
- ※ **This switch applies to single action hydraulic attachment circuit.**

9) WIPER SWITCH

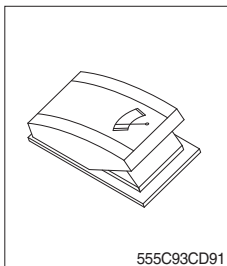


- (1) This switch is used to operate the wiper.
The wiper operates.
- ※ **Wiper motor doesn't operate with front sliding door open.**
- ※ **If wiper does not operate with the switch in the ON position, turn the switch off immediately. Check the cause. If the switch remains ON, motor failure can result.**

10) WASHER SWITCH

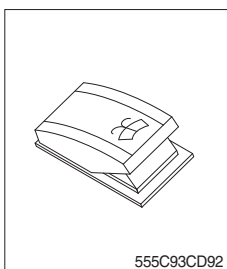


- (1) This switch is used to operate the washer.
 - The washer liquid is sprayed and the wiper is operated only while pressing this switch. If release the switch, return to the first position.

11) QUICK CLAMP SWITCH (option)

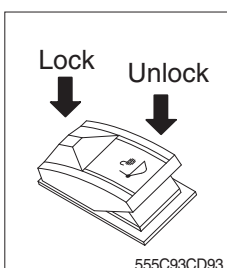


- (1) This switch is used to engage or disengage the moving hook on quick clamp.
- ※ **Refer to the page 8-6 for details.**

12) BOOM OFFSET SWITCH (machine serial No. : -#0950)

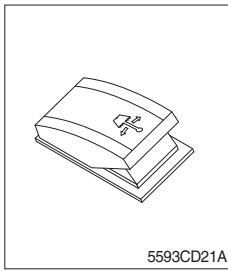


- (1) This switch is used to swing the boom to the right or left direction.
 - (2) The indicator lamp turned ON when selected this switch.
- ※ **Refer to the page 4-7 for the operation.**

13) MASTER SWITCH

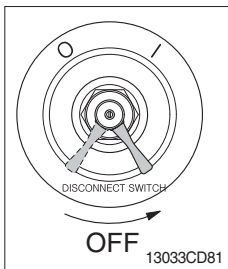


- (1) This switch is used to shut off the entire electrical system.
 - (2) I : The battery remains connected to the electrical system.
O : The battery is disconnected to the electrical system.
- ※ **Never turn the master switch to O (OFF) with the engine running. It could result in engine and electrical system damage.**

14) HORN SWITCH

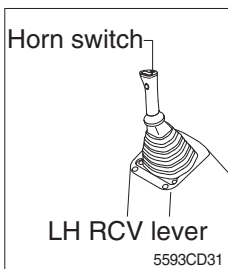


- (1) This switch is at the top of left side control lever.
On pressing, the horn sounds.

15) BREAKER AND 2-WAY OPERATION SWITCH

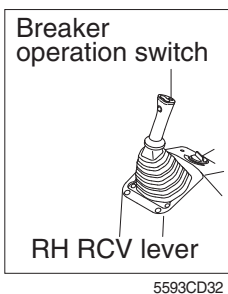


- (1) On pressing this switch, the breaker operates only when the breaker selection switch on the switch panel is selected.
- ※ **This switch applies to single action hydraulic attachment circuit.**

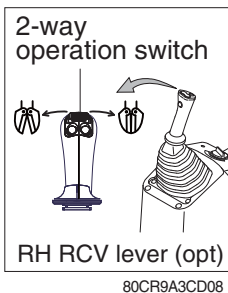


- (2) This switch operates the clamshell or shear.
- ※ **This switch applies to double action hydraulic attachment circuit.**

4. LEVERS AND PEDALS

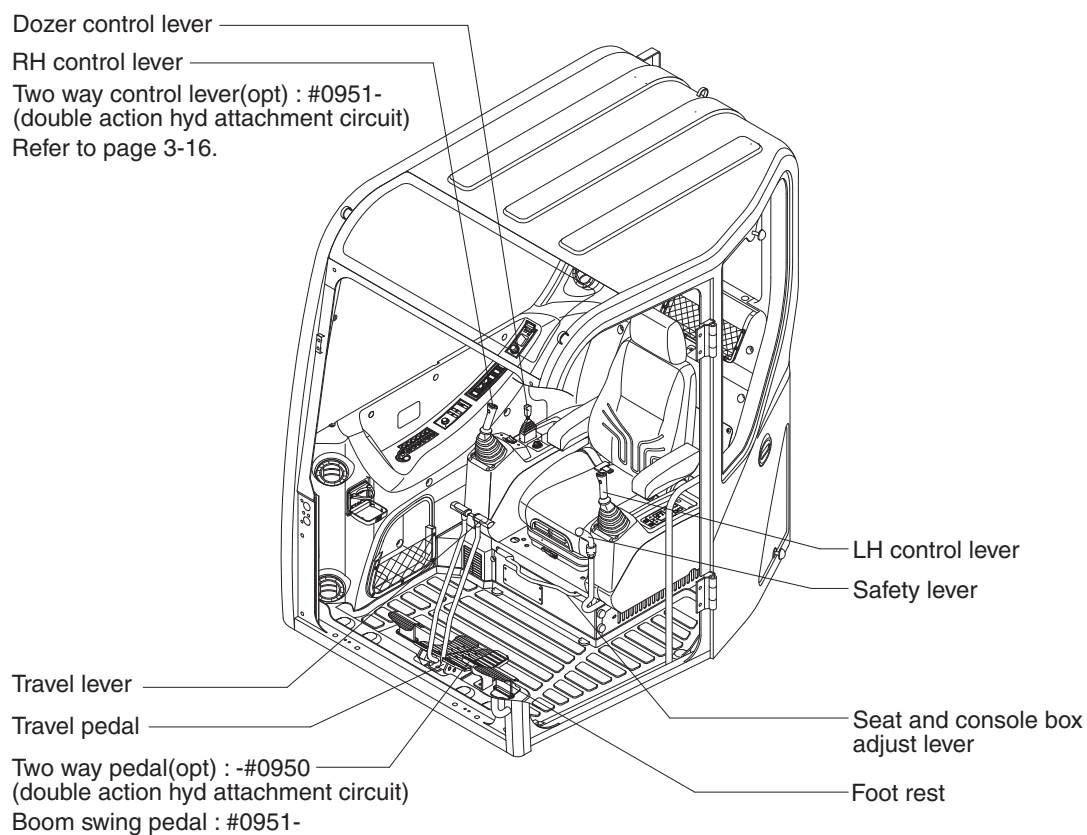


80CR93CD03-2

1) CONTROL LEVER

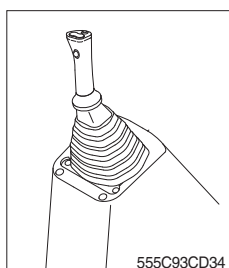


- (1) The LH joystick is used to control the swing and the arm.
- (2) The RH joystick is used to control the boom and the bucket.
- (3) Refer to **operation of working device** in chapter 4 for details.

2) BOOM SWING PEDAL (machine serial No. : #0951-)

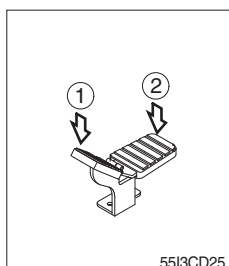

- (1) This pedal is used to swing the boom to the right and left direction.
- (2) If the front (①) of the pedal is pressed, boom will swing to the left direction.
If the rear (②) of the pedal is pressed, boom will swing to the right direction.

3) SAFETY LEVER

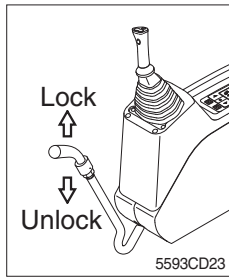

(1) LH, RH control levers and dozer control lever are disabled from operation by locating the lever to lock position as shown.


※ **Be sure to raise the lever to LOCK position when leaving from operator's seat.**

(2) By pushing lever to UNLOCK position, machine is operational.

※ **Do not use the safety lever for handle when getting on or off the machine.**

▲ **The machine is able to travel even when the safety lever is in the LOCK position.**


4) TRAVEL LEVER

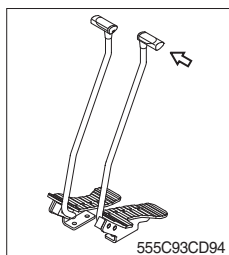

(1) This lever is mounted on travel pedal and used for traveling by hand. The operation principle is same as the travel pedal.

(2) Refer to **traveling of the machine** in chapter 4 for details.

5) TRAVEL PEDAL

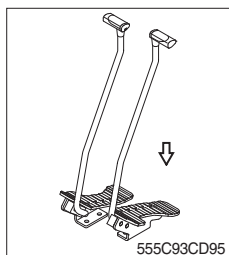


(1) This pedal is used to move the machine forward or backward.

(2) If left side pedal is pressed, left track will move.

If right side pedal is pressed, right track will move.

(3) Refer to **traveling of machine** in chapter 4 for details.


6) SEAT AND CONSOLE BOX ADJUST LEVER

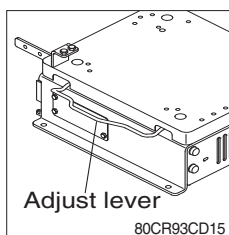

(1) This lever is used to move the seat and console box to fit the contours of the operator's body.

(2) Pull the lever to adjust forward or backward over 90 mm (3.5").

7) DOZER CONTROL LEVER

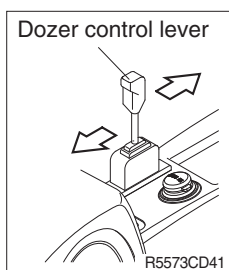

(1) This lever is used to operate the dozer blade.


(2) If the lever is pushed forward, the dozer blade will be going down.

If the lever is pulled back, the dozer blade will be going up.

5. FULL AUTO AIR CONDITIONER AND HEATER


Full auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.

· Location of air flow ducts

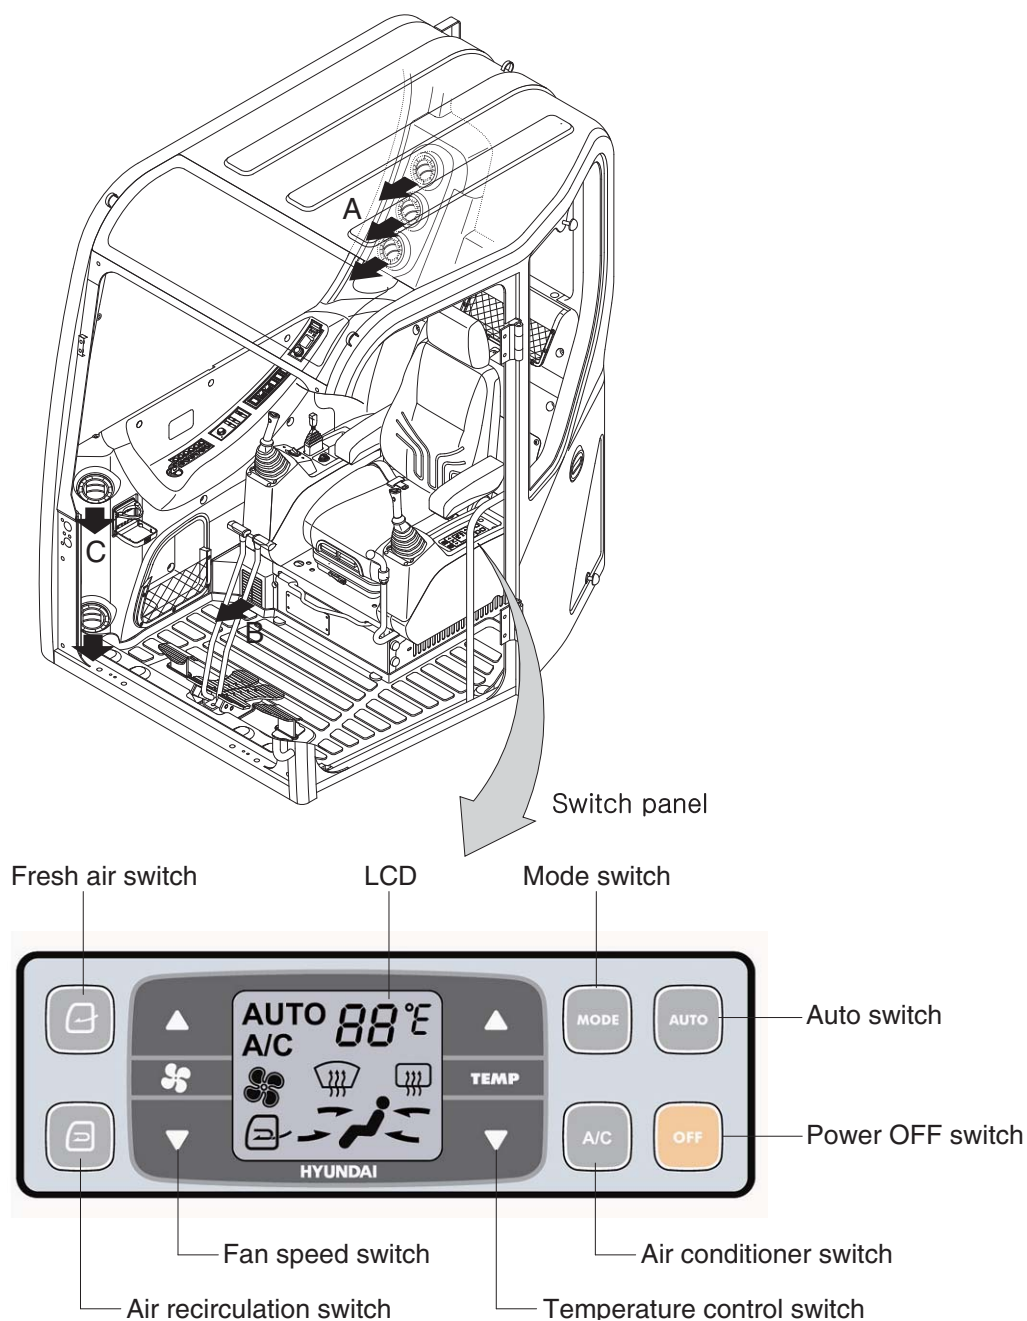

80CR93CD05

1) POWER OFF SWITCH

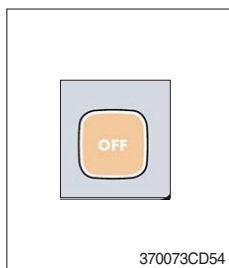


- (1) This switch makes the system and the LED OFF.
Just before the power OFF, set values are stored.

(2) Default setting values


Function	Air conditioner	In/outlet	LCD	Temperature	Mode
Value	OFF	Inlet	OFF	Previous sw OFF	Previous sw OFF

2) AUTO SWITCH

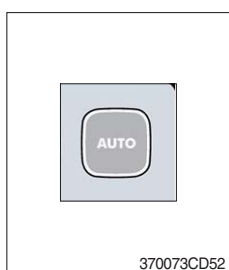


- (1) Turn the starting switch to ON position, LCD lights ON.
Auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.
- (2) This switch can restart system after system OFF.

3) AIR CONDITIONER SWITCH (compressor switch)

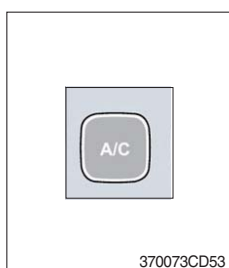


- (1) This switch turns the compressor and the LCD ON.
- (2) In accordance with the temperature sensed by duct (evaporator) sensor, compressor turns ON or OFF automatically.
- ※ **Air conditioner operates to remove vapor and drains water through a drain hose. Water can be sprayed into the cab in case that the drain cock at the ending point of drain hose has a problem.**
In this case, exchange the drain cock.

4) FAN SPEED SWITCH

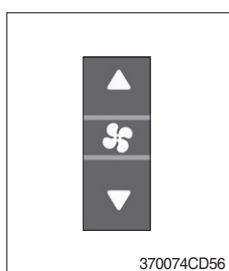

- (1) Fan speed is controlled automatically by set temperature.
- (2) This switch controls fan speed manually.
- There are 8 up/down steps to control fan speed.
 - The maximum step or the minimum step beeps 5 times.
- (3) This switch makes the system ON.

5) TEMPERATURE CONTROL SWITCH

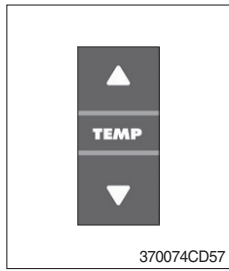


- (1) Setting temperature indication (17~32°C, scale : 1°C)
- (2) Max cool and max warm beeps 5 times.
- (3) The max cool or the max warm position operates as following table.

Temperature	Compressor	Fan speed	In/Outlet	Mode
Max cool	ON	Max (Hi)	Recirculation	Vent
Max warm	OFF	Max (Hi)	Fresh	Foot

- (4) Temperature unit can be changed between celsius (°C) and fahrenheit (°F)
 - ① Default status (°C)
 - ② Push Up/Down temperature control switch simultaneously more than 5 second displayed temperature unit change (°C → °F)

6) MODE SWITCH

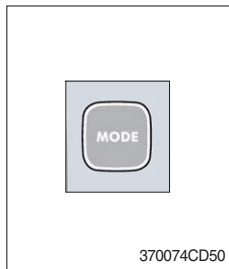


- (1) Operating this switch, it beeps and displays symbol of each mode in order. (Vent → Vent/Foot → Foot → Foot/Def → Vent)

Mode switch		Vent	Vent/Foot	Foot	Foot/Def
Outlet	A	●	●		
	B		●	●	●
	C				●

- (2) When defroster switch operating, FRESH AIR/AIR RECIRCULATION switch turns to FRESH AIR mode and air conditioner switch turns ON.
- (3) When this switch ON, the system operates with previous configuration.


7) FRESH AIR/AIR RECIRCULATION SWITCH

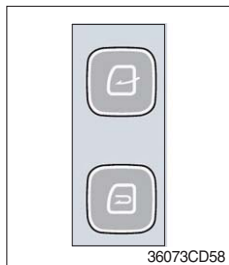

- (1) It is possible to change the air-inlet method.
 - ① **Fresh air** ()
Inhaling air from the outside.
※ **Check out the fresh air filter periodically to keep a good efficiency.**
 - ② **Air recirculation** ()
It recycles the heated or cooled air to increase the energy efficiency.
※ **Change air occasionally when using recirculation for a long time.**
※ **Check out the recirculation filter periodically to keep a good efficiency.**

8) SELF DIAGNOSIS FUNCTION

(1) Procedure

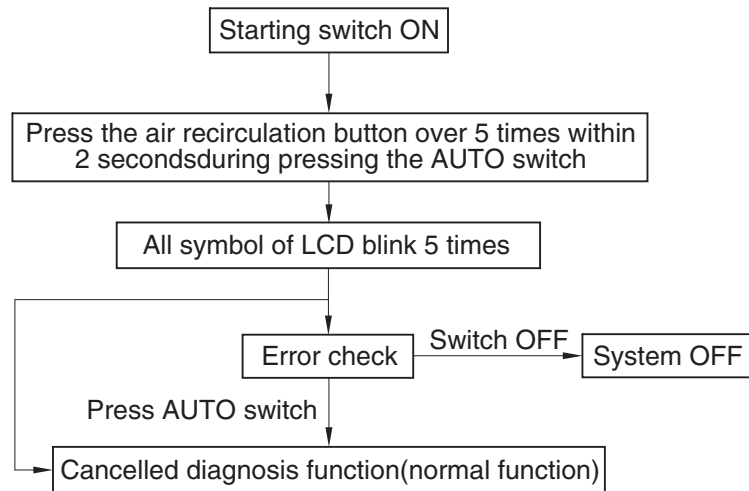

3607A3CD69

(2) Error check


- The corresponding error code flickers on the setup temperature display panel, the other symbol will turn OFF.
- Error code flickers every 0.5 second.
- If error code is more than two, each code flickers 2 times in sequence.
- Error code

Error code	Description	Error code	Description
11	Cabin inside sensor	16	Mode actuator 1
12	Ambient sensor	17	Mode actuator 2
14	Duct (evaporator) sensor	18	Intake actuator
15	Temp actuator	-	-

(3) Fail safe function


Error description	Fail safe function
Cabin inside sensor (11)	25°C alternate value control
Ambient sensor (12)	20°C alternate value control
Duct (evaporator) sensor (14)	1°C alternate value control
Temp actuator (15)	If opening amount is 0 %, the alternate value is 0 %
	If not, the alternate value is 100 %
Mode actuator 1, 2 (16, 17)	The alternate value is Vent

6. OTHERS

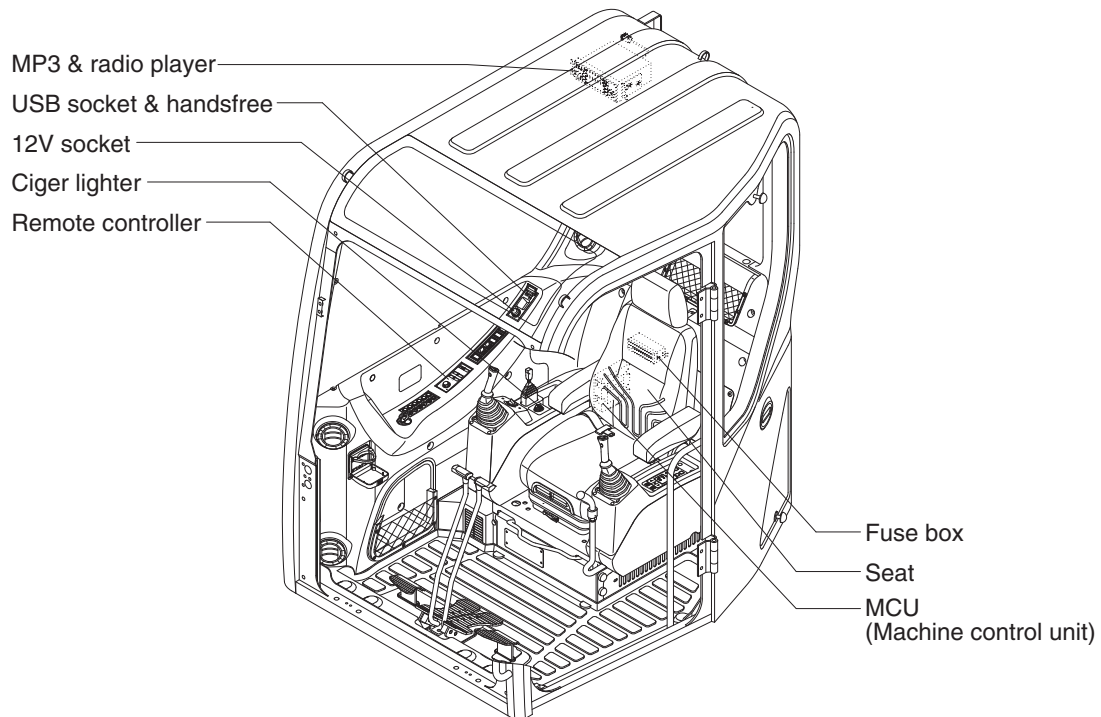


80CR93CD04

1) CIGAR LIGHTER

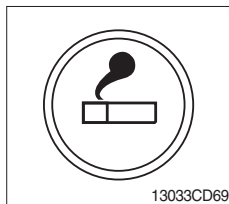

- (1) This can be used when the engine starting switch is ON.
 - (2) The lighter can be used when it springs out in a short while after being pressed down.
- ※ **Service socket**
Use cigar lighter socket when you need emergency power.
Do not use the lighter exceeding 12 V, 120 W.


2) 12V SOCKET (option)

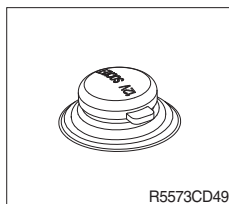

- (1) Utilize the power of 12 V as your need and do not exceed power of 12 V, 120 W.

3) SEAT

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

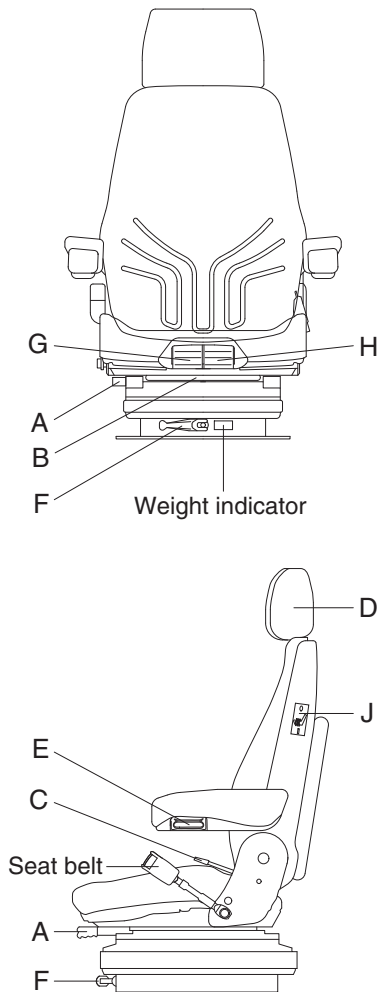

140Z93CD55

(1) Forward/Backward adjustment (A)

- ① Pull lever A to adjust seat forward or backward.
- ② The seat can be moved forward and backward over 130 mm (5.1") in 13 steps.

▲ Do not lift the locking lever with you leg or calf.

(2) Upward/Downward adjustment (B)

- ① Pull lever B to adjust seat upward or downward over 60 mm (2.4").
- ② Forward or backward side adjustment only can be made, tilting to one side, by moving lever B respectively.

(3) Reclining adjustment (C)

Pull lever C to adjust seat back rest.

(4) Armrest adjustment (E)

This can be adjusted by pushing the button E to right and left.

(5) Headrest adjustment (D)

This is adjustable vertically and forward or rearward to fit operator's requirements.

(6) Weight adjustment (F)

Adjust the lever with the seat empty to the operator's weight.

(7) Seat depth adjustment (G)

- ① The depth of the seat pan can be individually adjusted.
- ② To adjust the depth of the seat cushion, pull the right handle upward. By moving the seat cushion backwards or forwards the desired seating position can be reached.

(8) Seat pan angle adjustment (H)

- ① The angle of the seat pan can be individually adjusted.
- ② To adjust the angle of the seat pan, pull the left handle upwards. By exerting pressure on or off the front or rear part of the seat pan it can be moved to the desired position.

(9) Seat heater (J)

The seat heater can be turned on/off by pressing the switch.

0 = Seat heater OFF


I = Seat heater ON

▲ Always check the condition of the seat belt and mounting hardware before operating the machine.

▲ Replace the seat belt at least once every three years, regardless of appearance.


4) HANDSFREE

Allow you to dial a call or to have a conversation without holding your handset. Use the remote controller when making and answering a calls or ring off.

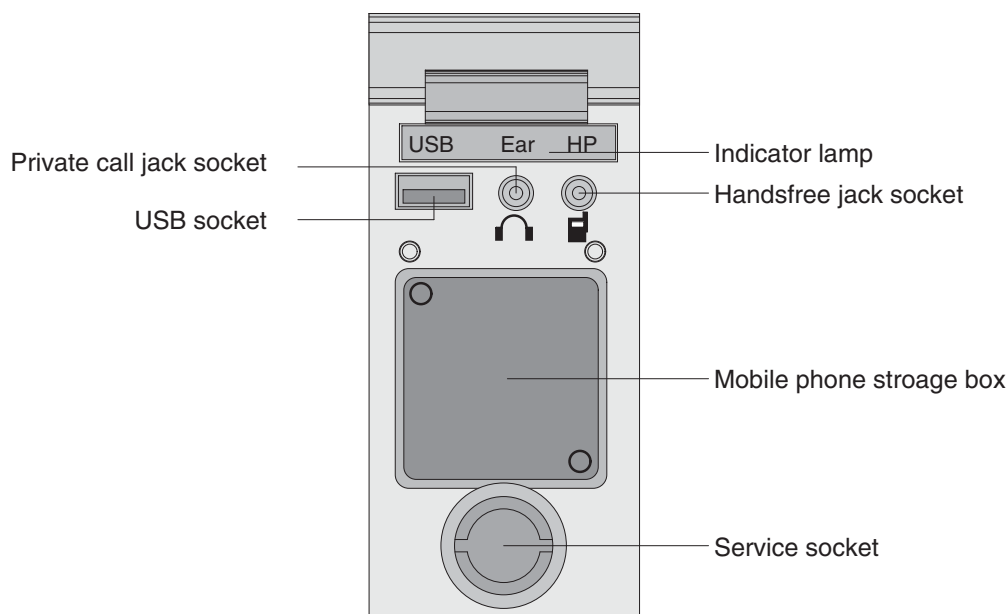

21093CD51


(1) Mobile phone storage box

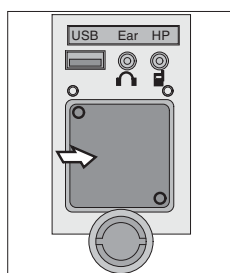

21093CD51A

- ① Mobile phone can be stored when call by handsfree.


(2) USB socket

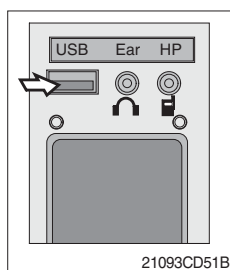

21093CD51B

- ① This socket is used to charging the mobile phone.


(3) Private call jack socket

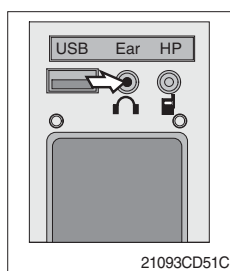

21093CD51C


- ① This can be used protect you privacy calling by using ear phone.
- ② The mobile phone must be connected handsfree jack socket.

(4) Handsfree jack socket

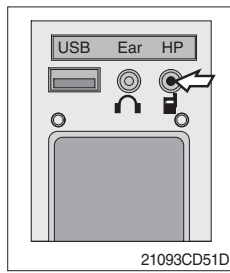


- ① Connect the jack cable when call by handsfree.
- ② Use the special adapter when jack cable is not interchangeable.
- ③ Check the jack type of mobile phone before use.

(5) Indicator lamp

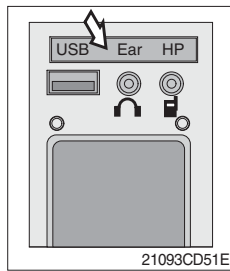


- ① This lamp is turned ON when the handsfree mode selected.

(6) Service socket

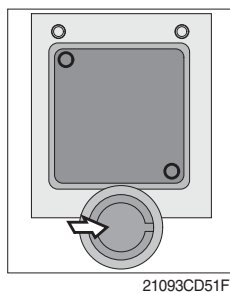

- ① Utilize the power of 12 V as your need and do not exceed power of 12 V, 30 W.

5) REMOTE CONTROLLER

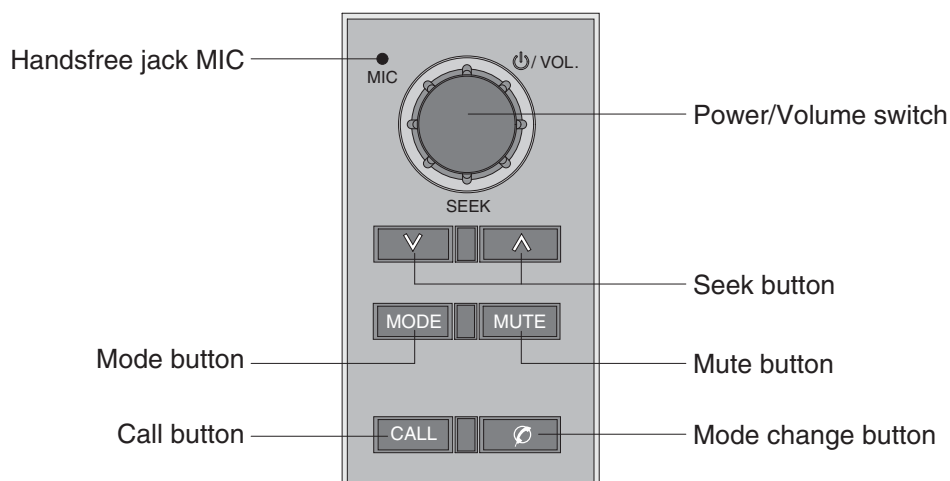

21093CD52

(1) Power and volume switch



21093CD52A

- ① This switch is used to turn the audio or handsfree ON or OFF.
 - ② This switch is turned to right, the handsfree volume is increased over 7 steps.
 - ③ If it is turned to left, volume will be decreased.
- ※ This switch adjust the audio volume when selected audio mode.


(2) Mode change button



21093CD52B

- ① This button is to select the handsfree mode or audio mode.
 - Lamp ON : Handsfree mode ("TEL MUTE" displayed ON audio LCD)
 - Lamp OFF : Audio mode


(3) Call button

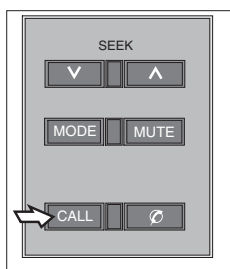

21093CD52C

- ① This button is used answer a call, last number redial, ring off.
 - ② For calling, press the button over 0.5sec within 3 seconds until the beep sounds.
- ※ This can be used when the starting switch is ON.


(4) Handsfree MIC

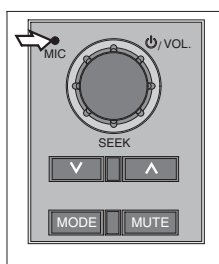



21093CD52D

- ① This MIC transfers user voice to receiver of the call when making a call by handsfree.

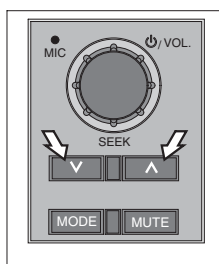
(5) Seek button



21093CD52E

- ① If this button pressed, the radio automatically stops at the next frequency of broadcasting for your listening.
- ② Press  to turn a station of a higher frequency or  to a lower frequency.


(6) Mute button

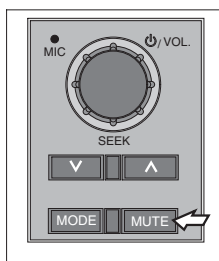

21093CD52G

- ① Short press this button to mute or cancel the mute (silence) while broadcasting.

(7) Mode button

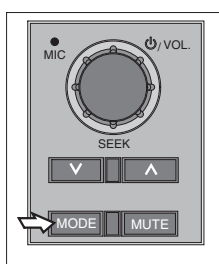

21093CD52F

- ① Press the mode button to select the desired mode.
 - ② FM1 → FM2 → AM → CD → FM1
- ※ The LCD displayed each mode.

(8) Wireless handsfree

- ① To activate a wireless handsfree call using bluetooth of the mobile phone, you need to perform pairing first. For pairing, set the bluetooth activating mode of your mobile phone.
 - a. When you complete the setting of the bluetooth mode of the mobile phone, press the CALL button for more than six seconds. At this time, you can hear beep sounds three times.
 - b. Next, the mobile phone finds bluetooth named "HYUNDAI".
Select "HYUNDAI" and set "Connect with bluetooth on the mobile phone".
For the connection, the password is, by default, set as "0000".
 - c. Normal bluetooth pairing once the mobile phone is displayed in the menu.
- ② Making and answering calls follows the same steps of the calling procedures for the wired handsfree system. While you are using the wireless handsfree, you may receive another call. In this case, beep sounds are heard.

③ Cautions related to pairing

You need to set pairing only once when the mobile phone and the integrated remote control is initially used. They will be automatically connected from then.

Meanwhile, if the excavator turns on back with the pairing activated, the connection may require 20 seconds or longer.

④ To deactivate the pairing function

When you want to deactivate the pairing, press and hold the CALL button for more than three seconds. Then, you can hear beep sounds twice and the function will be deactivate.

6) FUSE BOX

WORK LAMP	20A	START KEY	30A
FUEL PUMP HORN	20A	CASSETTE CLUSTER	20A
CIGAR LIGHT WIPER MOTOR	20A	ROOM LAMP AIRCON HEATER	30A
AIR-CON HEATER	20A	MCU	20A
SOLENOID	10A	ECU	20A
ALT. ANT-RESTART RY	20A	CLUSTER SWITCH PANEL	20A
SAFETY SOL	10A	MCU	20A
BEACON LAMP	20A	CASSETTE RADIO	20A
PRE HEAT	20A	SPARE	20A
CABIN LAMP FEED PUMP	30A	HEAD LAMP	20A
FUSE HOLDER		SPARE	20A
		SPARE	30A

80CR93CD13


(1) The fuses protect the electrical parts and wiring from burning out.

(2) The fuse box cover indicates the capacity of each fuse and circuit it protects.

※ **Replace a fuse with another of the same capacity.**

▲ **Before replacing a fuse, be sure to turn OFF the starting switch.**

7) MCU

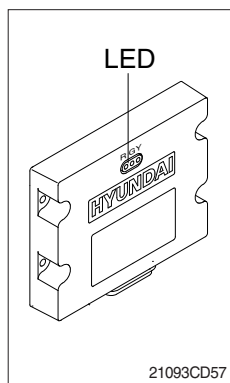


(1) To match the pump absorption torque with the engine torque, MCU varies EPPR valve output pressure, which control pump discharge amount whenever feedbacked engine speed drops under the reference rpm of each mode set.

(2) Three LED lamps on the MCU display as below.

LED lamp	Trouble	Service
G is turned ON	Normal	-
G and R are turned ON	Trouble on MCU	· Change the MCU
G and Y are turned ON	Trouble on serial communication line	· Check if serial communication lines between controller and cluster are disconnected
Three LED are turned OFF	Trouble on MCU power	· Check if the input power wire (24 V, GND) of controller is disconnected · Check the fuse

G : green, R : red, Y : yellow

8) UPPER WINDSHIELD

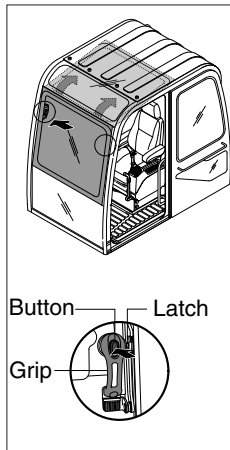

(1) Perform the following procedure in order to open the upper windshield.

- ① Release both latches in order to release the upper windshield.
- ② Hold both grips that are located at both side the windshield frame push the windshield upward.
- ③ Hold both grips that are provided on the windshield frame and back into the storage position until auto lock latch is engaged.


⚠ When working, without having locked the windshield by the auto lock (by pushing the windshield to the rear until it's completely fixed), please be careful as it can cause personal injury if the windshild is not fixed or falls off.

(2) Perform the following procedure in order to close the upper windshield.

Reverse step ① through step ③ in order to close the upper windshield.

5) RADIO AND USB PLAYER (MACHINE SERIAL NO.: ~#1108)


■ BASIC FUNCTIONS

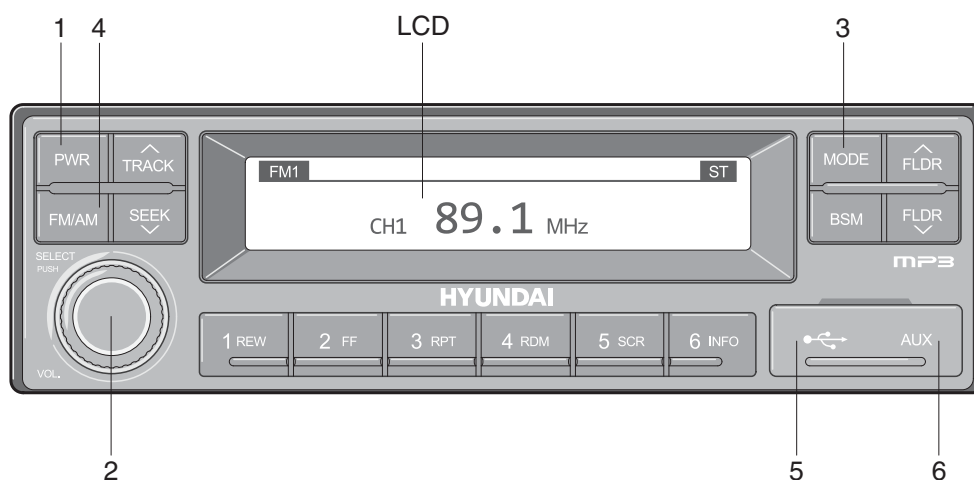

2209S3CD70

- | | |
|-------------------------------|----------------------------------|
| 1 Power (PWR) button | 4 Radio (FM/AM) selection button |
| 2 Volume/Sound setting button | 5 USB slot |
| 3 Mode selection button | 6 AUX terminal |


(1) Power (PWR) button

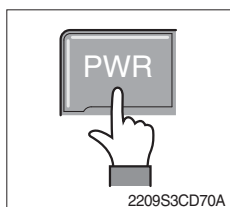

- ① Press the PWR button to turn on the audio. While the audio is operating, press the button to turn the power off.


(2) Volume/Sound setting button

• Volume (VOL) button

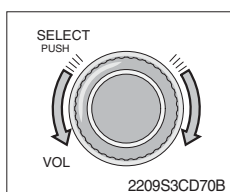


- ① Turn the VOL button clockwise to increase the volume and counter-clockwise to decrease the volume.

• Sound setting

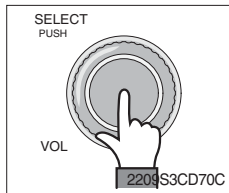


- ① Press the SELECT button to conduct sound setting.
Each press of the button will change the sound setting in the following order.
BASS → MIDDLE → TREBLE → BALANCE → EQ → BEEP
- ② After selecting the desired setting, turn the SELECT button clockwise/counter-clockwise to adjust the sound setting value.
- ③ **BASS adjustment**
Turn the SELECT button clockwise to increase the bass and counter-clockwise to decrease the bass. BASS can be adjusted from max +10/min -10. If there are no adjustments for 3 seconds, the changes will be saved and the previous mode will be restored.
- ④ **MIDDLE adjustment**
Turn the SELECT button clockwise to increase the middle and counter-clockwise to decrease the middle. MIDDLE can be adjusted from max +10/min -10. If there are no adjustments for 3 seconds, the changes will be saved and the previous mode will be restored.
- ⑤ **TREBLE adjustment**
Turn the SELECT button clockwise to increase the treble and counter-clockwise to decrease the treble. TREBLE can be adjusted from max +10/min -10. If there are no adjustments for 3 seconds, the changes will be saved and the previous mode will be restored.
- ⑥ **Left/Right BALANCE adjustment**
Turn the SELECT button clockwise to increase the right-side speaker volume and counter-clockwise to increase the left-side speaker volume. BALANCE can be adjusted from 10L/10R. If there are no adjustments for 3 seconds, the changes will be saved and the previous mode will be restored.
- ⑦ **EQ (EQUALIZER) adjustment**
Turn the SELECT button clockwise/counter-clockwise to select the desired EQ. EQ settings are as shown below.
Cls (classic) → Pop → Rock → Jazz → off
If there are no adjustments for 3 seconds, the changes will be saved and the previous mode will be restored.
※ **Upon selecting EQ, the BASS, MIDDLE and TREBLE values will be turned off.**
The BASS, MIDDLE, TREBLE values can be set only when EQ Off is selected.
- ⑧ **BEEP sound adjustment**
Turn the SELECT button clockwise/counter-clockwise to the beep sound ON/OFF. If there are no adjustments for 3 seconds, the changes will be saved and the previous mode will be restored.

(3) MODE selection button

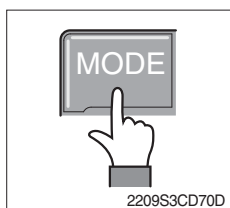

- ① Press the MODE button to change to RADIO/USB/AUX/iPod modes. However, the mode can be selected only when the respective media is connected.
 - ② If iPod is connected to the audio, the mode will change in the following order.
RADIO → iPod → USB (handfree)
 - ③ If USB, AUX is connected to the audio, the mode will change in the following order.
RADIO → USB(front) → USB(handfree) → AUX
- ※ **USB and AUX mode will operate only when corresponding devices are connected.**
 - ※ **When connecting iPod, AUX and front USB cannot be connected.**
 - ※ **The iPod is connected to the USB in the machine handfree.**

(4) Radio (FM/AM) selection button

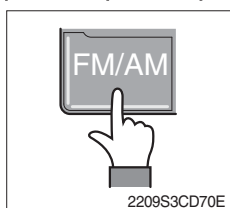

- ① Each press of the FM/AM button will change the radio mode in the following order.
FM1 → FM2 → FM3 → AM
- ② Preset memory of up to FM : 18 stations, AM : 6 stations


(5) USB slot

Connects USB to play USB music files.

(6) AUX terminal

Connects AUX cable to play AUX music files.


■ RADIO

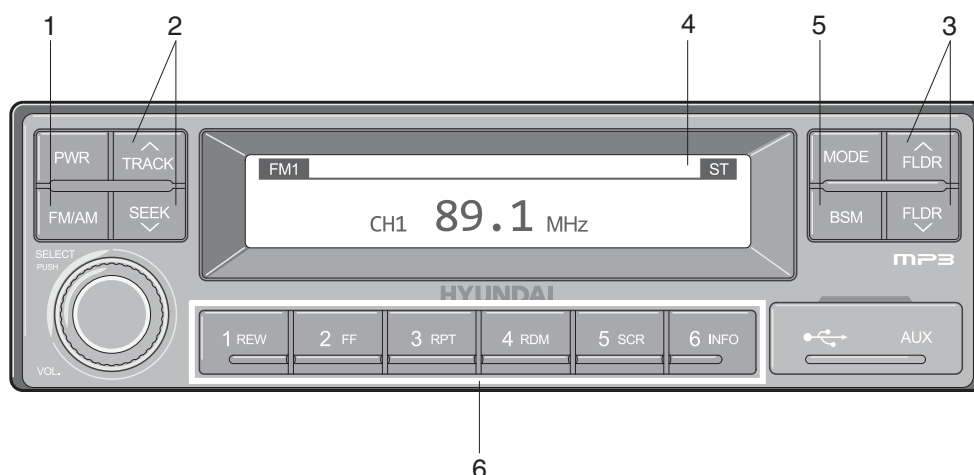

2209S3CD71

- | | |
|---|--|
| 1 Radio (FM/AM) selection button | 4 LCD display |
| 2 TRACK/SEEK button | 5 BSM (Best Station Memory) button |
| 3 Broadcast manual search (FLDR) button | 6 Saving broadcast frequencies to PRESET numbers |

(1) Radio (FM/AM) selection button

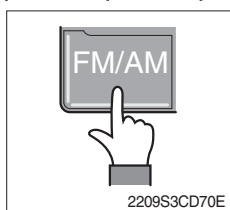

- ① Each press of the FM/AM button will change the radio mode in the following order.
FM1 → FM2 → FM3 → AM

- ② In addition, pressing the FM/AM button when the starting switch is in ON state will turn the power on and activate the radio.

③ Setting regional Radio Frequency

► North America Frequency

Press the FM/AM and Preset 1 button simultaneously to set frequency in accordance to the North America Frequency settings. "nA" will become displayed on the LCD for one second.

FM : 87.7 ~ 107.9 MHz (200 KHz)

AM : 530 ~ 1710 KHz (10 KHz)

► Local/Middle East/Asia Frequency

Press the FM/AM and Preset 2 button simultaneously to set frequency in accordance to the Local/Middle East/Asia Frequency settings. "InT" will become displayed on the LCD for one second.

FM: 87.5 ~ 108 MHz (100 KHz)

AM: 531 ~ 1602 KHz (9 KHz)

► Europe Frequency


Press the FM/AM and Preset 3 button simultaneously to set frequency in accordance to the North America Frequency settings. "Eu" will become displayed on the LCD for one second.

FM: 87.5 ~ 108 MHz (50 KHz)

MW: 531 ~ 1602 KHz (9 KHz)

LW: 153 ~ 279 KHz (1 KHz)

(2) TRACK/SEEK button

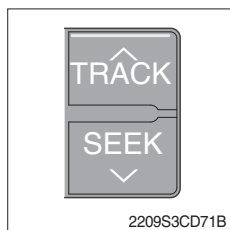


- ① As buttons used to automatically search broadcasts, pressing the button will automatically search and stop at a frequency with superior reception.

TRACK \wedge : Searches frequencies higher than current frequency

SEEK \vee : Searches frequencies lower than current frequency

※ **When frequencies cannot be properly found due to weak broadcast reception, try using manual FLDR button. (Refer to manual FLDR button explanation below)**

(3) Broadcast manual search (FLDR) button

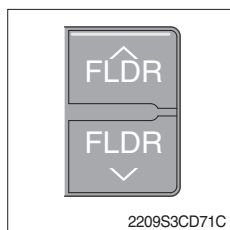

- ① As button used to search frequencies manually, a press of the SEEK step (refer to note below) will change the frequency.


Pressing and holding the button will continue changing the frequency. Releasing the button will stop the search at the current frequency.

FLDR \wedge : Searches frequencies higher than current frequency

FLDR \vee : Searches frequencies lower than current frequency


※ **SEEK STEP : FM-100KHz, AM-9KHz**

(4) LCD display

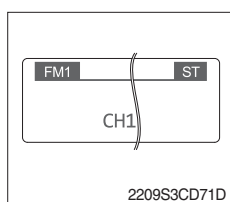

- ① The currently received broadcast frequency info and status are displayed.

(5) BSM (Best Station Memory) button

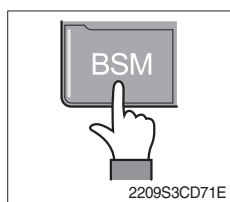


- ① Press and hold the BSM button to listen to the presets saved in FM BAND FM1, FM2, and FM3 or AM BAND AM for 5 seconds each.

When you find a station you wish to listen to, press the BSM button again to receive the selected broadcast.

- ② Shortly press the BSM button to automatically save frequencies with superior reception in presets (1REW~6INFO). The BSM feature will save AM frequencies in AM mode and FM frequencies in FM mode.


(6) Saving broadcast frequencies to PRESET numbers

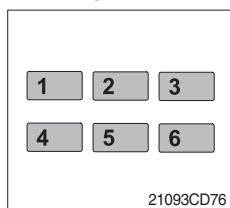

Up to 18 FM broadcasts and 6 AM broadcasts can be saved.

- ① Use the auto/manual search buttons to find the desired frequency.
 - ② Select the preset button (1REW~ 6INFO) to which you wish to save the selected frequency. Press and hold the preset button.
 - ③ The frequency will be saved to the preset button to a sound of a beep. The saved frequency number will be displayed on the LCD DISPLAY. (However, the beep will not sound if the beep function has been turned off in sound setting.)
 - ④ After saving is complete, pressing the preset button will play the corresponding broadcast frequency.
- ※ No beep sound signifies that the preset has not been saved. In this case, try again from the first step. (However, the beep will not sound if the beep function has been turned off in sound setting.)

■ USB CONNECTION

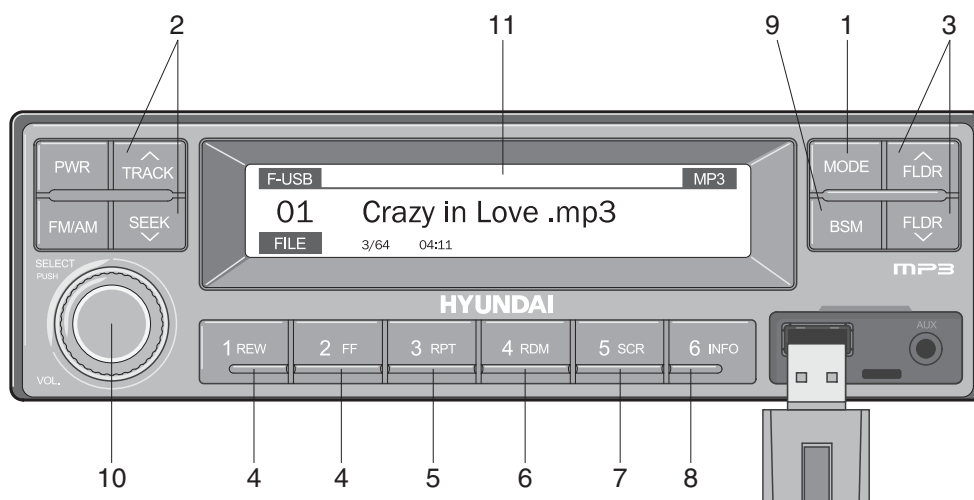


2209S3CD72

- | | |
|-----------------------------|---|
| 1 USB selection button | 7 Scroll (SCR) button |
| 2 TRACK UP/SEEK DOWN button | 8 View music info (INFO) button |
| 3 FLDR UP/DOWN button | 9 Scan button (BSM) |
| 4 FF/REW button | 10 Finding and playing file (SELECT) button |
| 5 RPT/FOLDER RPT button | 11 LCD display |
| 6 RDM/FOLDER RDM button | |


- Operates only when a USB is connected. Connecting a USB to the audio will automatically convert to USB mode.
- Connecting the USB when the starting switch is in ON state will turn the power on and automatically play the songs within the USB.

(1) USB selection button

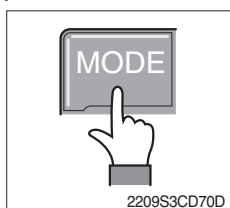


- ① While playing a different mode, press the MODE button to convert to USB mode. Connecting a USB to the audio will automatically convert to USB mode even if another mode is playing and automatically play the songs within the USB.
- ② If the USB is connected to both the front USB and handfree, then MODE is converted in the following order.
RADIO → USB(front) → USB(handfree)

(2) TRACK UP/SEEK DOWN button

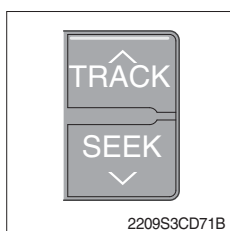


- ① While playing USB, press the TRACK ^ button to play the beginning of the next song.
Press the SEEK v button to return to the beginning of the current song. Press the button again to play the beginning of the previous song.

(3) FLDR UP/DOWN button

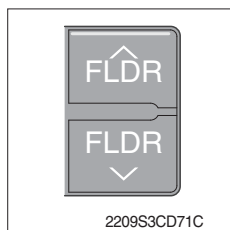


- ① If there are more than 2 folders in the USB, pressing the FLDR UP/DOWN button will move to the previous or next folder.
- ② If there are no folders in the USB, then pressing the button will move up/down within the folder in 10 file increments.

(4) FF/REW button

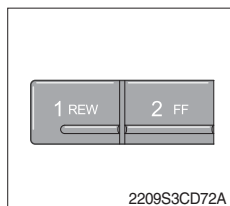


- ① While a USB is operating, press and hold the FF button to fast-forward the song. When fast-forward is complete, the next song will properly play from the beginning even if you continue holding the button. Press and hold the REW button to rewind the song. When rewind is complete, the current song will properly play from the beginning even if you continue holding the button. Shortly pressing the buttons will not operate the FF/REW.

(5) RPT/FOLDER RPT button

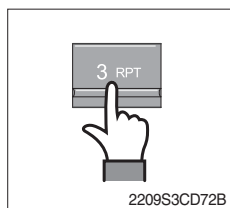


- ① While music is playing, shortly press the RPT button to repeat the currently playing song.
- ② (RPT function) Press and hold the RTP button to sequentially repeat all songs within the current folder. (FOLDER RPT, however, music files in the USB must be saved in folder format.)

(6) RDM/FOLDER RDM button

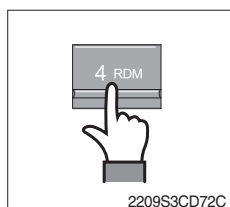


- ① While music is playing, shortly press the RDM button to randomly play the songs in the current folder. (RDM)
- ② While music is playing, press and hold the RDM button to randomly play the songs in the current folder. (FOLDER RDM, however, music files in the USB must be saved in folder format.)

(7) Scroll (SCR) button

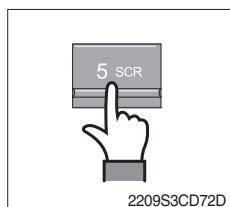


- ① Press the SCR button to turn ON/OFF the scroll function which scrolls the file name of the currently playing song on the LCD from right to left.

(8) View music info (INFO) button

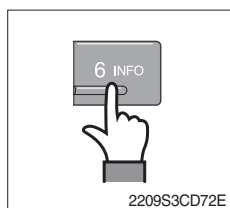


- ① Each time the INFO button is pressed, the info on the currently playing song will be displayed in the following order.
FILE NAME → TITLE → ARTIST → ALBUM → DIR

(9) Scan button (BSM)

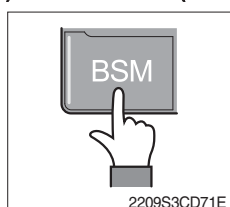

- ① While music is playing, shortly press the BSM button to scan each song within the USB for 10 seconds in sequential order. (SCN)
- ② Press and hold the BSM button to scan each song within the current folder for 10 seconds in sequential order. (FOLDER SCN, however, music files in the USB must be saved in folder format.)

(10) Finding and playing file (SELECT) button

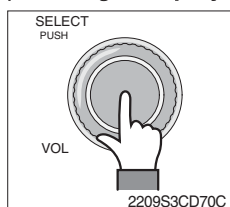

- ① While USB is playing, press and hold the SELECT button for over 3 seconds to enter FILE BROWSER mode and search for desired files.


After entering FILE BROWSER mode, turn the SELECT button left/

- ② right to find the desired folder. After finding the folder, press the SELECT button to select the folder. Turn the SELECT button left/right to find the desired song and press the SELECT button to play.

If there are no adjustments for 3 seconds after pressing the


- ③ SELECT button, the function will be turned off and the USB play screen will be displayed.

(11) LCD display

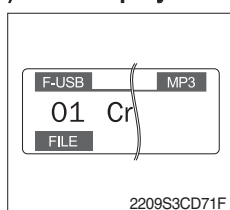

- ① Displays the info of the currently playing song.
 - F-USB : Displays USB is connected to the Audio Front
 - R-USB : Displays USB is connected to the handfree
 - RPT : Displays that repeat function is turned on
 - 📁 RPT : Displays that folder repeat function is turned on
 - RDM : Displays that random play is turned on
 - 📁 RDM : Displays that folder random play is turned on
 - SCR : Displays that SCROLL is turned on

■ IPOD CONNECTION

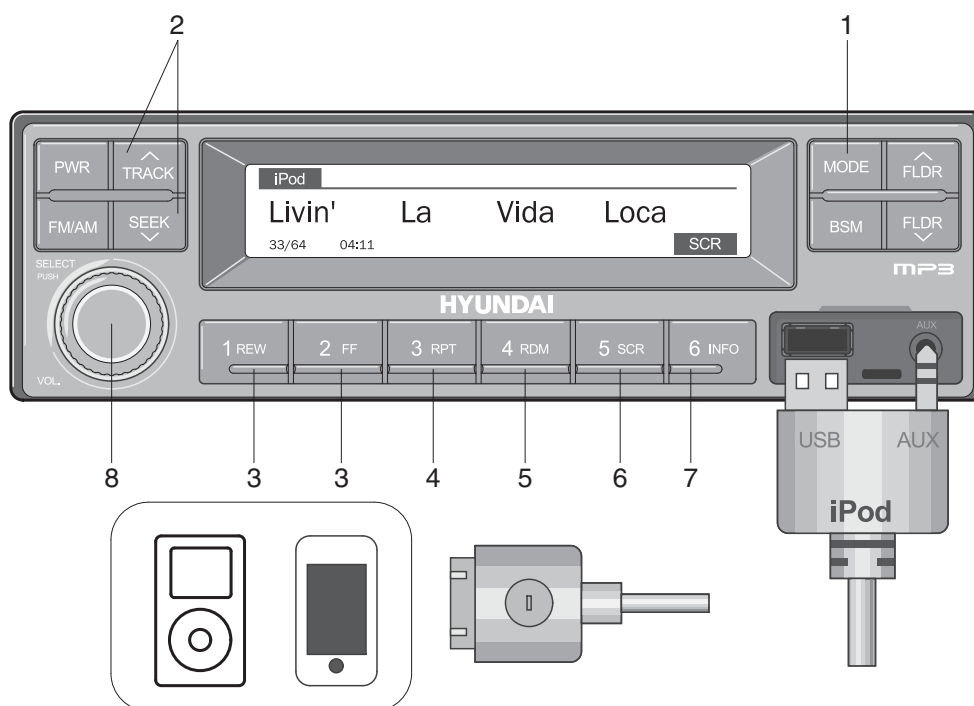


2209S3CD73

- | | |
|-----------------------------|--|
| 1 iPod selection button | 5 Random play (RDM) button |
| 2 TRACK UP/SEEK DOWN button | 6 Scroll (SCR) button |
| 3 FF/REW button | 7 View music info (INFO) button |
| 4 Repeat (RPT) button | 8 Finding and playing file (SELECT) button |


- Operates only when an iPod is connected. Connecting an iPod to the audio will automatically convert to iPod mode. Connecting the USB when the starting switch is in ON state will turn the power on and automatically play the songs within the iPod.
- The iPod cable is supplied separately.

(1) iPod selection button

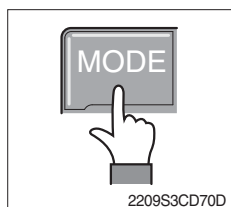


- ① While playing a different mode, press the MODE button to convert to iPod mode. Connecting an iPod to the audio will automatically convert to iPod mode even if another mode is playing and automatically play the songs within the iPod.

(2) TRACK UP/SEEK DOWN button

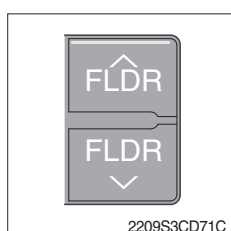


- ① While playing music, press the TRACK ^ button to play the beginning of the next song. Press the SEEK v button to return to the beginning of the current song. Press the button again to play the beginning of the previous song.

(3) FF/REW button

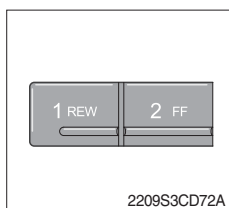


- ① While an iPod is operating, press and hold the FF button to fast-forward the song.
- ② When fast-forward is complete, the next song will properly play from the beginning even if you continue holding the button. Press and hold the REW button to rewind the song.
- ③ When rewind is complete, the current song will properly play from the beginning even if you continue holding the button.
- ④ Shortly pressing the buttons will not operate the FF/REW.

(4) Repeat (RPT) button

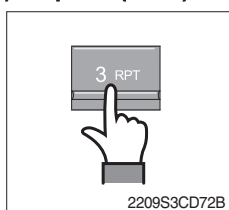


- ① While music is playing, press the RPT button to repeat the currently playing song.

(5) Random play (RDM) button

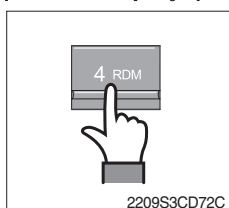


- ① While music is playing, press the RDM button to randomly play the songs.

(6) Scroll (SCR) button

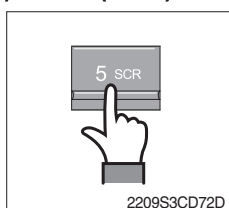


- ① Displays the file name of the currently playing song on the LCD. Here, the SCR button turns the file name SCROLL ON/OFF.

(7) View music info (INFO) button

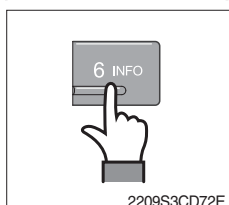


- ① Each time the INFO button is pressed, the info on the currently playing song will be displayed in order of ARTIST → ALBUM → TITLE.

(8) Finding and playing file (SELECT) button

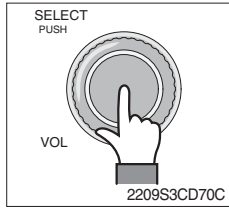

- ① While iPod is playing, press and hold the SELECT button for over 3 seconds to enter CATEGORY mode and search for desired files.
- ② After entering CATEGORY mode, turn the SELECT button left/right to find the desired category.
- ③ Category will be displayed in the following order.
PLAYLISTS → ARTISTS → ALBUMS → GENRES → SONGS → COMPOSERS → AUDIOBOOKS → PODCASTS
- ④ After finding the category, press the SELECT button to select the category. Turn the SELECT button left/right to find the desired song and press the SELECT button to play.
- ⑤ If there are no adjustments for 3 seconds after pressing the SELECT button, the function will be turned off and the iPod play screen will be displayed.

■ AUX connection

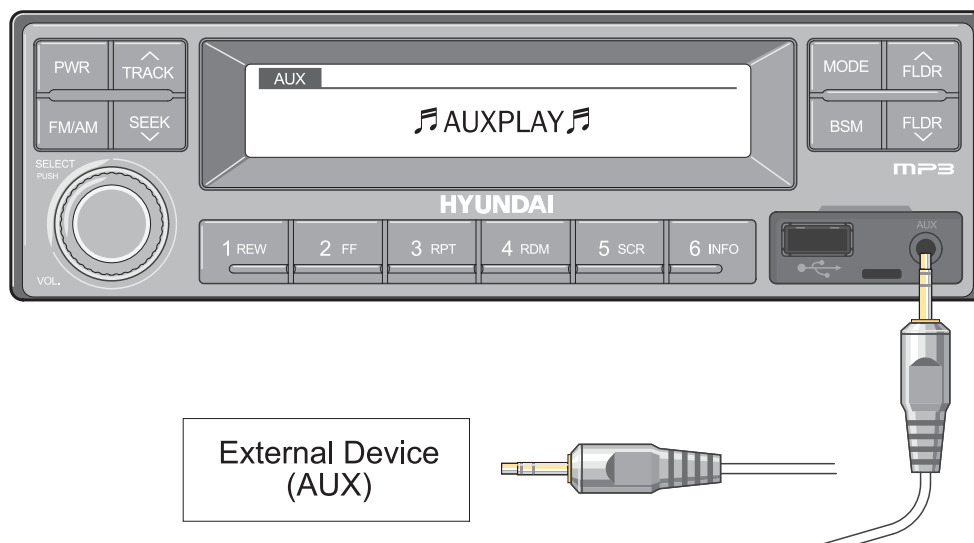

2209S3CD74

- Operates only when an external device is connected to AUX. Connecting an AUX device to the audio using the AUX cable will automatically convert to AUX mode.
- When an external device is connected, only the PWR, FM/AM, MODE, and VOL buttons can be operated.
- Settings can be made only through the external device connected to AUX.
- The AUX cable is supplied separately.

(1) Connecting an external device using the AUX cable

















- ① While playing a different mode, press the MODE button to convert to AUX mode.
- ② If an external device is connected to the Audio through the AUX terminal, AUX mode will automatically be converted and play music from AUX. Connecting the AUX when the starting switch is in ON state will turn the power on and automatically play the songs within the AUX.

5) RADIO AND USB PLAYER (MACHINE SERIAL NO.: #1109~#1360)



9403CD101

FRONT PANEL PRESENTATION

- | | |
|--|---|
| <p>1  Power ON/OFF,
Volume UP/DOWN button</p> <p>2  Manual UP/DOWN Tuning,
File search, SEL button</p> <p>3  Mode button,
Audio mute button</p> <p>4  Radio seek up button</p> <p>5  Radio seek down button</p> <p>6  Station preset 1
DIS Display button</p> <p>7  Station preset 2</p> <p>8  Station preset 3
RPT Repeat play button</p> <p>9  Station preset 4
RDM Random play button</p> | <p>10  Station preset 5
DIR- Directory down button</p> <p>11  Station preset 6
DIR+ Directory up button</p> <p>12  Scan play button (SCAN)
Best station memory (BSM) button</p> <p>13  Track up button</p> <p>14  Track down button</p> <p>15  USB connector</p> <p>16  AUX IN Jack</p> |
|--|---|

■ GENERAL

(1) Power and volume button



① Power ON / OFF button

Press power button (1) to turn the unit on or off.

② Volume UP/DOWN control knob

Turn VOL knob (1) right to increase the volume level.

Turn VOL knob (1) left to decrease the volume.

After 5 seconds the display will return to the previous display mode.

③ Initial volume level set up

I-VOL is the volume level the unit will play at when next turned on.

To adjust the I-VOL level, press and hold VOL button (1) for longer than 2 seconds. The current volume level displays on the display panel.

Then turn button (1) right or left to set the volume level as the I-VOL level.

④ Clock ON/OFF control

The CLOCK was default at off status. To turn CLOCK ON, press and hold VOL button (1) for longer than 2 seconds to display I-VOL, then short press VOL again, turn VOL knob while CLOCK OFF display, then the CLOCK ON will be displayed.

※ Due to time tolerance, the clock display on the Audio unit might have little difference.

⑤ Clock adjustment

With CLOCK ON selected, press VOL knob again after CLOCK ON display, the hour will blink, turn VOL knob right or left to adjust hour.

Simply press VOL again, the minute will blink, turn VOL knob to adjust minute. Then press VOL again to confirm the clock once finished.

(2) Menu Selection



- ① This button can adjust the sound effect and other things.

Each time you press this button (2), LCD displays as follows :

BAS → TREB → BAL L=R → FAD F=R → EQ → LOUD ON → BEEP 2ND

On each setting, the level can be controlled by turning TUNE knob (2). When the last adjustment is made, after 5 seconds, the display will automatically return to the previous display mode.

② Bass control

To adjust the bass tone level, first select the bass mode by pressing SEL button (2) repeatedly until BASS appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the bass level as desired. The bass level will be shown on the display panel from a minimum of BASS-7 to a maximum of BASS+7.

③ Treble control

To adjust the treble tone level, first select the treble mode by pressing SEL button (2) repeatedly until TREB appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the treble level as desired. The treble level will be shown on the display panel from a minimum of TREB -7 to a maximum of TREB +7.

④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing SEL button (2) repeatedly until BAL indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the balance as desired. The balance position will be shown by the bars on the display panel from BAL 10R (full right) to BAL 10L (full left).

⑤ Fader control

To adjust the front-rear speaker balance, first select the fader mode by pressing SEL button (2) repeatedly until FADER indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the front-rear speaker level as desired. The fader position will be shown by the bars on the display panel from FAD 10F (full front) to FAD 10R (full rear).

⑥ EQ control

You can select an equalizer curve for 4 music types (CLASSIC, POP, ROCK, JAZZ). Press button (2) until EQ is displayed, then turn knob (2) right or left to select the desired equalizer curve. Each time you turn the knob, LCD displays as follows :

EQ OFF → CLASSIC → POP → ROCK → JAZZ

※ When the EQ mode is activated, the BASS and TREBLE modes are not displayed.

⑦ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response. This action will compensate for the reduction in bass and treble performance experienced at low volume.

To select the loudness feature, press button (2) until LOUD is displayed, then turn knob (2) right or left to activate or deactivate loudness.

⑧ Beep control

To adjust the BEEP mode, first select the BEEP mode by pressing button (2) repeatedly until BEEP indication appears on the display panel. Then turn knob (2) left or right within 5 seconds to select BEEP 2ND, BEEP OFF or BEEP ON.

- BEEP 2ND : You will only hear the beep sound when the buttons are held down for more than 2 seconds.
- BEEP OFF : You can not hear the sound beep when you press the buttons.
- BEEP ON : You can hear the beep sound each time you press the buttons.

(3) Mute control

- ① Press and hold MUTE button (3) for over 2 seconds to mute sound output and MUTE ON will blink on the LCD. Press the button again to cancel MUTE function and resume to normal playing mode.

(4) Mode selection

- ① Repeat press MODE button (3) to switch between FM1, FM2, AM, USB, AUX, BT MUSIC.
- ※ If there is no USB, AUX, Bluetooth Phone connected, it would not display USB, AUX, BT when you press button (3).

■ RADIO

(1) Mode button



- ① Repeat press MODE button to select FM1, FM2 or AM.

(2) Manual tuning button



- ① To manually tune to a radio station, simply turn encoder TUNE (2) left or right to increase or decrease the radio frequency.

(3) Auto tuning button



- ① To automatically select a radio station, simply press Seek up or Track down button.



(4) Station preset button



- ① In radio mode, pressing buttons (6) to (11) will recall the radio stations that are memorized. To store desired stations into any of the 6 preset memories, in either the AM or FM bands, use the following procedure :

- a. Select the desired station.
- b. Press and hold one of the preset buttons for more than 2 seconds to store the current station into preset memory. Six stations can be memorized on each of FM1, FM2, and AM.

(5) Preset scan (PS) / Best station memory (BSM) button



① Press BSM button (12) momentarily to scan the 6 preset stations stored in the selected band. When you hear your desired station, press it again to listen to it.

Press BSM button (12) for longer than 2 seconds to activate the Best Station Memory feature which will automatically scan and enter each station into memory.

※ **If you have already set the preset memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter into the new ones. This BSM feature is most useful when travelling in a new area where you are not familiar with the local stations.**

■ USB PLAYER

(1) USB playback



- ① The unit was equipped with a front USB jack and also a rear USB Jack.

With a USB device plugged in the front USB jack, it will be detected as front USB mode. And with a USB device plugged in the rear USB jack, it will be detected as rear USB. To get to a USB mode, press MODE (3) button momentarily or insert the USB device in front or rear USB jack.

※ If no mp3 or wma files in USB device, it will convert to the previous mode after display NO FILE.

(2) Track Up / Down button



- ① Press SEEK up (13) or TRACK down (14) to select the next or previous track. Press and hold the buttons to advance the track rapidly in the forward or backward direction.



(3) MP3 directory / File searching



- ① Button (2) is used to select a particular directory and file in the device. Turn button (2) right or left to display the available directories. Press button (2) momentarily when the desired directory is displayed, then turn button (2) right or left again to display the tracks in that directory. Press button (2) to begin playback when the desired file is displayed.


(4) Directory Up / Down button



- ① During MP3/WMA playback, simply press DIR- button (10) to select the previous directory (if available in the device); simply press DIR+ button (11) to select the next directory (if available in the device).

※ If the USB device does not contain directories, it would play MP3/WMA tracks at 10- file when you press DIR- button (10), and play MP3/WMA tracks at 10+ file when you press DIR+ (11) button.

(5) Track Scan Play (SCAN) button

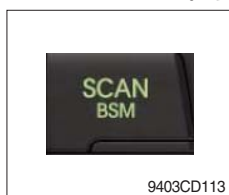

- SCAN playback : Simply press SCAN (12) button to play the first 10 seconds of each track.
- SCAN folder : Press and hold SCAN button for longer than 2 seconds to scan play the tracks in current folder.
- SCAN off : Simply press it again to cancel SCAN feature.

(6) Track Repeat Play (RPT) button



- REPEAT playback : Simply press RPT (8) button to play current track repeatedly.
- REPEAT folder : Press and hold RPT for longer than 2 seconds to repeat play the tracks in current folder.
- REPEAT off : Simply press it again to cancel REPEAT feature.

(7) Track Random Play (RDM) button



- RANDOM playback : Simply press RDM (9) button to play the tracks in the device in a random sequence.
- RANDOM folder : Press and hold RDM button for longer than 2 seconds to random play the tracks in current folder.
- RANDOM off : Simply press it again to cancel RANDOM feature.

(8) ID3 v2 (DISP)



- ① While a MP3 file is playing, press DISP button (6) to display ID3 information. Repeat push DISP button (6) to show directory name / file name and album name / performer / title.

※ **If the MP3 disc does not have any ID3 information, it will show NO ID3.**

* USB Information and Notice

- Playback FILE SYSTEM and condition allowance.
 - FAT, FAT12, FAT16 and FAT32 in the file system.
 - V1.1, V2.2 and V2.3 in the TAG (ID3) version.
- Display up to 32 characters in the LCD display.
- No support any of MULTI-CAED Reader.
- No high speed playback but only playing with normal full speed.

※ **DRM files in the USB may cause malfunction to playback in the radio unit.**

※ **The temperature below -10 Celsius, the audio unit with USB hook up would be affected to play well.**

■ AUX OPERATION

It is possible to connect your portable media player to the audio system for playback of the audio tracks via the cab speakers.

To get the best results when connecting the portable media to the audio system, follow these steps :

- Use a 3.5 mm stereo plug cable to connect the media player headphone socket at each end as follows.
 - Adjust the portable media player to approximately 3/4 volume and start playback.
 - Press the MODE button (3) on the audio unit to change into AUX mode.
 - The volume and tone can now be adjusted on the audio unit to the desired level.
- ※ **The audio quality of your media player and the audio tracks on it may not be of the same sound quality as the audio system is CD Player.**
 - ※ **If the sound of the media player is too low compared with the radio or CD, increase the volume of the player.**
 - ※ **If the sound of the media player is too loud and/or distorted, decrease the volume of the player.**
 - ※ **When in AUX mode, only the Volume, Bass, Treble, EQ and Mode functions of the audio unit can be used.**

5) RADIO AND USB PLAYER (MACHINE SERIAL NO. : #1361-)

■ WITH BLUETOOTH



19A3RD02

- 1 USB port with cover : Open the cover and connect the USB storage device.
- 2 ENTER/AST button with tune dial.
- 3 Display window for play / reception / menu state and information.
- 4 POWER button with VOLUME dial : turns power on, mute function on/off or selects a menu item (press), control the volume level or menu item.
- 5 AUX port with cover : Open the cover and plugging the external audio device.
- 6 Call / call end button :
 - when a call comes in : accepts a call (press); rejects a call (press and hold)
 - during a call connection : ends a call (press) ; switches between hands-free and private call modes (press and hold)
 - in standby mode: opens call list (press) ; makes a call a recently connected number (press and hold)
- 7 BAND button : enters Radio mode or changes the radio band (press).
- 8 Preset button :
 - Radio: Recall each stored station (press) ; store each station (press and hold).
 - USB : changes playback mode (press 1 II, 2 RPT or 3 RDM buttons); shows available information about the current track (press 4 INFO button) ; move to folder down/up (press 5 D-/6 D+ buttons).
 - Bluetooth audio : pause/resume playback (press 1 II) ; shows information of the connected Bluetooth device (press 4 INFO button).
- 9 MODE button : selects USB, Bluetooth audio or AUX play mode (press).
- 10 MENU button : enters Menu setting mode or returns to the previous menu (press).


■ WITHOUT BLUETOOTH






19A3RD01

- 1 USB port with cover : Open the cover and connect the USB storage device.
- 2 ENTER/AST button with tune dial.
- 3 Display window for play/reception/menu state and information.
- 4 POWER button with VOLUME dial : turns power on, mute function on/off or selects a menu item (press), control the volume level or menu item.
- 5 AUX port with cover : Open the cover and plugging the external audio device.
- 6 FM button : enters FM Radio mode.
- 7 AM button : enters AM Radio mode.
- 8 Preset button :
 - Radio : Recall each stored station (press) ; store each station (press and hold).
 - USB : changes playback mode (press 1 II, 2 RPT or 3 RDM buttons) ; shows available information about the current track (press 4 INFO button) ; move to folder down/up (press 5 D-/6 D+ buttons).
- 9 MODE button : selects USB or AUX play mode (press).
- 10 MENU button : enters Menu setting mode or returns to the previous menu (press).

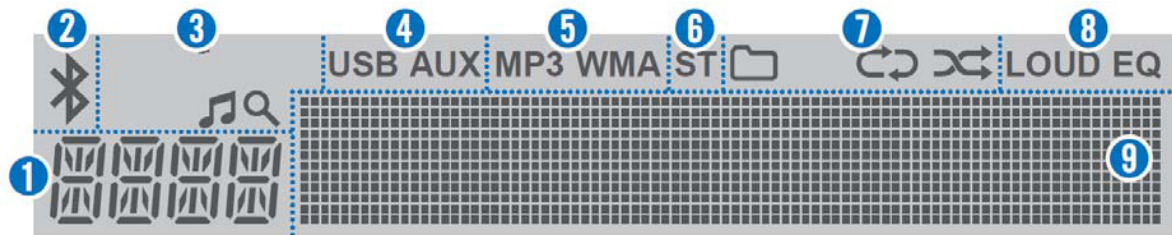■ DISPLAY WINDOW (LCD)




19A3RD03


- | | |
|--|--|
| <p>1 Function display area for showing the function mode.</p> <p>2 Bluetooth indicator for the Bluetooth connection.</p> <p>3 Search indicator for USB play list.</p> <p>4 USB/AUX indicators for the USB or External device connection.</p> <p>5 MP3/WMA indicators for USB's Audio Stream detections.</p> <p>6 ST (Stereo) indicators for FM stereo reception.</p> | <p>7 Playback mode indicators for USB playback mode.</p> <p>  : Folder mode.
  : Repeat playback.
  : Random playback. </p> <p>8 LOUD/EQ indicators for sound effect.</p> <p>LOUD : Loudness mode.</p> <p>EQ : EQ mode.</p> <p>9 Multi-function display area for showing the play, reception or menu information.</p> |
|--|--|

■ GENERAL

(1) Power and volume button

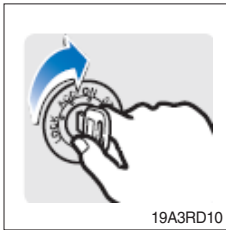


- ① Turn the starting switch to ON position.

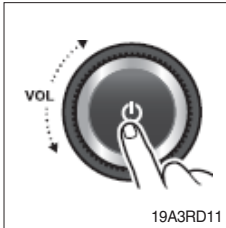

- ② Press the POWER button to turn the power on.


- If the source is ready, playback also starts.
- To turn on the power directly.

By connecting an USB into the USB port or pressing the BAND, MODE (while the USB is connected), you can also turn on the power and the unit then plays.

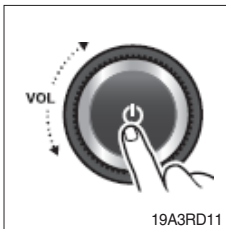


- ③ When power is on, press and hold the POWER button to turn power off.

(2) Adjusting volume directly

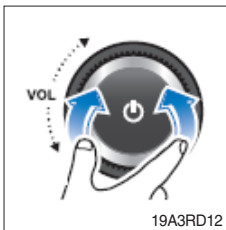


- ① Turn the VOLUME dial to control volume.
 - Available volume range : 00 (mute)~41.

(3) Muting the sound quickly

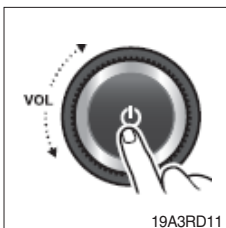


- ① Press the MUTE button to turn mute on.
 - "MUTE" will flash on the display and mute the sound.
 - Press the MUTE button again or turn VOLUME dial to restore sound.


(4) Setting the sound

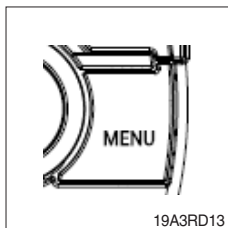


- ① Press MENU button to enter the Settings menu mode.
 - After entering MENU mode, press MENU button to return to the previous item.

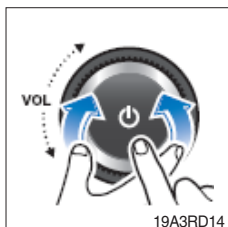

- ② Turn VOLUME dial to select the "SOUND" or "EQUALIZER" as below, then press this dial.
 - SOUND : sets the sound mode.
 - EQUALIZER : selects the equalizer style.

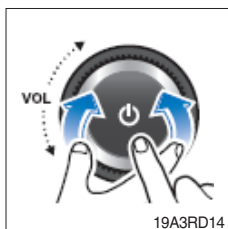


- ③ Turn VOLUME dial to select the desired Sound setting mode, then press this dial.
 - BASS : sets the bass sound level (-5~+5).
 - MIDDLE : sets the middle sound level (-5~+5).
 - TREBLE : sets the treble sound level (-5~+5).
 - BALANCE : sets the sound balance between the right and left speakers (LEFT 15~RIGHT 15).
 - EQUALIZER : selects the one of the 7 EQ styles (EQ OFF, POP, ROCK, COUNTRY, VOICE, JAZZ, CLASSIC).
 - PREVIOUS : Return to previous menu screen.

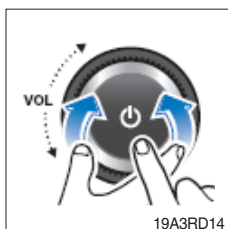


- ④ Turn VOLUME dial to adjust the value of the level, balance or style, then press this dial.


(5) Setting the system functions

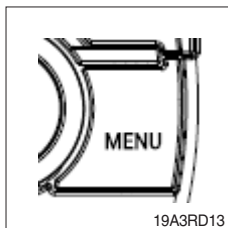

- ① Press MENU button to enter the Settings menu mode. Turn VOLUME dial to select "SYSTEM" as below, then press this dial.

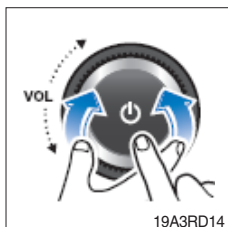


- ② Turn the VOLUME dial to select the "BT ON/OFF", "SCROLL", "LOUD" or "BEEP" then press this dial.
 - BT (Bluetooth) ON/OFF : activate (On) or deactivate (Off) the Bluetooth function. – (only ARA-9010HB).
 - SCROLL : activate (On) or deactivate (Off) the text scroll feature for LCD display screen.
 - LOUD : activate (On) or deactivate (Off) the loudness sound effect.
 - BEEP : activate (On) or deactivate (Off) the beep sound feature.
 - PREVIOUS : Return to previous menu screen.

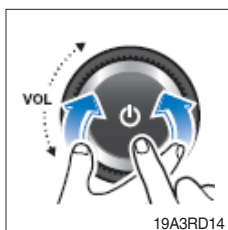


- ③ Turn VOLUME dial to select ON or OFF, then press this dial.

(6) Setting the region

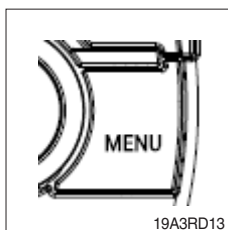

- ① Press MENU button to enter the Settings menu mode. Turn VOLUME dial to select "AREA" as below, then press this dial.
 - AREA : sets the region for radio.

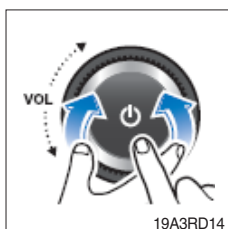

- ② Turn the VOLUME dial to select the desired area as below, then press this dial.
 - If the region setting is not selected correctly to your country or region, the radio reception can not be received. Retry the setting the region of radio reception correctly.
 - The region setting is required only for the first time.

- **ASIA/M.East**

FM : 87.5~108.0 MHz (100 kHz step)

AM : 531~1,602 kHz (9 kHz step)

- **AMERICA**

FM : 87.5~107.9 MHz (200 kHz step)

AM : 530~1,710 kHz (10 kHz step)

- **LATIN**

FM : 87.5~108.0 MHz (100 kHz step)

AM : 530~1,710 kHz (10 kHz step)

- **EUROPE**

FM : 87.5~108.0 MHz (50 kHz step)

AM : 531~1,620 kHz (9 kHz step)

- **JAPAN**

FM : 76~90 MHz (100 kHz step)


AM : 522~1,629 kHz (9 kHz step)

- **Russia (OIRT)**


FM : 65.0~74.0 MHz (30 kHz step)

AM : 522~1,602 kHz (9 kHz step)

(7) Checking/updating the system Software

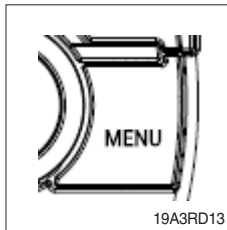


- ① Press MENU button to enter the Settings menu mode. Turn VOLUME dial to select "SOFTWARE" as below, then press this dial.
 - SOFTWARE : check/update the system software.

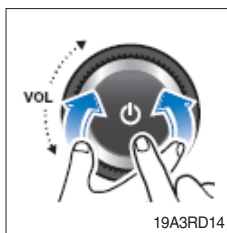


- ② To check the system software, turn the VOLUME dial to select the "VERSION CHECK", then press this dial.
- ③ To update the system software, turn the VOLUME dial to select the "UPDATE", then press this dial.
 - Download the latest system software to a USB device for update to this unit, then open the cover and plug the USB device to the USB port.
 - Perform update with the start switch "ON" when the battery is sufficiently charged by driving the vehicle. When the battery is discharged while updating, the system may get damaged with the update stopped.

(8) Setting the Bluetooth mode (only ARA-9010HB)

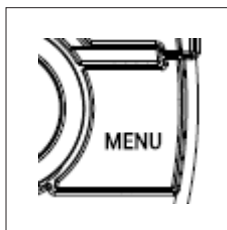


- ① Press MENU button to enter the Settings menu mode. Turn VOLUME dial to select "BLUETOOTH" as below, then press this dial.
 - Bluetooth: Bluetooth setting mode.

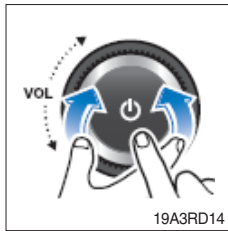

- ② Turn VOLUME dial to select the desired Bluetooth setting mode, then press this dial.
 - PAIR : register a Bluetooth device.
 - SELECT : selects/connects a device from registered Bluetooth devices.
 - DELETE : removes a device from registered Bluetooth device.
 - MIC VOL : adjusts the Bluetooth microphone.
 - H/F VOL : adjusts the Bluetooth hands-free volume.
 - Phone Book : activates/deactivates the phone book download feature from connected device.
 - BT INFO : shows the Bluetooth information of this system.
 - PREVIOUS : returns to previous menu screen.
- ③ To change the connected Bluetooth device, turn the VOLUME dial to select the "SELECT", then press this dial. Turn the VOLUME dial to select the desired device list, then press this dial.
- ④ To delete the Bluetooth device, turn the VOLUME dial to select the "DELETE", then press this dial. Turn the VOLUME dial to select the desired device list, then press this dial.
 - If the currently connected device is delete, this unit attempts to connect with the following priority Bluetooth device automatically.
- ⑤ To adjust the Bluetooth microphone initial volume, turn the VOLUME dial to select the "MIC VOL", then press this dial. Turn the VOLUME dial to set desired Bluetooth microphone initial volume level, then press this dial.
 - The default setting is 3, the volume range is 1~5.
- ⑥ To adjust the Bluetooth hands-free initial volume, turn the VOLUME dial to select the "H/F VOL", then press this dial. Turn the VOLUME dial to set desired Bluetooth hands-free initial volume level, then press this dial.
 - The default setting is 15, the volume range is 6~32.
- ⑦ To download the phone book, turn the VOLUME dial to select the "phone book", then press this dial. Turn the VOLUME dial to select the "ENABLE", then press this dial.
 - The phone book can download up to 1,000 phone numbers.


■ BLUETOOTH

(1) Pairing/Connecting your device

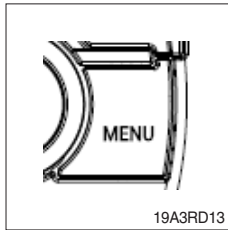


- ① Firstly, set up the Bluetooth device to be connected from the Bluetooth settings menu to enable other devices to search for the Bluetooth device.

Press MENU button to enter the Menu settings mode.

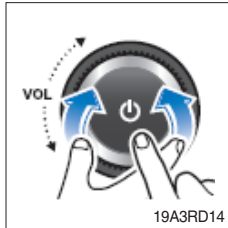



- ② Turn VOLUME dial to select the "BLUETOOTH" as below, then press this dial.

- ③ Turn the VOLUME dial to select the "PAIR", then press this dial.

- When you first register, appear the "BT Pairing" on the display window, then search the Bluetooth devices for connection.
- If a Bluetooth device is not connected, press and hold the  button to enter the pairing mode directly.

- ④ Search and select device "Device Name" in your Bluetooth device, then confirm.

- The Bluetooth registration standby proceeds for 1 minute. If the registration is failed during 1minute, restart over from the beginning.
- After a while, the Bluetooth device is automatically registered. When pairing is successful, the "Connected" and "Device name" will be displayed 3 seconds.
- When your Bluetooth device is connected,  appear on the display.
- If the Bluetooth device is disconnected,  disappear.


- ⑤ Repeat items 1~4 to register to add another Bluetooth device.


- Up to 5 devices can be paired to this unit.
- The last device connected to this unit is set to automatically connect to the highest priority.

(2) Playing the Bluetooth music

To play Bluetooth music


- ※ A2DP (Advanced Audio Distribution Profile) : This function only operates with Bluetooth devices that support A2DP version 1.2 or above.
- ※ Should be set to Stereo Headset in Bluetooth device type menu of your device

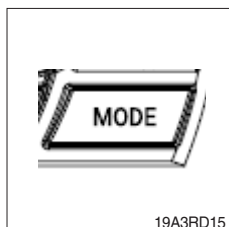

① Press the MODE button repeatedly to select the BT Audio mode. Appears  on display window and start playback.


- If a Bluetooth device is not connected, you can not select.
- If music is not yet playing from your mobile device after switching to Bluetooth Music (streaming audio) mode or after pressing Play on the mobile device itself, try to start music playback by pressing the Play button again.
- The output music playback from Bluetooth devices with this unit.
- There will be music playback automatically play upon entering since once played. It stops automatically when you exit from the music.
- You can also phone or Bluetooth device other than the home screen mode, Bluetooth music play mode when entering and exiting, the device does not play automatically.

(3) Controlling the playback

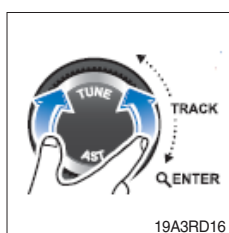


① While playing, turn the TUNE/TRACK dial to moves to the previous or next track.

- Clockwise : move to the next file.
- Counter-clockwise : move to beginning of the current file or previous file.

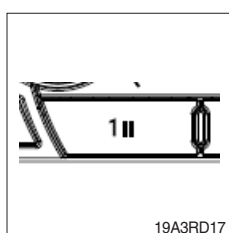

② While playing, press the [1 II] button to pause the track with "PAUSE" indicator.

- Press this button again to play the current track.

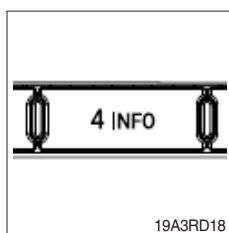



③ Press the [4 INFO] button to check the information of current connected device.

- About the music files are not displayed.
- During Bluetooth music playback, do not operate the music changes too quickly. Allow enough time for the machine-to-machine communication.


(4) Answering a call


- ※ When a call comes in, the audio source is muted, and display the call information with ring tone.
- ※ If the phonebook is not downloaded, only incoming phone number is displayed without the caller information.





- ① To answer a call, press the  button or to reject a call press and hold the  button.
 - When a call comes in, the audio source is muted.
 - When a call is ended, this unit returns to the previous state media playback.

(5) Making a call from recent number

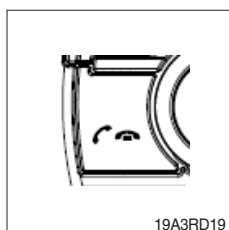


- ① To call the recent connected number, press the  button to display recent call number.
 - The recent calls list is displayed. Turn the VOLUME dial to select a recent call number, then press this dial to make a call.
 - The recent calls list displays up to 10.

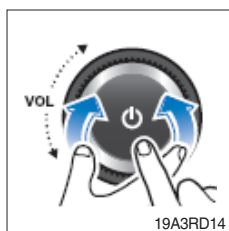


- ② To call the last connected number directly, press and hold the  button.

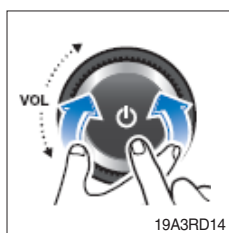

(6) During a call ...




- ① To adjust the a call volume, turn the VOLUME dial.
 - The call volume works with Bluetooth devices, and operates separately from the volume of this unit.

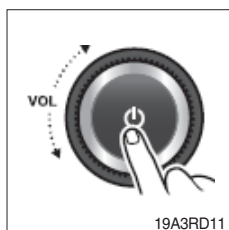- ② To deactivate the microphone, press the POWER button.




- ③ To switch from hands-free mode to the phone handset mode, press and hold the  button.
To returns the phone conversation to hands-free mode, press and hold the  button.

- ④ To end a call, press the  button.
 - • End a call, then return to the playing state.

■ RADIO

(1) Tuning in a radio station

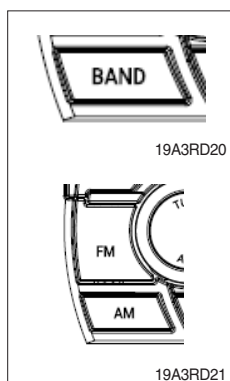


① Press the BAND or FM/AM button repeatedly to enter the radio band in order of FM1, FM2, FMA, AM1, AM2 or AMA.

- You can select the FM1, FM2, FMA or AM1, AM2, AMA radio band.

While the Auto Store stations(AST) are stored, you can select the AMA or FMA band by additional.

- The previously chosen broadcasting station will be received.

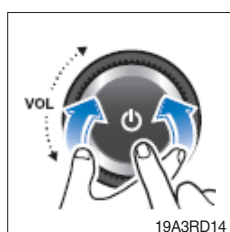


② Turn the TUNE/TRACK dial to select the station.

- Briefly turn this dial, plays previous/next frequency.
- Turn and hold this dial, automatically search for station with superior reception.
- Press this dial, starting from the current station, stations with superior reception are scanned for 5 seconds and the previous station is restored. During the seeking or scanning, if press or turn the dial left/right again, the selected station will begin playing.
- During the FM reception, the Stereo [ST] indicator is on.

(2) Saving radio stations manually

※ You can save up to 6 preset channels each for FM1, FM2, AM1,AM and AM2 band. If change the stations while driving, use preset button to prevent accidents.

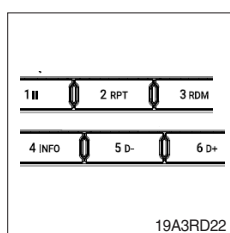

① Press the BAND or FM/AM button repeatedly to select the band.

② After selecting the frequency, press and hold the PRESET [1II]~[6 D+] button.

③ The frequency is saved to the selected preset button.

- A total of 24 frequencies with 6 preset frequencies each for FM1/FM2/AM1/AM2 modes can be saved.

(3) Saving radio stations automatically

※ You can save up to 6 preset channels automatically each for FMA and AMA band.




- ① Press the BAND or FM/AM button repeatedly to enter the radio band.
 - The previously chosen broadcasting station will be received.
- ② Press and hold the AST button to automatically save receivable frequencies to Preset button.
 - Up to 6 stations can be stored in each of the FMA and AMA band.

(4) Listening to a preset station

- ① Press the BAND or FM/AM button repeatedly to enter the radio band in order of FM1, FM2, FMA, AM1, AM2 or AMA.
 - You can select the FM1, FM2, FMA or AM1, AM2, AMA radio band.

While the Auto Store stations(AST) are stored, you can select the AMA or FMA band by additional.

 - The previously chosen broadcasting station will be received.

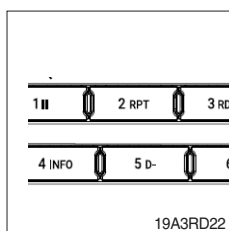

- ② Press the PRESET [1||]~[6 D+] button.
 - From the 6 presets, select the frequency you want to listen to.


■ USB PLAYER

(1) Playing an USB device




① Open the cover, plug the USB device(included MP3/WMA media file) to the USB port.

- Once a USB is connected, USB will automatically start playing from the first file within the USB.
- If a previously played USB is reconnected, then the file after the most recently played file is played.
- If a different USB is connected or the file information within the USB was changed, then the USB will start playing from the first song within the USB.

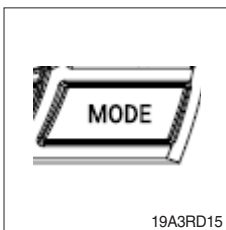


② When an USB device to be played is already connected, press the MODE button to play USB device.

- The previously selected file is played.

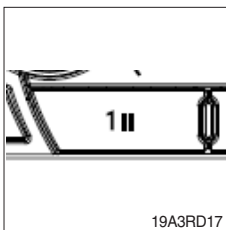

③ While playing, press the [1 II] button to pause the file.


(2) Changing the song information

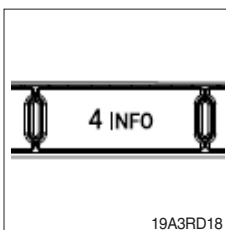

① Press the [4 INFO] button repeatedly to display information about the file being played.


- The information displayed includes the file name, playing time, ID3 Tag or folder name information saved with the song.
- If there is no information on the playing file, the unit will display "NO INFO", and then file name.

(3) Controlling the playback

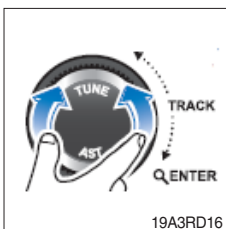


① While playing, turn the ►► I TRACK I ◀◀ dial left/right to moves to the previous or next track.


- Clockwise : move to the next file.
- Counter-clockwise : move to the previous file.

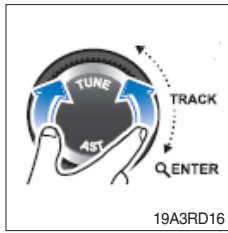


- ② While the ►►| TRACK |◄◄ dial is being turned and held, the file will rewind or fast forward at high speed. Once released, the file will begin playing at normal speed.
- Clockwise : fast forward.
 - Counter-clockwise : fast rewind
 - The search function works but search speed is not constant. While fast forwarding or rewinding, the playback sound is not output.

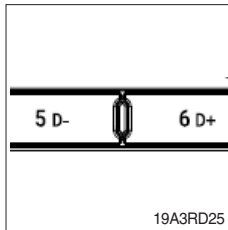

- ③ Press the [5 D-] or [6 D+] button to moves to the previous or next folder.
- [5 D-] press : move to previous folder.
 - [6 D+] press : move to next folder.
 - While folder moving, the folder name will be displayed briefly.

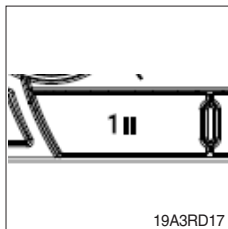


- ④ While playing, press the [1 II] button to pause the track.
- Press the button again to play the current track.

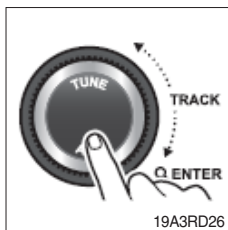





- ④ To find the song you want to play directly, press the Q (Search) button.
- Turn the ►►| TRACK |◄◄ dial to select the desired file name, then press this dial.

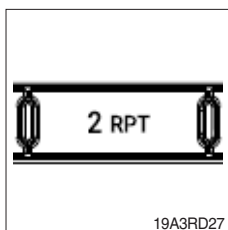(4) Change the playback mode

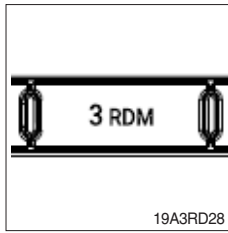

- ① Press the [2 RPT] button to select the Repeat playback mode.
- On : The current file plays repeatedly.
 - On : The current folder plays repeatedly.
 - Off : Cancels repeat playback.



- ② Press the [3 RDM] button to select the Random playback mode.
-   On : All files of current folder play in random order.
 -  On : All files of USB device play in random order.
 - Off : Cancels random playback.

(5) Handling precautions for USB device

- The device will only recognize USB devices formatted in FAT 16/32. When formatting the external USB device, the device may not properly recognize a Byte/Sector selection other than 512 Bytes or 2,048 Bytes.
- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in the required time are not indications of malfunction. Please wait the period of time required to recognize the device.
- This unit can recognize maximum 9,999 files and 256 folders into the USB device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- The device will not support files locked by DRM (Digital Rights Management).


■ AUX PLAYER

(1) Listening to auxiliary audio equipment


※ By connecting an optional portable audio device to the AUX input jack (stereo 3.5 pi) on the unit and then simply selecting the source, you can listen on your car speakers.



- ① Turn the VOLUME dial left to decrease the volume level.
 - The AUX volume can also be controlled separately through the connected device.

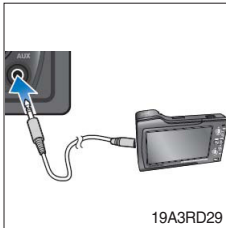

- ② Turn the external audio equipment off. Open the cover, connect the audio output of the external audio equipment to AUX input terminal on the unit.
- ③ Turn the external audio equipment on. Start playback of the external audio equipment at a moderate volume.

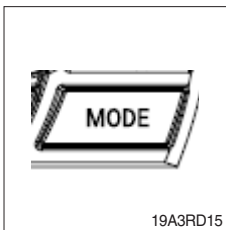

- ④ Press the MODE button repeatedly to select the AUX function.
- ⑤ Set your usual listening volume by turn the VOLUME dial left/right on the unit.
 - Once the connector is disconnected, the previous mode will be restored.
 - AUX mode can be used only when an external audio player has been connected.