

SECTION 1 GENERAL

Group 1	Safety hints	1-1
Group 2	Specifications	1-5
Group 3	Operational checkout record sheet	1-17


GROUP 1 SAFETY HINTS

Careless performing of the easy work may cause injuries.


Take care to always perform work safely, at least observing the following.

- Oil is a dangerous substance. Never handle oil, grease or oily clothes in places where there is any fire of flame.


As preparation in case of fire, always know the location and directions for use of fire extinguishers and other fire fighting equipment.

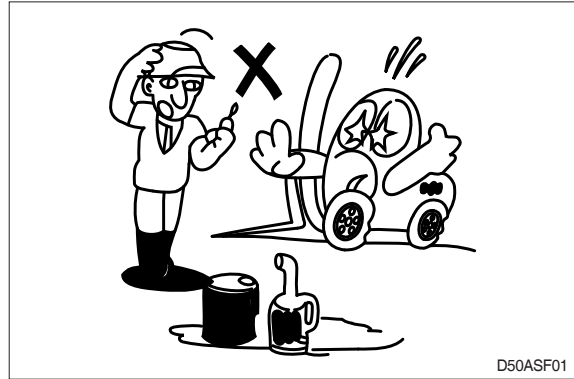


- Wear well-fitting helmet, safety shoes and working clothes. When drilling, grinding or hammering, always wear protective goggles. Always do up safety clothes properly so that they do not catch on protruding parts of machines. Do not wear oily clothes. When checking, always release battery plug.

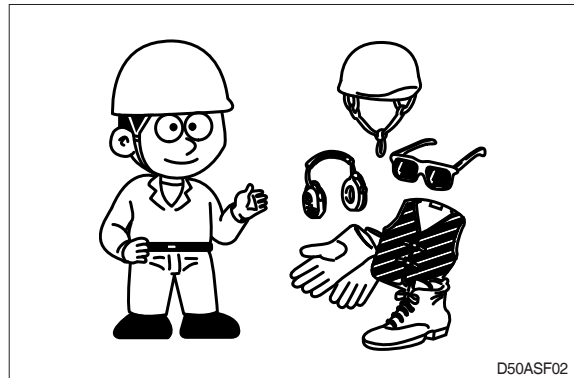

- Flames should never be used instead of lamps. Never use a naked flame to check leaks or the level of oil or electrolyte.

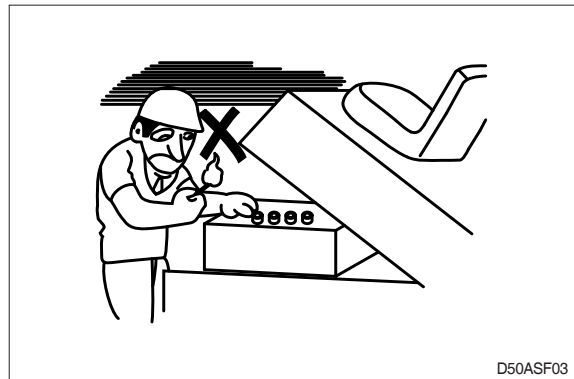


- Exhaust gas is dangerous. Provide adequate ventilation when working a closed space.

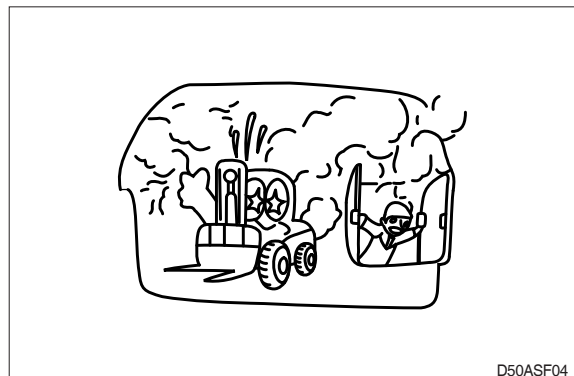

▲ Be particularly careful when removing the radiator cap and the hydraulic oil tank filler cap, if this is done immediately after using the machine, there is a danger that boiled oil may spurt out.

- The procedure for releasing the hydraulic pressure is as follows : lower the fork to the ground, and stop the engine(Motor), move the control levers to each position two or three times.

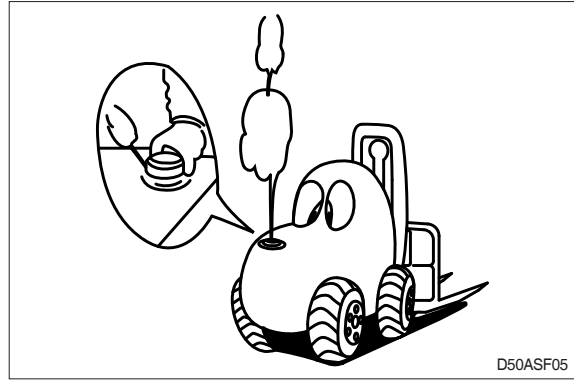

- When working on top of the machine, be careful not to lose your balance and fall.



- Hand a caution sign in the operator's compartment (For example **Do not start** or **Maintenance in progress**).

This will prevent anyone from starting or moving the machine by mistake.


▲ It is extremely dangerous to try to check the fan belt tension while the engine is running.




When inspecting running parts or near such parts, always stop the machine first.

Before checking or servicing accumulator or piping, depress brake pedal repeatedly to release pressure.


- Park the machine on firm, flat ground.
Lower the fork to the ground and stop the engine.
Return each lever to **NEUTRAL** and apply the brake lock.

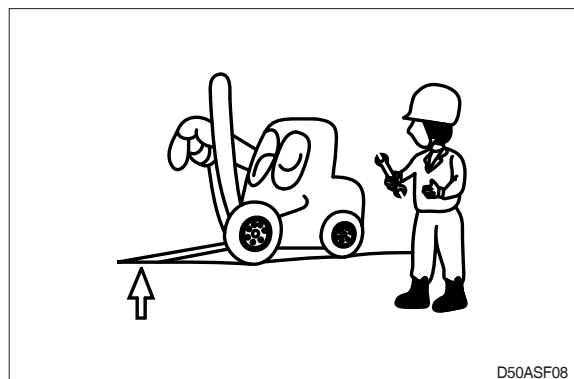

- Immediately remove any oil or grease on the floor of the operator's compartment, or on the handrail. It is very dangerous if someone slips while on the machine.

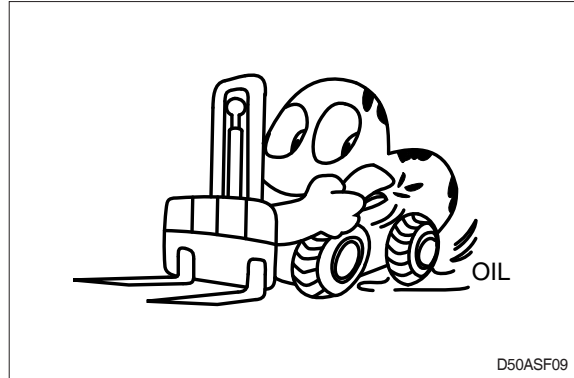

- When working with others, choose a group leader and work according to his instructions. Do not perform any maintenance beyond the agreed work.

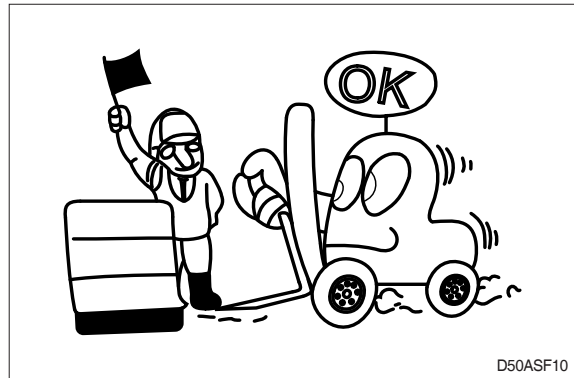

- Unless you have special instructions to the contrary, maintenance should always be carried out with the engine stopped. If maintenance is carried out with the engine running, there must be two men present : one sitting in the operator's seat and the other one performing the maintenance. In such a case, never touch any moving part.




- Always remember that the hydraulic oil circuit is under pressure. When feeding or draining the oil or carrying out inspection and maintenance, release the pressure first.

- Thoroughly clean the machine. In particular, be careful to clean the filler caps, grease fittings and the area around the dipsticks. Be careful not to let any dirt or dust into the system.
- Always use HYUNDAI Forklift genuine parts for replacement.
- Always use the grades of grease and oil recommended by HYUNDAI Forklift.
Choose the viscosity specified for the ambient temperature.
- Always use pure oil or grease, and be sure to use clean containers.
- When checking or changing the oil, do it in a place free of dust, and prevent any dirt from getting into the oil.
- Before draining the oil, warm it up to a temperature of 30 to 40°C.
- After replacing oil, filter element or strainer, bleed the air from circuit.
- When the strainer is located in the oil filler, the strainer must not be removed while adding oil.
- When changing the oil filter, check the drained oil and filter for any signs of excessive metal particles or other foreign materials.
- When removing parts containing O-ring, gaskets or seals, clean the mounting surface and replace with new sealing parts.
- After injecting grease, always wipe off the oil grease that was forced out.
- Do not handle electrical equipment while wearing wet places, as this can cause electric shock.
- During maintenance do not allow any unauthorized person to stand near the machine.
- Be sure you fully understand the contents of the operation. It is important to prepare necessary tools and parts and to keep the operating area clean.
- When checking an open gear case there is a risk of dropping things in. Before removing the covers to inspect such cases, empty everything from your pockets. Be particularly careful to remove wrenches and nuts.
- Way to use dipstick
Push the dipstick fully into the guide, and then pull out.

Carrying out other difficult maintenance work carelessly can cause unexpected accidents. If you consider the maintenance is too difficult, always request the HYUNDAI Forklift distributor to carry out it.

GROUP 2 SPECIFICATIONS


1. GENERAL LOCATIONS

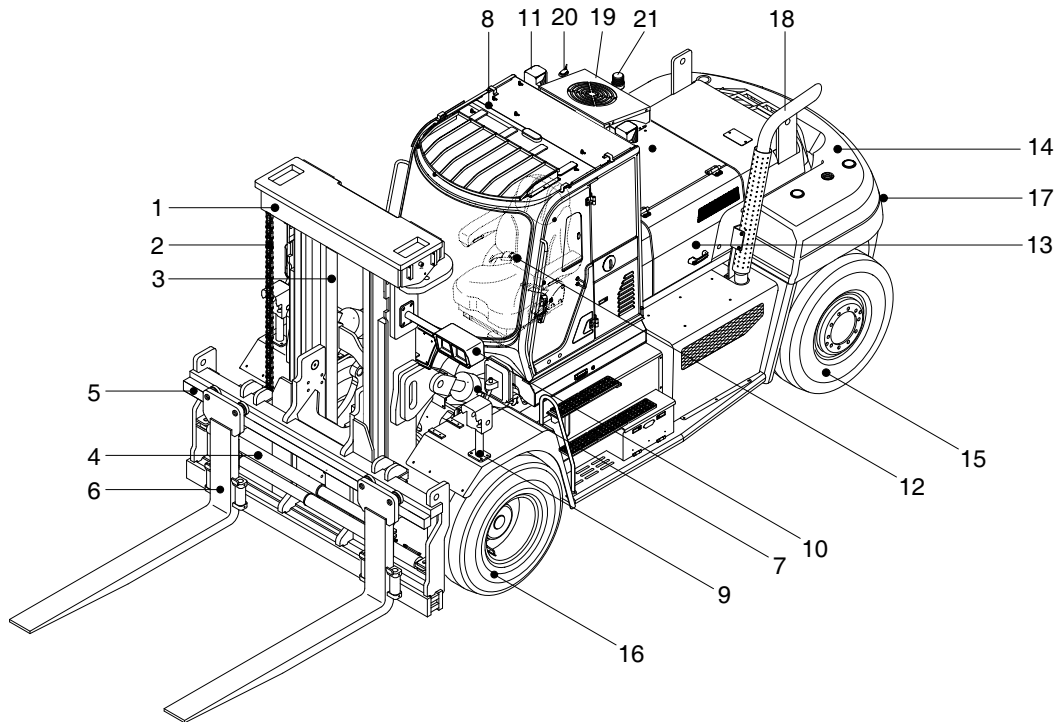

180D9VOM54

1	Mast	8	Cabin	15	Rear wheel
2	Lift chain	9	Head lamp-fender	16	Front wheel
3	Lift cylinder	10	Work lamp-mast	17	Combination lamp
4	Fork positioner cylinder	11	Rear work lamp	18	Silencer
5	Carriage	12	Operator's seat	19	Air conditioner (opt)
6	Forks	13	Engine hood	20	Mobile antenna (opt)
7	Tilt cylinder	14	Counterweight	21	Beacon lamp (opt)

2. SPECIFICATIONS

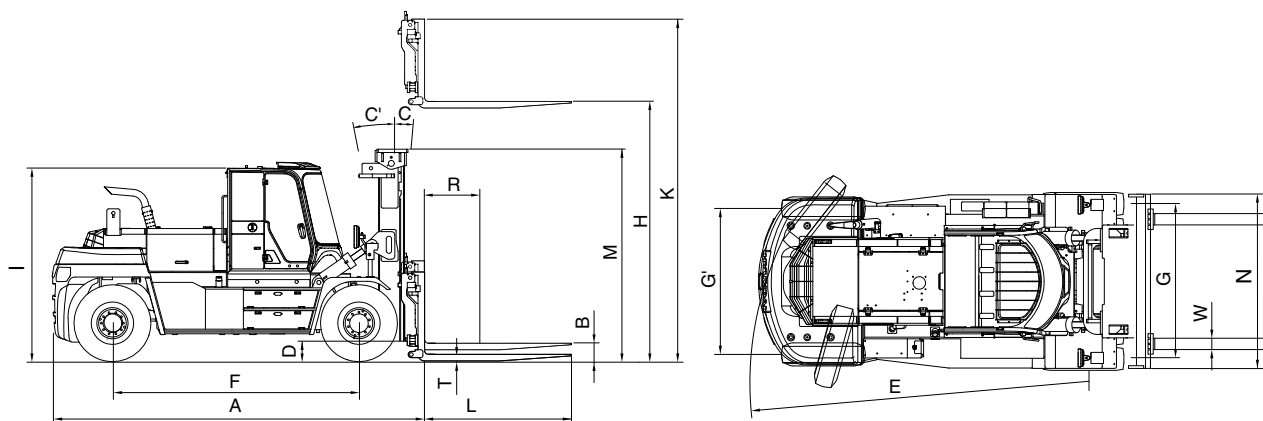

180D9VSP01

Model			Unit	180D-9V, 160D-9LV (EU)
Capacity			kg (lb)	18000 (40000)
Load center		R	mm (in)	900 (38)
Weight (Unloaded)			kg (lb)	25607 (56450)
Fork	Lifting height	H	mm (ft·in)	3320 (10' 11")
	Free lift	B	mm (ft·in)	0
	Lifting speed (Unload/Load)		mm/sec	380/400
	Lowering speed (Unload/Load)		mm/sec	400/500
	L × W × T	L, W, T	mm (in)	2450 × 250 × 100 (100 × 9.8 × 3.9)
Mast	Tilt angle (forward/backward)	C/C'	degree	10/10
	Max height	K	mm (ft·in)	4960 (16' 3")
	Min height	M	mm (ft·in)	3350 (11' 0")
Body	Travel speed (Unload)		km/h	38.4
	Gradeability (Load)		degree (%)	18.2 (32.9)
	Min turning radius (Outside)	E	mm (ft·in)	5220 (18' 1")
ETC	System set pressure		kgf/cm ²	240
	Hydraulic oil tank		ℓ (U.S.gal)	See operator manual 7-61.
	Fuel tank		ℓ (U.S.gal)	260 (68.7)
Overall length		A	mm (ft·in)	5595 (18' 4")
Overall width		N	mm (ft·in)	2540 (8' 4")
Cabin height		I	mm (ft·in)	2990 (9' 10")
Ground clearance (Mast)		D	mm (in)	245 (9.6)
Wheel base		F	mm (ft·in)	3750 (12' 4")
Wheel tread front/rear		G/G'	mm (ft·in)	1860/2300 (6' 1" / 7' 7")

3. SPECIFICATION FOR MAJOR COMPONENTS

1) ENGINE

Item	Unit	Specification
Model	—	Cummins B6.7
Type	—	4 cycle turbocharged, charger air cooled diesel engine
Cooling Method	—	Water cooling
Number of cylinders and arrangement	—	6 cylinders, In-line
Firing order	—	1-5-3-6-2-4
Combustion chamber type	—	Direct injection
Cylinder bore X stroke	mm (in)	107 × 124 mm (4.21" × 4.88")
Piston displacement	cc (cu in)	6690 (409)
Compression ratio	—	17.3:1
Rated gross horse power	ps/rpm	284.2/2200
Maximum gross torque at rpm	kgf · m/rpm	131.4/1500
Engine oil quantity	ℓ (U.S.gal)	14.2 (3.8)
Dry weight	kg (lb)	583 (1282)
High idling speed	rpm	2230±50
Low idling speed	rpm	700~1200
Rated fuel consumption	g/ps.hr	151.5
Starting motor	V-kW	DENSO, 24-7.5
Alternator	V-A	24-70
Battery	V-AH	24-100

2) MAIN PUMP

Item	Unit	Specification
Type	—	Axial piston variable pump
Capacity	cc/rev	72+72
Maximum operating pressure	bar	300
Rated speed (Max/Min)	rpm	2550/500

3) MAIN CONTROL VALVE

Item		Unit	Specification
Type		—	Sectional
Operating method		—	Hydraulic pilot
Lift section	Max flow	lpm	350
	Max pressure	bar	220
	Relief pressure	bar	220
Tilt section	Max flow	lpm	200
	Max pressure	bar	220
	Relief pressure	bar	220
Aux section	Max flow	lpm	220
	Relief pressure	bar	195

4) STEERING UNIT

Item	Unit	Specification
Type	—	Load sensing/Non load reaction/Dynamic signal
Capacity	cc/rev	520

5) POWER TRAIN DEVICES

Item			Specification		
Torque converter	Model		W340, 1.773/271 (ZF SACH)		
	Type		3 Element, 1 stage, 2 phase		
	Stall ratio		1.773 : 1		
Transmission	Type		Full auto, power shift		
	Gear shift(FWD/REV)		3/3		
	Adjustment		Electrical single lever type		
	Overhaul ratio	FR	1 : 5.683	2 : 2.304	3 : 0.963
		RR	1 : 5.041	2 : 2.044	3 : 0.854
Axle	Type		Front-wheel drive type, fixed location		
	Gear ratio		11.73 : 1		
	Gear		Ring & pinion gear type		
Wheels	Q'ty(FR/RR)		Double : 4/2		
	Front(drive)		12.00 R20		
	Rear(steer)		12.00 R20		
Brakes	Travel		Front wheel, wet disc brake		
	Parking		Axle pinion, hydraulic released caliper brake		
Steering	Type		Full hydraulic, power steering		
	Steering angle		71.9° to both right and left angle, respectively		

4. TIGHTENING TORQUE FOR MAJOR COMPONENTS

NO	Item		Size	kgf · m	lbf · ft
1	Engine	Engine mounting bolt, nut (bracket-frame)	M24×3.0	100±15	723±109
		Engine mounting bolt, nut (engine-bracket)	M12×1.75	12.8±3.0	93±21.7
		2	Radiator mounting bolt, nut	M12×1.75	12.8±3.0
3	Hydraulic system	Hydraulic pump mounting bolt	M12×1.75	12.8±3.0	93±21.7
4		MCV mounting bolt, nut	M12×1.75	14.7±2.2	106±15.9
5		Steering unit mounting bolt	M10×1.5	4.0±0.5	28.9±3.6
6		Tilt cylinder; rod-end bolt, nut	M14×2.0	19.6±4.0	142±28.9
7	Power train system	Transmission mounting bolt, nut	M20×2.5	100±15	723±108
8		Torque converter mounting bolt	M10×1.5	4.5±0.6	32.5±4.3
9		Drive axle mounting bolt, nut	M24×3.0	100±15	723±108
10		Steering axle mounting bolt, nut	M24×3.0	100±15	723±108
11		Front wheel mounting nut	M22×1.5	84±12	608±86.8
12		Propeller shaft(To T/M)	M12×1.5	15±2	108±14.5
		Propeller shaft(To D/Axle)	M12×1.75	12.3±2.5	89±18.1
13	Others	Counterweight mounting bolt 1	M30×3.5	199±29.9	1439±216
		Counterweight mounting bolt 2	M24×3.0	100±15	723±108
14		Operator's seat mounting nut	M 8×1.25	3.4±0.7	24.6±5.1
15		Cab mounting nut	M16×2.0	29.7±4.5	215±32.5
16		Mast mounting bolt	M14×2.0	19.6±2.9	142±21.0

5. TORQUE CHART

Use following table for unspecified torque.

1) BOLT AND NUT

(1) Coarse thread

Bolt size	8T		10T	
	kg · m	lb · ft	kg · m	lb · ft
M 6 × 1.0	0.85 ~ 1.25	6.15 ~ 9.04	1.14 ~ 1.74	8.2 ~ 12.6
M 8 × 1.25	2.0 ~ 3.0	14.5 ~ 21.7	2.73 ~ 4.12	19.5 ~ 29.8
M10 × 1.5	4.0 ~ 6.0	28.9 ~ 43.4	5.5 ~ 8.3	39.8 ~ 60
M12 × 1.75	7.4 ~ 11.2	53.5 ~ 79.5	9.8 ~ 15.8	71 ~ 114
M14 × 2.0	12.2 ~ 16.6	88.2 ~ 120	16.7 ~ 22.5	121 ~ 167
M16 × 2.0	18.6 ~ 25.2	135 ~ 182	25.2 ~ 34.2	182 ~ 247
M18 × 2.5	25.8 ~ 35.0	187 ~ 253	35.1 ~ 47.5	254 ~ 343
M20 × 2.5	36.2 ~ 49.0	262 ~ 354	49.2 ~ 66.6	356 ~ 482
M22 × 2.5	48.3 ~ 63.3	350 ~ 457	65.8 ~ 98.0	476 ~ 709
M24 × 3.0	62.5 ~ 84.5	452 ~ 611	85.0 ~ 115	615 ~ 832
M30 × 3.0	124 ~ 168	898 ~ 1214	169 ~ 229	1223 ~ 1655
M36 × 4.0	174 ~ 236	1261 ~ 1703	250 ~ 310	1808 ~ 2242

(2) Fine thread

Bolt size	8T		10T	
	kg · m	lb · ft	kg · m	lb · ft
M 8 × 1.0	2.17 ~ 3.37	15.7 ~ 24.3	3.04 ~ 4.44	22.0 ~ 32.0
M10 × 1.25	4.46 ~ 6.66	32.3 ~ 48.2	5.93 ~ 8.93	42.9 ~ 64.6
M12 × 1.25	7.78 ~ 11.58	76.3 ~ 83.7	10.6 ~ 16.0	76.6 ~ 115
M14 × 1.5	13.3 ~ 18.1	96.2 ~ 130	17.9 ~ 24.1	130 ~ 174
M16 × 1.5	19.9 ~ 26.9	144 ~ 194	26.6 ~ 36.0	193 ~ 260
M18 × 1.5	28.6 ~ 43.6	207 ~ 315	38.4 ~ 52.0	278 ~ 376
M20 × 1.5	40.0 ~ 54.0	289 ~ 390	53.4 ~ 72.2	386 ~ 522
M22 × 1.5	52.7 ~ 71.3	381 ~ 515	70.7 ~ 95.7	512 ~ 692
M24 × 2.0	67.9 ~ 91.9	491 ~ 664	90.9 ~ 123	658 ~ 890
M30 × 2.0	137 ~ 185	990 ~ 1338	182 ~ 248	1314 ~ 1795
M36 × 3.0	192 ~ 260	1389 ~ 1879	262 ~ 354	1893 ~ 2561

2) PIPE AND HOSE (FLARE TYPE)

Hose size	Thread (PF)	Hex. across flat (mm)	Tightening torque	
			kgf·m	lbf·ft
1/4"	1/4	19	4	28.9
3/8"	3/8	22	5	36.2
1/2"	1/2	27	9.5	68.7
3/4"	3/4	36	18	130.2
1"	1	41	21	151.9
1-1/4"	1-1/4	50	35	253.2

3) PIPE AND HOSE (ORFS TYPE)

Hose size	Thread (UN/UNF/UNS)	Hex. across flat (mm)	Tightening torque	
			kgf·m	lbf·ft
1/4"	9/16-18	19	3	21.7
3/8"	11/16-16	22	5	36.2
1/2"	13/16-16	24	7	50.6
5/8"	1-14	30	12	86.8
3/4"	1-3/16-12	36	18	130.2
1"	1-7/16-12	41	23	166.4
1-1/4"	1-11/16-12	50	28	202.5
1-1/2"	2-12	58	32	231.1

4) FITTING (O-RING SEAL TYPE)

Hose size	Thread (UN/UNF)	Hex. across flat (mm)	Tightening torque	
			kgf·m	lbf·ft
1/4"	7/16-20	17	2	14.5
3/8"	9/16-18	19	3	21.7
1/2"	3/4-16	22	4	28.9
		24	6	43.4
5/8"	7/8-14	27	10	72.3
		30	12	86.8
3/4"	1-1/16-12	32	15	108.5
		36	18	130.2
1"	1-5/16-12	41	23	166.4
1-1/4"	1-5/8-12	50	28	202.5
1-1/2"	1-7/8-12	55	32	231.5

5) BAND CLAMP

Tag No.	Hose size (mm)	Band width (mm)	Tightening torque	
			kgf·m	lbf·ft
S20-15	8 ~ 14	9	0.3	2.17
S20-17	11 ~ 17			
S20-22	13 ~ 20		0.35	2.53
S20-25	15 ~ 24			
S20-28	19 ~ 28			
S20-32	22 ~ 32	12	0.42	3.04
S20-40	26 ~ 38	9		
S20-45	32 ~ 44			

6) BAND CLAMP (IDEAL, FLEX GEAR TYPE)

Tag No.	Hose size (mm)	Band width (mm)	Tightening torque	
			kgf·m	lbf·ft
41-212	32 ~ 54	15.9	1.1	8.0
41-262	45 ~ 67			
41-312	57 ~ 79			
41-362	40 ~ 92			
41-412	83 ~ 105			
41-462	95 ~ 117			
41-512	108 ~ 130			

6. WRENCH AND SPANNER CHART

No.	Wrench & Spanner			Thread			PIPE AND HOSE	
	inch		mm	UNF/UN	M	PF/G	ORFS (UNF/UN)	FLARE (PF)
1	-	0.050	1.3	-	-	-	-	-
2	-	0.059	1.5	-	-	-	-	-
3	1/16	0.063	1.6	-	-	-	-	-
4	5/64	0.078	2	-	-	-	-	-
5	3/32	0.094	2.4	-	-	-	-	-
6	-	0.098	2.5	-	-	-	-	-
7	7/64	0.109	2.8	-	-	-	-	-
8	-	0.118	3	-	-	-	-	-
9	1/8	0.125	3.2	-	-	-	-	-
10	9/64	0.141	3.5	-	-	-	-	-
11	5/32	0.156	4	-	-	-	-	-
12	-	0.177	4.5	-	-	-	-	-
13	3/16	0.188	4.8	-	-	-	-	-
14	-	0.197	5	-	-	-	-	-
15	13/64	0.203	5.2	-	-	-	-	-
16	7/32	0.219	5.5	-	-	-	-	-
17	15/64	0.234	6	-	-	-	-	-
18	1/4	0.250	6.4	-	-	-	-	-
19	17/64	0.266	6.8	-	-	-	-	-
20	9/32	0.281	7	-	-	-	-	-
21	5/16	0.313	8	-	-	-	-	-
22	11/32	0.344	8.7	-	-	-	-	-
23	-	0.354	9	-	-	-	-	-
24	3/8	0.375	9.5	-	-	-	-	-
25	-	0.394	10	-	-	-	-	-
26	-	-	11	-	-	-	-	-
27	7/16	0.438	11.1	-	-	-	-	-
28	15/32	0.469	12	-	-	-	-	-
29	1/2	0.500	12.7	-	-	-	-	-
30	-	-	13	-	-	-	-	-
31	17/32	0.53	13.5	-	-	-	-	-
32	-	0.55	14	7/16-20	-	-	-	-
33	9/16	0.56	14.3	-	-	-	-	-
34	19/32	0.59	15	-	-	-	-	-
35	5/8	0.63	15.9	-	-	-	-	-
36	-	-	16	-	-	-	-	-
37	21/32	0.66	16.7	-	-	-	-	-

No.	Wrench & Spanner			Thread			PIPE AND HOSE	
	inch		mm	UNF/UN	M	PF/G	ORFS (UNF/UN)	FLARE (PF)
38	-	-	17	-	M12	-	-	-
39	11/16	0.69	17.5	-	-	-	-	-
40	-	-	18	-	-	-	-	-
41	3/4	0.75	19	9/16-18	M14	G1/4	9/16-18	PF1/4
42	25/32	0.78	19.8	-	-	-	-	-
43	-	-	20	-	-	-	-	-
44	13/16	0.81	20.6	-	-	-	-	-
45	-	-	21	-	-	-	-	-
46	-	-	22	-	M16	G3/8	11/16-16	PF3/8
47	7/8	0.88	22.2	-	-	-	-	-
48	29/32	0.91	23	-	-	-	-	-
49	15/16	0.94	23.8	-	-	-	-	-
50	-	-	24	3/4-16	M18	-	13/16-16	-
51	31/32	0.97	26.4	-	-	-	-	-
52	-	-	25	-	-	-	-	-
53	1	1.00	25.4	-	-	-	-	-
54	-	-	26	-	-	-	-	-
55	1 1/16	1.06	27	7/8-14	M22	G1/2	-	PF1/2
56	-	-	28	-	-	-	-	-
57	1 1/8	1.13	28.6	-	-	-	-	-
58	-	-	29	-	-	-	-	-
59	-	-	30	-	-	-	1-14	-
60	1 3/16	1.19	30.2	-	-	-	-	-
61	-	-	31	-	-	-	-	-
62	1 1/4	1.25	31.8	-	-	-	-	-
63	-	-	32	1-1/16-12	M24	G3/4	-	-
64	-	-	33	-	-	-	-	-
65	1 5/16	1.31	33.3	-	-	-	-	-
66	-	-	34	-	-	-	-	-
67	1 3/8	1.38	35	-	-	-	-	-
68	-	-	36	1-3/16-12	M27	G3/4	1-3/16-12	PF3/4
69	1 7/16	1.44	37	-	-	-	-	-
70	1 1/2	1.50	38	-	-	-	-	-
71	-	-	39	-	-	-	-	-
72	1 9/16	1.56	39.7	-	-	-	-	-
73	-	-	40	-	-	-	-	-
74	-	-	41	1-5/16-12	M33	G1	1-7/16-12	PF1
75	1 5/8	1.63	41.3	-	-	-	-	-

No.	Wrench & Spanner			Thread			PIPE AND HOSE	
	inch		mm	UNF/UN	M	PF/G	ORFS (UNF/UN)	FLARE (PF)
76	1 11/16	1.69	43	-	-	-	-	-
77	1 3/4	1.75	44	-	-	-	-	-
78	1 13/16	1.81	46	-	-	-	-	-
79	1 7/8	1.88	47.6	-	-	-	-	-
80	-	-	48	-	-	-	1-11/16-12	-
81	1 15/16	1.94	49.2	-	-	-	-	-
82	-	-	50	1-5/8-12	-	G1-1/4	-	PF1-1/4
83	2	2.00	50.8	-	-	-	-	-
84	-	-	51	-	-	-	-	-
85	2 1/8	2.13	54	-	-	-	-	-
86	-	-	55	1-7-8-12	-	G1-1/2	-	PF1-1/2
87	-	-	57	-	-	-	2-12	-
88	2 1/4	2.25	57.2	-	-	-	-	-
89	-	-	60	-	-	-	-	-

7. RECOMMENDED LUBRICANTS

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C(°F)								
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)
Engine oil pan	Engine oil	14.2 (3.8)	★SAE 5W-40								
			SAE 30								
			SAE 10W								
			SAE 10W-30								
			SAE 15W-40								
DEF/AdBlue® tank	Mixture of urea and deionized water	53.9 (14.4)	ISO 22241 (High-purity urea + deionized water (32.5:67.5))								
Torque converter transmission	Transmission oil	32 (8.5)	SAE 10W-30								
			SAE 15W-40								
Axle brake	Gear oil	19+1.7×2 (5.0+0.4×2)	SAE 80W-90/API GL-5								
	Cooling	19 (5.0)	Shell Donax TD or Hyundai Oil Bank Xteer THF 75W80								
Hydraulic tank	Hydraulic oil	Simplex mast (std) 220 (58.1) Triplex mast 238 (62.9)	★ISO VG 15								
			★ISO VG 32								
Cabin tilt hand pump	Hydraulic oil	0.7 (0.2)	ISO VG 46								
			ISO VG 68								
Fuel tank	Diesel fuel★ ¹	260 (68.7)	★ASTM D975 NO.1								
			ASTM D975 NO.2								
Fitting (Grease nipple)	Grease	-	★NLGI NO.1								
			NLGI NO.2								
Radiator	Antifreeze : soft water★ ²	40 (10.7)	★Ethylene glycol base permanent type (60 : 40)								
			Ethylene glycol base permanent type (50:50)								

NOTES :

- ① SAE numbers given to engine oil should be selected according to ambient temperature.
- ② For engine oil used in engine oil pan, use SAE 10W oil when the temperature at the time of engine start up is below 0°C, even if the ambient temperature in daytime is expected to rise to 10°C or more.
- ③ Use engine oil of API service class CK-4.

★ : Cold region

Russia, CIS, Mongolia

★¹ : Ultra low sulfur diesel

- sulfur content ≤ 15 ppm


★² : Soft water

City water or distilled water

GROUP 3 OPERATIONAL CHECKOUT RECORD SHEET

·Owner :
 ·Date :
 ·Hours :
 ·Serial No. :
 ·Technician :

□ Use this sheet to record operational checkout results.
 Perform the operational check before installing any test equipment.

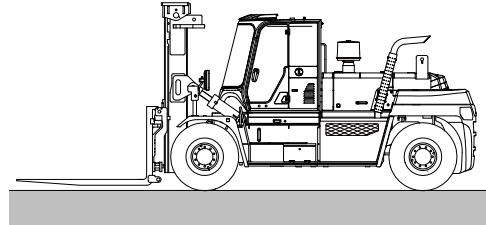

180D9VGE02

Item	OK	NOT OK	Comments
------	----	-----------	----------

1. Monitor indicator and gauge checks (Engine OFF)

- Hour meter and gauge check _____
- Battery check _____
- Monitor indicator circuit check _____
- Monitor turn signals and warning indicator check _____

2. Transmission, axle and engine linkages, neutral start switch and reverse warning alarm switch checks

- Transmission control lever and neutral _____
- Neutral start and reverse warning _____
- Alarm circuit checks _____
- Engine speed control linkage check _____

3. Monitor indicator and gauge checks (Engine running)

- Monitor display and alternator output checks _____
- Monitor bypass circuit and seat belt indicator check _____
- Monitor primary and secondary level check _____
- Transmission oil warm up procedure _____
- Transmission temperature gauge check _____

4. Brake system and clutch cut off checks

- Park brake capacity check
- Park brake transmission lockout check
- Service brake pump flow check
- Service brake capacity check
- Brake accumulator precharge check
- Brake system leakage check
- Service brake pedal check
- Service and park brake system drag check
- Clutch cut off check

5. Driving checks

- Transmission oil warm up procedure
- Transmission noise check
- Speedometer check
- Transmission kick down system check
- 1st, 2nd and 3rd speed clutch pack drag check
- Transmission pressure, pump flow and leakage check
- Transmission shift modulation check
- Torque converter check
- Engine power check

6. Hydraulic system checks

- Hydraulic system warm up procedure
- Hydraulic pump performance check
- Mast lift and lower check
- Control valve lift check
- Mast tilt check
- Fork positioner check
- Down safety valve leakage check
- Lift, tilt and steering cylinder check
- Side shift piping leakage check
- Hydraulic oil cleanliness check

7. Steering system checks

- Steering valve check _____
- Steering system leakage check _____
- Priority valve (built in MCV) _____
- Low check pressure _____
- High check pressure _____

8. Accessory checks

- Operating lights check _____
- Work light check _____
- Brake light check _____
- Cab light check _____
- Horn circuit check _____
- Windshield washer and wiper check _____
- Heater/Air conditioner blower check _____
- Heater functional check _____
- Air conditioner functional check _____
- Start aid system check _____

9. Cab components and vandal protection checks

- Cab door latch check _____
- Cab door hold open latch check _____
- Cab door release button check _____
- Cab door lock check _____
- Cab door window check _____
- Cab window latch check _____
- Steering column adjustment check _____
- Seat and seat belt check _____
- Air intake filter door check _____
- Engine side panels check _____
- Radiator cap access door check _____
- Service decal check _____