

## SECTION 1 GENERAL

Group 1	Safety hints .....	1-1
Group 2	Specifications .....	1-4
Group 3	Periodic replacement .....	1-16


## GROUP 1 SAFETY HINTS

Careless performing of the easy work may cause injuries.


Take care to always perform work safely, at least observing the following.

- Oil is a dangerous substance. Never handle oil, grease or oily clothes in places where there is any fire or flame.


As preparation in case of fire, always know the location and directions for use of fire extinguishers and other fire fighting equipment.

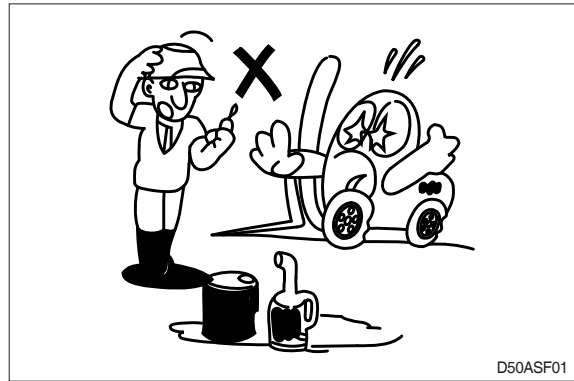

- Wear well-fitting helmet, safety shoes and working clothes. When drilling, grinding or hammering, always wear protective goggles. Always do up safety clothes properly so that they do not catch on protruding parts of machines. Do not wear oily clothes. When checking, always release battery plug.

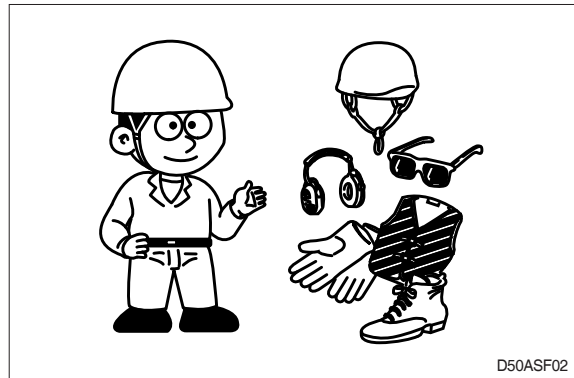


- Flames should never be used instead of lamps. Never use a naked flame to check leaks or the level of oil or electrolyte.

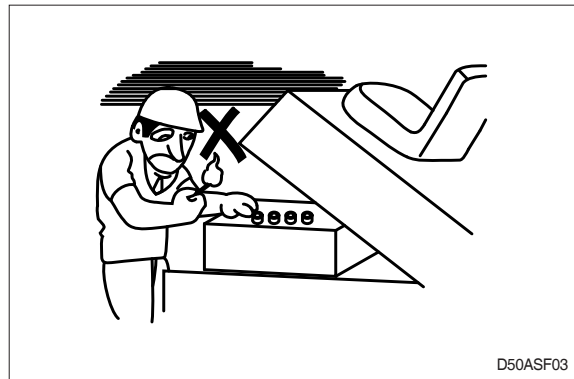

- When working on top of the machine, be careful not to lose your balance and fall.




- Hand a caution sign in the operator's compartment (For example **Do not start or Maintenance in progress**).  
This will prevent anyone from starting or moving the machine by mistake.

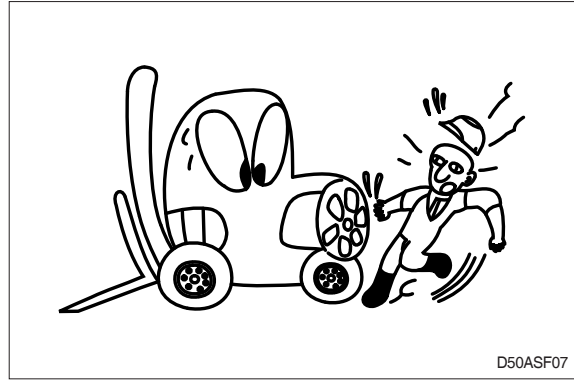

D50ASF07


When inspecting running parts or near such parts, always stop the machine first.  
Before checking or servicing accumulator or piping, depress brake pedal repeatedly to release pressure.

- Park the machine on firm, flat ground.  
Lower the fork to the ground and stop the engine.  
Return each lever to **NEUTRAL** and apply the brake lock.

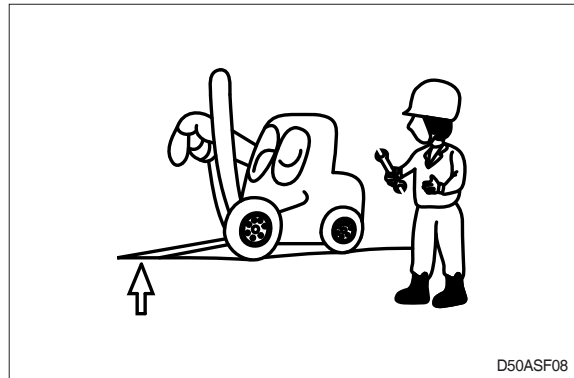


D50ASF08

- Immediately remove any oil or grease on the floor of the operator's compartment, or on the handrail. It is very dangerous if someone slips while on the machine.

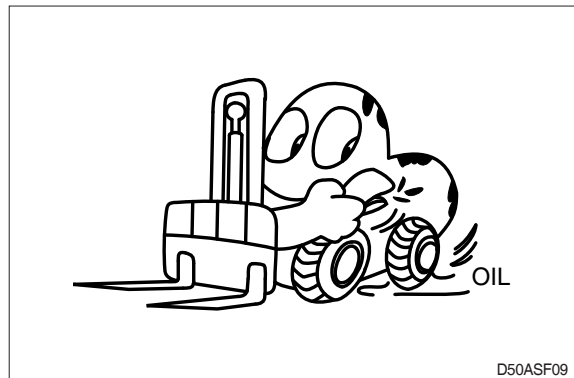

D50ASF09

- When working with others, choose a group leader and work according to his instructions. Do not perform any maintenance beyond the agreed work.

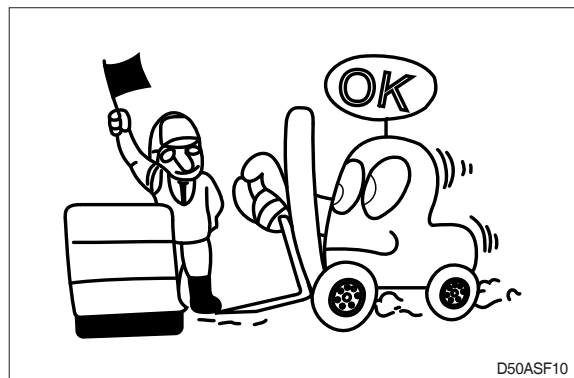

D50ASF10

- Always remember that the hydraulic oil circuit is under pressure. When feeding or draining the oil or carrying out inspection and maintenance, release the pressure first.




- Unless you have special instructions to the contrary, maintenance should always be carried out with the machine stopped. If maintenance is carried out with the machine running, there must be two men present : one sitting in the operator's seat and the other one performing the maintenance. In such a case, never touch any moving part.
- Thoroughly clean the machine. In particular, be careful to clean the filler caps, grease fittings and the area around the dipsticks. Be careful not to let any dirt or dust into the system.
- Always use HYUNDAI Forklift genuine parts for replacement.
- Always use the grades of grease and oil recommended by HYUNDAI Forklift. Choose the viscosity specified for the ambient temperature.
- Always use pure oil or grease, and be sure to use clean containers.
- When checking or changing the oil, do it in a place free of dust, and prevent any dirt from getting into the oil.
- Before draining the oil, warm it up to a temperature of 30 to 40°C.
- After replacing oil, filter element or strainer, bleed the air from circuit.
- When the strainer is located in the oil filler, the strainer must not be removed while adding oil.
- When changing the oil filter, check the drained oil and filter for any signs of excessive metal particles or other foreign materials.
- When removing parts containing O-ring, gaskets or seals, clean the mounting surface and replace with new sealing parts.
- After injecting grease, always wipe off the oil grease that was forced out.
- Do not handle electrical equipment while wearing wet places, as this can cause electric shock.
- During maintenance do not allow any unauthorized person to stand near the machine.
- Be sure you fully understand the contents of the operation. It is important to prepare necessary tools and parts and to keep the operating area clean.
- When checking an open gear case there is a risk of dropping things in. Before removing the covers to inspect such cases, empty everything from your pockets. Be particularly careful to remove wrenches and nuts.
- Way to use dipstick  
Push the dipstick fully into the guide, and then pull out.

Carrying out other difficult maintenance work carelessly can cause unexpected accidents. If you consider the maintenance is too difficult, always request the HYUNDAI Forklift distributor to carry out it.

## GROUP 2 SPECIFICATIONS


### 1. GENERAL LOCATIONS

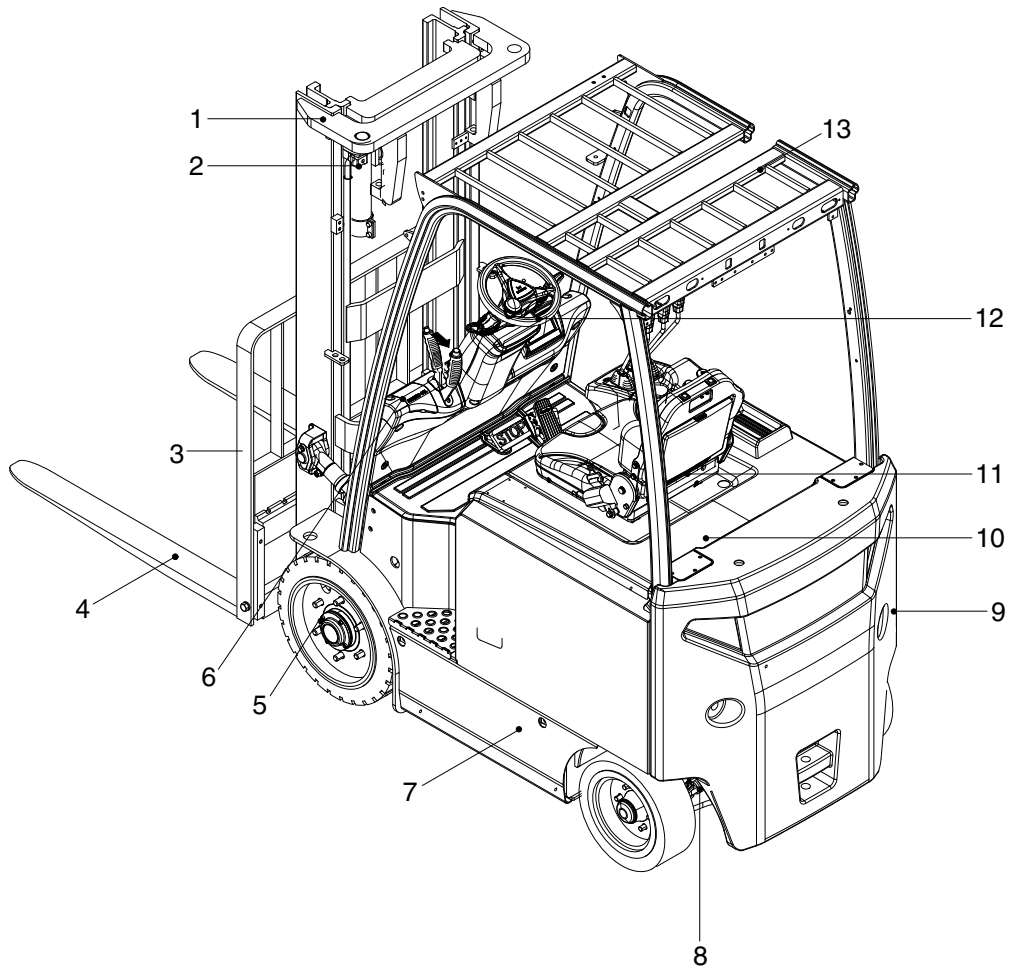

25BC9U0M0701

- |                         |                  |                   |
|-------------------------|------------------|-------------------|
| 1 Mast                  | 6 Dash board     | 11 Seat           |
| 2 Lift cylinder         | 7 Frame          | 12 Steering wheel |
| 3 Carriage and backrest | 8 Steering axle  | 13 Overhead guard |
| 4 Forks                 | 9 Counterweight  |                   |
| 5 Drive unit            | 10 Battery cover |                   |

## 2. SPECIFICATIONS

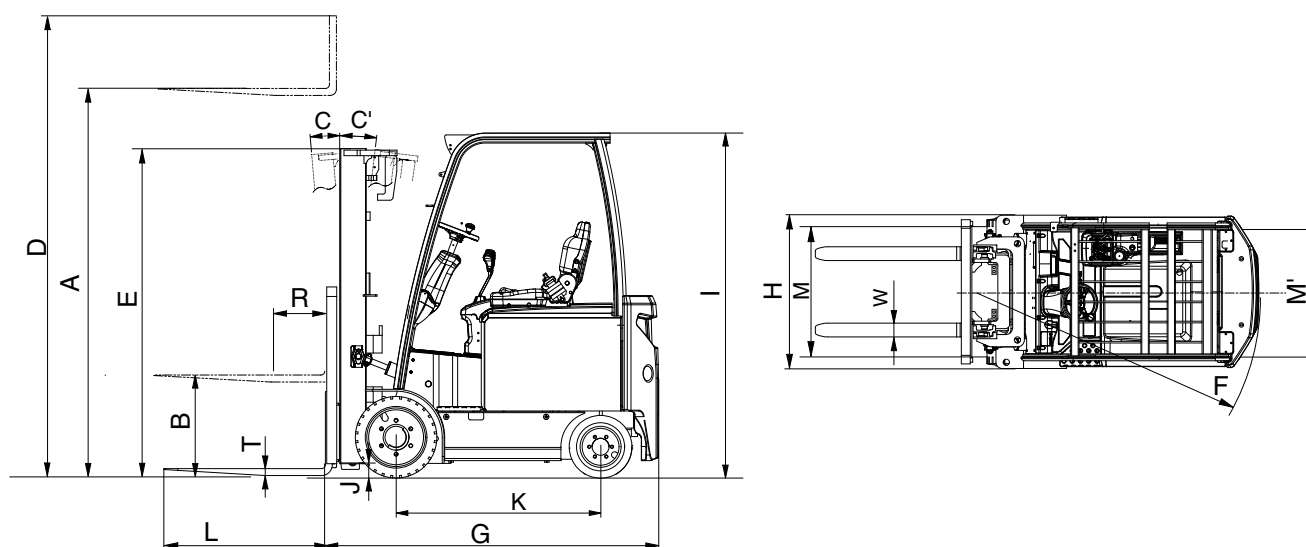

25BC9UQM0801A

Model			Unit	25BC-9U	30BC-9U	32BC-9U
Capacity			kg (lb)	2500 (5000)	3000 (6000)	3200 (6500)
Load center		R	mm (in)	500 (24)	←	←
Weight			kg (lb)	4456 (9824)	4953(10913)	5177(11413)
Fork	Lifting height	A	mm (in)	3300(130)	←	←
	Free lift	B	mm (in)	115(4.5)	←	←
	Lifting speed (Loaded/Unloaded)		mm/sec	430/640	360/530	←
			ft/min	84.6/126	70.9/104.3	←
	Lowering speed (Loaded/Unloaded)		mm/sec	500/450	←	←
			ft/min	98.4/88.6	←	←
	LxWxT	L,W,T	mm (inch)	1050×100×45 (41.3"×3.9"×1.8")	1050×122×45 (41.3"×4.8"×1.8")	←
Mast	Tilt angle forward/backward	C/C'	degree	6/8	←	←
	Max height	D	mm (in)	4495 (177")	←	←
	Min height	E	mm (in)	2135 (84')	←	2205 (87")
Body	Travel speed (Loaded/Unload)		km/h	15 / 17	←	←
			mph	9.3 / 10.6	←	←
	Max. gradient performance,loaded		%	19.6	17.2	16
	Min turning radius (Outside)	F	mm(in)	1893 (74.52")	1983 (78.07")	2005 (78.93")
ETC	Max hydraulic pressure		kgf/cm <sup>2</sup> /psi	210 / 3045	←	←
	Hydraulic oil tank		l(usgal)	38 (10)	←	←
Overall length		G	mm (in)	3215 (127)	3310 (130)	3335 (131)
Overall width		H	mm (in)	1112 (44)	1114 (44)	1114 (44)
Overhead guard height		I	mm (in)	2241 (88")	←	←
Ground clearance (Mast)		J	mm (in)	90 (3.5")	←	←
Wheel base		K	mm (in)	1330 (52)	1400 (55)	←
Wheel tread (front/rear)		M	mm (in)	896/910 (35.3/35.8)	911/910 (35.9/35.8)	←

### 3. SPECIFICATION FOR MAJOR COMPONENTS

#### 1) CONTROLLER

Item	Unit	Traction	Pump
Model	-	CURTIS 1236E-5621	←
Type	-	AC	←
Dimension	mm	244(L) × 165(W) × 134.7(H)	←
Current limit	A	600	←
Communication	-	CAN	←

#### 2) MOTOR

Item	Unit	Traction	Pump
Type	-	ASRH 4002	AMDL 4001
Rated voltage	Vac	30	30
Output	kW	14	17
Insulation	-	Class F	Class F

#### 3) BATTERY

Item	Unit	25BC-9U	30/32BC-9U
Rated voltage	V	48	←
Compartment dimension (W × L × H)	mm	STD : 997 × 783 × 605 SBR : 997 × 783 × 571	STD : 997 × 883 × 605 SBR : 997 × 883 × 571
Min. Battery weight	kg	(W × L × H)	1360
Max. Battery weight	kg	1400	1600
Connector (CE spec)	-	SB 350 or SR 350	

#### 4) GEAR PUMP

Item	Unit	Specification
Type	-	Fixed displacement gear pump
Capacity	cc/rev	27.2
Maximum operating pressure	bar	230
Rated speed (max/min)	rpm	3000/500

## 5) MAIN CONTROL VALVE

Item	Unit	Specification
Type	-	3 spool, 4 spool
Operating method	-	Mechanical
Main relief valve pressure	kgf/cm <sup>2</sup>	210
2nd relief valve pressure	kgf/cm <sup>2</sup>	130

## 6) DRIVE AXLE UNIT

Item	Unit	Specification
Max axle load	kgf	9,000
Max input rpm	rpm	4,000
Gear ratio	—	20.5
Weight without fluid	kg/lb	200 / 441
Oil quantity	ℓ /U.S · qt	7 / 1.8

## 7) WHEELS

Item	25BC-9U	30/32BC-9U
Type (front/rear)	SOLID (OPT : NON-MARKING)	
Quantity (front/rear)	2/2	
Front-drive	21×7-15	21×8-15
Rear-steering	16×6×10.5	

## 8) BRAKES & STEERING

Item		Specification
Brakes	Travel	Front wheel, Hydraulic, Disc brake
	Parking	Mechanical
Steering	Type	Hydraulic steering



#### 4. TIGHTENING TORQUE FOR MAJOR COMPONENTS

NO	Items		Size	kgf·m	lbf·ft
1	Electric system	Hyd pump motor mounting nut	M 8×1.25	3.4±0.7	24.6±5.0
2		Traction motor mounting bolt	M12×1.75	10±1.5	72.3±10.8
3	Hydraulic system	Hydraulic pump mounting bolt	M10×1.5	6.9±1.4	50±10
4		MCV mounting bolt, nut	M10×1.5	6.9±1.4	50±10
5		Steering unit mounting bolt	M10×1.5	4.0	28.9
7		Brake cylinder mounting bolt	M 8×1.25	8±0.5	57.9±3.6
9	Power train system	Drive axle mounting bolt, nut	M20×2.5	55±2.0	398±14.0
10		Steering axle mounting bolt, nut	M20×2.5	58±3.0	419±21.7
11		Front wheel mounting nut	M20×1.5P	47±2.4	340±17.4
12		Rear wheel mounting nut	M16×1.5P	25±1.3	180.8±9.4
13	ETC	Counterweight mounting bolt	M24×3.0	100±15	723±108
14		Seat mounting nut	M 8×1.25	3.4±0.7	24.6±5.0
15		Head guard mounting bolt (front)	M12×1.75	12.8±3	92.5±21.5
16		Head guard mounting bolt (rear)	M16×2.0	29.7±4.5	215±32.5
17		Priority valve mounting bolt	M 6×1.0	1.0 ±0.5	7.2±3.6
18		Tilt cylinder rod-end bolt, nut	M12×1.75	9.5 ±0.5	69±3.6
19		Tilt cylinder pin mounting bolt	M10×1.5	6.9 ±0.5	50±3.6

## 5. TORQUE CHART

Use following table for unspecified torque

### 1) BOLT AND NUT

#### (1) Coarse thread

Bolt size	8.8T	10.9T	12.9T
	kgf·m	kgf·m	kgf·m
M 6 × 1.0	0.8 ~ 1.2	1.2 ~ 1.8	1.5 ~ 2.1
M 8 × 1.25	2.0 ~ 3.0	2.8 ~ 4.2	3.4 ~ 5.0
M10 × 1.5	4.0 ~ 6.0	5.6 ~ 8.4	6.8 ~ 10.0
M12 × 1.75	6.8 ~ 10.2	9.6 ~ 14.4	12.3 ~ 16.5
M14 × 2.0	10.9 ~ 16.3	16.3 ~ 21.9	19.5 ~ 26.3
M16 × 2.0	17.9 ~ 24.1	25.1 ~ 33.9	30.2 ~ 40.8
M18 × 2.5	24.8 ~ 33.4	34.8 ~ 47.0	41.8 ~ 56.4
M20 × 2.5	34.9 ~ 47.1	49.1 ~ 66.3	58.9 ~ 79.5
M22 × 2.5	46.8 ~ 63.2	65.8 ~ 88.8	78.9 ~ 106
M24 × 3.0	60.2 ~ 81.4	84.6 ~ 114	102 ~ 137
M30 × 3.5	120 ~ 161	168 ~ 227	202 ~ 272

#### (2) Fine thread

Bolt size	8.8T	10.9T	12.9T
	kgf·m	kgf·m	kgf·m
M 8 × 1.0	2.1 ~ 3.1	3.0 ~ 4.4	3.6 ~ 5.4
M10 × 1.25	4.2 ~ 6.2	5.9 ~ 8.7	7.0 ~ 10.4
M12 × 1.25	7.3 ~ 10.9	10.3 ~ 15.3	13.1 ~ 17.7
M14 × 1.5	12.4 ~ 16.6	17.4 ~ 23.4	20.8 ~ 28.0
M16 × 1.5	18.7 ~ 25.3	26.3 ~ 35.5	31.6 ~ 42.6
M18 × 1.5	27.1 ~ 36.5	38.0 ~ 51.4	45.7 ~ 61.7
M20 × 1.5	37.7 ~ 50.9	53.1 ~ 71.7	63.6 ~ 86.0
M22 × 1.5	51.2 ~ 69.2	72.0 ~ 97.2	86.4 ~ 116
M24 × 2.0	64.1 ~ 86.5	90.1 ~ 121	108 ~ 146
M30 × 2.0	129 ~ 174	181 ~ 245	217 ~ 294

## 2) PIPE AND HOSE (FLARE TYPE)

Thread (PF)	Hex. across flat (mm)	kgf · m
1/4"	19	4
3/8"	22	5
1/2"	27	9.5
3/4"	36	18
1"	41	21
1-1/4"	50	35

## 3) PIPE AND HOSE (ORFS TYPE)

Thread (UNF)	Hex. across flat (mm)	kgf · m
9/16-18	19	3
11/16-16	22	5
13/16-16	24	7
1-14	30	12
1-3/16-12	36	18
1-7/16-12	41	23
1-11/16-12	50	28
2-12	58	32

## 4) FITTING

Thread	Hex. across flat (mm)	kgf · m
1/4"	17	2
3/8"	19	3
1/2"	22	4
	24	6
5/8"	27	10
	30	12
3/4"	32	15
	36	18
1"	41	23
1-1/4"	50	28
1-1/2"	55	32

### 5) BAND CLAMP

Tag. No.	Hose size (mm)	Band width (mm)	kgf·m
S20-15	8 ~ 14	9	0.3
S20-17	11 ~ 17		
S20-22	13 ~ 20		0.35
S20-25	15 ~ 24		
S20-28	19 ~ 28		
S20-32	22 ~ 32	12	0.42
S20-40	26 ~ 38	9	
S20-45	32 ~ 44		

### 6) BAND CLAMP (IDEAL, FLEX-GEAR TYPE)

Tag. No.	Hose size (mm)	Band width (mm)	kgf·m
41-212	32 ~ 54	15.9	1.1
41-262	45 ~ 67		
41-312	57 ~ 79		
41-362	40 ~ 92		
41-412	83 ~ 105		
41-462	95 ~ 117		
41-512	108 ~ 130		

## 6. WRENCH AND SPANEER CHART

No.	Wrench & Spanner			Specification			Pipe and Hose	
	inch		mm	UNF/UN	M	PF/G	ORFS (UNF/UN)	FLARE (PF)
1	-	0.050	1.3	-	-	-	-	-
2	-	0.059	1.5	-	-	-	-	-
3	1/16	0.063	1.6	-	-	-	-	-
4	5/64	0.078	2	-	-	-	-	-
5	3/32	0.094	2.4	-	-	-	-	-
6	-	0.098	2.5	-	-	-	-	-
7	7/64	0.109	2.8	-	-	-	-	-
8	-	0.118	3	-	-	-	-	-
9	1/8	0.125	3.2	-	-	-	-	-
10	9/64	0.141	3.5	-	-	-	-	-
11	5/32	0.156	4	-	-	-	-	-
12	-	0.177	4.5	-	-	-	-	-
13	3/16	0.188	4.8	-	-	-	-	-
14	-	0.197	5	-	-	-	-	-
15	13/64	0.203	5.2	-	-	-	-	-
16	7/32	0.219	5.5	-	-	-	-	-
17	15/64	0.234	6	-	-	-	-	-
18	1/4	0.250	6.4	-	-	-	-	-
19	17/64	0.266	6.8	-	-	-	-	-
20	9/32	0.281	7	-	-	-	-	-
21	5/16	0.313	8	-	-	-	-	-
22	11/32	0.344	8.7	-	-	-	-	-
23	-	0.354	9	-	-	-	-	-
24	3/8	0.375	9.5	-	-	-	-	-
25	-	0.394	10	-	-	-	-	-
26	-	-	11	-	-	-	-	-
27	7/16	0.438	11.1	-	-	-	-	-
28	15/32	0.469	12	-	-	-	-	-
29	1/2	0.500	12.7	-	-	-	-	-
30	-	-	13	-	-	-	-	-
31	17/32	0.53	13.5	-	-	-	-	-
32	-	0.55	14	7/16-20	-	-	-	-
33	9/16	0.56	14.3	-	-	-	-	-
34	19/32	0.59	15	-	-	-	-	-
35	5/8	0.63	15.9	-	-	-	-	-
36	-	-	16	-	-	-	-	-
37	21/32	0.66	16.7	-	-	-	-	-

No.	Wrench & Spanner			Specification			Pipe and Hose	
	inch		mm	UNF/UN	M	PF/G	ORFS (UNF/UN)	FLARE (PF)
38	-	-	17	-	M12	-	-	-
39	11/16	0.69	17.5	-	-	-	-	-
40	-	-	18	-	-	-	-	-
41	3/4	0.75	19	9/16-18	M14	G1/4	9/16-18	PF1/4
42	25/32	0.78	19.8	-	-	-	-	-
43	-	-	20	-	-	-	-	-
44	13/16	0.81	20.6	-	-	-	-	-
45	-	-	21	-	-	-	-	-
46	-	-	22	-	M16	G3/8	11/16-16	PF3/8
47	7/8	0.88	22.2	-	-	-	-	-
48	29/32	0.91	23	-	-	-	-	-
49	15/16	0.94	23.8	-	-	-	-	-
50	-	-	24	3/4-16	M18	-	13/16-16	-
51	31/32	0.97	26.4	-	-	-	-	-
52	-	-	25	-	-	-	-	-
53	1	1.00	25.4	-	-	-	-	-
54	-	-	26	-	-	-	-	-
55	1 1/16	1.06	27	7/8-14	M22	G1/2	-	PF1/2
56	-	-	28	-	-	-	-	-
57	1 1/8	1.13	28.6	-	-	-	-	-
58	-	-	29	-	-	-	-	-
59	-	-	30	-	-	-	1-14	-
60	1 3/16	1.19	30.2	-	-	-	-	-
61	-	-	31	-	-	-	-	-
62	1 1/4	1.25	31.8	-	-	-	-	-
63	-	-	32	1-1/16-12	M24	G3/4	-	-
64	-	-	33	-	-	-	-	-
65	1 5/16	1.31	33.3	-	-	-	-	-
66	-	-	34	-	-	-	-	-
67	1 3/8	1.38	35	-	-	-	-	-
68	-	-	36	1-3/16-12	M27	G3/4	1-3/16-12	PF3/4
69	1 7/16	1.44	37	-	-	-	-	-
70	1 1/2	1.50	38	-	-	-	-	-
71	-	-	39	-	-	-	-	-
72	1 9/16	1.56	39.7	-	-	-	-	-
73	-	-	40	-	-	-	-	-
74	-	-	41	1-5/16-12	M33	G1	1-7/16-12	PF1
75	1 5/8	1.63	41.3	-	-	-	-	-

No.	Wrench & Spanner			Specification			Pipe and Hose	
	inch		mm	UNF/UN	M	PF/G	ORFS (UNF/UN)	FLARE (PF)
76	1 11/16	1.69	43	-	-	-	-	-
77	1 3/4	1.75	44	-	-	-	-	-
78	1 13/16	1.81	46	-	-	-	-	-
79	1 7/8	1.88	47.6	-	-	-	-	-
80	-	-	48	-	-	-	1-11/16-12	-
81	1 15/16	1.94	49.2	-	-	-	-	-
82	-	-	50	1-5/8-12	-	G1-1/4	-	PF1-1/4
83	2	2.00	50.8	-	-	-	-	-
84	-	-	51	-	-	-	-	-
85	2 1/8	2.13	54	-	-	-	-	-
86	-	-	55	1-7-8-12	-	G1-1/2	-	PF1-1/2
87	-	-	57	-	-	-	2-12	-
88	2 1/4	2.25	57.2	-	-	-	-	-
89	-	-	60	-	-	-	-	-

## 7. RECOMMENDED LUBRICANTS

Use only oils listed below or equivalent.

Do not mix different brand oil.

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C (°F)								
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)
Axle	Gear oil	7.0 (1.8)		DEXRON 3							
Hydraulic oil tank	Hydraulic oil	31 (8.2)	★ISO VG 15								
			ISO VG 32								
			ISO VG 46								
			ISO VG 68								
Brake system	Brake oil	0.5 (0.1)	ISO VG 32								
Fitting (Grease nipple)	Grease	0.1 (0.03)	★NLGI No.1								
							NLGI No.2				

· ISO : International Organization for Standardization

· NLGI : National Lubricating Grease Institute

★ : Cold region

Russia, CIS, Mongolia



## GROUP 3 PERIODIC REPLACEMENT

For operation safety, never fail to perform periodic maintenance or make periodic replacement of the consumable parts listed in the following.

These parts may deteriorate in time and are susceptible to wear. It is difficult to estimate the degree of wear at time of periodic maintenance; therefore, even if no apparent wear is found, always replace with new parts within the prescribed period of replacement (Or earlier if trouble is found).

Note that periodic replacement has nothing to do with guarantee service.

※ **Replacement of consumable service parts is not covered under warranty.**

No.	Description	Period of replacement
1	Hyd tank - Air breather element	Every 1.5month (**Harsh)
2	Hyd tank - Air breather element	Every 3 month (*Normal)
3	Hyd tank - Return filter	Every 6 moth
4	Hyd tank - Suction strainer	Every 1 year
5	Hyd tank - Hyd oil	Every 1 year
6	Hyd tank - Hyd oil (long life)	Every 2.5 year
7	Cap & Dust seal of Master cylinder and steering cylinder	Every 1 year
8	Lift hose	Every 1 year (**Harsh) Every 2 year (*Normal)"
9	Tilt hose	
10	Aux hose	
11	Pump outlet hose	Every 2 year
12	Lift chain	Every 2 year
13	Pump seal kit	Every 3 year
14	Pressure sensor	Every 5 year

※ **Replace the O-ring and gasket at the same time when replacing the hose.**

※ **Replace clamp at the same time if the hose clamp is cracked when checking and replacing hose.**

※ **Normal operation**

Eight hour material handling, mostly in buildings or in clean, open air on clean paved surfaces

※ **Harsh operation**

- All harsh working environment
- Long term heavy load operation
- High and low temperature working environment
- Sudden change in temperature
- Dusty or sandy working environment
- Highly corrosive chemical working environment
- Damp working environment