

SECTION 1 GENERAL

| | | |
|---------|----------------------------|------|
| Group 1 | Safety hints | 1-1 |
| Group 2 | Specifications | 1-5 |
| Group 3 | Periodic replacement | 1-13 |


GROUP 1 SAFETY HINTS

Careless performing of the easy work may cause injuries.


Take care to always perform work safely, at least observing the following.

- Oil is a dangerous substance. Never handle oil, grease or oily clothes in places where there is any fire of flame.


As preparation in case of fire, always know the location and directions for use of fire extinguishers and other fire fighting equipment.

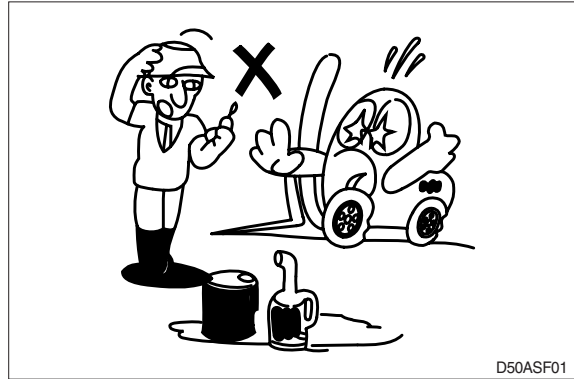


- Wear well-fitting helmet, safety shoes and working clothes. When drilling, grinding or hammering, always wear protective goggles. Always do up safety clothes properly so that they do not catch on protruding parts of machines. Do not wear oily clothes. When checking, always release battery plug.

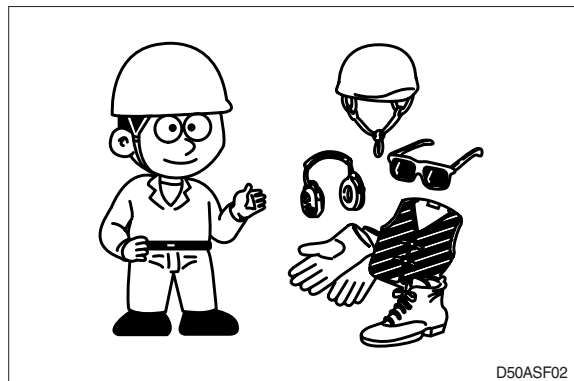

- Flames should never be used instead of lamps. Never use a naked flame to check leaks or the level of oil or electrolyte.

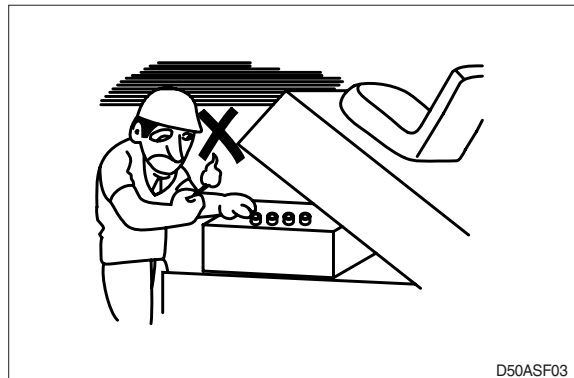


- Exhaust gas is dangerous. Provide adequate ventilation when working a closed space.

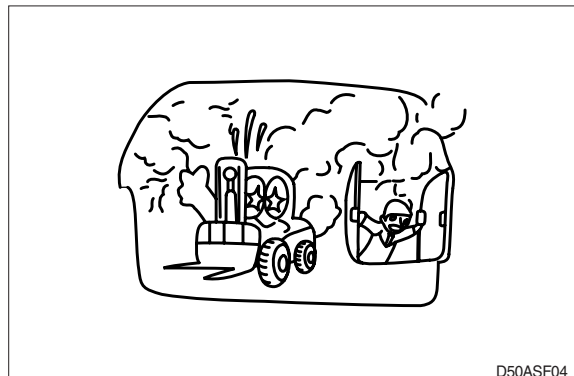

⚠ Be particularly careful when removing the radiator cap and the hydraulic oil tank filler cap, if this is done immediately after using the machine, there is a danger that boiled oil may spurt out.

- The procedure for releasing the hydraulic pressure is as follows : lower the fork to the ground, and stop the engine (Motor), move the control levers to each position two or three times.

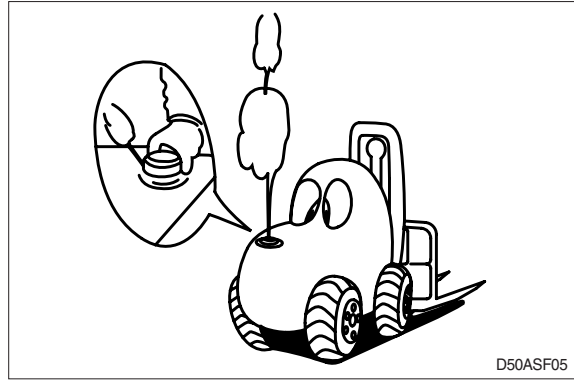

- When working on top of the machine, be careful not to lose your balance and fall.



- Hang a caution sign in the operator's compartment (For example **Do not start** or **Maintenance in progress**).


This will prevent anyone from starting or moving the machine by mistake.

⚠ It is extremely dangerous to try to check the fan belt tension while the engine is running.




When inspecting the engine is running parts, or near such parts, always stop the engine first. Before checking or servicing accumulator or piping, depress brake pedal repeatedly to release pressure.


- Park the machine on firm, flat ground. Lower the fork to the ground and stop the engine. Return each lever to **NEUTRAL** and apply the brake lock.

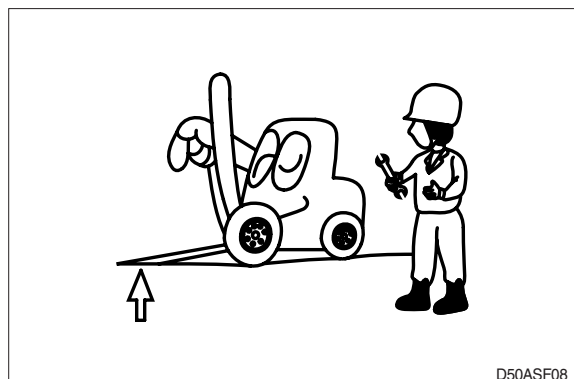


- Immediately remove any oil or grease on the floor of the operator's compartment, or on the handrail. It is very dangerous if someone slips while on the machine.

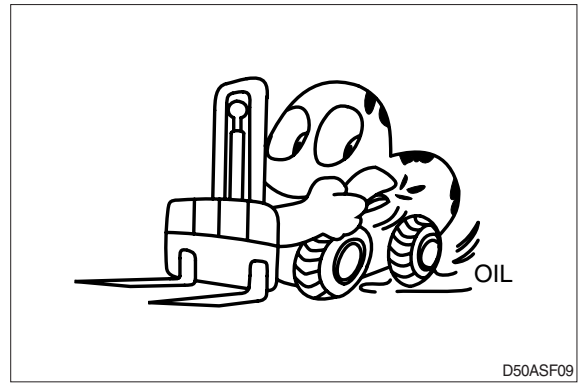

- When working with others, choose a group leader and work according to his instructions. Do not perform any maintenance beyond the agreed work.

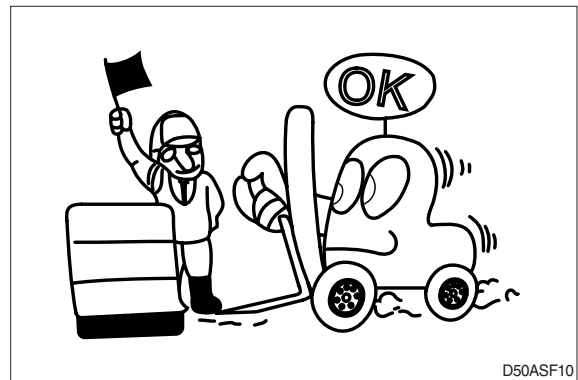

- Always remember that the hydraulic oil circuit is under pressure. When feeding or draining the oil or carrying out inspection and maintenance, release the pressure first.

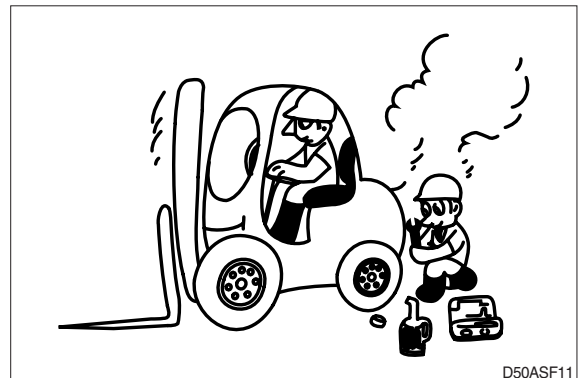


- Unless you have special instructions to the contrary, maintenance should always be carried out with the engine stopped. If maintenance is carried out with the engine running, there must be two men present : one sitting in the operator's seat and the other one performing the maintenance. In such a case, never touch any moving part.

- Thoroughly clean the machine. In particular, be careful to clean the filler caps, grease fittings and the area around the dipsticks. Be careful not to let any dirt or dust into the system.
- Always use HYUNDAI Forklift genuine parts for replacement.
- Always use the grades of grease and oil recommended by HYUNDAI Forklift.
Choose the viscosity specified for the ambient temperature.
- Always use pure oil or grease, and be sure to use clean containers.
- When checking or changing the oil, do it in a place free of dust, and prevent any dirt from getting into the oil.
- Before draining the oil, warm it up to a temperature of 30 to 40°C.
- After replacing oil, filter element or strainer, bleed the air from circuit.
- When the strainer is located in the oil filler, the strainer must not be removed while adding oil.
- When changing the oil filter, check the drained oil and filter for any signs of excessive metal particles or other foreign materials.
- When removing parts containing O-ring, gaskets or seals, clean the mounting surface and replace with new sealing parts.
- After injecting grease, always wipe off the oil grease that was forced out.
- Do not handle electrical equipment while wearing wet places, as this can cause electric shock.
- During maintenance do not allow any unauthorized person to stand near the machine.
- Be sure you fully understand the contents of the operation. It is important to prepare necessary tools and parts and to keep the operating area clean.
- When checking an open gear case there is a risk of dropping things in. Before removing the covers to inspect such cases, empty everything from your pockets. Be particularly careful to remove wrenches and nuts.
- Way to use dipstick
Push the dipstick fully into the guide, and then pull out.

Carrying out other difficult maintenance work carelessly can cause unexpected accidents. If you consider the maintenance is too difficult, always request the HYUNDAI Forklift distributor to carry out it.

GROUP 2 SPECIFICATIONS


1. MAJOR COMPONENTS

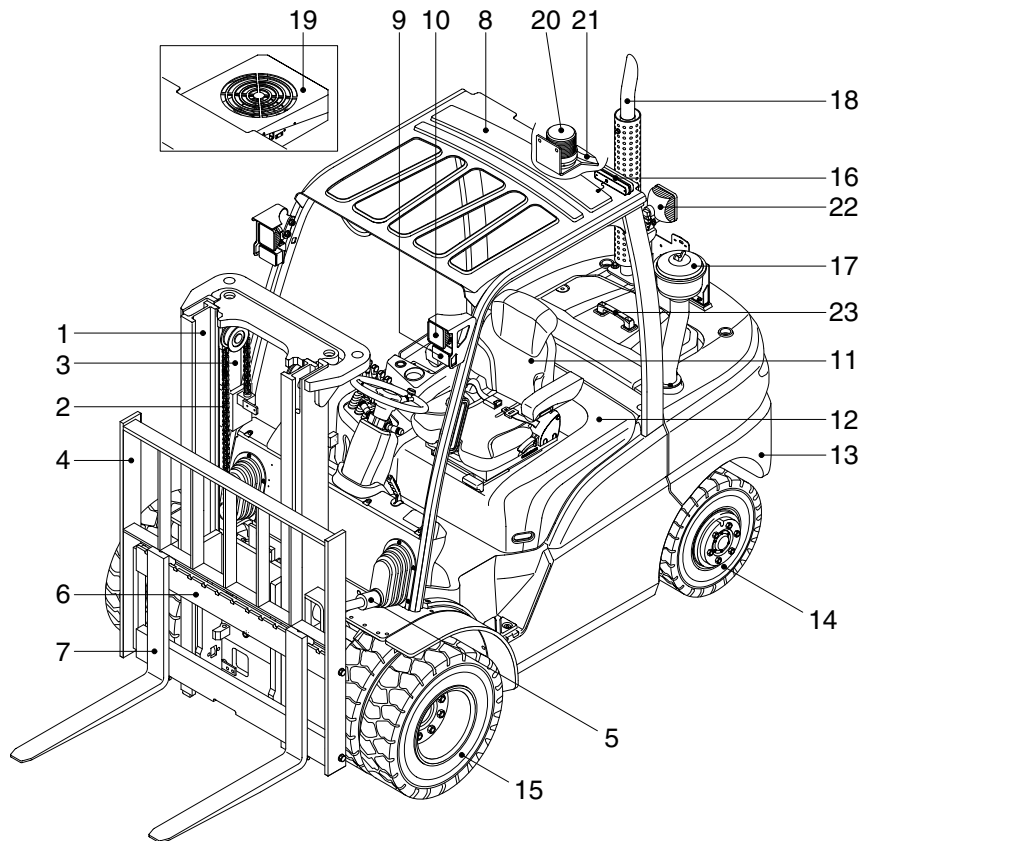

35D9OM54

- | | | |
|------------------|--------------------------|--------------------------------|
| 1 Mast | 9 Turn signal lamp | 17 Precleaner |
| 2 Lift chain | 10 Head lamp | 18 Silencer |
| 3 Lift cylinder | 11 Operator's seat | 19 Air conditioner (opt) |
| 4 Backrest | 12 Bonnet | 20 Beacon lamp (opt) |
| 5 Tilt cylinder | 13 Counterweight | 21 Camera (opt) |
| 6 Lift bracket | 14 Rear wheel | 22 Rear work lamp (opt) |
| 7 Forks | 15 Front wheel | 23 Rear handle with horn (opt) |
| 8 Overhead guard | 16 Rear combination lamp | |

2. SPECIFICATIONS

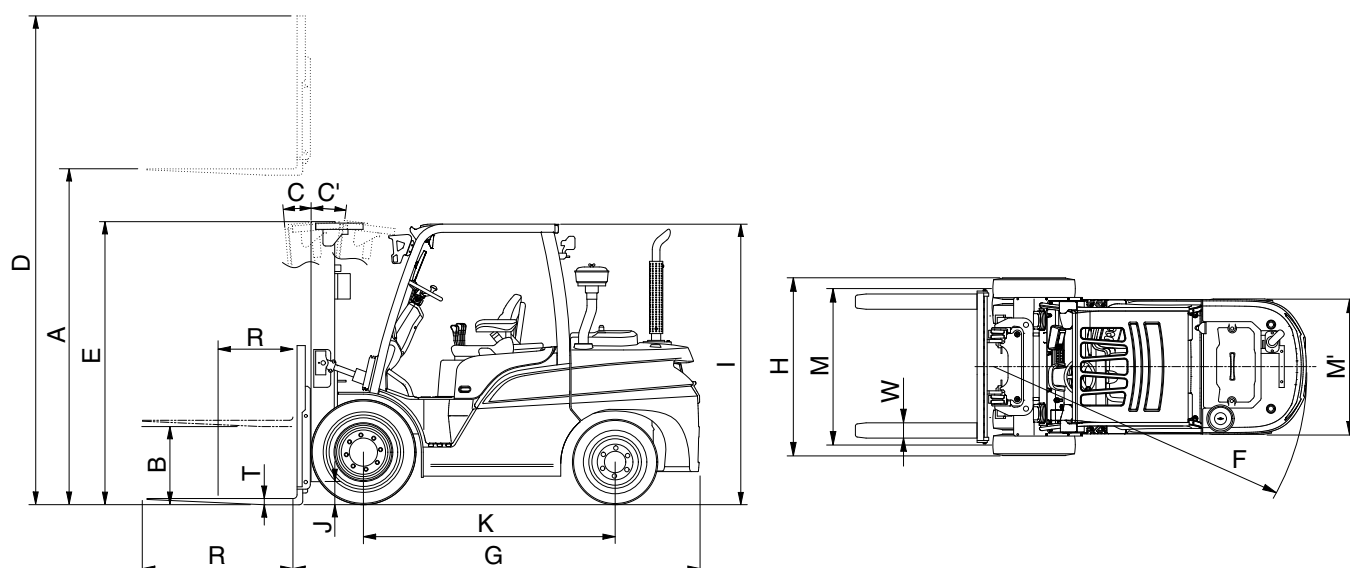

35D9SP01

| Model | | | Unit | 35D-9 | 40D-9 | 45D-9 | 50DA-9 |
|-------------------------|-------------------------------|-------|---------------|-----------------------------------|-----------------------------------|-----------------------------------|-------------------------------------|
| Capacity | | | kg (lb) | 3500 (8000) | 4000 (9000) | 4500 (10000) | 5000 (11000) |
| Load center | | R | mm (in) | 600 (24") | ← | ← | ← |
| Weight (Unloaded) | | | kg (lb) | 5934 (13080) | 6484 (14290) | 6900 (15210) | 7317 (16130) |
| Fork | Lifting height | A | mm (ft. in) | 3020 (9' 11") | ← | ← | 2930 (9' 7") |
| | Free lift | B | mm (in) | 120 (4.7") | ← | ← | ← |
| | Lifting speed (Unload/Load) | | mm/sec | 540/520 | 540/510 | 540/500 | 460/420 |
| | Lowering speed (Unload/Load) | | mm/sec | 500/500 | ← | ← | ← |
| | L × W × T | L,W,T | mm (in) | 1070 × 122 × 50 (42 × 4.8 × 2) | 1070 × 150 × 50 (42 × 5.9 × 2) | 1220 × 150 × 50 (48 × 5.9 × 2) | 1200 × 150 × 60 (47 × 5.9 × 2.4) |
| Mast | Tilt angle (forward/backward) | C/C' | degree | 8/10 | ← | ← | ← |
| | Max height | D | mm (ft. in) | 4235 (13' 11") | ← | ← | 4147 (13' 7") |
| | Min height | E | mm (ft. in) | 2235 (7' 4") | 2220 (7' 3") | ← | ← |
| Body | Travel speed (Unload) | | km/h (mph) | 26.6 (16.5) | 25.7 (16.0) | 25.6 (15.9) | ← |
| | Gradeability (Load) | | % | 40.9 | 36.4 | 33.2 | 30.6 |
| | Min turning radius (Outside) | F | mm (ft. in) | 3006 (9' 10") | 3005 (9' 10") | 3040 (10' 0") | ← |
| ETC | Operating pressure | | kgf/cm² (psi) | 210 (2990) | ← | ← | ← |
| | Hydraulic oil tank | | ℓ (U.S. gal) | 64 (16.9) | ← | ← | ← |
| | Fuel tank | | ℓ (U.S. gal) | 72 (19.0) | ← | ← | ← |
| Overall length | | G | mm (ft. in) | 3225 (10' 7") | ← | 3264 (10' 9") | 3300 (10' 10") |
| Overall width | | H | mm (ft. in) | 1373 (4' 6") | 1746 (5' 9") | ← | ← |
| Overhead guard height | | I | mm (ft. in) | *12220 (7' 3") *22350 (7' 7") | *12210 (7' 3") *22340 (7' 7") | ← | ← |
| Ground clearance | | J | mm (in) | 170 (6.7") | 155 (6.1") | ← | ← |
| Wheel base | | K | mm (ft. in) | 2000 (6' 7") | ← | ← | ← |
| Wheel tread front/rear | | M/M' | mm (ft. in) | 1132/1140 (3' 9"/3' 9") | 1282/1140 (4' 2"/3' 9") | ← | ← |
| Max drawbar pull (load) | | | kg (lb) | 3970 (8750) | 3994 (8810) | 4000 (8820) | 4006 (8830) |

*1: Low *2: High

3. SPECIFICATION FOR MAJOR COMPONENTS

1) ENGINE

| Item | Unit | Specification |
|-------------------------------------|-------------|--|
| Model | - | Cummins QSF 3.8 |
| Type | - | Vertical, 4 cycle DI, Tier 4 final diesel engine |
| Cooling Method | - | Water cooling |
| Number of cylinders and arrangement | - | 4 cylinders, In-line |
| Firing order | - | 1-3-4-2 |
| Combustion chamber type | - | Direct injection |
| Cylinder bore X stroke | mm (in) | 100 × 120 (3.94 × 4.72) |
| Piston displacement | cc (cu in) | 3800 (232) |
| Compression ratio | - | 17.5 : 1 |
| Rated gross horse power | hp/rpm | 102/2200 |
| Maximum torque at rpm | kgf · m/rpm | 42.3/1600 |
| Engine oil quantity | l (U.S.gal) | 13.2 (3.49) |
| Dry weight | kg (lb) | 316 (697) |
| High idling speed | rpm | 2400 |
| Low idling speed | rpm | 900 |
| Rated fuel consumption | g/kw.hr | 231 (at 1700 rpm) |
| Starting motor | V-kW | 24-3.2 |
| Alternator | V-A | 24-80 |
| Battery | V-AH | 24-75 |
| Fan belt deflection | mm (in) | 10~12 (0.40~0.47) |

2) MAIN PUMP

| Item | Unit | Specification |
|----------------------------|---------------------------|------------------------------|
| Type | - | Fixed displacement gear pump |
| Capacity | cc/rev | 46.1 |
| Maximum operating pressure | kgf/cm ² (psi) | 235 (3340) |
| Rated speed (Max/Min) | rpm | 3000/600 |

3) MAIN CONTROL VALVE

| Item | Unit | Specification |
|----------------------------------|---------------------------|---------------------|
| Type | - | Sectional |
| Operating method | - | Mechanical |
| Relief valve pressure (Main/Aux) | kgf/cm ² (psi) | 210/150 (2990/2130) |
| Flow capacity | lpm | 125 |

(4) POWER TRAIN DEVICES

| Item | | Specification |
|------------------|-----------------------|--|
| Torque converter | Model | DE 280 (KAPEC) |
| | Type | 3 Element, 1 stage, 2 phase |
| | Stall ratio | 2.25 : 1 |
| Transmission | Type | Power shift |
| | Gear shift(FWD/REV) | 2/2 |
| | Control | Electrical single lever type |
| | Overhaul ratio | FWD 1st : 2.550 2nd : 1.218 |
| | | REV 1st : 2.550 2nd : 1.218 |
| Axle | Type | Front-wheel drive type, fixed location |
| | Gear ratio | 11.692 |
| Wheels | Q'ty(FR/RR) | Single : 2/2, Double : 4/2 |
| | Front(drive) | Single 3.5 ton : 8.25-15-14 PR 4.0~5.0 ton : 300-15-18 PR |
| | | Double 7.50-16-12 PR |
| | Rear(steer) | 3.5/4 ton : 7.00-12-12 PR 4.5/5 ton : 7.00-12-14 PR |
| Brakes | Travel | Front wheel, wet disk brake |
| | Parking | Ratchet, drum brake |
| Steering | Type | Full hydraulic, power steering |
| | Steering angle | 74.8° to both right and left angle, respectively |
| | Relief valve pressure | 135 kgf/cm ² (1920 psi) |

4. TIGHTENING TORQUE FOR MAJOR COMPONENTS

| NO | Item | | Size | kgf · m | lbf · ft |
|----|--------------------|----------------------------------|------------|------------|-------------|
| 1 | Engine | Engine mounting bolt | M12 × 1.75 | 6.9 ± 1.4 | 50 ± 10 |
| 2 | | Engine bracket mounting nut | M10 × 1.5 | 6.9 ± 1.4 | 50 ± 10 |
| 3 | | Radiator mounting bolt, nut | M10 × 1.5 | 6.9 ± 1.4 | 50 ± 10 |
| 4 | Hydraulic system | MCV mounting bolt, nut | M12 × 1.75 | 5 ± 1.0 | 36.2 ± 7.2 |
| 5 | | Steering unit mounting bolt | M10 × 1.5 | 4.0 ± 0.5 | 28.9 ± 3.6 |
| 6 | | Hydraulic pump mounting bolt | M14 × 1.5 | 9.5 ± 1.3 | 68.7 ± 9.5 |
| 7 | Power train system | Transmission mounting bolt, nut | M16 × 2.0 | 7.5 ± 1.5 | 54.2 ± 10.8 |
| 8 | | Torque converter mounting bolt | M10 × 1.5 | 6.9 ± 1.4 | 50 ± 10 |
| 9 | | Drive axle mounting bolt, nut | M24 × 2.0 | 62.5 ± 9.5 | 452 ± 68.7 |
| 10 | | Drive shaft mounting bolt | 3/8-24 UNF | 7.0 ± 0.7 | 50.6 ± 5.1 |
| 11 | | Steering axle mounting bolt, nut | M14 × 2.0 | 19.6 ± 2.9 | 142 ± 21 |
| 12 | | Front wheel mounting nut | M22 × 1.5 | 62.0 ± 9.3 | 448 ± 67.3 |
| 13 | | Rear wheel mounting nut | M20 × 1.5 | 35.0 ± 5.0 | 253 ± 36.2 |
| 14 | Others | Counterweight mounting bolt | M30 × 3.5 | 199 ± 29.9 | 1439 ± 216 |
| 15 | | Operator's seat mounting nut | M 8 × 1.25 | 2.5 ± 0.5 | 18.1 ± 3.6 |
| 16 | | Head guard mounting bolt | M12 × 1.75 | 12.8 ± 3.0 | 93 ± 22 |
| 17 | | Cabin mounting bolt | M12 × 1.75 | 12.8 ± 3.0 | 93 ± 22 |

5. TORQUE CHART

Use following table for unspecified torque.

1) BOLT AND NUT

(1) Coarse thread

| Bolt size | 8T | | 10T | |
|------------|-------------|-------------|-------------|-------------|
| | kgf · m | lbf · ft | kgf · m | lbf · ft |
| M 6 × 1.0 | 0.85 ~ 1.25 | 6.15 ~ 9.04 | 1.14 ~ 1.74 | 8.2 ~ 12.6 |
| M 8 × 1.25 | 2.0 ~ 3.0 | 14.5 ~ 21.7 | 2.73 ~ 4.12 | 19.7 ~ 29.8 |
| M10 × 1.5 | 4.0 ~ 6.0 | 28.9 ~ 43.4 | 5.5 ~ 8.3 | 39.8 ~ 60 |
| M12 × 1.75 | 7.4 ~ 11.2 | 53.5 ~ 79.5 | 9.8 ~ 15.8 | 71 ~ 114 |
| M14 × 2.0 | 12.2 ~ 16.6 | 88.2 ~ 120 | 16.7 ~ 22.5 | 121 ~ 167 |
| M16 × 2.0 | 18.6 ~ 25.2 | 135 ~ 182 | 25.2 ~ 34.2 | 182 ~ 247 |
| M18 × 2.5 | 25.8 ~ 35.0 | 187 ~ 253 | 35.1 ~ 47.5 | 254 ~ 343 |
| M20 × 2.5 | 36.2 ~ 49.0 | 262 ~ 354 | 49.2 ~ 66.6 | 356 ~ 482 |
| M22 × 2.5 | 48.3 ~ 63.3 | 350 ~ 457 | 65.8 ~ 98.0 | 476 ~ 709 |
| M24 × 3.0 | 62.5 ~ 84.5 | 452 ~ 611 | 85.0 ~ 115 | 615 ~ 832 |
| M30 × 3.5 | 124 ~ 168 | 898 ~ 1214 | 169 ~ 229 | 1223 ~ 1655 |
| M36 × 4.0 | 174 ~ 236 | 1261 ~ 1703 | 250 ~ 310 | 1808 ~ 2242 |

(2) Fine thread

| Bolt size | 8T | | 10T | |
|------------|--------------|-------------|-------------|-------------|
| | kgf · m | lbf · ft | kgf · m | lbf · ft |
| M 8 × 1.0 | 2.17 ~ 3.37 | 15.7 ~ 24.3 | 3.04 ~ 4.44 | 22.0 ~ 32.0 |
| M10 × 1.25 | 4.46 ~ 6.66 | 32.3 ~ 48.2 | 5.93 ~ 8.93 | 42.9 ~ 64.6 |
| M12 × 1.25 | 7.78 ~ 11.58 | 76.3 ~ 83.7 | 10.6 ~ 16.0 | 76.6 ~ 115 |
| M14 × 1.5 | 13.3 ~ 18.1 | 96.2 ~ 130 | 17.9 ~ 24.1 | 130 ~ 174 |
| M16 × 1.5 | 19.9 ~ 26.9 | 144 ~ 194 | 26.6 ~ 36.0 | 193 ~ 260 |
| M18 × 1.5 | 28.6 ~ 43.6 | 207 ~ 315 | 38.4 ~ 52.0 | 278 ~ 376 |
| M20 × 1.5 | 40.0 ~ 54.0 | 289 ~ 390 | 53.4 ~ 72.2 | 386 ~ 522 |
| M22 × 1.5 | 52.7 ~ 71.3 | 381 ~ 515 | 70.7 ~ 95.7 | 512 ~ 692 |
| M24 × 2.0 | 67.9 ~ 91.9 | 491 ~ 664 | 90.9 ~ 123 | 658 ~ 890 |
| M30 × 2.0 | 137 ~ 185 | 990 ~ 1338 | 182 ~ 248 | 1314 ~ 1795 |
| M36 × 3.0 | 192 ~ 260 | 1389 ~ 1879 | 262 ~ 354 | 1893 ~ 2561 |

2) PIPE AND HOSE(FLARE TYPE)

| Thread size | Width across flat (mm) | kgf · m | lbf · ft |
|-------------|------------------------|---------|----------|
| 1/4" | 19 | 4 | 28.9 |
| 3/8" | 22 | 5 | 36.2 |
| 1/2" | 27 | 9.5 | 68.7 |
| 3/4" | 36 | 18 | 130 |
| 1" | 41 | 21 | 152 |
| 1-1/4" | 50 | 35 | 253 |

3) PIPE AND HOSE(ORFS TYPE)

| Thread size | Width across flat (mm) | kgf · m | lbf · ft |
|-------------|------------------------|---------|----------|
| 9/16-18 | 19 | 4 | 28.9 |
| 11/16-16 | 22 | 5 | 36.2 |
| 13/16-16 | 27 | 9.5 | 68.7 |
| 1-3/16-12 | 36 | 18 | 130 |
| 1-7/16-12 | 41 | 21 | 152 |
| 1-11/16-12 | 50 | 35 | 253 |

4) FITTING

| Thread size | Width across flat (mm) | kgf · m | lbf · ft |
|-------------|------------------------|---------|----------|
| 1/4" | 19 | 4 | 28.9 |
| 3/8" | 22 | 5 | 36.2 |
| 1/2" | 27 | 9.5 | 68.7 |
| 3/4" | 36 | 18 | 130 |
| 1" | 41 | 21 | 152 |
| 1-1/4" | 50 | 35 | 253 |

6. RECOMMENDED LUBRICANTS

| Service point | Kind of fluid | Capacity ℓ (U.S. gal) | Ambient temperature °C (°F) | | | | | | | | |
|-------------------------------|-------------------------------------|-----------------------|--|---------------------------------------|-------------|----------------|-----------|------------|------------|------------|-------------|
| | | | -50 (-58) | -30 (-22) | -20 (-4) | -10 (14) | 0 (32) | 10 (50) | 20 (68) | 30 (86) | 40 (104) |
| Engine oil pan | Engine oil | 12 (3.2) | ★SAE 5W-40 | | | | | | | | |
| | | | | | | | | SAE 30 | | | |
| | | | | SAE 10W | | | | | | | |
| | | | | SAE 10W-30 | | | | | | | |
| | | | | | SAE 15W-40 | | | | | | |
| Torque converter transmission | Transmission oil | 12 (3.2) | ATF DEXRON III | | | | | | | | |
| Axle | Gear oil | 10.5 (2.8) | SHELL DONAX TD | | | | | | | | |
| Hydraulic tank | Hydraulic oil | 66 (17.4) | ★ISO VG 15 | | | | | | | | |
| | | | | | ISO VG 46 | | | | | | |
| | | | | | ISO VG 68 | | | | | | |
| Fuel tank | Diesel fuel★ ¹ | 72 (19.0) | ★ASTM D975 NO.1 | | | | | | | | |
| | | | | | | ASTM D975 NO.2 | | | | | |
| Fitting (Grease nipple) | Grease | - | ★NLGI NO.1 | | | | | | | | |
| | | | | | | NLGI NO.2 | | | | | |
| Brake reservoir tank | Brake oil | - | ★AZOLLA ZS10 (Hydraulic oil, ISO VG10) | | | | | | | | |
| | | | | AZOLLA ZS32 (Hydraulic oil, ISO VG32) | | | | | | | |
| Radiator | Antifreeze : Water | 21.5 (5.7) | Ethylene glycol base permanent type (50:50) | | | | | | | | |
| | | | ★Ethylene glycol base permanent type (60 : 40) | | | | | | | | |
| DEF/AdBlue® tank | Mixture of urea and deionized water | 18.9 (5) | ISO 22241 (High-purity urea + deionized water (32.5:67.5)) | | | | | | | | |
| | | | | | | | | | | | |

NOTES :

- Engine oil should be API classification CJ-4.
- Change the type of engine oil according to the ambient temperature.
- When using oil of different brands from the previous one, be sure to drain all the previous oil before adding the new engine oil.

★1 : Ultra low sulfur diesel
- sulfur content ≤ 15 ppm

★ : Cold region
Russia, CIS, Mongolia

GROUP 3 PERIODIC REPLACEMENT

For operation safety, never fail to perform periodic maintenance or make periodic replacement of the consumable parts listed in the following.

These parts may deteriorate in time and are susceptible to wear. It is difficult to estimate the degree of wear at time of periodic maintenance; therefore, even if no apparent wear is found, always replace with new parts within the prescribed period of replacement (Or earlier if trouble is found).

Note that periodic replacement has nothing to do with guarantee service.

| No. | Description | Period of replacement |
|-----|---|-----------------------|
| 1 | Master cylinder and wheel cylinder caps, dust seals | Every 1 year |
| 2 | Brake hose or tube | Every 1 or 2 years |
| 3 | Brake reservoir tank and tube | Every 2 to 4 years |
| 4 | Power steering hose | Every 2 years |
| 5 | Stop lamp switch(Oil pressure type) | Every 2 years |
| 6 | Fuel hose | Every 2 to 4 years |
| 7 | Rubber parts of power steering | Every 2 to 4 years |
| 8 | Lift chain | Every 2 to 4 years |
| 9 | Hose of load handling | Every 1 or 2 years |
| 10 | Intake air line | Every 2 years |
| 11 | Coolant hose and clamps | Every 2 years |

- ※ Replace the O-ring and gasket at the same time when replacing the hose.
- ※ Replace clamp at the same time if the hose clamp is cracked when checking and replacing hose.