

## SECTION 1 GENERAL

Group 1	Safety hints .....	1-1
Group 2	Specifications .....	1-5
Group 3	Periodic replacement .....	1-15


## GROUP 1 SAFETY HINTS

Careless performing of the easy work may cause injuries.


Take care to always perform work safely, at least observing the following.

- Oil is a dangerous substance. Never handle oil, grease or oily clothes in places where there is any fire of flame.


As preparation in case of fire, always know the location and directions for use of fire extinguishers and other fire fighting equipment.

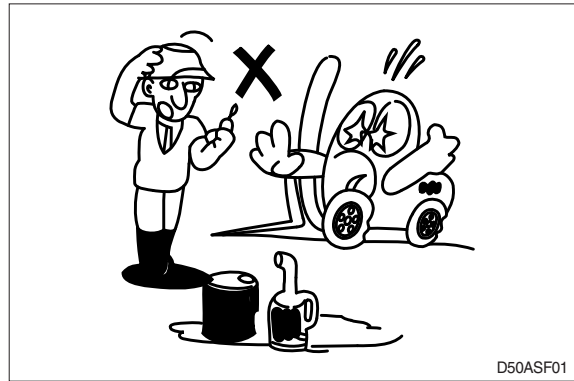

- Wear well-fitting helmet, safety shoes and working clothes. When drilling, grinding or hammering, always wear protective goggles. Always do up safety clothes properly so that they do not catch on protruding parts of machines. Do not wear oily clothes. When checking, always release battery plug.

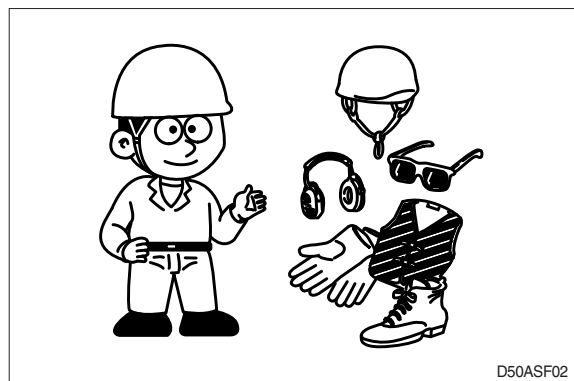

- Flames should never be used instead of lamps. Never use a naked flame to check leaks or the level of oil or electrolyte.

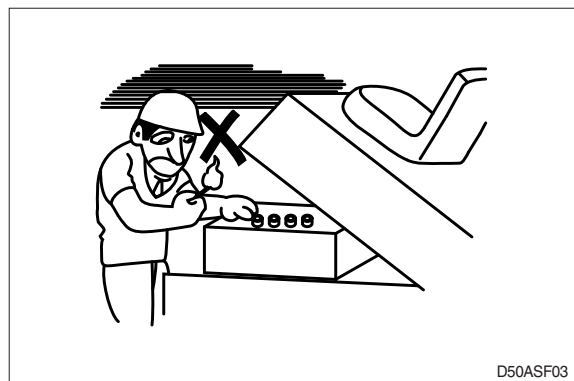

- When working on top of the machine, be careful not to lose your balance and fall.



- Hand a caution sign in the operator's compartment (For example **Do not start** or **Maintenance in progress**).

This will prevent anyone from starting or moving the machine by mistake.




D50ASF07

When inspecting running parts or near such parts, always stop the machine first.


Before checking or servicing accumulator or piping, depress brake pedal repeatedly to release pressure.

- Park the machine on firm, flat ground.  
Lower the fork to the ground and stop the engine.  
Return each lever to **NEUTRAL** and apply the brake lock.

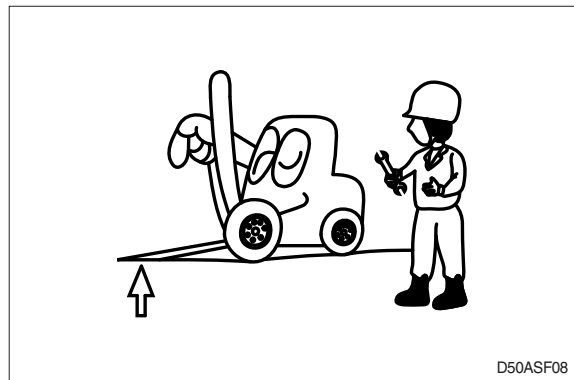

D50ASF08

- Immediately remove any oil or grease on the floor of the operator's compartment, or on the handrail. It is very dangerous if someone slips while on the machine.

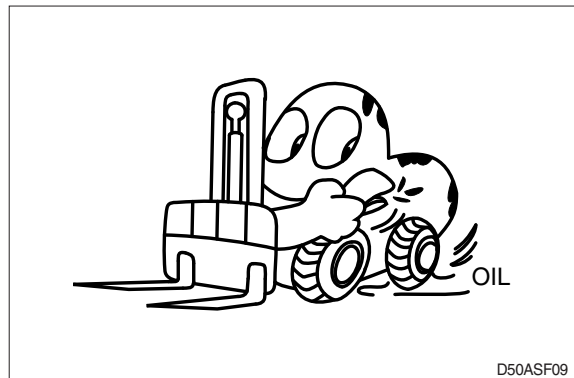

D50ASF09


- When working with others, choose a group leader and work according to his instructions. Do not perform any maintenance beyond the agreed work.



D50ASF10

- Unless you have special instructions to the contrary, maintenance should always be carried out with the machine stopped. If maintenance is carried out with the machine running, there must be two men present : one sitting in the operator's seat and the other one performing the maintenance. In such a case, never touch any moving part.

- Always remember that the hydraulic oil circuit is under pressure. When feeding or draining the oil or carrying out inspection and maintenance, release the pressure first.

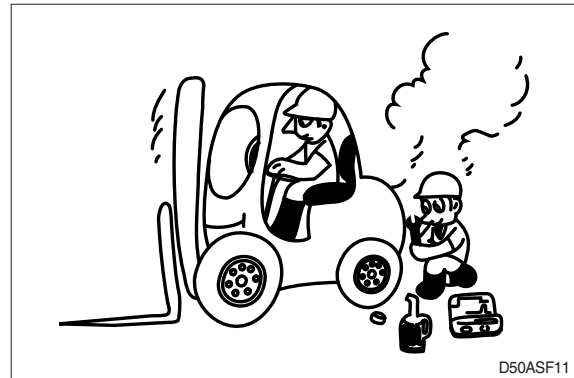


- Thoroughly clean the machine. In particular, be careful to clean the filler caps, grease fittings and the area around the dipsticks. Be careful not to let any dirt or dust into the system.
- Always use HYUNDAI Forklift genuine parts for replacement.
- Always use the grades of grease and oil recommended by HYUNDAI Forklift.  
Choose the viscosity specified for the ambient temperature.
- Always use pure oil or grease, and be sure to use clean containers.
- When checking or changing the oil, do it in a place free of dust, and prevent any dirt from getting into the oil.
- Before draining the oil, warm it up to a temperature of 30 to 40°C.
- After replacing oil, filter element or strainer, bleed the air from circuit.
- When the strainer is located in the oil filler, the strainer must not be removed while adding oil.
- When changing the oil filter, check the drained oil and filter for any signs of excessive metal particles or other foreign materials.
- When removing parts containing O-ring, gaskets or seals, clean the mounting surface and replace with new sealing parts.
- After injecting grease, always wipe off the oil grease that was forced out.
- Do not handle electrical equipment while wearing wet places, as this can cause electric shock.
- During maintenance do not allow any unauthorized person to stand near the machine.
- Be sure you fully understand the contents of the operation. It is important to prepare necessary tools and parts and to keep the operating area clean.
- When checking an open gear case there is a risk of dropping things in. Before removing the covers to inspect such cases, empty everything from your pockets. Be particularly careful to remove wrenches and nuts.
- Way to use dipstick  
Push the dipstick fully into the guide, and then pull out.

Carrying out other difficult maintenance work carelessly can cause unexpected accidents. If you consider the maintenance is too difficult, always request the HYUNDAI Forklift distributor to carry out it.

## GROUP 2 SPECIFICATIONS

### 1. GENERAL LOCATIONS

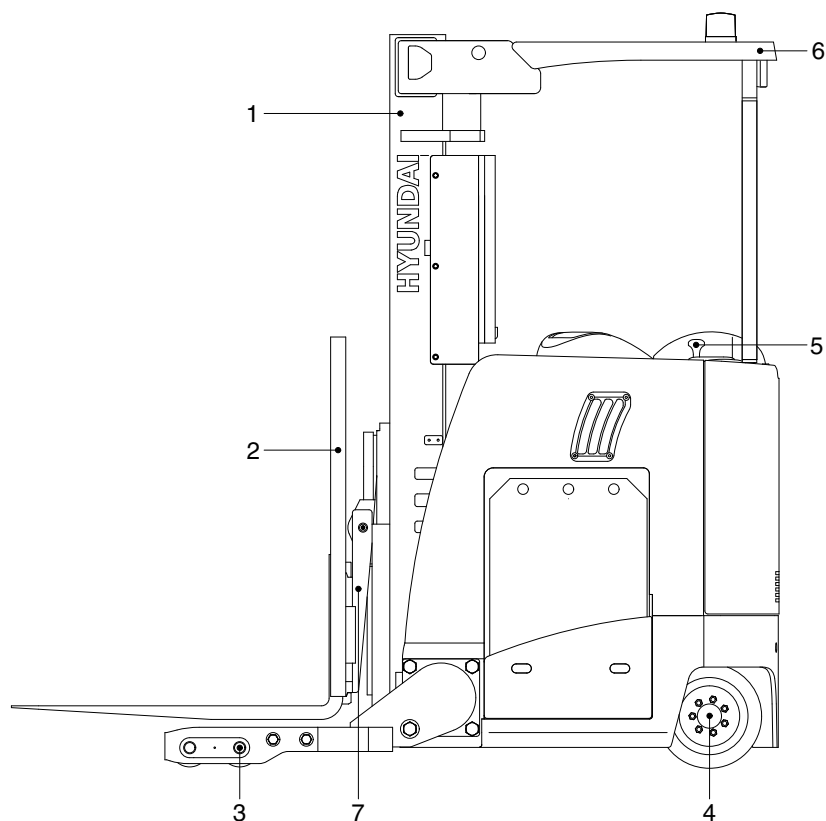


15BRP9OM54

- |                         |                  |
|-------------------------|------------------|
| 1 Mast                  | 5 Steering wheel |
| 2 Carriage and backrest | 6 Overhead guard |
| 3 Load tire and brake   | 7 Reach          |
| 4 Drive unit and tire   |                  |

## 2. SPECIFICATIONS


### 1) 15BRP-9

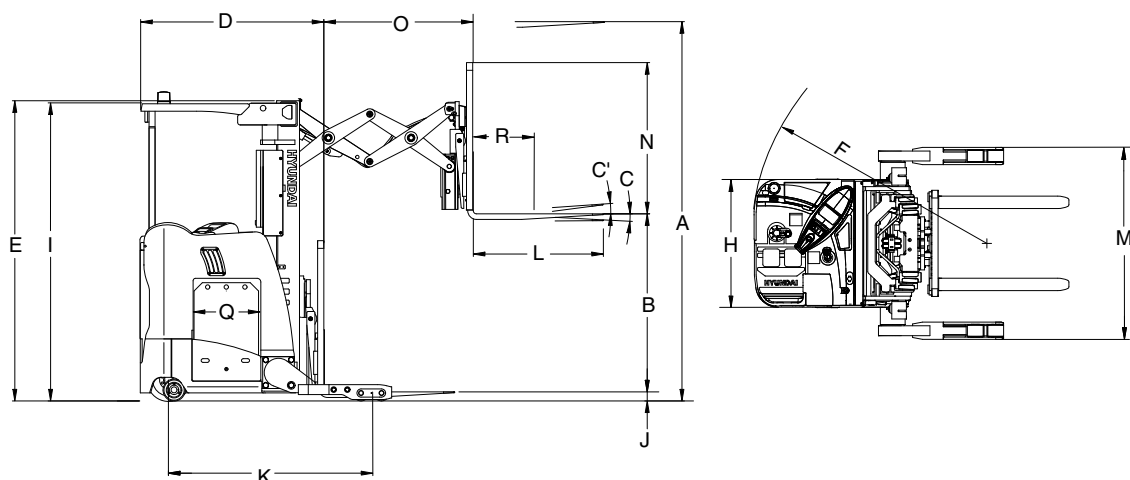

15BRP9SP01

Model			Unit	15BRP-9
Capacity			kg (lb)	1361 (3000)
Load center		R	mm (in)	610 (24)
Weight (With battery)			kg (lb)	3983 (8780)
Fork	Lifting height	A	mm (ft-in)	5335 (17' 6")
	Free lift (Without backrest)	B	mm (ft-in)	1196 (3' 11")
	Lifting speed (Unload/load)		mm/sec	450/320
	Lowering speed (Unload/load)		mm/sec	450/500
	L × W × T	L, W, T	mm (in)	1050 × 100 × 40 (41.3 × 3.9 × 1.6)
Mast	Tilt angle (Forward/backward)	C/C'	degree	3/4
	Max height		mm (ft-in)	6554 (21' 6")
	Min height	E	mm (ft-in)	2415 (7' 11")
	Backrest height	N	mm (ft-in)	1219 (4' 0")
Performance	Travel speed (Unload, load)		km/h	12
	Min turning radius (STD battery)	F	mm (ft-in)	1856 (6' 1")
Battery	Capacity		V-Ah	36/1085
	Weight (STD)		kg (lb)	1034 (2280)
	Length	Q	mm (in)	457 (18")
Length to fork face		D	mm (ft-in)	1562 (5' 1")
Width (Frame)		H	mm (ft-in)	1030 (3' 5")
Overhead guard height		I	mm (ft-in)	2395 (7' 10")
Ground clearance (Load wheels)		J	mm (in)	51 (2")
Wheel base (STD battery)		K	mm (ft-in)	1605 (5' 3")
Outrigger width (Outside)		M	mm (ft-in)	1345 (4' 5")
Reach stroke		O	mm (ft-in)	1087 (3' 7")

## 2) 18/20BRP-9

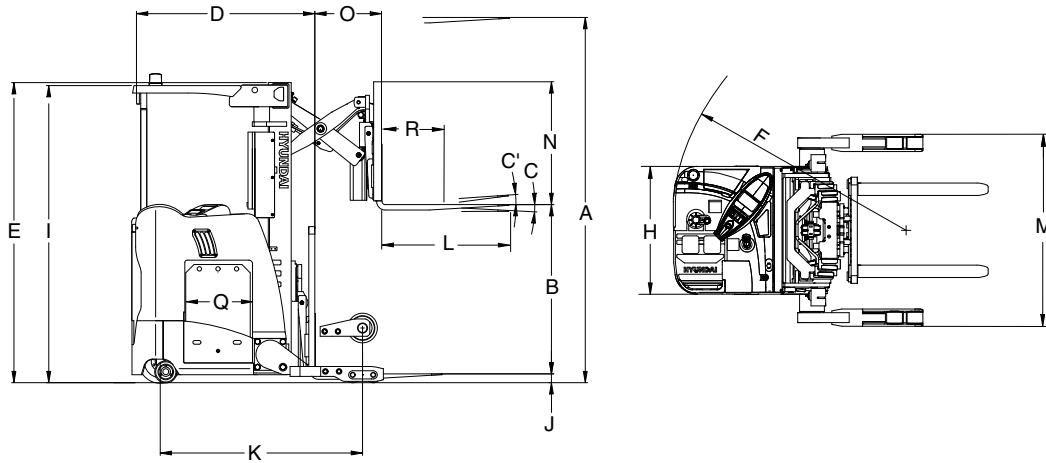


15BRP9SP02

Model		Unit	18BRP-9	20BRP-9
Capacity		kg (lb)	1588 (3500)	1814 (4000)
Load center	R	mm (in)	610 (24")	←
Weight (With battery)		kg (lb)	3360 (7410)	3505 (10' 10")
Fork	Lifting height	A	mm (ft-in)	←
	Free lift (Without backrest)	B	mm (ft-in)	←
	Lifting speed (Unload/load)		mm/sec	450/310
	Lowering speed (Unload/load)		mm/sec	450/500
	L × W × T	L,W,T	mm (in)	1050 × 100 × 40 (41.3 × 3.9 × 1.6)
Mast	Tilt angle (Forward/backward)	C/C'	degree	3/4
	Max height		mm (ft-in)	6554 (21' 6")
	Min height	E	mm (ft-in)	2415 (7' 11")
	Backrest height	N	mm (ft-in)	1219 (4' 0")
Performance	Travel speed (Unload, load)		km/h	12
	Min turning radius (STD battery)	F	mm (ft-in)	1655 (5' 5")
Battery	Capacity		V-Ah	36/775
	Weight (STD)		kg (lb)	725 (1600)
	Length	Q	mm (in)	362 (14.3")
Length to fork face		D	mm (ft-in)	1276 (4' 2")
Width (Frame)		H	mm (ft-in)	1030 (3' 4")
Overhead guard height		I	mm (ft-in)	2395 (7' 10")
Ground clearance (Load wheels)		J	mm (in)	51 (2")
Wheel base (STD battery)		K	mm (ft-in)	1399 (4' 7")
Outtrigger width (Outside)		M	mm (ft-in)	1345 (4' 5")
Reach stroke		O	mm (ft-in)	592 (1' 11")



### 3) 23BRP-9

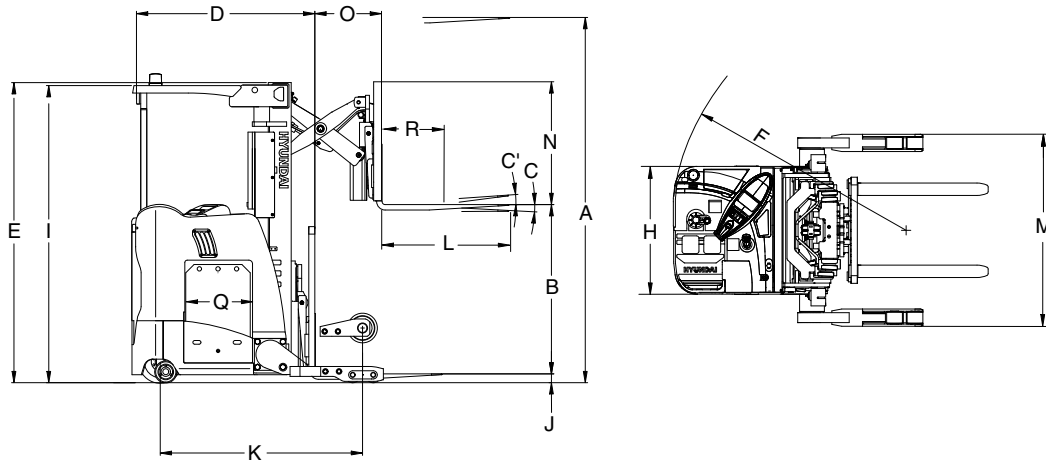

15BRP9SP02

Model			Unit	23BRP-9
Capacity			kg (lb)	2041 (4500)
Load center		R	mm (in)	610 (24)
Weight (With battery)			kg (lb)	3901 (8600)
Fork	Lifting height	A	mm (ft-in)	5335 (17' 6")
	Free lift (Without backrest)	B	mm (ft-in)	1196 (3' 11")
	Lifting speed (Unload/load)		mm/sec	460/270
	Lowering speed (Unload/load)		mm/sec	450/500
	L × W × T	L,W,T	mm (in)	1050 × 100 × 45 (41.3 × 3.9 × 1.8)
Mast	Tilt angle (Forward/backward)	C/C'	degree	3/4
	Max height		mm (ft-in)	6554 (21' 6")
	Min height	E	mm (ft-in)	2415 (7' 11")
	Backrest height	N	mm (ft-in)	1219 (4' 0")
Performance	Travel speed (Unload, load)		km/h	12
	Min turning radius (STD battery)	F	mm (ft-in)	1817 (6' 0")
Battery	Capacity		V-Ah	36/1085
	Weight (STD)		kg (lb)	1034 (2280)
	Length	Q	mm (in)	457 (18")
Length to fork face		D	mm (ft-in)	1415 (4' 8")
Width (Frame)		H	mm (ft-in)	1030 (3' 5")
Overhead guard height		I	mm (ft-in)	2395 (7' 10")
Ground clearance (Load wheels)		J	mm (in)	51 (2")
Wheel base (STD battery)		K	mm (ft-in)	1565 (5' 2")
Outrigger width (Outside)		M	mm (ft-in)	1345 (4' 5")
Reach stroke		O	mm (ft-in)	592 (1' 11")

### 3. SPECIFICATION FOR MAJOR COMPONENTS

#### 1) CONTROLLER

Item	Unit	Drive & Pump motor controller	EPS motor controller	Fingertip controller
Model	-	AC-2	EPS-AC0	Mhyrio CB
Type	-	MOSFET	←	←
Dimension	mm	200×250×147.5	180×144×64.8	197×82×73
Current limit	A	450A	45A	2A
Communication	-	CAN	←	←

#### 2) MOTOR

Item	Unit	Traction	Pump	EPS
Model	-	AMBL4002	AMBL4001	G104247A
Type	-	AC	AC	AC
Rated voltage	Vac	24	24	23
Output	kW	6.8	16	0.4
Insulation	-	Class F	Class F	Class H

#### 3) GEAR PUMP

Item	Unit	Specification
Type	-	Fixed displacement gear pump
Displacement	cc/rev	19.6
Maximum operating pressure	bar	210
Rated speed (max/min)	rpm	3000/500

#### 4) MAIN CONTROL VALVE

Item	Unit	Specification
Type	-	2 spool
Operating method	-	Proportional
Main relief valve pressure	bar	180

#### 5) DRIVE UNIT

Item	Unit	Specification
Gear ratio	-	20.2
Oil Quantity	l	3.3

## 6) WHEELS

Item	15BRP-9	18/20/23BRP-9
Type (Load/drive/caster)	Polyurethan	←
Quantity (Load/drive/caster)	4 (2) / 1/2	-
Load wheel (5" STD / 10.5" Option)	ø 127 × 100	ø 127 × 100 / ø 267 × 100
Drive wheel	ø 345 × 140	←
Caster wheel	ø 178 × 73	←

## 7) BRAKES

Item	Specification
Brakes (Service)	Service : Drive motor, electromagnetic brake

## 8) BATTERY

Battery type	Battery compartment size (length)		Battery voltage	Capacity (6 hour rate)	Battery dimensions						Battery weight	
					Width (W)		Length (L)		Height (H)		Min. weight	
	mm	in			Volt	Ah	mm	in	mm	in	mm	in
Type A	362	14.3	36	775	975	38.4	355	14.0	787	31.0	725	1598
Type B	413	16.3	36	930	975	38.4	406	16.0	787	31.0	852	1878
Type C	457	18.0	36	1085	975	38.4	450	17.7	787	31.0	1034	2280
Type D	527	20.7	36	1240	975	38.4	520	20.5	787	31.0	1180	2601

\* Standard : 15/23BRP - C type, 18BRP - A type, 20BRP - B type

## 9) LOAD TIRE OPTION

Mast type	15BRP-9		18BRP-9		20BRP-9		23BRP-9	
	ø 5×4" (ø 127×101 mm)	ø 10.5×4" (ø 267×101 mm)	ø 5×4" (ø 127×101 mm)	ø 10.5×4" (ø 267×101 mm)	ø 5×4" (ø 127×101 mm)	ø 10.5×4" (ø 267×101 mm)	ø 5×4" (ø 127×101 mm)	ø 10.5×4" (ø 267×101 mm)
TF500	●	×	●	●	●	●	●	●
TF530	●	×	●	●	●	●	●	●
TF610	●	×	●	●	●	●	●	●
TF685	●	×	●	●	●	●	●	●
TF760	●	×	×	×	●	×	●	●
TF815	●	×	×	×	●	×	●	●
TF865	●	×	×	×	×	×	●	×
TF930	●	×	×	×	×	×	●	×
TF1010	●	×	×	×	×	×	●	×

#### 4. TIGHTENING TORQUE FOR MAJOR COMPONENTS

NO	Items		Size	kgf·m	lbf·ft
1	Electric system	Hyd pump motor mounting bolt	M10×1.5	6.9±1.4	50±10
2		Traction motor mounting bolt	M 8×1.25	7.0±1.0	50.6±7.2
3		EPS motor mounting bolt	M10×1.5	3.05±0.5	22.1±3.6
4		Electric brake mounting bolt	M 8×1.25	4.0±0.8	28.9±5.8
5	Hydraulic system	Hydraulic pump mounting bolt	M10×1.5	5±1	36±7.2
6		MCV mounting bolt, nut	M 8×1.25	2.5±0.5	18.1±3.6
7		Hydraulic oil tank mounting bolt	M 8×1.25	2.5±0.5	18.1±3.6
8	Power train system	Drive unit mounting bolt	M12×1.75	14.3±1.0	103±7
9		Load wheels mounting bolt	M12×1.75	14.0±1.0	101±7
10		Drive wheel mounting nut	M14×1.5	14.5±1.0	105±7
11	Other	Seat mounting bolt	M 8×1.25	2.5±0.5	18.1±3.6
12		Head guard mounting bolt	M12×1.75	12.8±3.0	93±22
13			M16×2	29±4	210±29.0
14		Mast mounting bolt, nut	M20×1.5	62.8±9	455±65.2
15			M22×1.5	83.2±12.5	603±90.6
16		Outrigger mounting bolt	M27×3	120±12	868±87

## 5. TORQUE CHART

Use following table for unspecified torque.

### 1) BOLT AND NUT

#### (1) Coarse thread

Bolt size	8T		10T	
	kgf · m	lbf · ft	kgf · m	lbf · ft
M 6 × 1.0	0.85 ~ 1.25	6.15 ~ 9.04	1.14 ~ 1.74	8.2 ~ 12.6
M 8 × 1.25	2.0 ~ 3.0	14.5 ~ 21.7	2.73 ~ 4.12	19.7 ~ 29.8
M10 × 1.5	4.0 ~ 6.0	28.9 ~ 43.4	5.5 ~ 8.3	39.8 ~ 60
M12 × 1.75	7.4 ~ 11.2	53.5 ~ 79.5	9.8 ~ 15.8	71 ~ 114
M14 × 2.0	12.2 ~ 16.6	88.2 ~ 120	16.7 ~ 22.5	121 ~ 167
M16 × 2.0	18.6 ~ 25.2	135 ~ 182	25.2 ~ 34.2	182 ~ 247
M18 × 2.5	25.8 ~ 35.0	187 ~ 253	35.1 ~ 47.5	254 ~ 343
M20 × 2.5	36.2 ~ 49.0	262 ~ 354	49.2 ~ 66.6	356 ~ 482
M22 × 2.5	48.3 ~ 63.3	350 ~ 457	65.8 ~ 98.0	476 ~ 709
M24 × 3.0	62.5 ~ 84.5	452 ~ 611	85.0 ~ 115	615 ~ 832
M30 × 3.5	124 ~ 168	898 ~ 1214	169 ~ 229	1223 ~ 1655
M36 × 4.0	174 ~ 236	1261 ~ 1703	250 ~ 310	1808 ~ 2242

#### (2) Fine thread

Bolt size	8T		10T	
	kgf · m	lbf · ft	kgf · m	lbf · ft
M 8 × 1.0	2.17 ~ 3.37	15.7 ~ 24.3	3.04 ~ 4.44	22.0 ~ 32.0
M10 × 1.25	4.46 ~ 6.66	32.3 ~ 48.2	5.93 ~ 8.93	42.9 ~ 64.6
M12 × 1.25	7.78 ~ 11.58	76.3 ~ 83.7	10.6 ~ 16.0	76.6 ~ 115
M14 × 1.5	13.3 ~ 18.1	96.2 ~ 130	17.9 ~ 24.1	130 ~ 174
M16 × 1.5	19.9 ~ 26.9	144 ~ 194	26.6 ~ 36.0	193 ~ 260
M18 × 1.5	28.6 ~ 43.6	207 ~ 315	38.4 ~ 52.0	278 ~ 376
M20 × 1.5	40.0 ~ 54.0	289 ~ 390	53.4 ~ 72.2	386 ~ 522
M22 × 1.5	52.7 ~ 71.3	381 ~ 515	70.7 ~ 95.7	512 ~ 692
M24 × 2.0	67.9 ~ 91.9	491 ~ 664	90.9 ~ 123	658 ~ 890
M30 × 2.0	137 ~ 185	990 ~ 1338	182 ~ 248	1314 ~ 1795
M36 × 3.0	192 ~ 260	1389 ~ 1879	262 ~ 354	1893 ~ 2561

## 2) PIPE AND HOSE(FLARE TYPE)

Thread size	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

## 3) PIPE AND HOSE(ORFS TYPE)

Thread size	Width across flat (mm)	kgf · m	lbf · ft
9/16-18	19	4	28.9
11/16-16	22	5	36.2
13/16-16	27	9.5	68.7
1-3/16-12	36	18	130
1-7/16-12	41	21	152
1-11/16-12	50	35	253

## 4) FITTING

Thread size	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

## 6. RECOMMENDED LUBRICANTS

Use only oils listed below or equivalent.

Do not mix different brand oil.

Service point	Kind of fluid	Capacity <i>l</i> (U.S. gal)	Ambient temperature °C (°F)									
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)	
Drive unit	Gear oil	3.3 (0.87)		SAE 80W-90								
Hydraulic oil tank	Hydraulic oil	28 (7.4)	★ISO VG 15									
			ISO VG 46									
			ISO VG 68									
Fitting (Grease nipple)	Grease	0.1 (0.03)	★NLGI No.1									
			NLGI No.2									

★<sup>1</sup>Cold region  
Russia, CIS, Mongolia

## GROUP 3 PERIODIC REPLACEMENT

For operation safety, never fail to perform periodic maintenance or make periodic replacement of the consumable parts listed in the following.

These parts may deteriorate in time and are susceptible to wear. It is difficult to estimate the degree of wear at time of periodic maintenance; therefore, even if no apparent wear is found, always replace with new parts within the prescribed period of replacement (Or earlier if trouble is found).

Note that periodic replacement has nothing to do with guarantee service.

※ **Replacement of consumable service parts is not covered under warranty.**

No.	Description	Period of replacement
1	Hydraulic oil	Every 1 year
2	Gear oil	Every 1 year
3	Power steering hose	Every 1 year
4	Rubber parts of the power steering inside	Every 2 year
5	Cups and dust seals etc. of cylinder	Every 2 year
6	Lift chain	Every 2 year
7	Hydraulic equipment hose	Every 2 year