
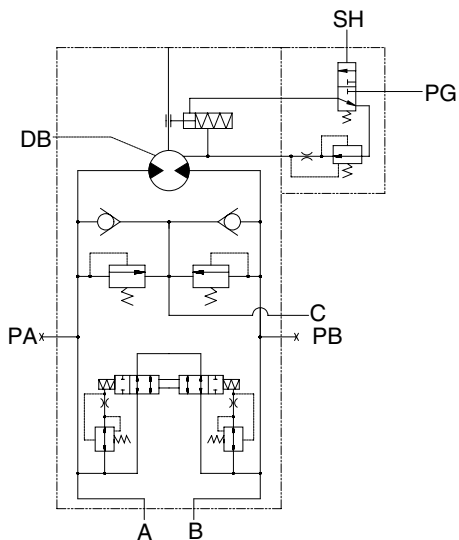


GROUP 3 SWING DEVICE

1. STRUCTURE


Swing device consists swing motor, swing reduction gear.

Swing motor include mechanical parking valve, relief valve, make up valve and time delay valve.

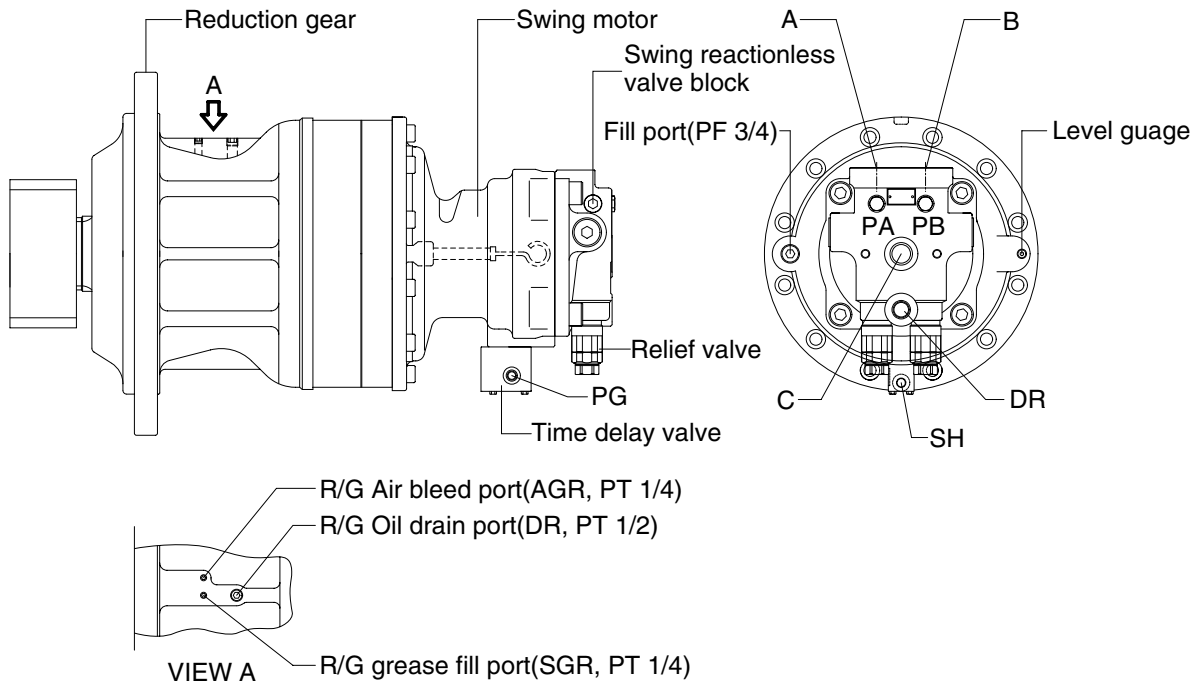

Port	Port name	Port size
A, B	Main port	ø 20
DR	Drain port	PF1/2
C	Make up port	PF 1
PA, PB	Gauge port	PF1/4
PG	Brake release port	PF1/4
SH	Brake pilot port	PF1/4

1) SWING MOTOR

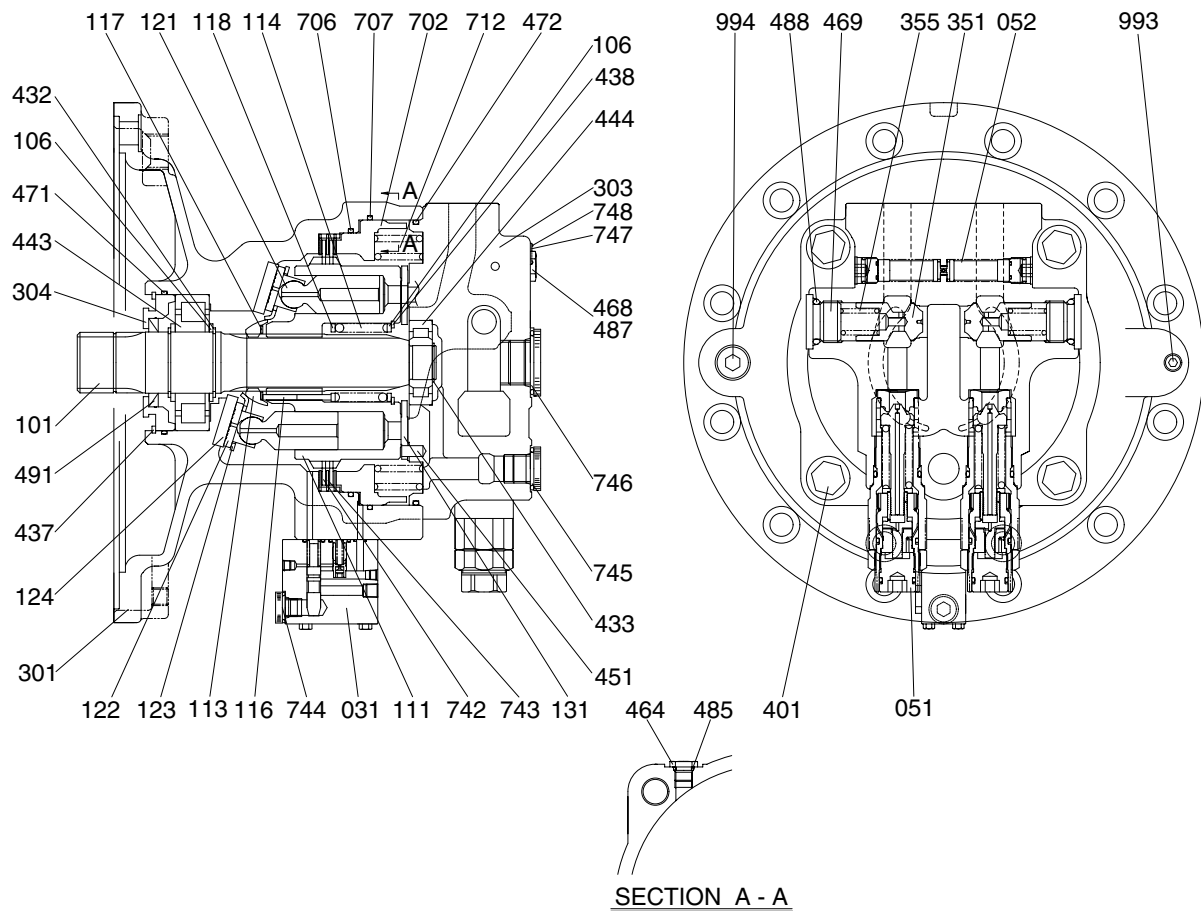


031 Time delay valve
051 Relief valve
052 Shockless valve assy
101 Drive shaft
106 Spacer
111 Cylinder
113 Spherical bush
114 Spring
116 Push rod
117 Spacer
118 Spacer
121 Piston
122 Shoe
123 Retainer
124 Shoe plate
131 Valve plate
301 Casing

303 Casing
304 Front cover
351 Plunger
355 Spring
401 Socket bolt
432 Snap ring
433 Snap ring
437 Snap ring
438 Snap ring
443 Roller bearing
444 Roller bearing
451 Spring pin
464 Plug
468 Plug
469 Plug
471 O-ring
472 O-ring

485 O-ring
487 O-ring
488 O-ring
491 Oil seal
702 Piston
706 O-ring
707 O-ring
712 Brake spring
742 Friction plate
743 Separate plate
744 Dust plug
745 Dust plug
746 Dust plug
747 Name plate
748 Rivet screw
993 Level gauge
994 Plug

2507A2SM02

2) REDUCTION GEAR

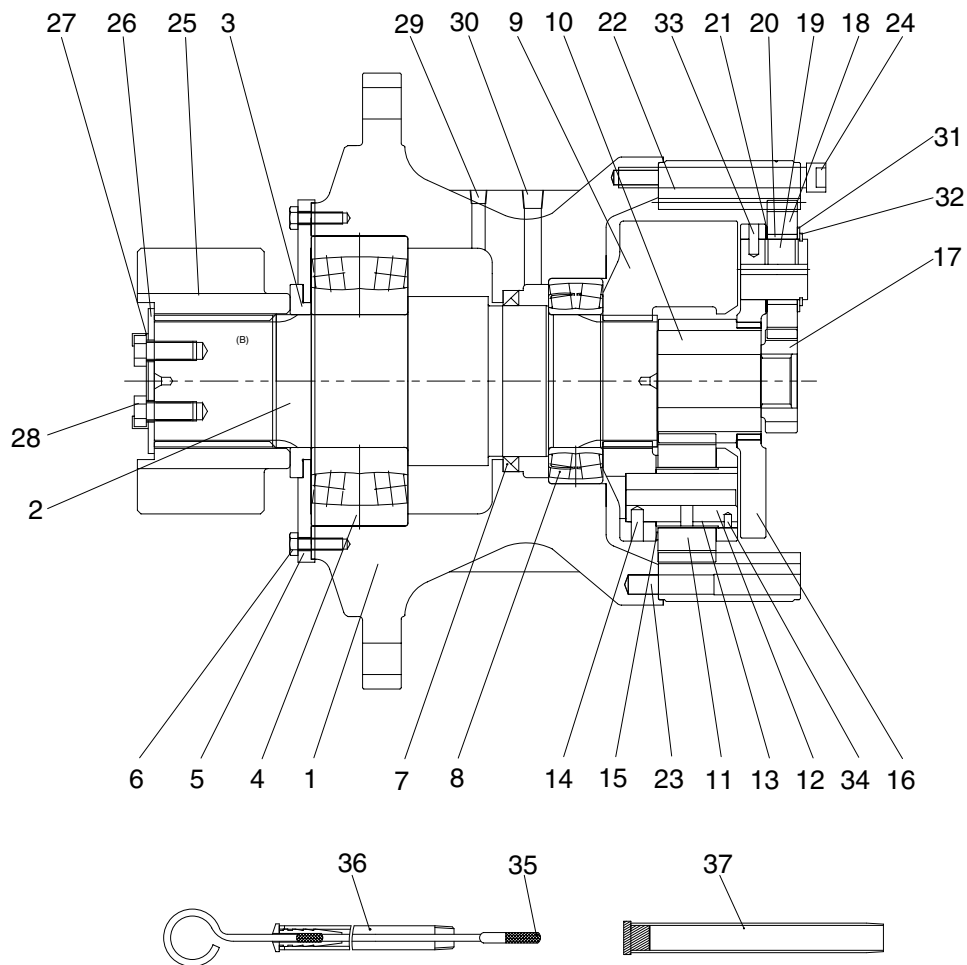

2507A2SM03

1	Casing	14	Spring pin	27	Lock washer
2	Drive shaft	15	Thrust washer	28	Hexagon bolt
3	Spacer	16	Carrier 1	29	Plug
4	Roller bearing	17	Sun gear 1	30	Plug
5	Cover plate	18	Planet gear 1	31	Side plate 2
6	Hexagon bolt	19	Pin 1	32	Stop ring
7	Oil seal	20	Needle cage	33	Spring pin
8	Roller bearing	21	Side plate 1	34	Spring pin
9	Carrier 2	22	Ring gear	35	Gage bar
10	Sun gear 2	23	Knock pin	36	Gage pipe
11	Planet gear 2	24	Socket bolt	37	Air breather assy
12	Pin 2	25	Pinion gear		
13	Bushing 2	26	Lock plate		

2. FUNCTION

1) ROTARY PART

When high pressurized oil enters a cylinder through port(a), which is the inlet of balance plate(131), hydraulic pressure acting on the piston causes axial force F. The pressure force F works via the piston(121) upon the return plate(123) which acts upon the swash plate(124) via an hydrostatic bearing. Force F1 perpendicular to swash plate(124) and force F2 perpendicular to cylinder center. Being transferred to the cylinder block(111) through piston, force F2 causes rotational moment at surroundings of cylinder.

Since cylinder block has 9 equidistantly arrayed pistons, rotational torque is transmitted to cylinder shaft in order by several pistons connected to the inlet port of high pressurized oil. When the direction of oil flow is reversed, rotational direction of cylinder is also reversed. Output torque is given by the equation.

$$T = \frac{p \times q}{2\pi}, q = Z \cdot A \cdot \text{PCD} \cdot \tan\theta, F_1 = \frac{F}{\cos\theta}, F_2 = F \tan\theta, S = \text{PCD} \times \tan\theta$$

Where p : Effective difference of pressure(kgf/cm²)

q : Displacement(cc/rev)


T : Output torque(kgf · cm)

Z : Piston number(9EA)

A : Piston area(cm²)

θ : Tilting angle of swash plate(degree)

S : Piston stroke(cm)

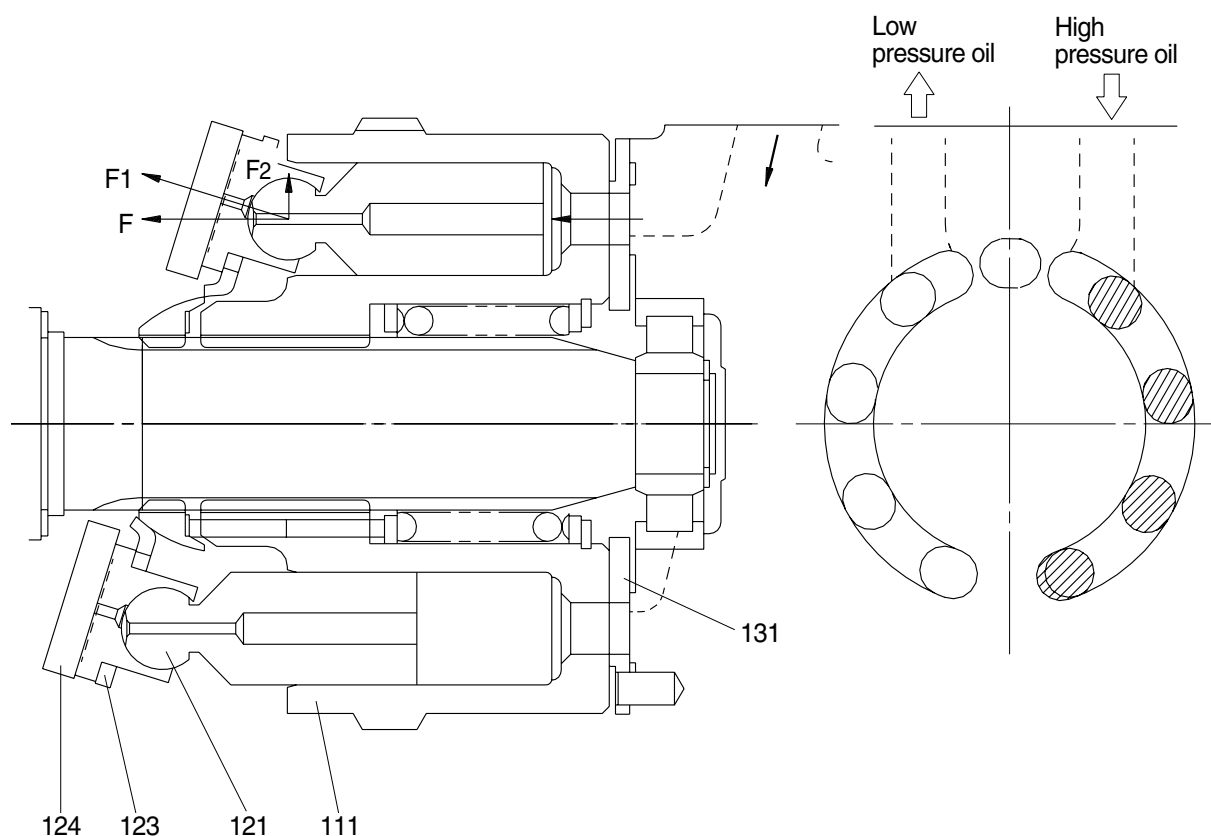


2) MAKE UP VALVE

In the system using this type of motor, there is no counter balance functioning valve and there happens the case of revolution exceeding hydraulic supply of motor. To prevent the cavitation caused by insufficient oil flow there is a make up valve to fill up the oil insufficiency.

A make up valve is provided immediately before the port leading to the hydraulic oil tank to secure feed pressure required when the hydraulic motor makes a pumping action. The boost pressure acts on the hydraulic motor's feed port via the make up valve.


Pressurized oil into the port B, the motor rotate counterclockwise.

If the plunger of MCV moves neutral position, the oil in the motor is drain via left relief valve, the drain oil run into motor via right make up valve, which prevent the cavitation of motor.

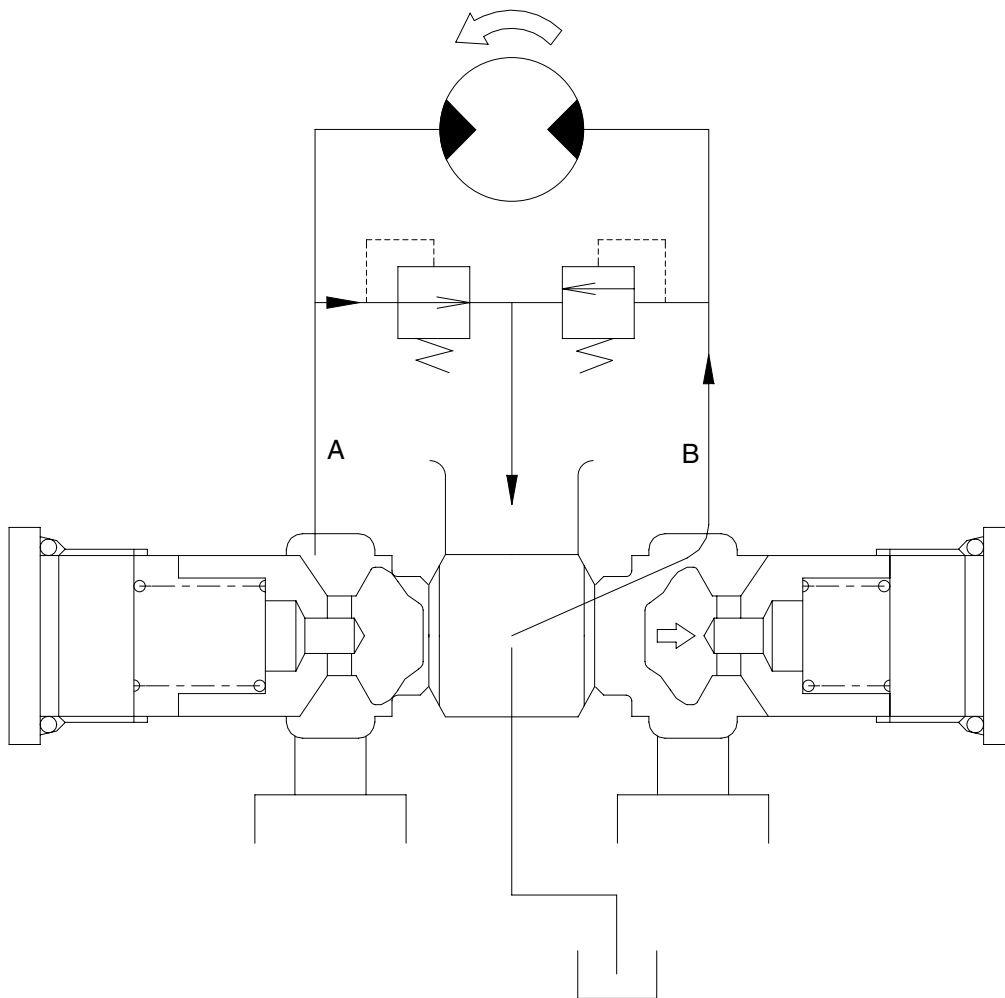

29072SM09

3) RELIEF VALVE

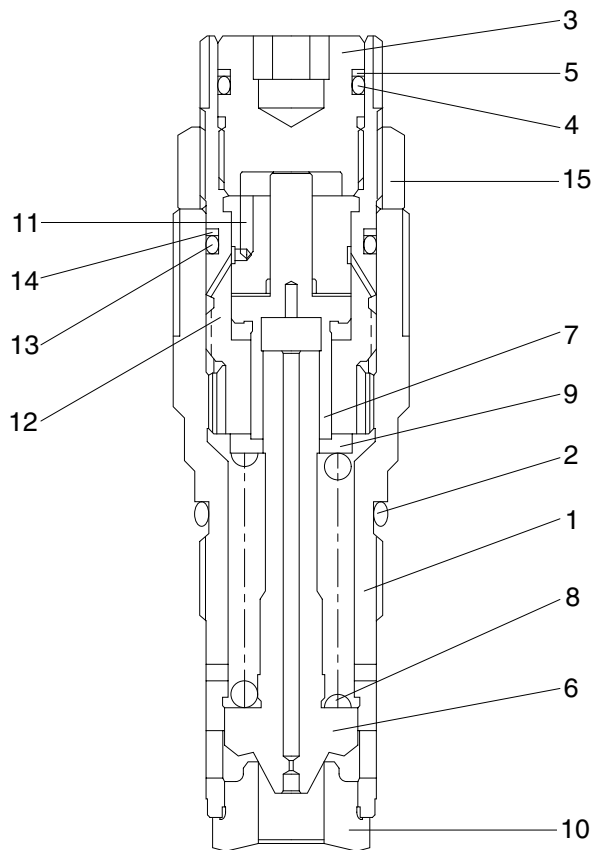


- 1 Body
- 2 O-ring
- 3 Plug
- 4 O-ring
- 5 Back up ring
- 6 Plunger
- 7 Piston
- 8 Spring
- 9 Seat spring
- 10 Seat
- 11 Sleeve
- 12 Adjust plug
- 13 O-ring
- 14 Back up ring
- 15 Nut

(1) Construction of relief valve

The valve casing contains two cartridge type relief valves that stop the regular and reverse rotations of the hydraulic motor. The relief valves relieve high pressure at start or at stop of swing motion and can control the relief pressure in two steps, high and low, in order to insure smooth operation.


(2) Function of relief valve

Figure illustrates how the pressure acting on the relief valve is related to its rising process. Here is given the function, referring to the figure following page.

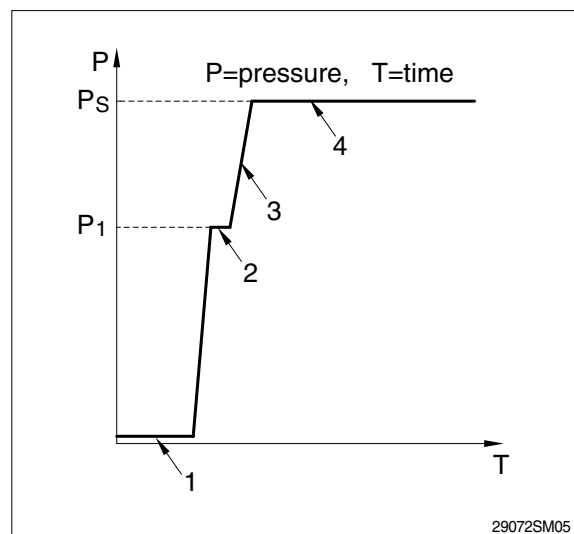

29072SM05

- ① Ports (P,R) at tank pressure.

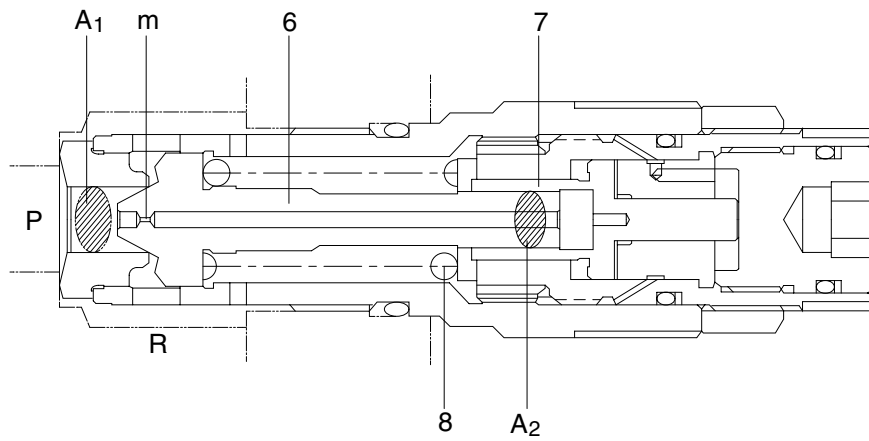


29072SM04

- ② When hydraulic oil pressure($P \times A_1$) reaches the preset force(F_{SP}) of spring(8), the plunger (6) moves to the right as shown.


$$P_1 \times A_1 = F_{sp} + P_1 \times A_2$$

$$P_1 = \frac{F_{sp}}{A_1 - A_2}$$

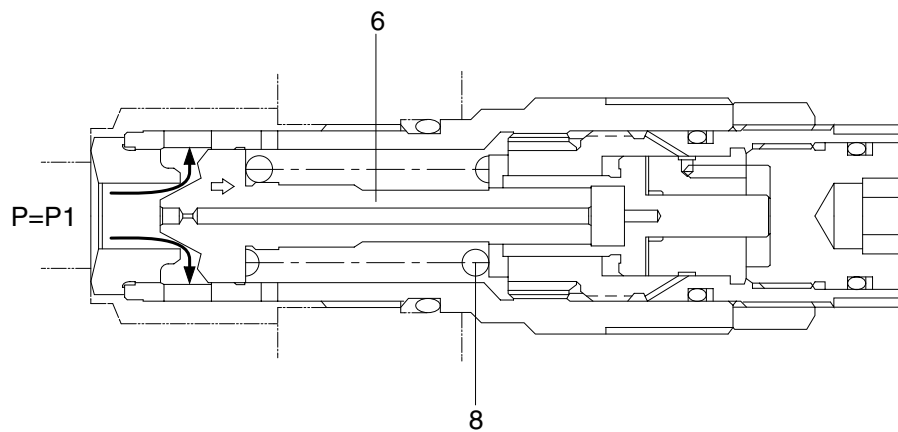

29072SM06

- ③ When the pressure of chamber g reaches the preset force(F_{sp}) of spring(8), the piston(7) moves right and stop the piston(7) hits the end of body.

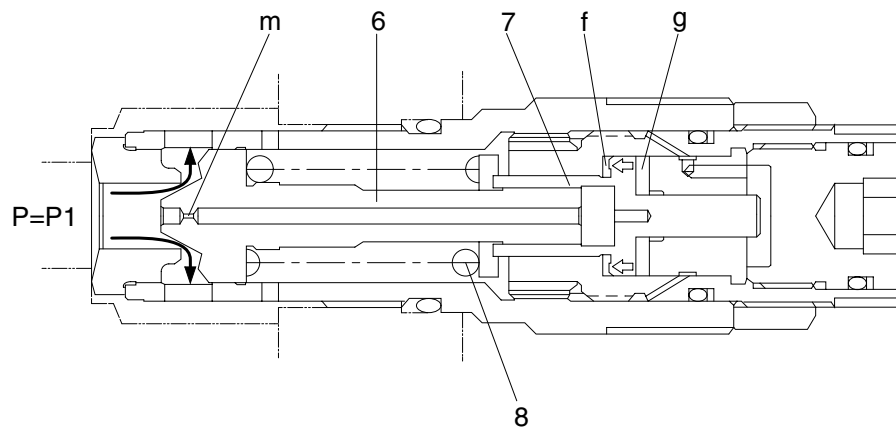


29072SM07

- ④ When piston(7) hits the end of body, it stops moving to the right any further. As the result, the pressure in chamber(g) equals(P_s).

$$P_s \times A_1 = F_{sp} + P_s \times A_3$$

$$P_s = \frac{F_{sp}}{A_1 - A_3}$$

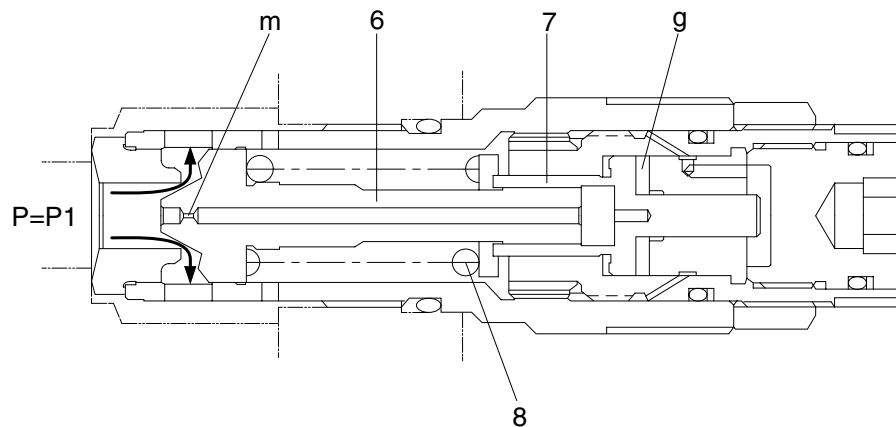


29072SM08

4) BRAKE SYSTEM

(1) Control valve swing brake system

This is the brake system to stop the swing motion of the excavator during operation.

In this system, the hydraulic circuit is throttled by the swing control valve, and the resistance created by this throttling works as a brake force to slow down the swing motion.

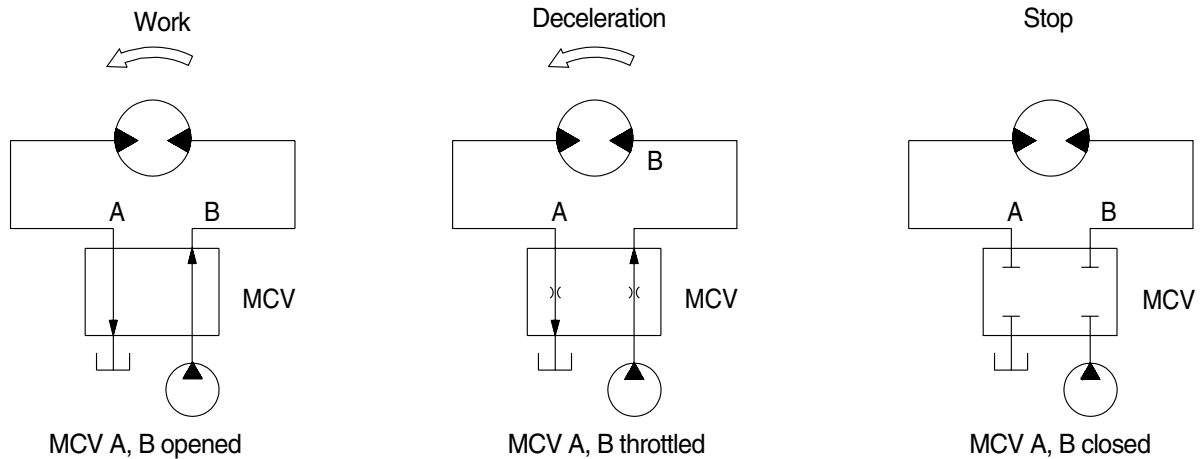


(2) Mechanical swing parking brake system

The mechanical swing parking brake system is installed to prevent the upper structure from swinging downhill because of its own weight when the excavator is parked on a slope since it completely eliminates the hydraulic drift of swing motion while the excavator is on a slope, work can be done more easily and safely.

① Brake assembly

Circumferential rotation of separate plate(743) is constrained by the groove located at casing(301). When housing is pressed down by brake spring(712) through lining plate(742), separate plate(743) and brake piston(702), friction force occurs there.

Cylinder(111) is constrained by this friction force and brake acts, while brake releases when hydraulic force exceeds spring force.

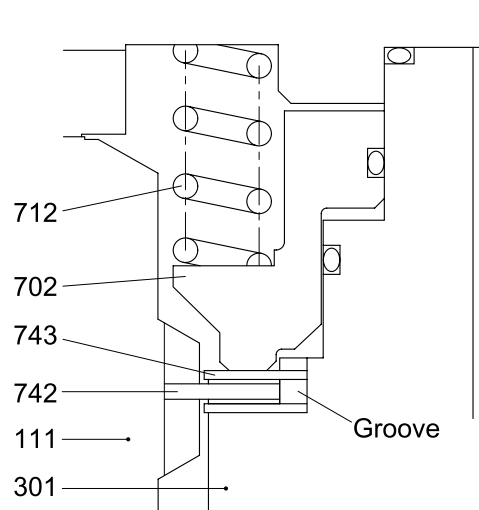


30572SM03

111	Cylinder	712	Brake spring
301	Casing	742	Lining plate
702	Brake piston	743	Separate plate

② Operating principle


- a. When the swing control lever(1) is set to the swing position, the pilot oil go to the swing control valve(2) and to SH of the time delay valve(3) via the shuttle valve(4), this pressure move spool(5) to the leftward against the force of the spring(8), so pilot pump charged oil(P3) goes to the chamber G.

This pressure is applied to move the piston(702) to the upward against the force of the spring(712). Thus, it releases the brake force.

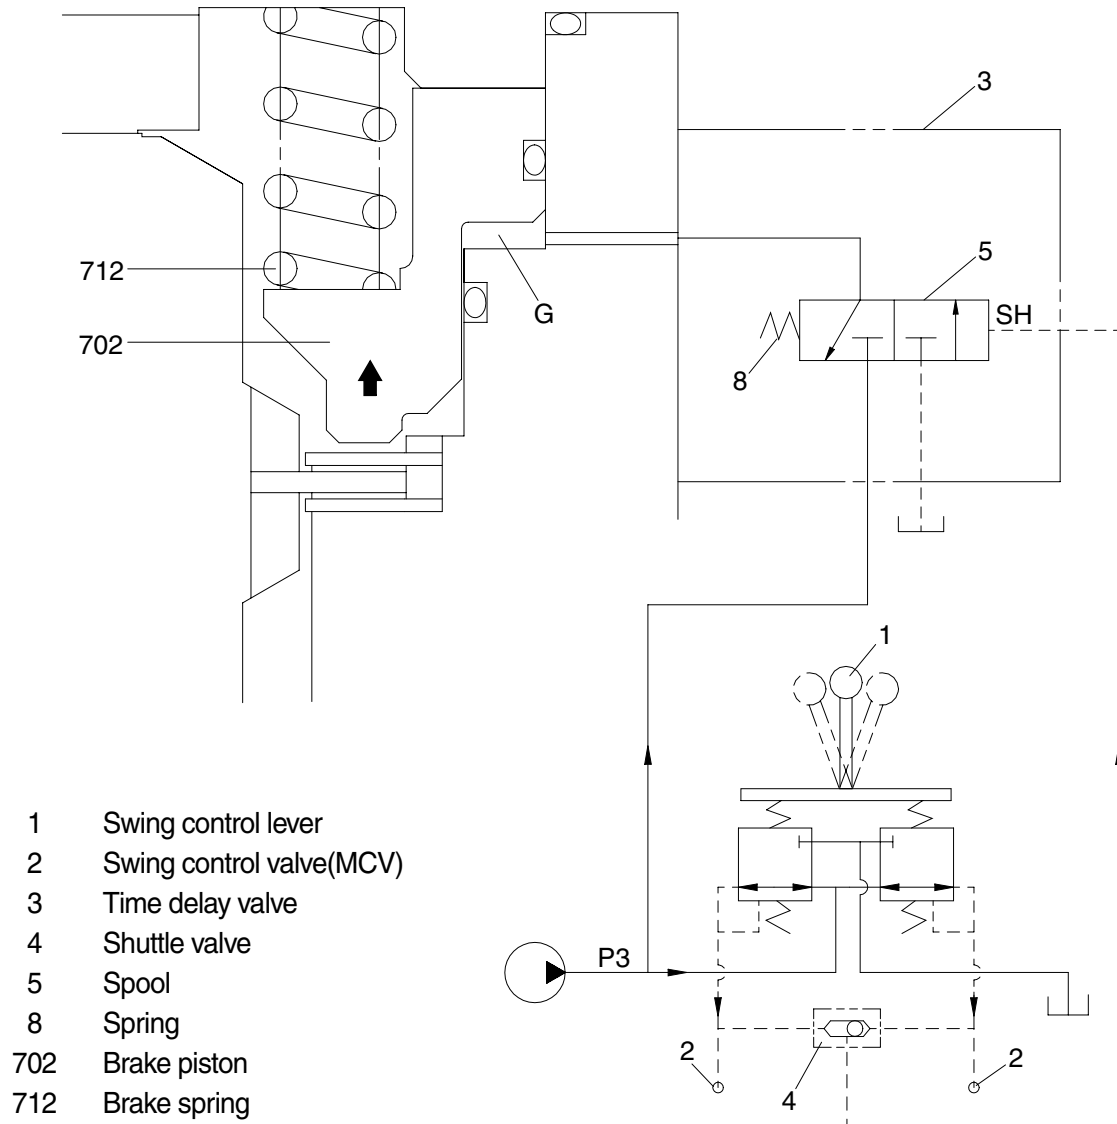

30572SM04

- b. When the swing control lever(1) is set the neutral position, the time delay valve(3) shifts the neutral position and the pilot oil blocked chamber G.
- Then, the piston(702) is moved lower by spring(712) force and the return oil from the chamber G is drain.

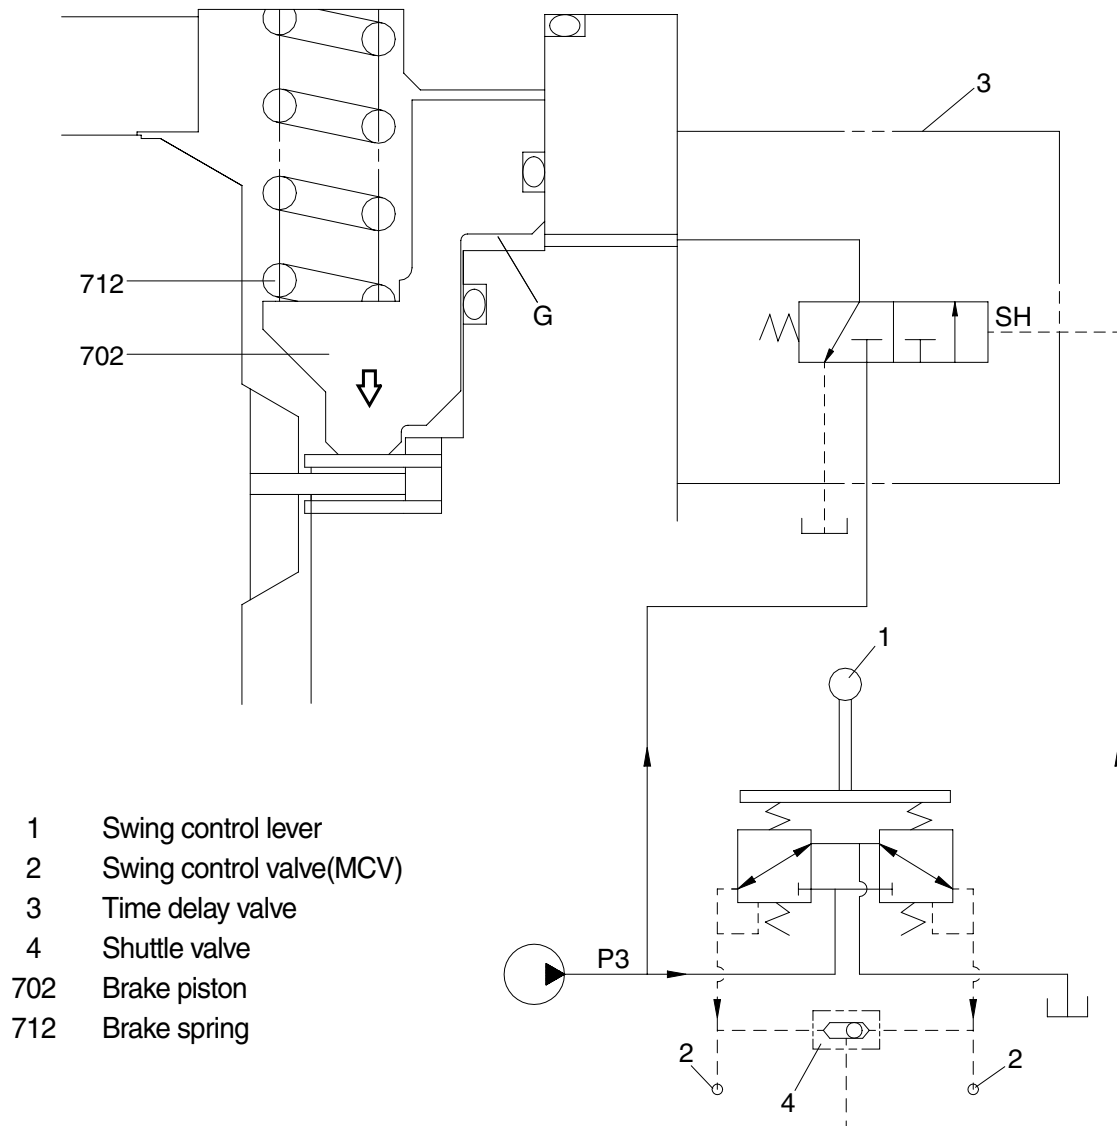

30572SM05