


## GROUP 6 AUTOMATIC WARMING UP FUNCTION

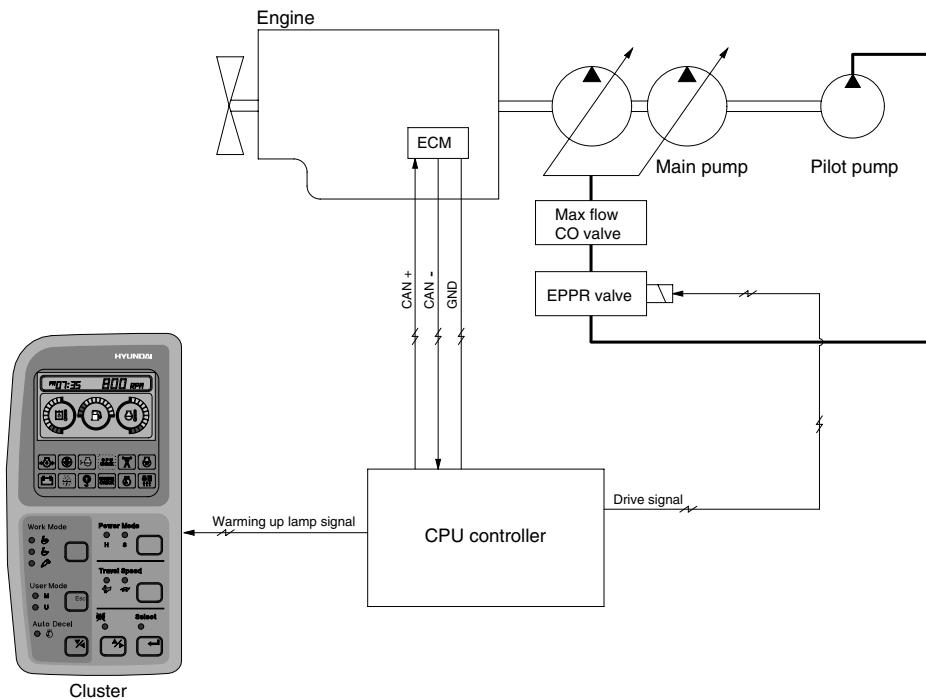

2507A5MS06

1. CPU controller receives engine coolant temperature from the ECM, and if the coolant temperature is less than 30°C, it increases the engine speed from key start rpm to 1150rpm. At this time the mode does not change.
2. In case of the coolant temperature increases up to 30°C, the engine speed is decreased to key start speed. And if an operator changes mode set during the warming up function, the CPU controller cancels the automatic warming up function.

### 3. LOGIC TABLE

Description	Condition	Function
Actuated	<ul style="list-style-type: none"> <li>- Coolant temperature : Less than 30°C (After engine run)</li> <li>- Accel dial position is under 3</li> </ul>	<ul style="list-style-type: none"> <li>- Mode : Default(S mode)</li> <li>- Warming up time : 10 minutes(Max)</li> <li>- Warming up lamp : ON</li> </ul>
Canceled	<ul style="list-style-type: none"> <li>- Coolant temperature : Above 30°C</li> <li>- Warming up time : Above 10 minutes</li> <li>- Changed mode set by operator</li> <li>- Increase engine speed by rotating accel dial clockwise</li> <li>※ If any of the above conditions is applicable, the automatic warming up function is canceled</li> </ul>	<ul style="list-style-type: none"> <li>- Default mode</li> <li>- Default mode</li> <li>- Changed mode</li> </ul>
Warming up lamp	<ul style="list-style-type: none"> <li>- Coolant temperature : Above 30°C</li> </ul>	<ul style="list-style-type: none"> <li>- Warming up lamp : OFF</li> </ul>